48 Inch Wooden TV Stand

ASSEMBLY INSTRUCTIONS

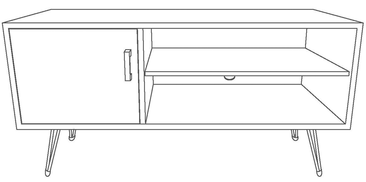

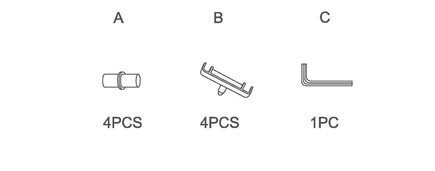



01

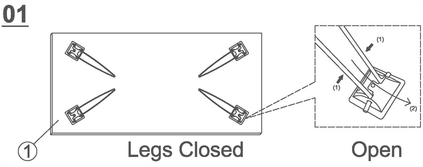

02

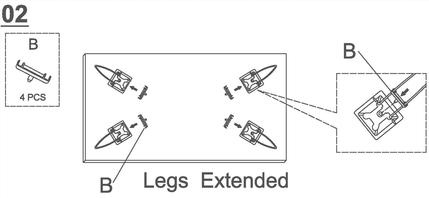

03

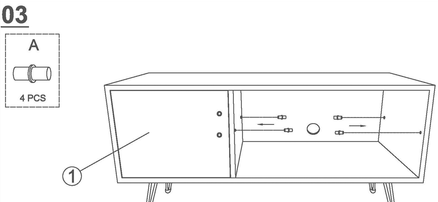

04

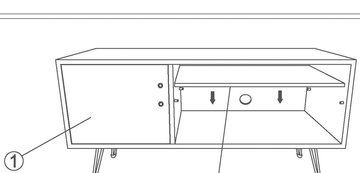

05

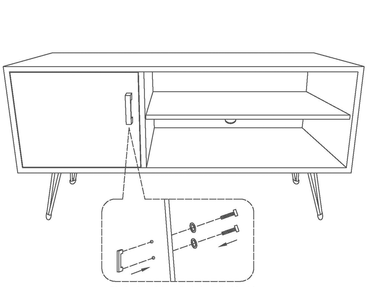

Shake handshandle is installed inside cabinet door in advance, need to be dismantled and re - installed

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR USING THIS ITEM