ASSEMBLY INSTRUCTIONS

2-DRAWER NIGHTSTAND

A Top Panel	**B** Side Panel (Left)	**C** Side Panel (Right)	**D** Bottom Frame
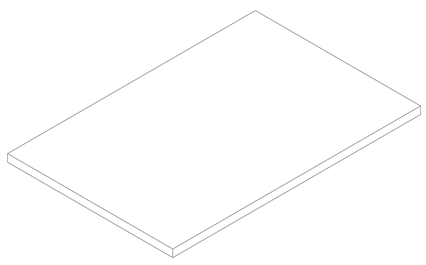	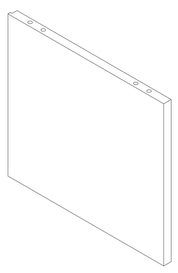	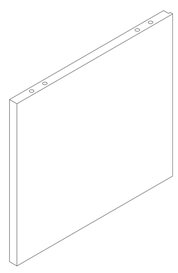	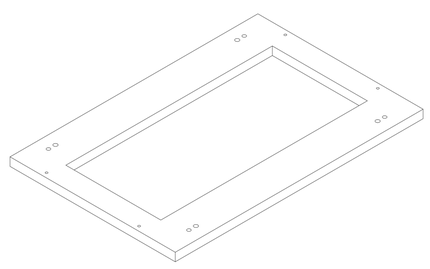
1pc	1pc	1pc	1pc
E Center Bar	**F** Post	**G** Back Plywood	**H** Small Drawer Side (Left)
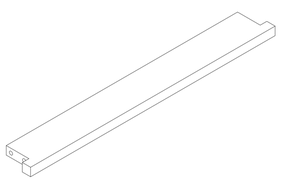		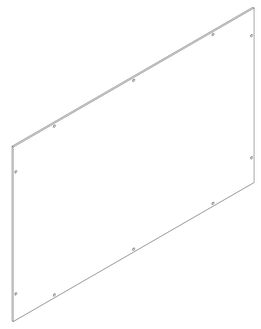	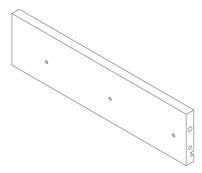
1pc	4pcs	1pc	1pc
I Small Drawer Side (Right)	**J** Small Drawer Front	**K** Small Drawer Back	**L** Big Drawer Side (Left)
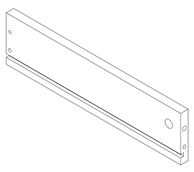	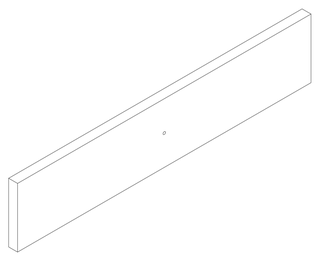	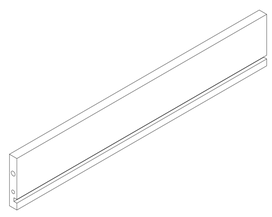	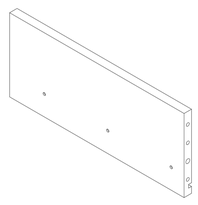
1pc	1pc	1pc	1pc
M Big Drawer Side (Right)	**N** Big Drawer Front	**O** Big Drawer Back	**P** Drawer Base
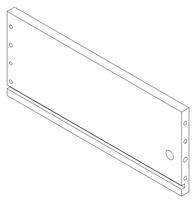	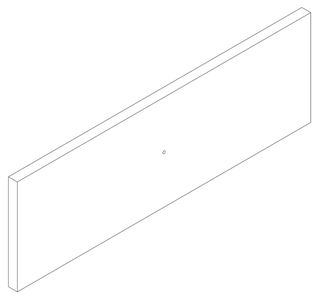	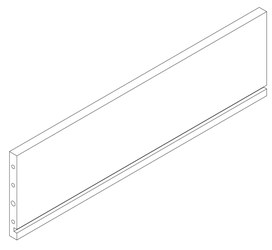	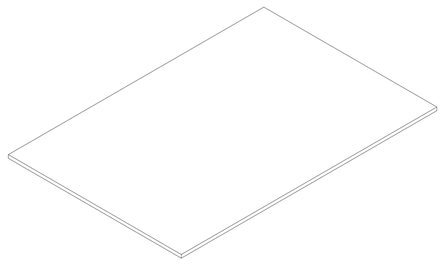
1pc	1pc	1pc	2pcs
Q Runner 350mm	**R** Handle	**S** Dowel M6 x 30mm	**T** Dowel M8 x 35mm
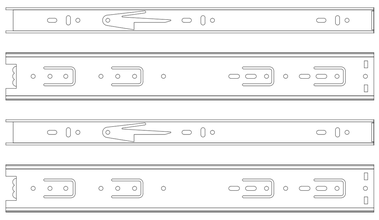	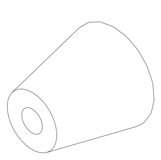	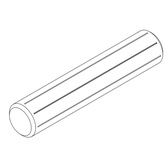	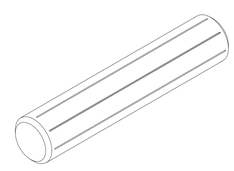
2sets	2pcs	16pcs	14pcs

U Cam Bolt
5 x 25mm

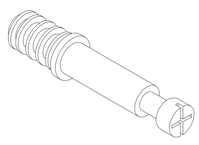

18pcs

V Cam Lock
15 x 12mm



18pcs

W Cam Lock Cover
17 x 5mm



18pcs

X Screw
M3 x 16mm

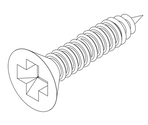

24pcs

Y Screw
M4 x 38mm

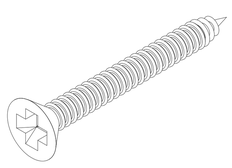

Z Panhead Screw
M4 x 22mm



AA Panhead Screw
(Black)
M4 x 16mm

AB Flat Washer
M8

4pcs

AC Spring Washer
M8

2pcs

AD Hex Nut
M8



12pcs

AE Spanner
M12.8

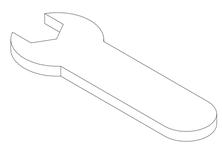

4pcs

4pcs

4pcs

1pc

These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Insert Cam Bolt (U) into the Top Panel (A) with a screwdriver (not provided).

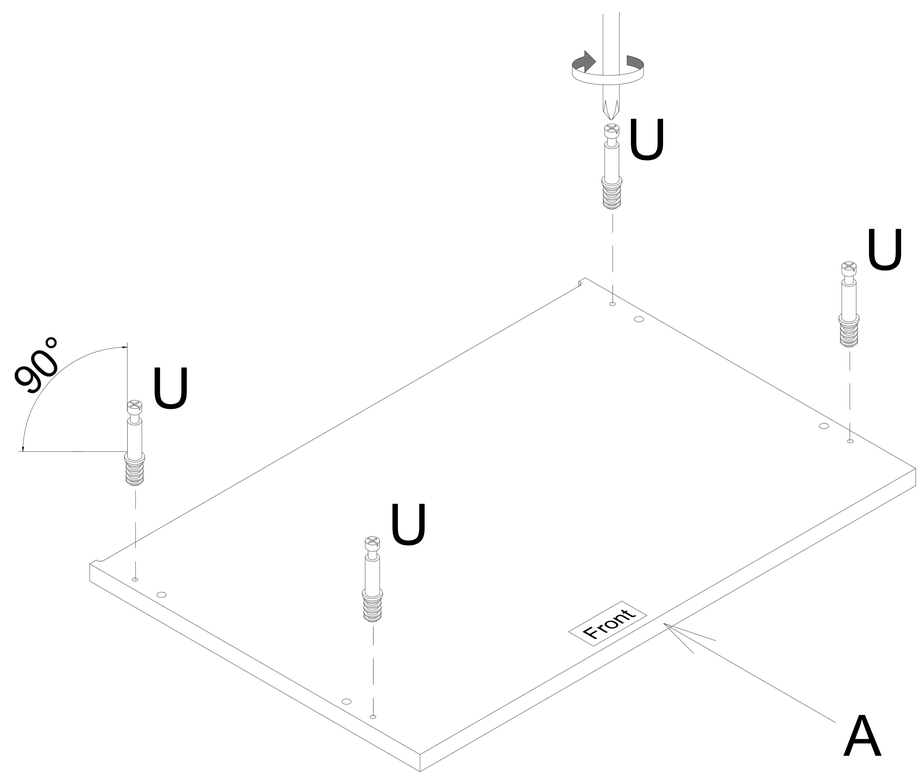

2 Insert Dowel (T), Cam Bolt (U) and Cam Lock (V) into the Left & Right Side Panel (B & C) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

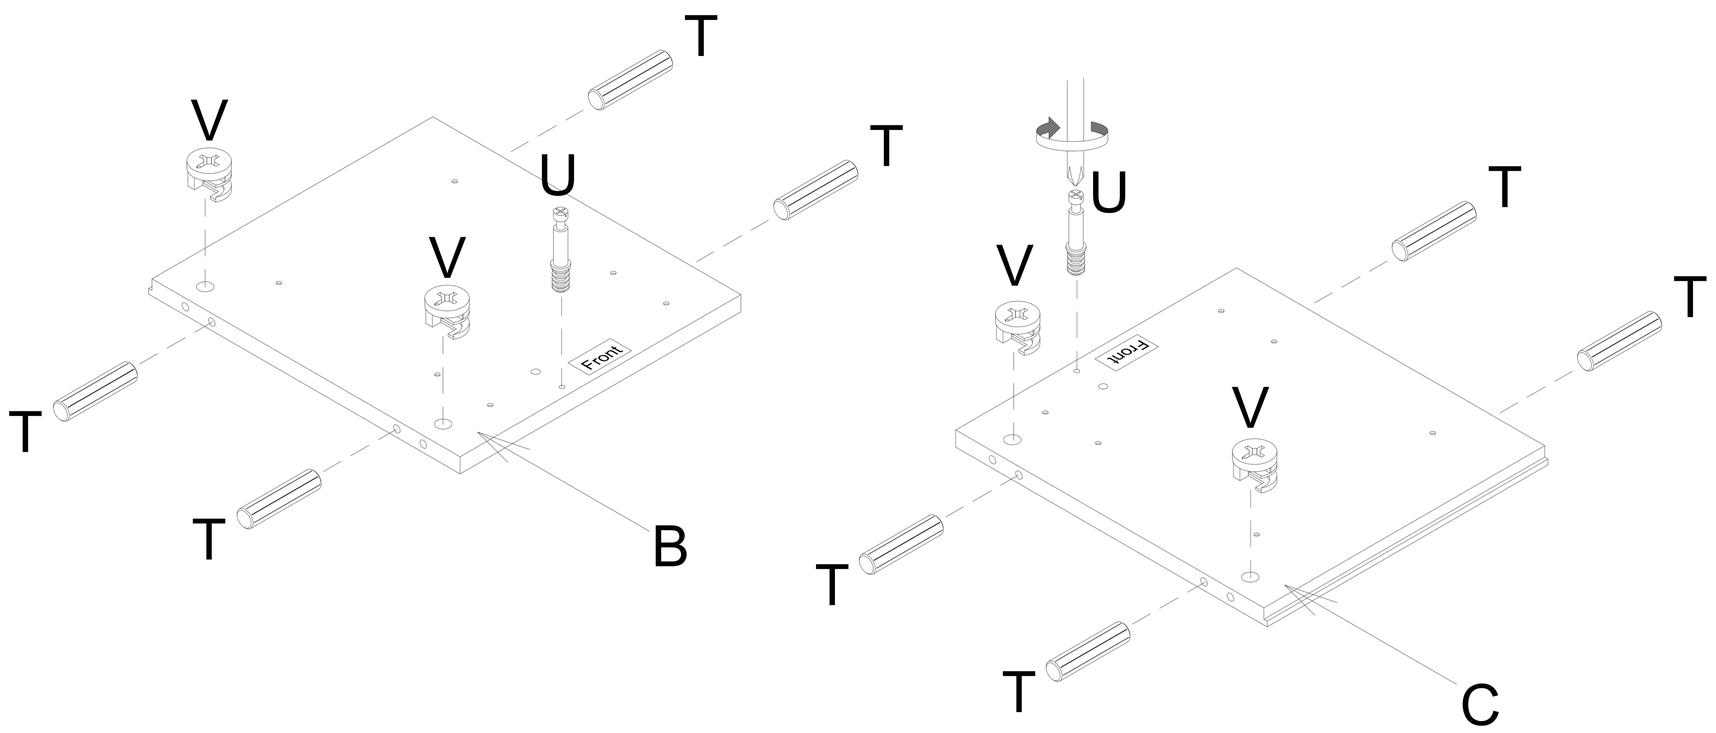

3 Insert Dowel (T) and Cam Lock (V) into the Center Bar (E).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

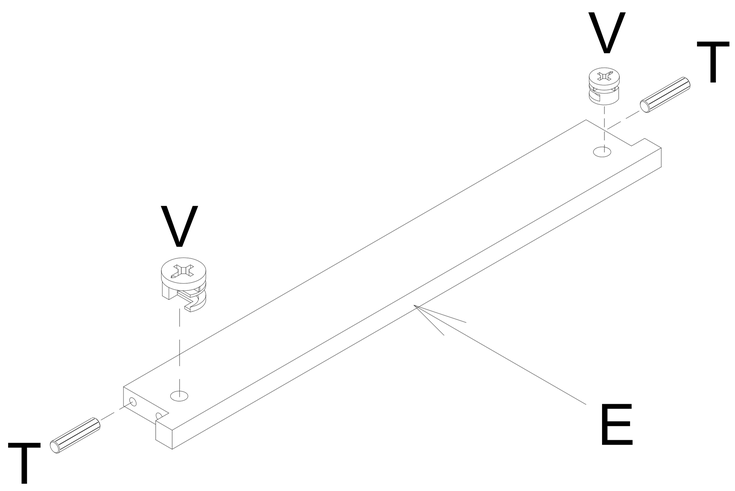

4 Disassemble Runner (Q) into two parts. Attach the part with runner roller to the Left & Right Side Panel (B & C) using Screw (X) with a screwdriver (not provided). Attach the other part with slide to the Left & Right Small Drawer Side (H & I) and Left & Right Big Drawer Side (L & M) (shown in Step 11 & Step 16).

NOTE : - Runner (Q) should face the front of the panel.

- Assemble Screw (X) from the front of the runner, starting with X^1 , X^2, then X^3.
- Ensure screws are installed vertically without tilting to fit properly into the holes.



EXTENSION RUNNER DISASSEMBLE STEPS:

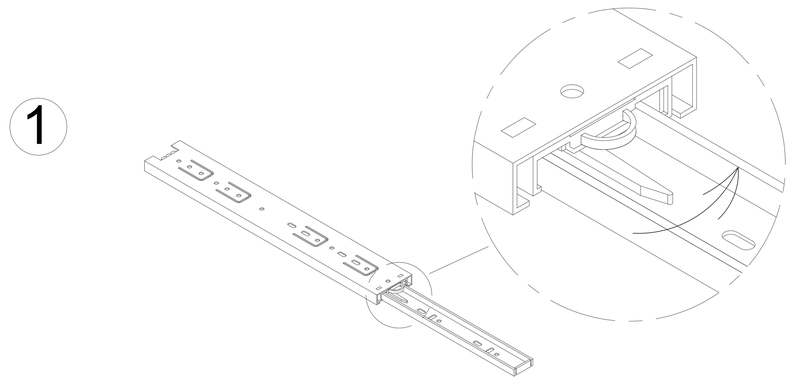

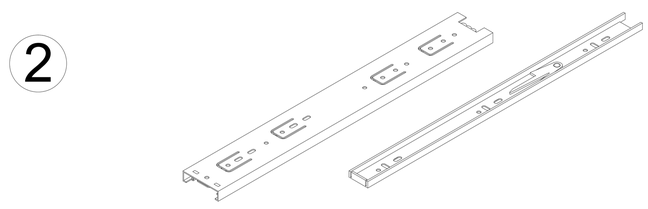

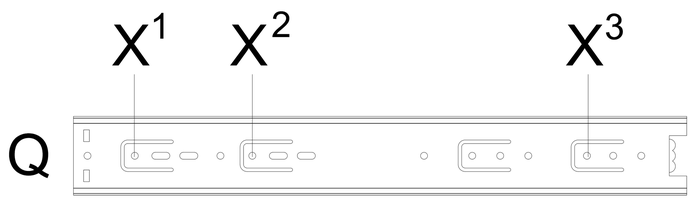

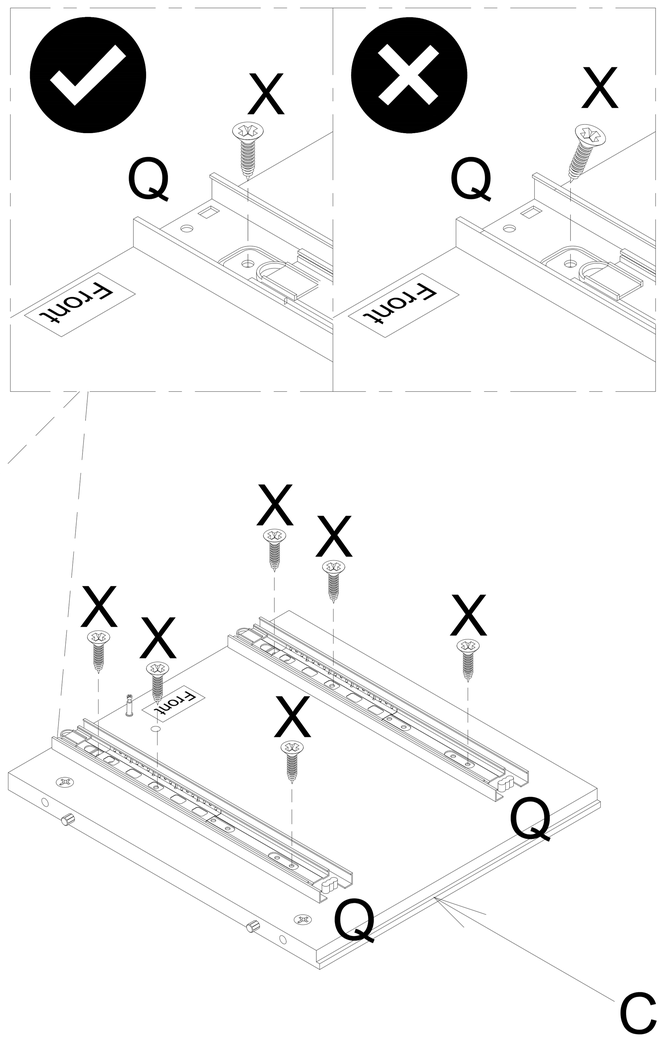

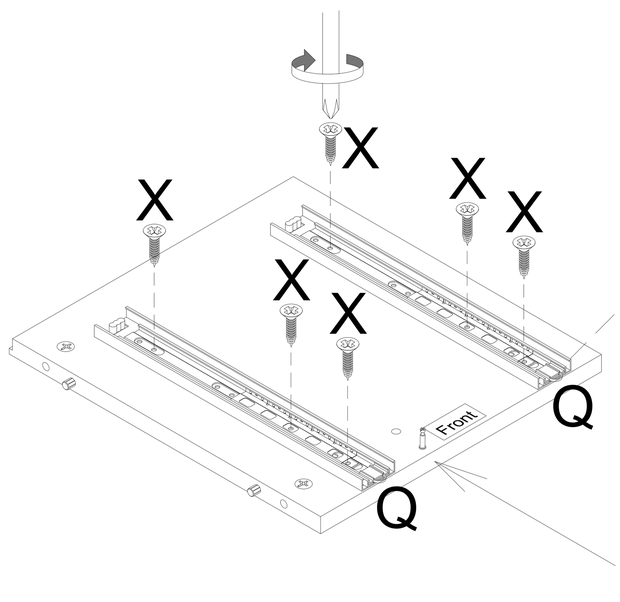

5 Attach Dowel (T) to Post (F).

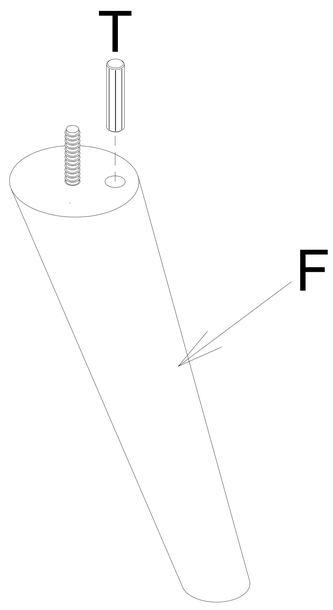

6 Attach the Left & Right Side Panel (B & C) to the Center Bar (E) and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

NOTE : - Do not over tighten the Cam Lock (V).

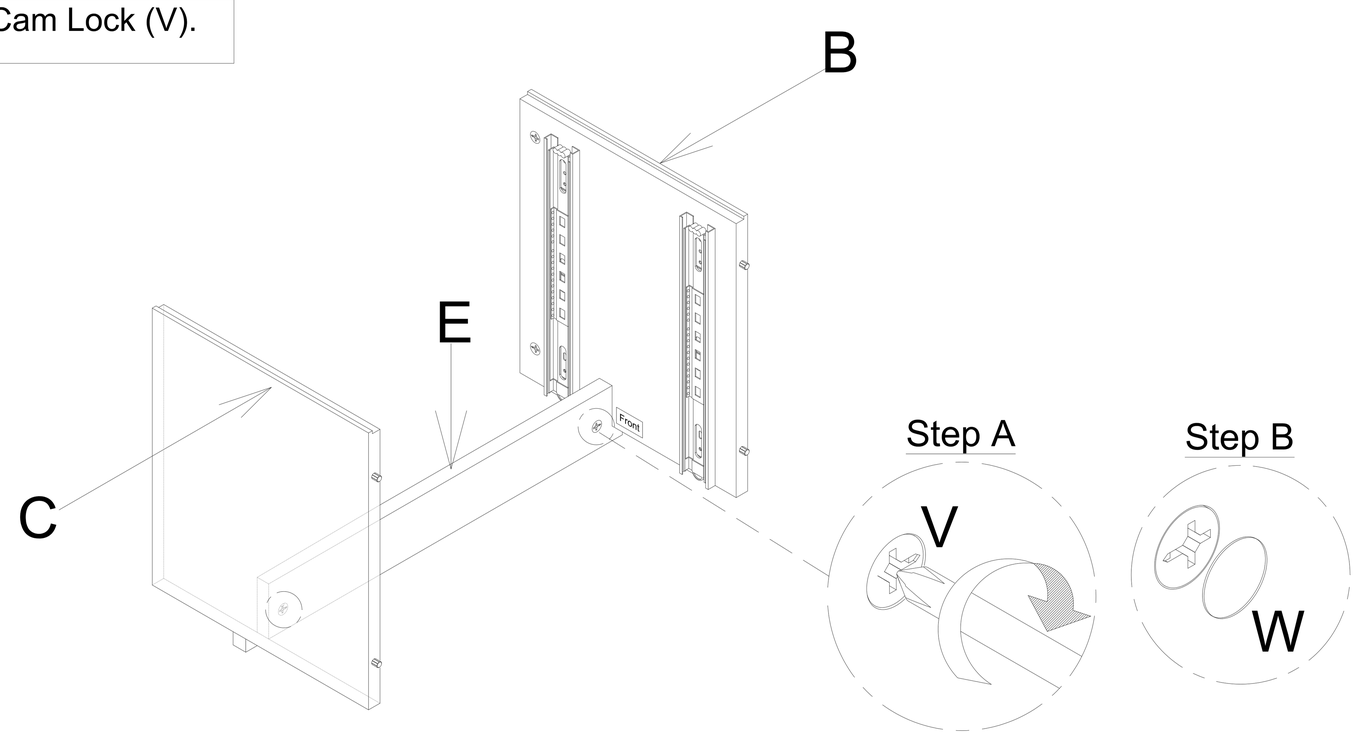

7 Attach the Bottom Frame (D) to the Left & Right Side Panel (B & C) using Screw (Y) with a screwdriver (not provided).

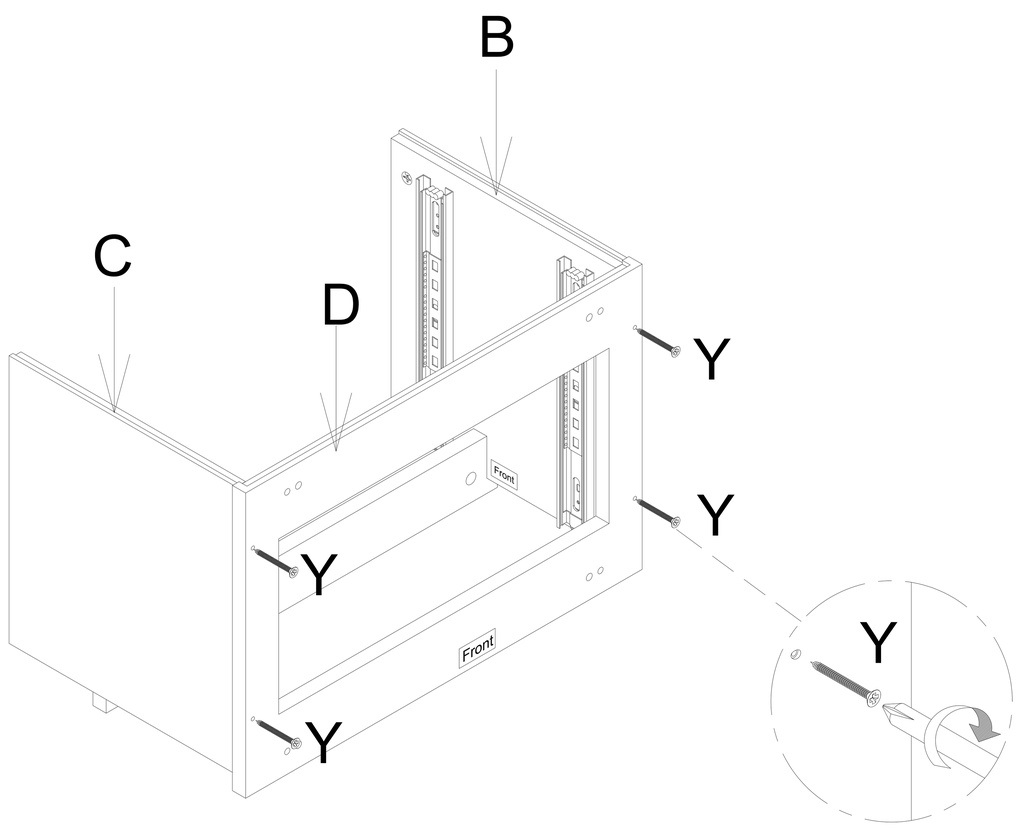

8 Attach the Top Panel (A) to the Left & Right Side Panel (B & C) and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

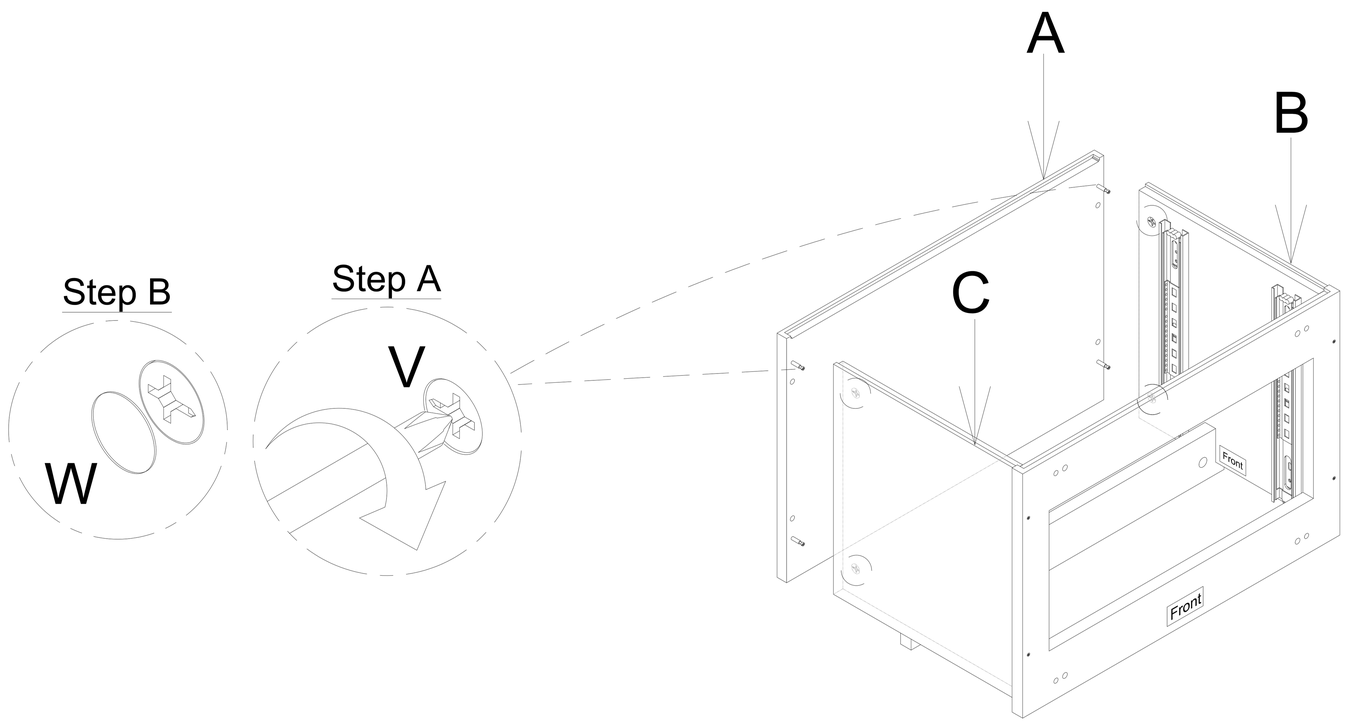

9 Attach the Post (F) to the Bottom Frame (D) using Flat Washer (AB), Spring Washer (AC) and Hex Nut (AD) with the Spanner (AE).

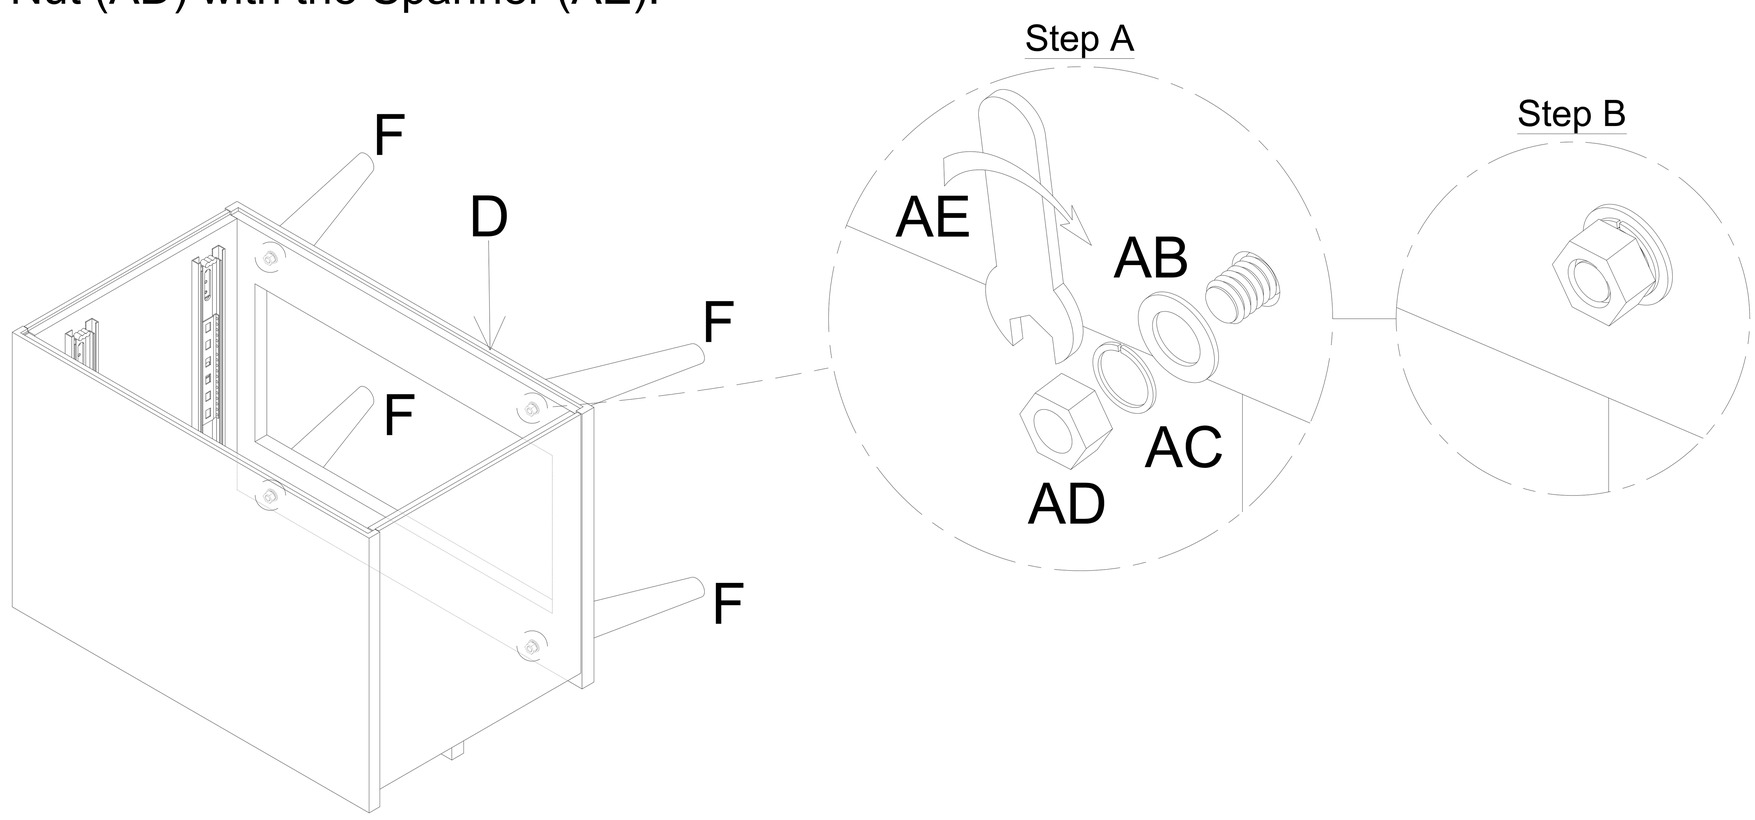

10 Attach the Back Plywood (G) to the assembled unit using Panhead Screw (AA) with a screwdriver (not provided).

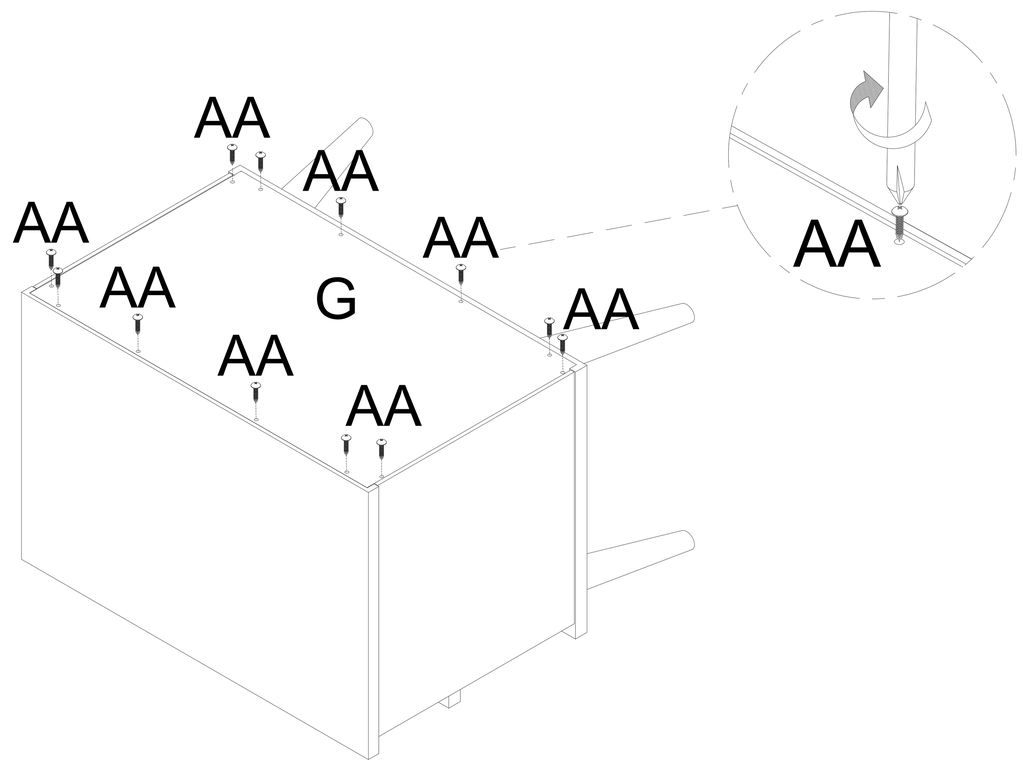

11 Attach the Runner (Q) to the Left & Right Small Drawer Side (H & I) using Screw (X) with a screwdriver (not provided).

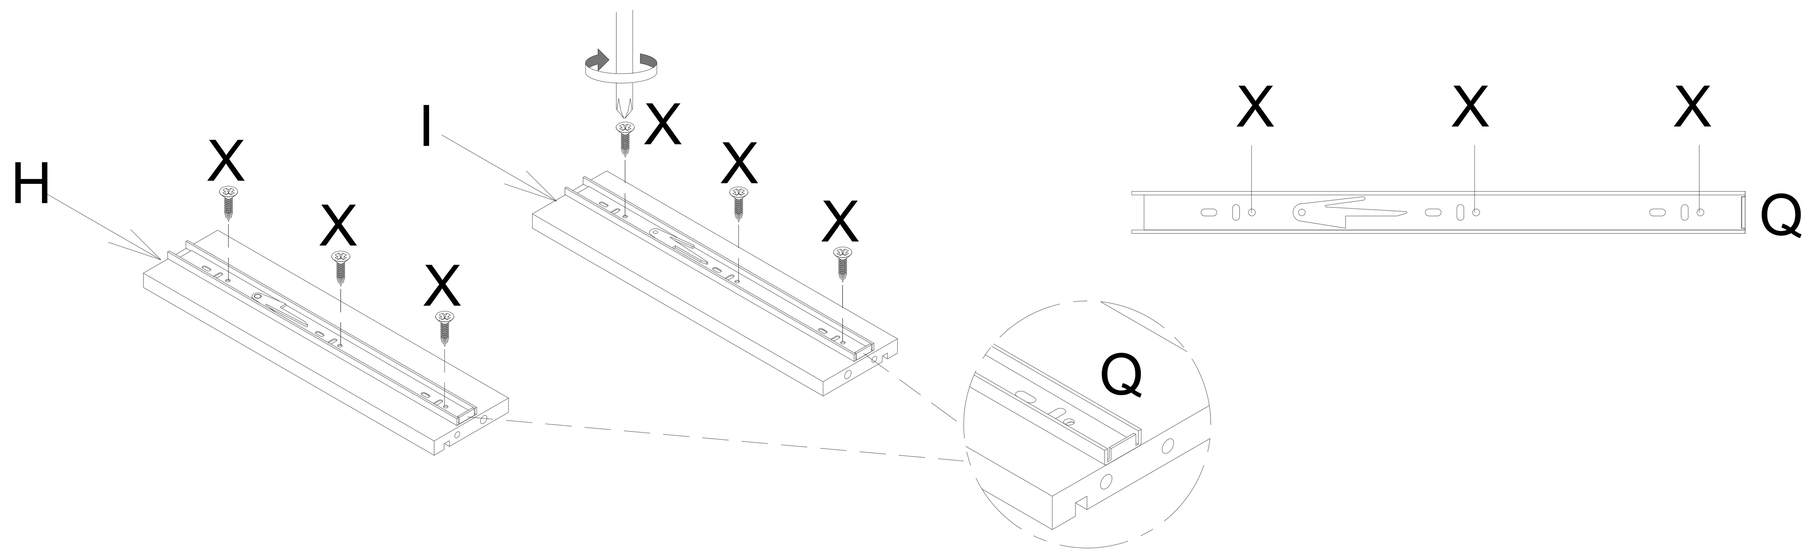

12 Attach Dowel (S) and Cam Lock (V) to the Left & Right Small Drawer Side (H & I) and the Small Drawer Back (K). Attach Cam Bolt (U) to the Left & Right Small Drawer Side (H & I) and Small Drawer Front (J) with a screwdriver (not provided).

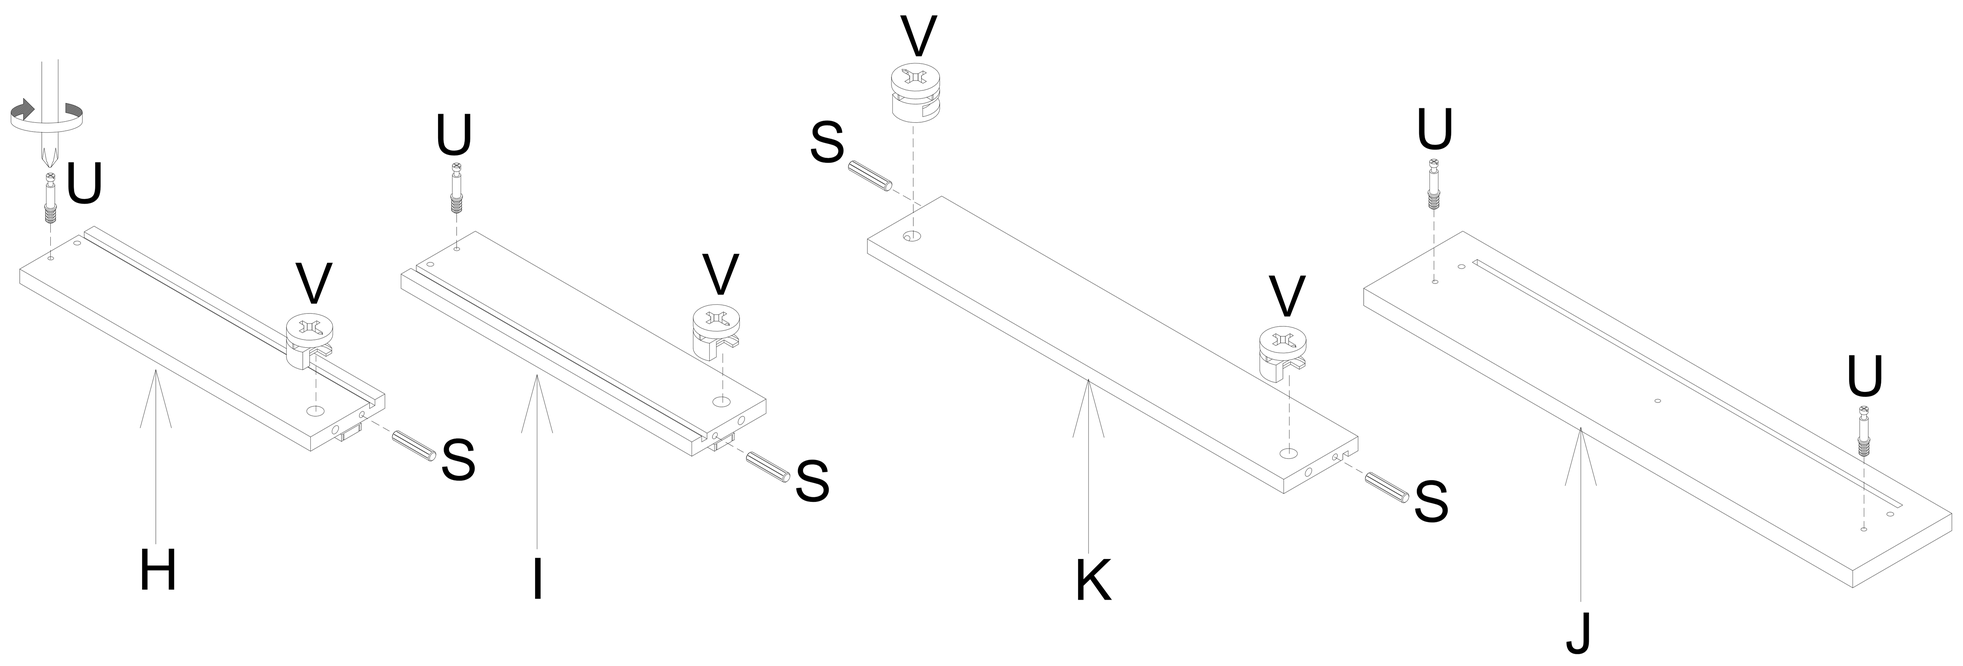

13 Attach the Left & Right Small Drawer Side (H & I) to the Small Drawer Back (K) and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

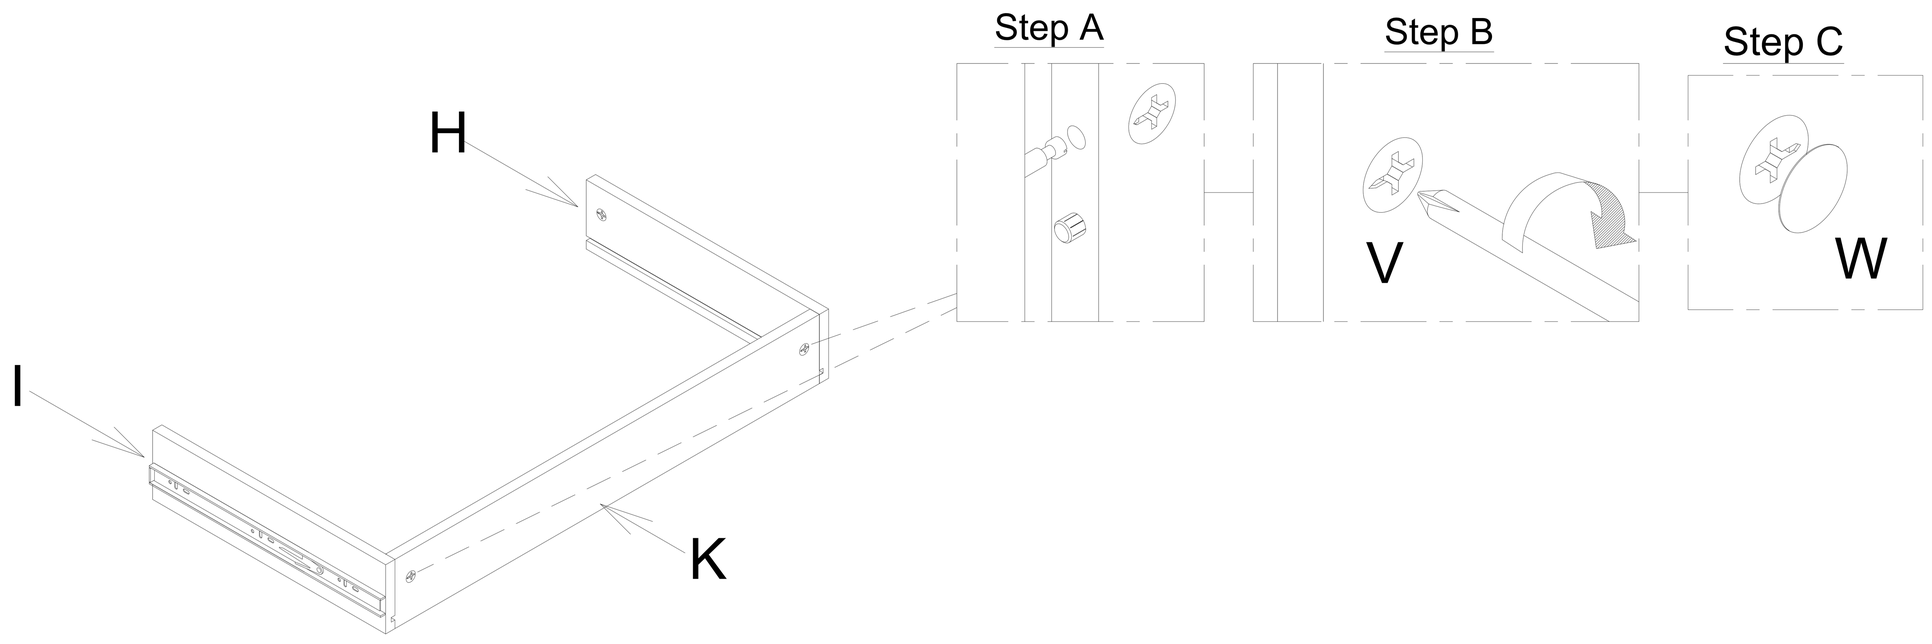

14 Slot the Drawer Base (P) into the grooves of the drawer box. Attach the Small Drawer Front (J) to the drawer box and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

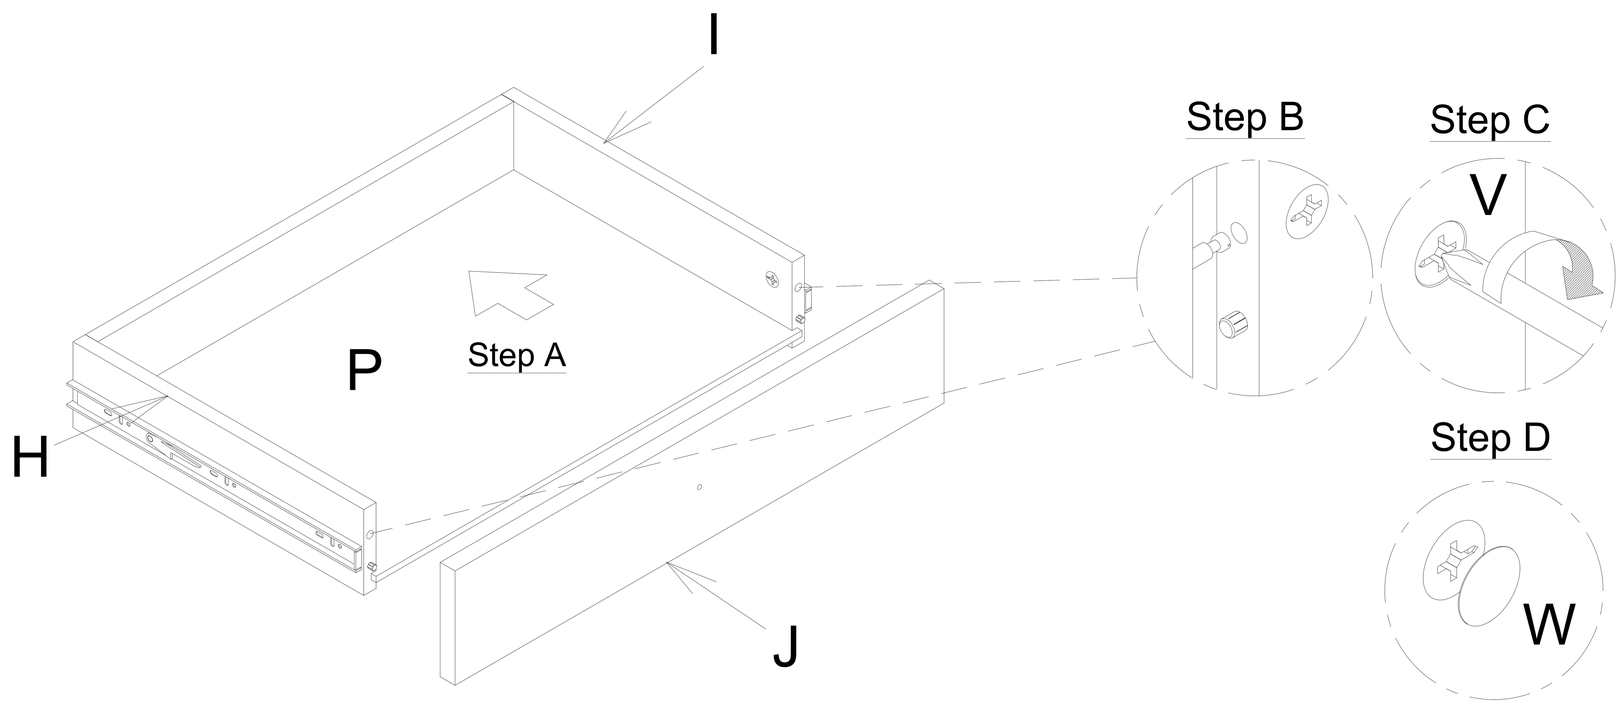

15 Attach the Runner (Q) to the Left & Right Big Drawer Side (L & M) using Screw (X) with a screwdriver (not provided).

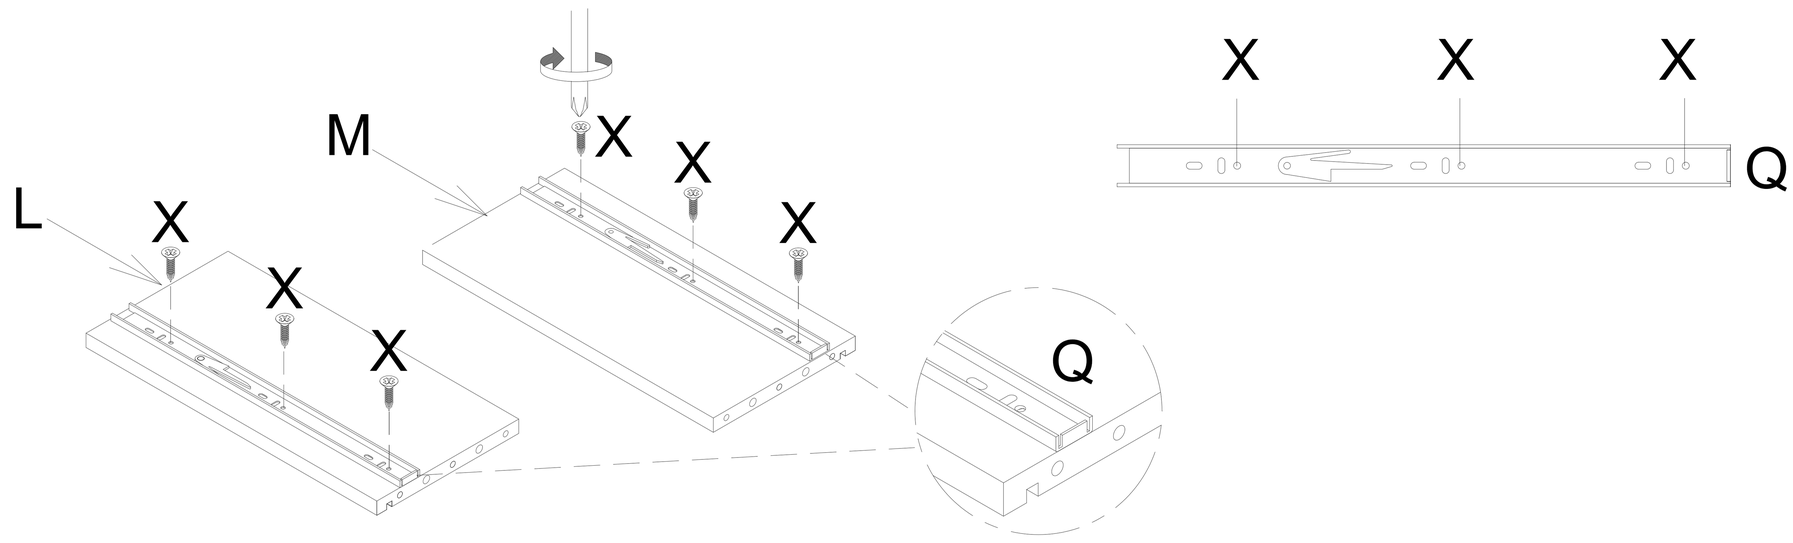

16 Attach Dowel (S) and Cam Lock (V) to the Left & Right Big Drawer Side (L & M) and the Big Drawer Back (O). Attach Cam Bolt (U) to the Left & Right Big Drawer Side (L & M) and Big Drawer Front (N) with a screwdriver (not provided).

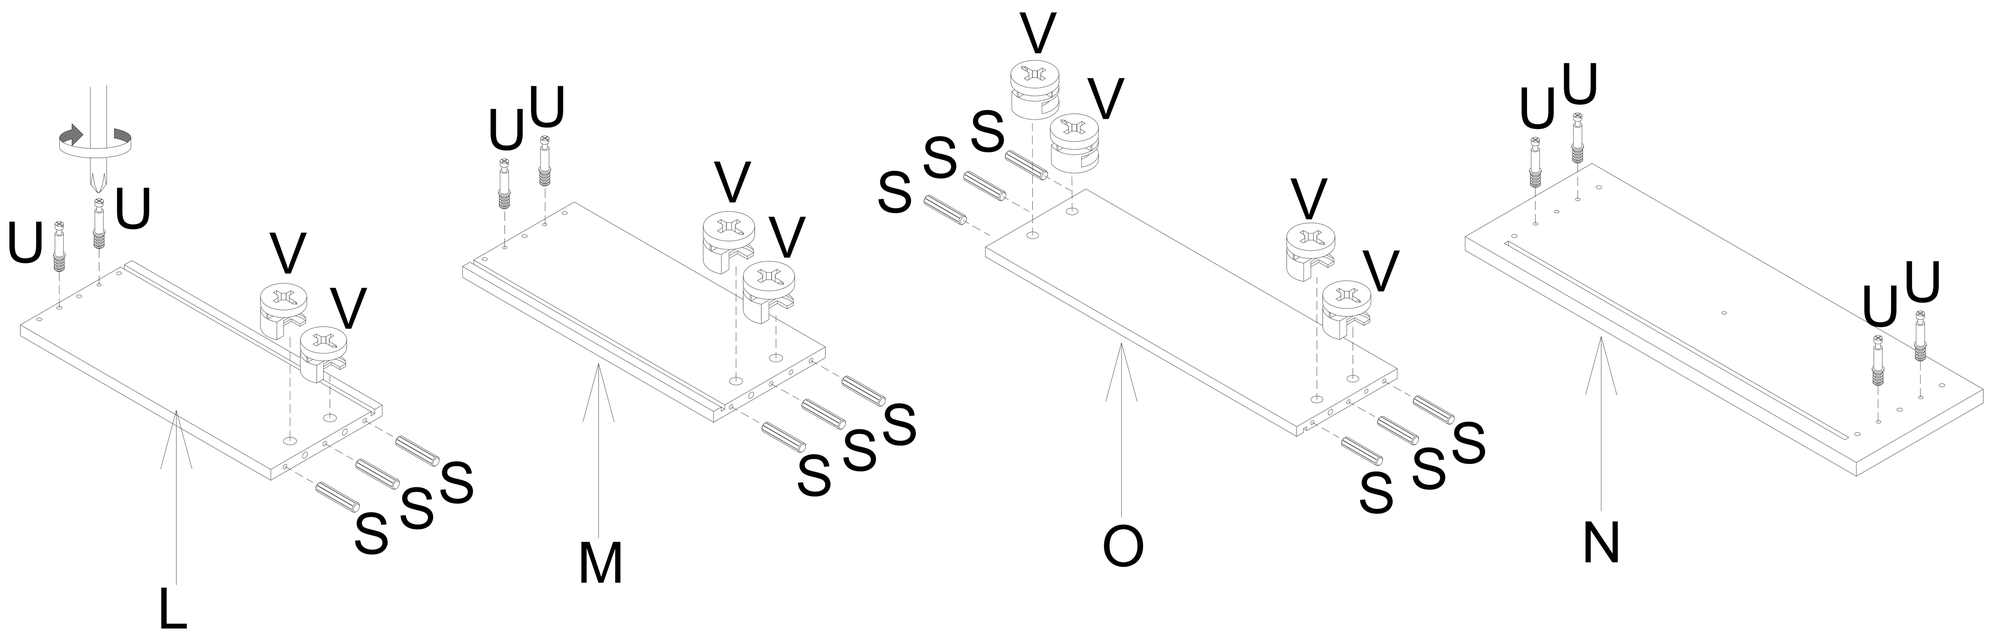

17 Attach the Left & Right Big Drawer Side (L & M) to the Big Drawer Back (O) and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

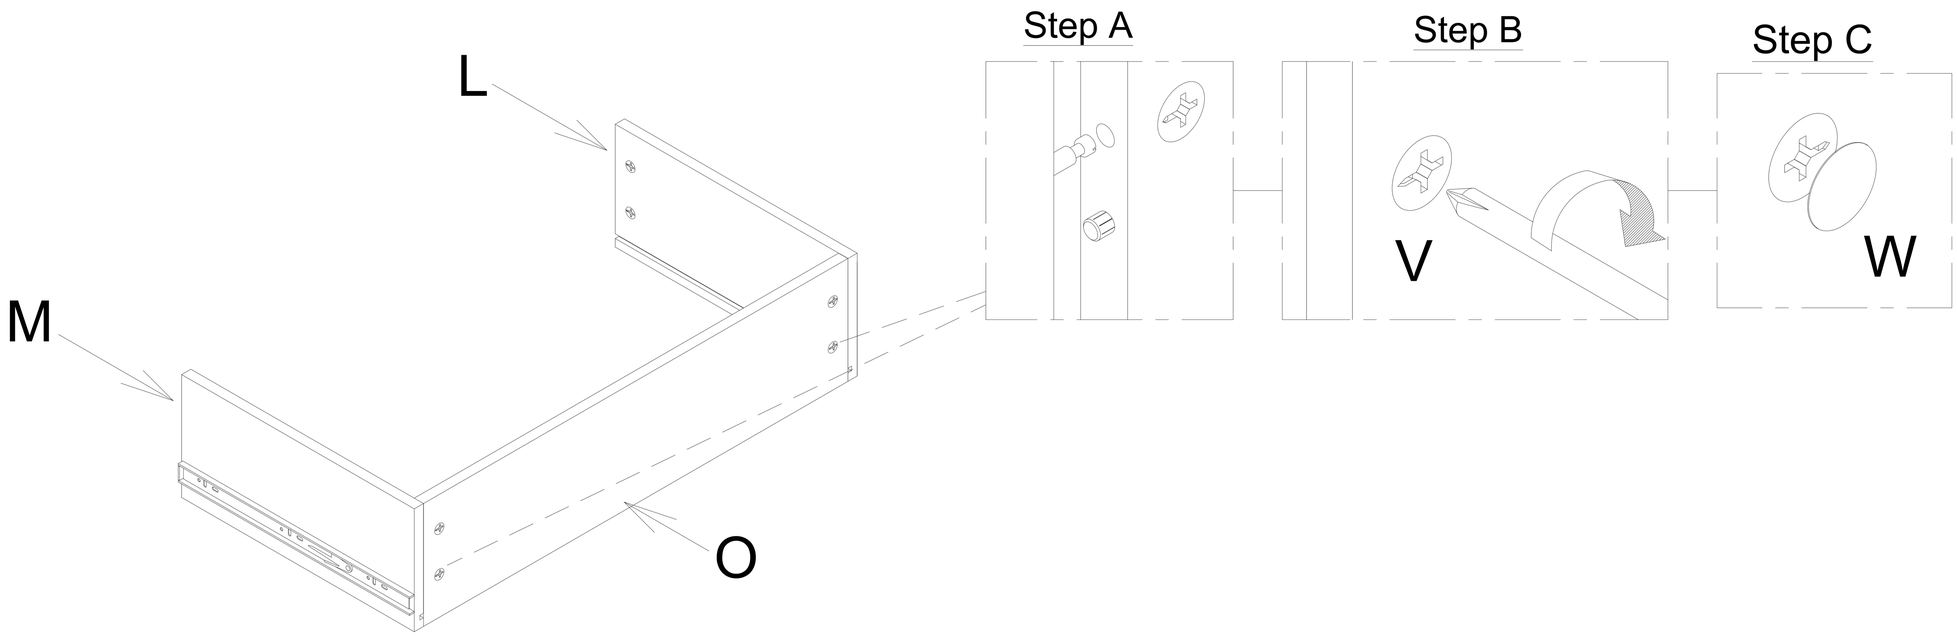

18 Slot the Drawer Base (P) into the grooves of the drawer box. Attach the Big Drawer Front (N) to the drawer box and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

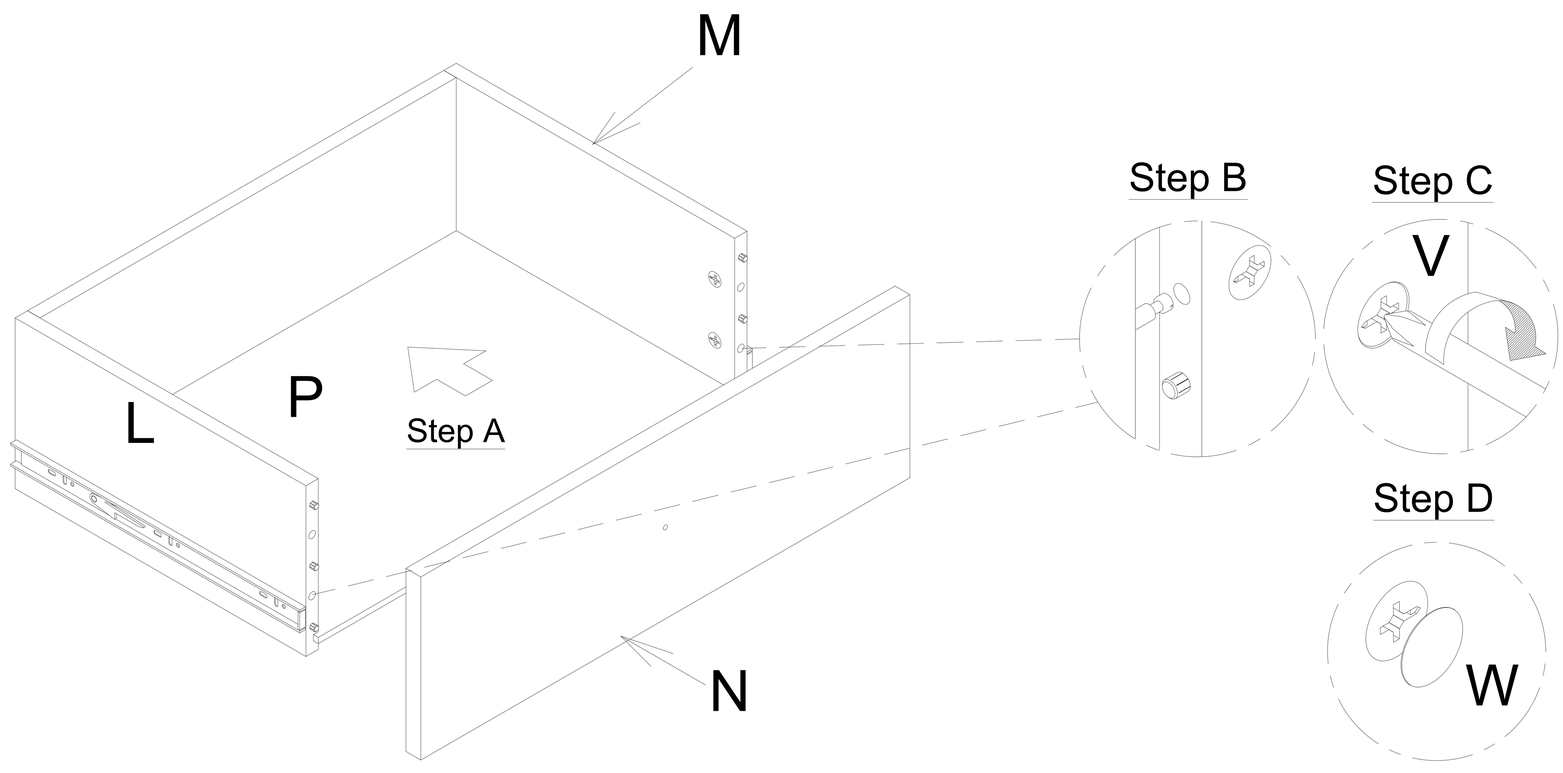

19 Attach the Handle (R) to the Small & Big Drawer Front (J & N) using Panhead Screw (Z) with a screwdriver (not provided).

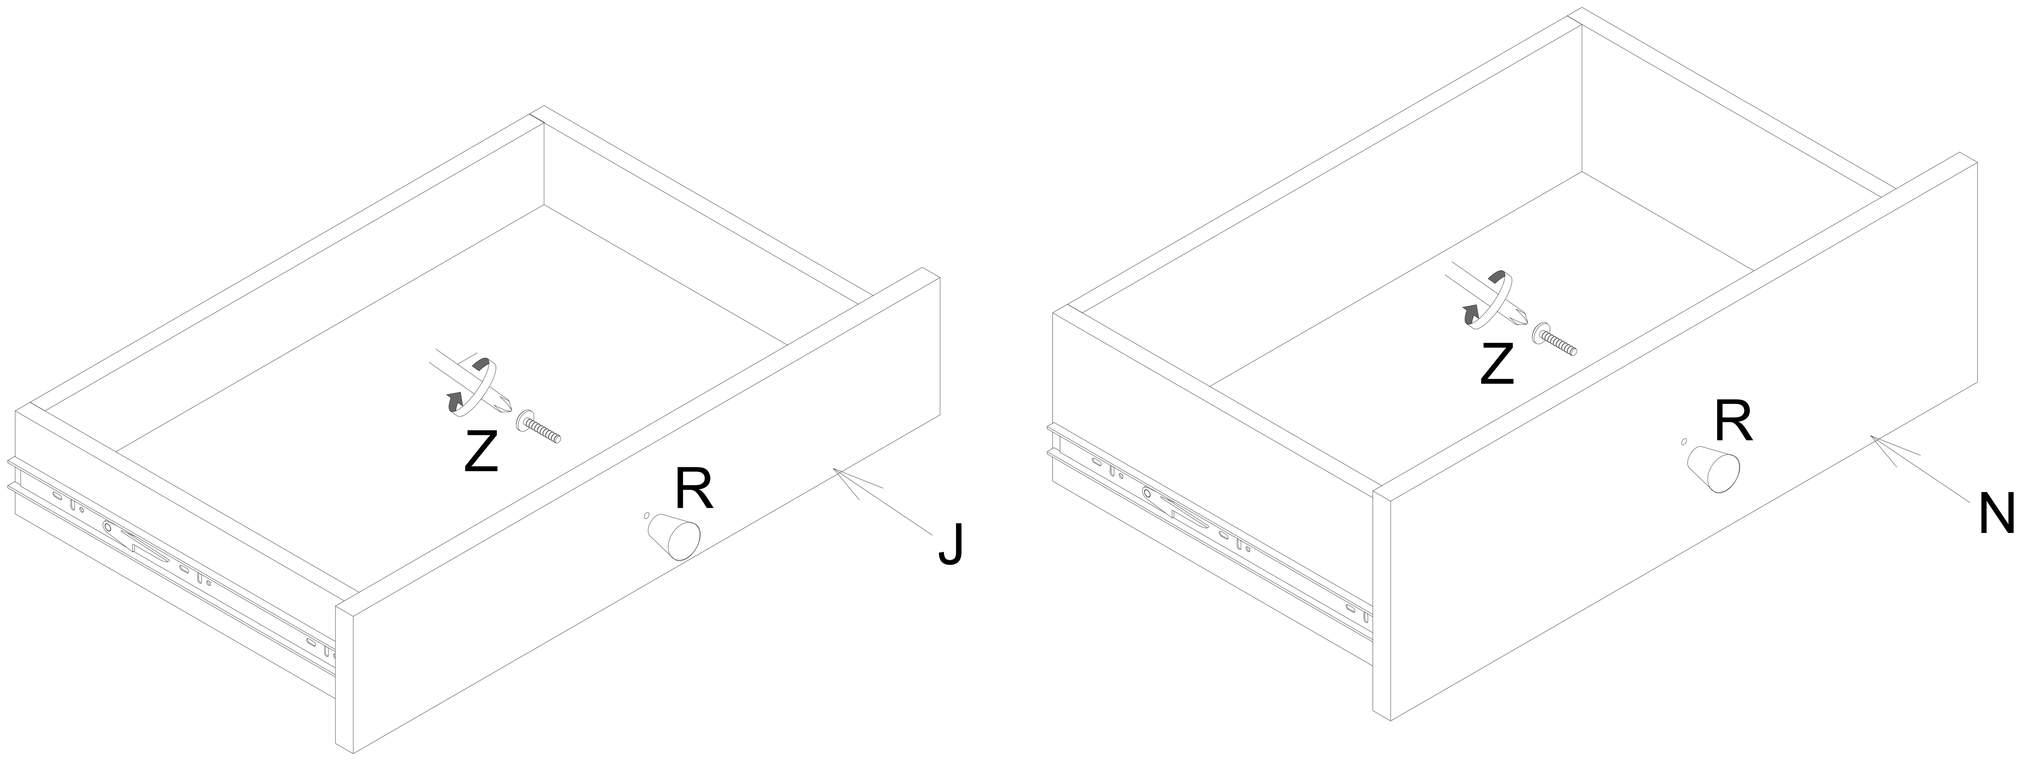

20 Pull out the metal chrome plates from both sides of the Runner (Q). Align the metal chrome plates with the slides on one drawer side, then repeat on the other side. If they are not aligned properly, remove and try again. Once both tracks are aligned correctly, slowly push the drawer all the way in.

LEFT SIDE

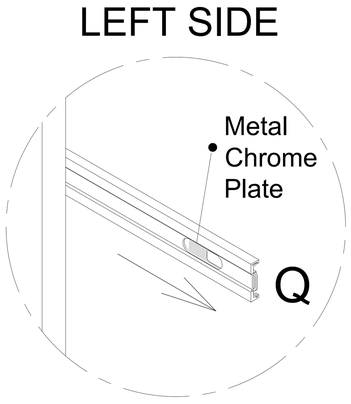

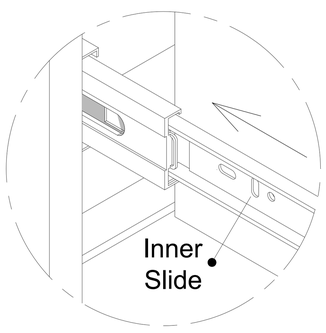

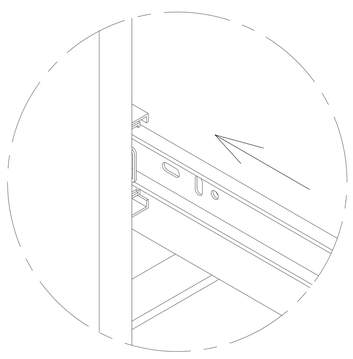

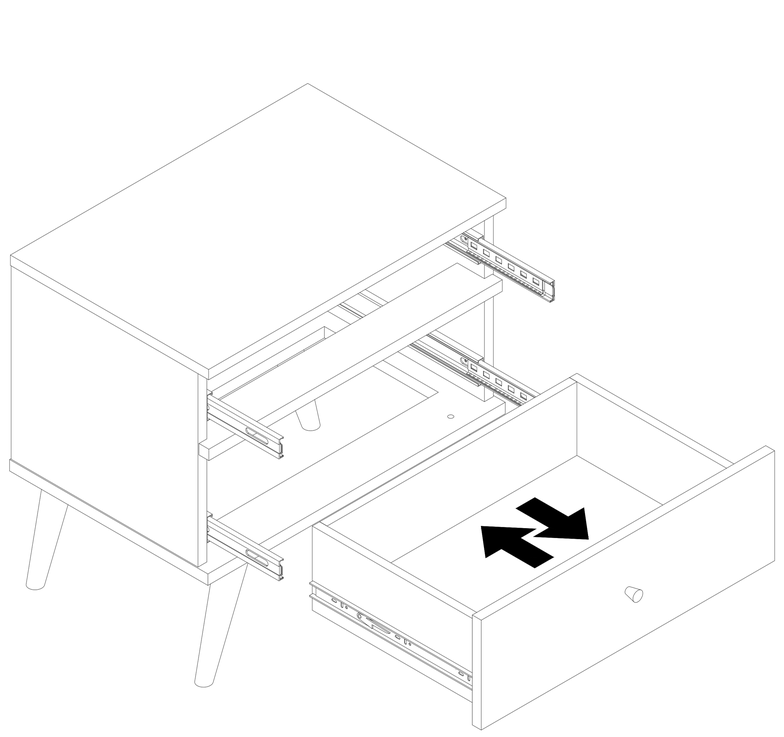

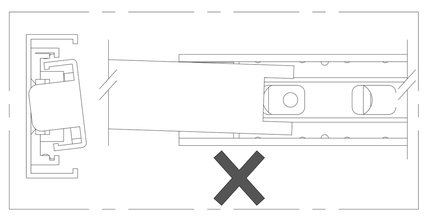

RIGHT SIDE

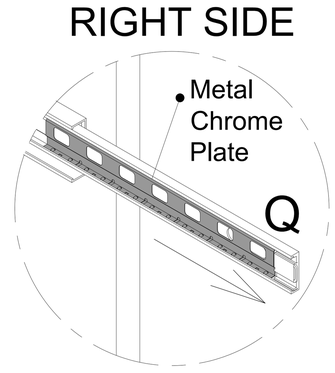

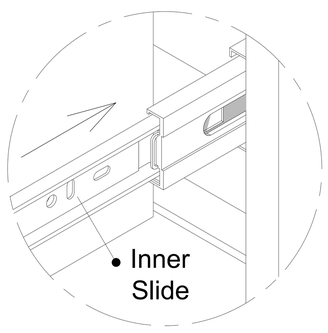

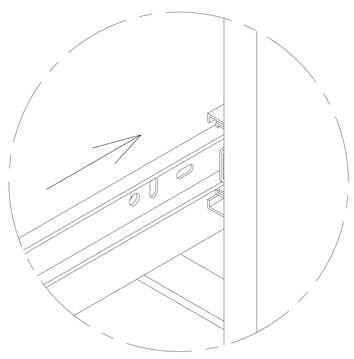

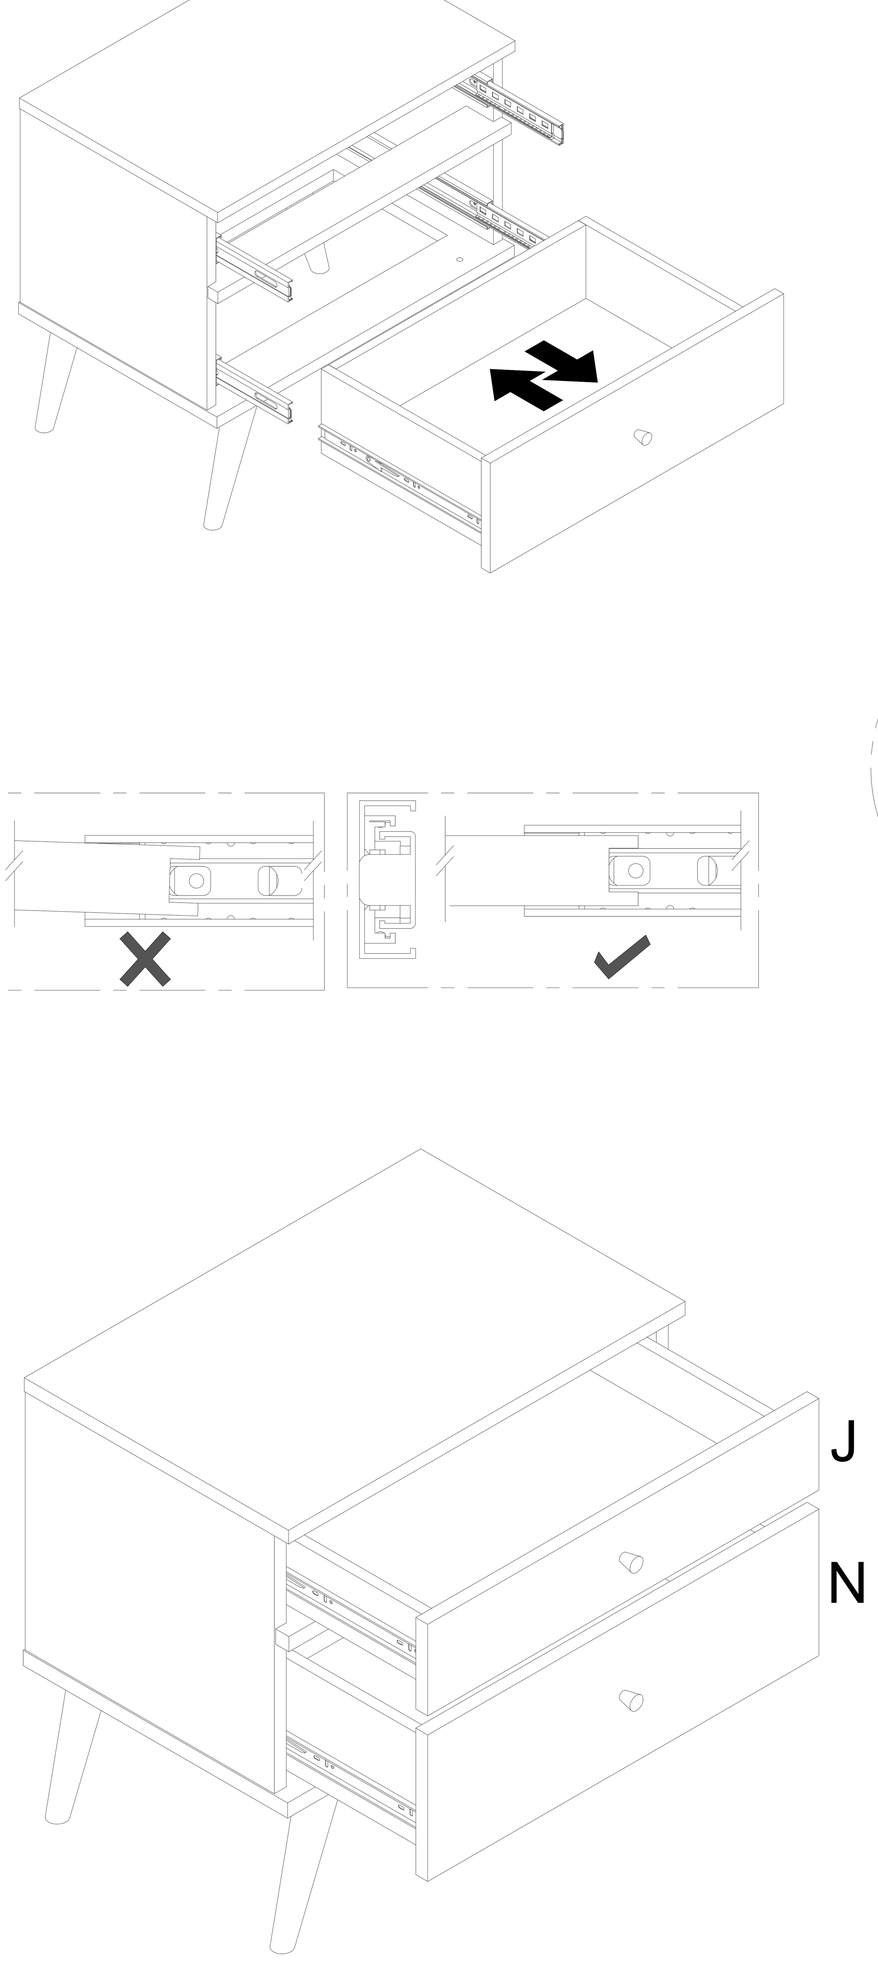

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.