

ASSEMBLY INSTRUCTIONS

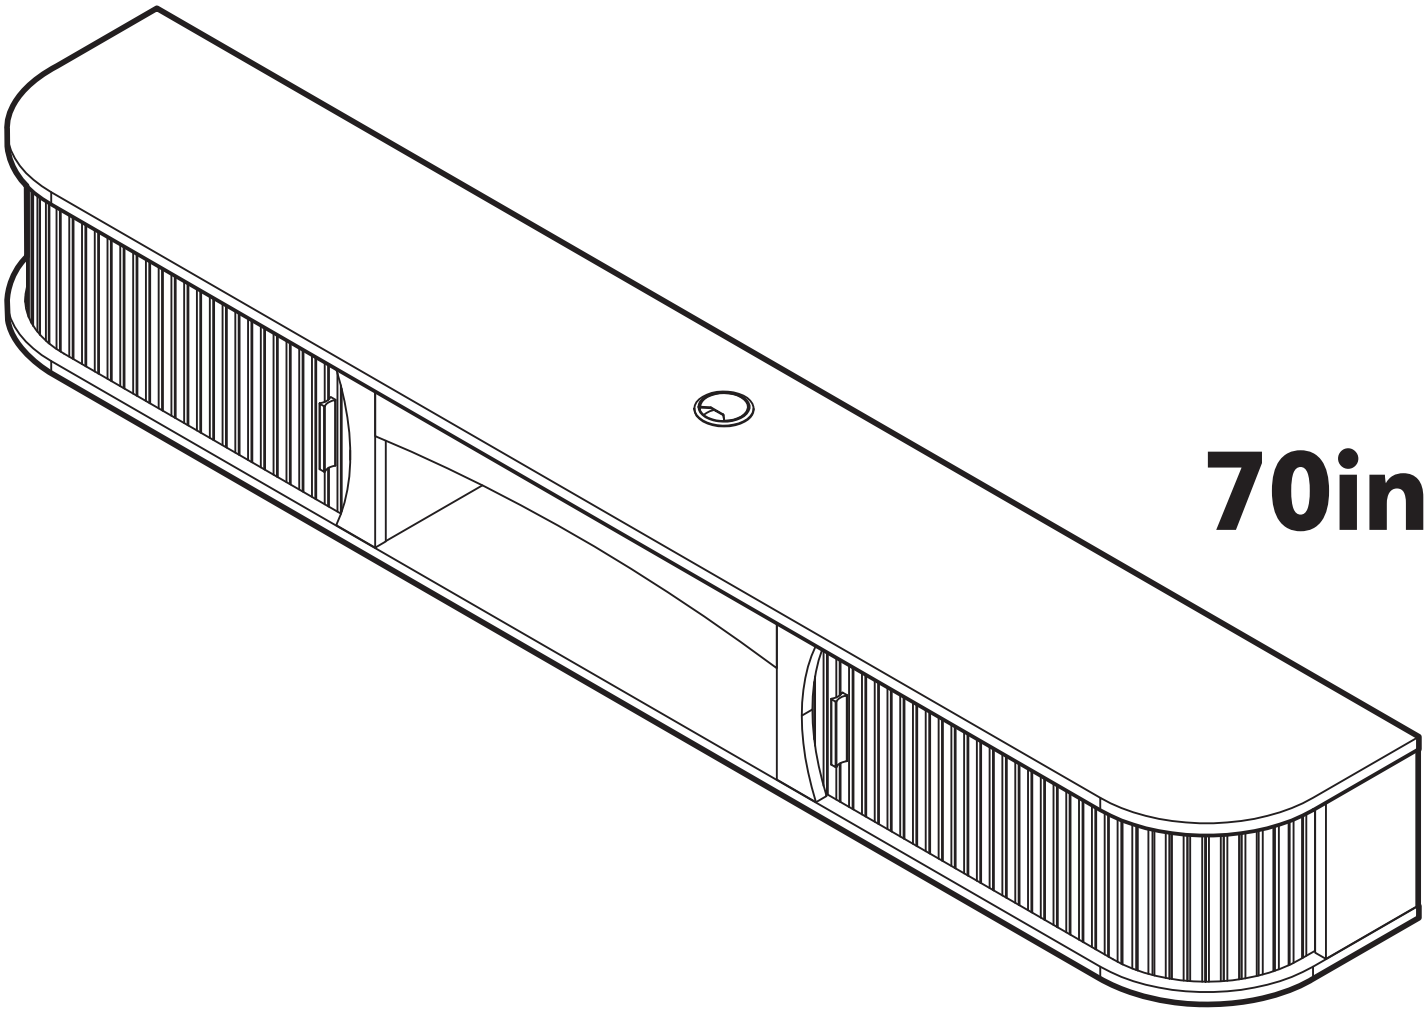


70in

24/7 Any other questions, please contact customer service. We provide 24/7 online support with dedicated one-on-one assistance for all your inquiries.

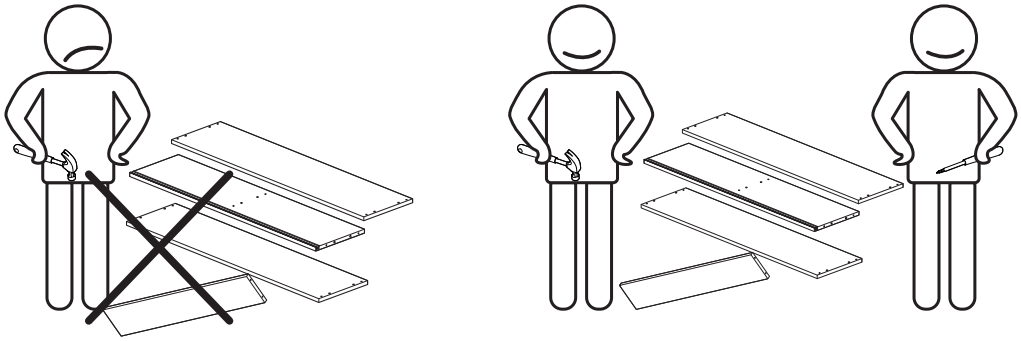

We recommend at least 2 people for the assembly.

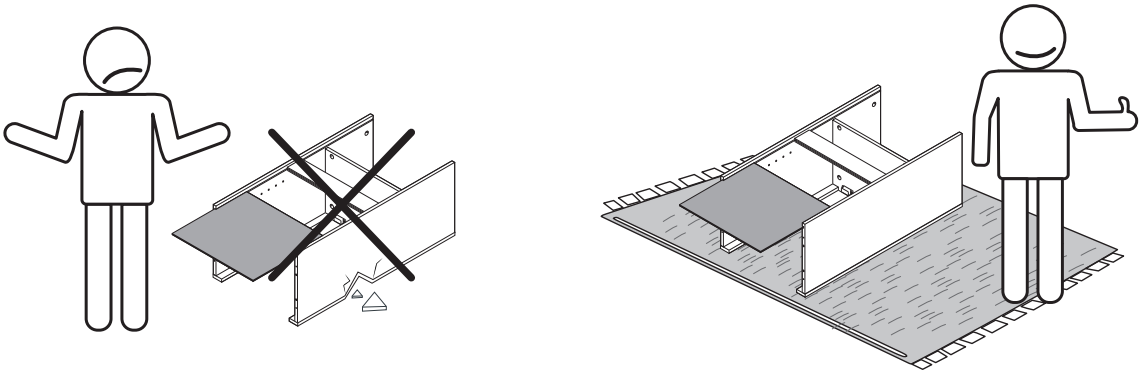

To prevent any damage during assembly, place a mat under the pieces.


Notes Before Installation

- **Mounting Height:**
  The bottom of the floating TV stand should be 20–25 cm above the floor. If your pre-installed power outlets are higher than 25 cm, position the TV stand to avoid blocking the outlets and mount it higher accordingly. The center of the TV screen is ideally 107 cm (42 in) above the floor. Adjust the mounting height of the TV stand based on this height.


- **Suitable Wall Types:**
  Concrete wall, solid brick wall, solid wood wall.

- **Unsuitable Wall Types:**
  Hollow drywall, non-load-bearing partition wall, unreinforced metal stud wall, aged plaster and lath wall.


PARTS DIAGRAM

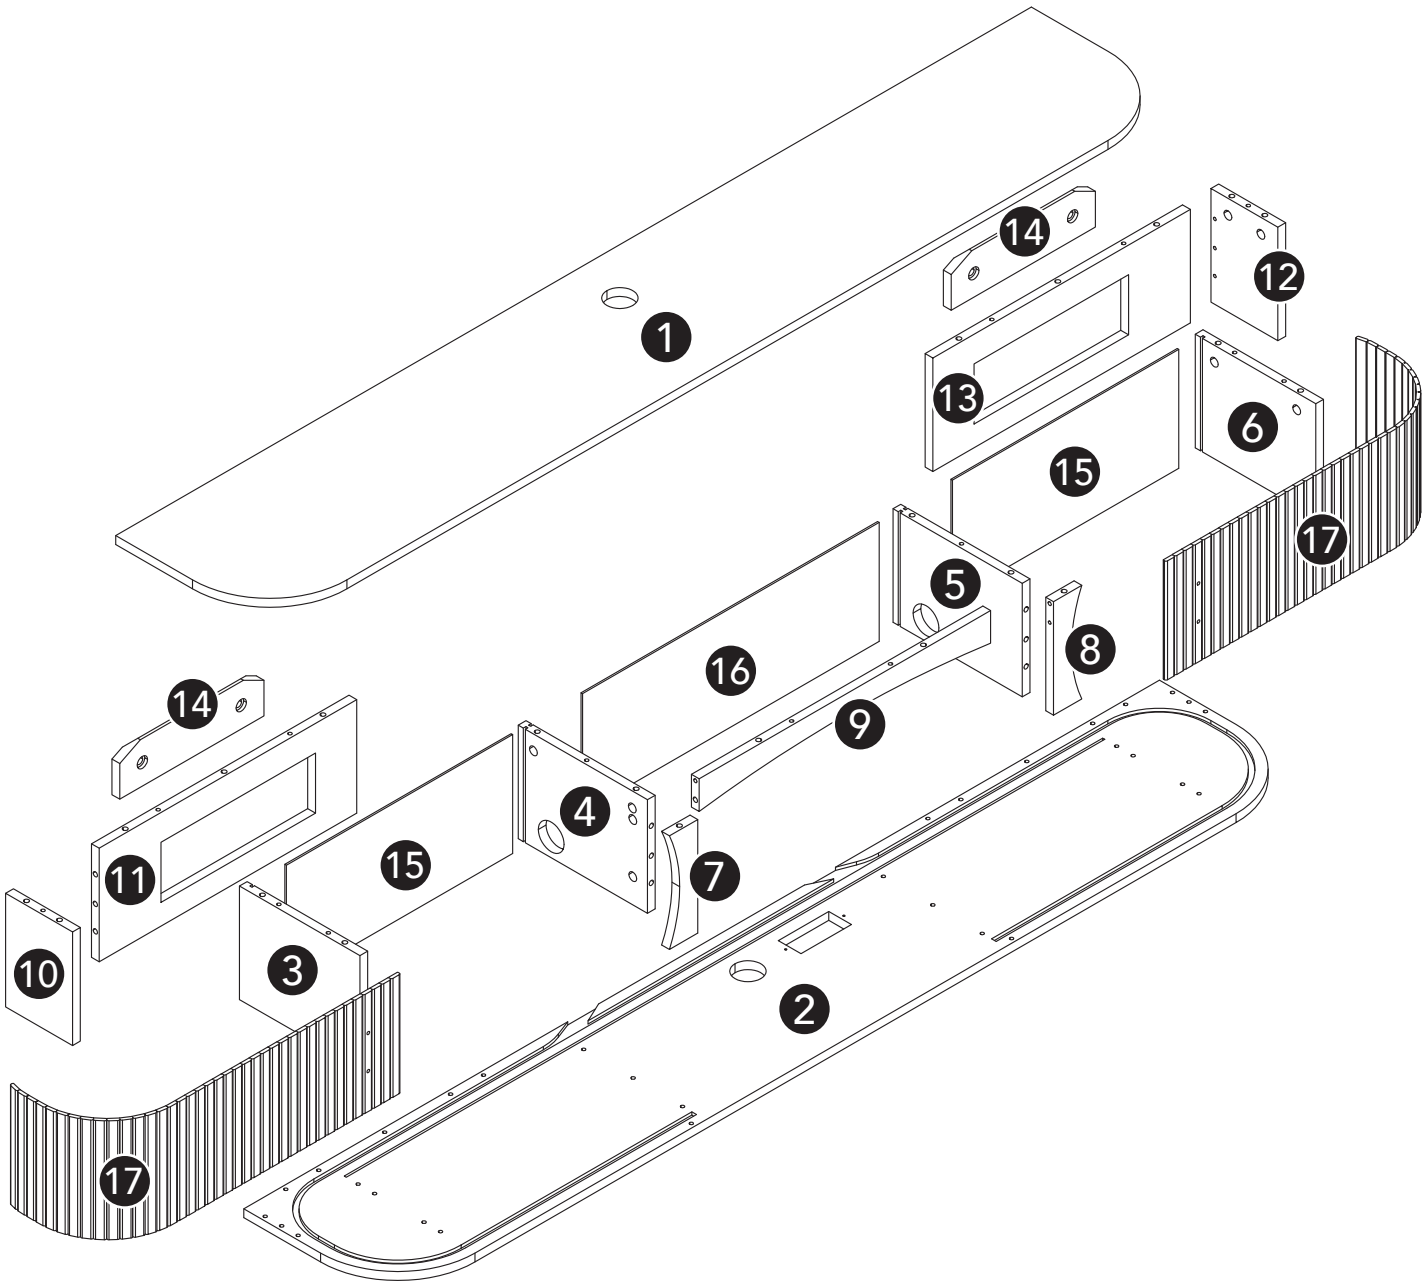


PARTS LIST

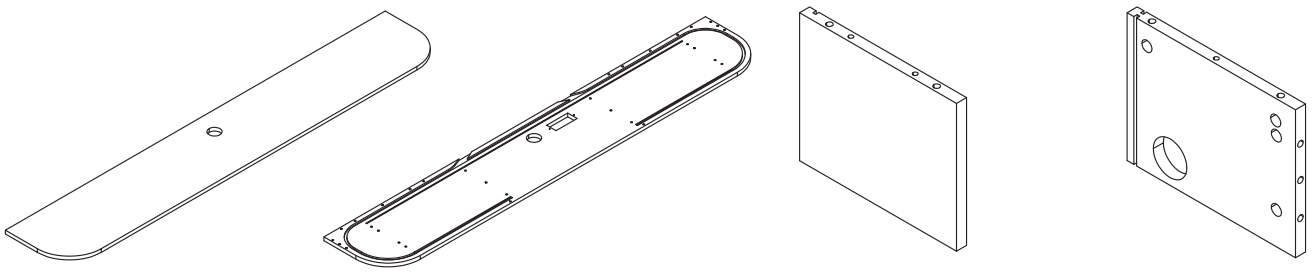


1 x1 2 x1 3 x1 4 x1

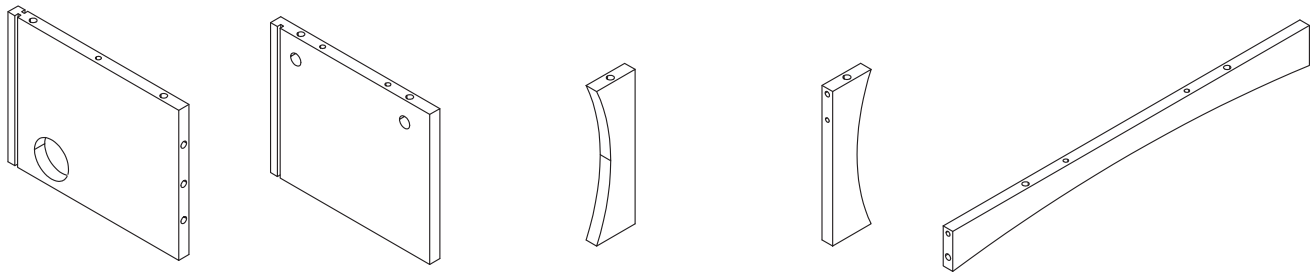

5 x1 6 x1 7 x1 8 x1 9 x1

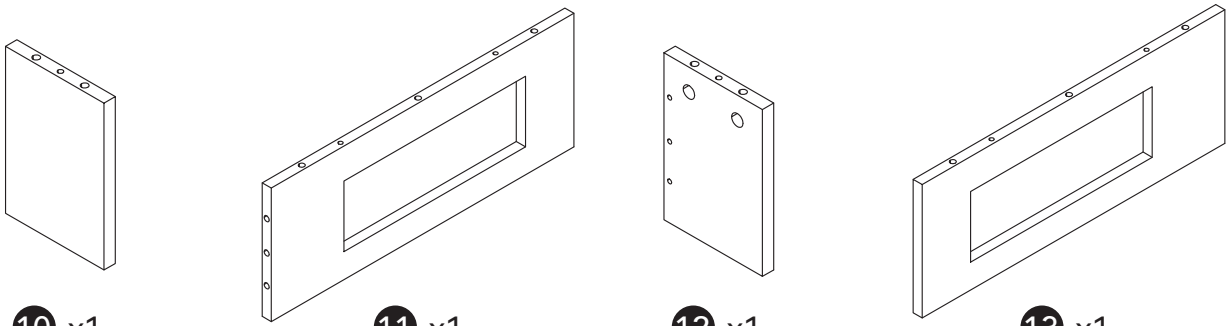


10 x1 11 x1 12 x1 13 x1

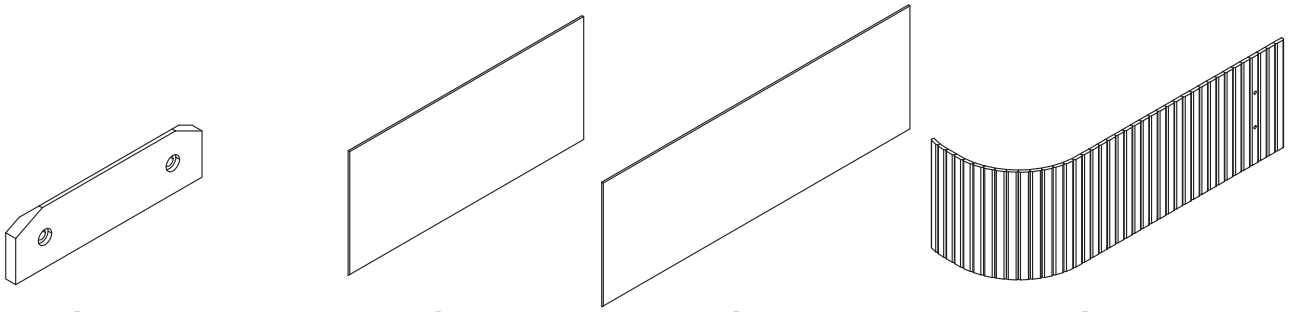

14 x2 15 x2 16 x1 17 x2

HARDWARES

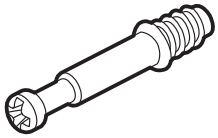


M6x35mm

A x 32




Ø15x12mm

B x 32

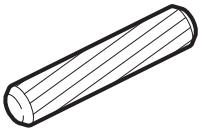


Ø6x30mm

C x 32

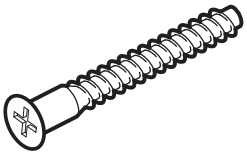


Ø5x40mm

D x 20

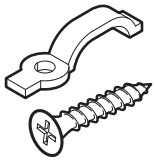


M6x30mm

E x 8




F x 4




Ø3x14mm

G x 6

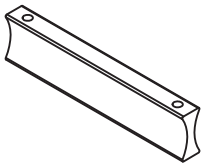


H x 2




M4x10mm

J x 4

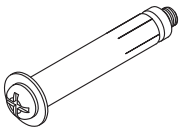


K x 4

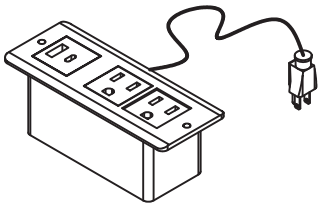


L x 1



M x 2

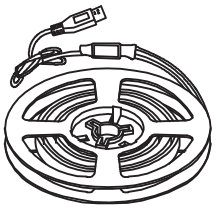


N x 1

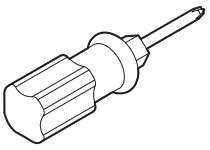

P x 1

SPARE PARTS

The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

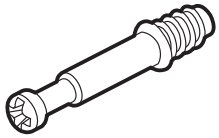


M6x35mm

A x 3




Ø15x12mm

B x 3

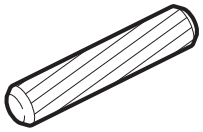


Ø6x30mm

C x 2

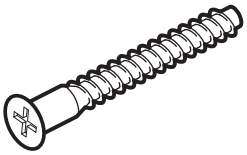


Ø5x40mm

D x 2

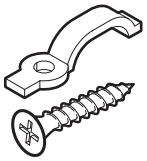


M6x30mm

E x 1



Ø3x14mm

G x 1




M4x10mm

J x 1


CAM LOCK FASTEN SYSTEM

⚠ Insert the cam bolt into the hole, then insert the cam lock and tighten.


1

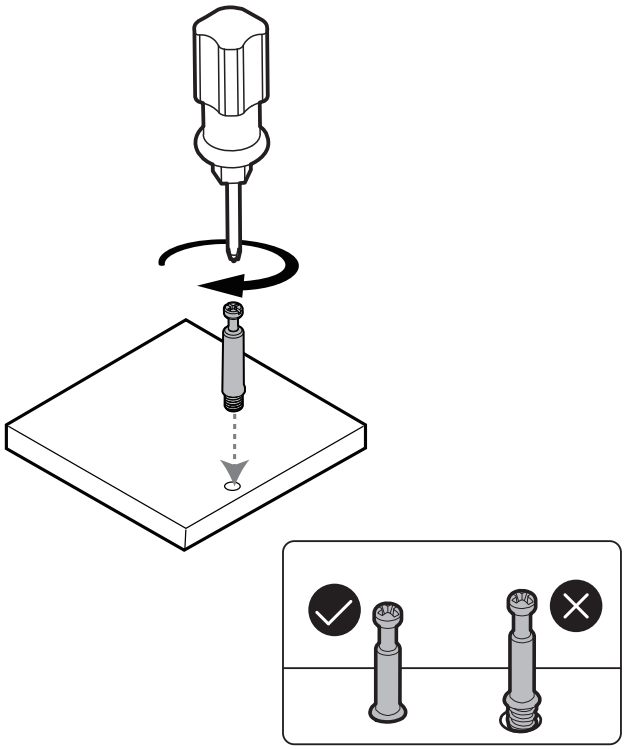

2

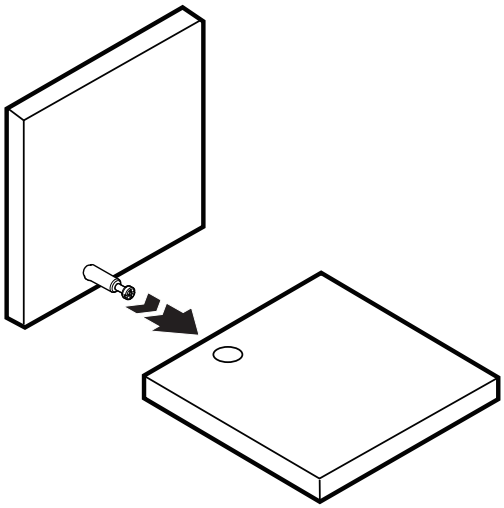


3

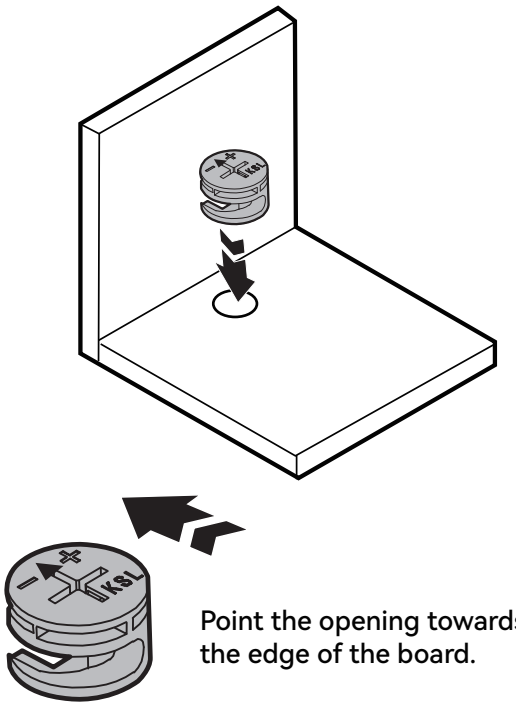


Point the opening towards the edge of the board.


4

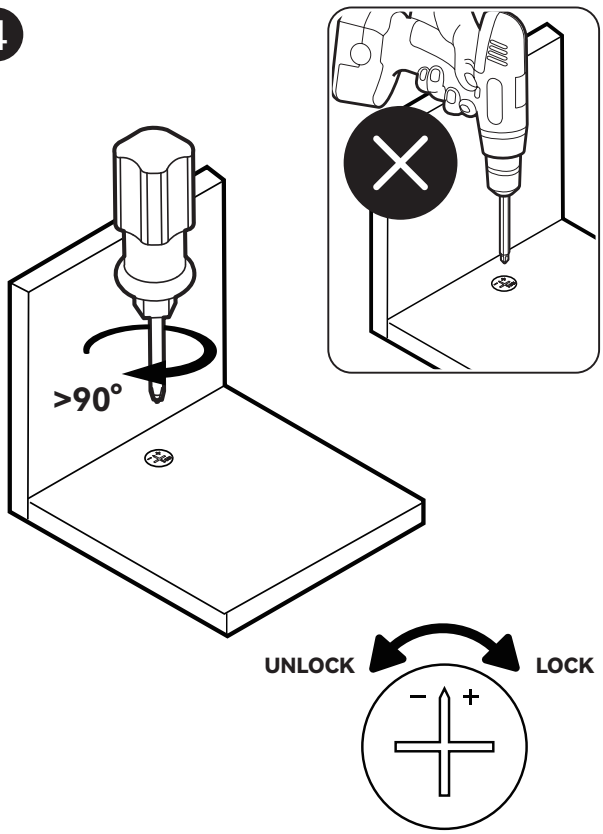



ASSEMBLY

1

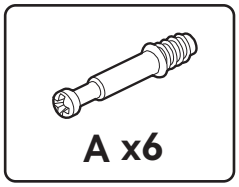


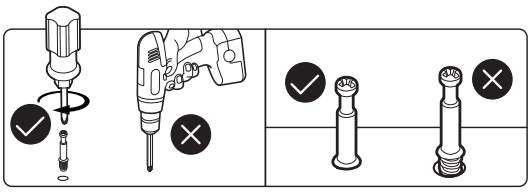


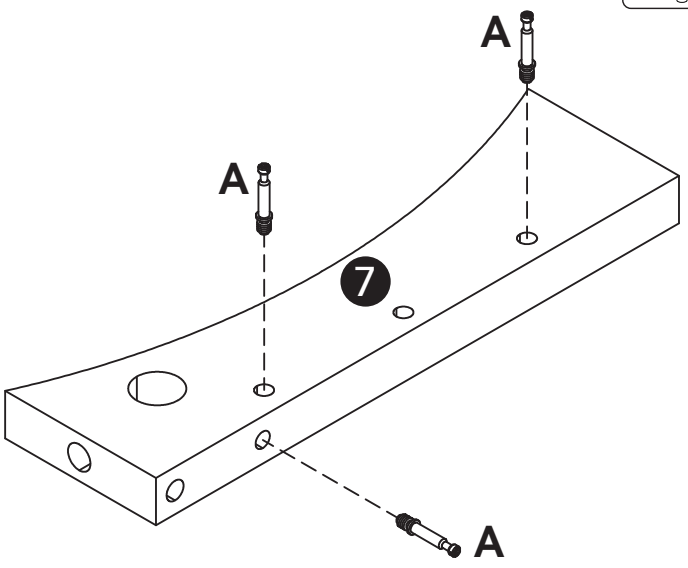


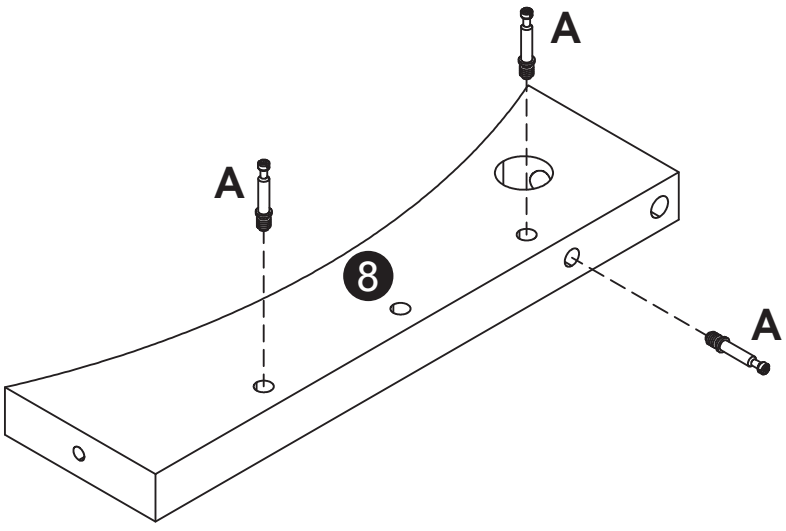


2

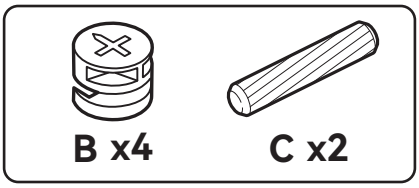


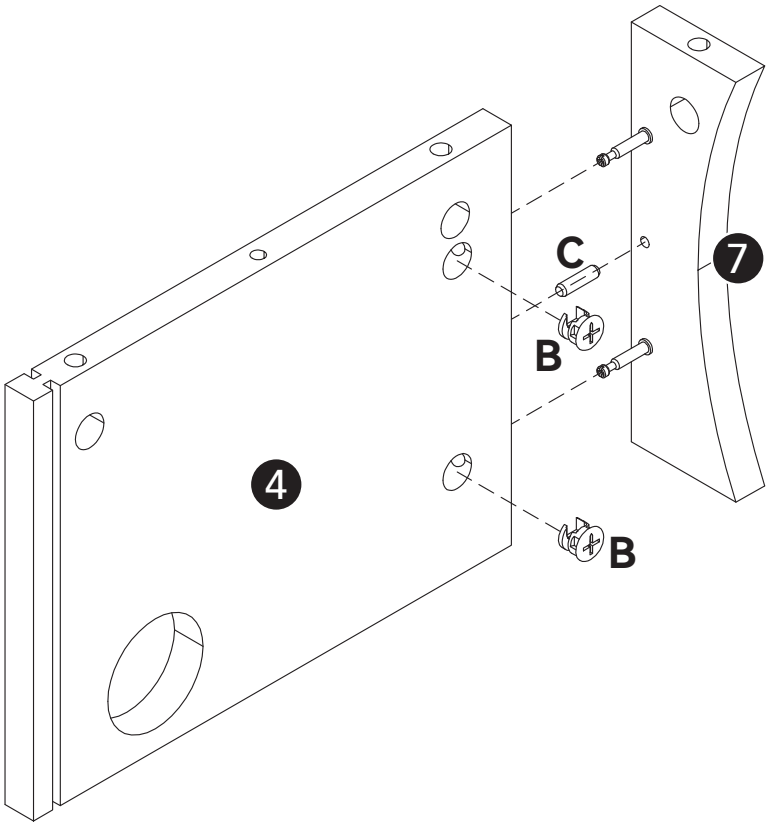

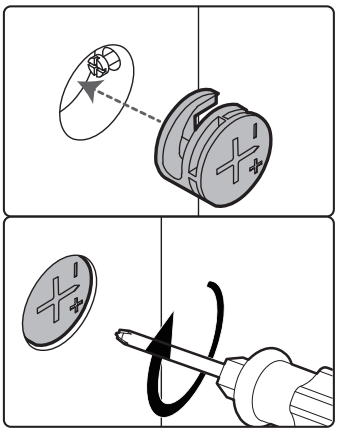


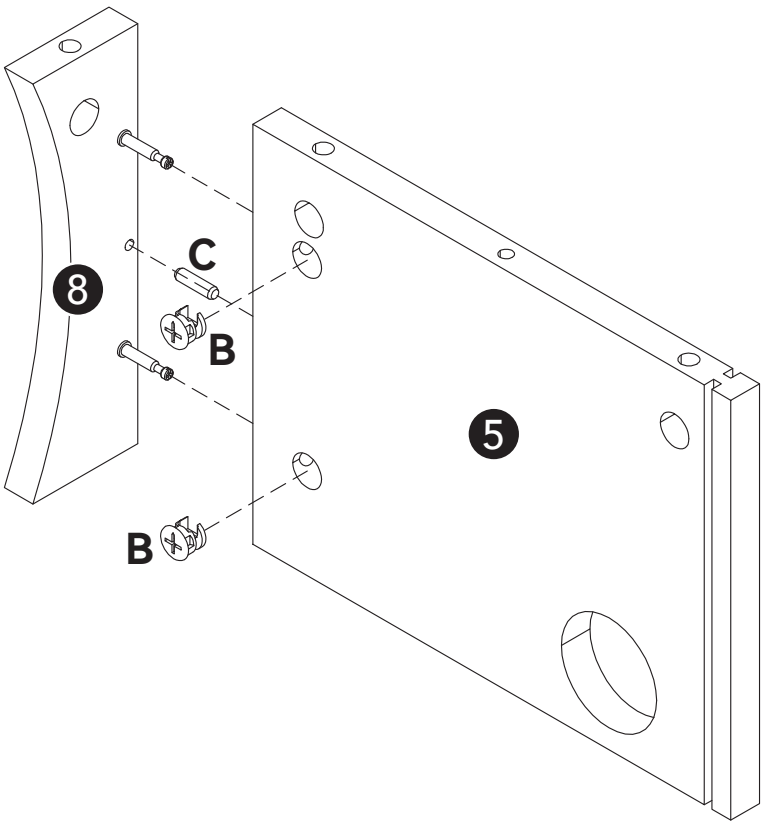



3

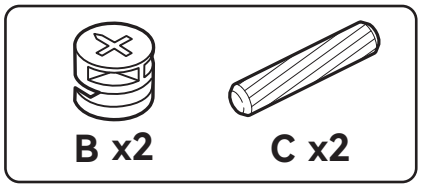


4

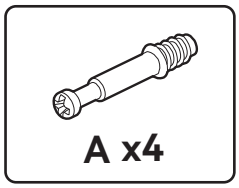


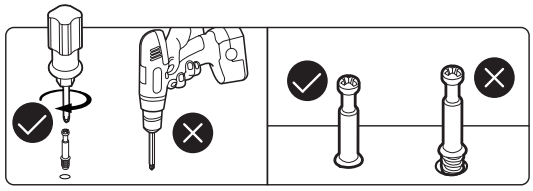


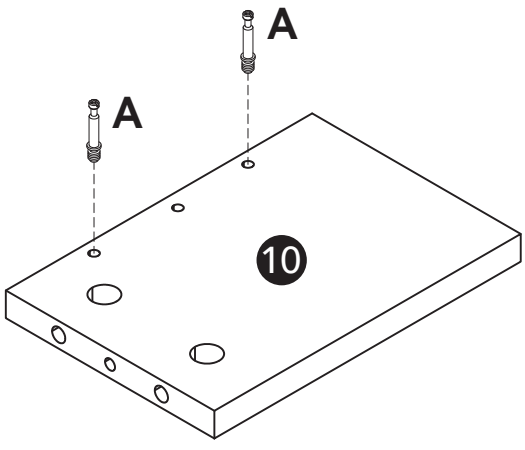


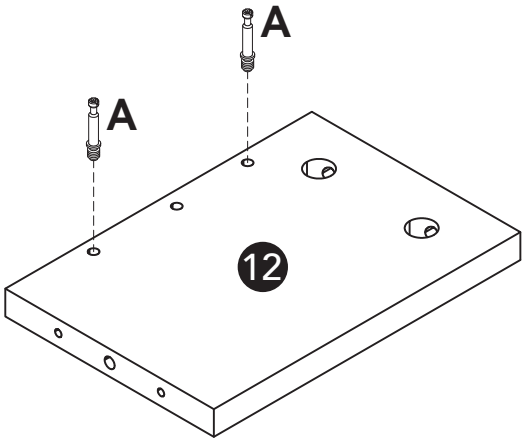


5

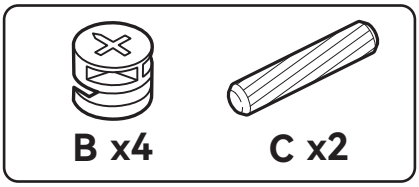


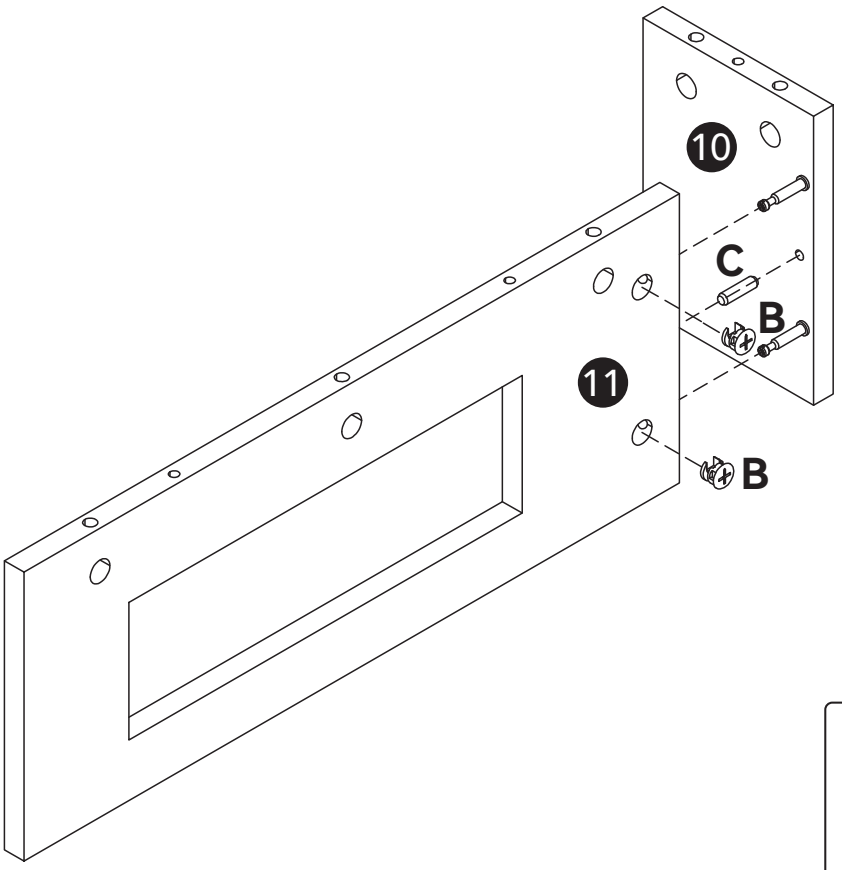

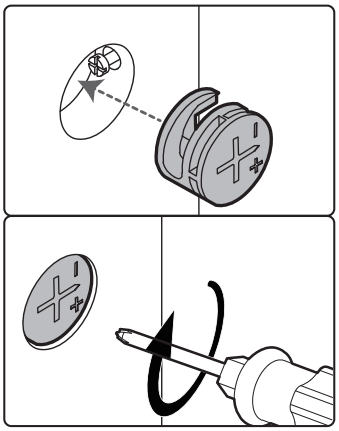


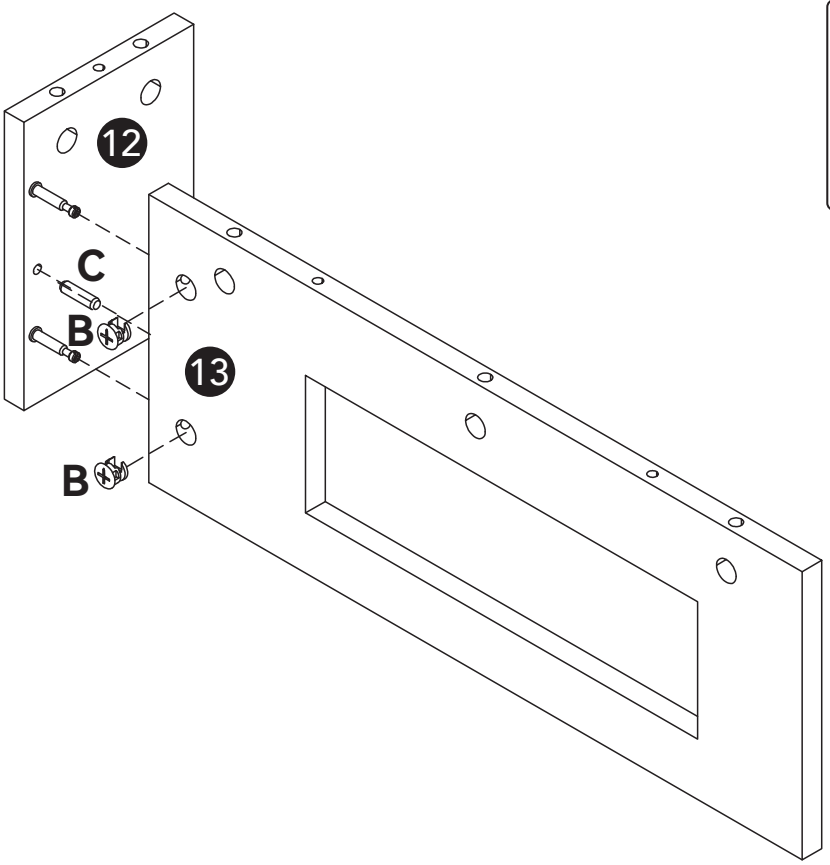


6





A x22

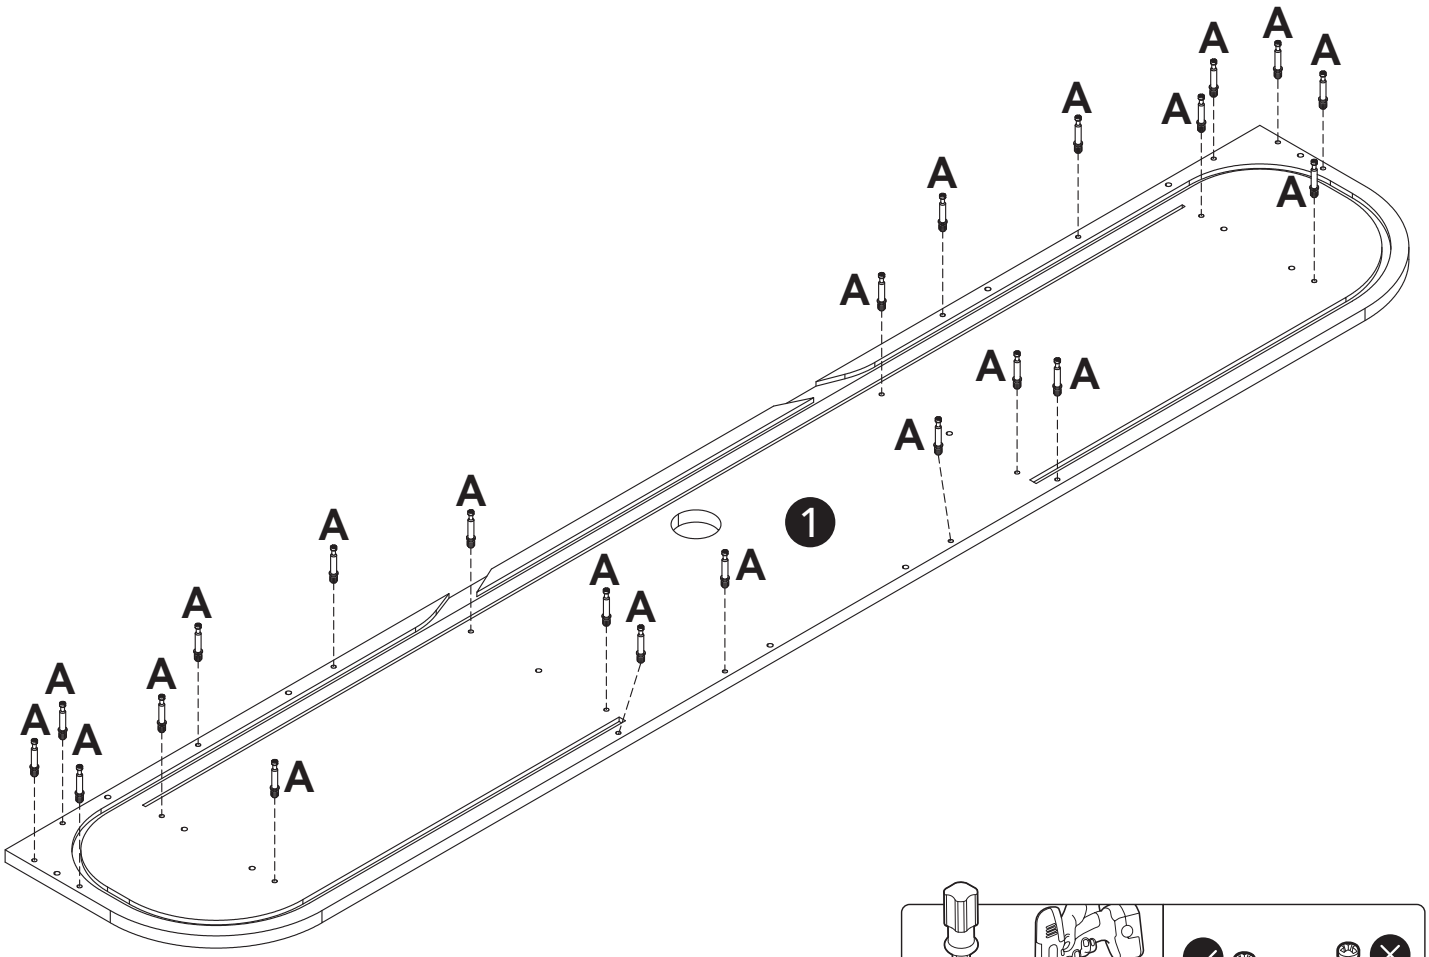


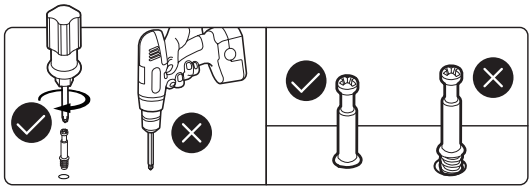


7

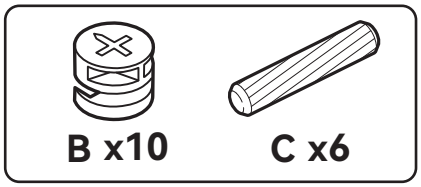


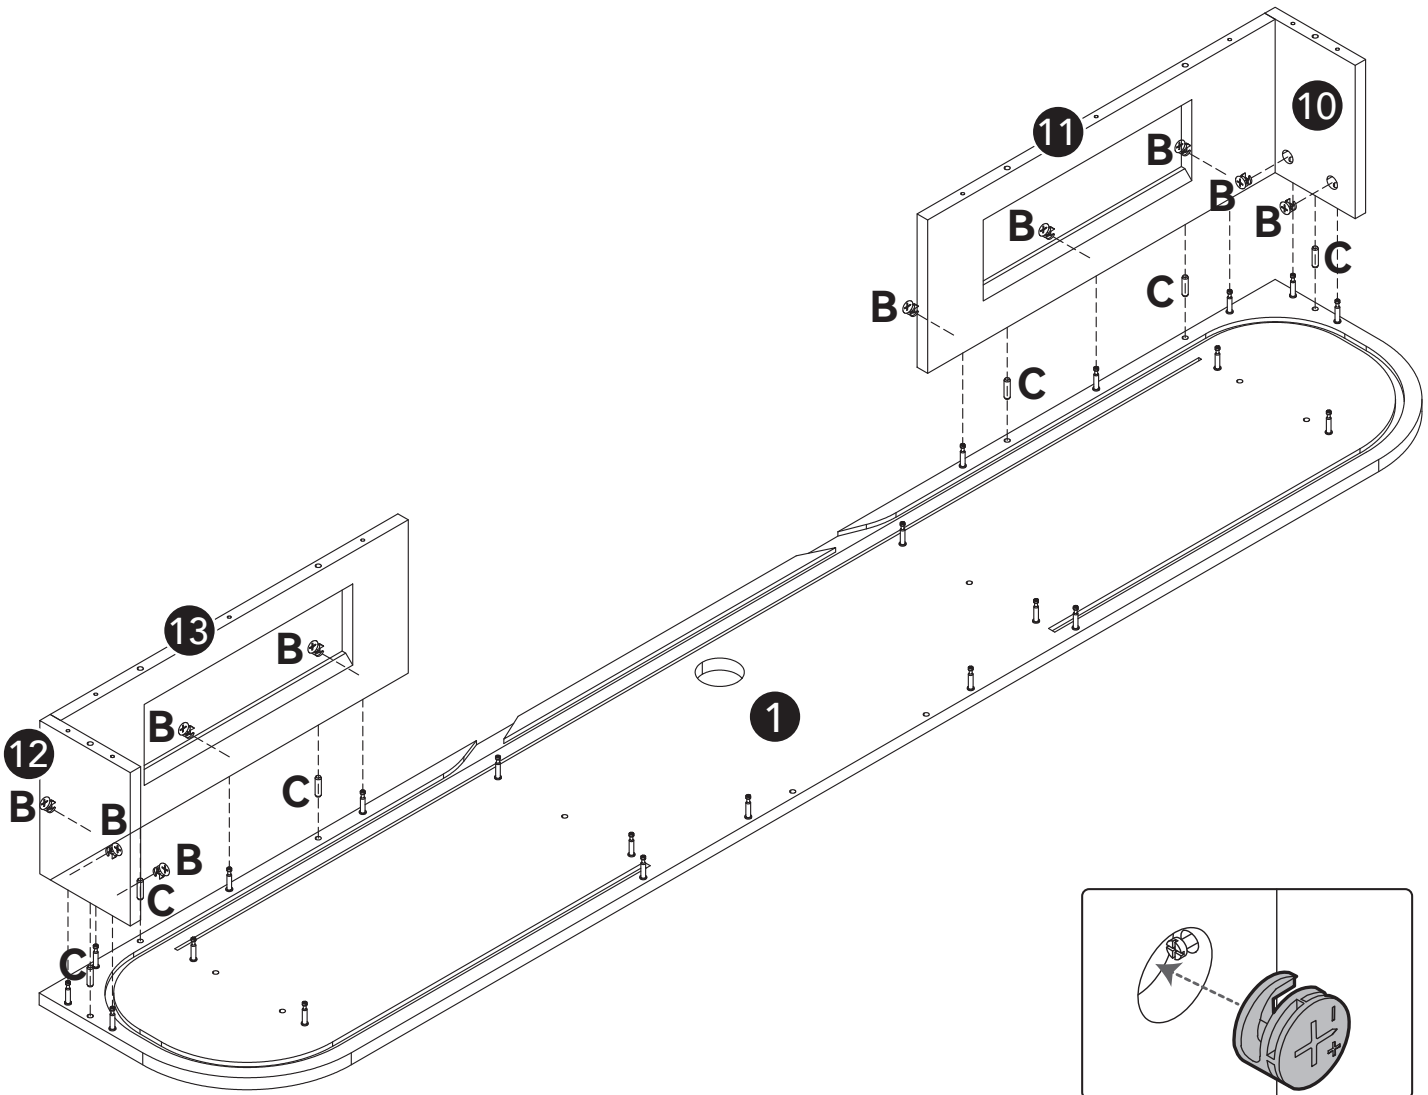


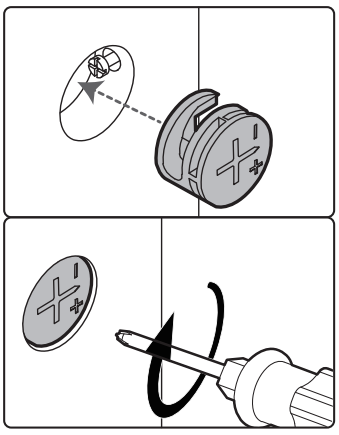


8

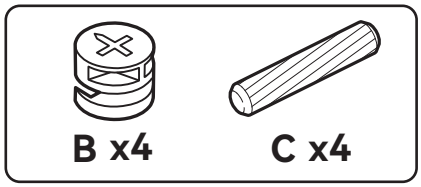

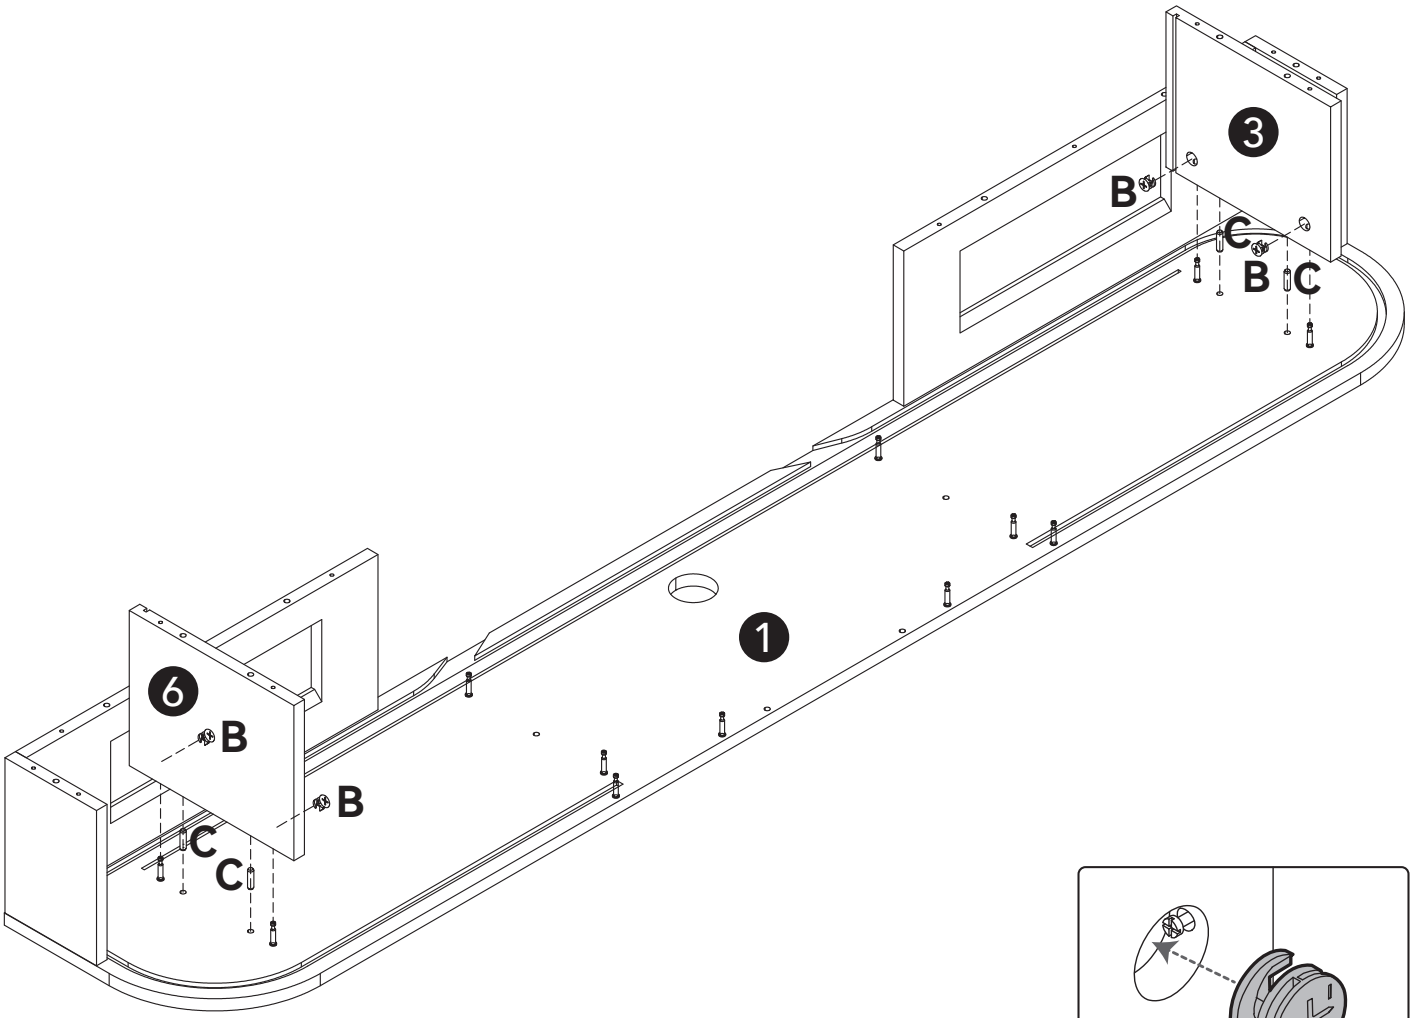


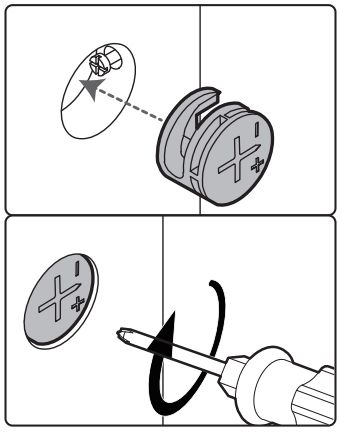

9

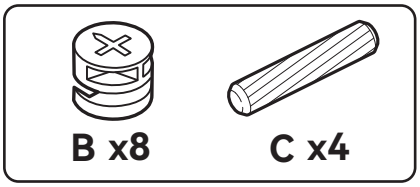



10

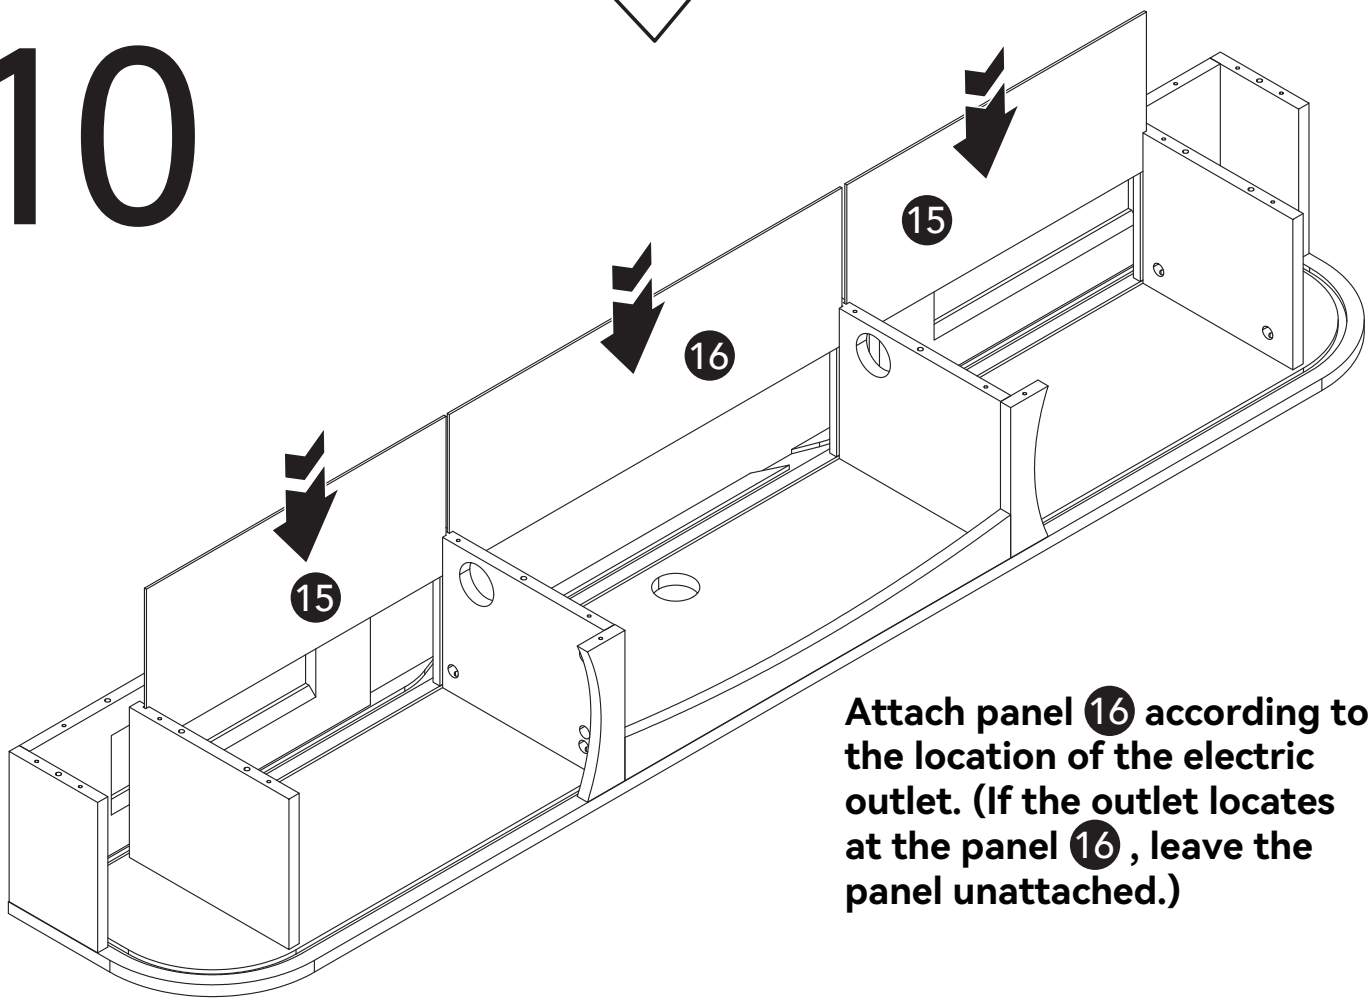


Attach panel 16 according to the location of the electric outlet. (If the outlet locates at the panel 16 , leave the panel unattached.)


11

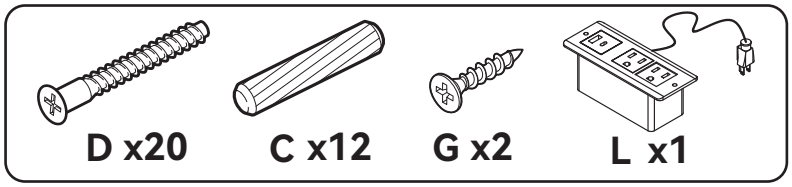

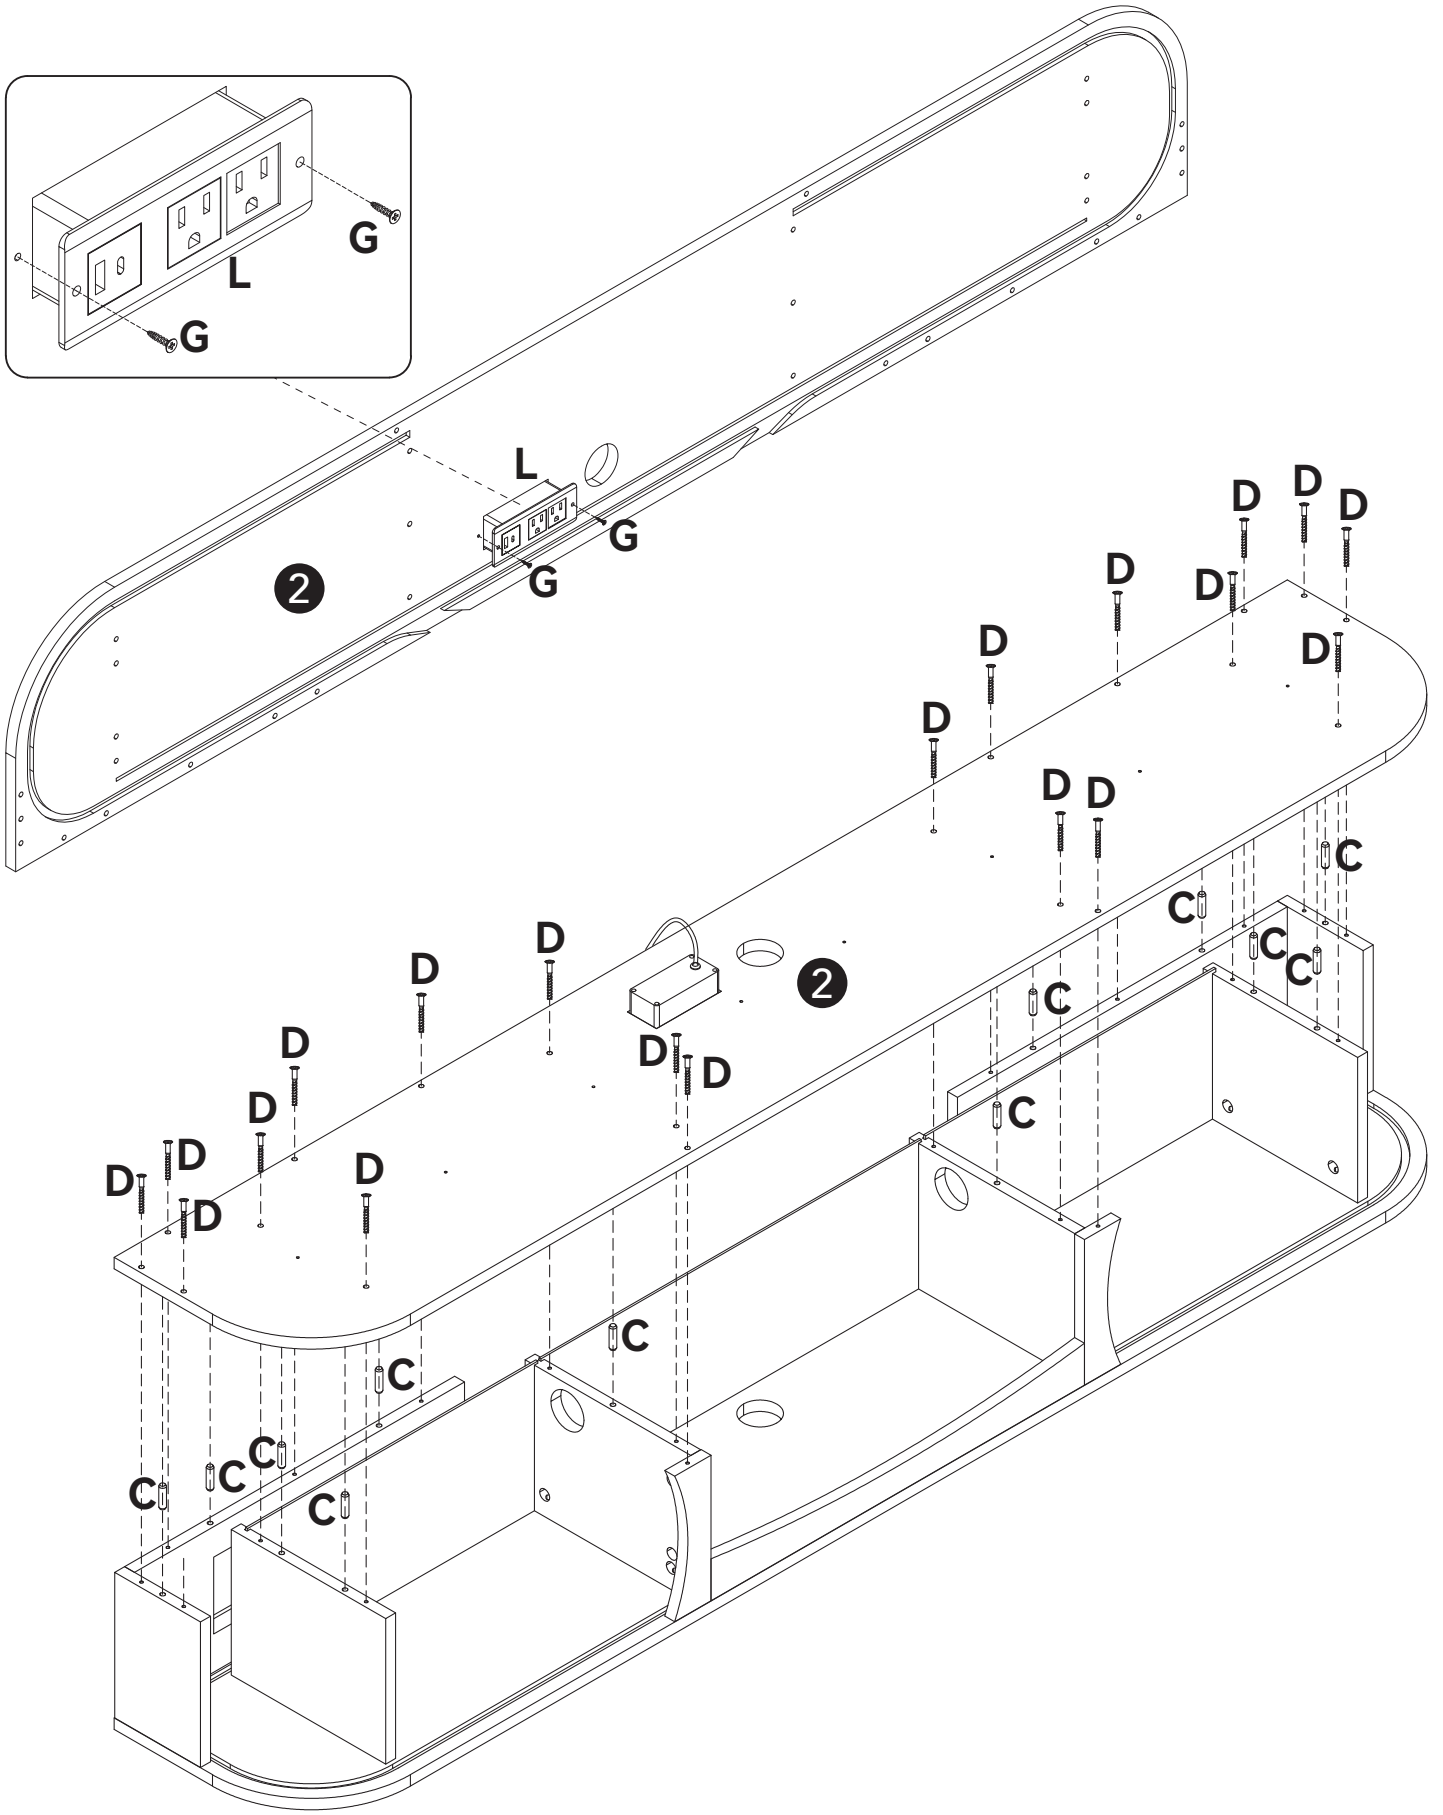


12

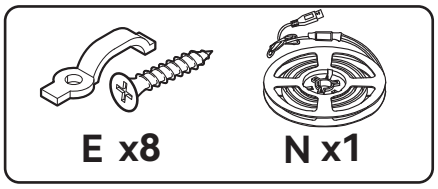


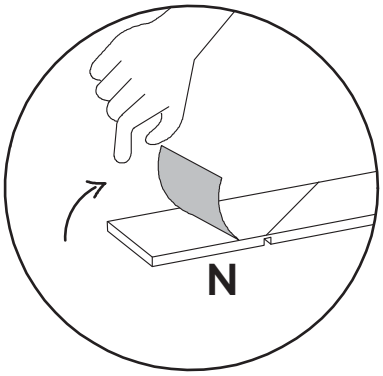


Peel off the backing before attaching the strip light.

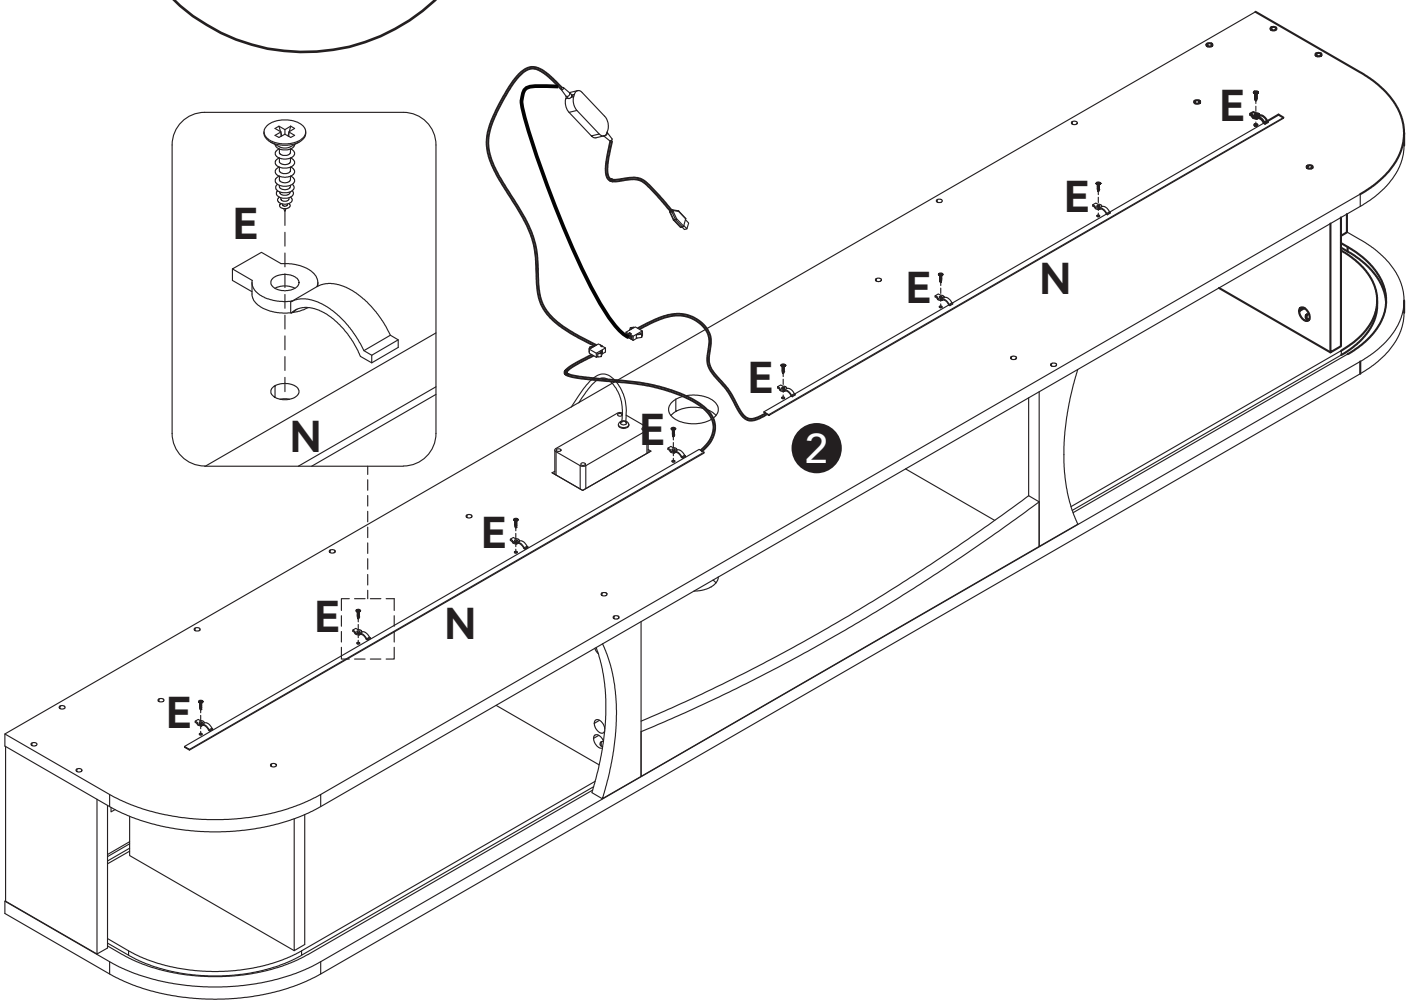


13

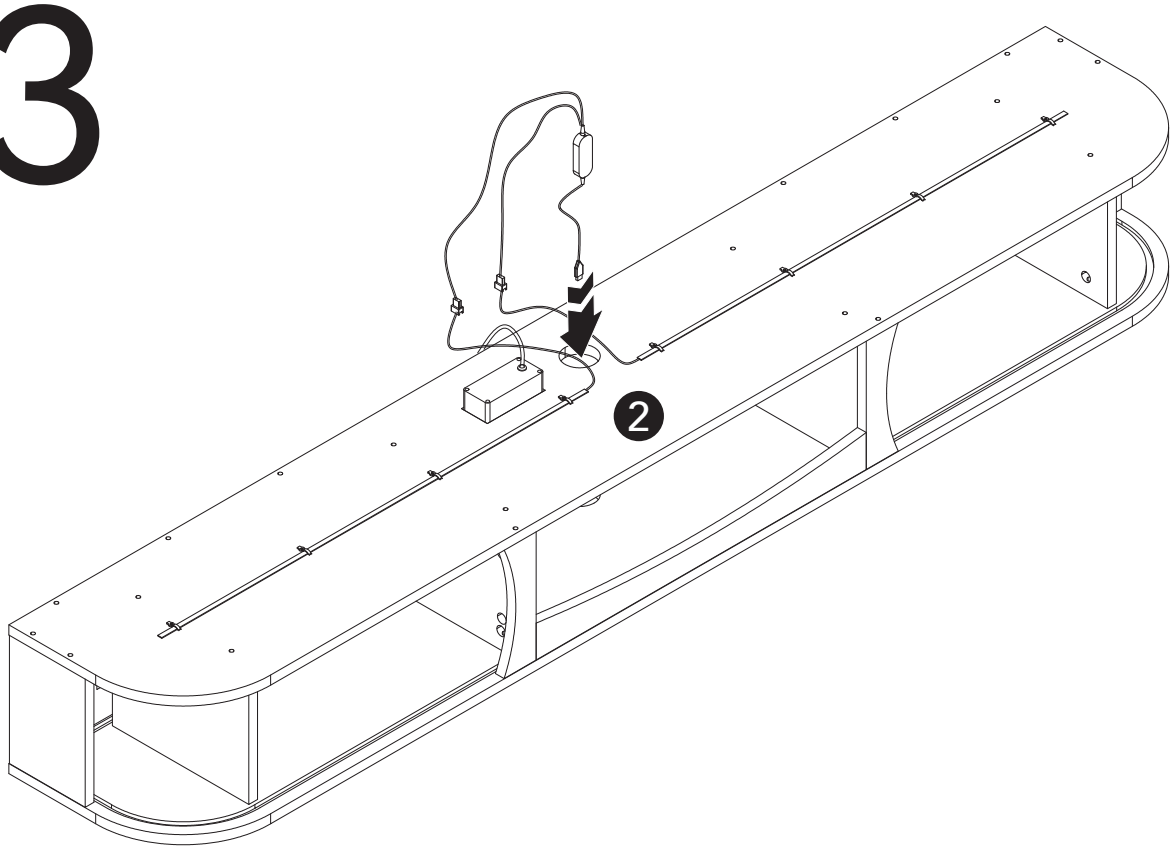

14

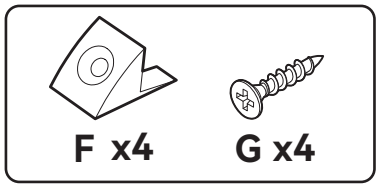


Attach panel 16 according to the location of the electric outlet. (If the outlet locates at the panel 16 , leave the panel unattached.) If the panel 16 is not attached, there is no need to attach F and G.

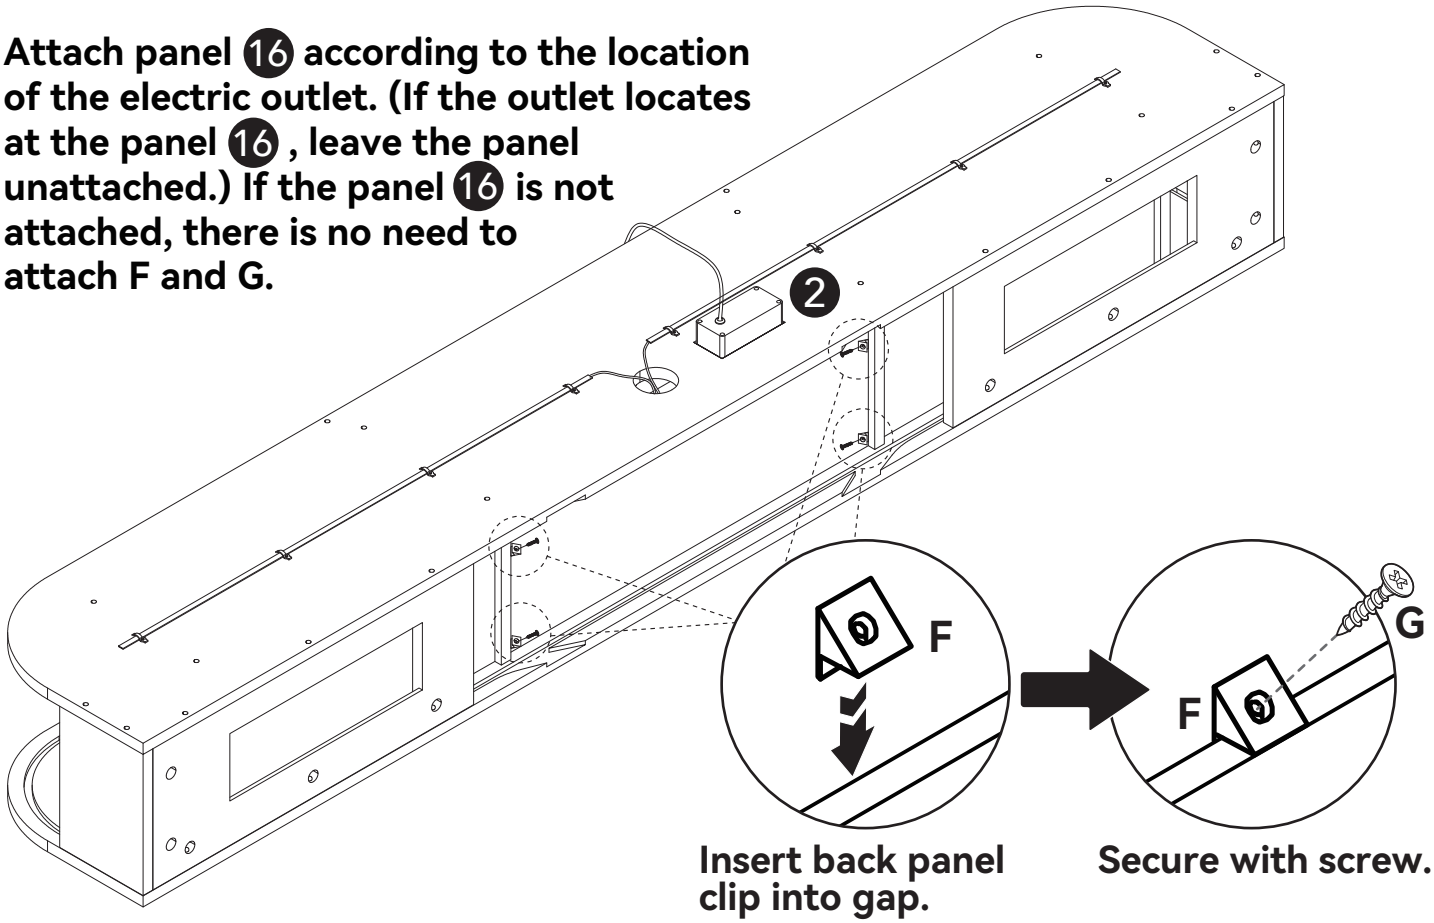

Insert back panel clip into gap.


Secure with screw.

15

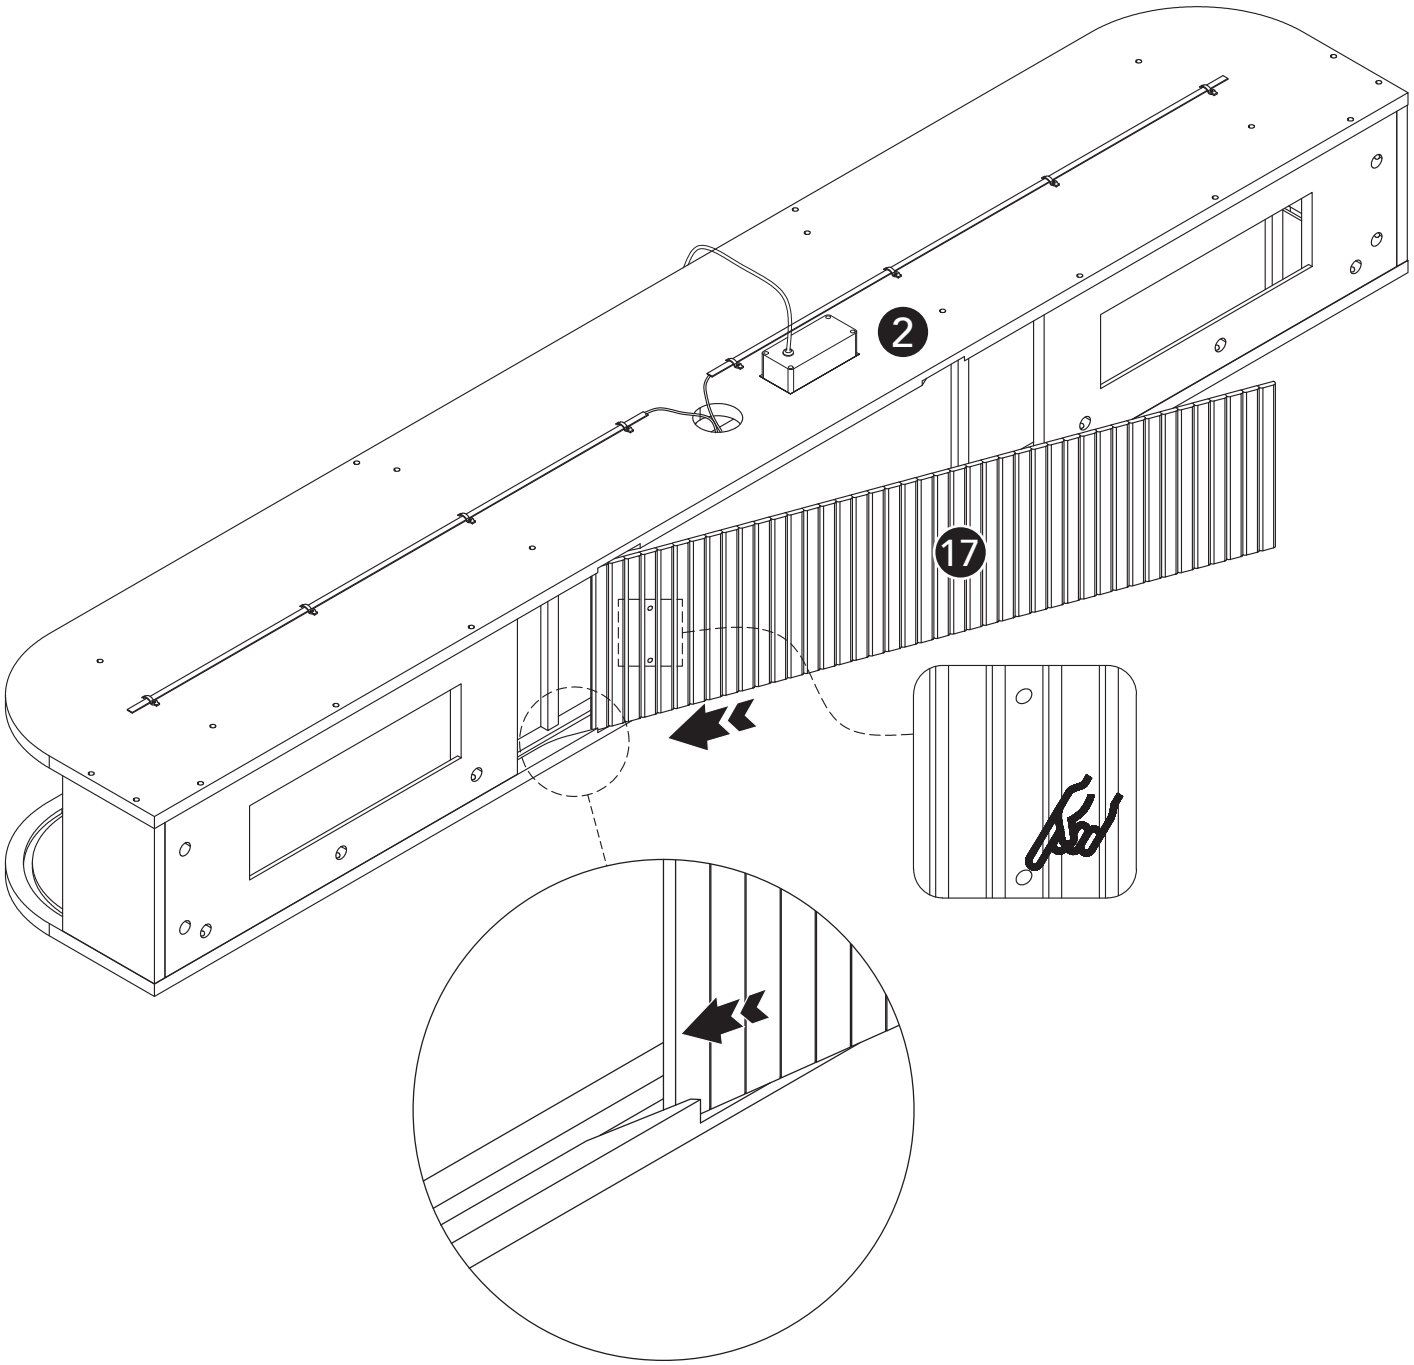


Align and install the rolling door into slots.


16

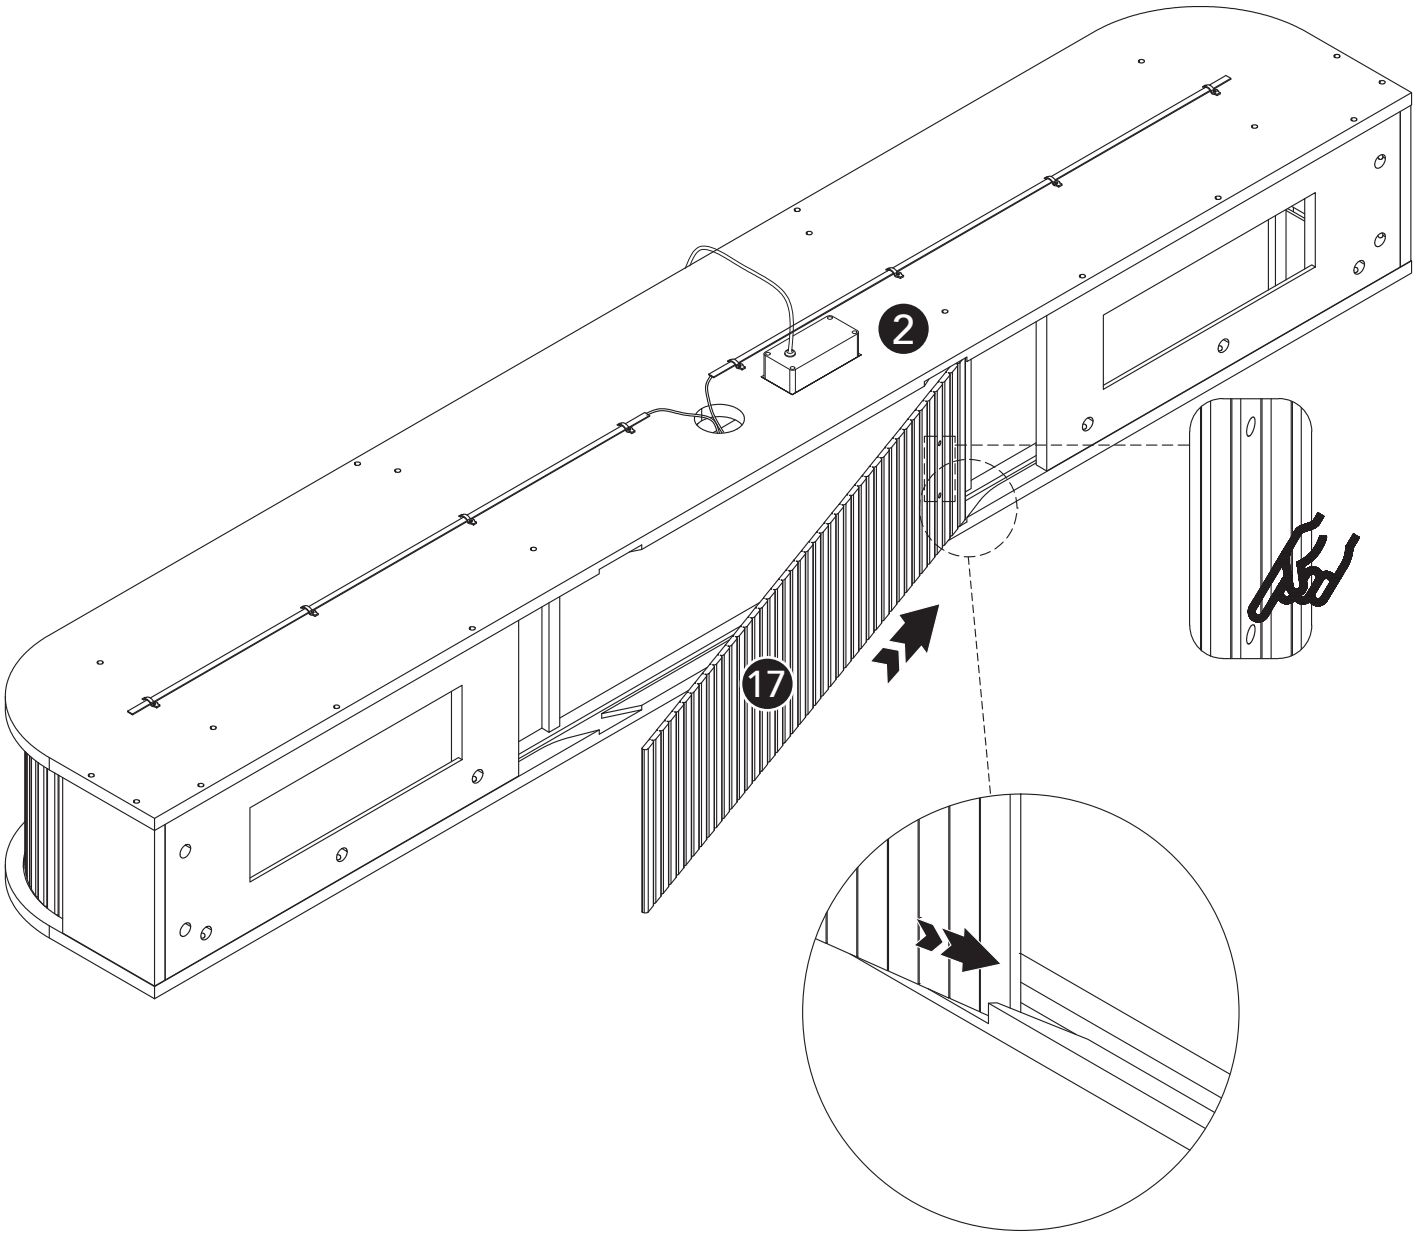


Align and install the rolling door into slots.

17

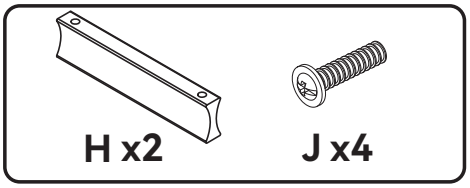

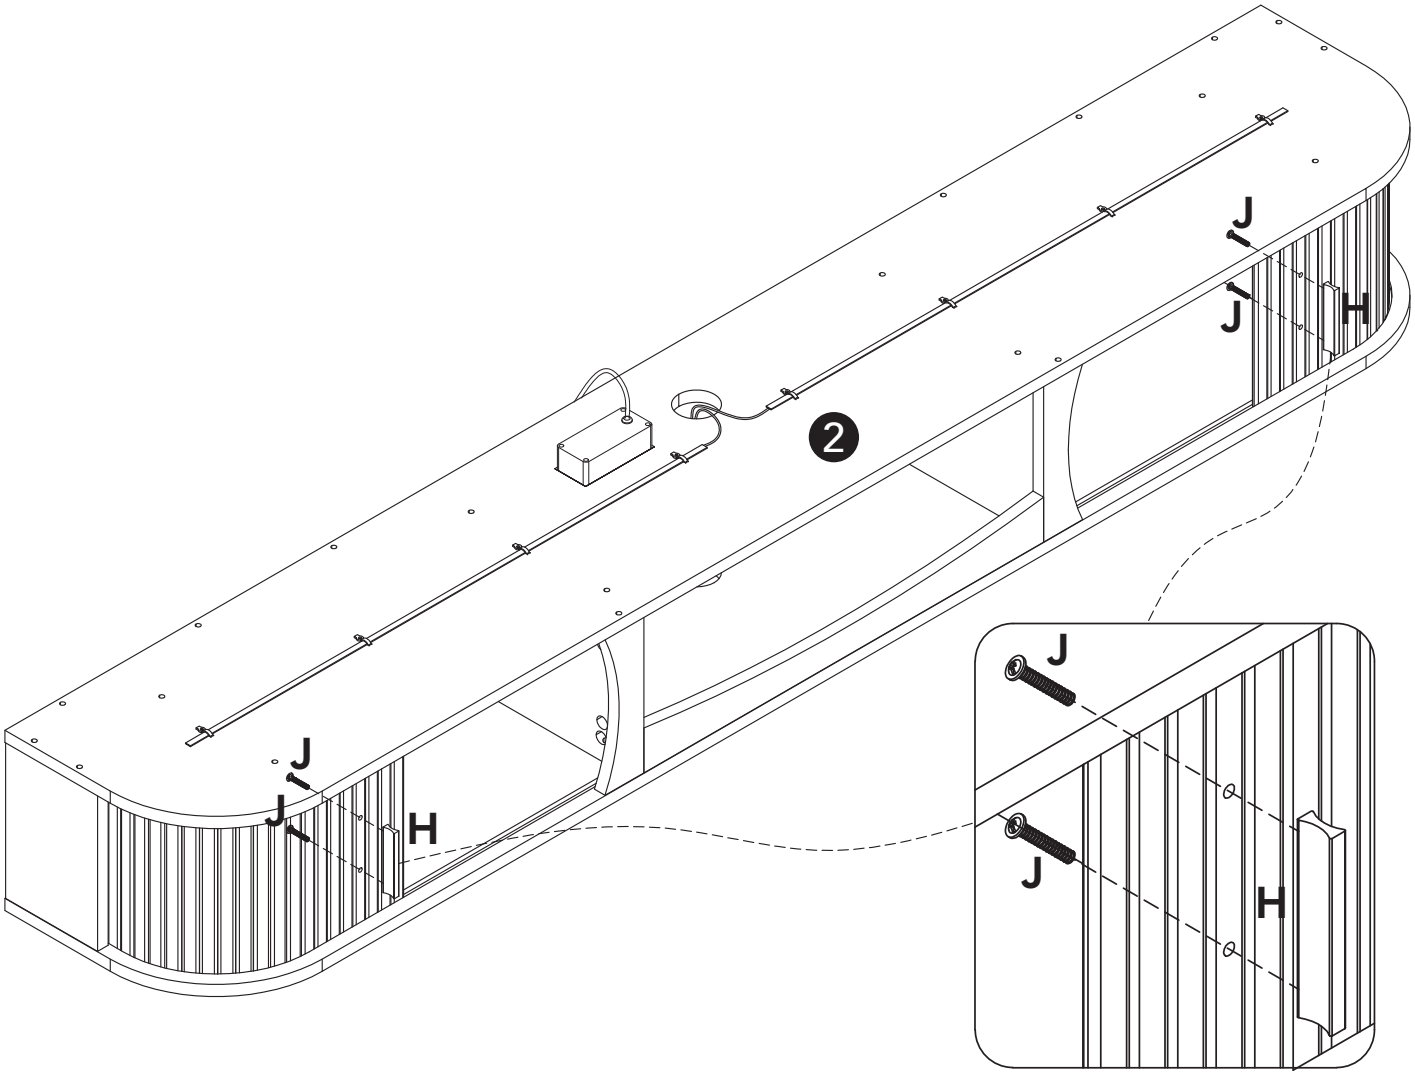

18

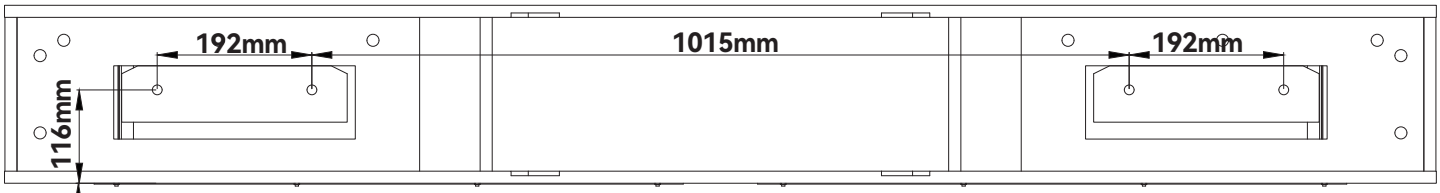


A

The height of the cabinet from the ground can be selected according to your needs.


A=200~250mm


Notes Before Installation


- **Mounting Height:**
  The bottom of the floating TV stand should be 20–25 cm above the floor. If your pre-installed power outlets are higher than 25 cm, position the TV stand to avoid blocking the outlets and mount it higher accordingly. The center of the TV screen is ideally 107 cm (42 in) above the floor. Adjust the mounting height of the TV stand based on this height.
- **Suitable Wall Types:**
  Concrete wall, solid brick wall, solid wood wall.
- **Unsuitable Wall Types:**
  Hollow drywall, non-load-bearing partition wall, unreinforced metal stud wall, aged plaster and lath wall.

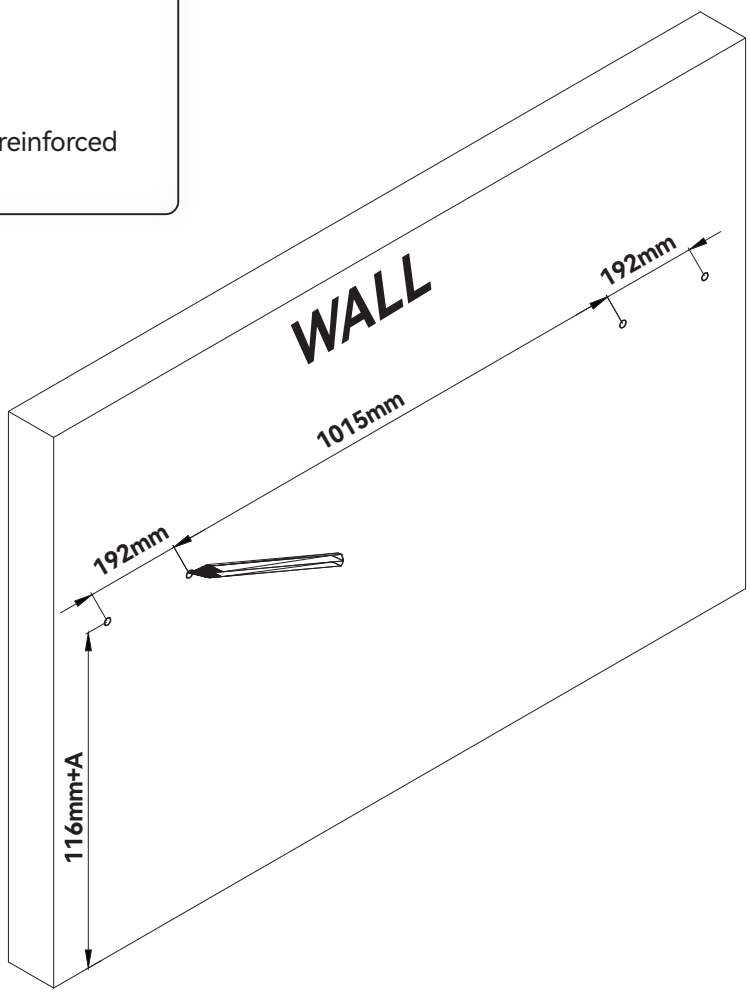


19

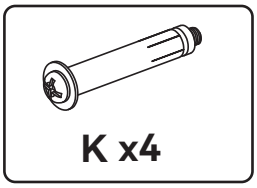

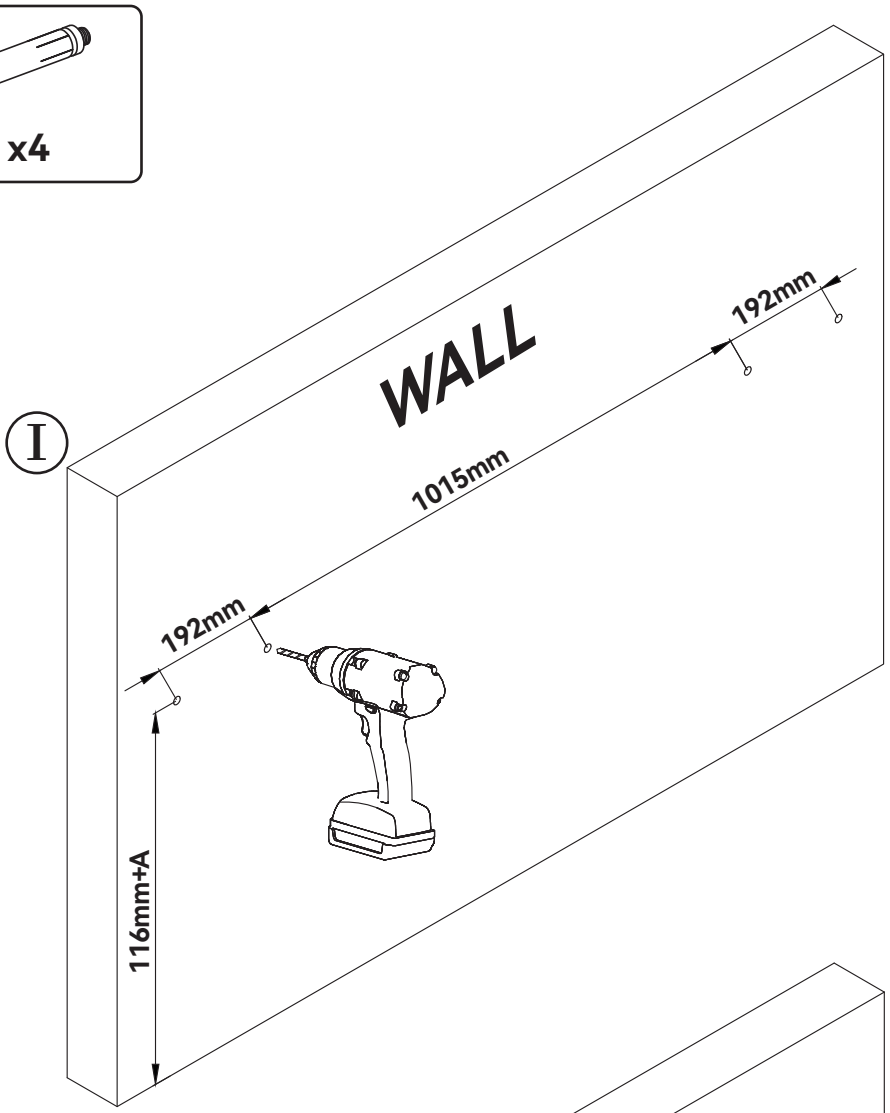

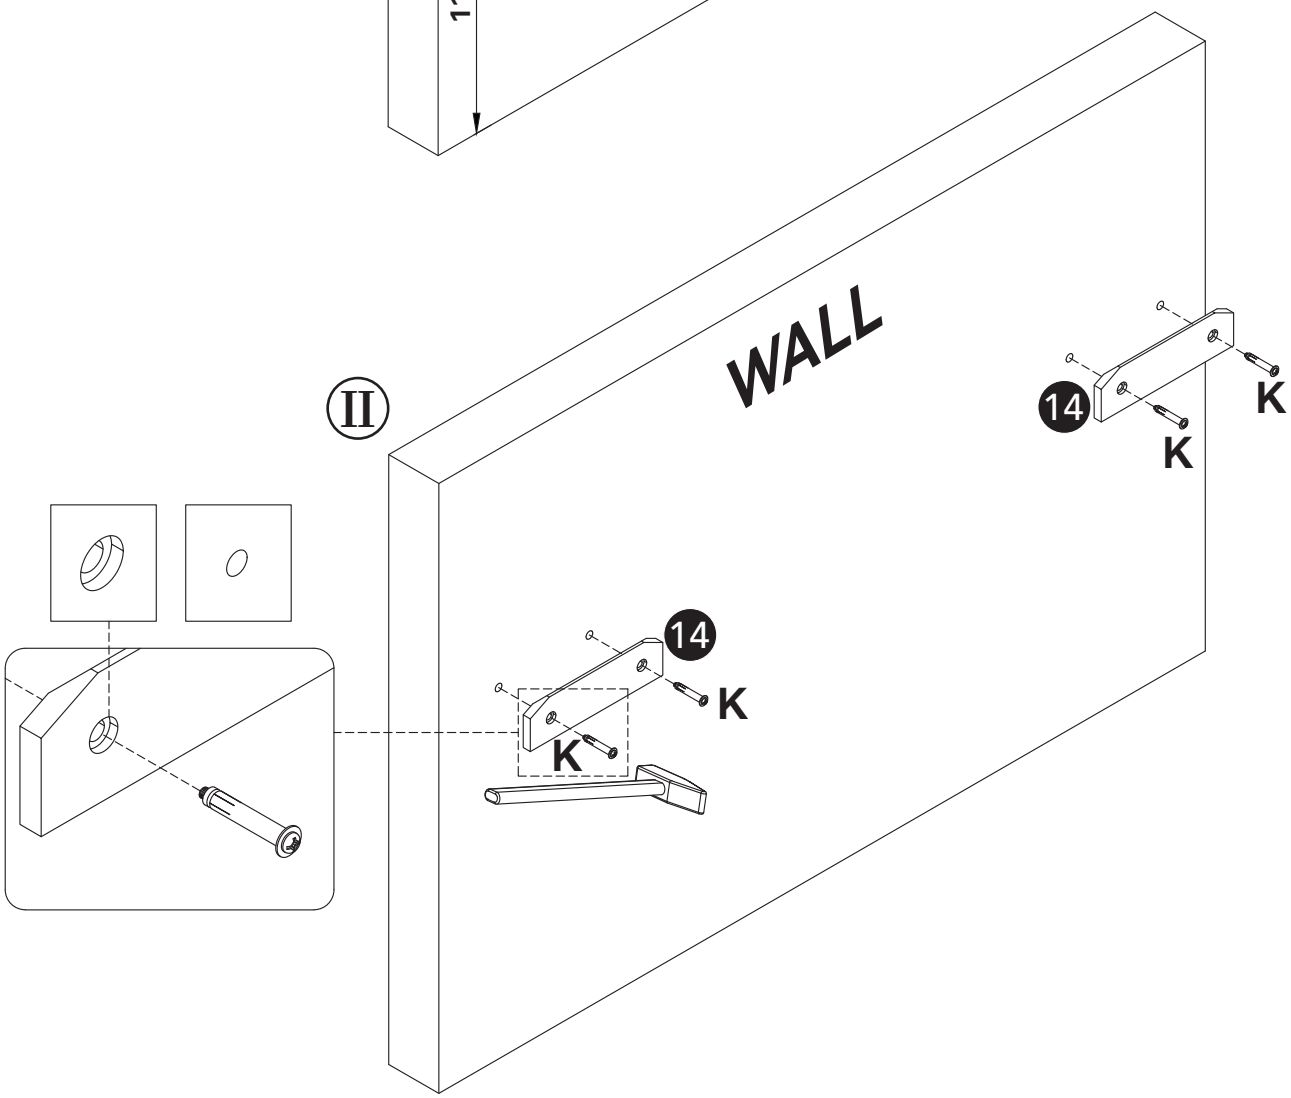

20

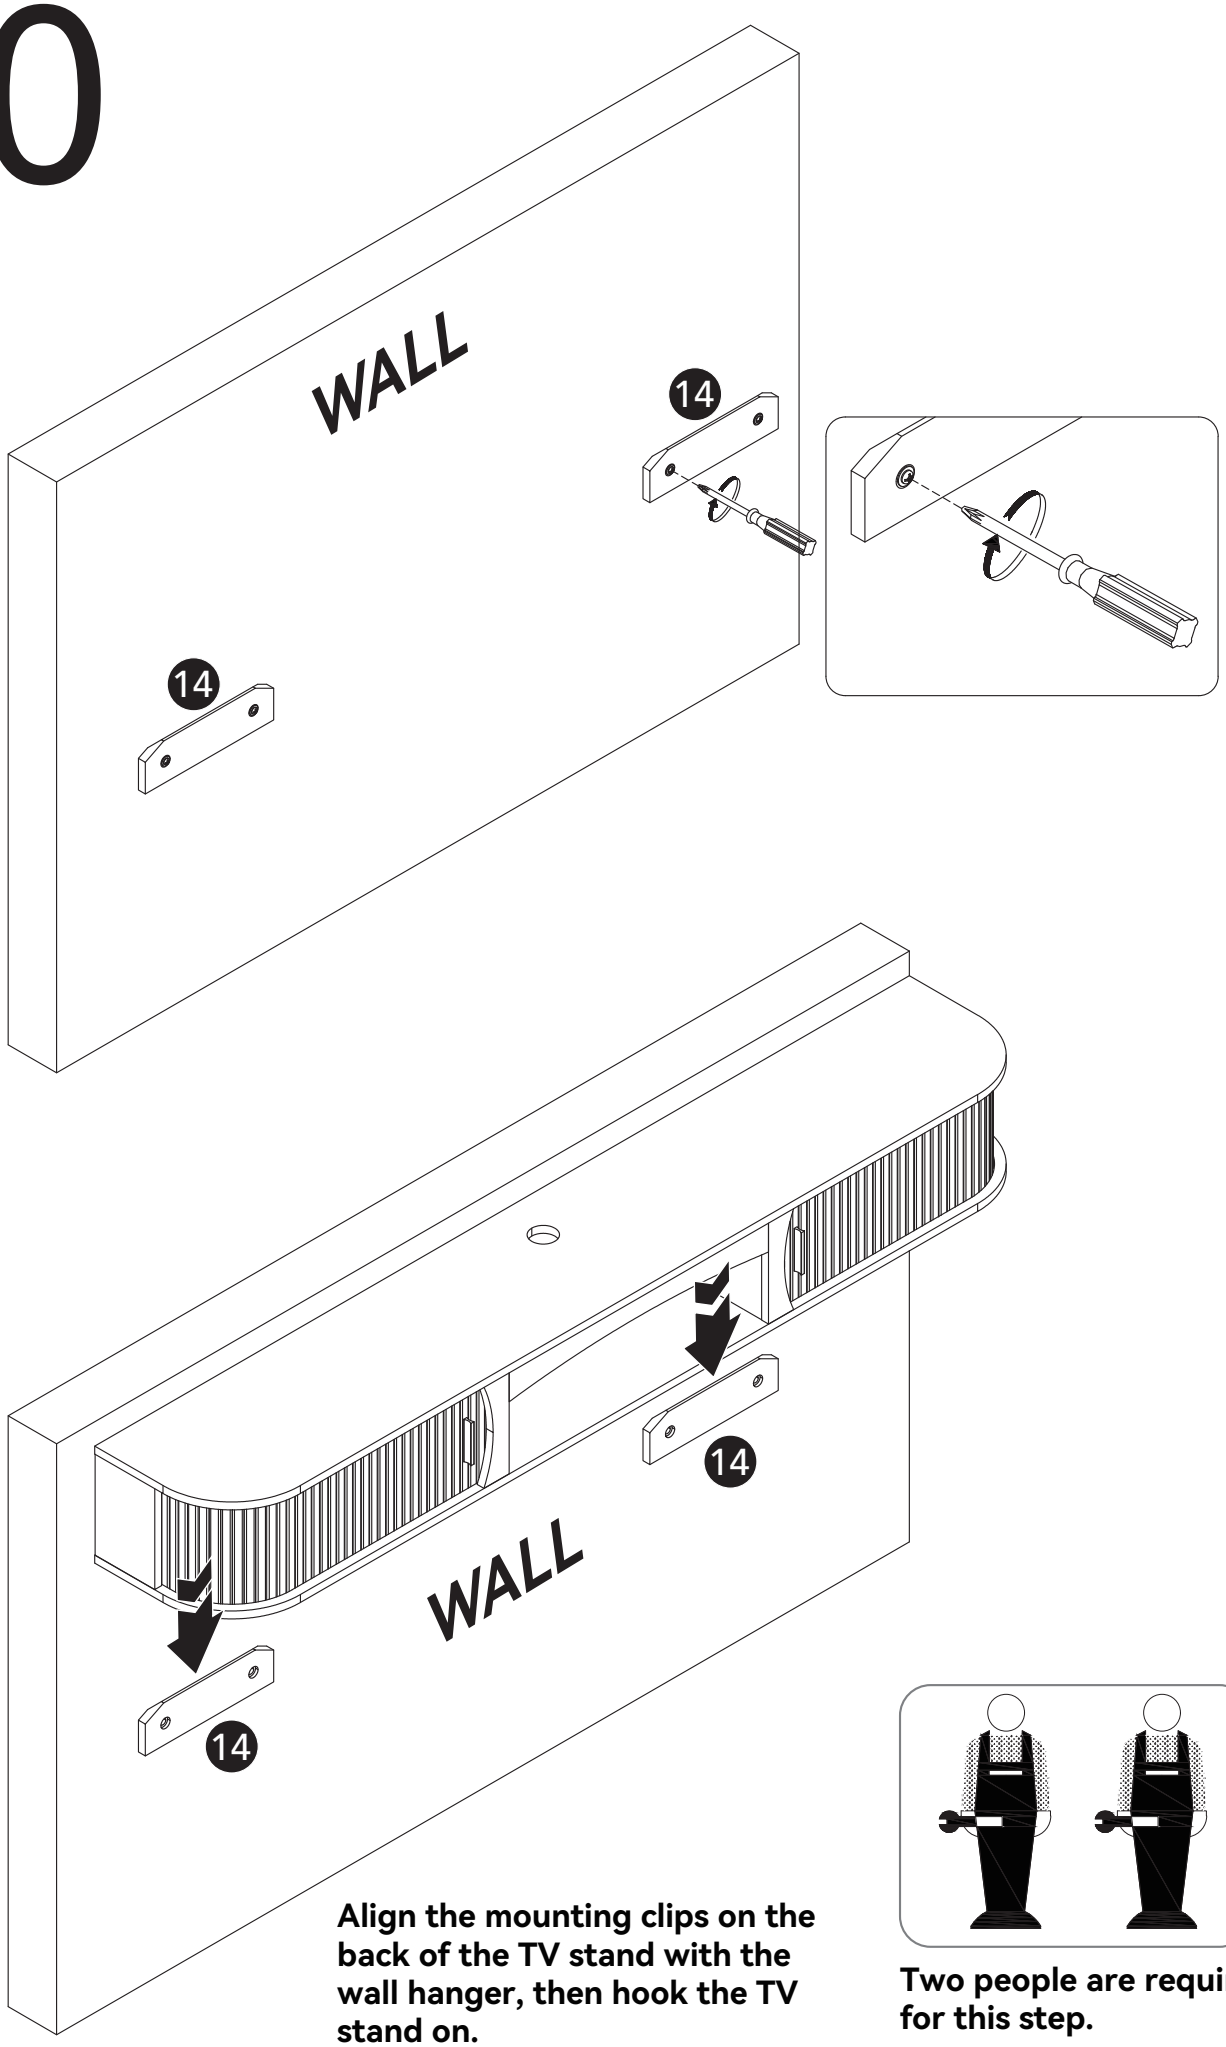

Align the mounting clips on the back of the TV stand with the wall hanger, then hook the TV stand on.

Two people are required for this step.

21

