
Entertainment Center

Assembly Instruction - Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

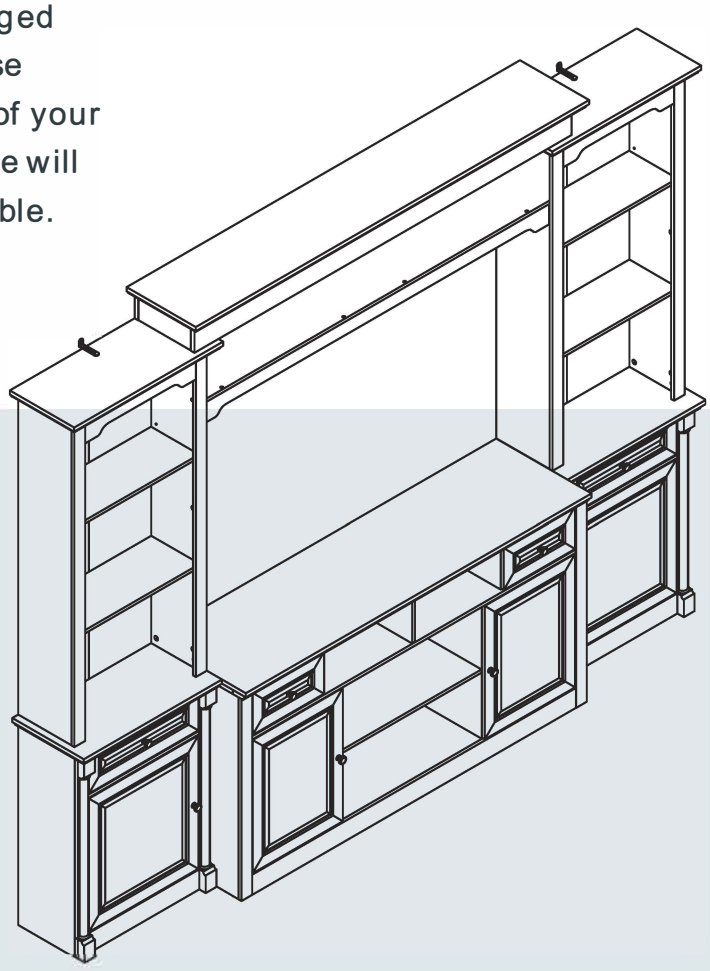

Arrive in 2 separate boxes and may not be part of the same shipment. Please install the product after receiving all the packages.

Dimensions
Width - 102.8 inch
Depth - 15.8 inch
Height - 83 inch

EN

CONTACT US

- In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Before Assembly

Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps. Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice

Important :

Please read these instructions fully before starting assembly.

. Check you have all the components and tools listed on the following pages.

. Remove all fittings from the plastic bags and separate them into their groups.

. Keep children and animals away from the work area, small parts could choke if swallowed.

. Make sure you have enough space to layout the parts before starting.

. During assembly do not stand or put weight on the product, this could cause damage.

. Assemble the item as close to its final position (in the same room) as possible.

. Assemble on a soft level surface to avoid damaging the unit or your floor.

. Parts of the assembly will be easier with 2 people.



. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

. Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
. From time to time check that there are no loose screws on this unit.
. This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
. Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

. Use the anti tip strap or wall fixing method provided (if applicable).
. Do not allow children to climb or hang on the furniture.
. Do not open more than one drawer at a time.
. Do not place heavy items in the top drawers.
. Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
. Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the "Parts List" in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., "Missing 5 pieces of M6×30mm screws."

Contact Us:

By Email:

Send an email with the subject line "Missing Parts Issue." Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details with the subject line "Product, Damage Issue."

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team.
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Helpful Tips

To process your issue efficiently, please prepare the following information:













. Order details (order number, purchase platform, purchase date).

. Clear photos or videos.













. We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support!
We hope you enjoy using our product!













BOARD IDENTIFICATION

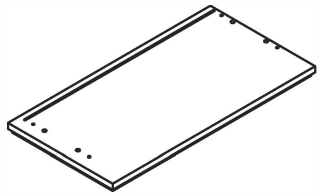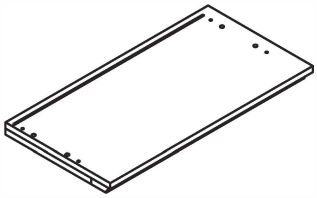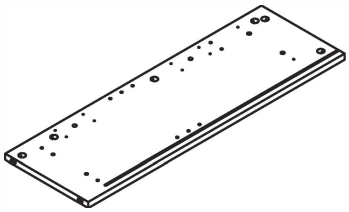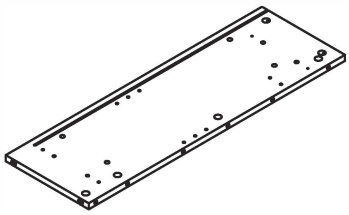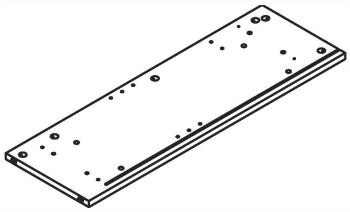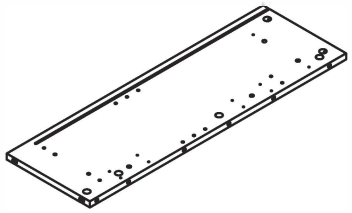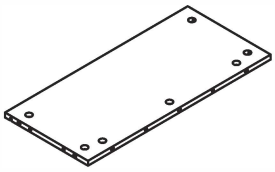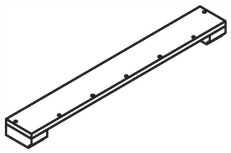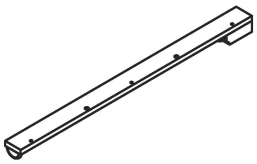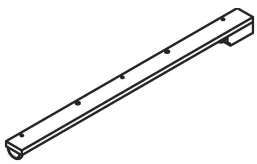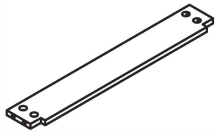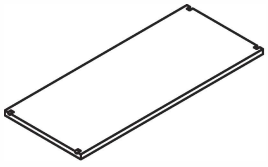BOX 1		
		
① (580X300X30mm) X1	③ (580X300X30mm) X1	④ (735X238X15mm) X1
		
⑤ (735X238X15mm) X1	⑧ (735X238X15mm) X1	⑨ (735X238X15mm) X1
		
⑫ (524X238X12mm) X2	⑬ (555X73X39mm) X2	⑭ (662X45X39mm) X2
		
⑮ (662X45X39mm) X2	㉒ (524X80X12mm) X2	㉖ (522X218X12mm) X2








BOARD IDENTIFICATION

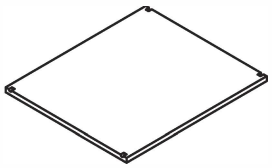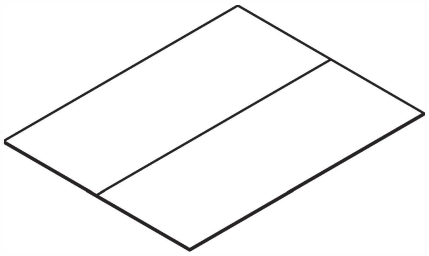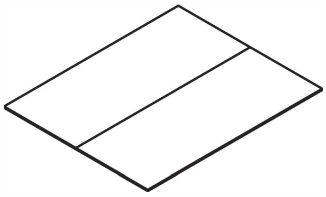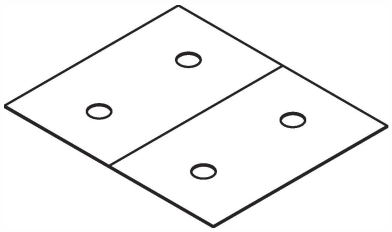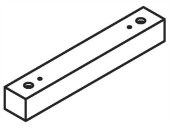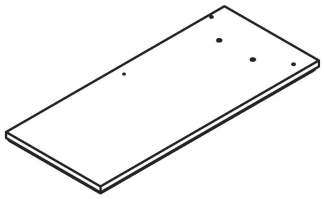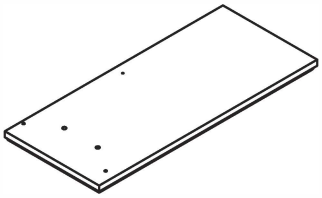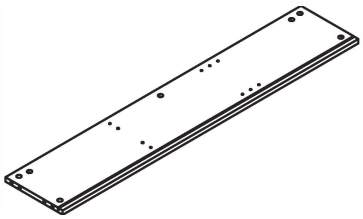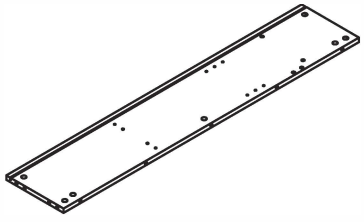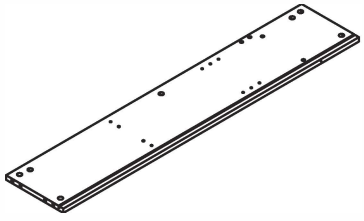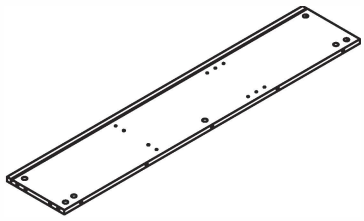BOX 1		
		
㉗ (401X346X12mm) X1	㉙ (672X534X3mm) X2	㉚ (499X411.5X3mm) X2
		
㉛ (499X599X3mm) X1	㉝ (198X30X27mm) X4	㉟ (100X60X27mm) X4
		
㊲ (625X270X40mm) X1	㊴ (625X270X40mm) X1	㊵ (1155X224X15mm) X1
		
㊶ (1155X224X15mm) X1	㊷ (1155X224X15mm) X1	㊸ (1155X224X15mm) X1






BOARD IDENTIFICATION

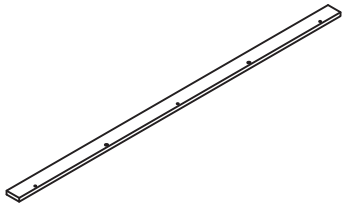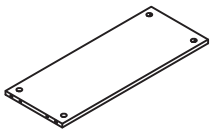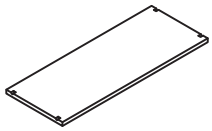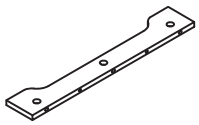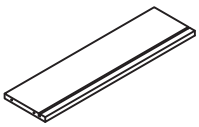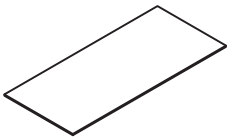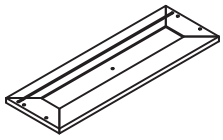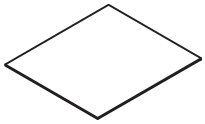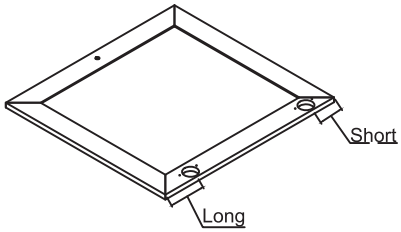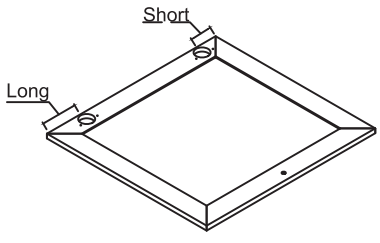BOX 1		
		
㊹ (1155X45X12mm) X4	㊺ (524X204X12mm) X2	㊻ (522X202X12mm) X2
		
㊼ (465X75X12mm) X2	㊺ (200X117X12mm) X2	㊻ (200X117X12mm) X2
		
㊼ (430X117X12mm) X2	㊽ (440X197X3mm) X2	㊾ (459X153X15mm) X2
		
㊸ (266X297X3mm) X2	㊻ (485X459X15mm) X1	㊼ (485X459X15mm) X1













HARDWARE PART LIST

BOX 1		
 ø15*9.5	 ø6.5*35	 ø8*30
Ⓐ X178+5	Ⓑ X178+5	Ⓒ X74+3
 ø6*30	 ø3.5*12	 ø4*35
Ⓓ X70+3	Ⓔ X72+3	Ⓕ X82+3
 ø35	 ø3*14	 ø30(ø15)*25
Ⓖ X8	Ⓗ X16+1	Ⓘ X8
 M4*12	 M6*20	 ø8*20
Ⓙ X16+1	Ⓚ X8+1	Ⓛ X8+1













HARDWARE PART LIST

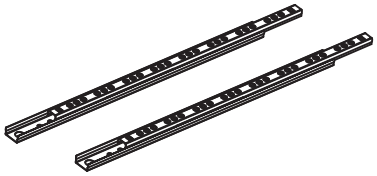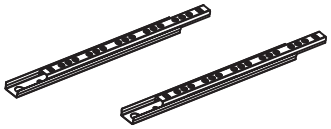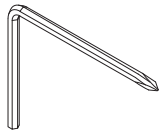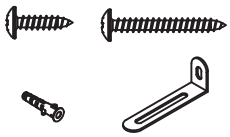BOX 1		
 L=300	 L=200	 M4*100(60)
Ⓜ X2set	Ⓝ X2set	Ⓞ X1
 ø3*14	 ø5*16	 45*12*1
Ⓟ X58+2 set	Ⓠ X24+2	Ⓡ X2+1
		
Ⓢ X2set		











BOARD IDENTIFICATION

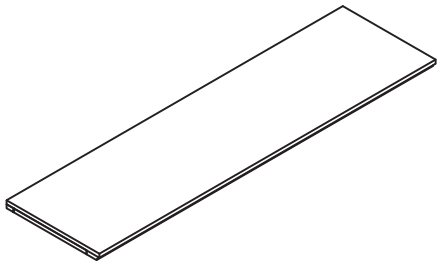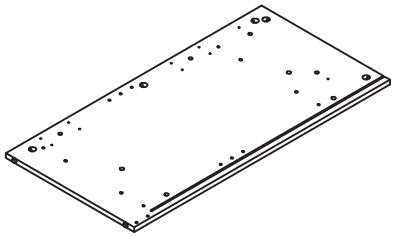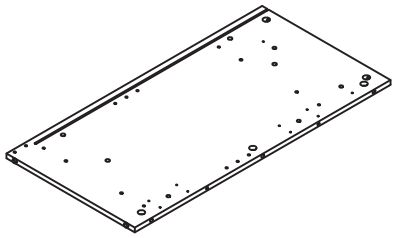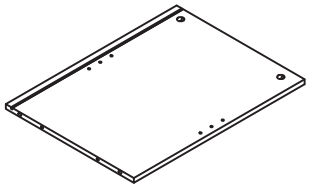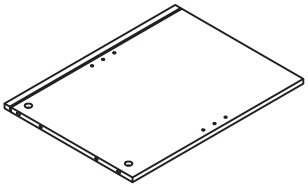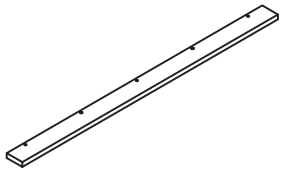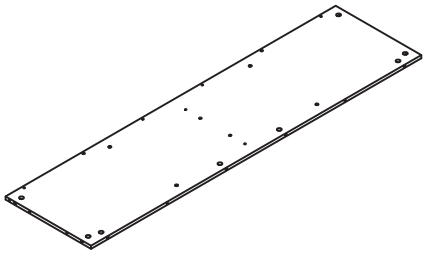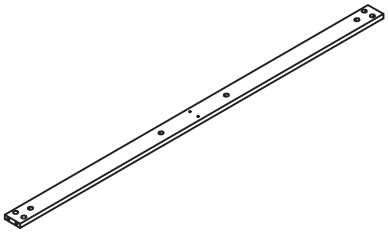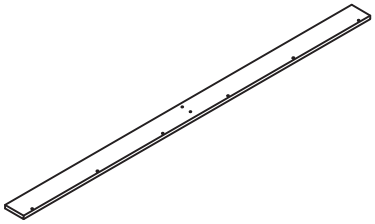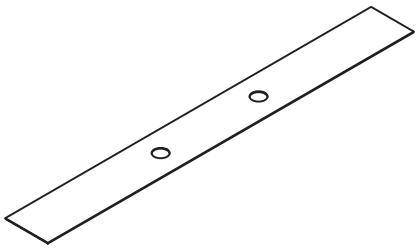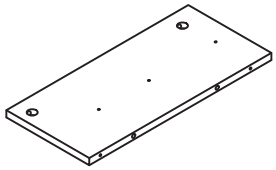BOX 2		
		
② (1450X400X30mm) X1	⑥ (735X369X12mm) X1	⑦ (735X369X12mm) X1
		
⑩ (491X368X12mm) X1	⑪ (491X368X12mm) X1	⑯ (735X45X12mm) X2
		
⑰ (1424X369X12mm) X1	⑱ (1424X60.5X15mm) X1	⑲ (1359X73X12mm) X1
		
⑳ (353X60.5X15mm) X1	㉑ (1434X167X3mm) X1	㉓ (159X349X12mm) X1


BOARD IDENTIFICATION

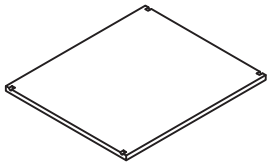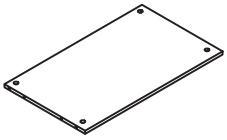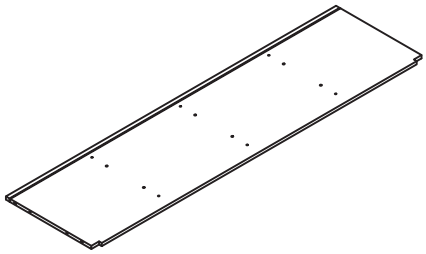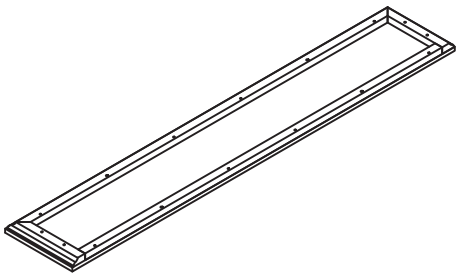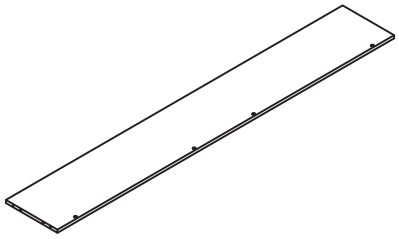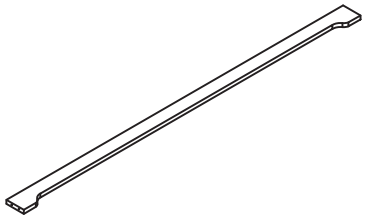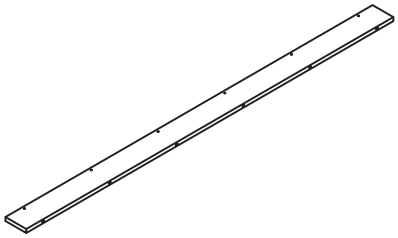BOX 2		
		
㉔ (159X349X12mm) X1	㉕ (159X360X12mm) X1	㉗ (401X346X12mm) X1
		
㉘ (593X348X12mm) X1	㉜ (1424X380.5X12mm) X1	㉞ (300X30X30mm) X2
		
㊱ (100X60X30mm) X4	㊳ (1650X290X40mm) X1	㊽ (1452X222X12mm) X1
		
㊾ (1452X75X15mm) X1	㊿ (1583X90X15mm) X1	㊿① (220X90X15mm) X2

BOARD IDENTIFICATION

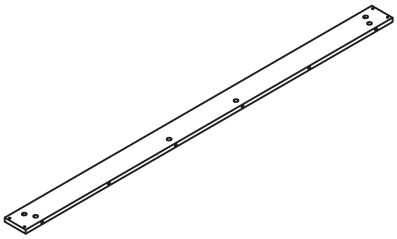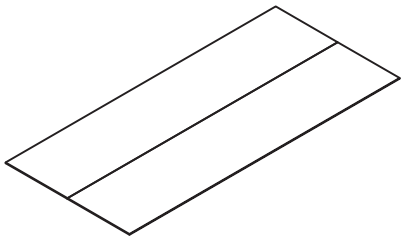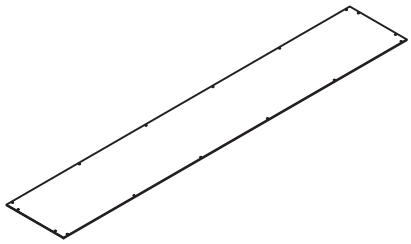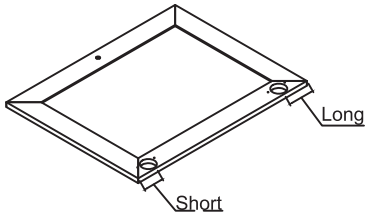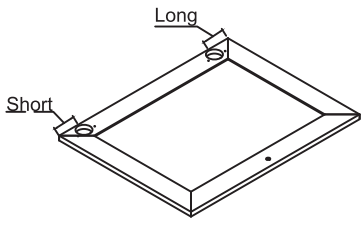
BOX 2		
		
㊷ (1583X90X15mm) X1	㊸ (1165X534X3mm) X2	㊹ (1480X246X3mm) X1
		
㊵ (300X117X12mm) X2	㊶ (300X117X12mm) X2	㊷ (256X117X12mm) X2
		
㊹ (300X153X15mm) X1	㊺ (300X153X15mm) X1	㊽ (485X379X15mm) X1
		
㊾ (485X379X15mm) X1		

BOARD IDENTIFICATION

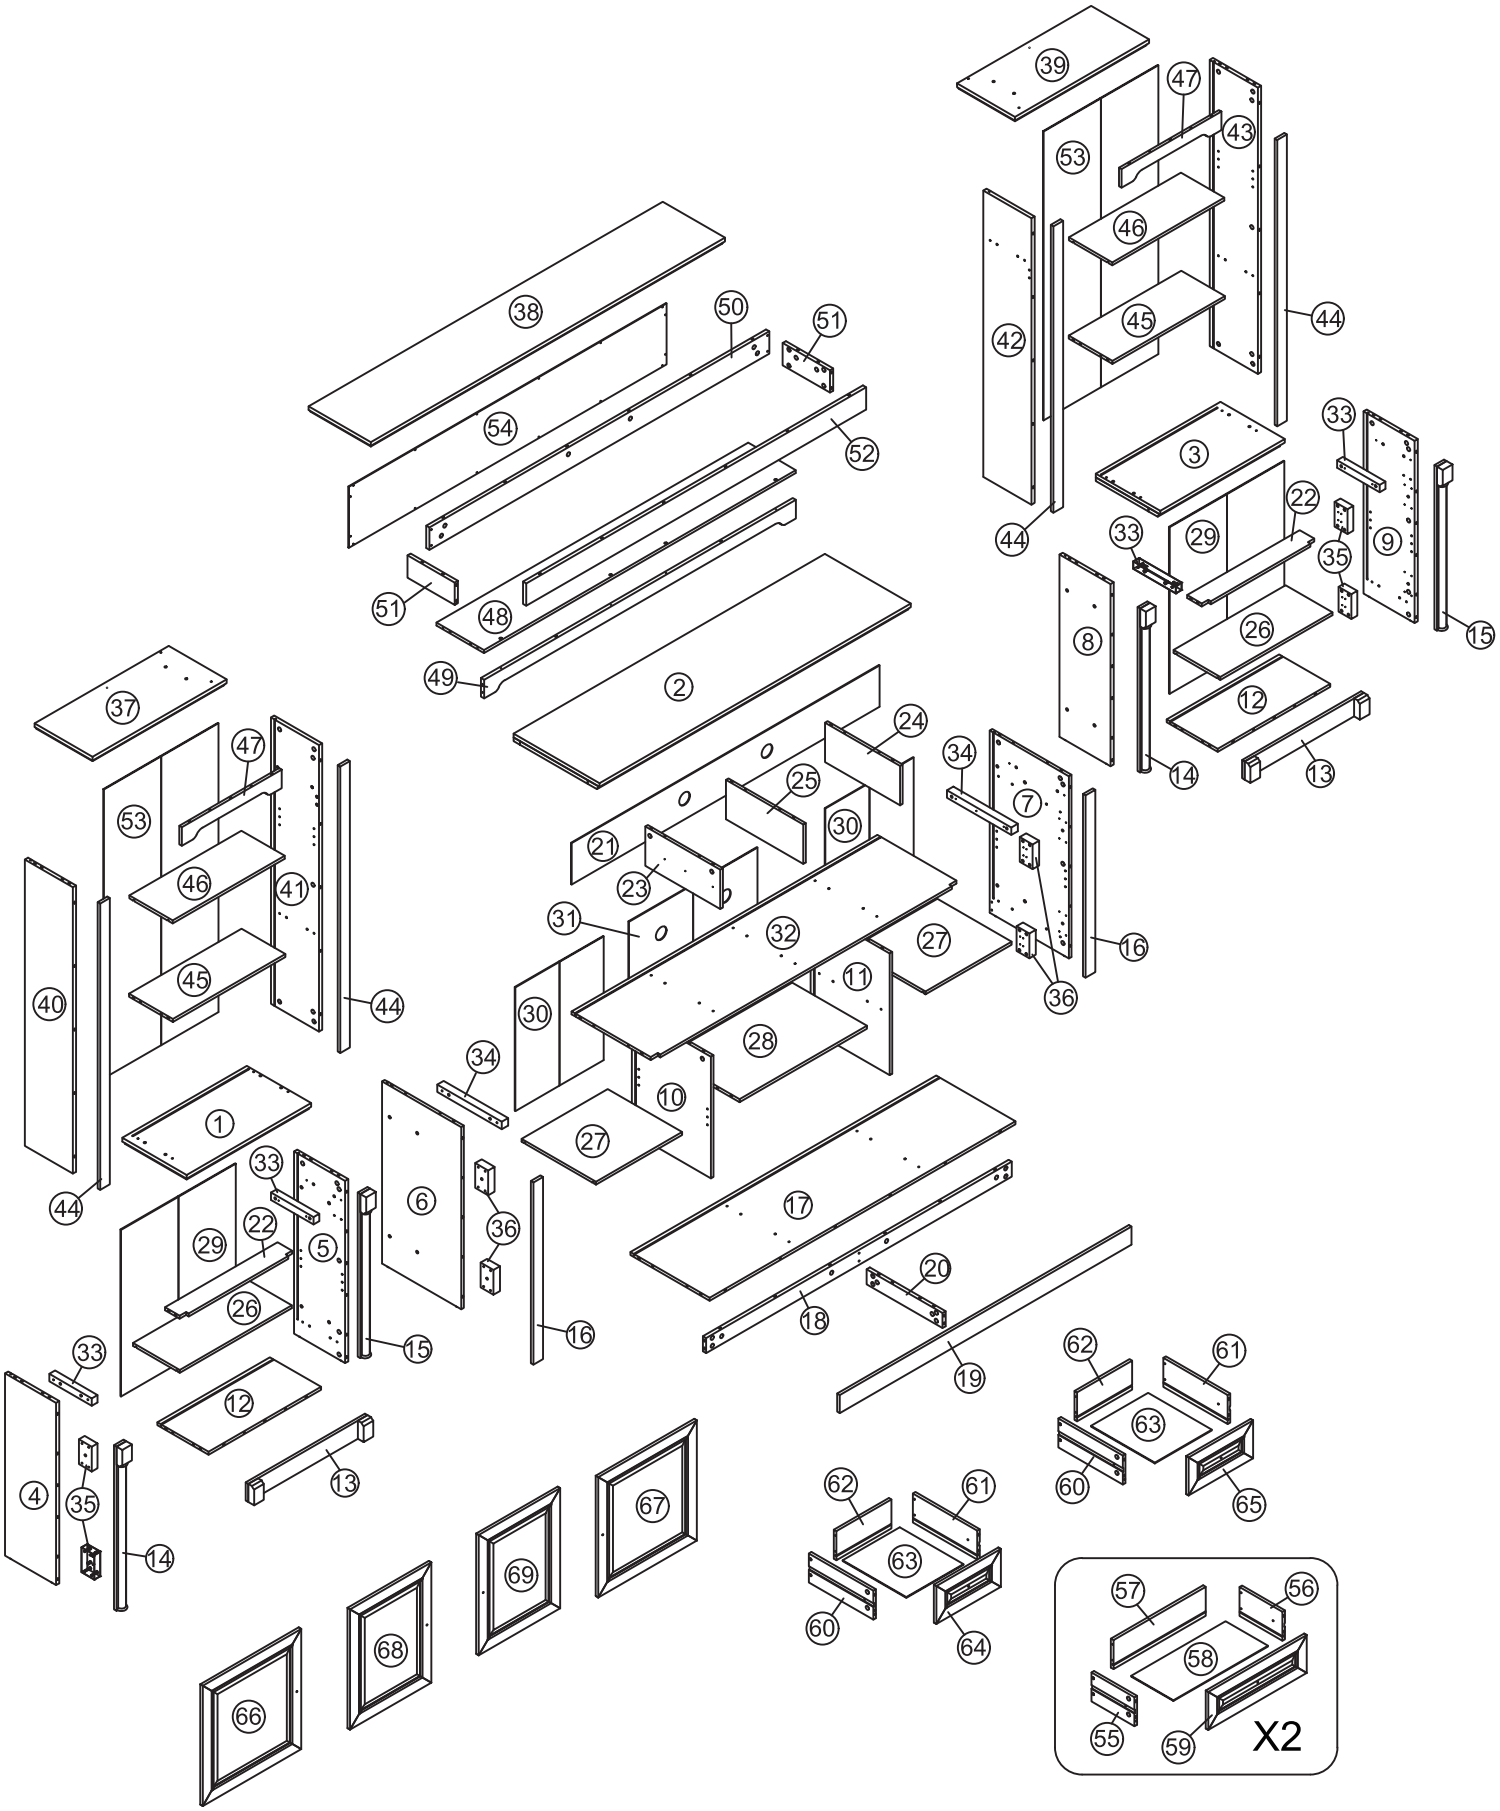


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

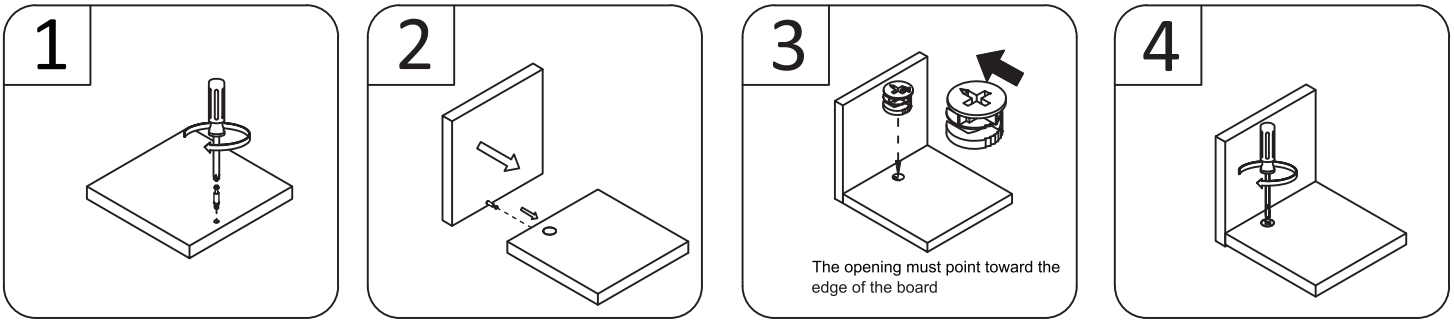

Step 1


Fix fitting (B) to panel (14). Use wooden dowel (C) to connect panel (4) with panel (14), then turn cam lock (A) clockwise to secure.

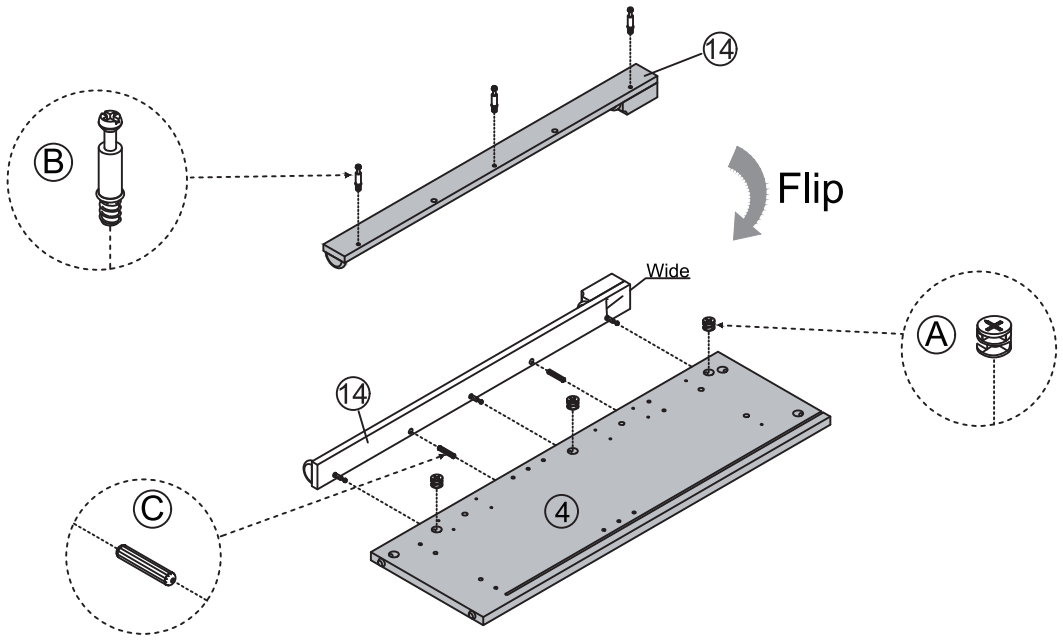

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

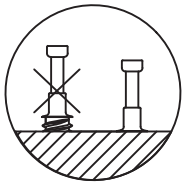

Pay attention to the installation direction of (14).

C	ø8*30	x 2
B	Ø6.5*35	x 3
A	Ø15*9.5	x 3


Step 2

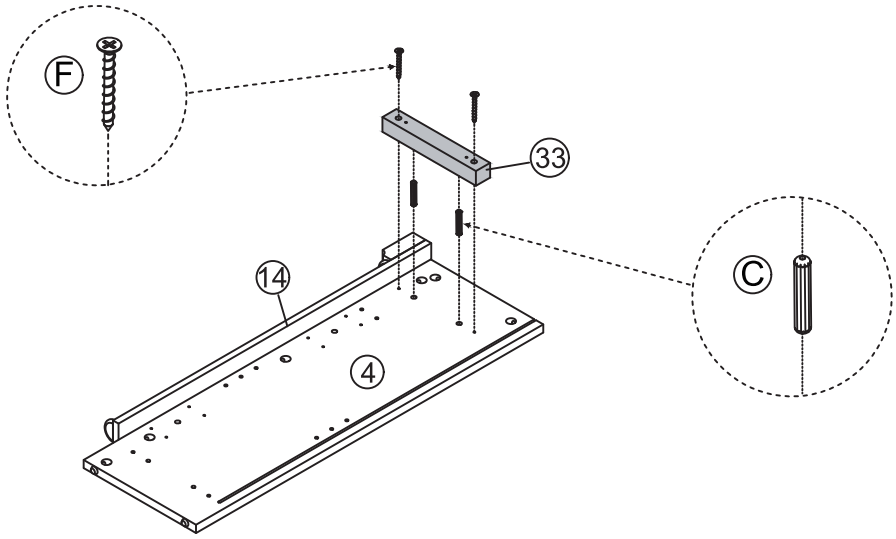


Use wooden dowel (C) to connect panel (33) with panel (4), then secure with screw (F).

F	ø4*35	x 2
C	ø8*30	x 2


Step 3

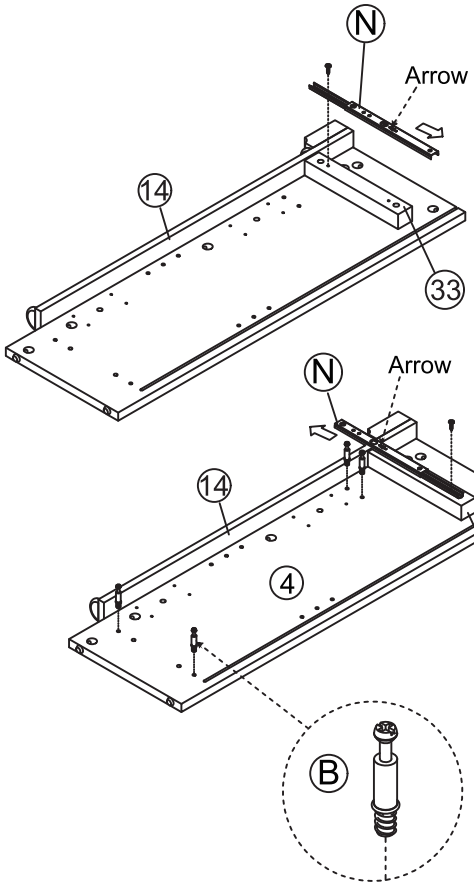

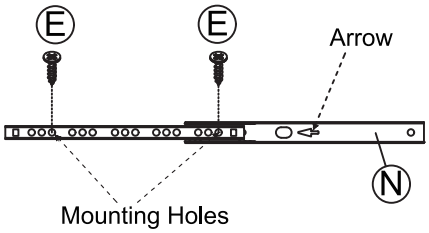


Pay attention to the installation direction of (N).


Use screw (E) to fix two-section drawer slide (N) onto panel (33), then fix fitting (B) onto panel (4).

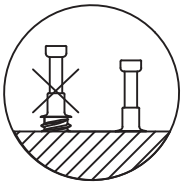

N	L=200	x 1
E	ø3.5*12	x 2
B	ø6.5*35	x 4

Step 4

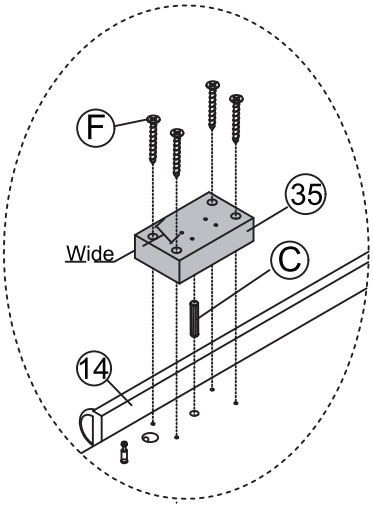

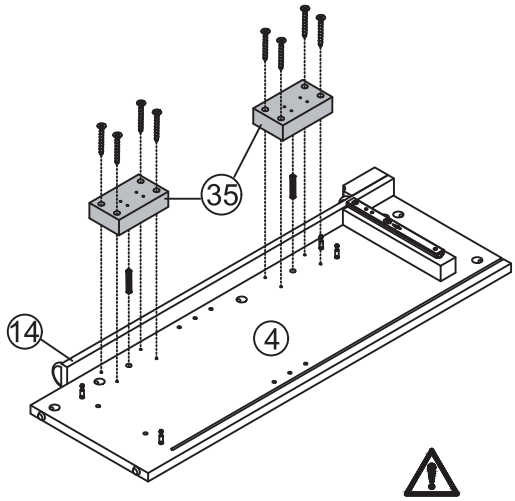


Pay attention to the installation direction of (35).

Use wooden dowel (C) to connect panel (35) with panel (4), then secure with screw (F).

F	ø4*35	x 8
C	ø8*30	x 2

Step 5

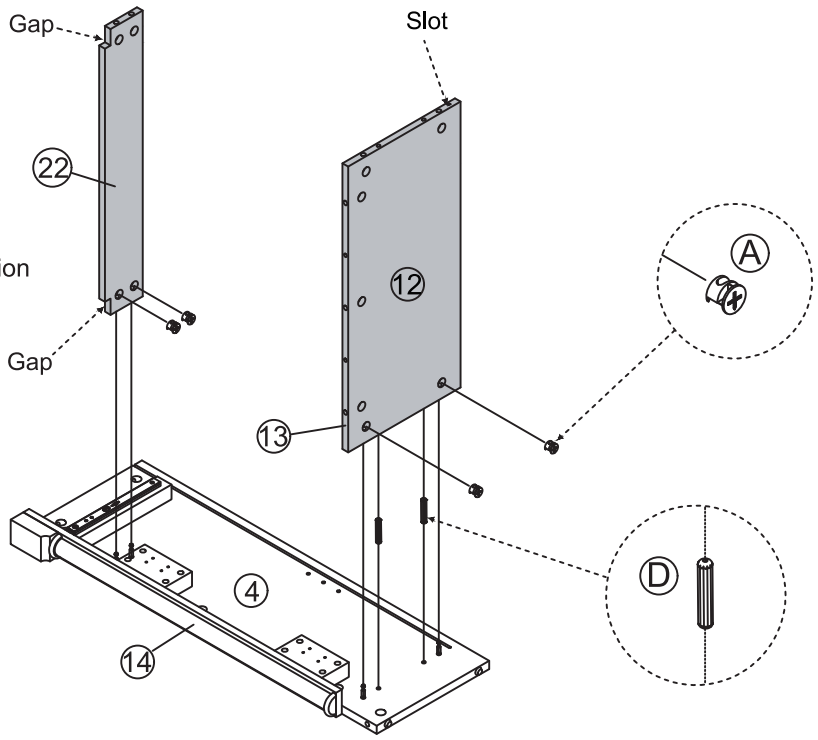

Pay attention to the installation direction of (12) and (22).

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Turn cam lock (A) clockwise to fix panel (22) onto panel (4). Use wooden dowel (D) to connect panel (12) with panel (4) and secure with cam lock (A).

D	⌀6*30	x 2
A	Ø15*9.5	x 4


Step 6

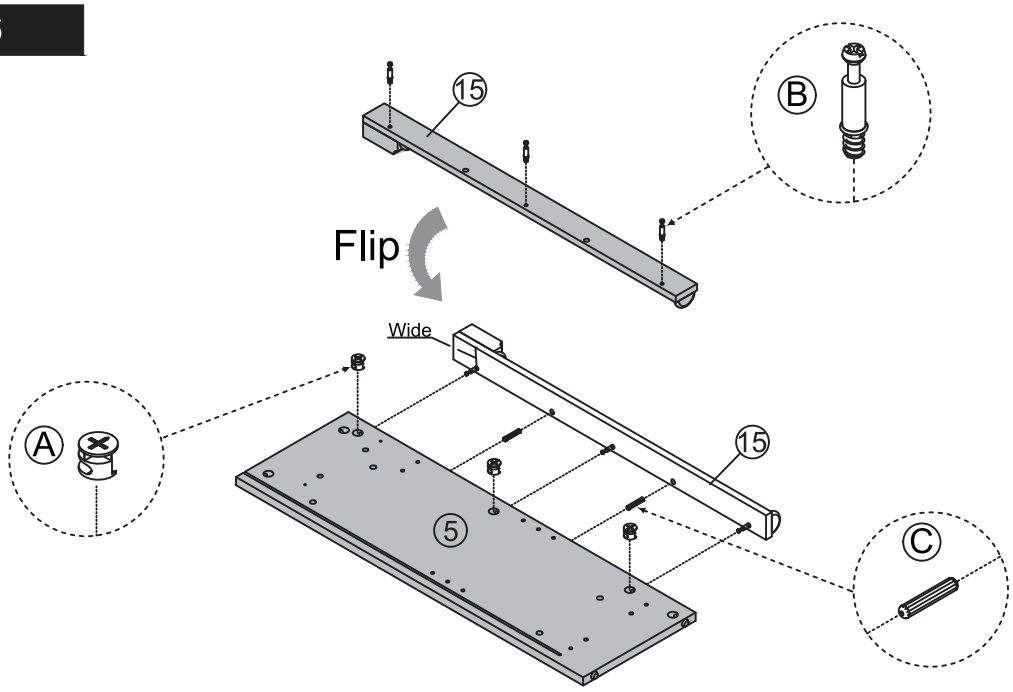

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

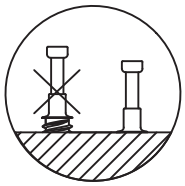

Fix fitting (B) to panel (15). Use wooden dowel (C) to connect panel (5) with panel (15), then turn cam lock (A) clockwise to secure.

C	⌀8*30	x 2
B	⌀6.5*35	x 3
A	Ø15*9.5	x 3


Step 7

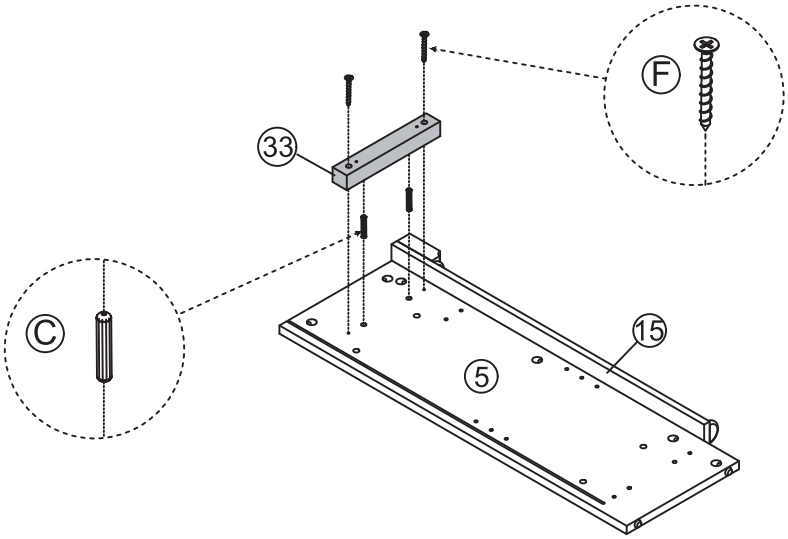


Use wooden dowel (C) to connect panel (33) with panel (5), then secure with screw (F).

Ⓕ	ø4*35	x 2
Ⓒ	ø8*30	x 2


Step 8

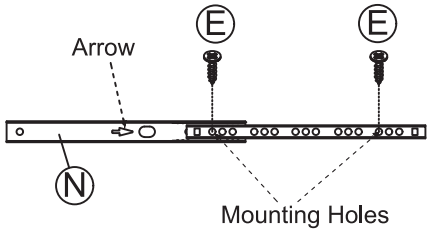


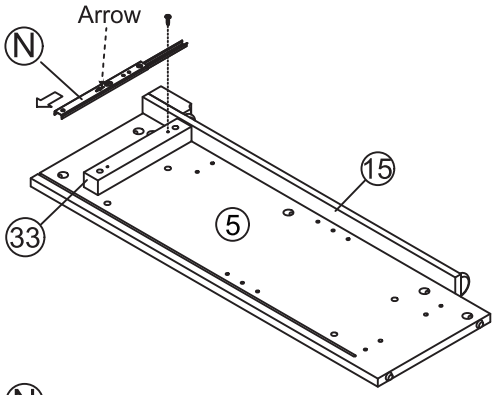

Pay attention to the installation direction of Ⓝ.

Use screw (E) to fix two-section drawer slide (N) onto panel (33), then fix fitting (B) onto panel (5).

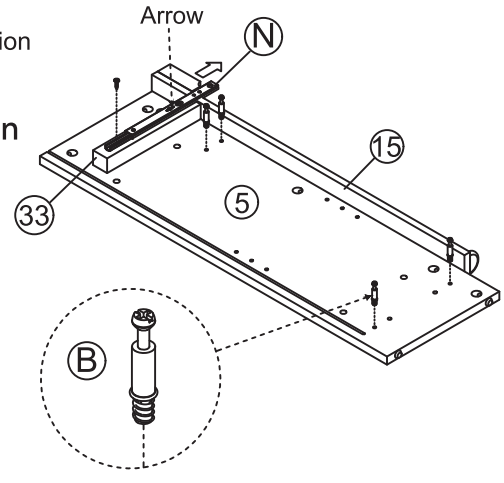


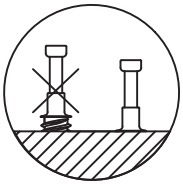

Ⓝ	L=200	x 1
Ⓔ	ø3.5*12	x 2
Ⓑ	ø6.5*35	x 4

Step 9

Use wooden dowel (D) to connect panel (12) with panel (5), then turn cam lock (A) clockwise to fix panels (12) and (22) onto panel (5).

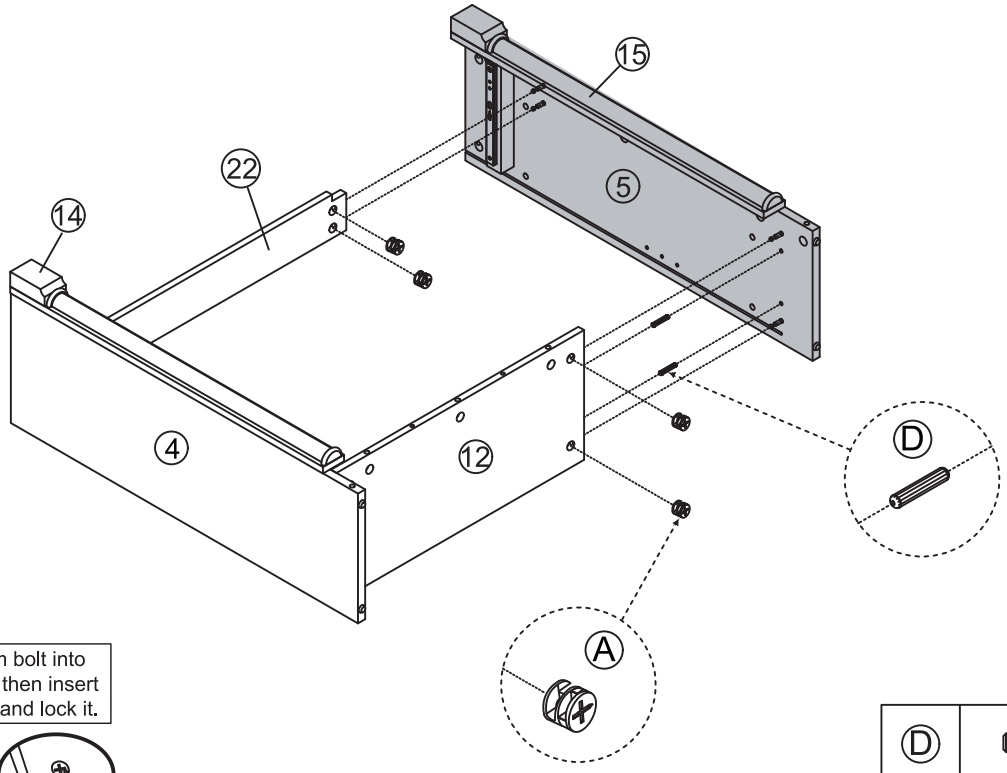


Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Ⓓ	⌀6*30	x 2
Ⓐ	Ø15*9.5	x 4

Step 10

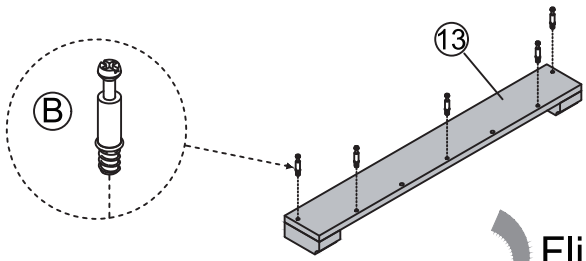

Flip

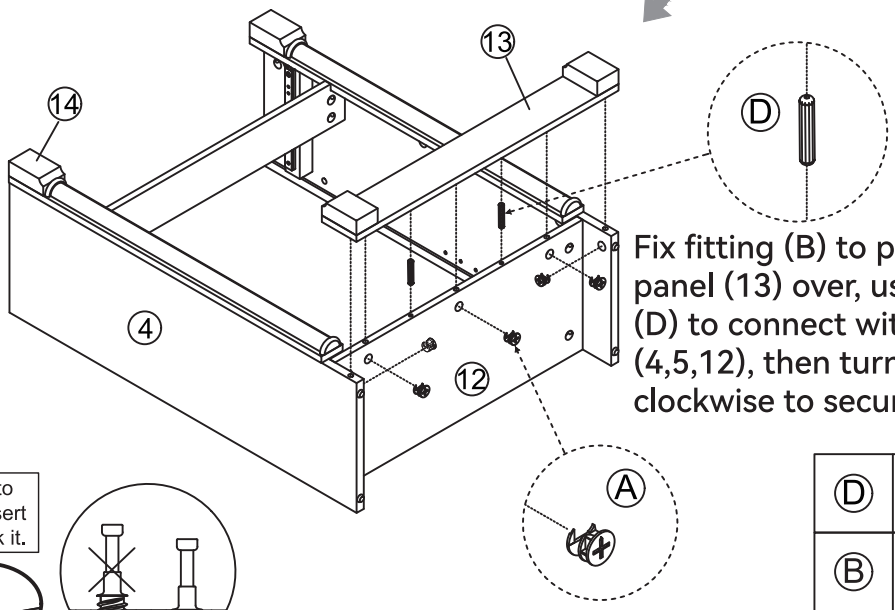

Fix fitting (B) to panel (13). Turn panel (13) over, use wooden dowel (D) to connect with panels (4,5,12), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



Proper orientation of CAM LOCK


Ⓓ	⌀6*30	x 2
Ⓑ	⌀6.5*35	x 5
Ⓐ	Ø15*9.5	x 5

Step 11

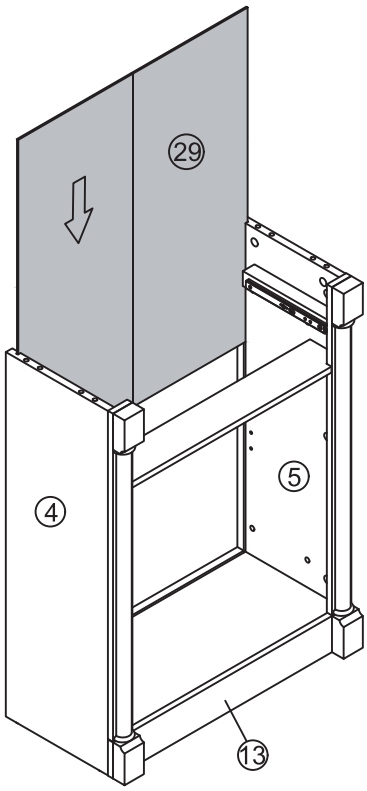


Insert panel (29) into the grooves of panels (4,5).

Step 12

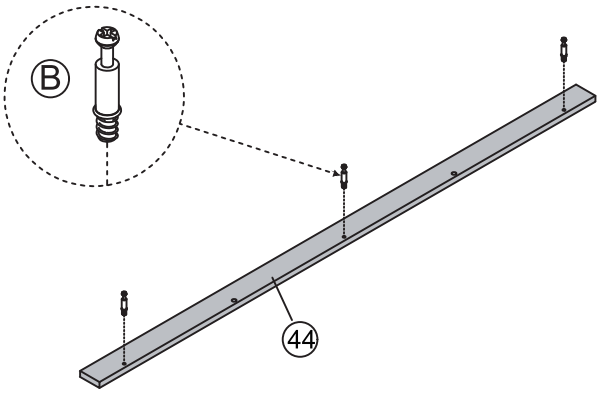


Fix fitting (B) to panel (44), repeat twice.

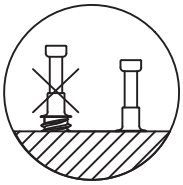

X2

B	ø6.5*35	x 6

Step 13

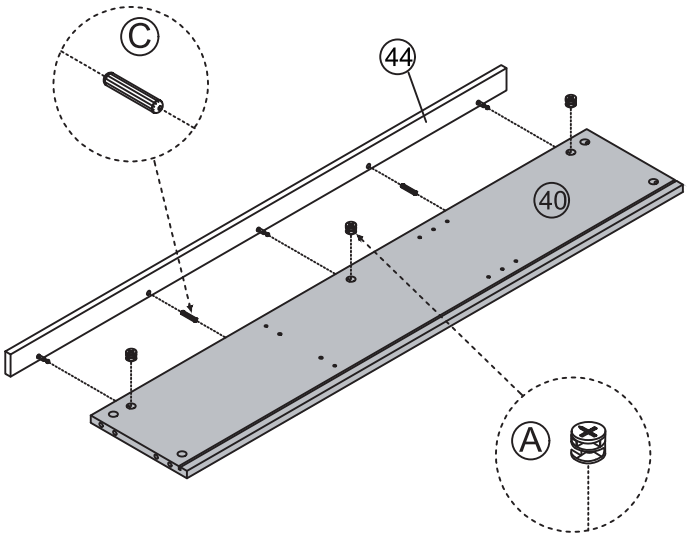

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK


Use wooden dowel (C) to connect panel (44) with panel (40), then turn cam lock (A) clockwise to secure.

Ⓒ	⌀8*30	x 2
Ⓐ	Ø15*9.5	x 3

Step 14

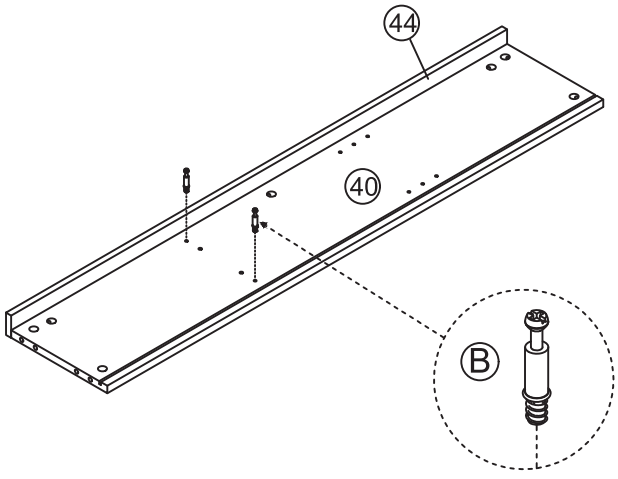


Fix fitting (B) to panel (40).

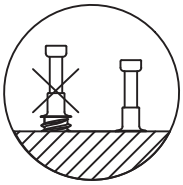

Ⓑ	⌀6.5*35	x 2

Step 15

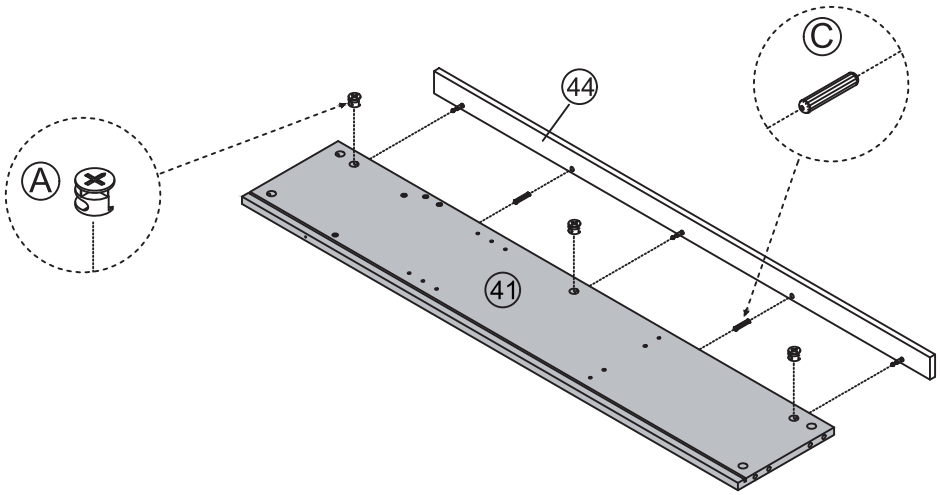

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK


Use wooden dowel (C) to connect panel (44) with panel (41), then turn cam lock (A) clockwise to secure.

Ⓒ	⌀8*30	x 2
Ⓐ	Ø15*9.5	x 3

Step 16

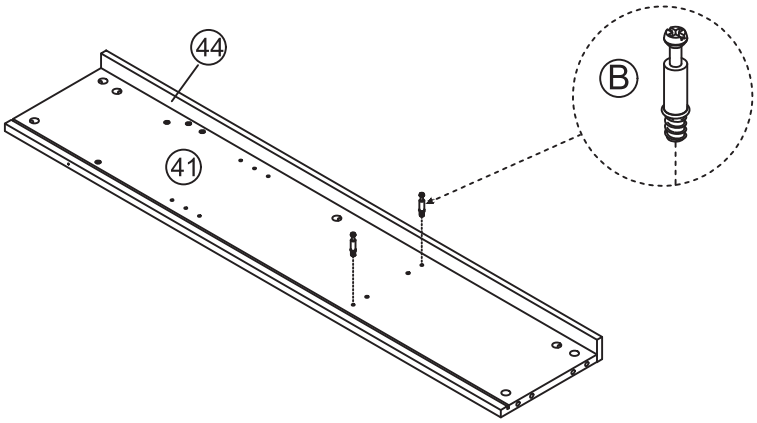


Fix fitting (B) to panel (41).

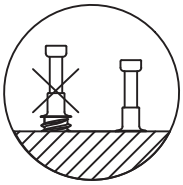

Ⓑ	⌀6.5*35	x2

Step 17

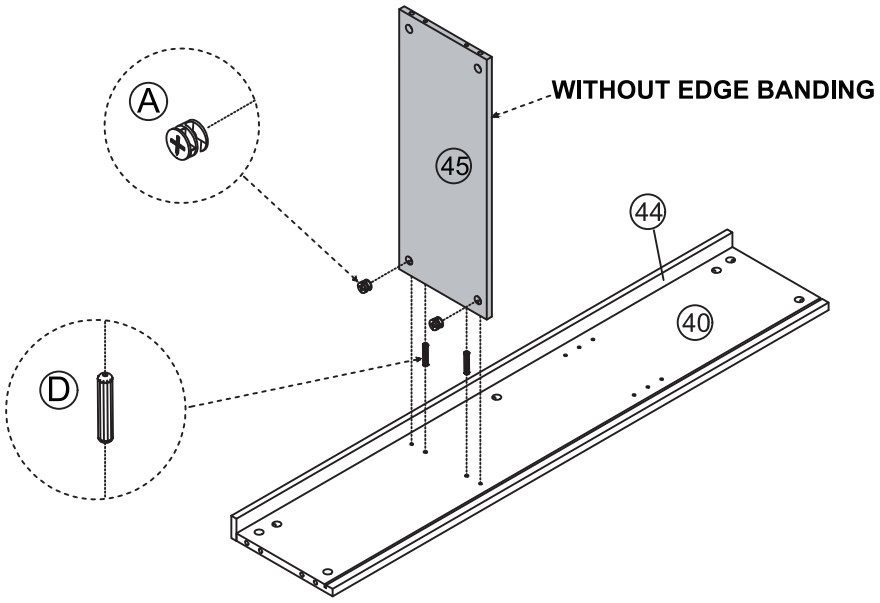

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Use wooden dowel (D) to connect panel (45) with panel (40), then turn cam lock (A) clockwise to secure.


D	ø6*30	x 2
A	Ø15*9.5	x 2

Step 18

Use wooden dowel (D) to connect panel (45) with panel (41), then turn cam lock (A) clockwise to secure.

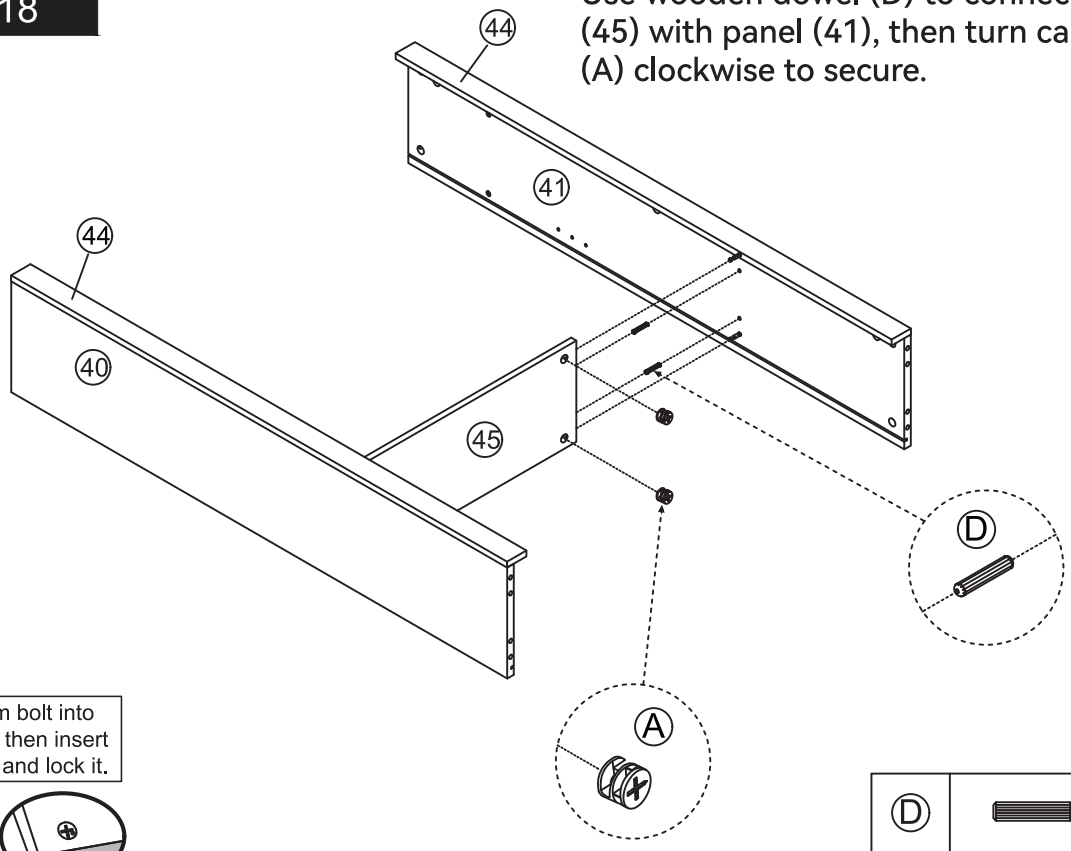


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

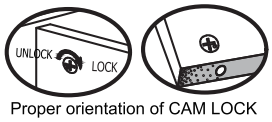


Proper orientation of CAM LOCK

D	ø6*30	x 2
A	Ø15*9.5	x 2

Step 19

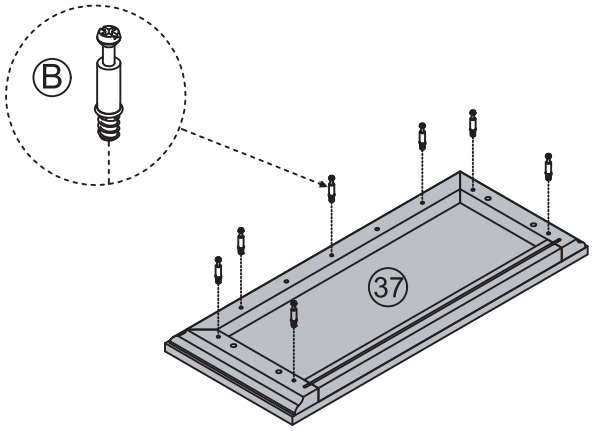


Fix fitting (B) to panel (37).

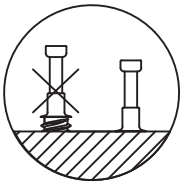

B	ø6.5*35	x 7

Step 20

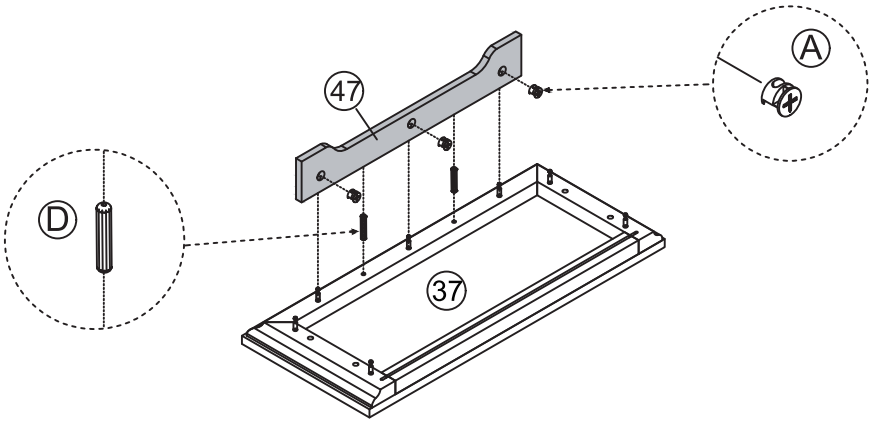

Use wooden dowel (D) to connect panel (47) with panel (37), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



Proper orientation of CAM LOCK

D	ø6*30	x 2
A	Ø15*9.5	x 3

Step 21

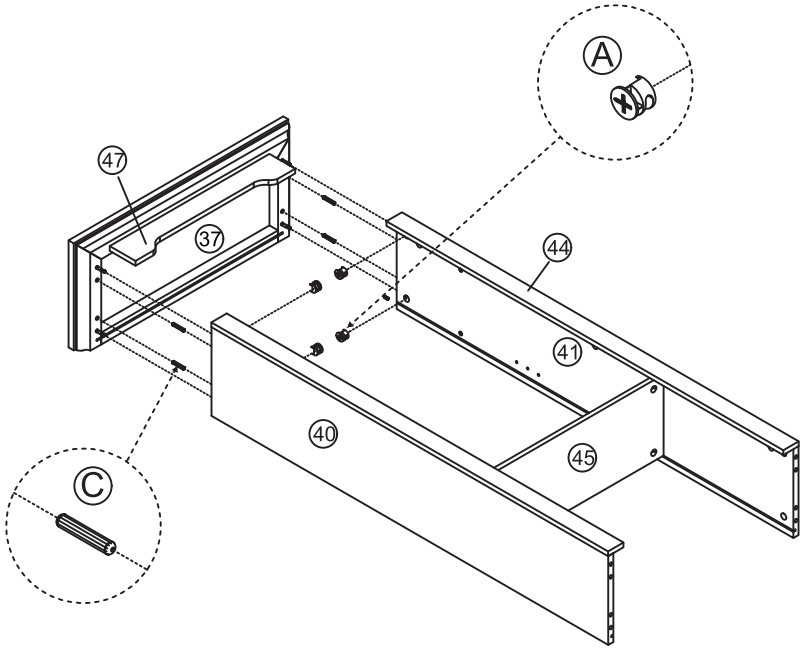

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Use wooden dowel (C) to connect panel (37) with panels (40,41), then turn cam lock (A) clockwise to secure.


Ⓒ	 Ø8*30	x 4
Ⓐ	 Ø15*9.5	x 4

Step 22

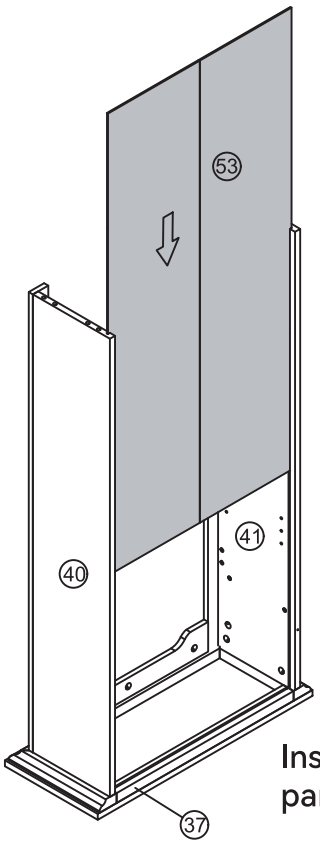


Insert panel (53) into the grooves of panels (40,41).

Step 23

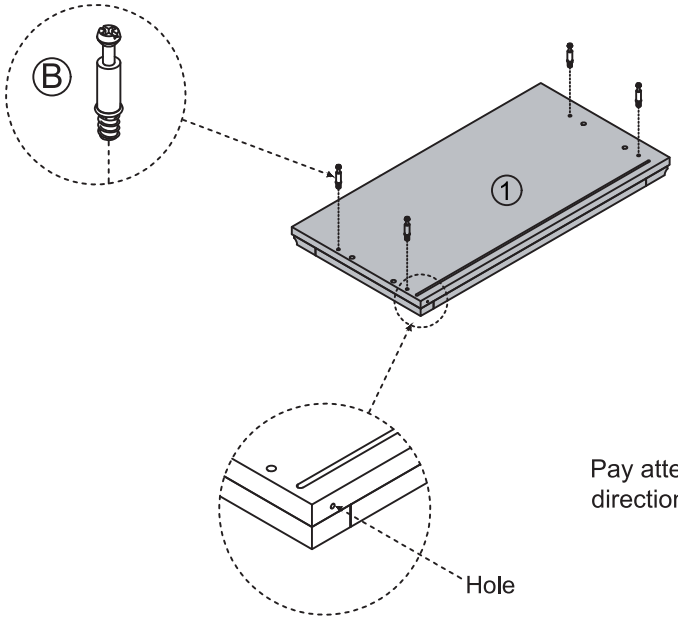


Pay attention to the placement direction of ①.

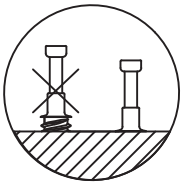

Fix fitting (B) to panel (1).

Ⓑ	ø6.5*35	x 4


Step 24

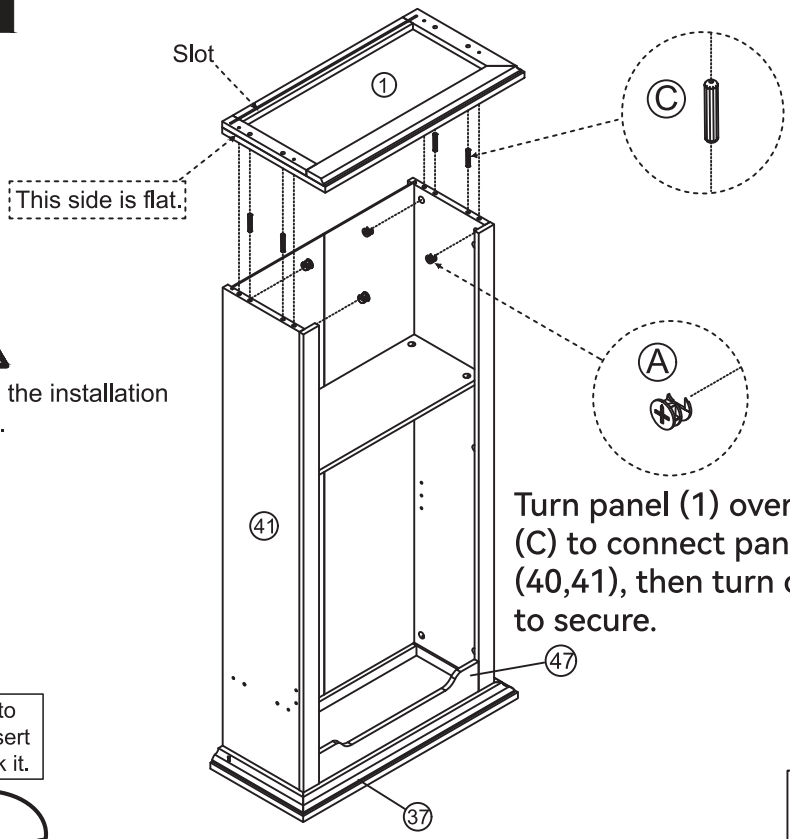

Pay attention to the installation direction of ① .

Turn panel (1) over. Use wooden dowel (C) to connect panel (1) with panels (40,41), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

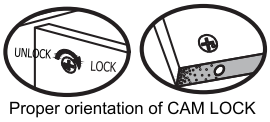


Proper orientation of CAM LOCK

Ⓒ	ø8*30	x 4
Ⓐ	Ø15*9.5	x 4

Step 25

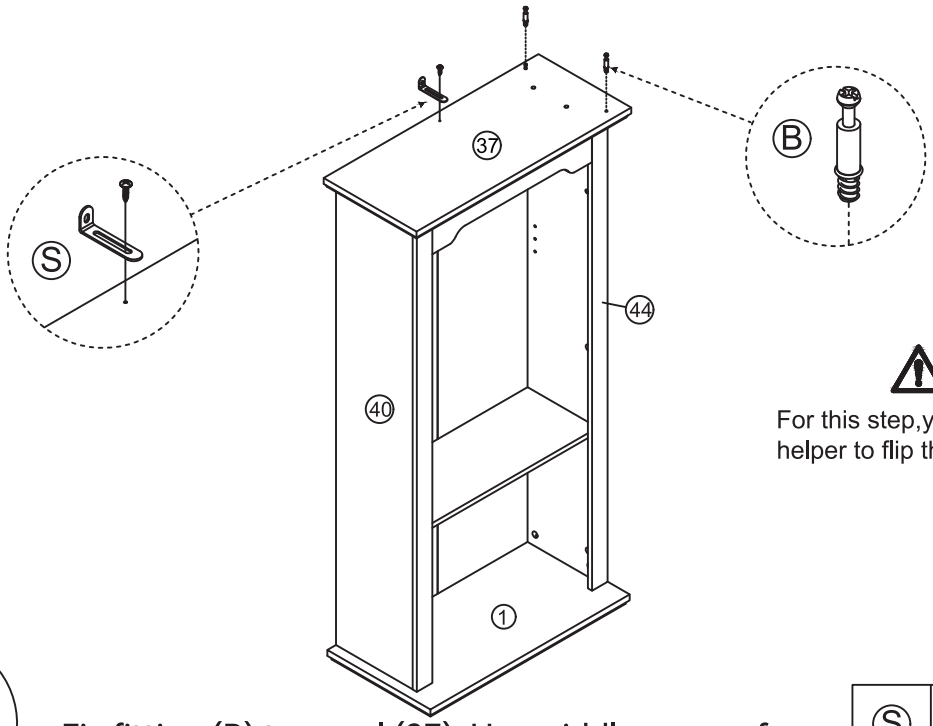


For this step,you need one helper to flip the cabinet.

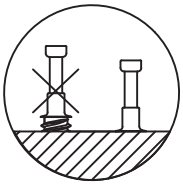


Fix fitting (B) to panel (37). Use middle screw of fitting (S) to fix L-shaped metal bracket onto panel (37).

Ⓢ		x1set
Ⓑ	 ø6.5*35	x 2

Step 26

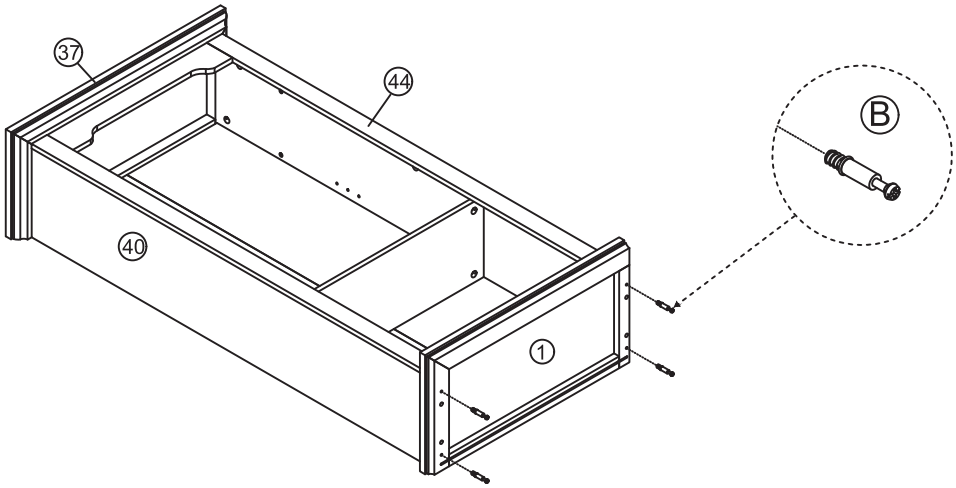

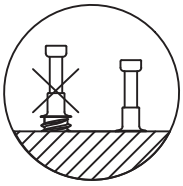


Fix fitting (B) to panel (1).

Ⓑ	 ø6.5*35	x 4


Step 27

Two people are needed to collaborate on this assembly step.

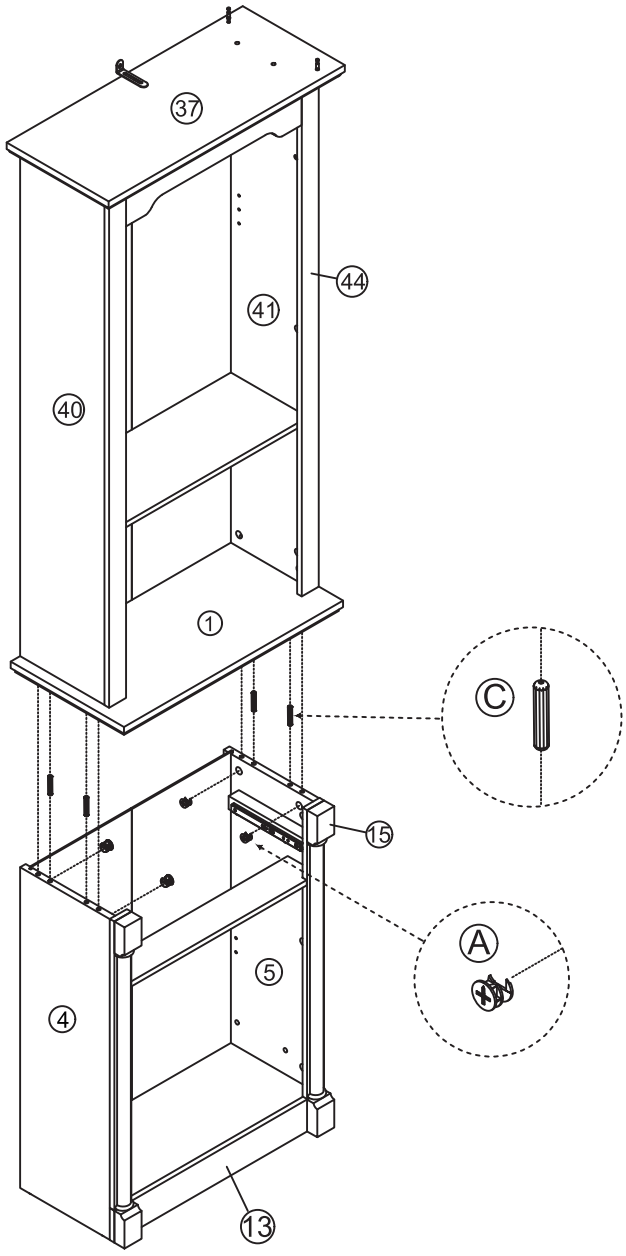

Use wooden dowel (C) to connect panel (1) with panels (4,5), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

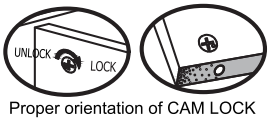

Proper orientation of CAM LOCK

Ⓒ	ø8*30	x 4
Ⓐ	Ø15*9.5	x 4

Step 28

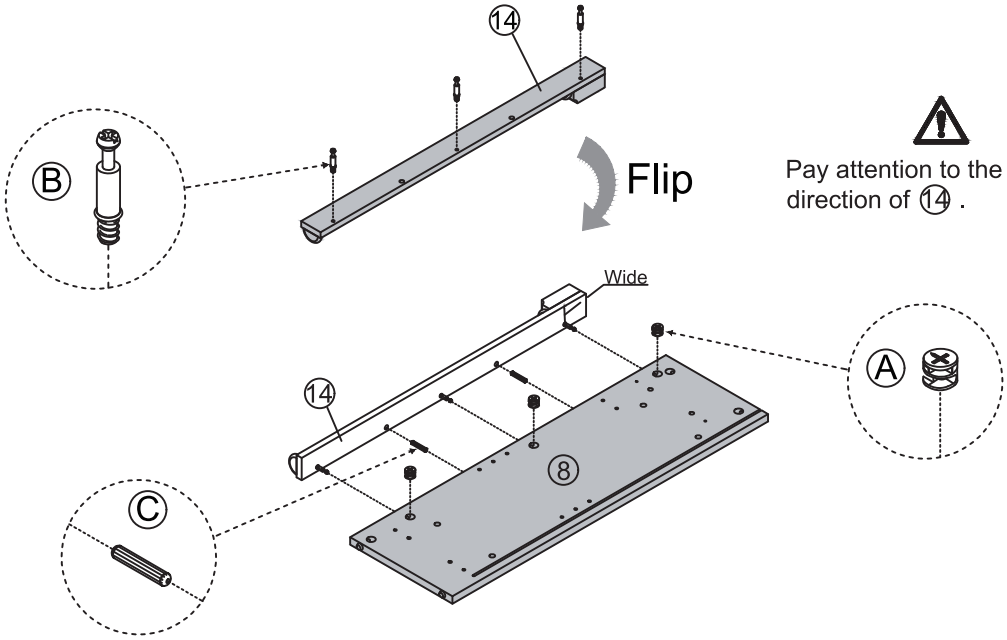


Pay attention to the installation direction of 14 .

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

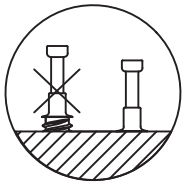

Fix fitting (B) to panel (14). Turn panel (14) over, use wooden dowel (C) to connect panel (14) with panel (8), then turn cam lock (A) clockwise to secure.

C	ø8*30	x 2
B	Ø6.5*35	x 3
A	Ø15*9.5	x 3


Step 29

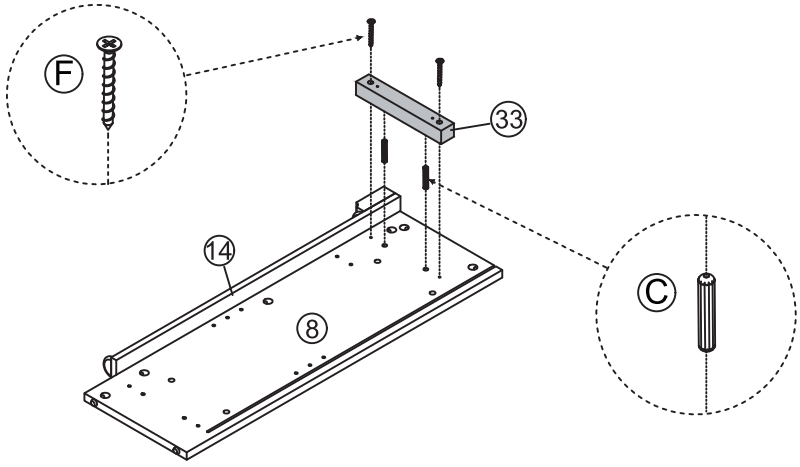


Use wooden dowel (C) to connect panel (33) with panel (8), then secure with screw (F).


F	ø4*35	x 2
C	ø8*30	x 2


Step 30

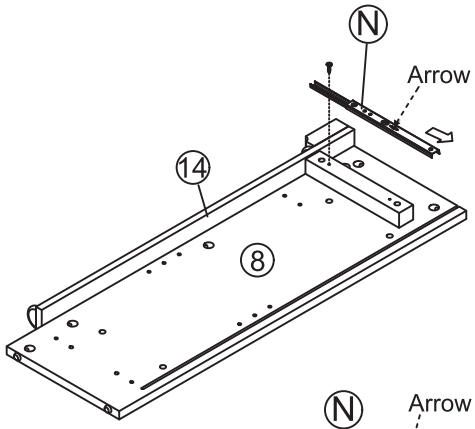

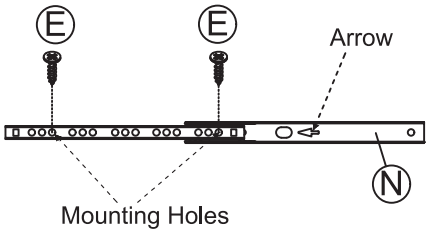

Use screw (E) to fix two-section drawer slide (N) onto panel (33), then fix fitting (B) onto panel (8).

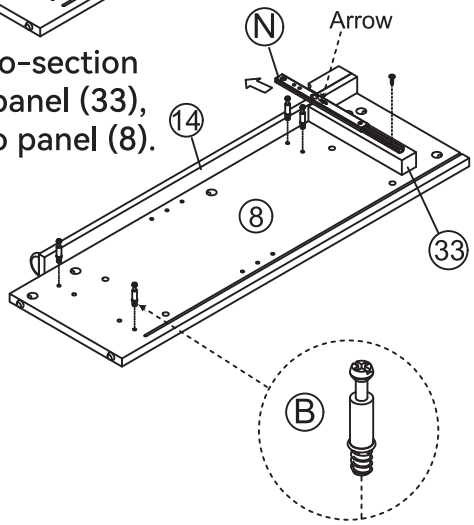


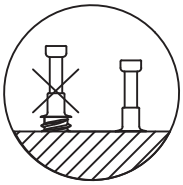

Pay attention to the installation direction of Ⓝ .

Ⓝ	L=200	x 1
Ⓔ	ø3.5*12	x 2
Ⓑ		x 4


Step 31

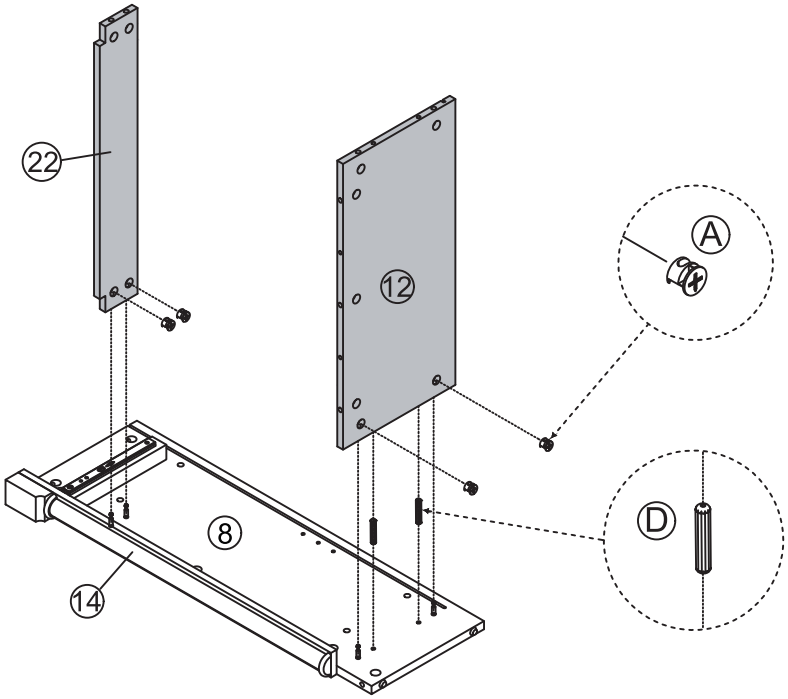

Turn cam lock (A) clockwise to fix panel (22) onto panel (8). Use wooden dowel (D) to connect panel (12) with panel (8), then secure with cam lock (A).

Ⓓ	ø6*30	x 2
Ⓐ	Ø15*9.5	x 4


Step 32

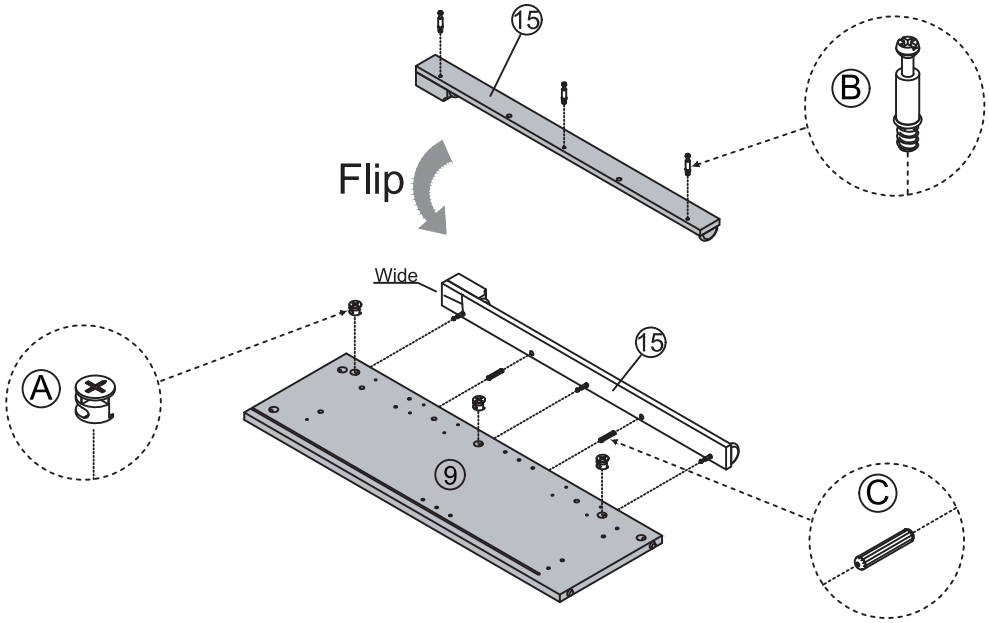

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

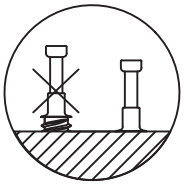


Fix fitting (B) to panel (15). Turn panel (15) over, use wooden dowel (C) to connect panel (15) with panel (9), then turn cam lock (A) clockwise to secure.

Ⓒ	⌀8*30	x 2
Ⓑ	⌀6.5*35	x 3
Ⓐ	⌀15*9.5	x 3

Step 33

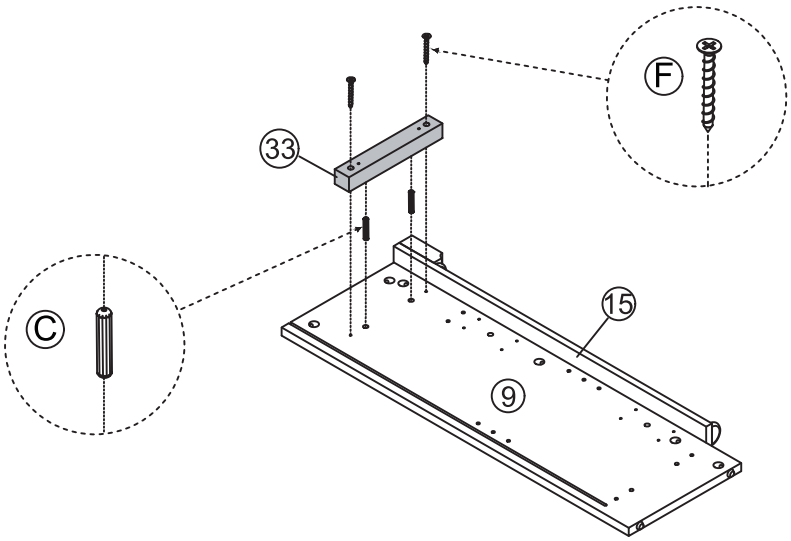

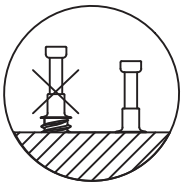



Use wooden dowel (C) to connect panel (33) with panel (9), then secure with screw (F).

Ⓕ	⌀4*35	x2
Ⓒ	⌀8*30	x 2


Step 34


Use screw (E) to fix two-section drawer slide (N) onto panel (33), then fix fitting (B) onto panel (9).

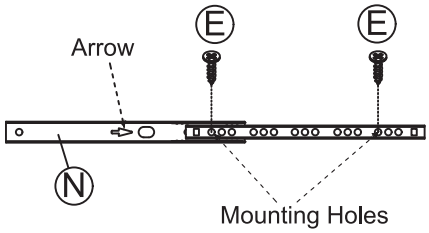

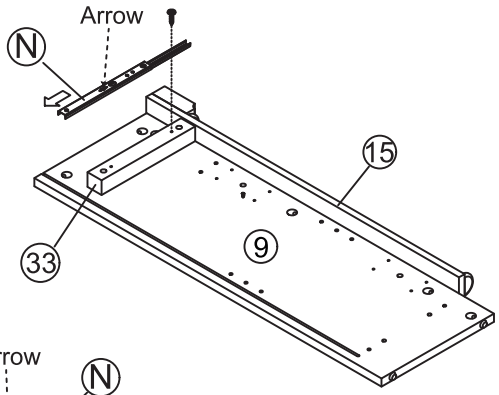

Pay attention to the installation direction of (N).

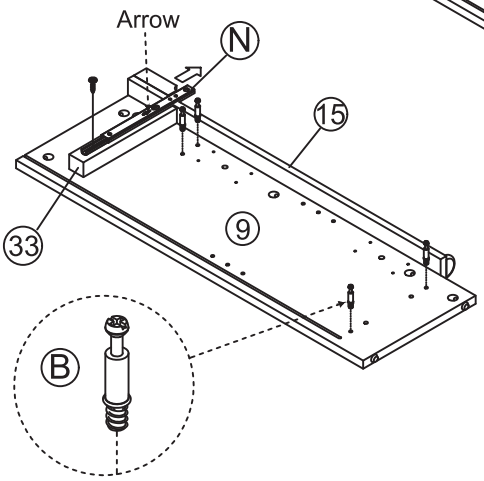


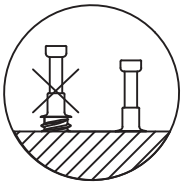


N	L=200	x 1
E	ø3.5*12	x 2
B	ø6.5*35	x 4

Step 35

Use wooden dowel (C) to connect panel (35) with panel (9), then secure with screw (F).

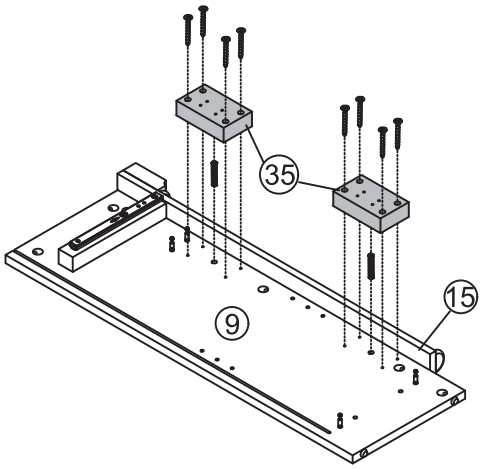

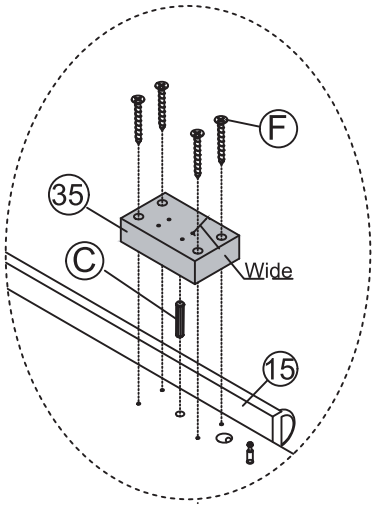




Pay attention to the installation direction of (35).

F	ø4*35	x8
C	ø8*30	x 2

Step 36

Turn cam lock (A) clockwise to fix panel (22) onto panel (9). Use wooden dowel (D) to connect panel (12) with panel (9), then secure with cam lock (A).

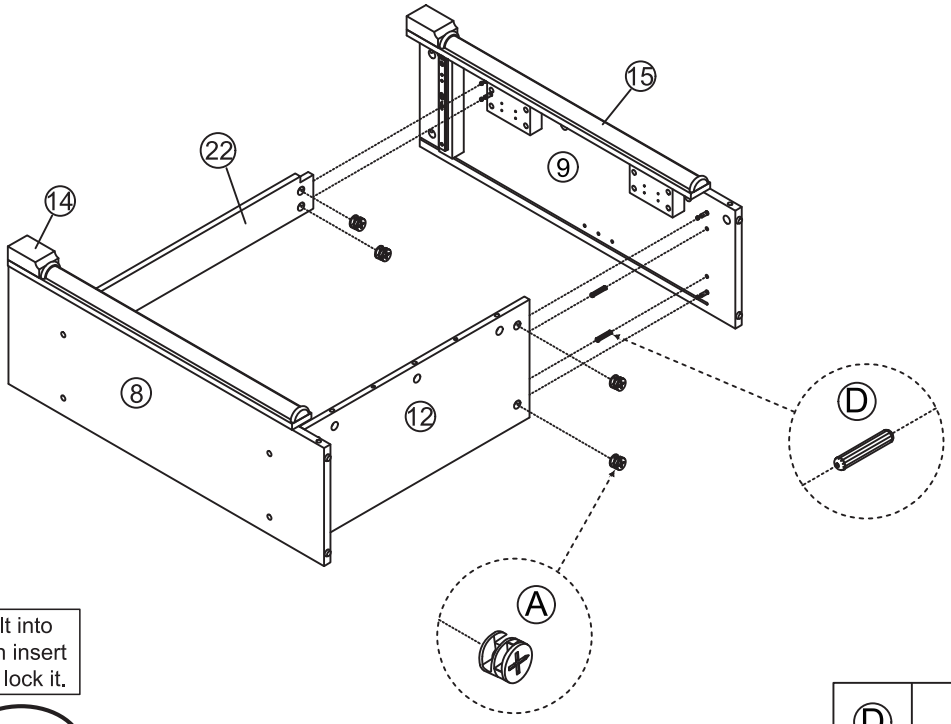

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK


Ⓓ	ø6*30	x 2
Ⓐ	Ø15*9.5	x 4

Step 37


Fix fitting (B) to panel (13). Turn panel (13) over, use wooden dowel (D) to connect panel (13) with panels (8,9,12), then turn cam lock (A) clockwise to secure.

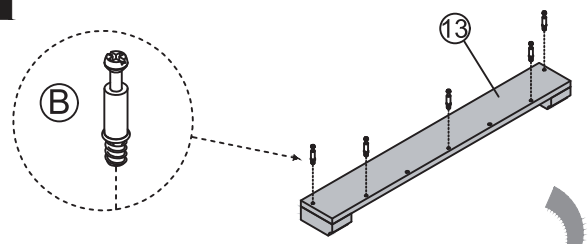

Flip

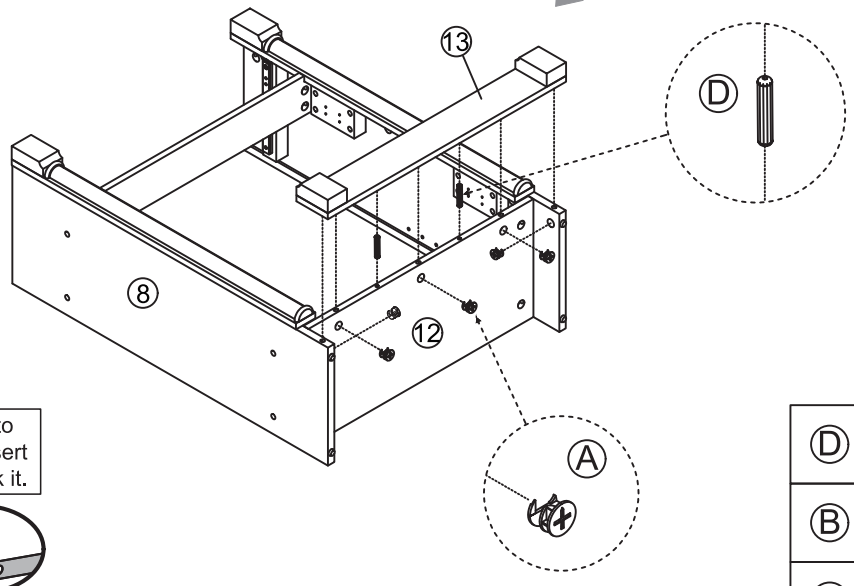


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

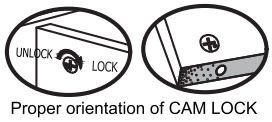

Proper orientation of CAM LOCK


Ⓓ	ø6*30	x 2
Ⓑ	ø6.5*35	x 5
Ⓐ	Ø15*9.5	x 5


Step 38

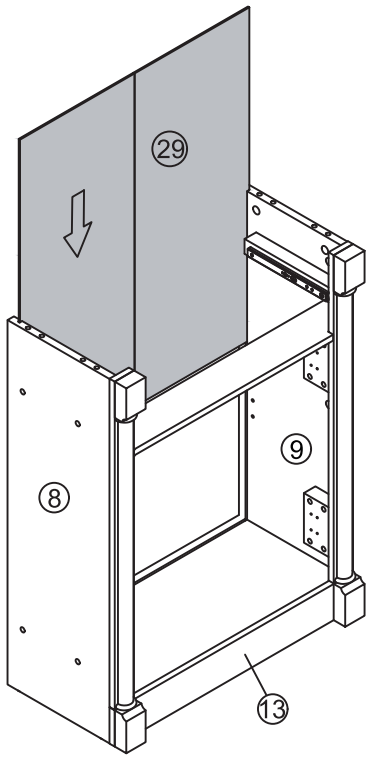

Insert panel (29) into the grooves of panels (8,9).

Step 39

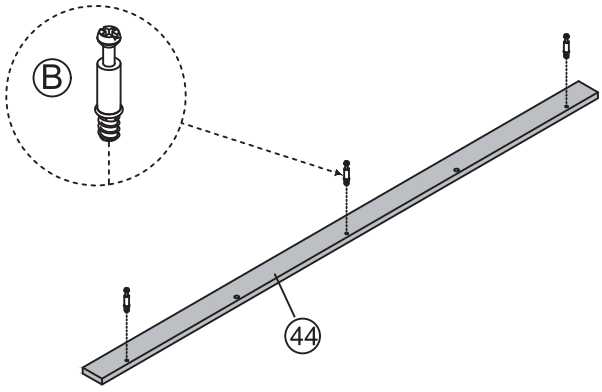

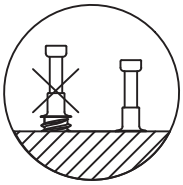


X2

Fix fitting (B) to panel (44), repeat twice.


Ⓑ	 ø6.5*35	x 6

Step 40


Use wooden dowel (C) to connect panel (44) with panel (42), then turn cam lock (A) clockwise to secure. Fix fitting (B) to panel (42).

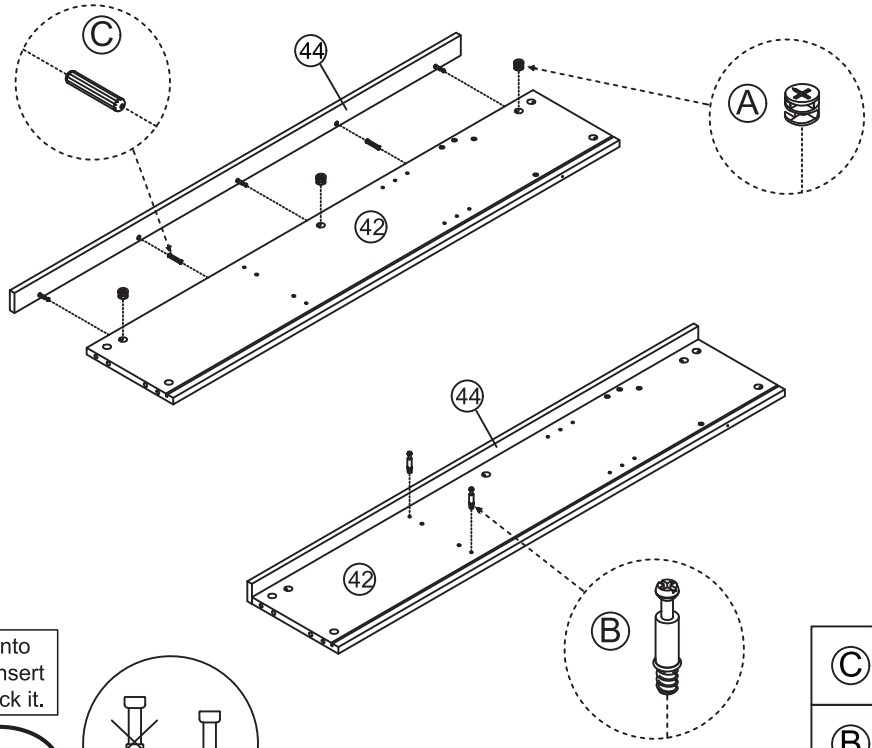

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

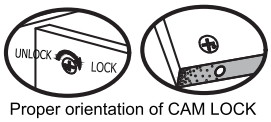


Proper orientation of CAM LOCK

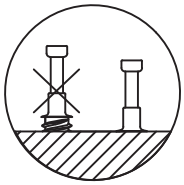

C	ø8*30	x 2
B	Ø6.5*35	x 2
A	Ø15*9.5	x 3

Step 41

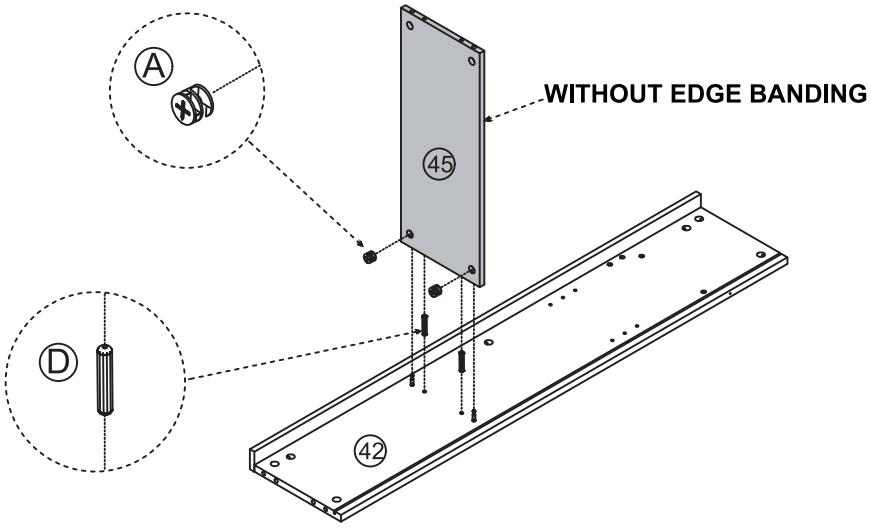

Use wooden dowel (D) to connect panel (45) with panel (42), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



Proper orientation of CAM LOCK

D	ø6*30	x 2
A	Ø15*9.5	x 2


Step 42

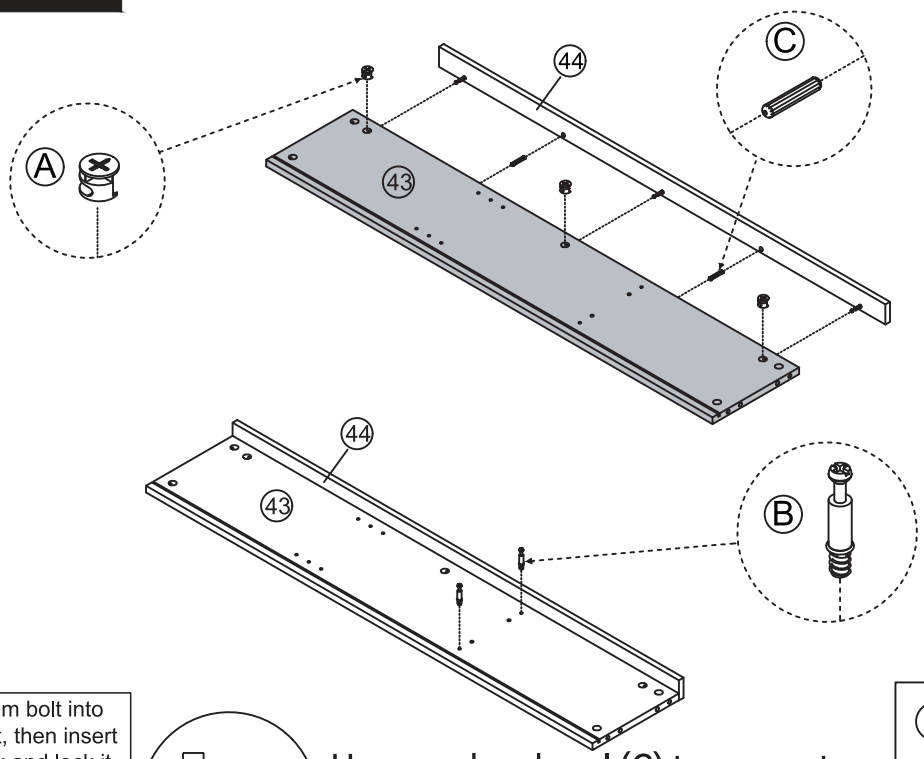

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

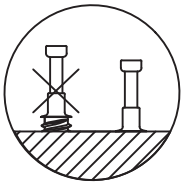


Use wooden dowel (C) to connect panel (44) with panel (43), then turn cam lock (A) clockwise to secure.
Fix fitting (B) to panel (43).

Ⓒ	ø8*30	x 2
Ⓑ	Ø6.5*35	x 2
Ⓐ	Ø15*9.5	x 3

Step 43

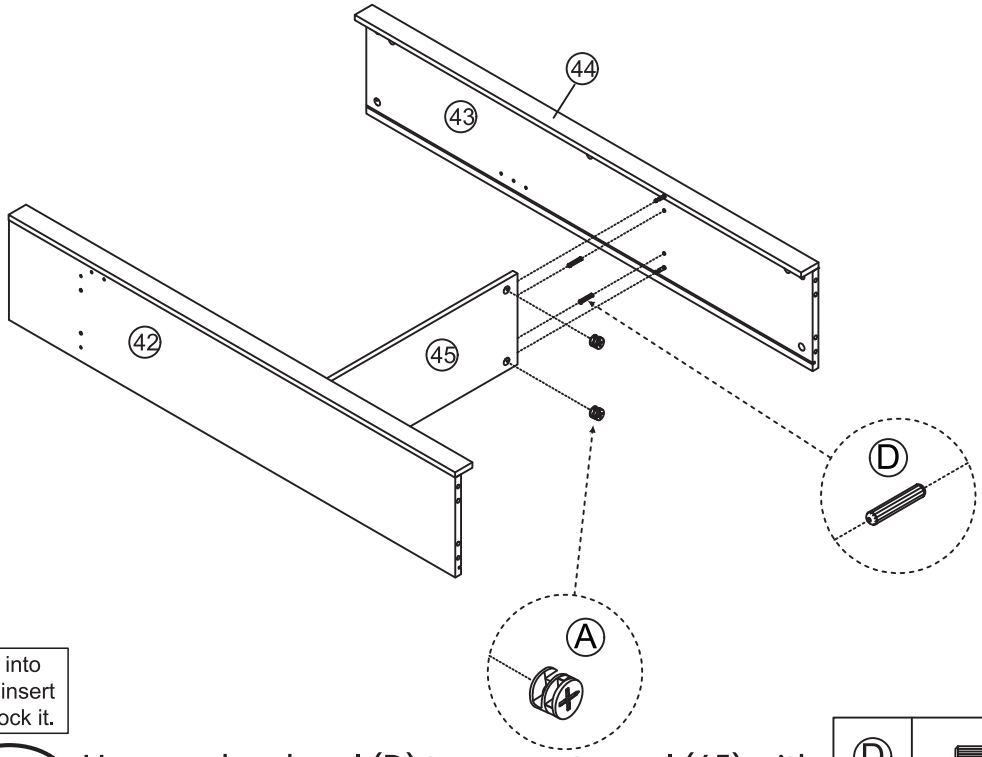

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

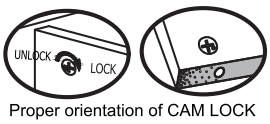


Proper orientation of CAM LOCK


Use wooden dowel (D) to connect panel (45) with panel (43), then turn cam lock (A) clockwise to secure.

Ⓓ	ø6*30	x 2
Ⓐ	Ø15*9.5	x 2

Step 44

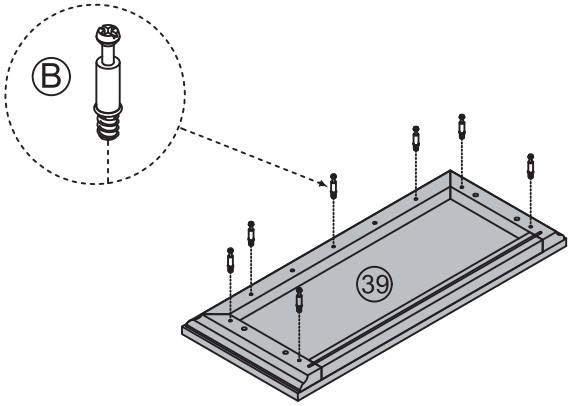


Fix fitting (B) to panel (39).

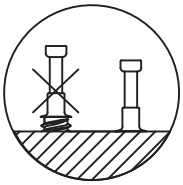


Ⓑ	Ø6.5*35	x 7

Step 45

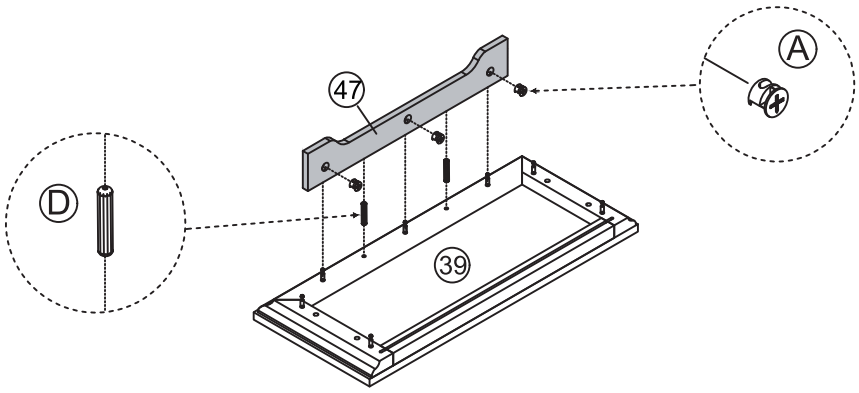

Use wooden dowel (D) to connect panel (47) with panel (39), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

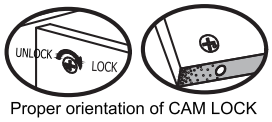

Proper orientation of CAM LOCK

Ⓓ	 ø6*30	x 2
Ⓐ	 Ø15*9.5	x 3

Step 46

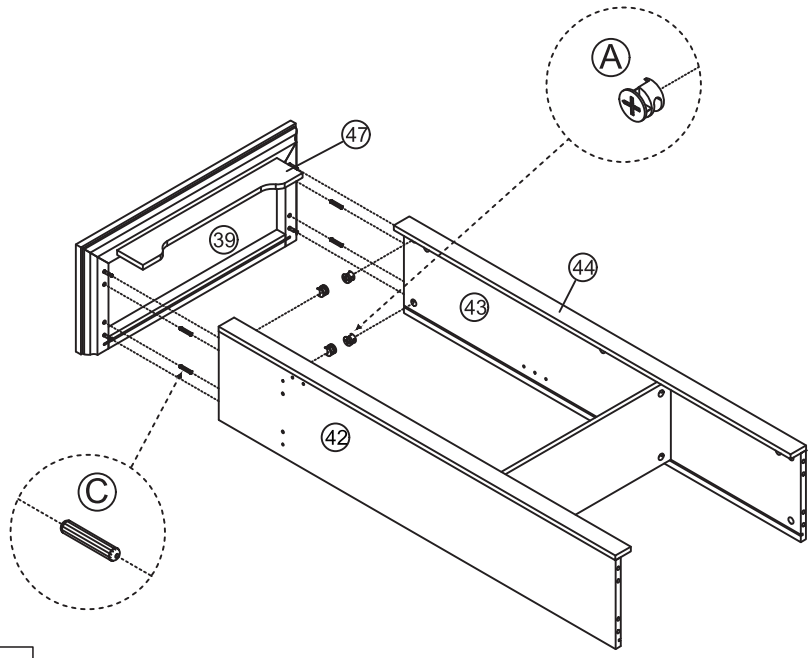

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Use wooden dowel (C) to connect panel (39) with panels (42,43), then turn cam lock (A) clockwise to secure.


Ⓒ	ø8*30	x 4
Ⓐ	Ø15*9.5	x 4

Step 47

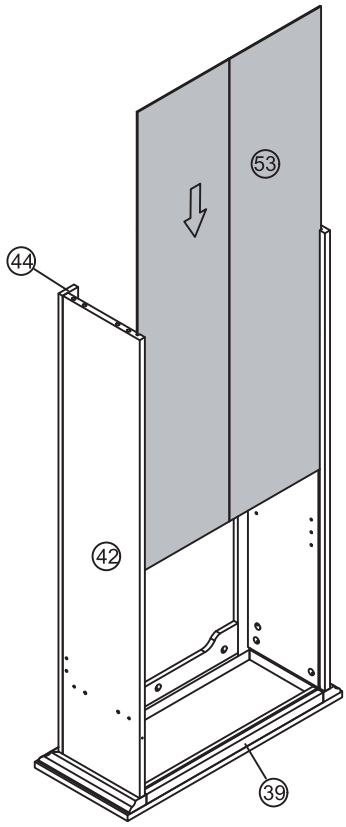


Insert panel (53) into the grooves of panels (42,43).

Step 48

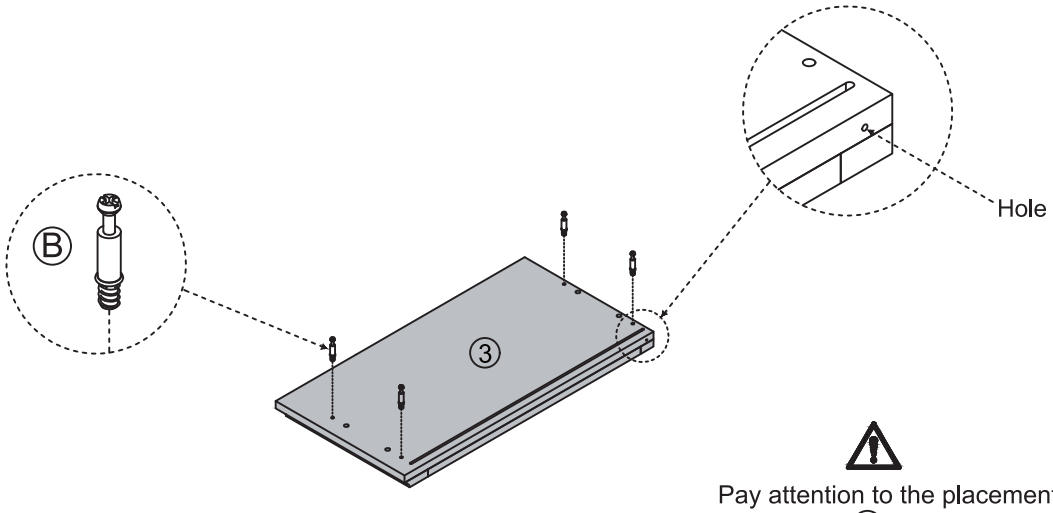

Pay attention to the placement direction of ③ .


Fix fitting (B) to panel (3).

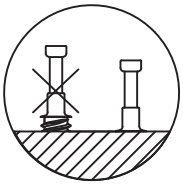

Ⓑ	Ø6.5*35	x 4


Step 49

Pay attention to the installation direction of ③ .

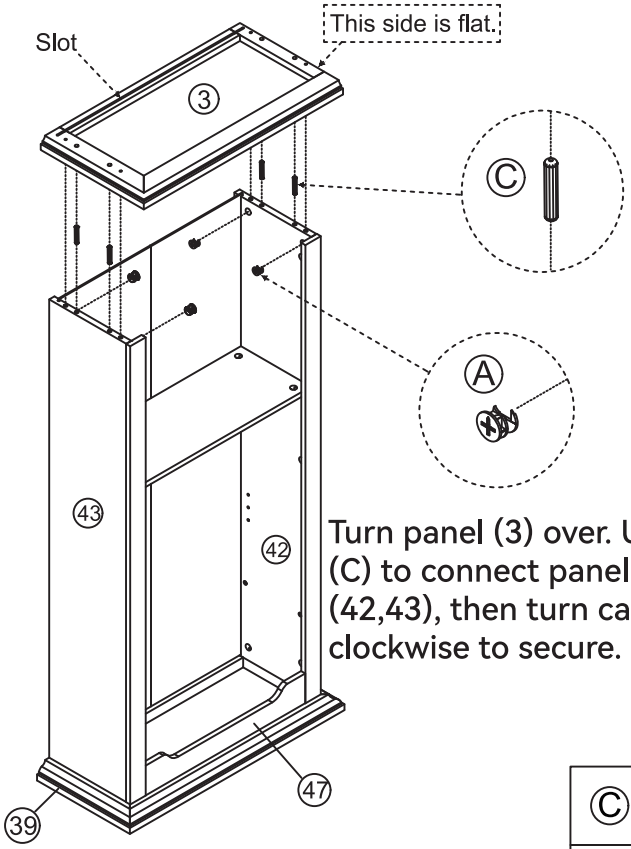

Turn panel (3) over. Use wooden dowel (C) to connect panel (3) with panels (42,43), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

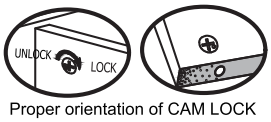

Proper orientation of CAM LOCK


Ⓒ	ø8*30	x 4
Ⓐ	Ø15*9.5	x 4

Step 50

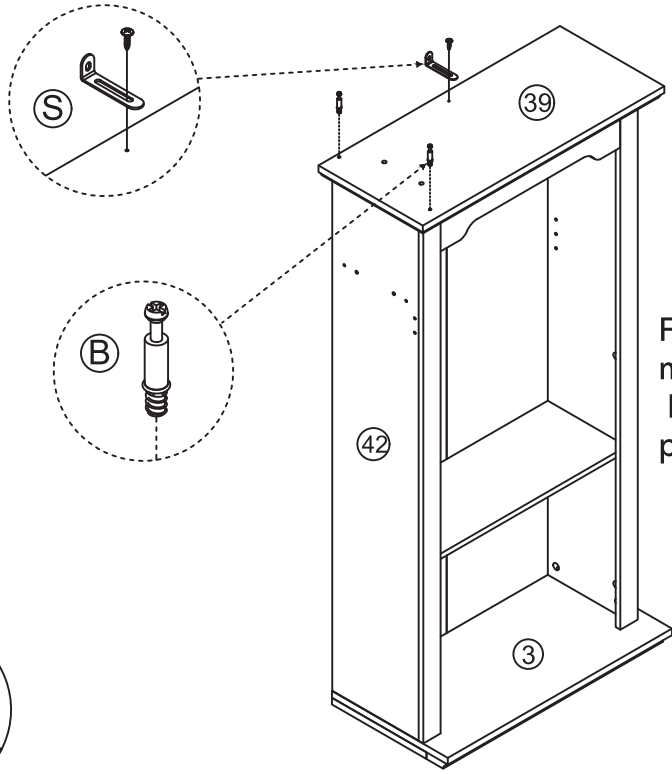


For this step,you need one helper to flip the cabinet .


Fix fitting (B) to panel (39). Use middle screw of fitting (S) to fix L-shaped metal bracket onto panel (39).

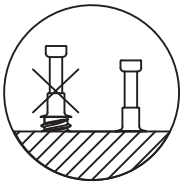

Ⓢ		x1set
Ⓑ	ø6.5*35	x 2

Step 51

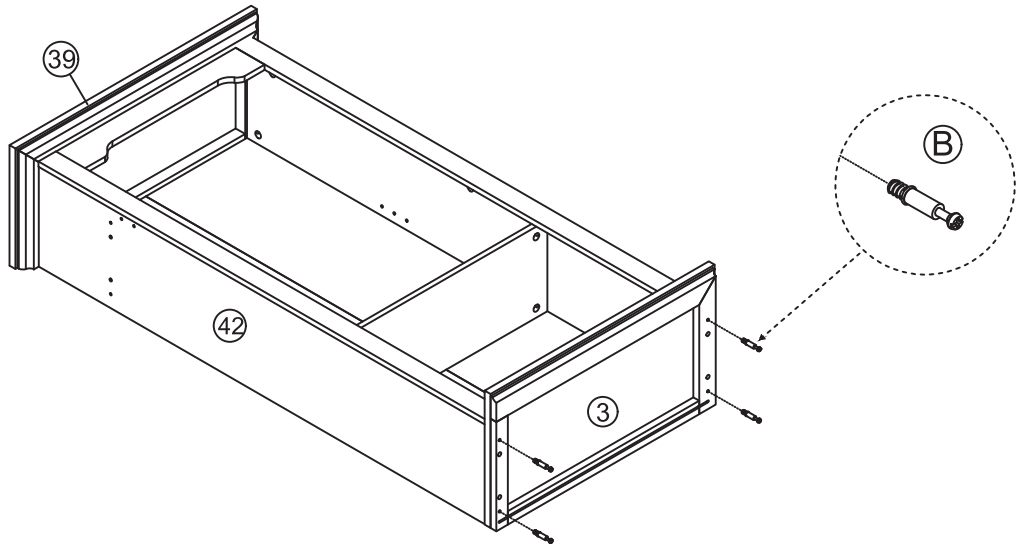

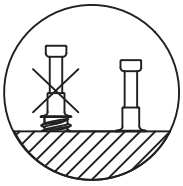


Fix fitting (B) to panel (3).

Ⓑ	ø6.5*35	x 4

Step 52

Two people are needed to collaborate on this assembly step.

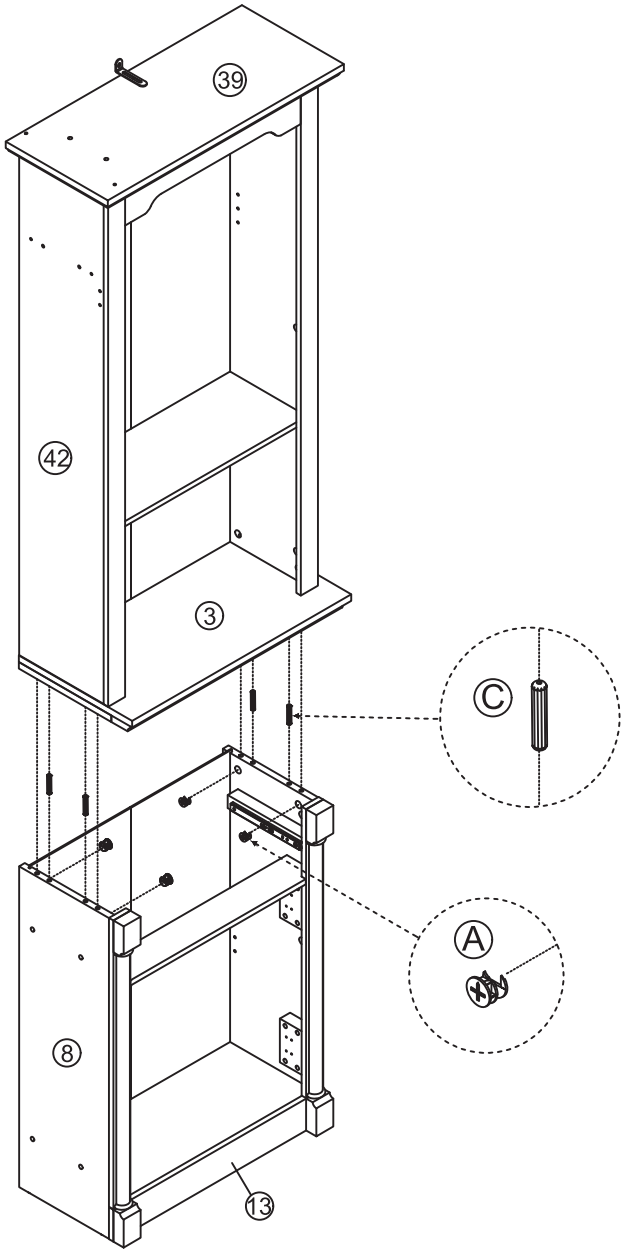

Insert the cam bolt into the hole first, then insert the cam lock and lock it.





Proper orientation of CAM LOCK

Use wooden dowel (C) to connect panel (3) with panels (8,9), then turn cam lock (A) clockwise to secure.


Ⓒ	ø8*30	x 4
Ⓐ	Ø15*9.5	x 4

Step 53

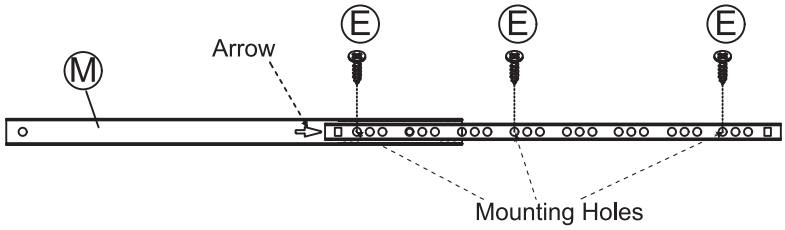

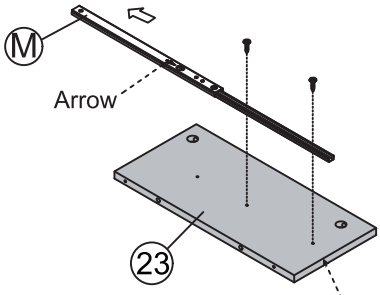


Pay attention to the installation direction of Ⓜ .

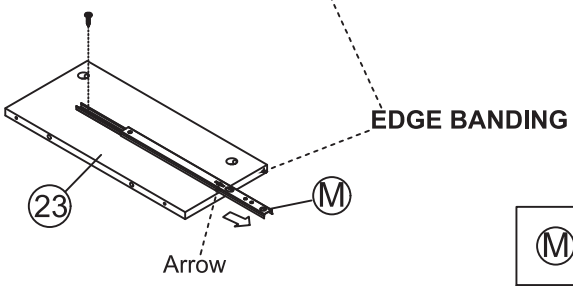


Use screw (E) to fix two-section drawer slide (M) onto panel (23).


Ⓜ	L=300	x 1
Ⓔ	ø3.5*12	x 3

Step 54

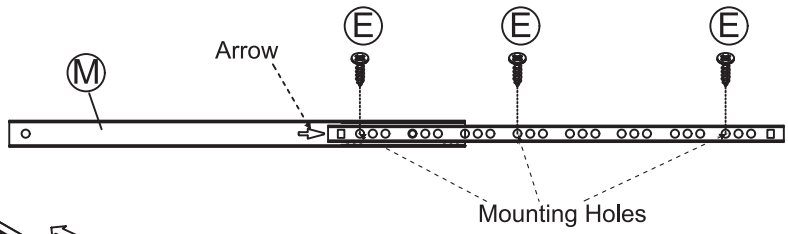

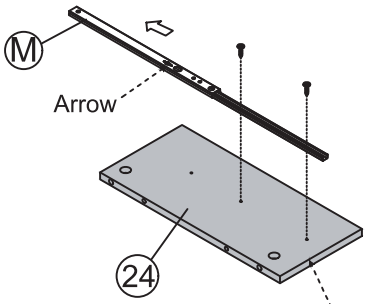


Pay attention to the installation direction of Ⓜ .

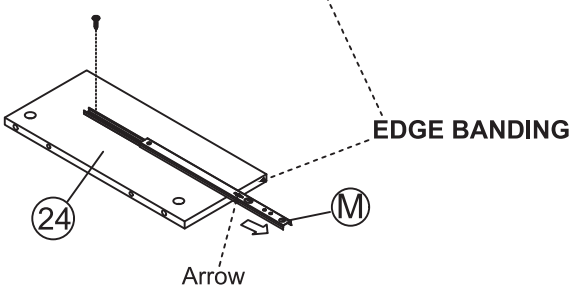


Use screw (E) to fix two-section drawer slide (M) onto panel (24).

Ⓜ	L=300	x 1
Ⓔ	ø3.5*12	x 3

Step 55

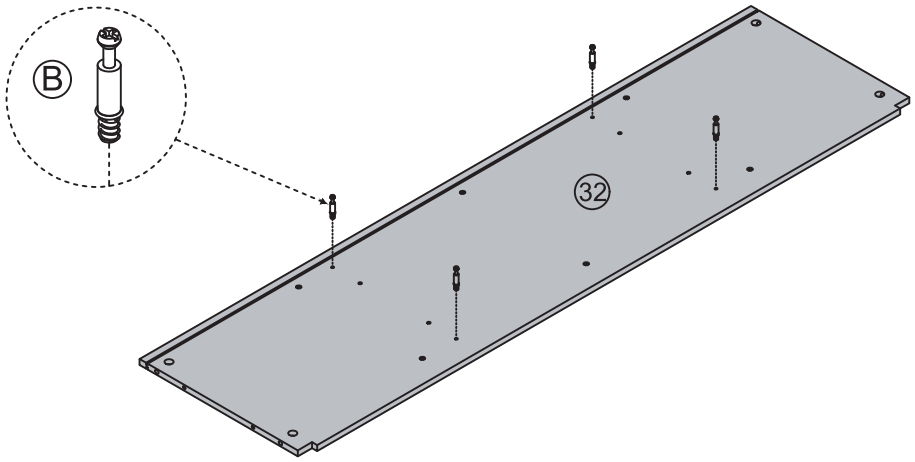


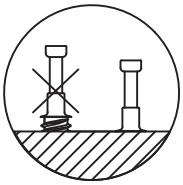


Fix fitting (B) to panel (32).

B	 Ø6.5*35	x 4


Step 56

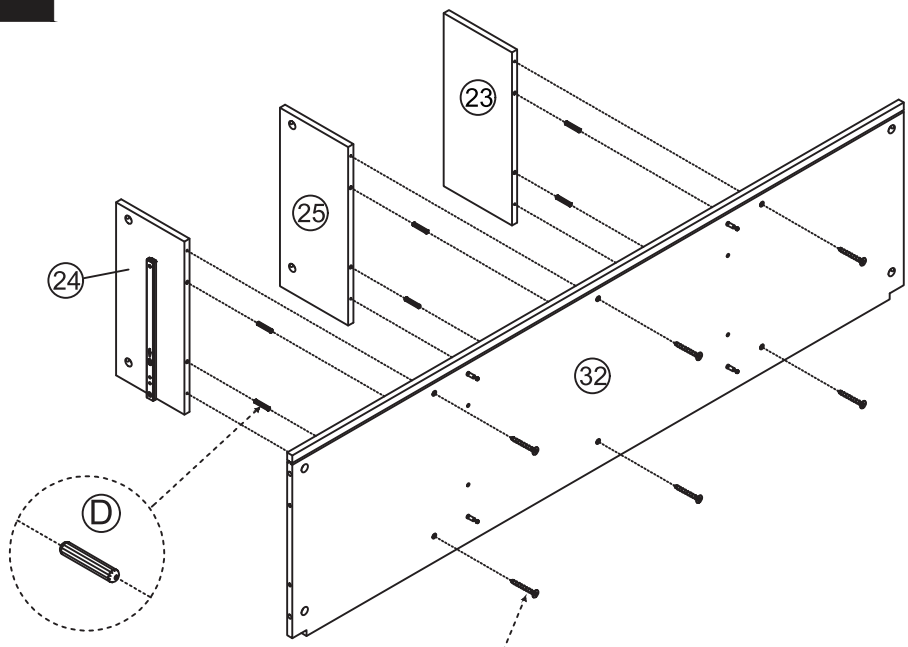


Use wooden dowel (D) to connect panel (32) with panels (23,24,25), then secure with screw (F).

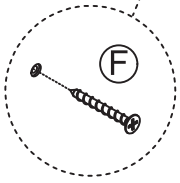


Make sure the screw into the right holes.

F	 ø4*35	x 6
D	 ø6*30	x 6

Step 57

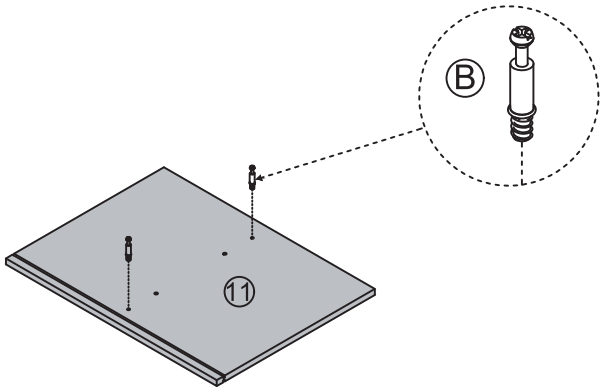


Fix fitting (B) to panel (11).

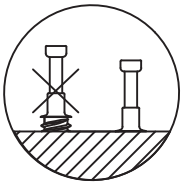


B	Ø6.5*35	x 2

Step 58

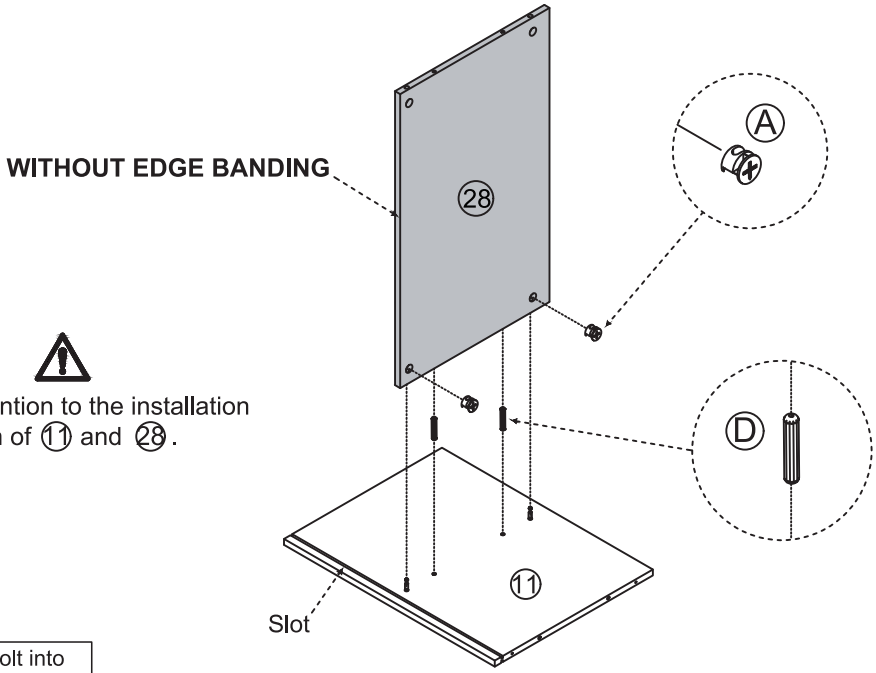

Pay attention to the installation direction of 11 and 28.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

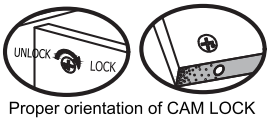


Proper orientation of CAM LOCK


Use wooden dowel (D) to connect panel (28) with panel (11), then turn cam lock (A) clockwise to secure.

D	ø6*30	x 2
A	Ø15*9.5	x 2

Step 59

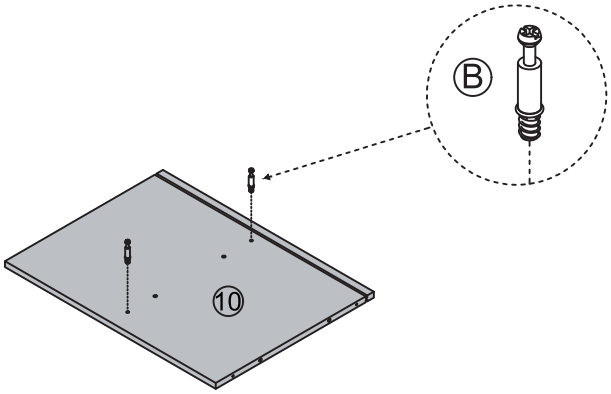


Fix fitting (B) to panel (10).

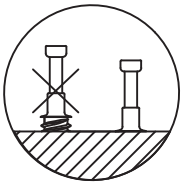

Ⓑ	Ø6.5*35	x 2

Step 60

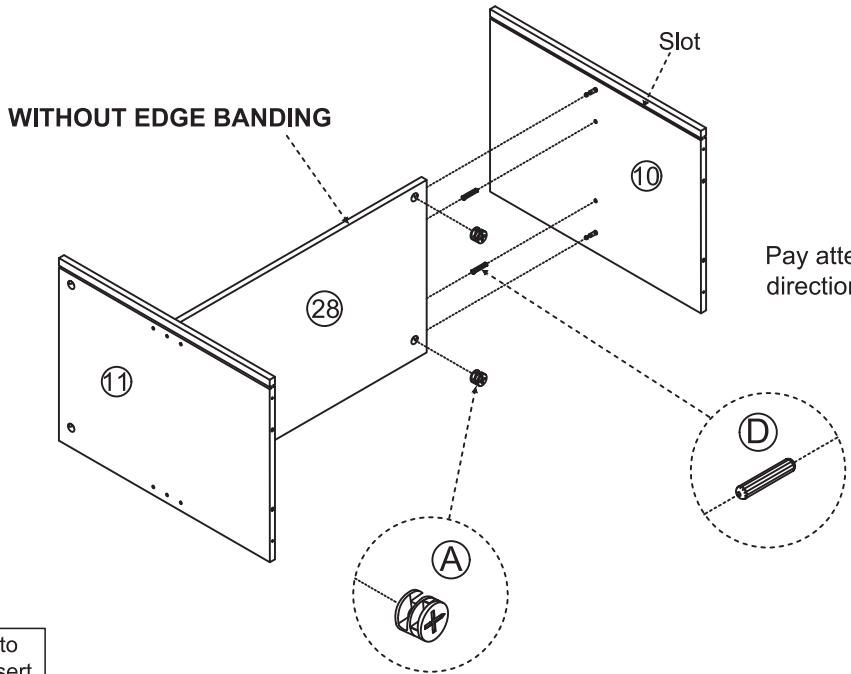

Pay attention to the installation direction of ⑩ .

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Use wooden dowel (D) to connect panel (10) with panel (28), then turn cam lock (A) clockwise to secure.

Ⓓ	ø6*30	x 2
Ⓐ	Ø15*9.5	x 2

Step 61

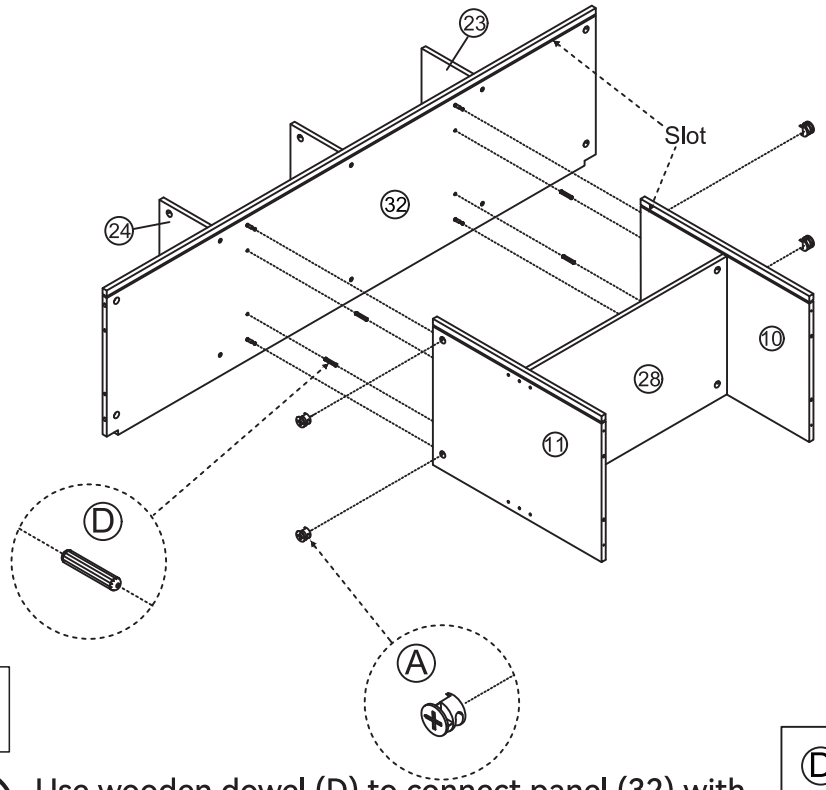

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Use wooden dowel (D) to connect panel (32) with panels (10,11), then turn cam lock (A) clockwise to secure.


Ⓓ	Ø6*30	x 4
Ⓐ	Ø15*9.5	x 4


Step 62

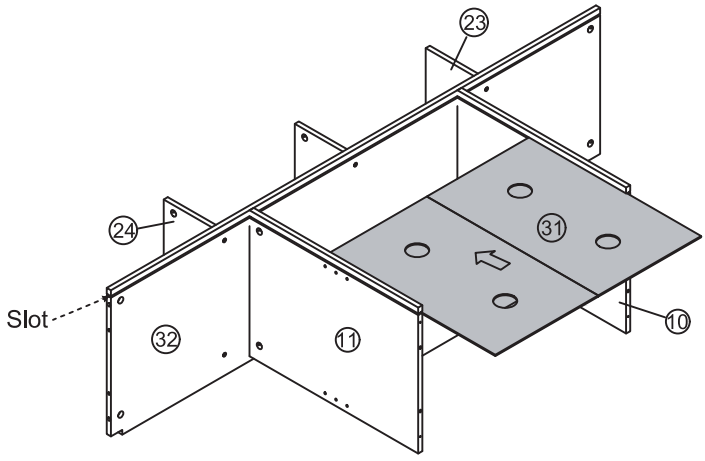

Insert panel (31) into the grooves of panels (10,11,32).

Step 63

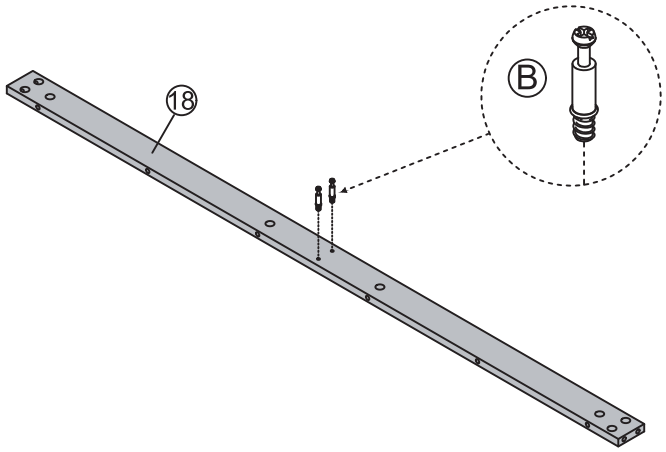

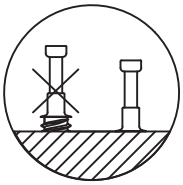


Fix fitting (B) to panel (18).

B	 Ø6.5*35	x 2

Step 64



Pay attention to the installation direction of 18 and 20.

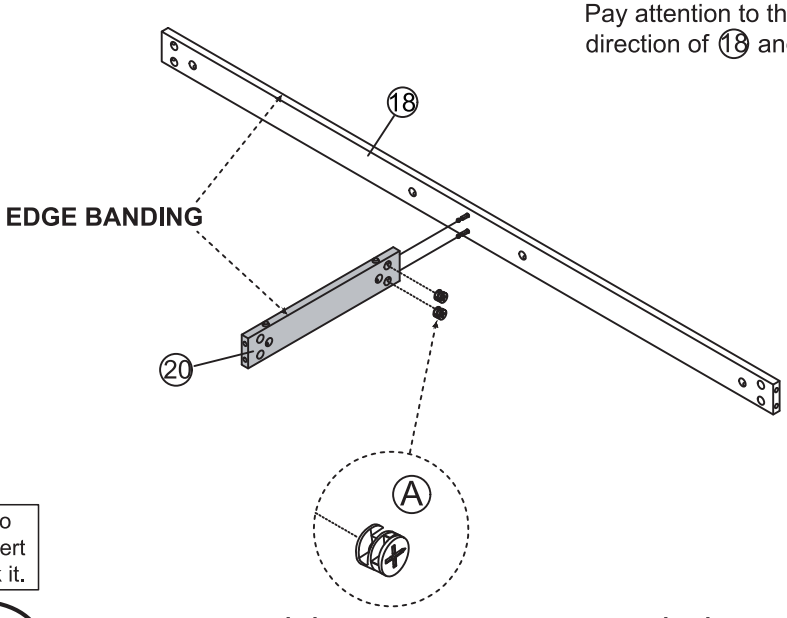

Insert the cam bolt into the hole first, then insert the cam lock and lock it.





Proper orientation of CAM LOCK

Turn cam lock (A) clockwise to fix panel (20) onto panel (18).

A	 Ø15*9.5	x 2

Step 65

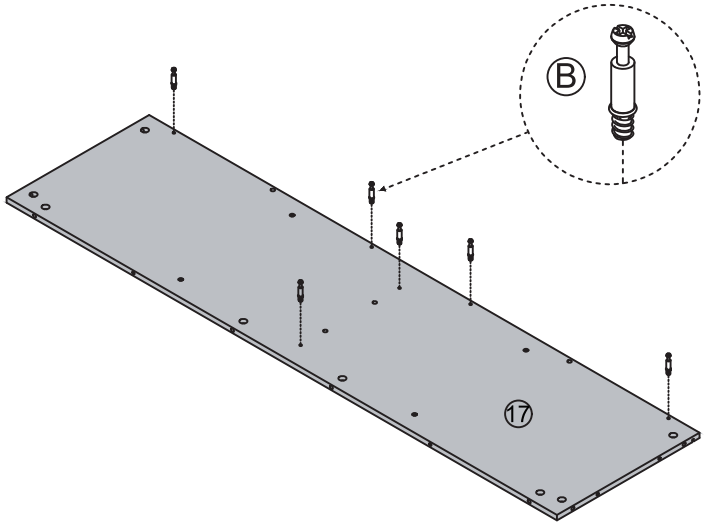

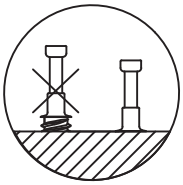


Fix fitting (B) to panel (17).


B	Ø6.5*35	x6

Step 66

Pay attention to the installation direction of 17 、18 and 20 .

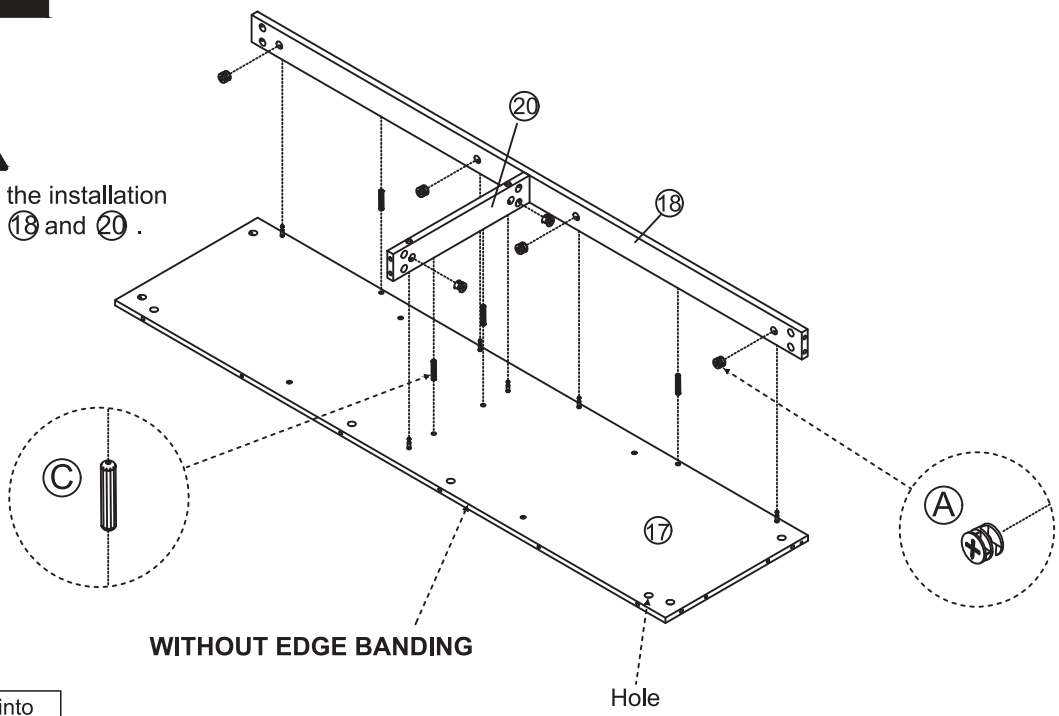

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

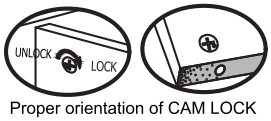



Proper orientation of CAM LOCK

Use wooden dowel (C) to connect panels (18,20) with panel (17), then turn cam lock (A) clockwise to secure.

C	Ø8*30	x 4
A	Ø15*9.5	x 6

Step 67

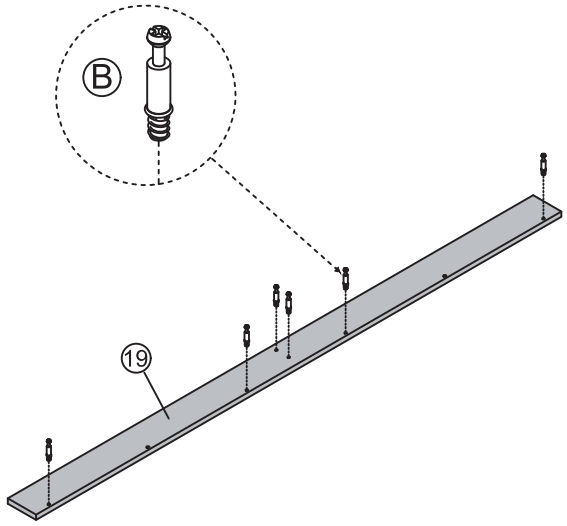


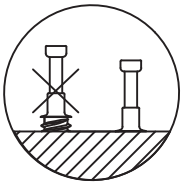


Fix fitting (B) to panel (19).

B	 Ø6.5*35	x6

Step 68

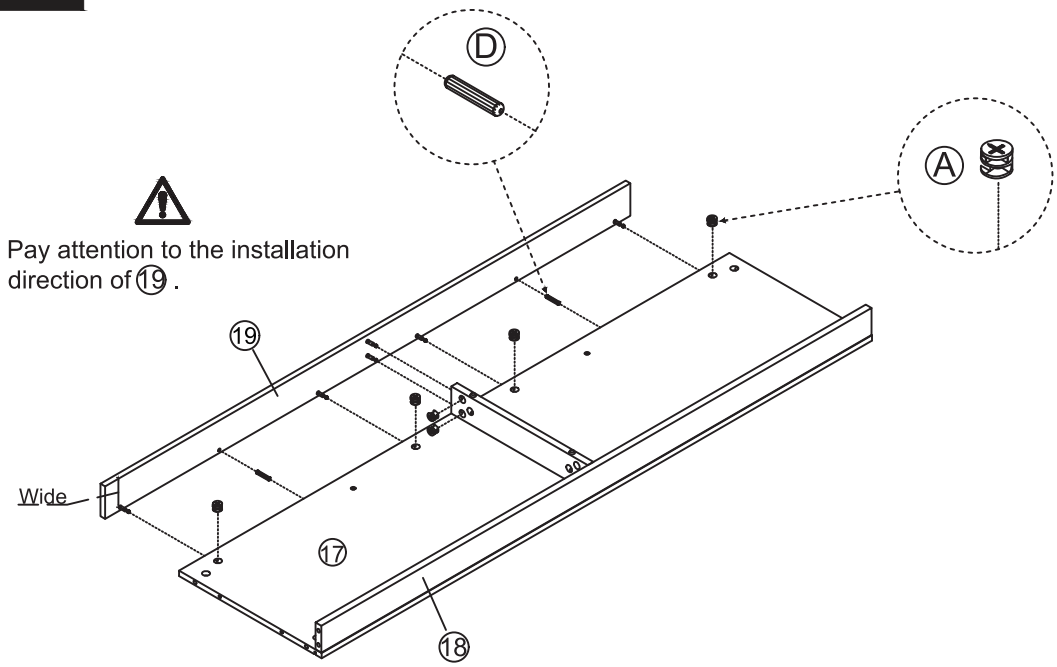

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

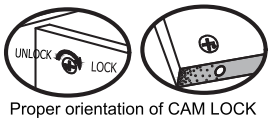


Proper orientation of CAM LOCK

Use wooden dowel (D) to connect panel (19) with panels (17,20), then turn cam lock (A) clockwise to secure.

D	 ø6*30	x 2
A	 Ø15*9.5	x 6


Step 69

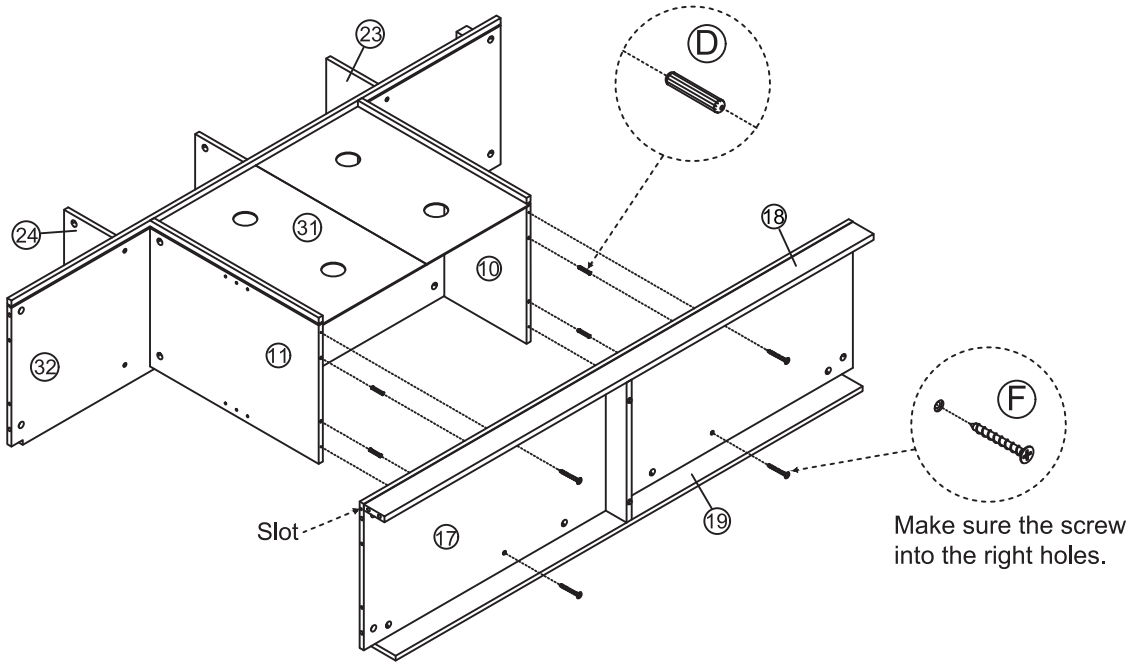

Align panel (31) with the groove on panel (17). Use wooden dowel (D) to connect panels (17) with panels (10,11,31), then secure with screw (F).


F	ø4*35	x 4
D	ø6*30	x 4

Step 70

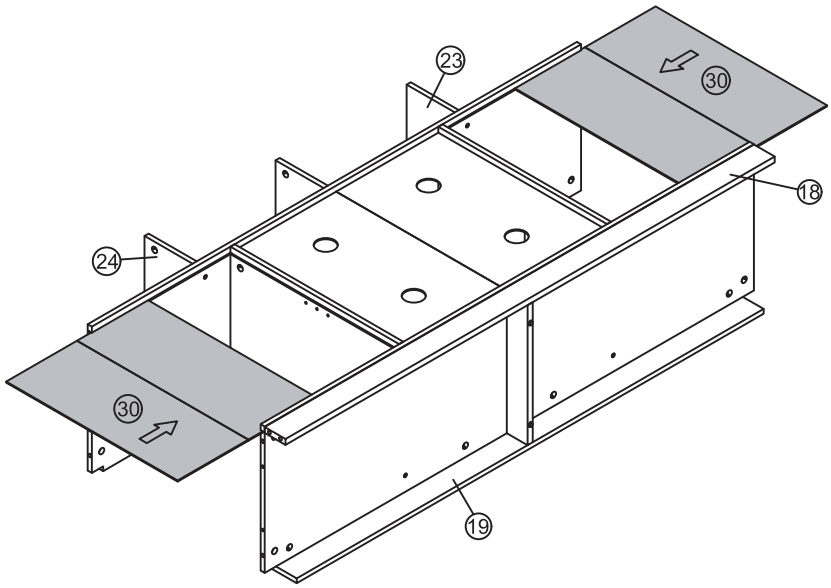


Insert panel (30) into the grooves of panels (10,11,17,32).

Step 71

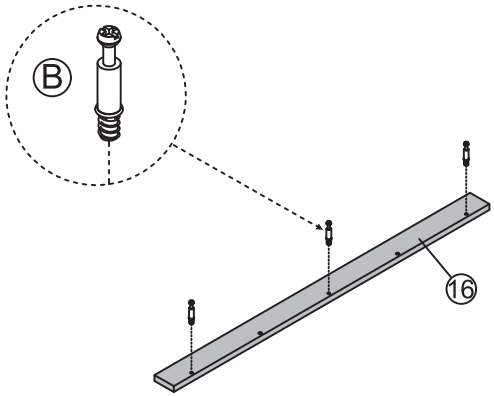


Fix fitting (B) to panel (16).

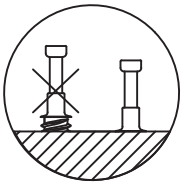

B	Ø6.5*35	x3

Step 72

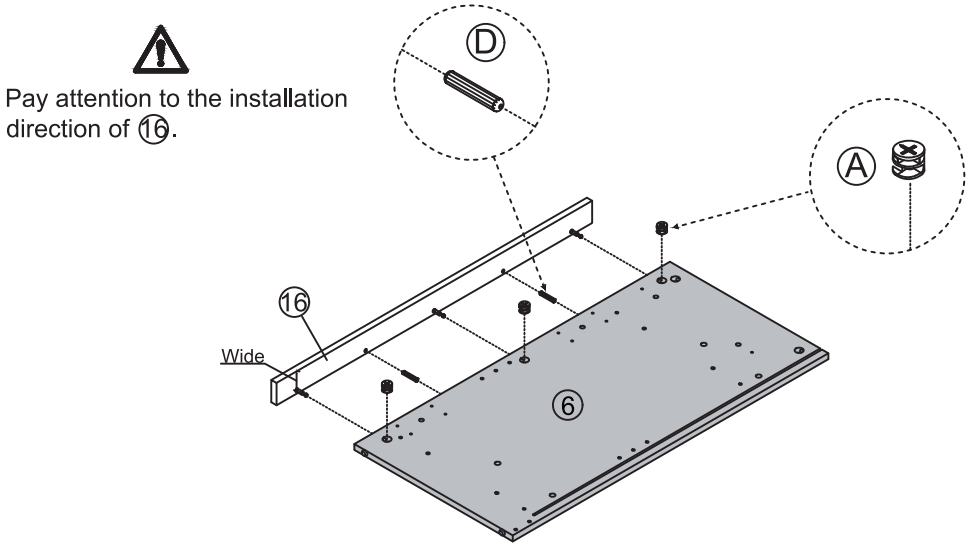

Pay attention to the installation direction of 16.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Use wooden dowel (D) to connect panel (16) with panel (6), then turn cam lock (A) clockwise to secure.

D	ø6*30	x 2
A	Ø15*9.5	x 3

Step 73

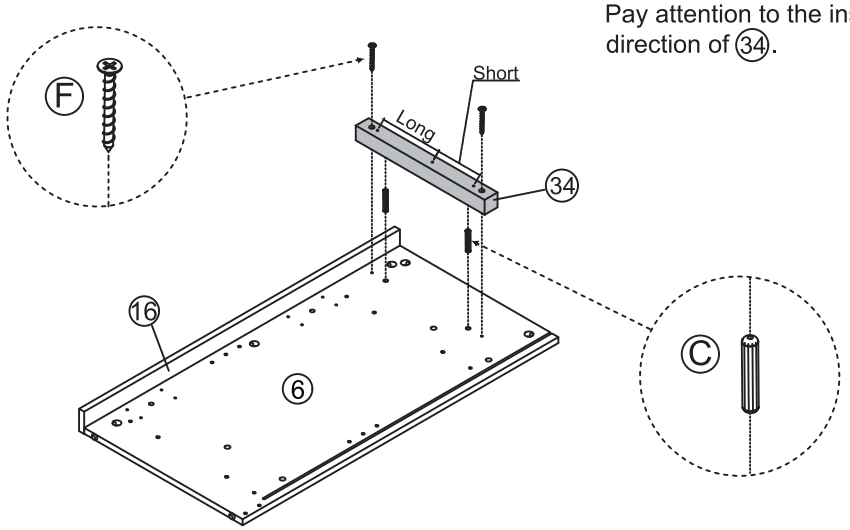



Pay attention to the installation direction of 34.

Use wooden dowel (C) to connect panel (34) with panel (6), then secure with screw (F).

F	ø4*35	x 2
C	ø8*30	x 2


Step 74

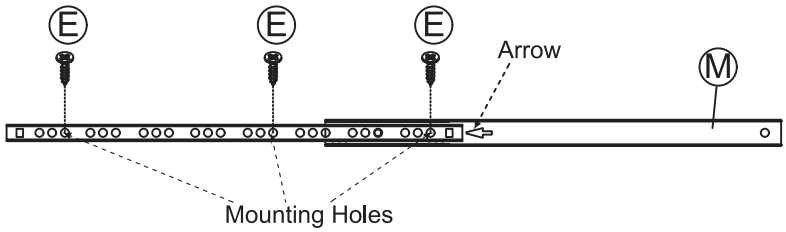

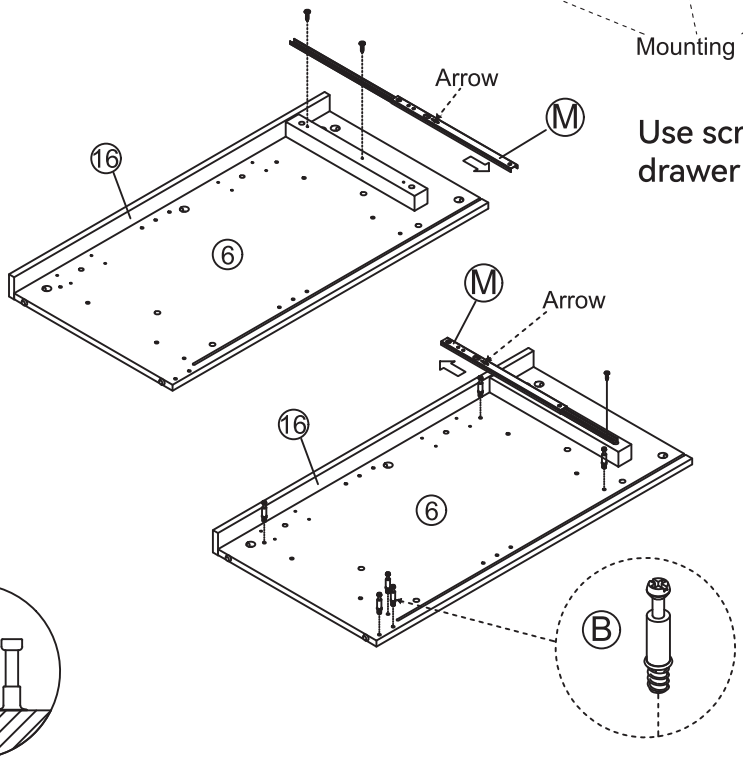

Use screw (E) to fix two-section drawer slide (M) onto panel (34).


Pay attention to the installation direction of M .

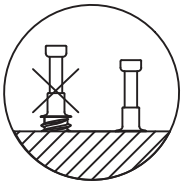

M	L=300	x 1
E	ø3.5*12	x 3
B	Ø6.5*35	x6

Step 75


Pay attention to the installation direction of (36) .

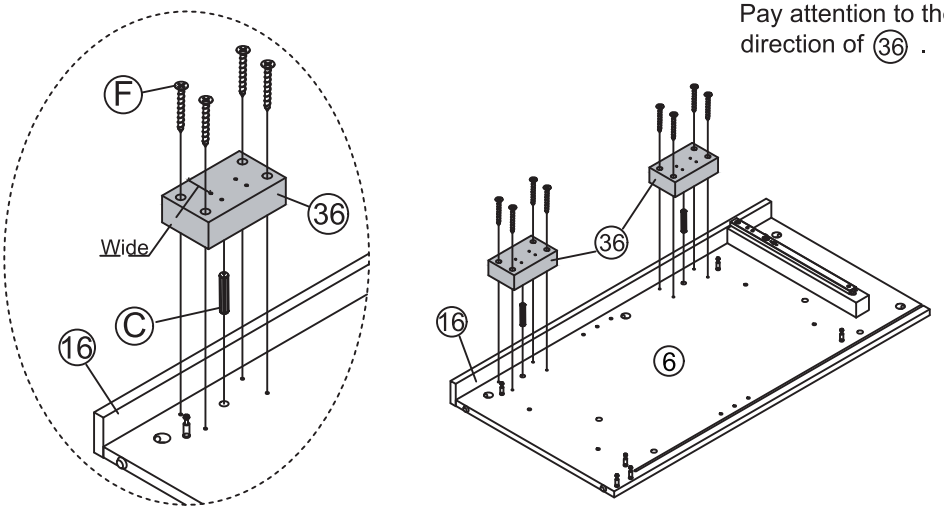


Use wooden dowel (C) to connect panel (36) with panel (6), then secure with screw (F).

F	ø4*35	x 8
C	ø8*30	x 2

Step 76

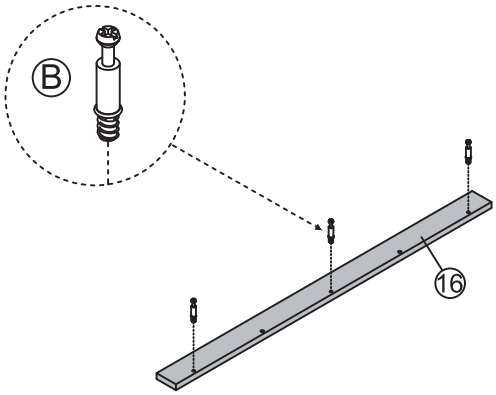


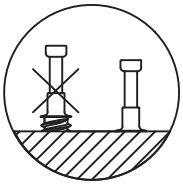

Fix fitting (B) to panel (16).

B	Ø6.5*35	x3

Step 77

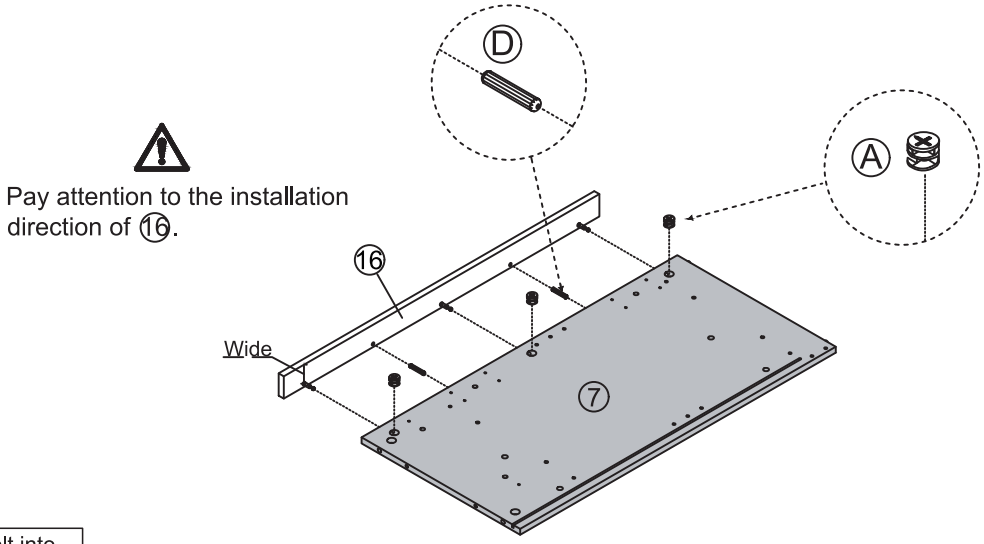

Pay attention to the installation direction of 16.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

Use wooden dowel (D) to connect panel (16) with panel (7), then turn cam lock (A) clockwise to secure.

D	ø6*30	x 2
A	Ø15*9.5	x 3

Step 78

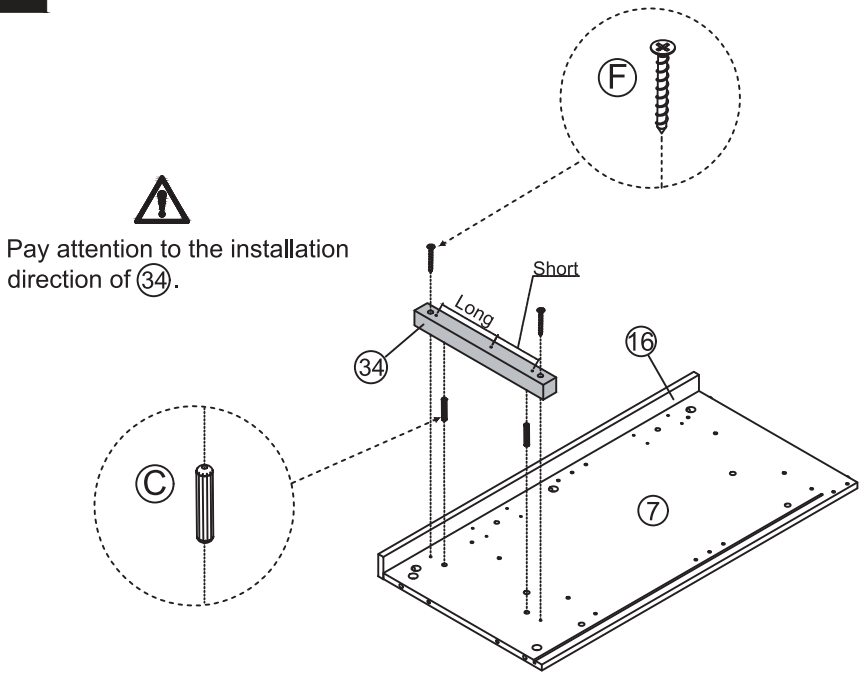



Pay attention to the installation direction of 34.

Use wooden dowel (C) to connect panel (34) with panel (7), then secure with screw (F).


F	ø4*35	x 2
C	ø8*30	x 2


Step 79

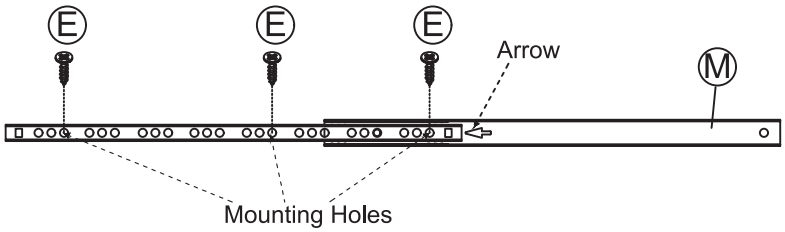

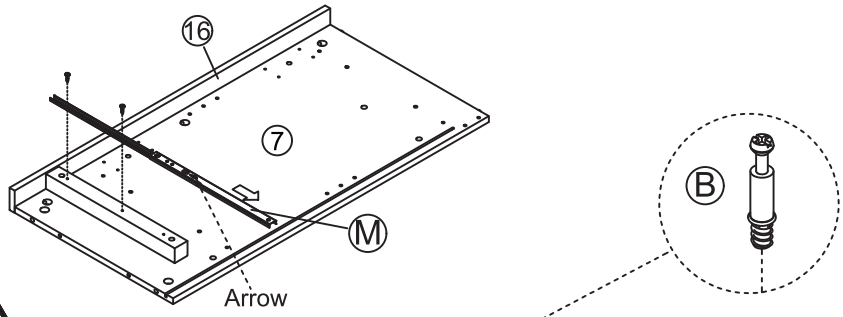

Pay attention to the installation direction of Ⓜ .

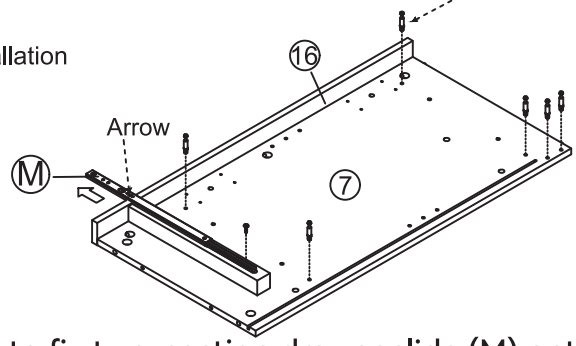


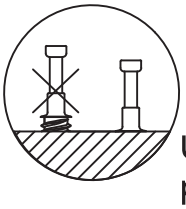


Use screw (E) to fix two-section drawer slide (M) onto panel (34), then fix fitting (B) onto panel (7).

Ⓜ	L=300	x 1
Ⓔ	ø3.5*12	x 3
Ⓑ	Ø6.5*35	x6

Step 80

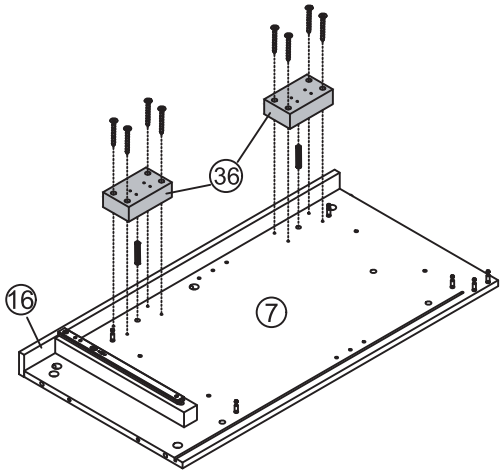

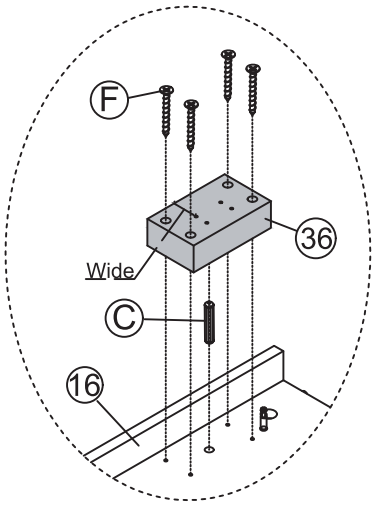


Use wooden dowel (C) to connect panel (36) with panel (7), then secure with screw (F).

Ⓕ	ø4*35	x 8
Ⓒ	ø8*30	x 2

Step 81

Use wooden dowel (D) to connect panels (6,7) with panels (17,32), then turn cam lock (A) clockwise to secure panels (6,7) to panel (17).

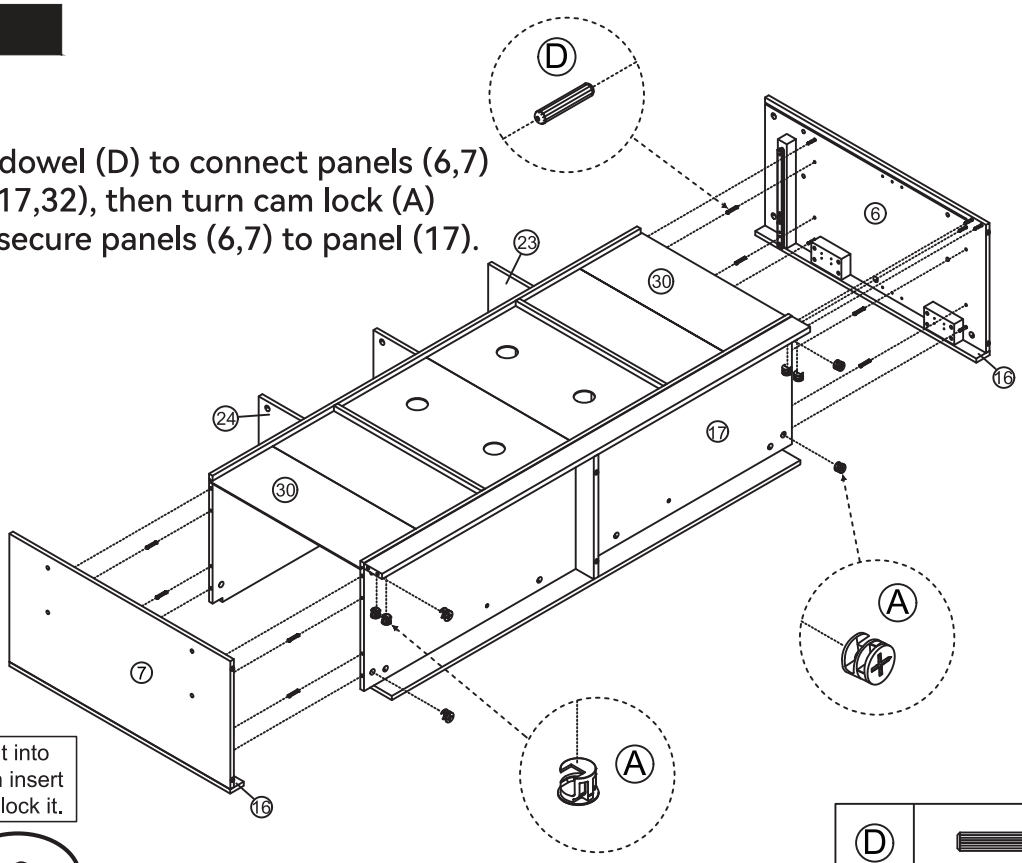


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



Proper orientation of CAM LOCK

D	ø6*30	x 8
A	Ø15*9.5	x 8

Step 82

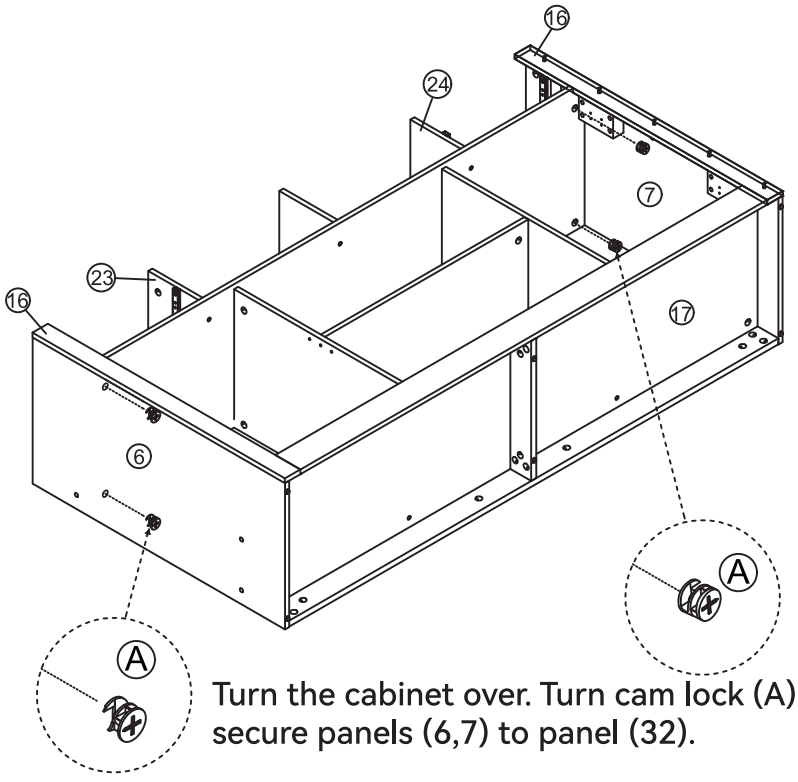

Turn the cabinet over. Turn cam lock (A) clockwise to secure panels (6,7) to panel (32).


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



Proper orientation of CAM LOCK


A	Ø15*9.5	x 4


Step 83

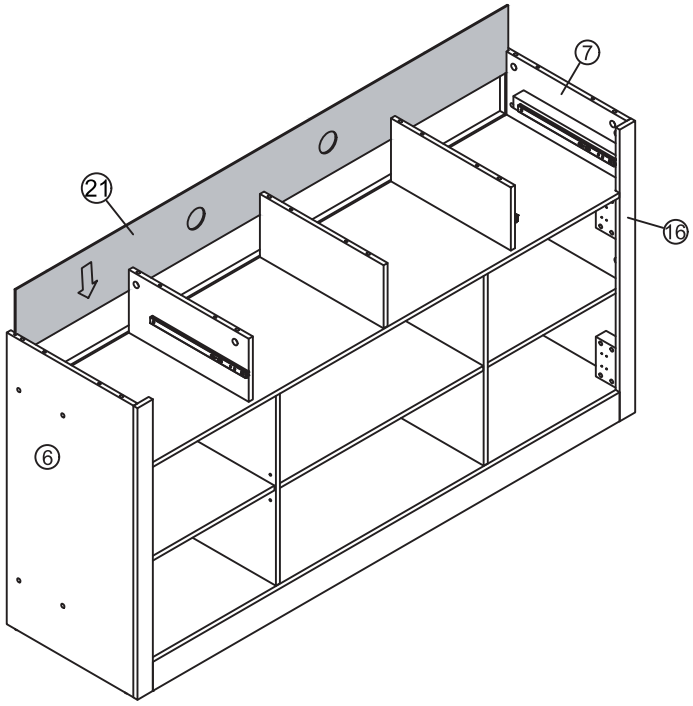

Insert panel (21) into the grooves of panels (6,7,32).

Step 84

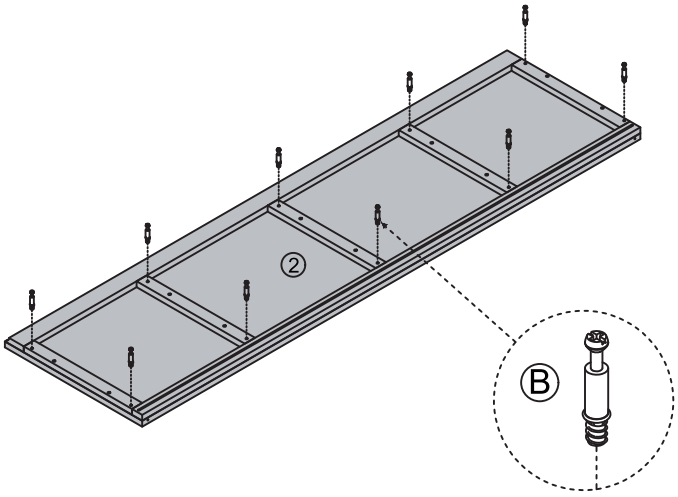


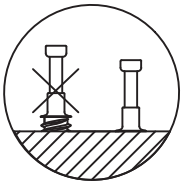

Fix fitting (B) to panel (2).


Ⓑ	 Ø6.5*35	x10

Step 85

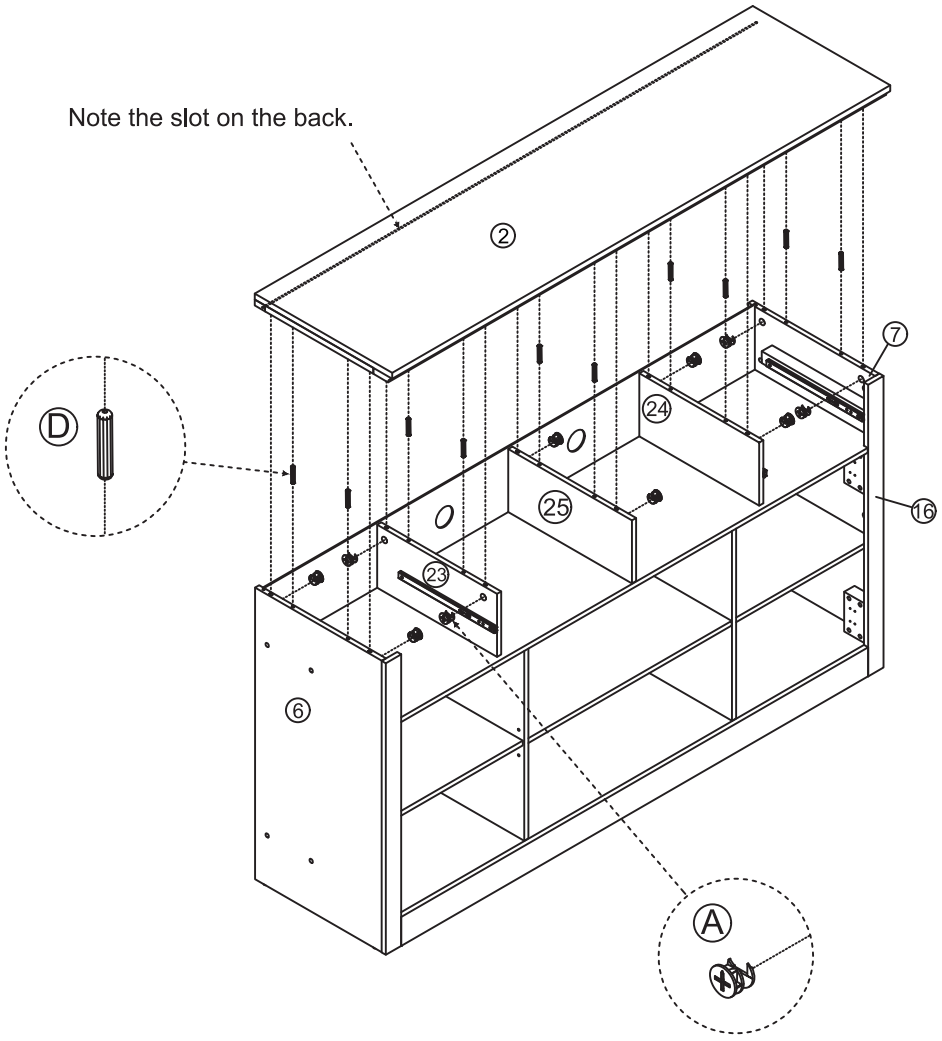

Turn panel (2) over as shown. Align the groove of panel (2) with panel (21). Use wooden dowel (D) to connect panel (2) with panels (6,7,23,24,25), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

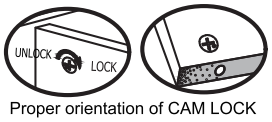

Proper orientation of CAM LOCK

Ⓓ	ø6*30	x10
Ⓐ	Ø15*9.5	x10


Step 86

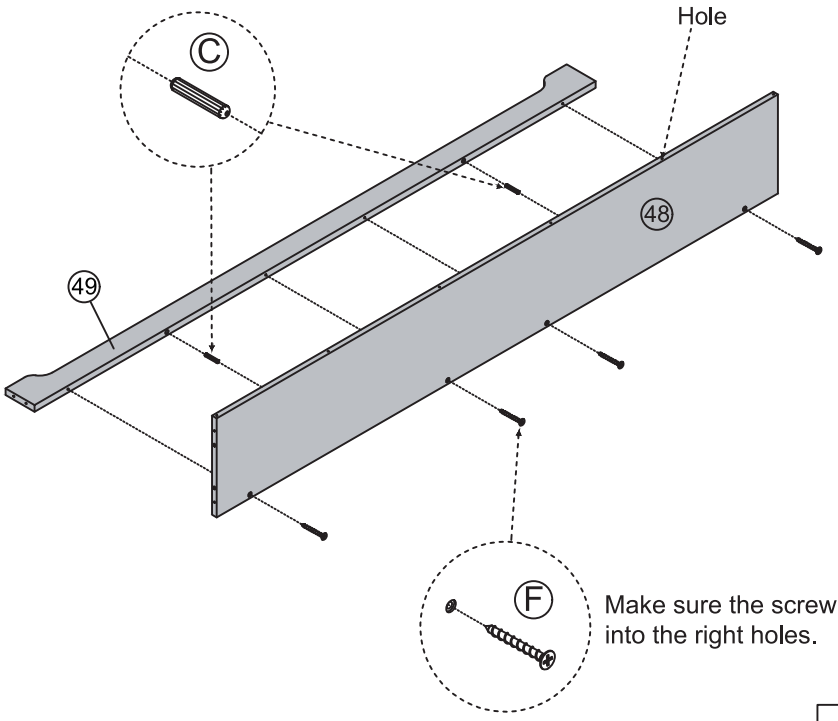

Use wooden dowel (C) to connect panel (48) with panel (49), then secure with screw (F).

F	ø4*35	x 4
C	ø8*30	x 2

Step 87

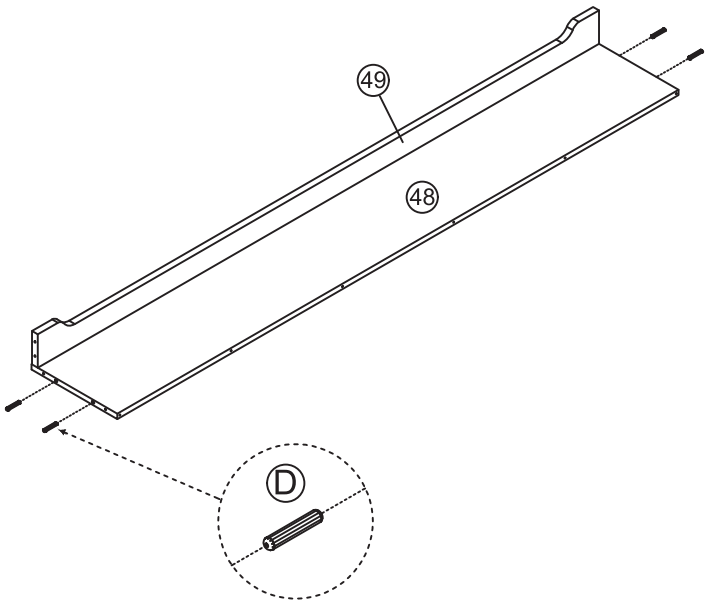


Insert wooden dowel (D) into the corresponding holes of panel (48).

D	ø6*30	x4

Step 88


Two people are needed to collaborate on this assembly step.

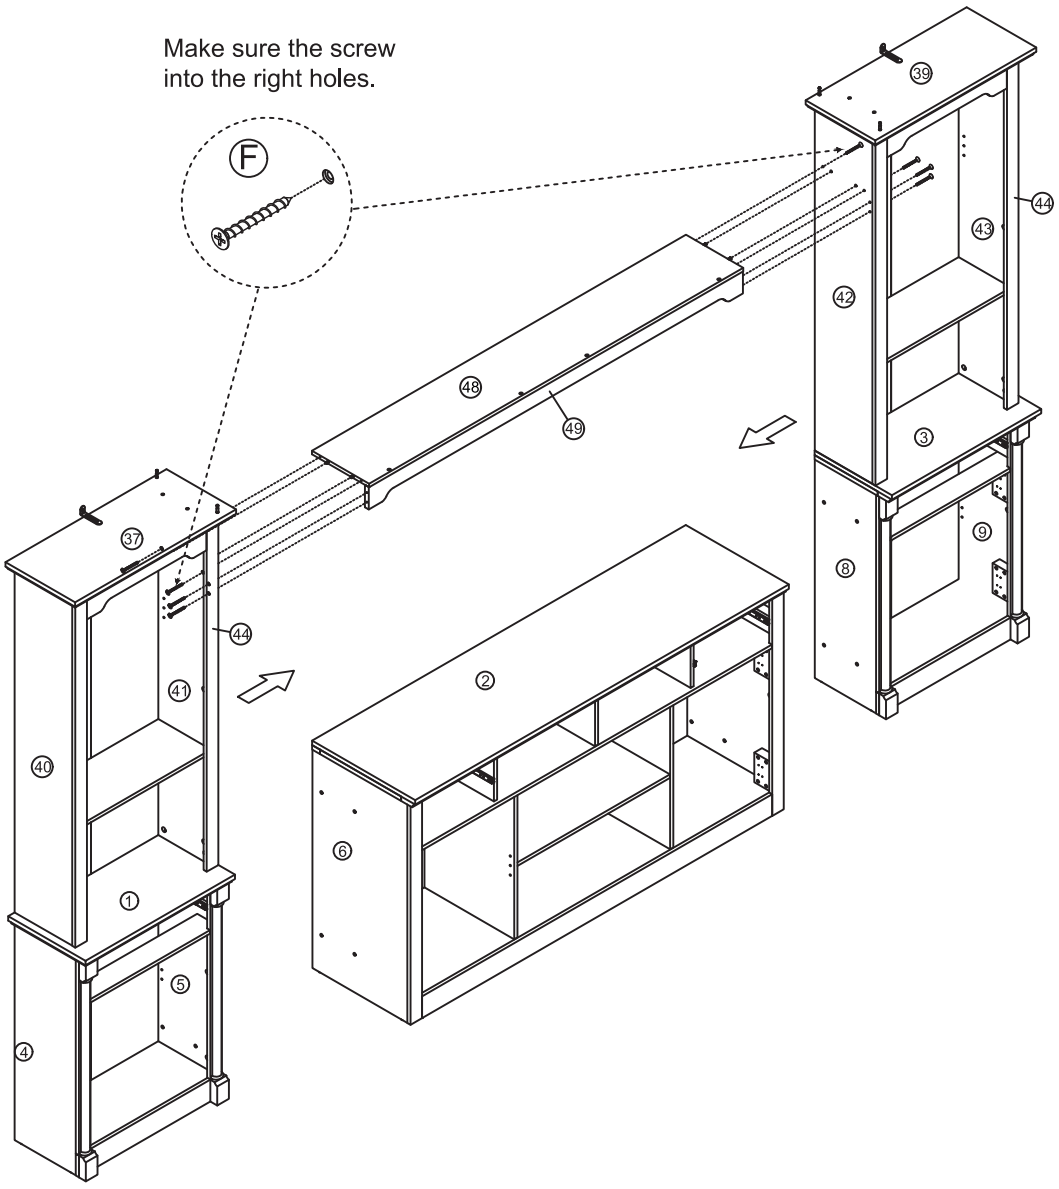

Two people required. Connect panels (48,49) with panels (41,42) and secure with screw (F).

Ⓕ	ø4*35	x 8

Step 89

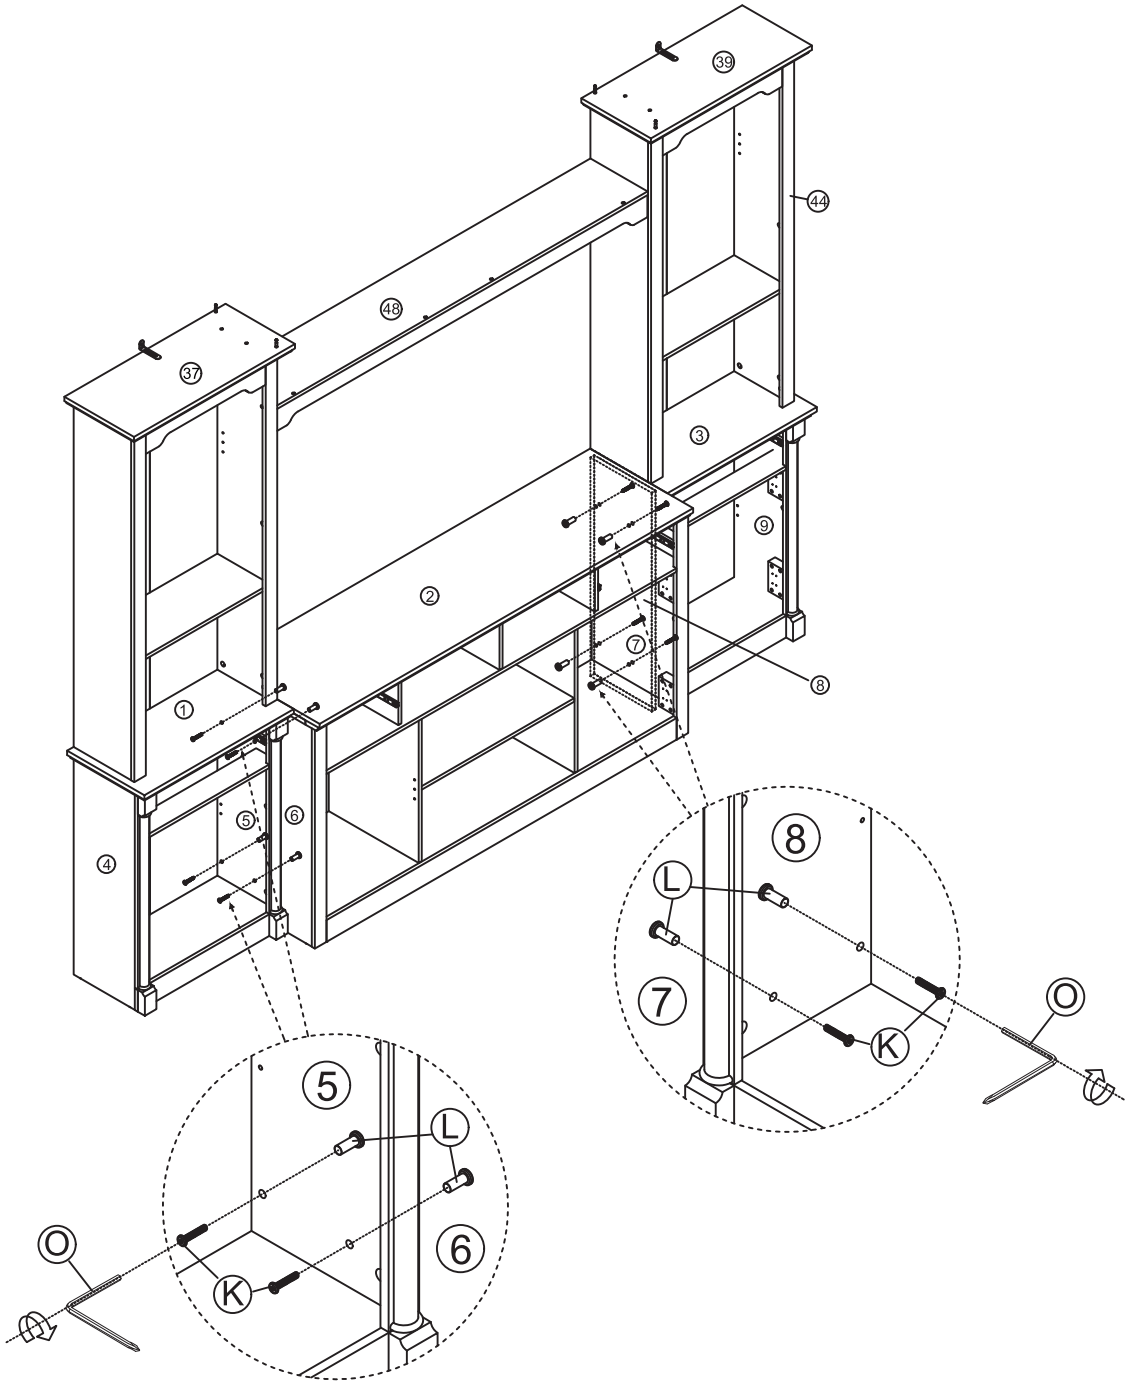


Insert fitting (L) through the hole in panel (6). Insert screw (K) through the corresponding hole in panel (5), then tighten clockwise with wrench (O) to secure panels (5) and (6).
Insert fitting (L) through the hole in panel (7). Insert screw (K) through the corresponding hole in panel (8), then tighten clockwise with wrench (O) to secure panels (7) and (8).


Ⓞ	M4*100(60)	x 1
Ⓛ	ø8*20	x 8
Ⓚ	M6*20	x 8

Step 90


Fix fitting (B) to panel (52). Connect panel (51) with panel (52) and turn cam lock (A) clockwise to secure.

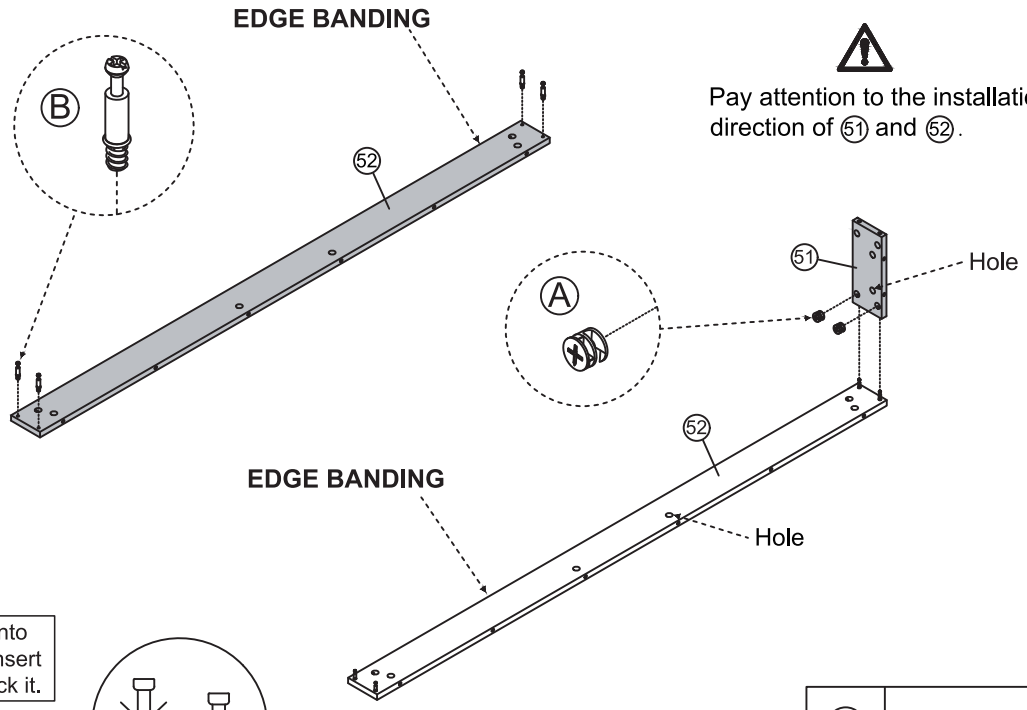

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

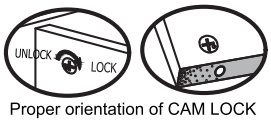


Proper orientation of CAM LOCK

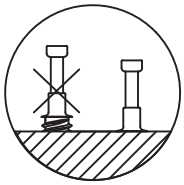

B	Ø6.5*35	x4
A	Ø15*9.5	x2

Step 91

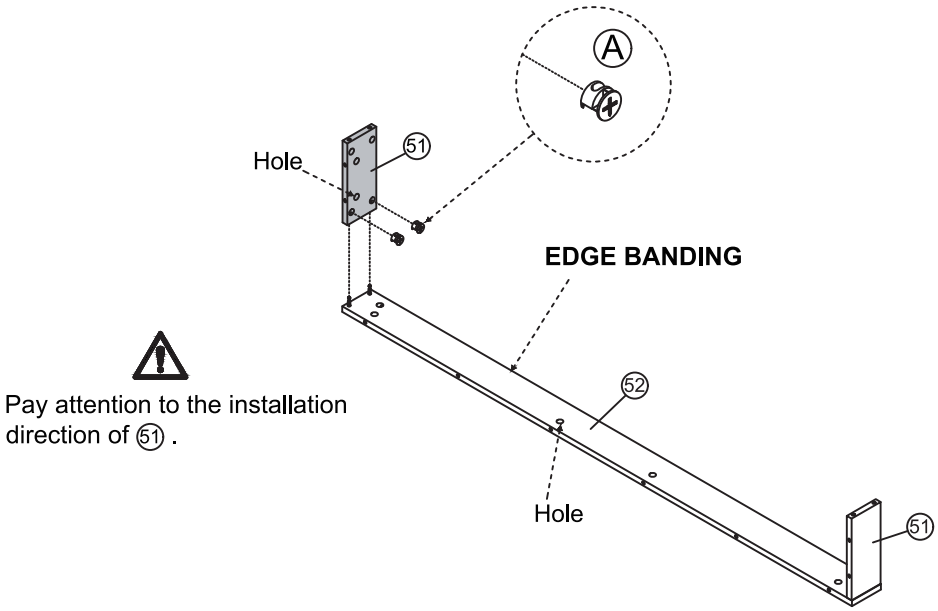

Pay attention to the installation direction of 51 .

Insert the cam bolt into the hole first, then insert the cam lock and lock it.





Proper orientation of CAM LOCK

Connect panel (51) with panel (52) and turn cam lock (A) clockwise to secure.

A	Ø15*9.5	x 2

Step 92

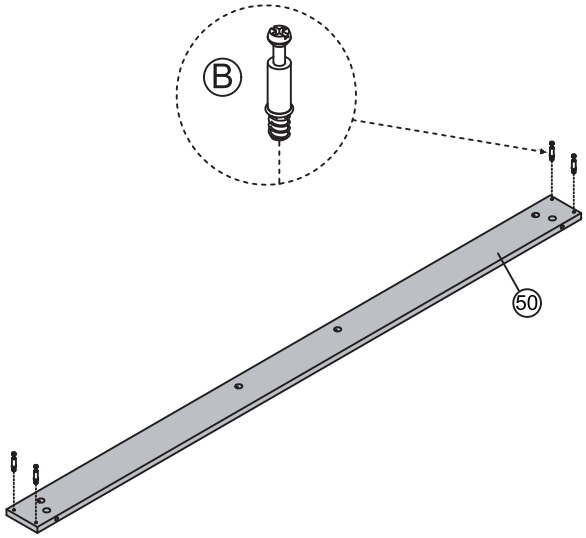


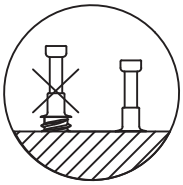

Fix fitting (B) to panel (50).


B	Ø6.5*35	x4

Step 93

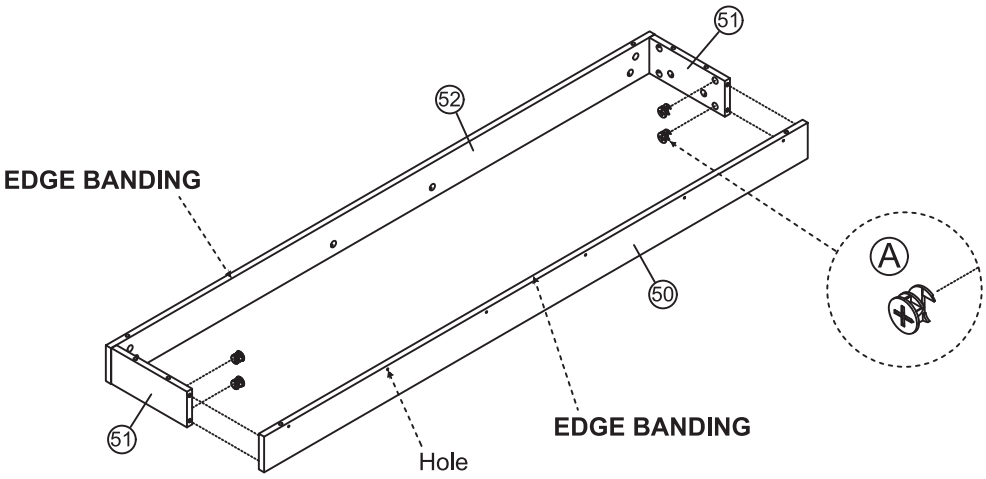

Pay attention to the installation direction of 50 .

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

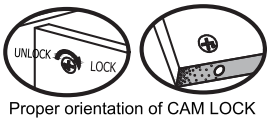



Proper orientation of CAM LOCK

Connect panel (50) with panel (51) and turn cam lock (A) clockwise to secure.

A	 Ø15*9.5	x 4

Step 94

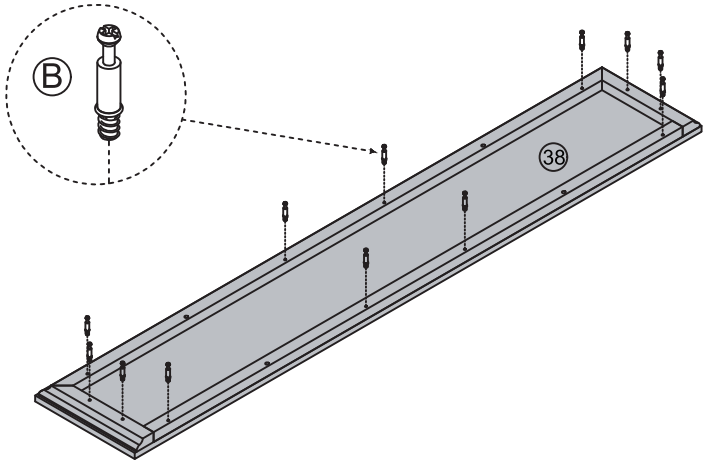


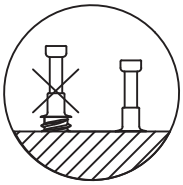


Fix fitting (B) to panel (38).

Ⓑ	 Ø6.5*35	x12

Step 95

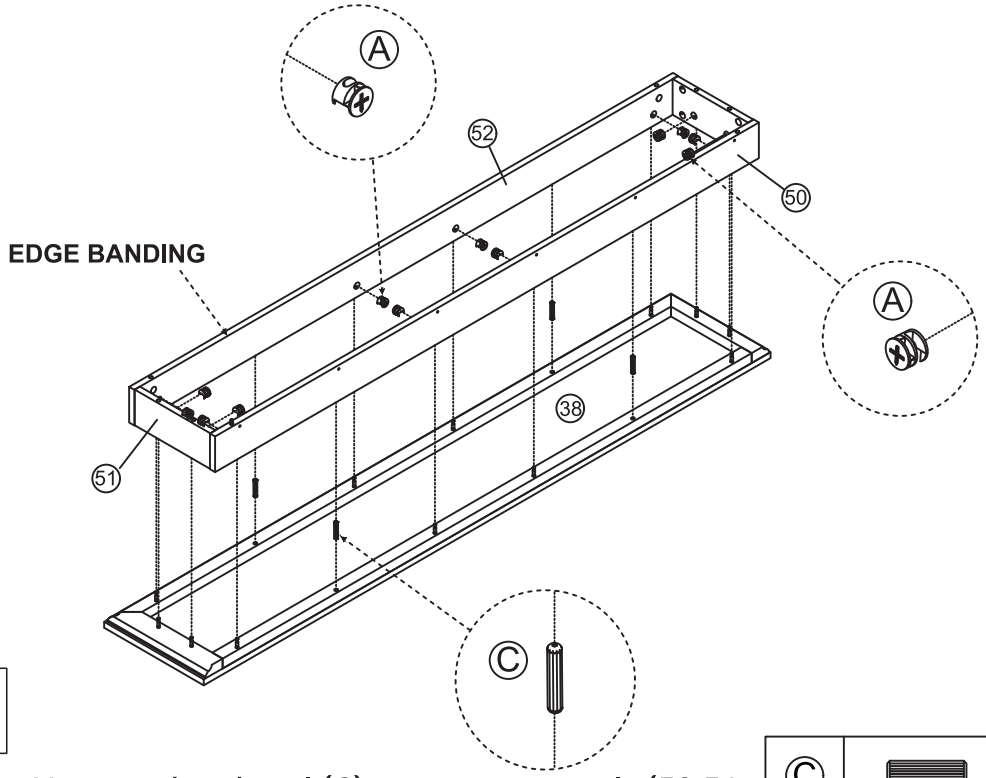

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

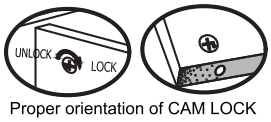


Proper orientation of CAM LOCK

Use wooden dowel (C) to connect panels (50,51, 52) with panel (38), then turn cam lock (A) clockwise to secure.

Ⓒ	ø8*30	x 4
Ⓐ	 Ø15*9.5	x12

Step 96

Two people are needed to collaborate on this assembly step.

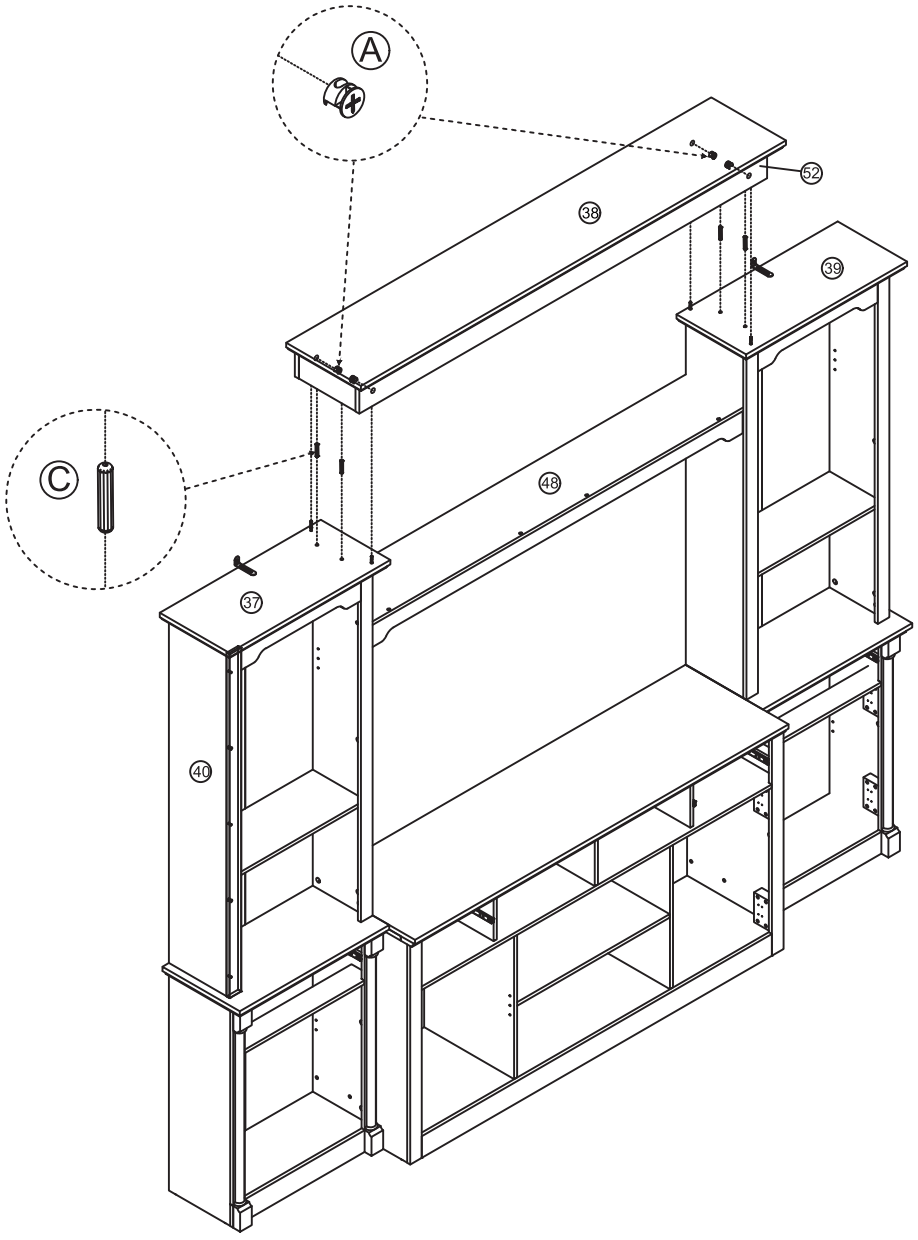

Use wooden dowel (C) to connect panels (50,51,52) with panels (37,39), then turn cam lock (A) clockwise to secure.


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



Proper orientation of CAM LOCK

Ⓒ	ø8*30	x 4
Ⓐ	Ø15*9.5	x 4

Step 97

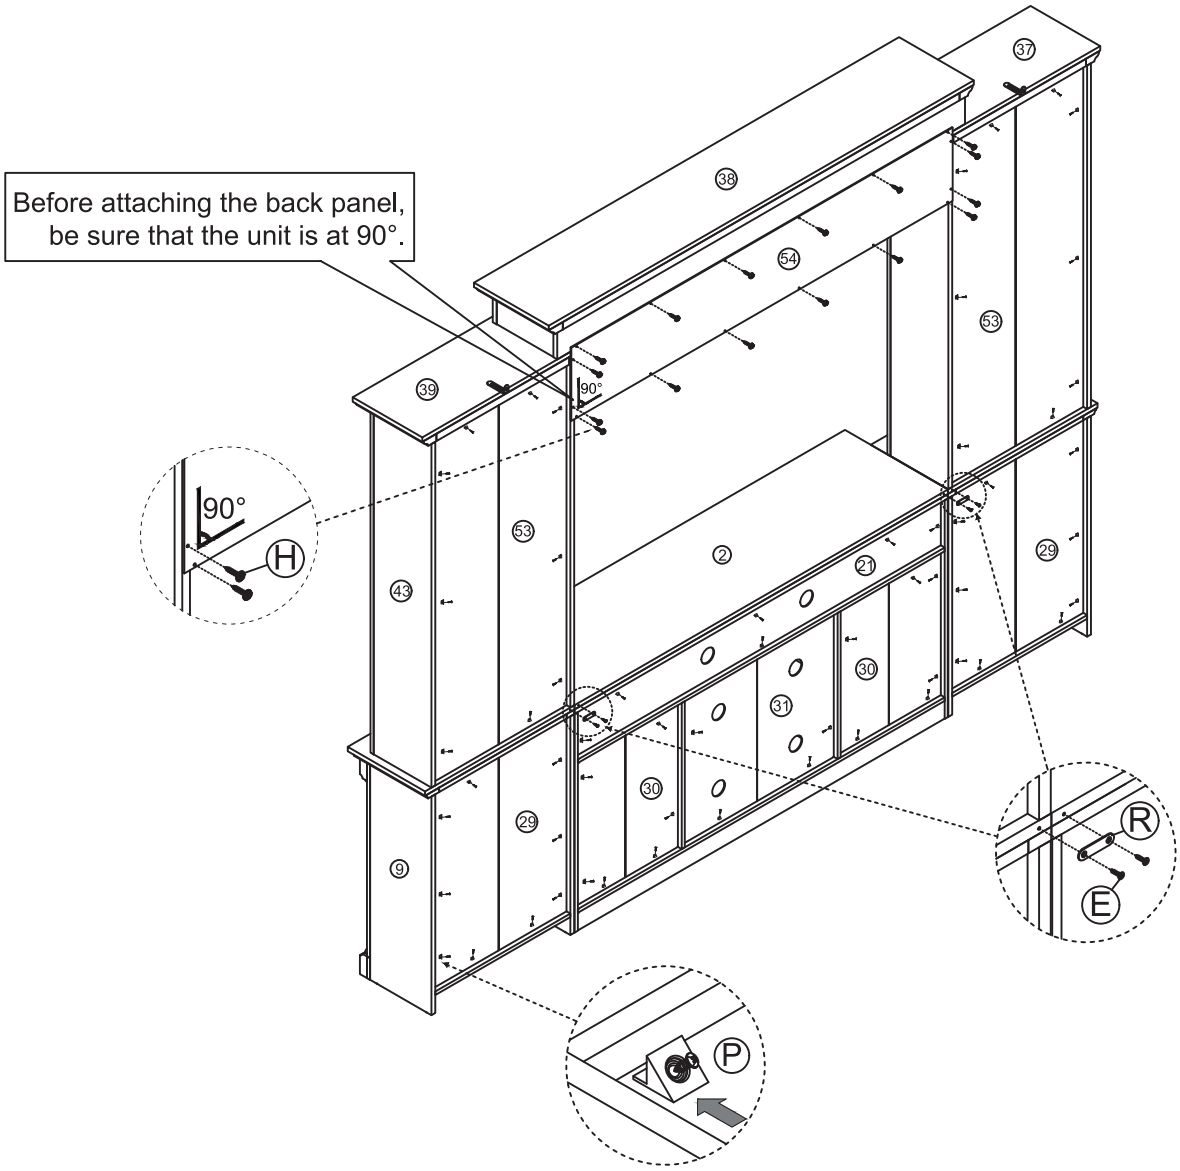


Insert the plastic buckle into the back plate slot , screw through the hole in the plastic buckle and lock it in place.

Use screw (E) to fix metal plate (R) to connect panels (1)-(2) and panels (2)-(3). Use screw (H) to fix panel (54). Insert plastic parts from fitting (P) into the gaps of back panels (21,29,30,31,53) and secure with screws.

R	45*12*1	x 2
P	Ø3*14mm	x58
H	Ø3*14	x16
E	Ø3.5*12	x 4


Step 98

Tilt the㉖、㉗and㊻plates slightly, put them in the cabinet, and then install them flat.

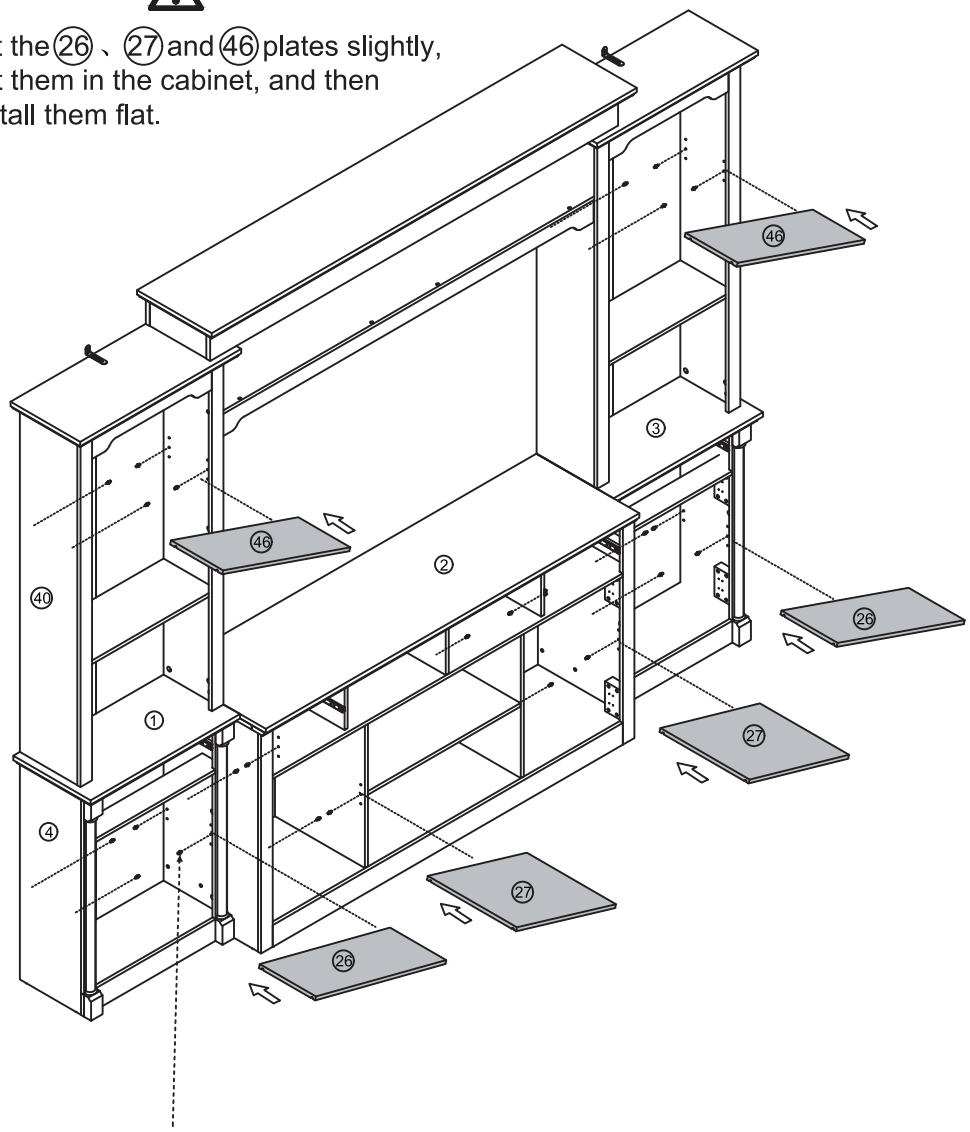

Step 1
Select the desired height and put it in

Step 2
Aim the board gaps down

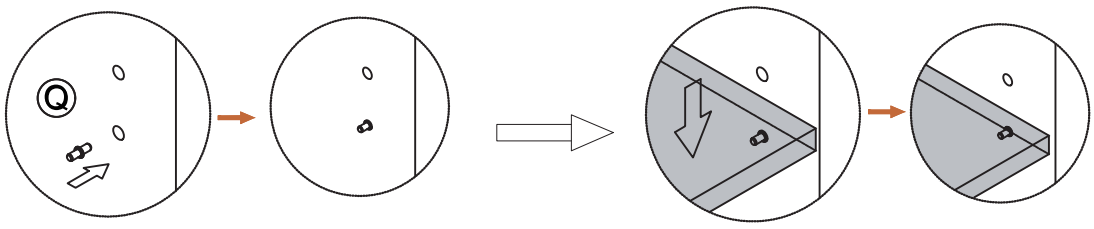


Insert fitting (Q) into the corresponding holes of panels (4,5,6,7,8,9,10,11,40,41,42,43). Slightly tilt panels (26,27,46) to place them into the cabinet, then lay flat.

Q	ø5*16	x24

Step 99


Use screw (E) to fix hinge (G) onto door panel (66).
Use screw (J) to fix handle (I) onto panel (66).

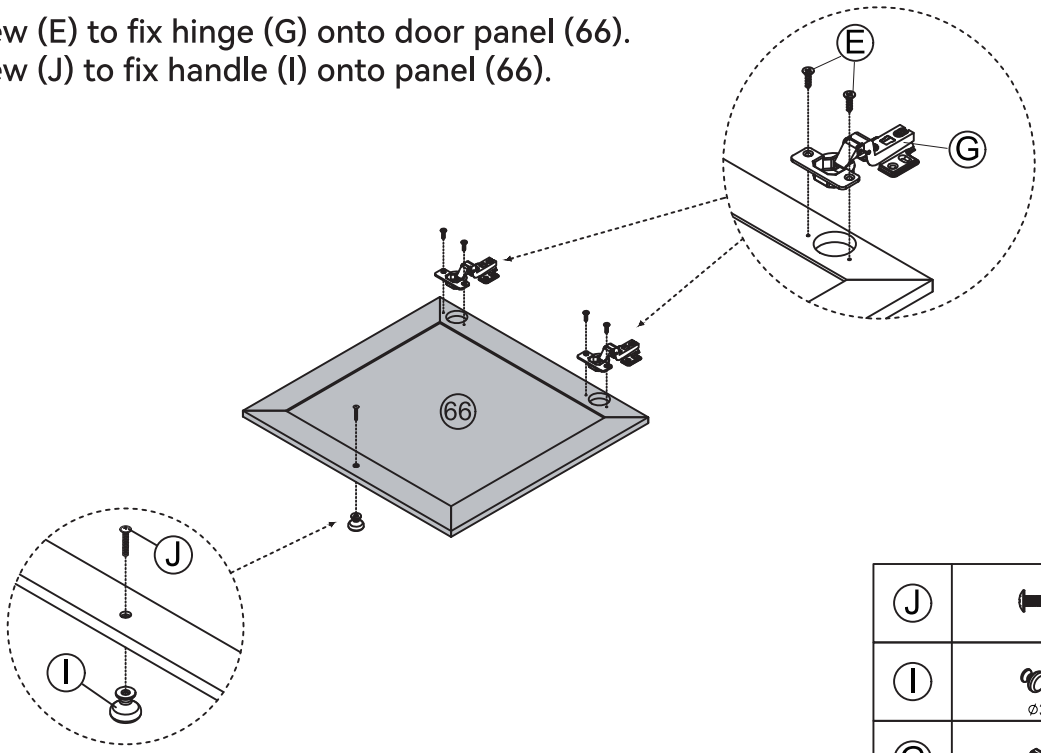

J	M4*12	x 1
I	ø30(ø15)*25	x 1
G	ø35	x 2
E	ø3.5*12	x 4

Step 100


Use screw (E) to fix hinge (G) onto door panel (67).
Use screw (J) to fix handle (I) onto panel (67).

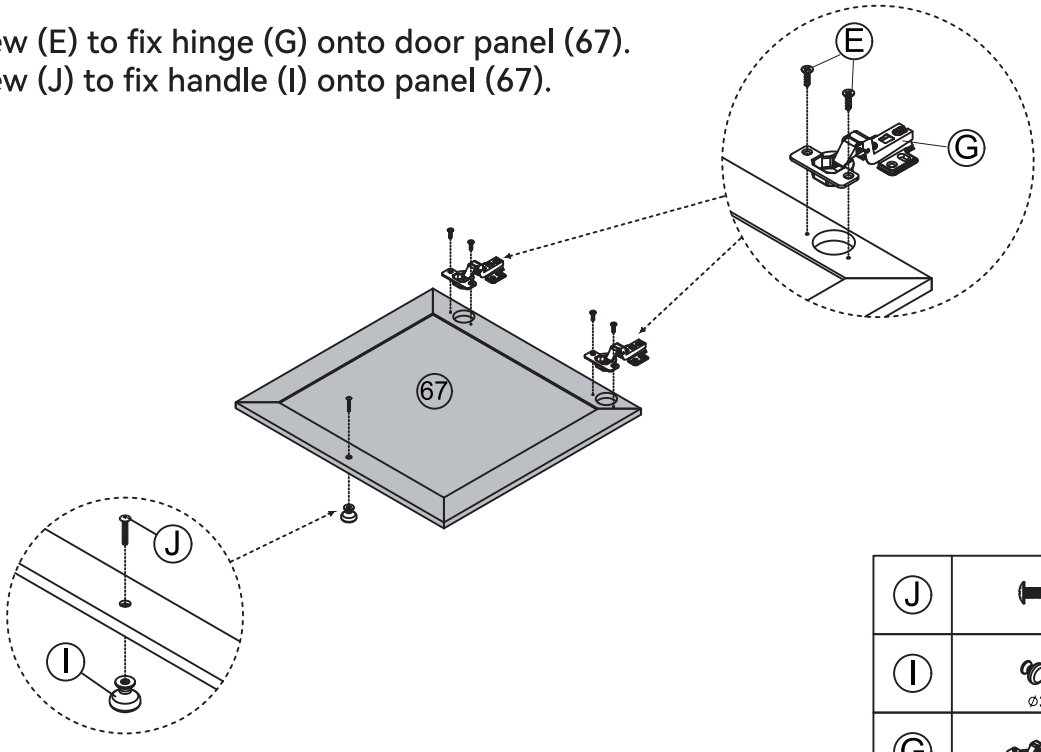

J	M4*12	x 1
I	ø30(ø15)*25	x 1
G	ø35	x 2
E	ø3.5*12	x 4

Step 101


Use screw (E) to fix hinge (G) onto door panel (68).
Use screw (J) to fix handle (I) onto panel (68).

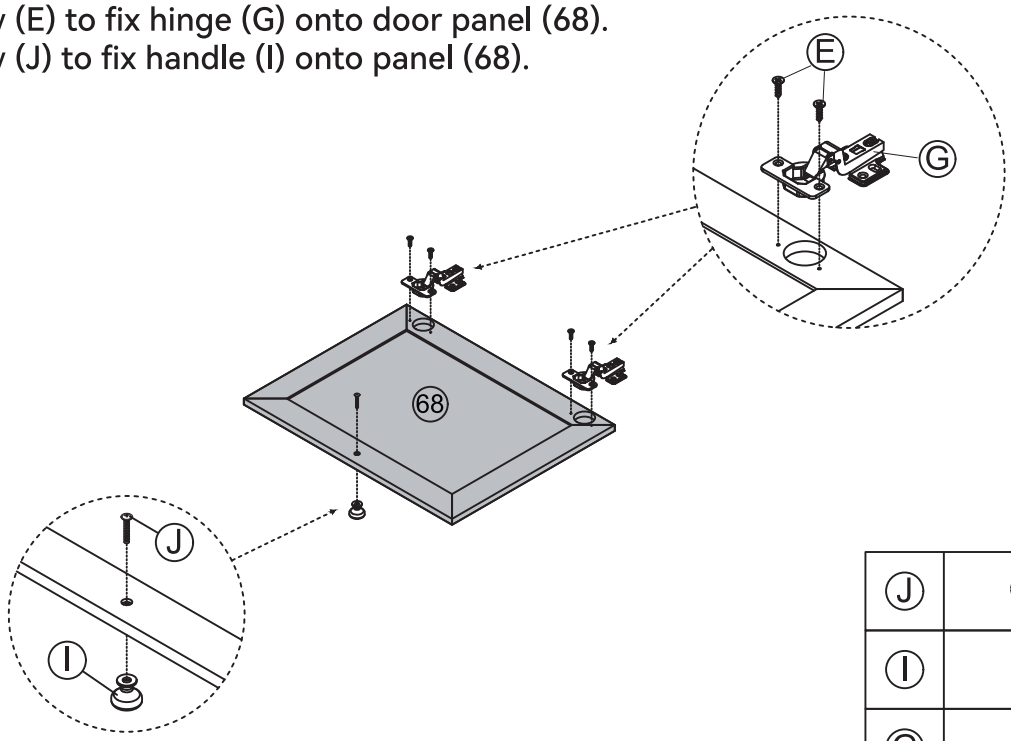

J	M4*12	x 1
I	ø30(ø15)*25	x 1
G	ø35	x 2
E	ø3.5*12	x 4


Step 102

Use screw (E) to fix hinge (G) onto door panel (69).
Use screw (J) to fix handle (I) onto panel (69).

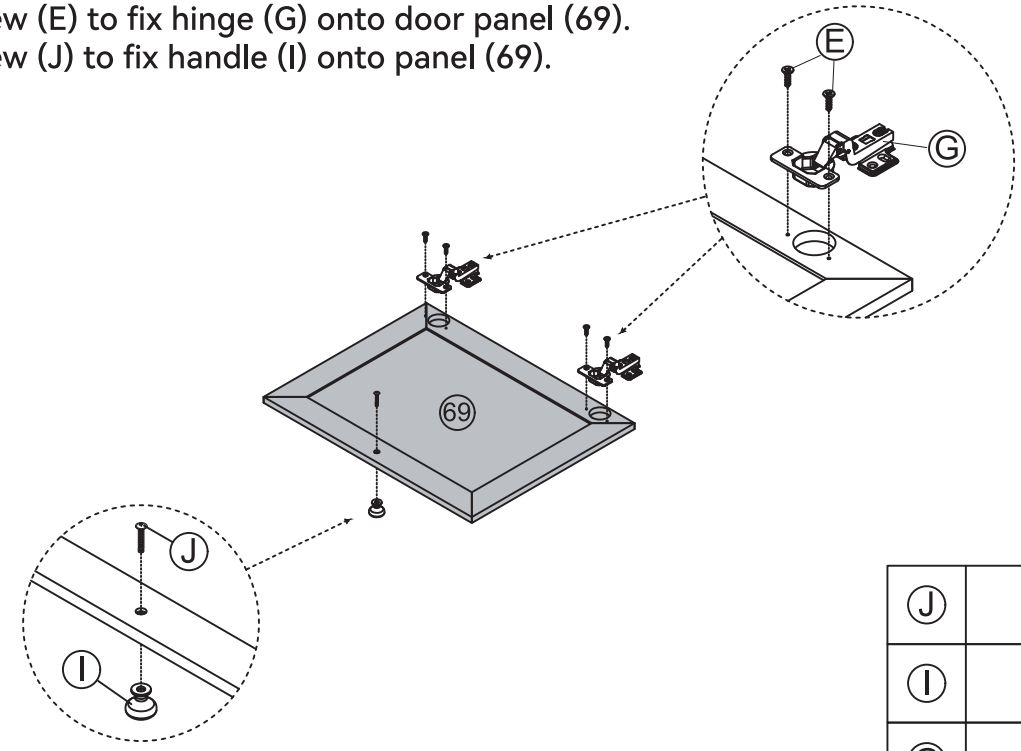

J	M4*12	x 1
I	ø30(ø15)*25	x 1
G	ø35	x 2
E	ø3.5*12	x 4


Step 103

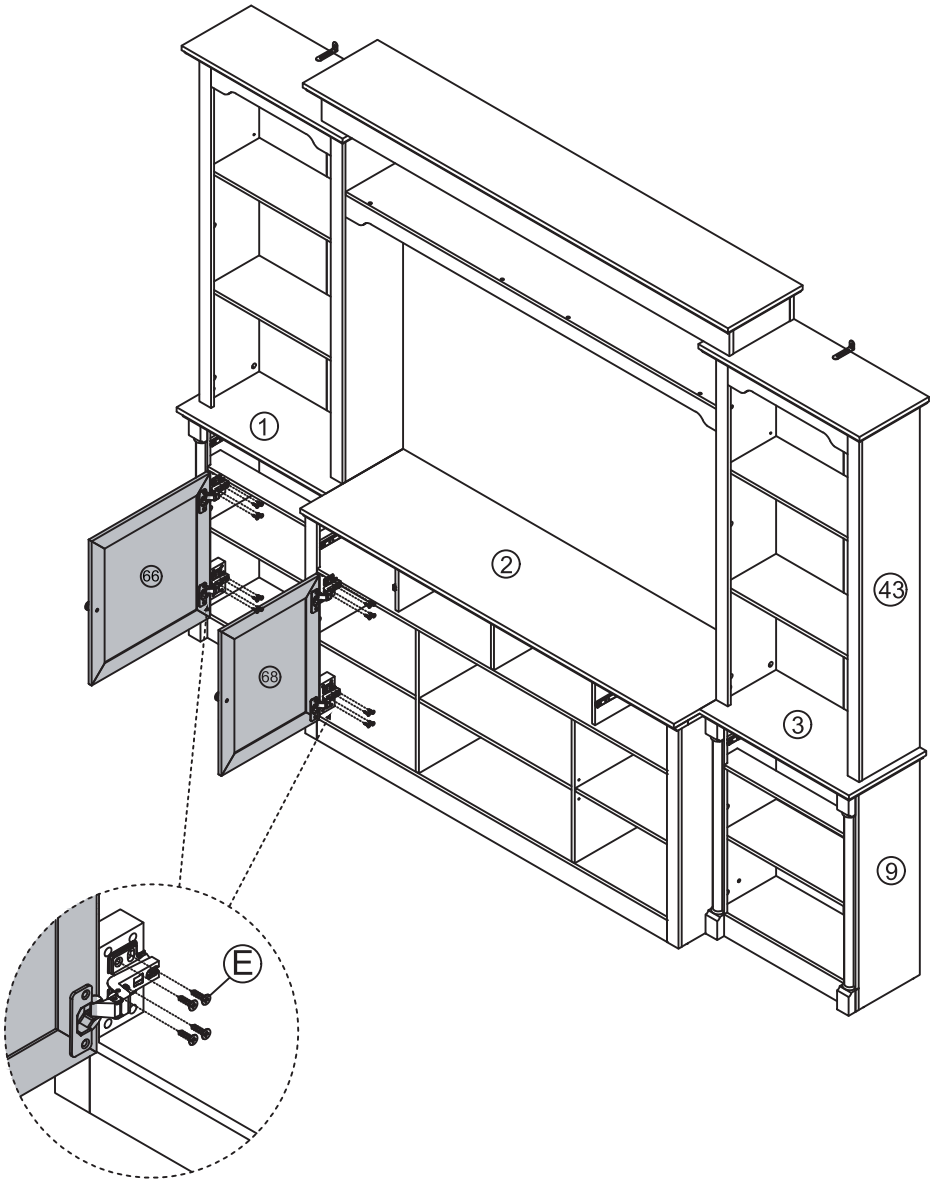

Use screw (E) to install door panels (66,68) onto the cabinet.

E	Ø3.5*12	x16


Step 104

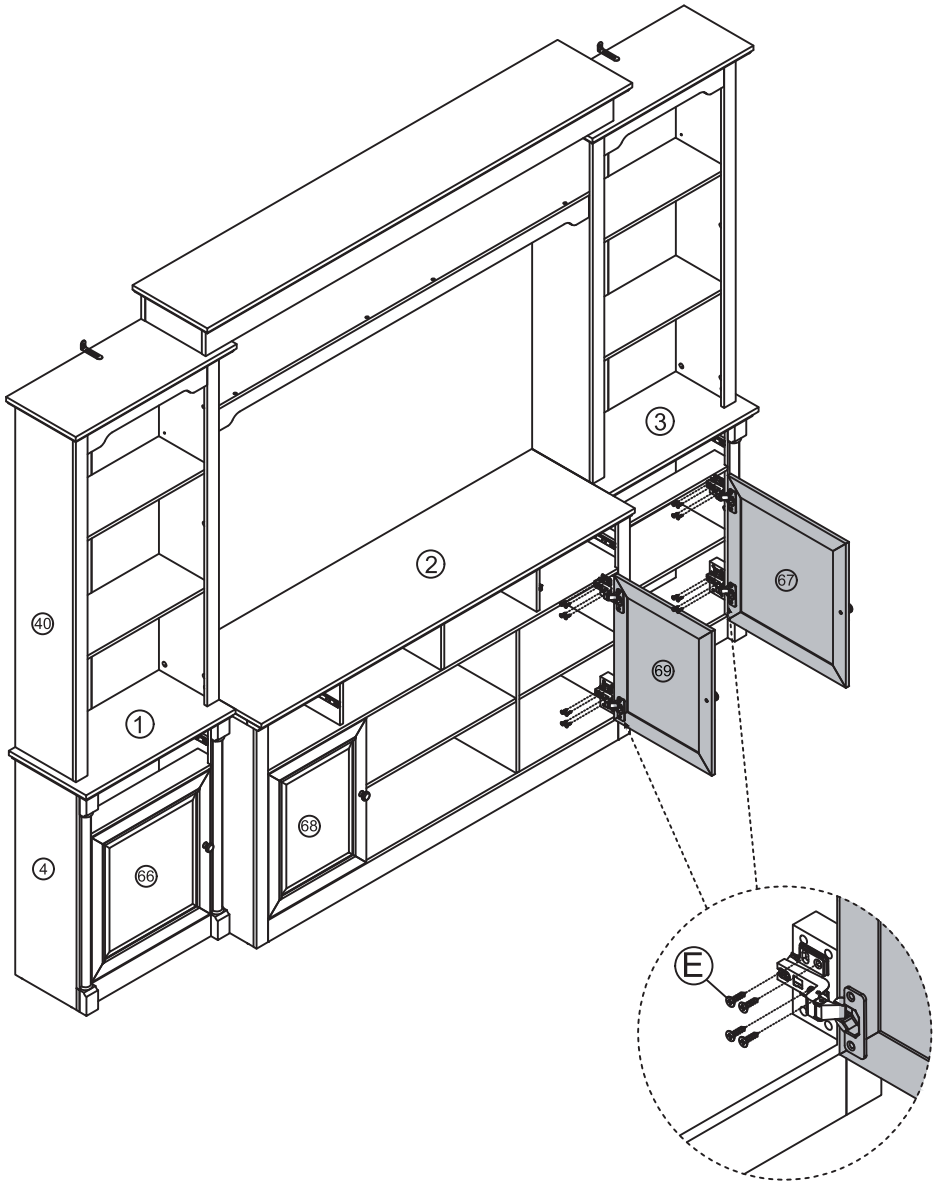


Use screw (E) to install door panels (67,69) onto the cabinet.


Ⓔ	Ø3.5*12	x16

Step 105

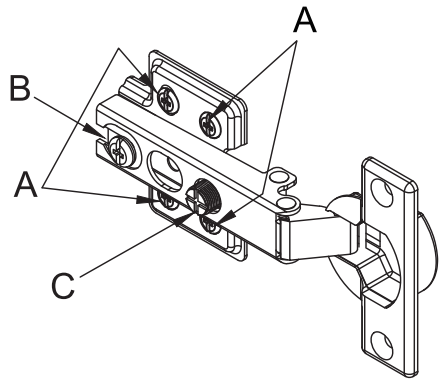


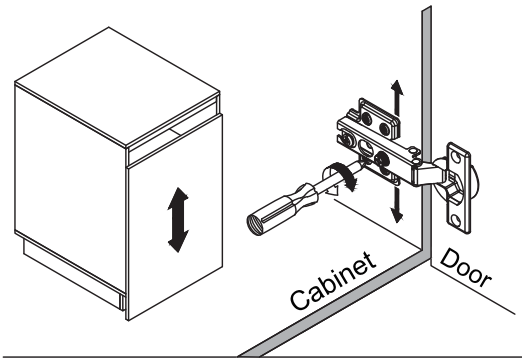

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

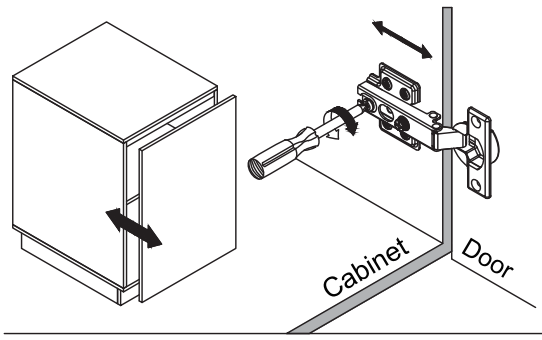


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

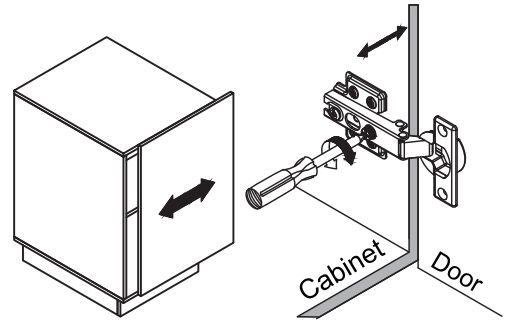

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

Adjust hinges (G) to align door panels (66,67,68,69) to the correct position.

Step 106

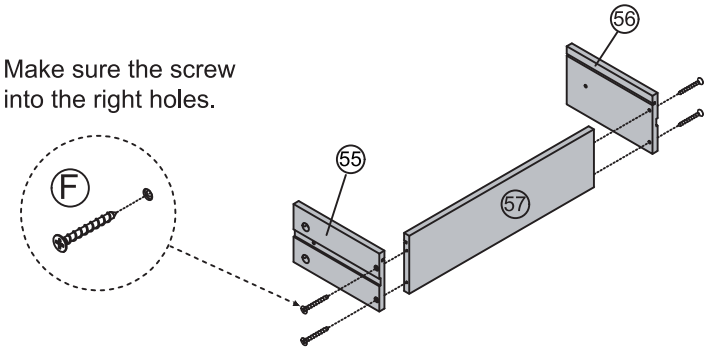


Use screw (F) to connect panels (55,56) with panel (57), repeat twice.

X2

F	ø4*35	x 8

Step 107

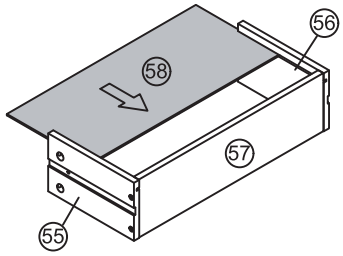



Insert panel (58) into the grooves of panels (55,56,57), repeat twice.

X2

Step 108

Fix fitting (B) to panel (59). Use screw (J) to fix handle (I) onto panel (59), repeat twice.

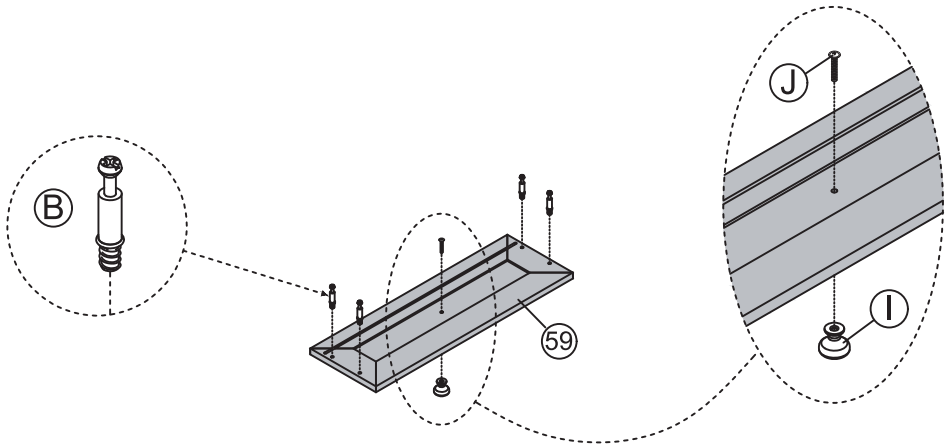


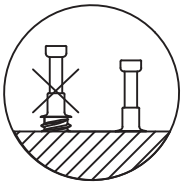

X2


J	M4*12	x 2
I	ø30(ø15)*25	x 2
B	Ø6.5*35	x 8

Step 109

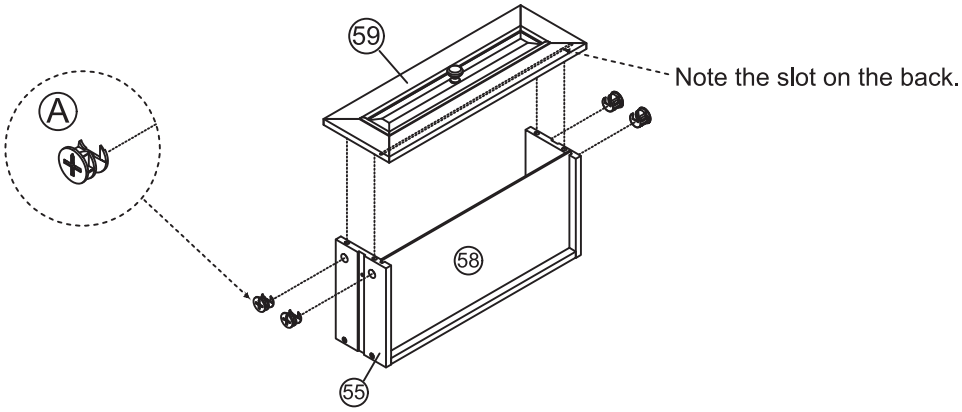

Connect panel (59) with panels (55,56), then turn cam lock (A) clockwise to secure, repeat twice.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

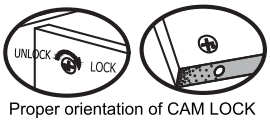


Proper orientation of CAM LOCK

X2

A	Ø15*9.5	x 8

Step 110

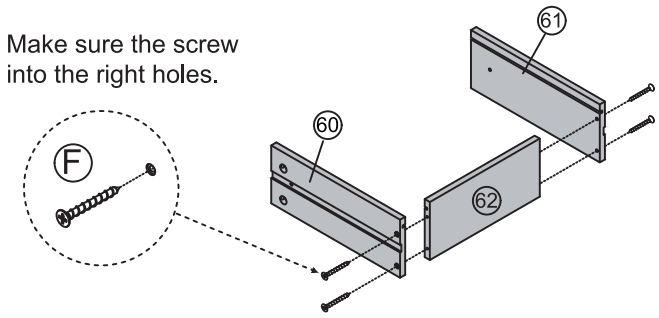


Use screw (F) to connect panels (60,61) with panel (62), repeat twice.

X2

F	ø4*35	x 8


Step 111

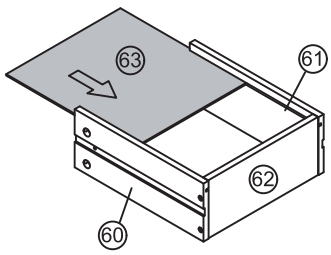


Insert panel (63) into the grooves of panels (60,61,62), repeat twice.

X2

Step 112

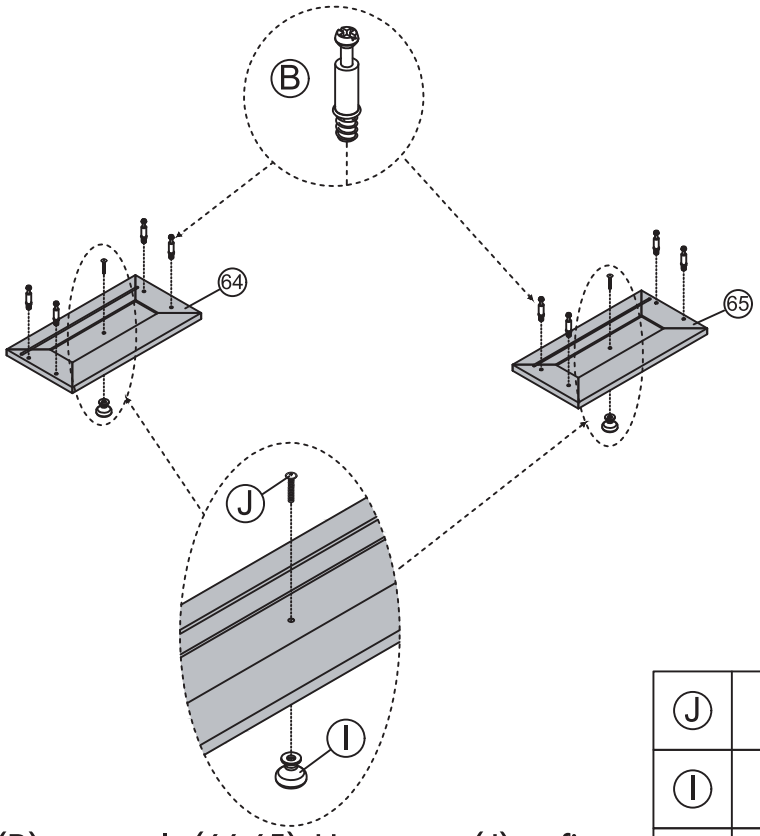


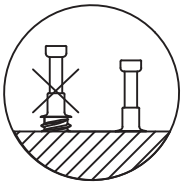


Fix fitting (B) to panels (64,65). Use screw (J) to fix handle (I) onto panels (64,65).

J	M4*12	x 2
I	Ø30(Ø15)*25	x 2
B	Ø6.5*35	x 8

Step 113

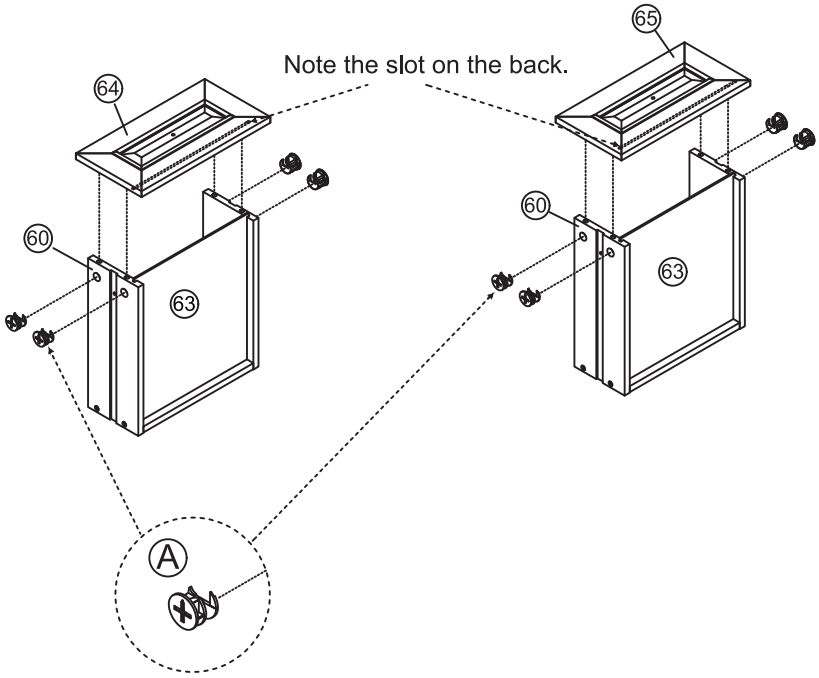

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

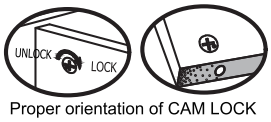


Proper orientation of CAM LOCK


Connect panels (64,65) with panels (60,61), then turn cam lock (A) clockwise to secure.

A	Ø15*9.5	x 8


Step 114

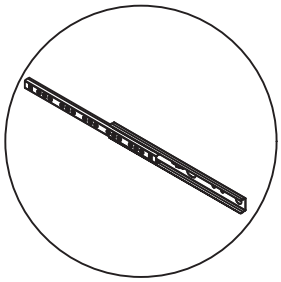


Slide out the
inner guide rail.

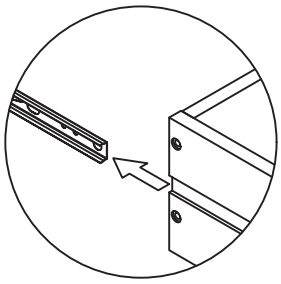


Aim at the slot of the
bracket,and put the inner
guide rail into the slot.

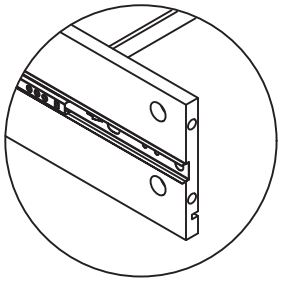

Inner guide slide path
shown in the diagram.

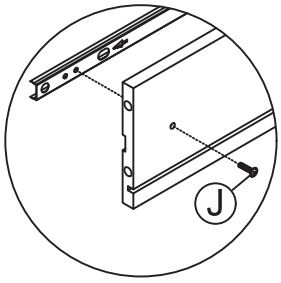

Aim at the illustration hole
and fix the guide rail on the
side of the bucket.

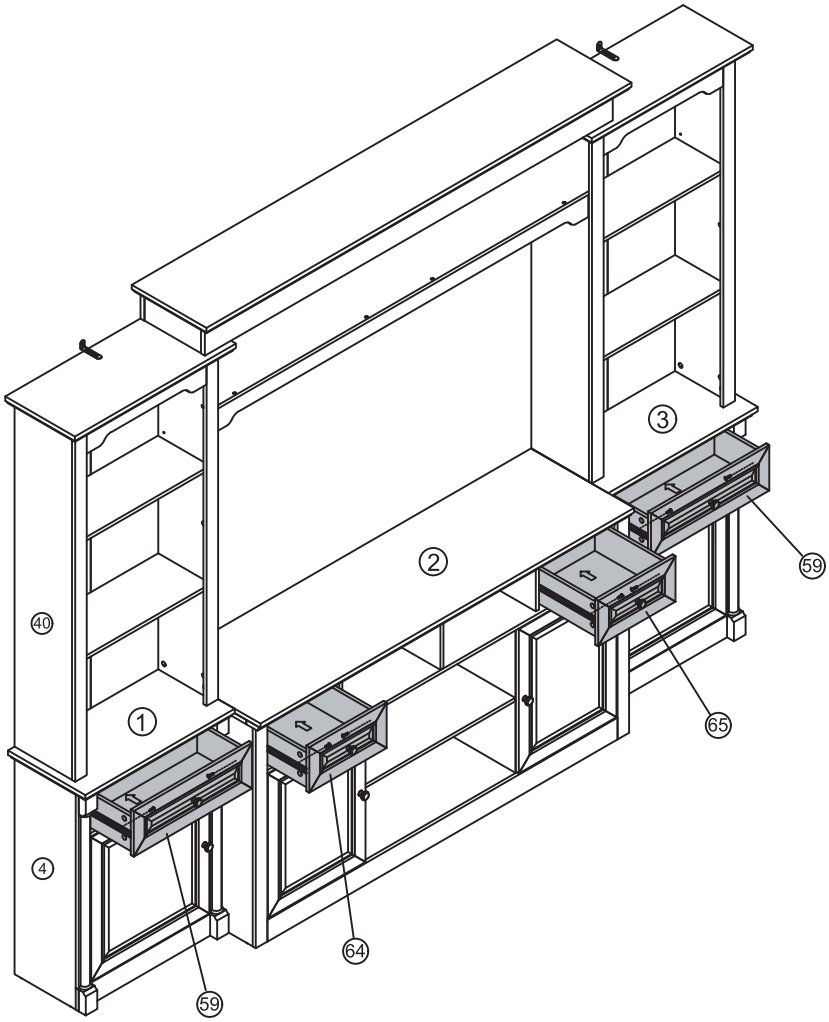

As shown, use screw (J) to fix drawers (59,64,65) onto the drawer slides and insert them into the cabinet.

J	M4*12	x 8

Step 115

⚠WARNING




Childrern have died from furuiture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand , climb or hang on drawers , doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove !


Install the tipping restraint hard ware

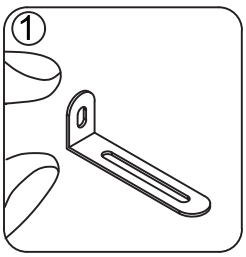


1.make mark on the wall

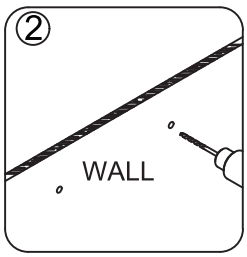


2.drill two Ø6 holes on the wall

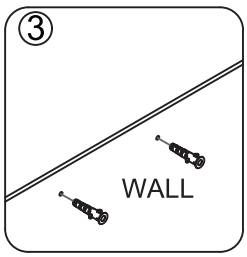

3.put two anchors in the holes

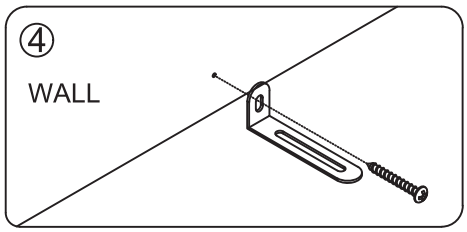

5.Push the cabinet close to the wall and then put on nylon tie to tighten it.

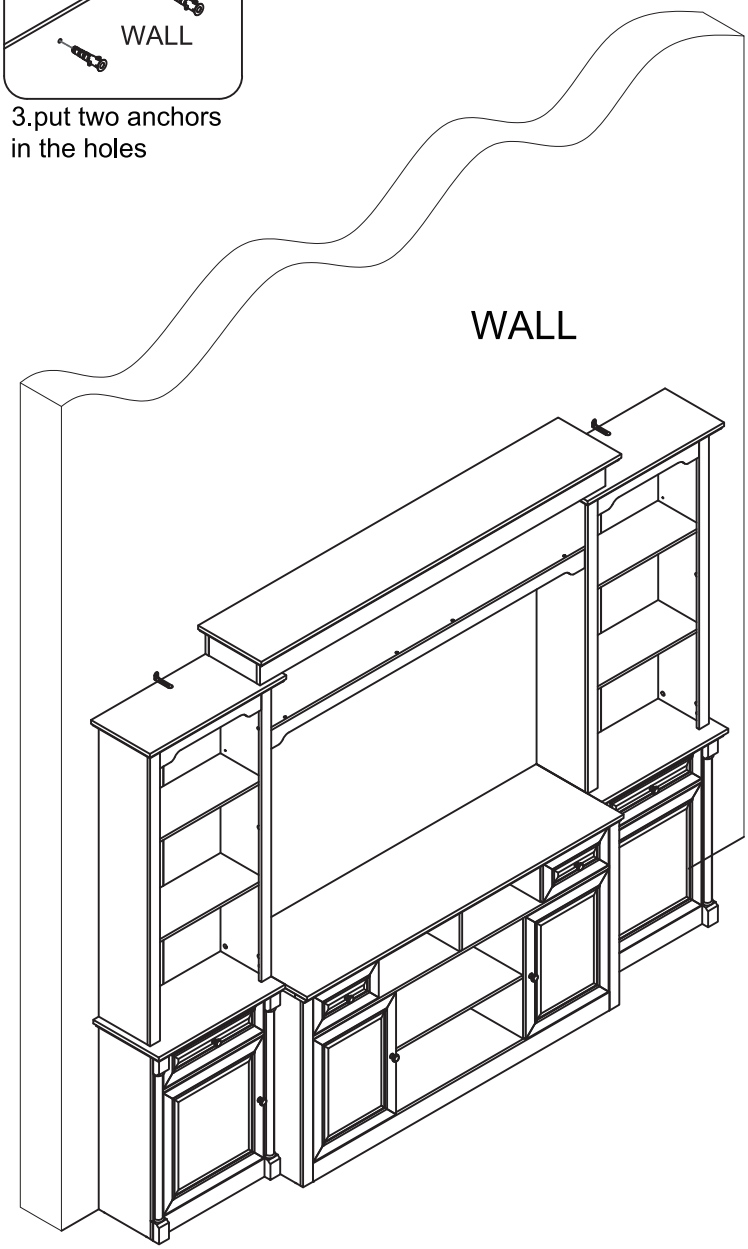

Use fitting (S) to secure the cabinet to the wall at a suitable position to prevent tipping.

Ⓢ		x2set