





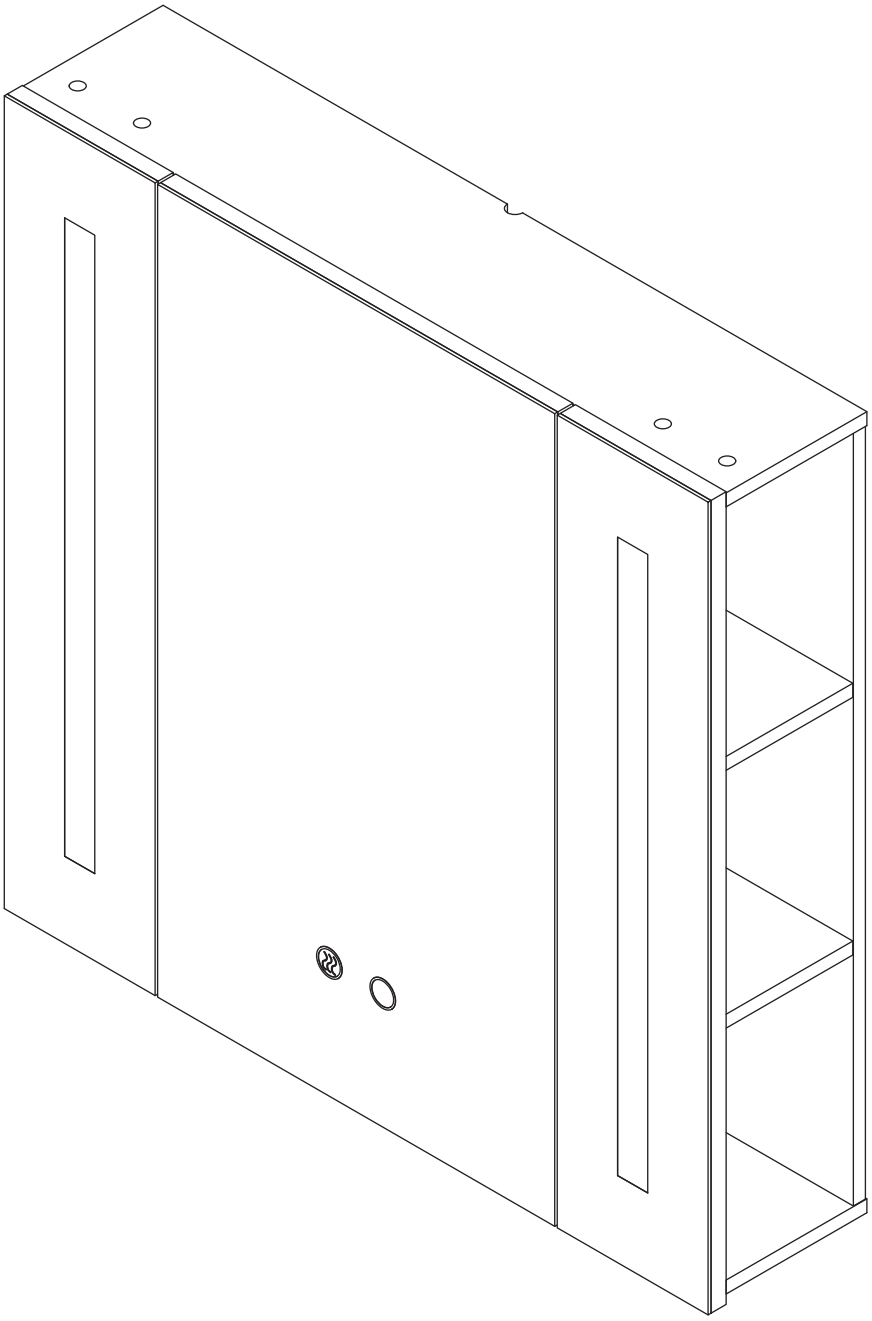

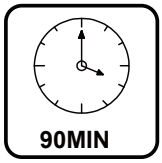


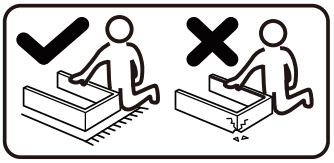

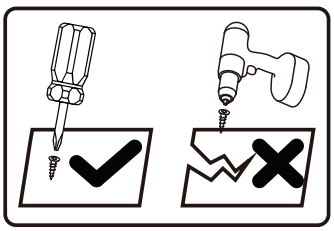




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

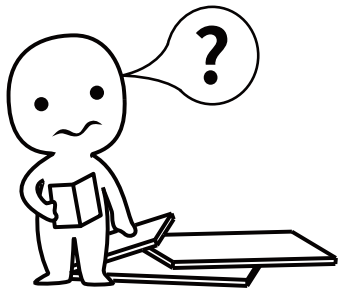

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

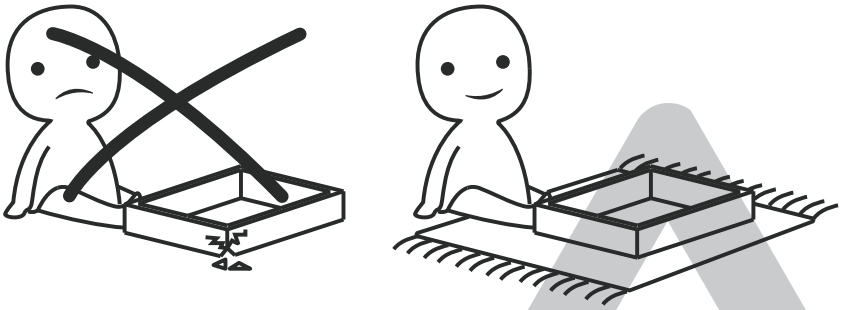


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

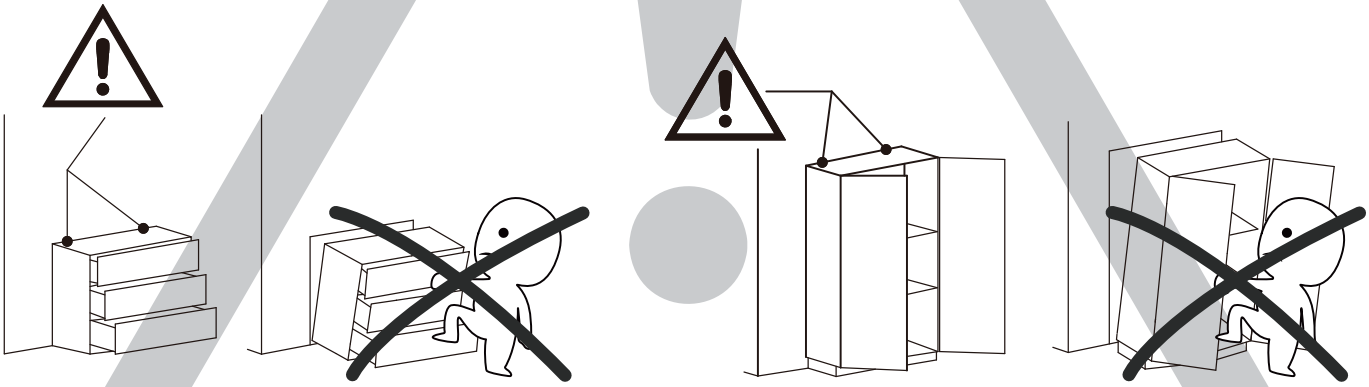

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Warnings

·Tipping over the product may cause serious or fatal injuries.
·Stop using the product if any parts are missing or damaged.
·Children should only use the product under adult supervision. Do not allow children to climb or play on the product to prevent injury from tipping or breaking of the furniture.
·During assembly, keep all small parts out of the reach of children to avoid the risk of choking or suffocation.
·Keep all packaging materials (such as plastic film, bags, foam boards, etc.) out of the reach of children, especially toddlers and infants, to avoid potential hazards such as suffocation.


EN: This product does not contain batteries.
Legal Disclaimer: We cannot be held responsible for any injury, acident or damage that is caused by improper use or by improper repair or moditfication of the product.

WARNING:
CHOKING HAZARD -- Small parts.
Not for children under 3 years old.

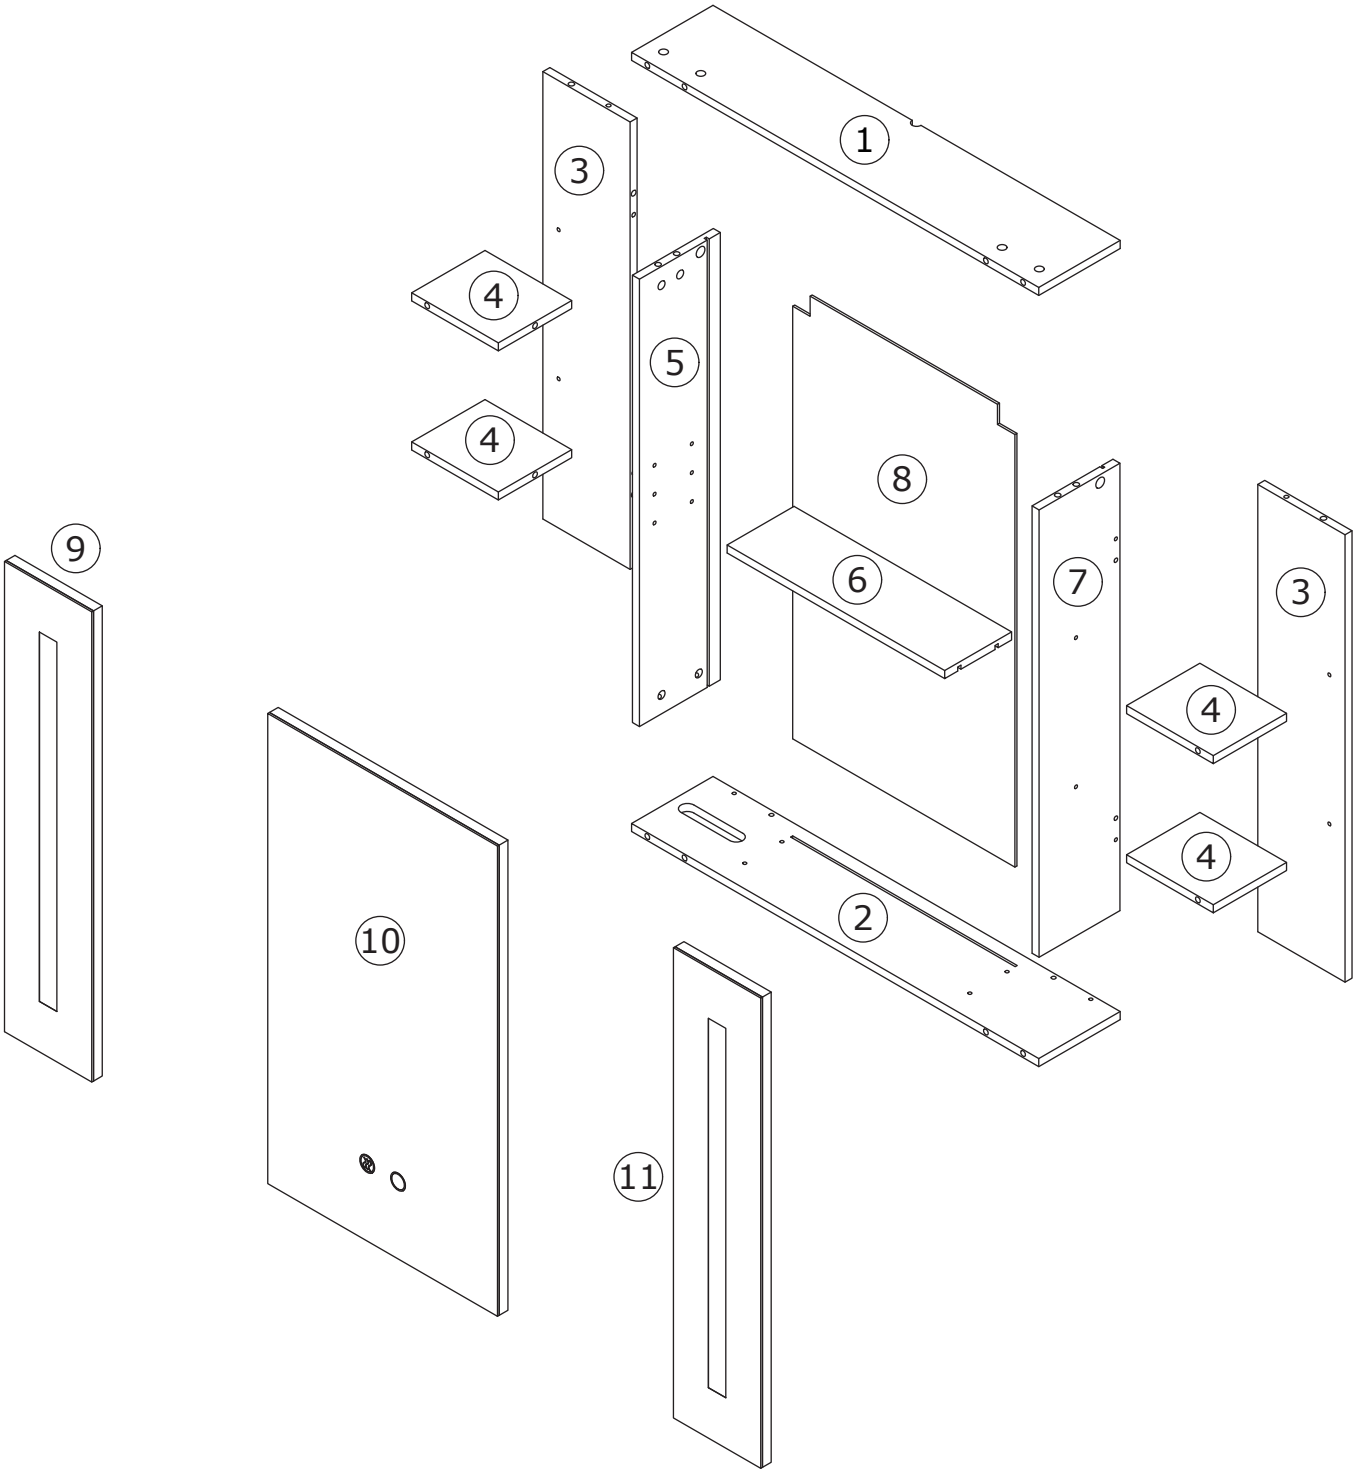

1
3
4
5
4
8
6
7
3
9
4
4
10
2
11

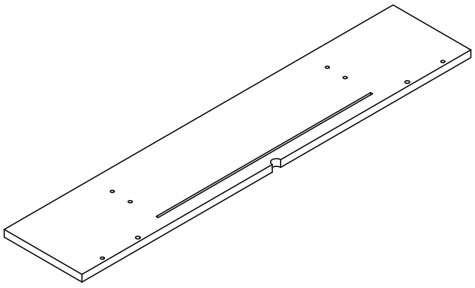

1

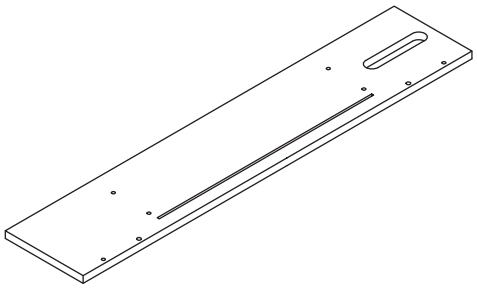


2

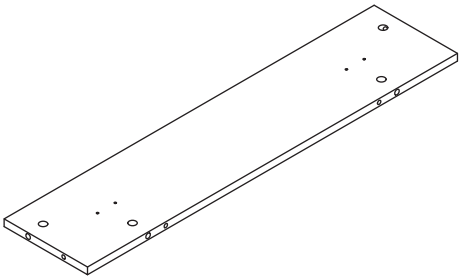


3 X2


Pay attention to distinguish between the left and right panels.

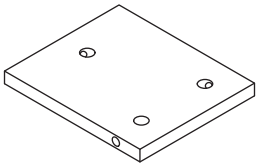


4 X4

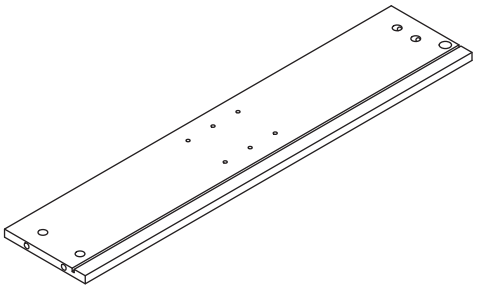


5

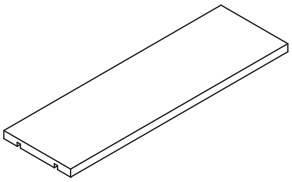


6

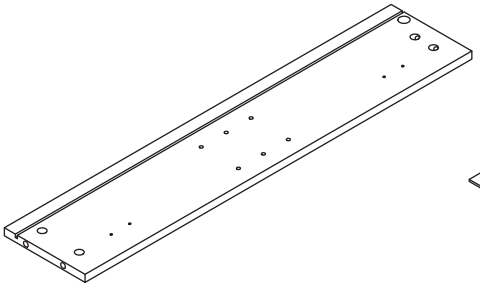


7

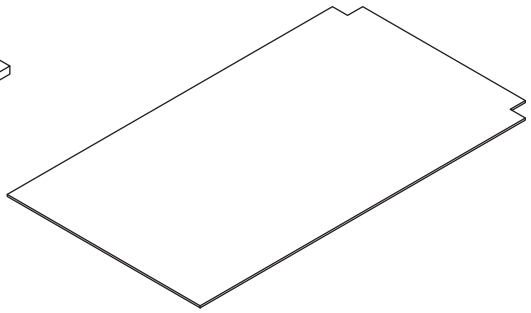


8

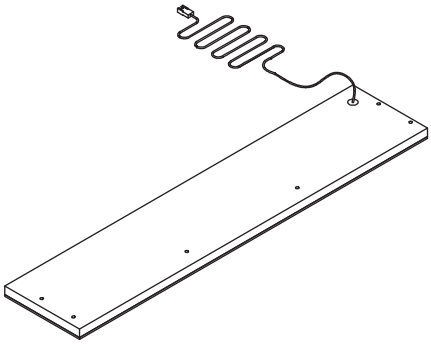










9

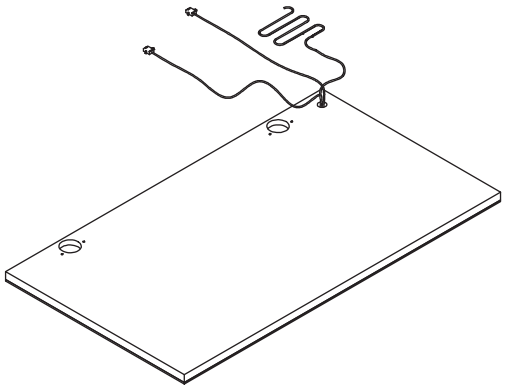

10

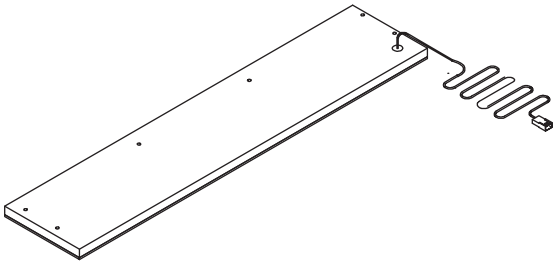


11

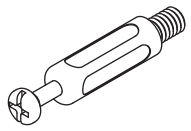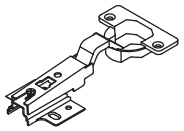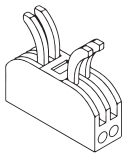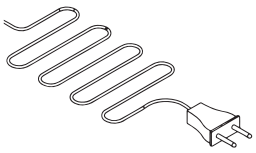
A x 36	B x 36	C x 8	D x 36
 ∅7 x 35 mm	 ∅12 x 9.5 mm	 ∅6 x 30 mm	
E x 20	**F x 1**	**G x 4**	**I x 2**
 ∅3.5 x 12 mm			
K x 4	**L x 4**	**M x 1**	**N x 1**
	 L1 L2		


Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process.






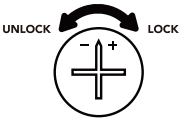

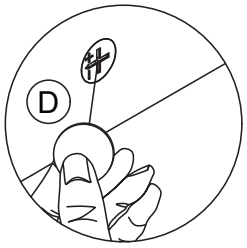



Apply decorative stickers (D) to all CAM LOCK (B) units.

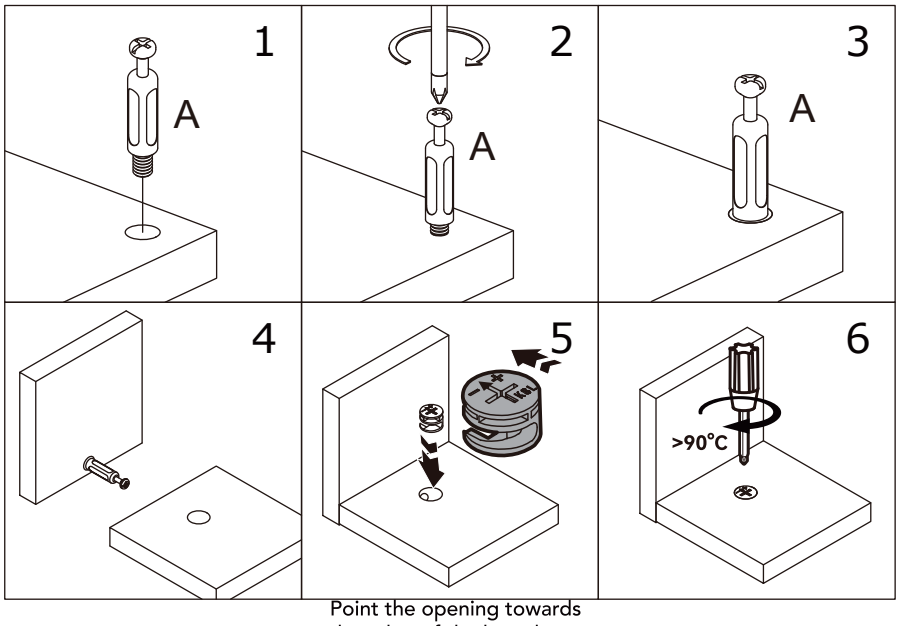



Point the opening towards the edge of the board


EN_Do not confuse similar screws.Do not tighten bolts fully until all parts are connected!

1

A x 4	C x 8	B x 4	D x 4	
				
∅7 x 35 mm	∅6 x 30 mm	∅12 x 9.5 mm		

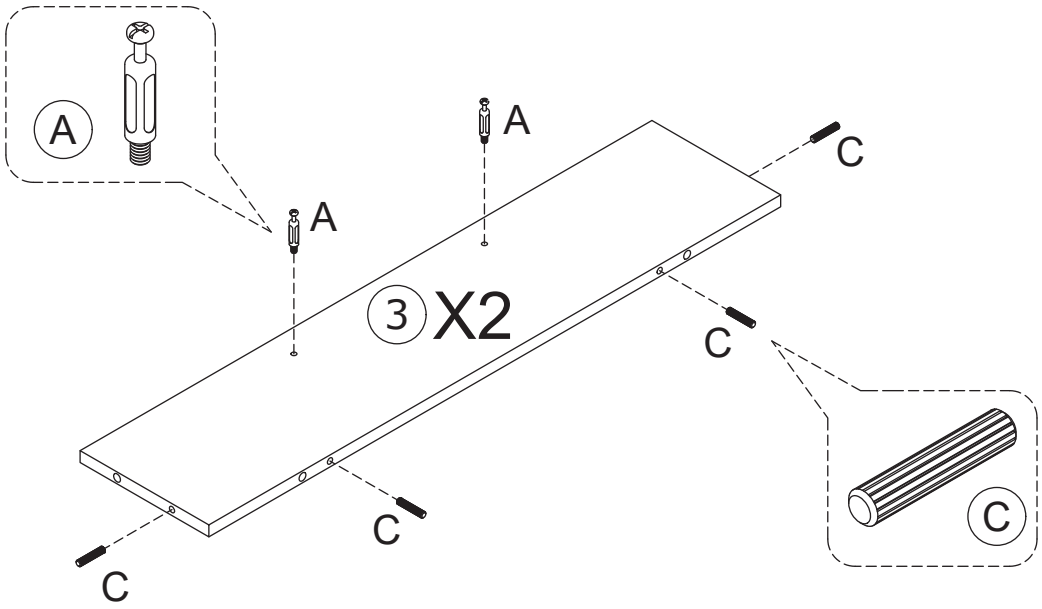


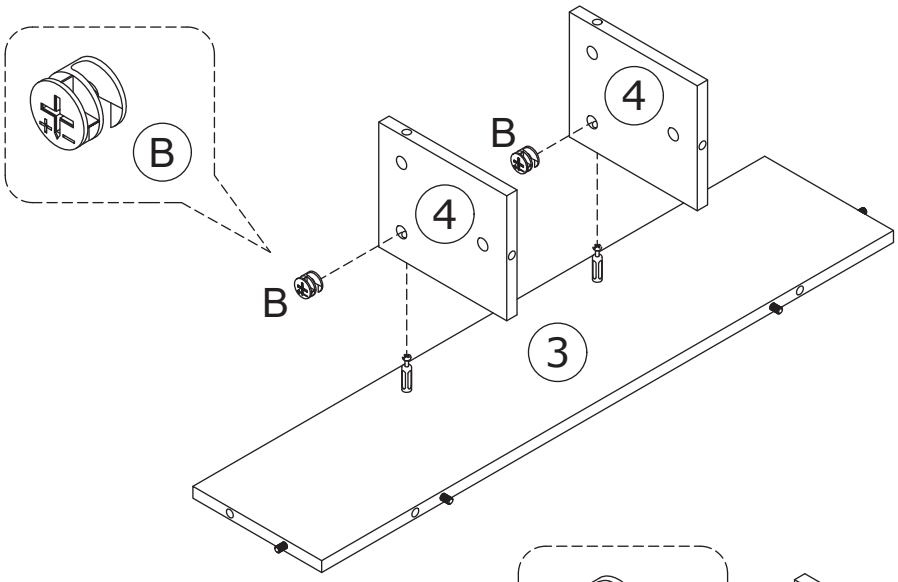

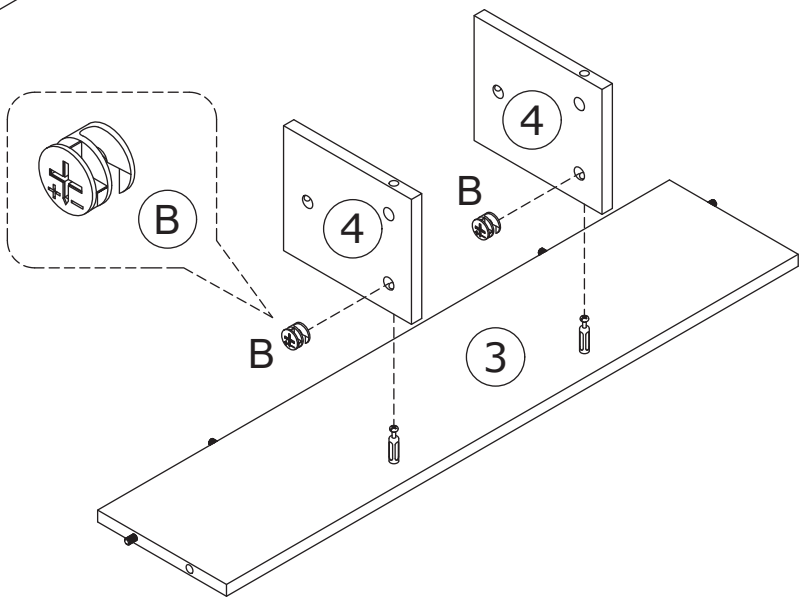



2

A x 8




∅7 x 35 mm

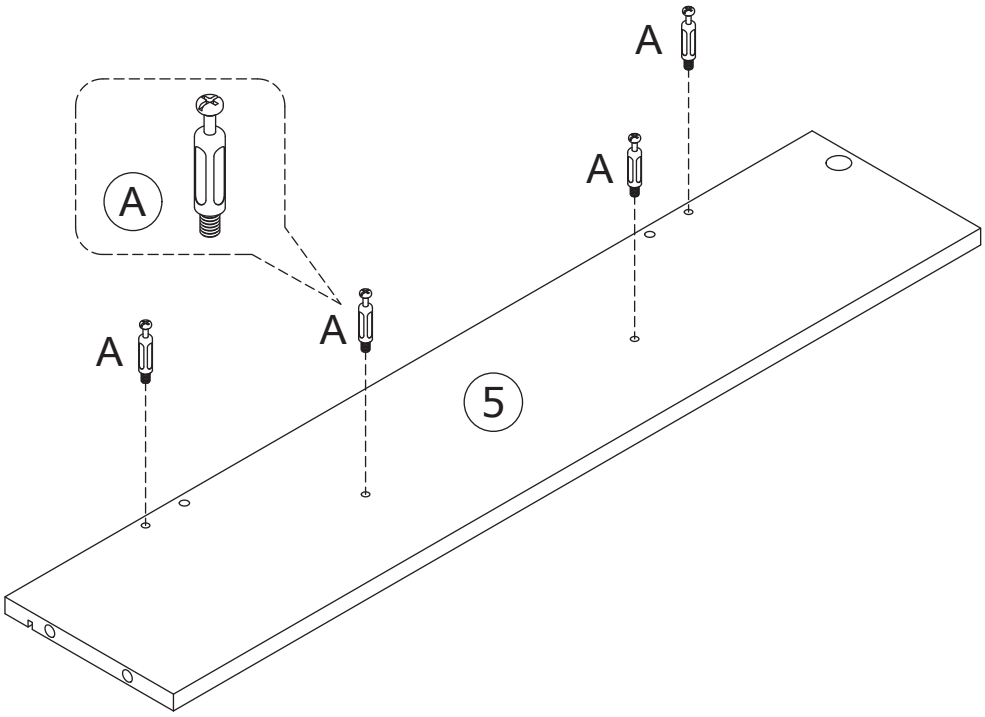


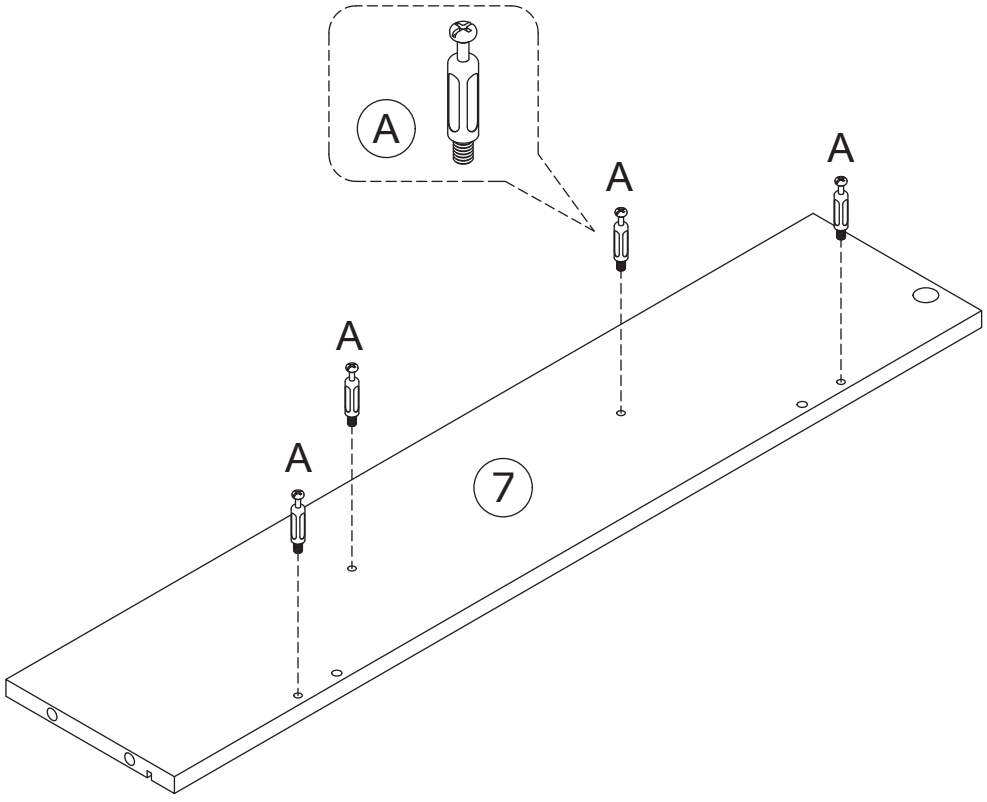



3


B x 8	D x 8	
 ∅12 x 9.5 mm		

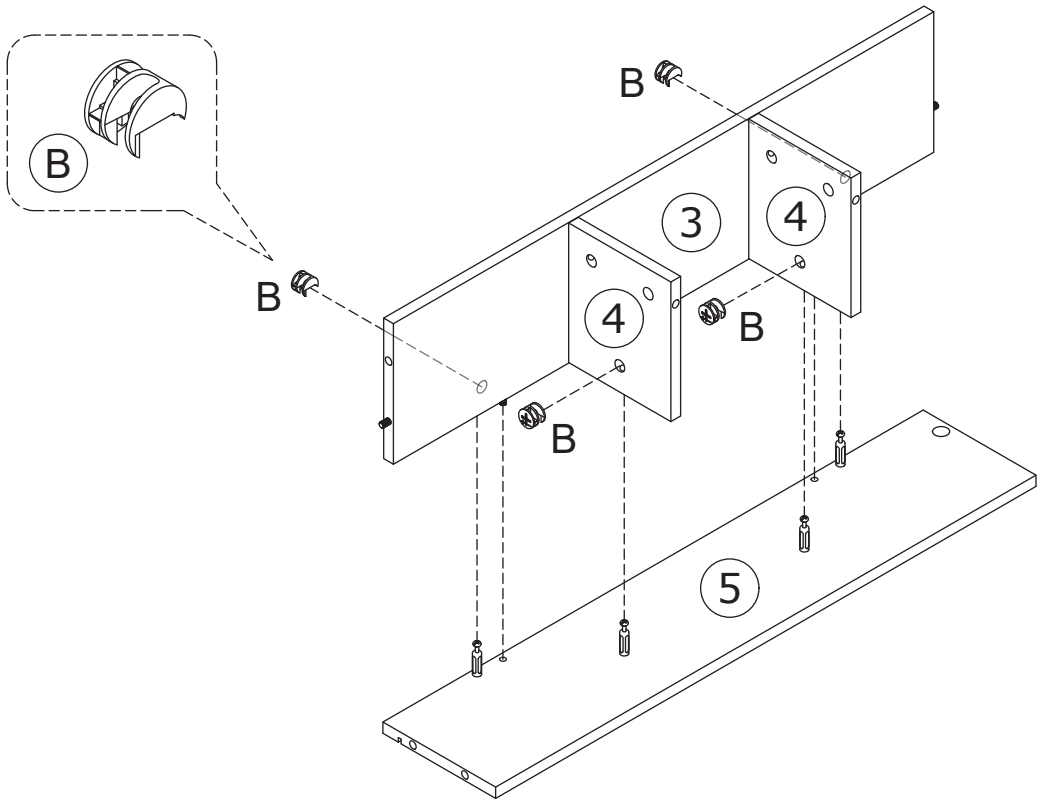


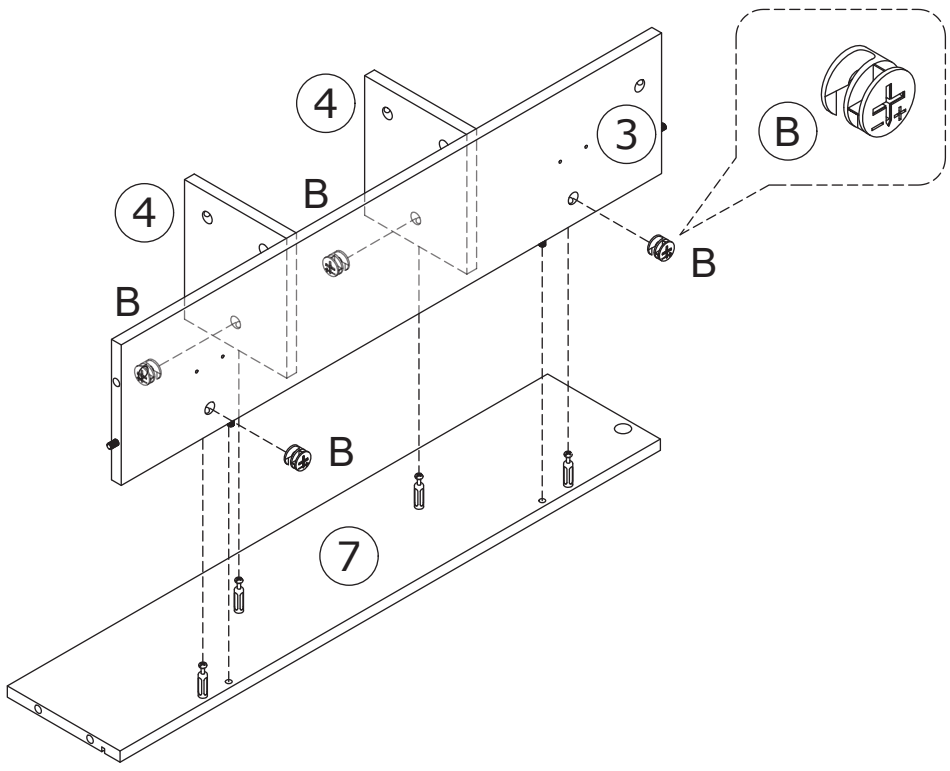

4


F x 1	A x 12	
	 ∅7 x 35 mm	

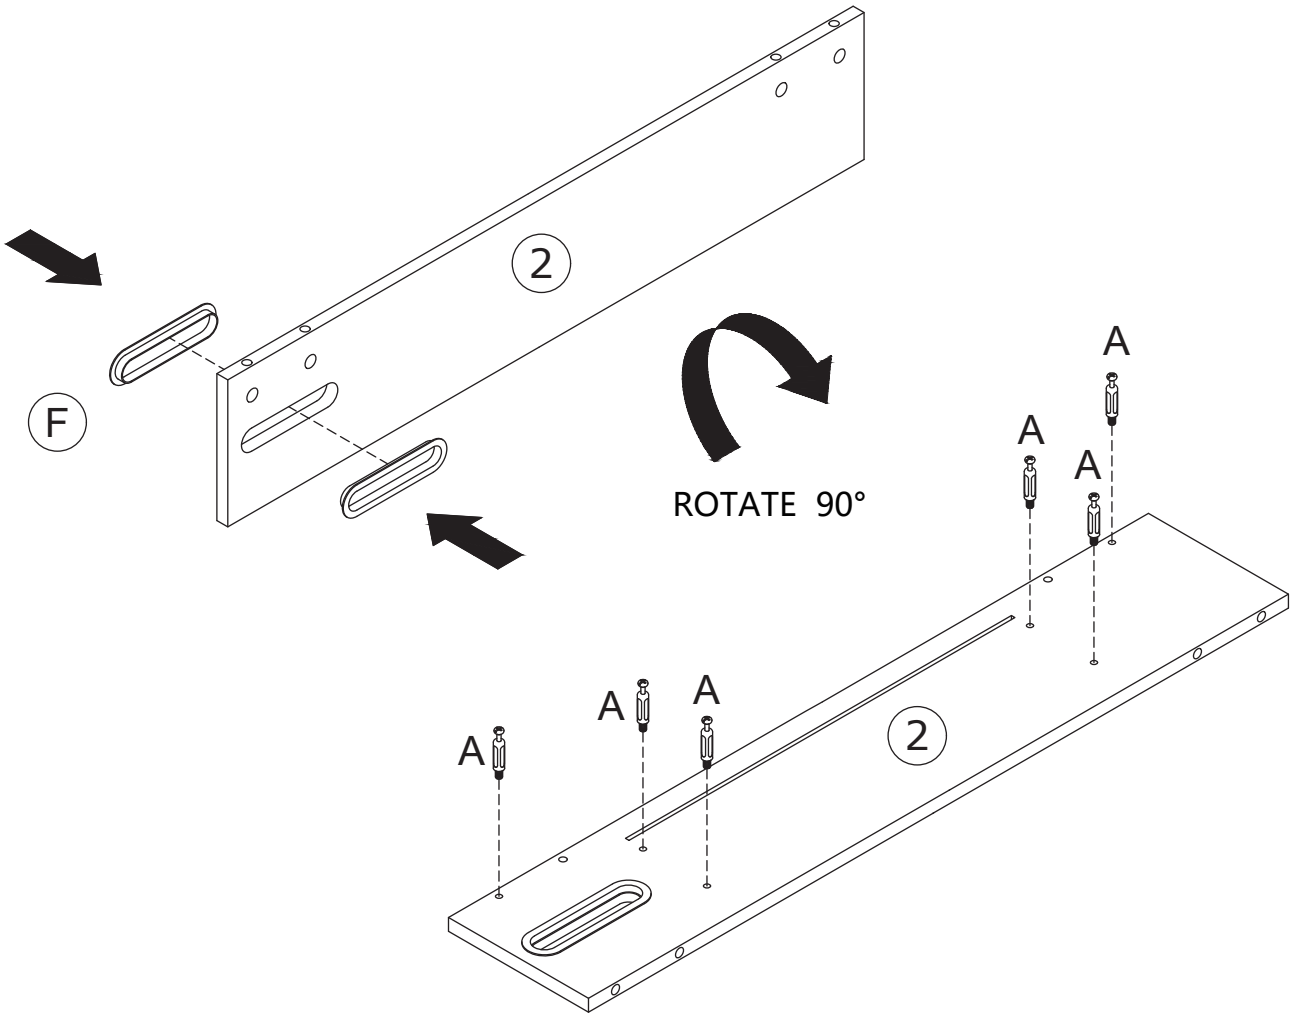

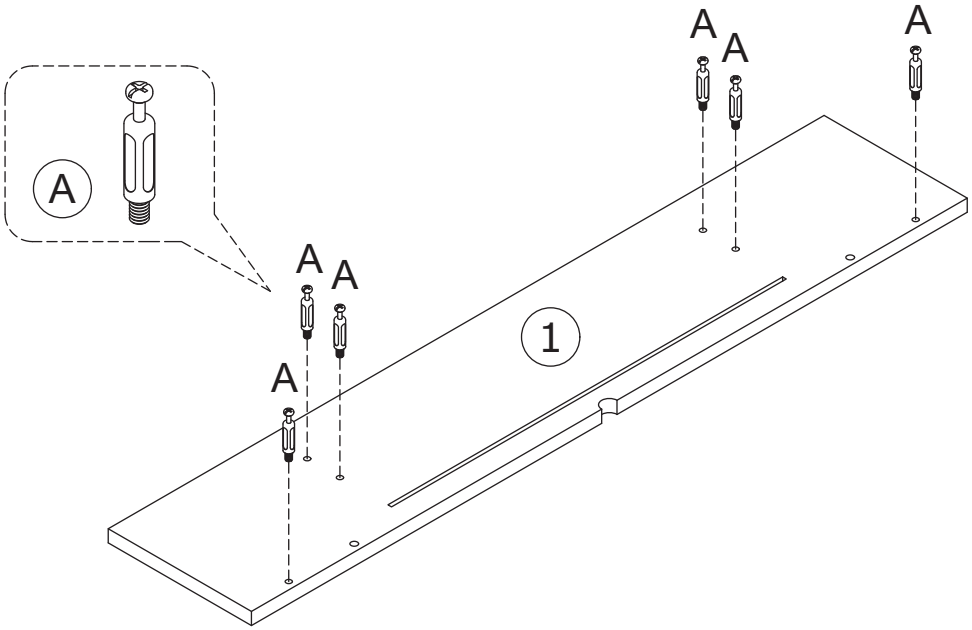


5


B x 4	D x 4	
 ∅12 x 9.5 mm		

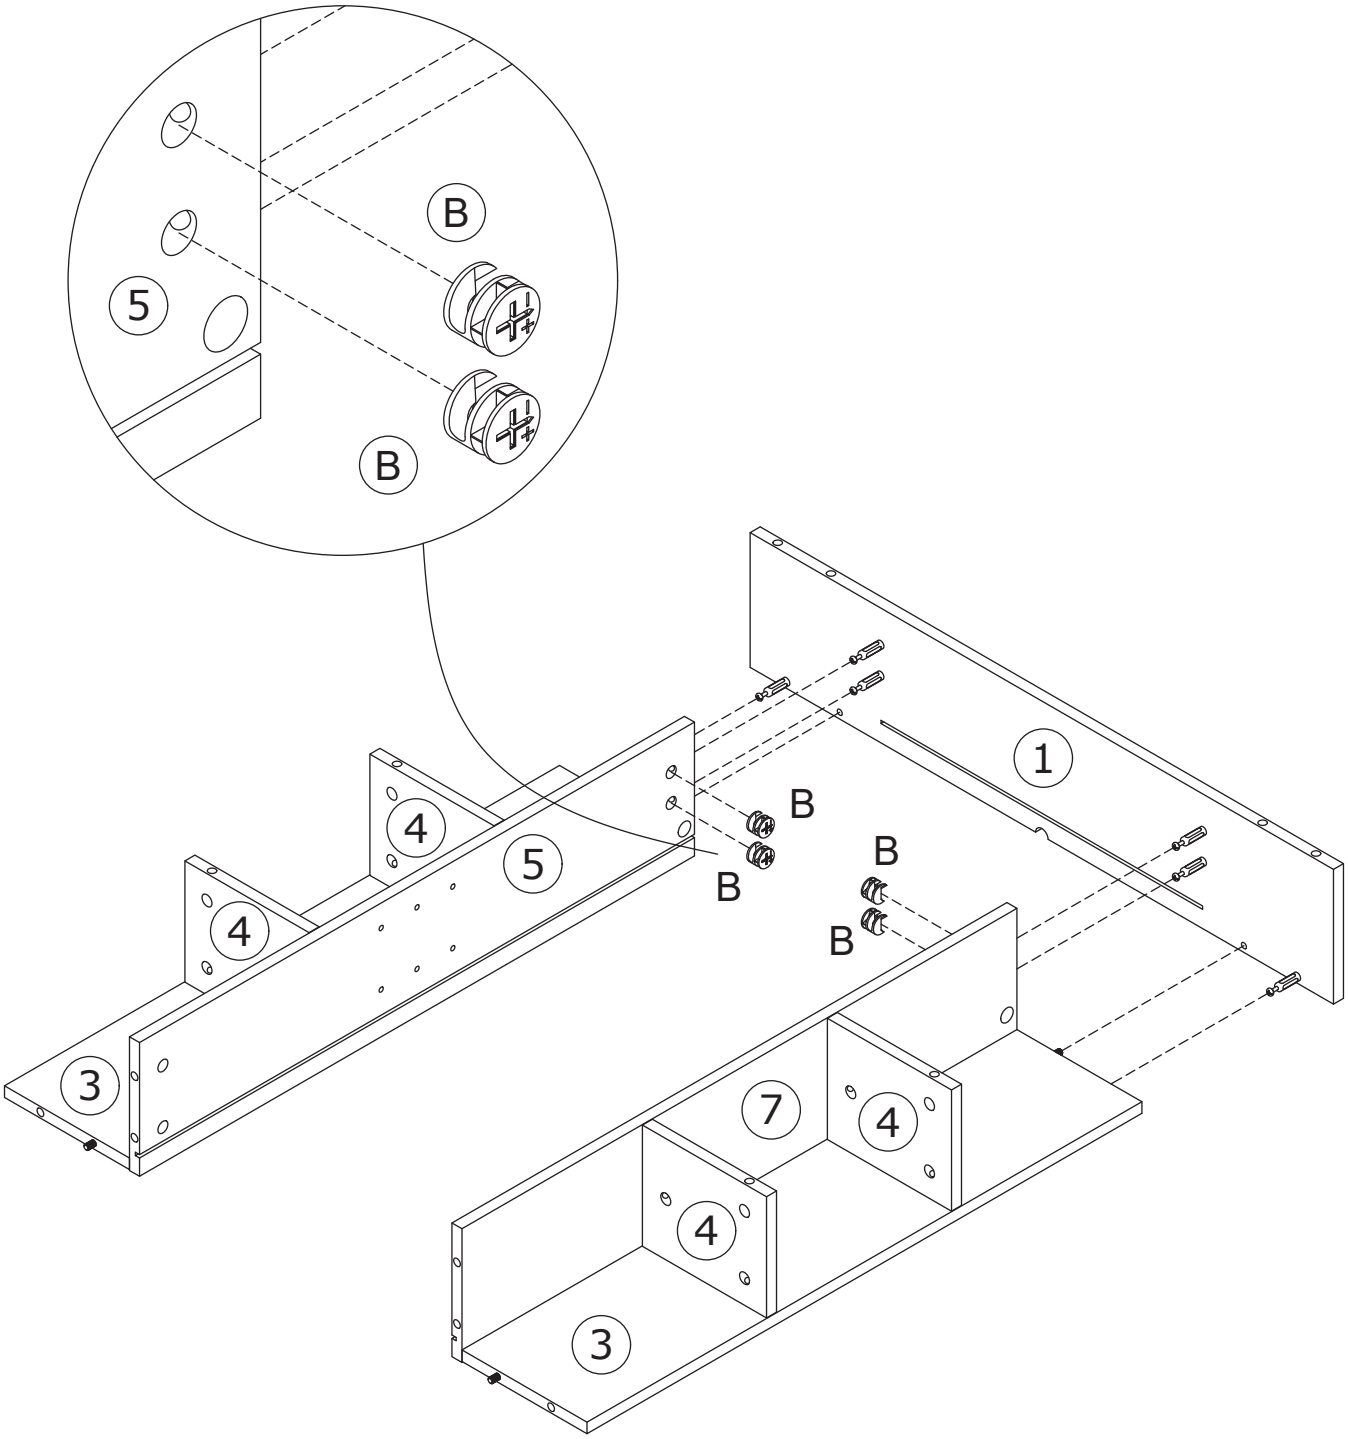

6


B x 8	D x 8	
 ∅12 x 9.5 mm		

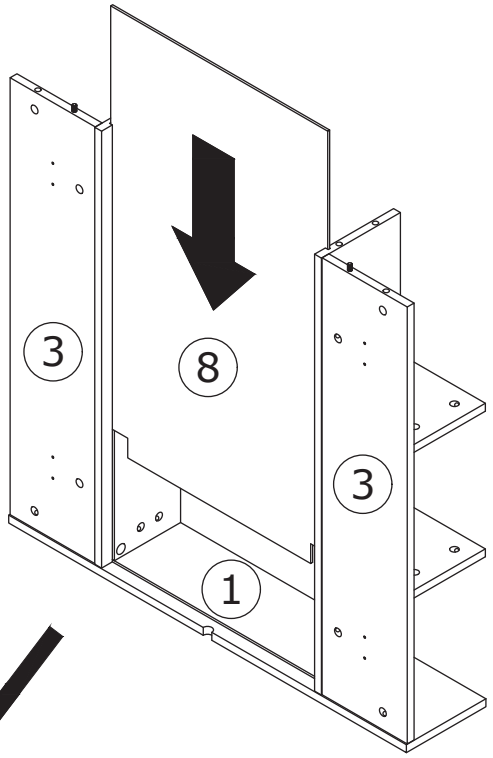

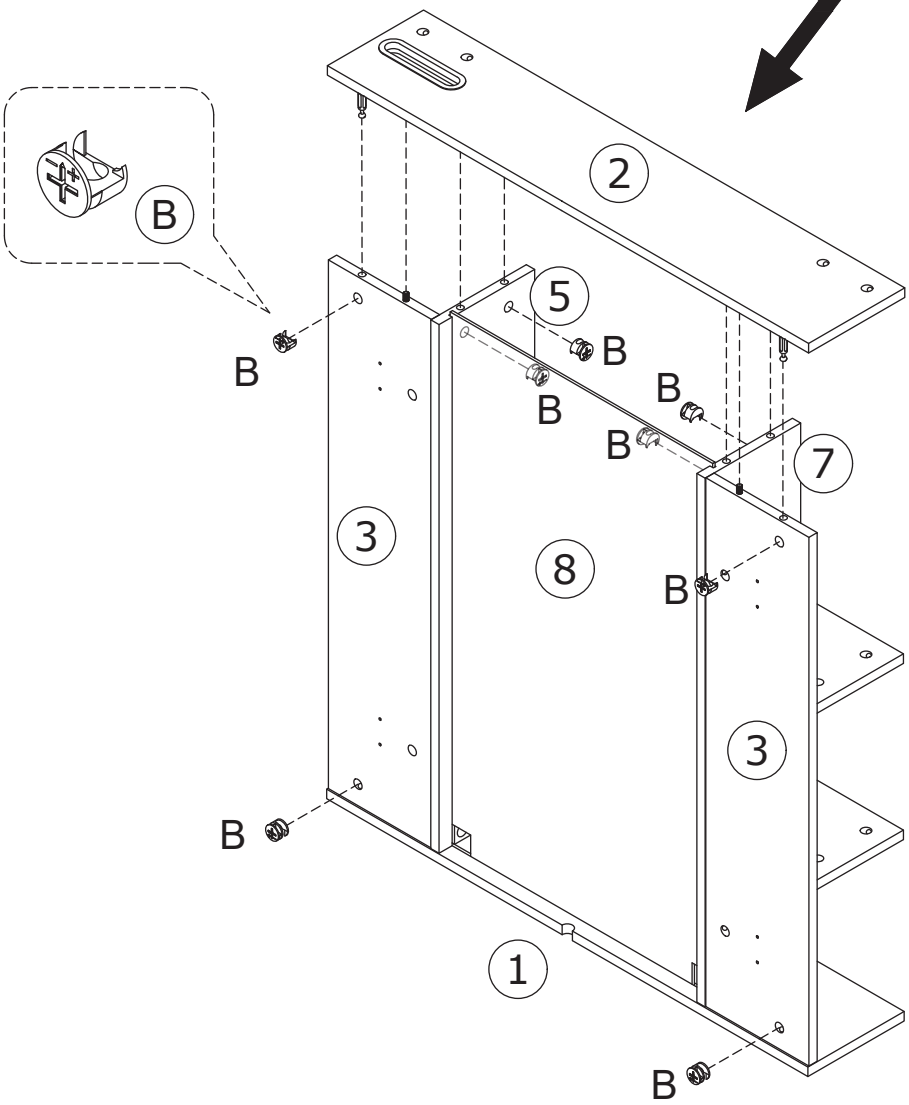



7

A x 12




∅7 x 35 mm

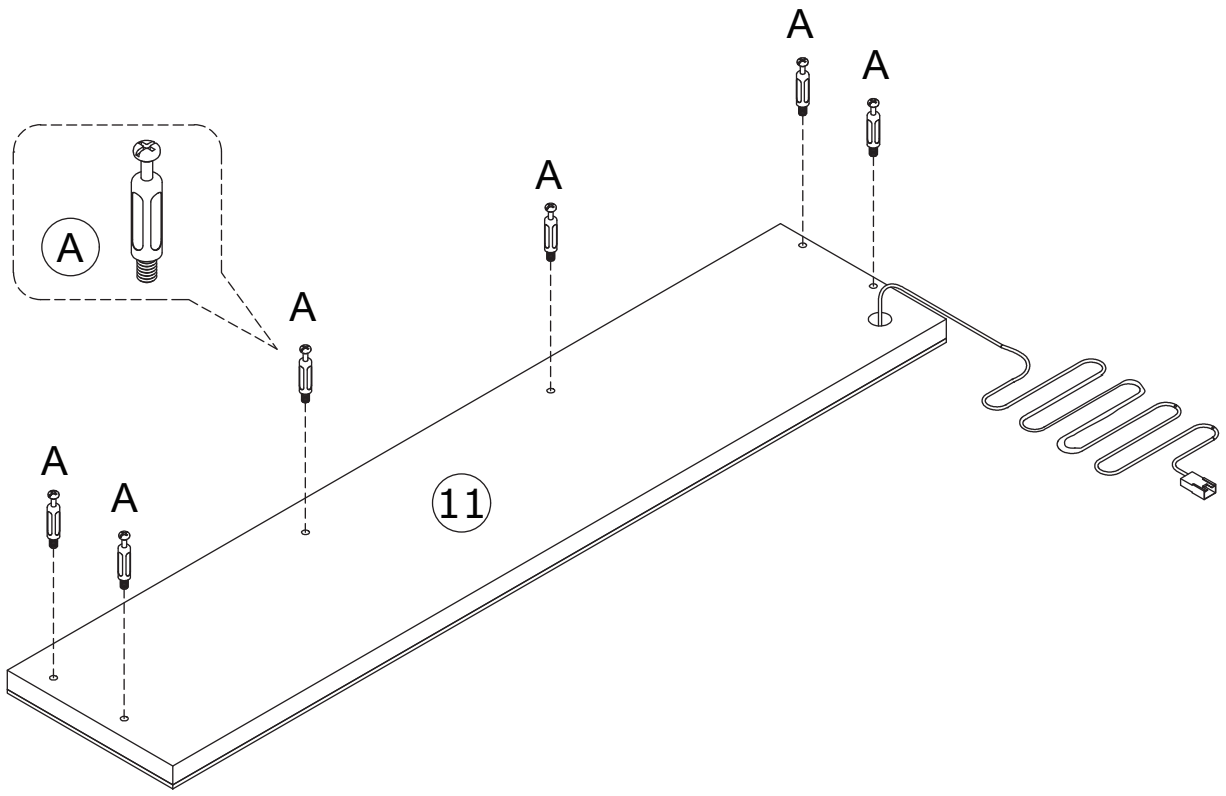

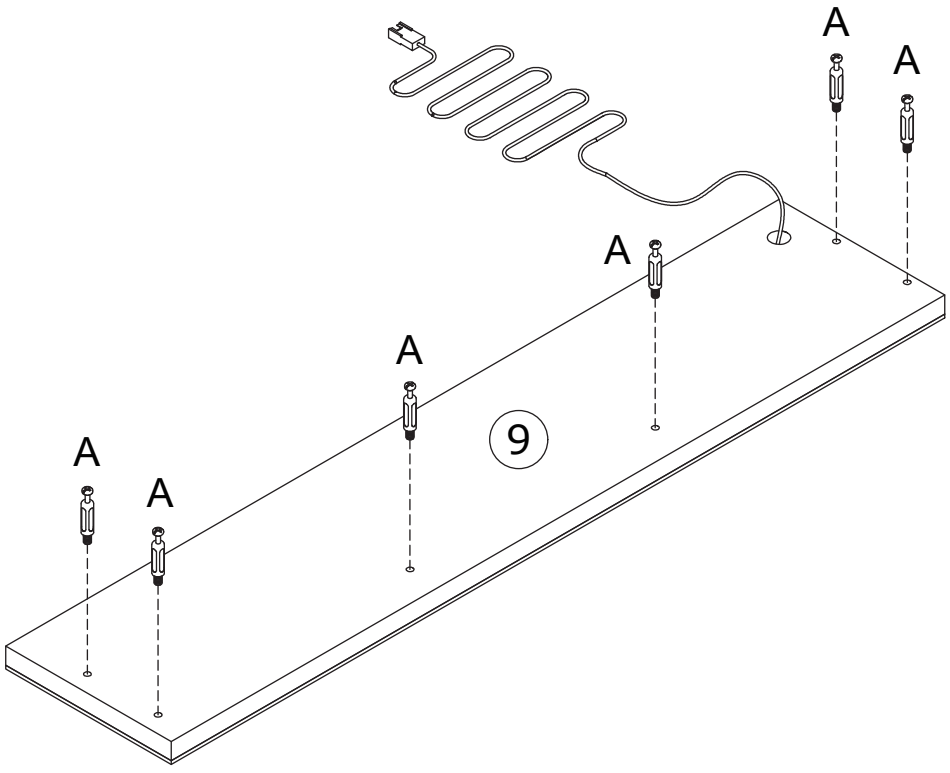



8

B x 12	D x 12	
 ∅12 x 9.5 mm		

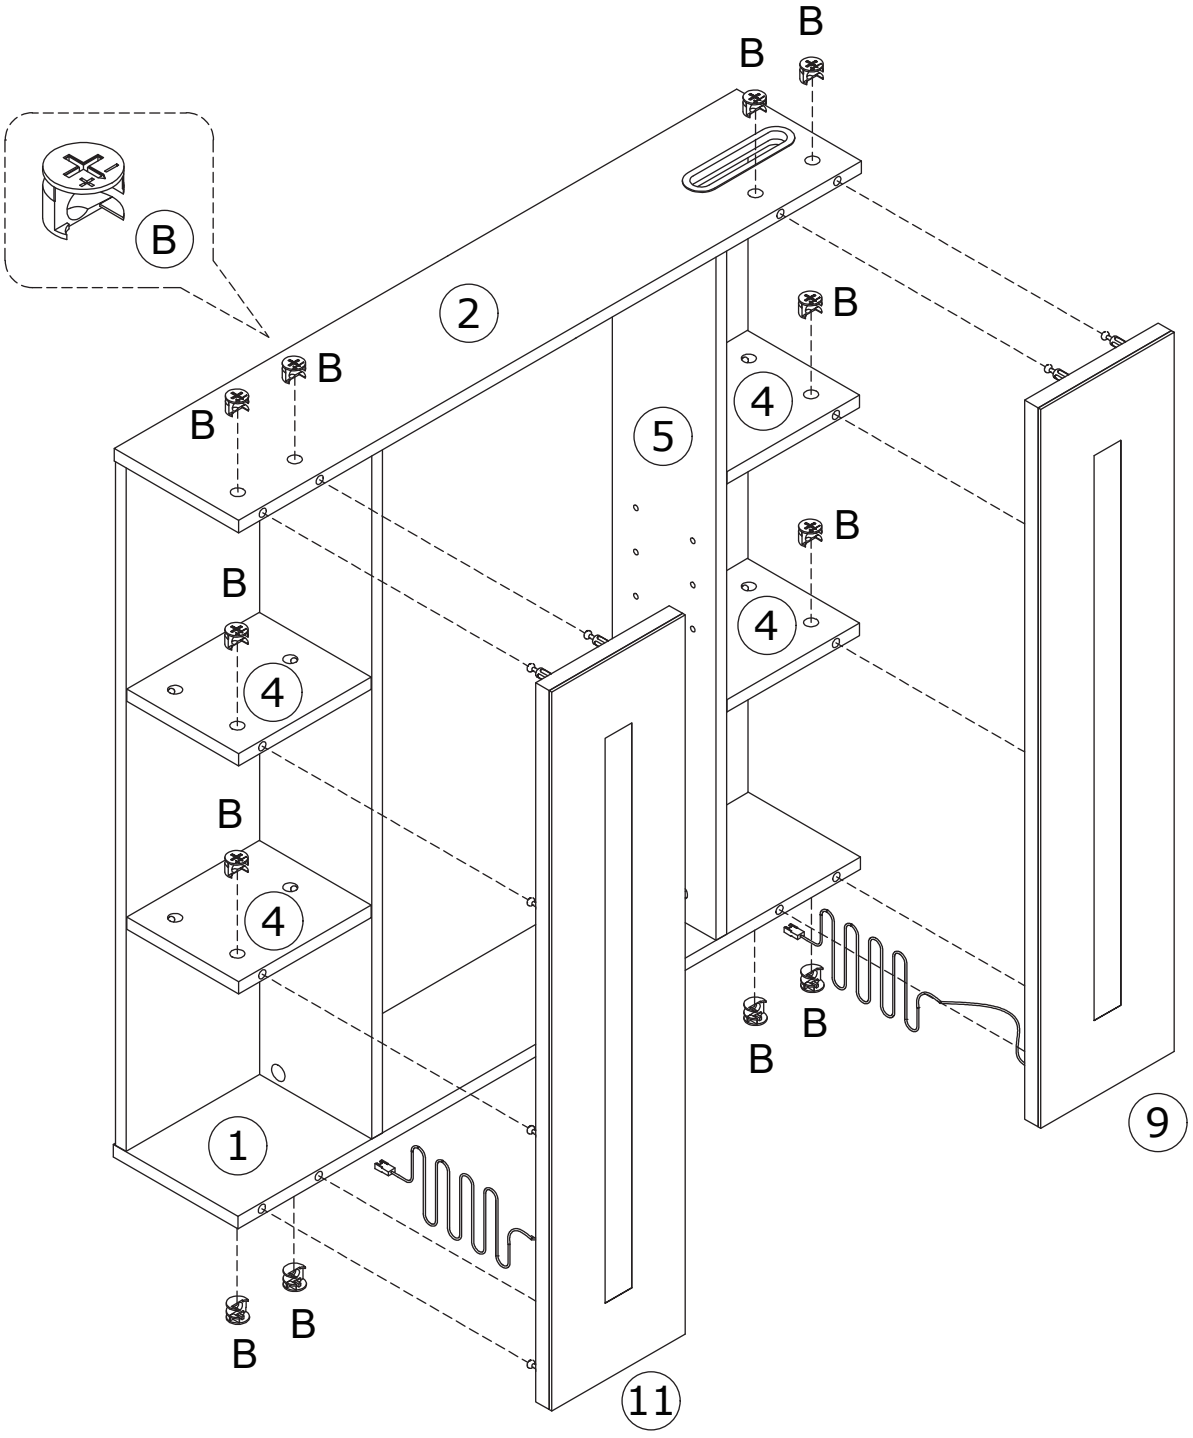


9

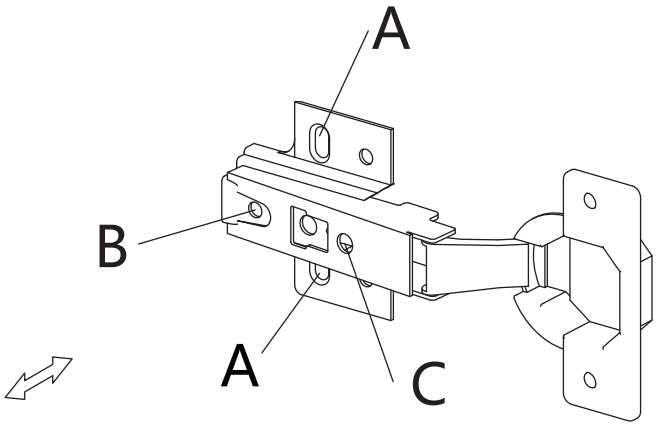

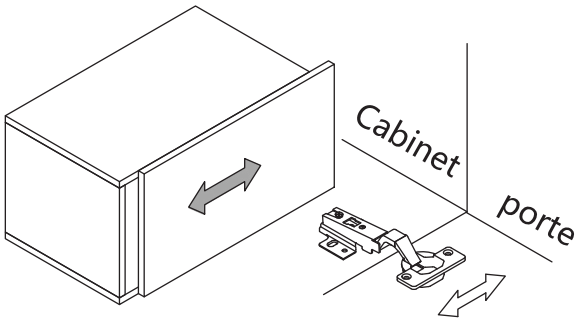


To adjust side ways

Loosen the four screws"A"on both hinges. Two of them are usually in slotted holes which allowsyou to adjust left or right by a few mm.Then tighten back up.

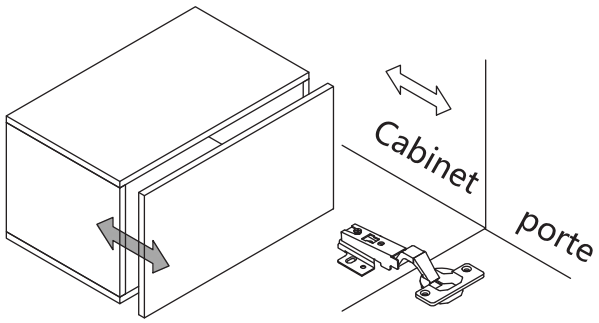

To adjust depth.



Loosen screw"B"and adjust door,if the door can not be adjusted,please loosen screw"C",then try again. Tighten screw"B" and "C".

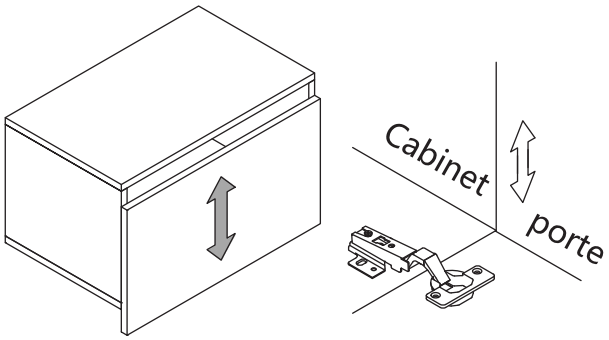



To adjust the vertical height

Turning the screw"C"on hinges on each door. which allows you to adjust up or down by a few mm.


10

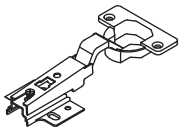
I x 2	E x 12	
	 ∅3.5 x 12 mm	

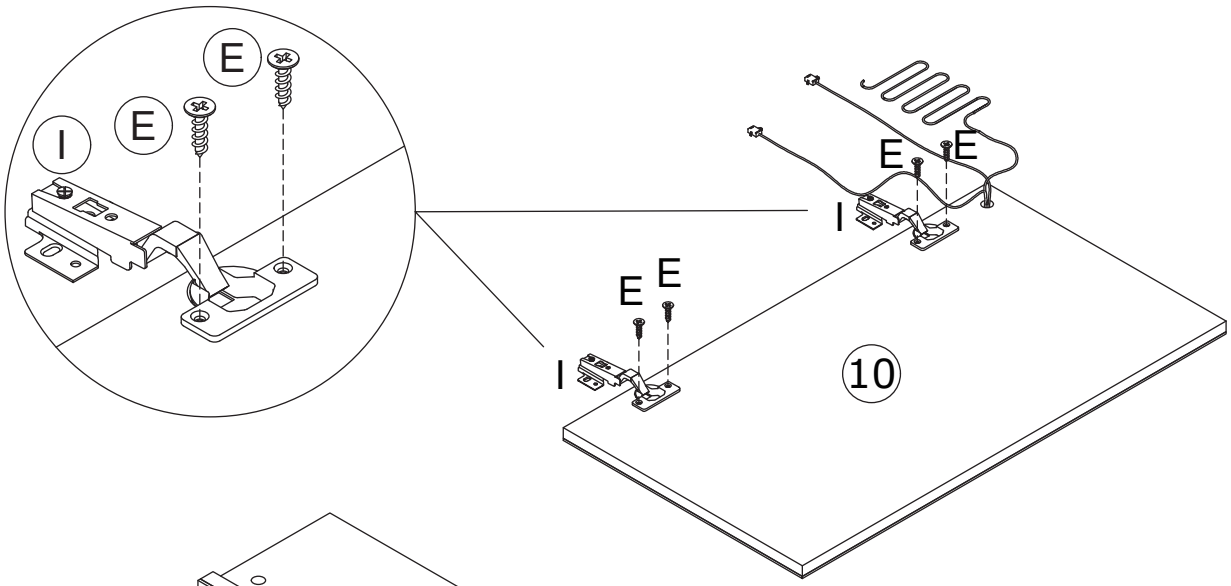

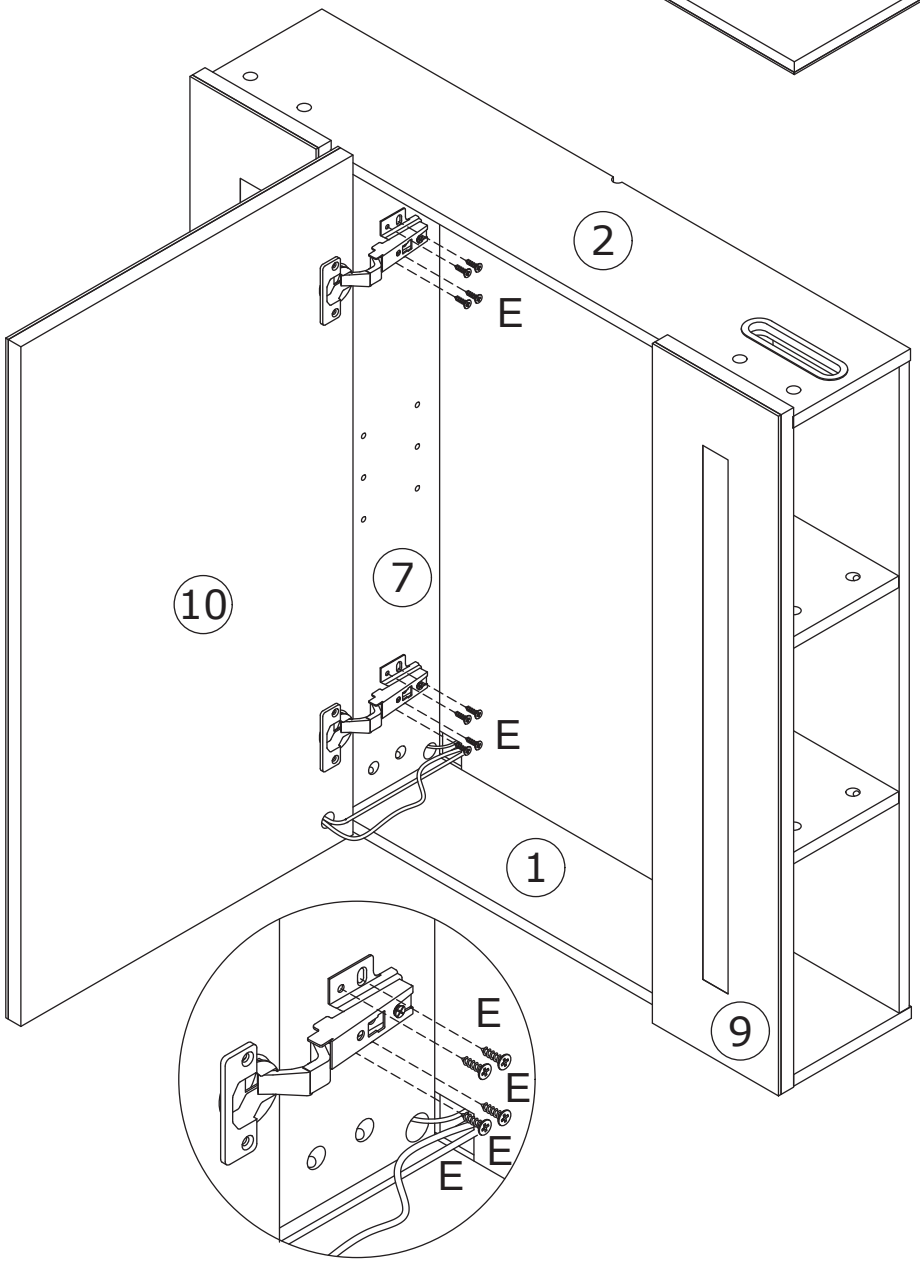




Note: For step 11 of the installation manual, please refer to this diagram when connecting the power cord!

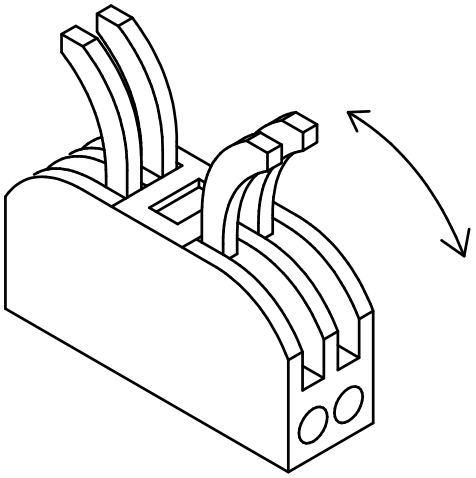


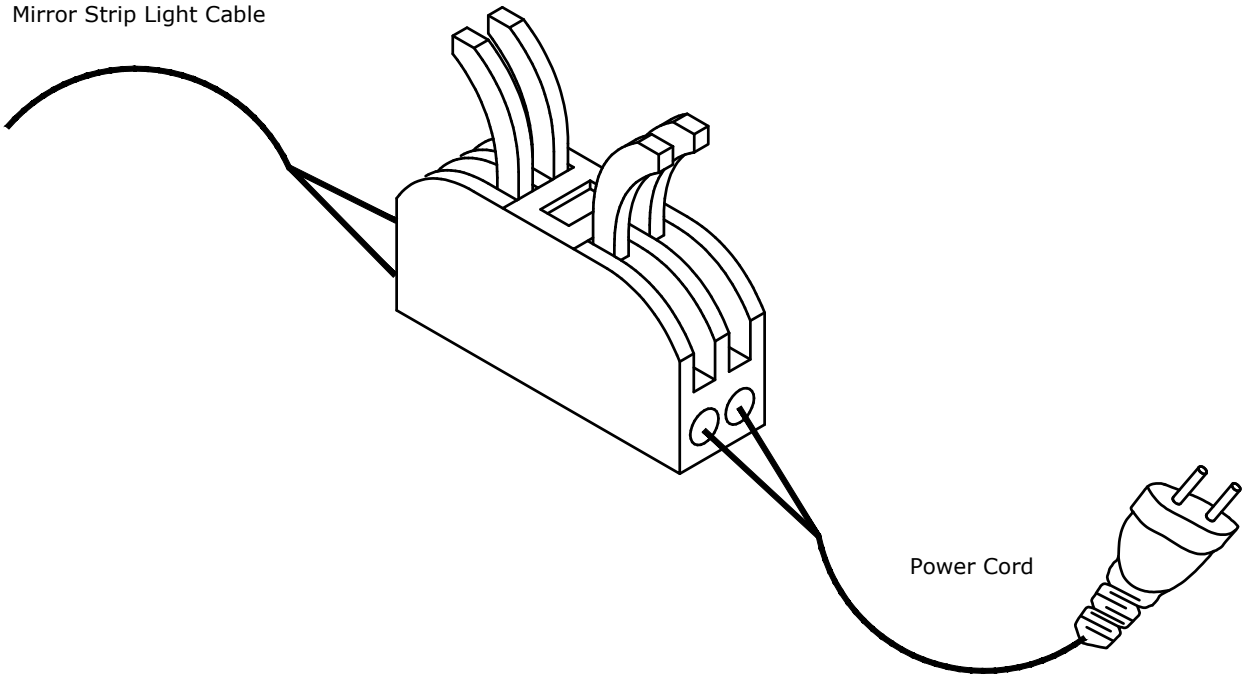

Note: Remove the insulating protective layer on the surface of the wires and retain an appropriate length of the wires. Connect the wires of the same color to the interfaces of the same color. After connection, turn off the switch.


11

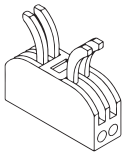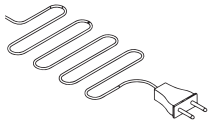E x 8	G x 4	M x 1	N x 1	
 ∅3.5 x 12 mm				

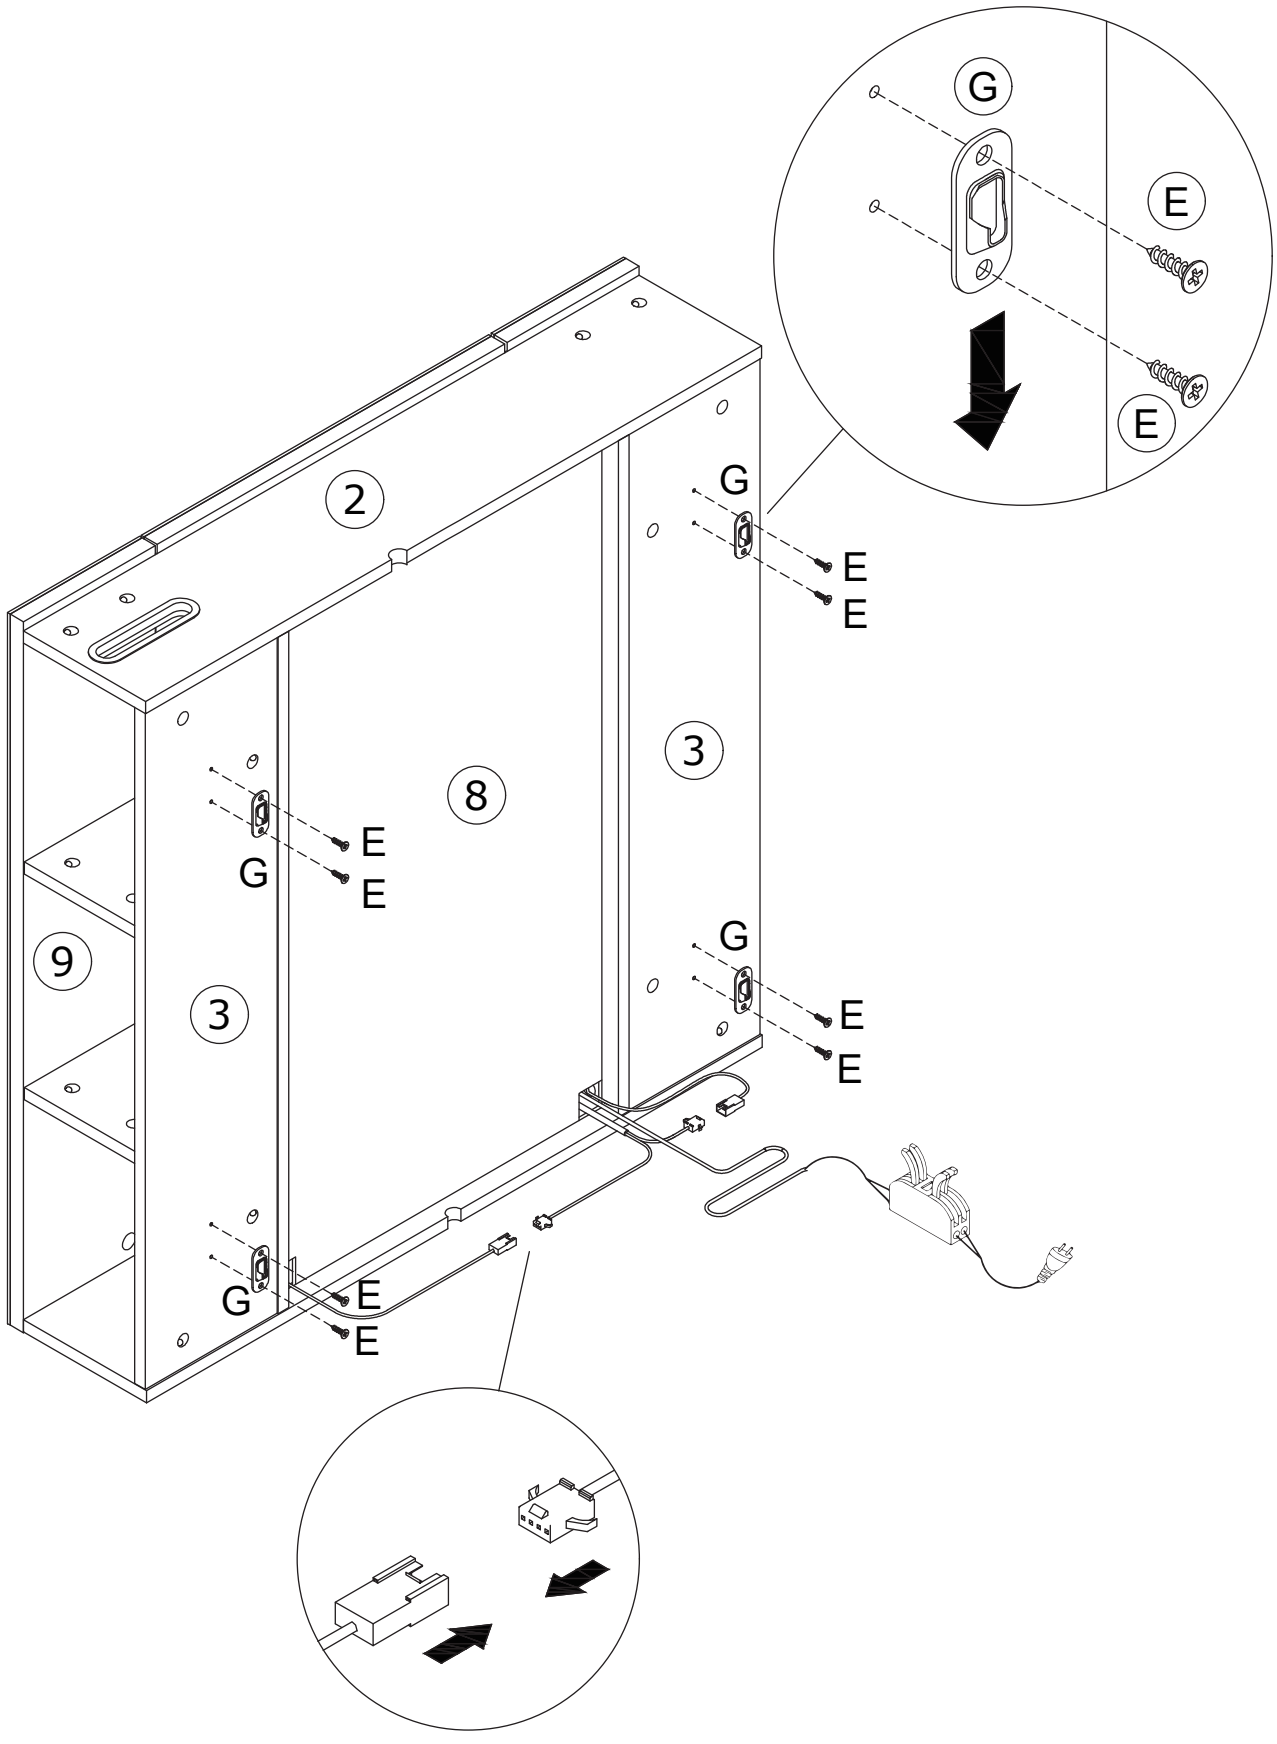



12

L x 4




L1 L2

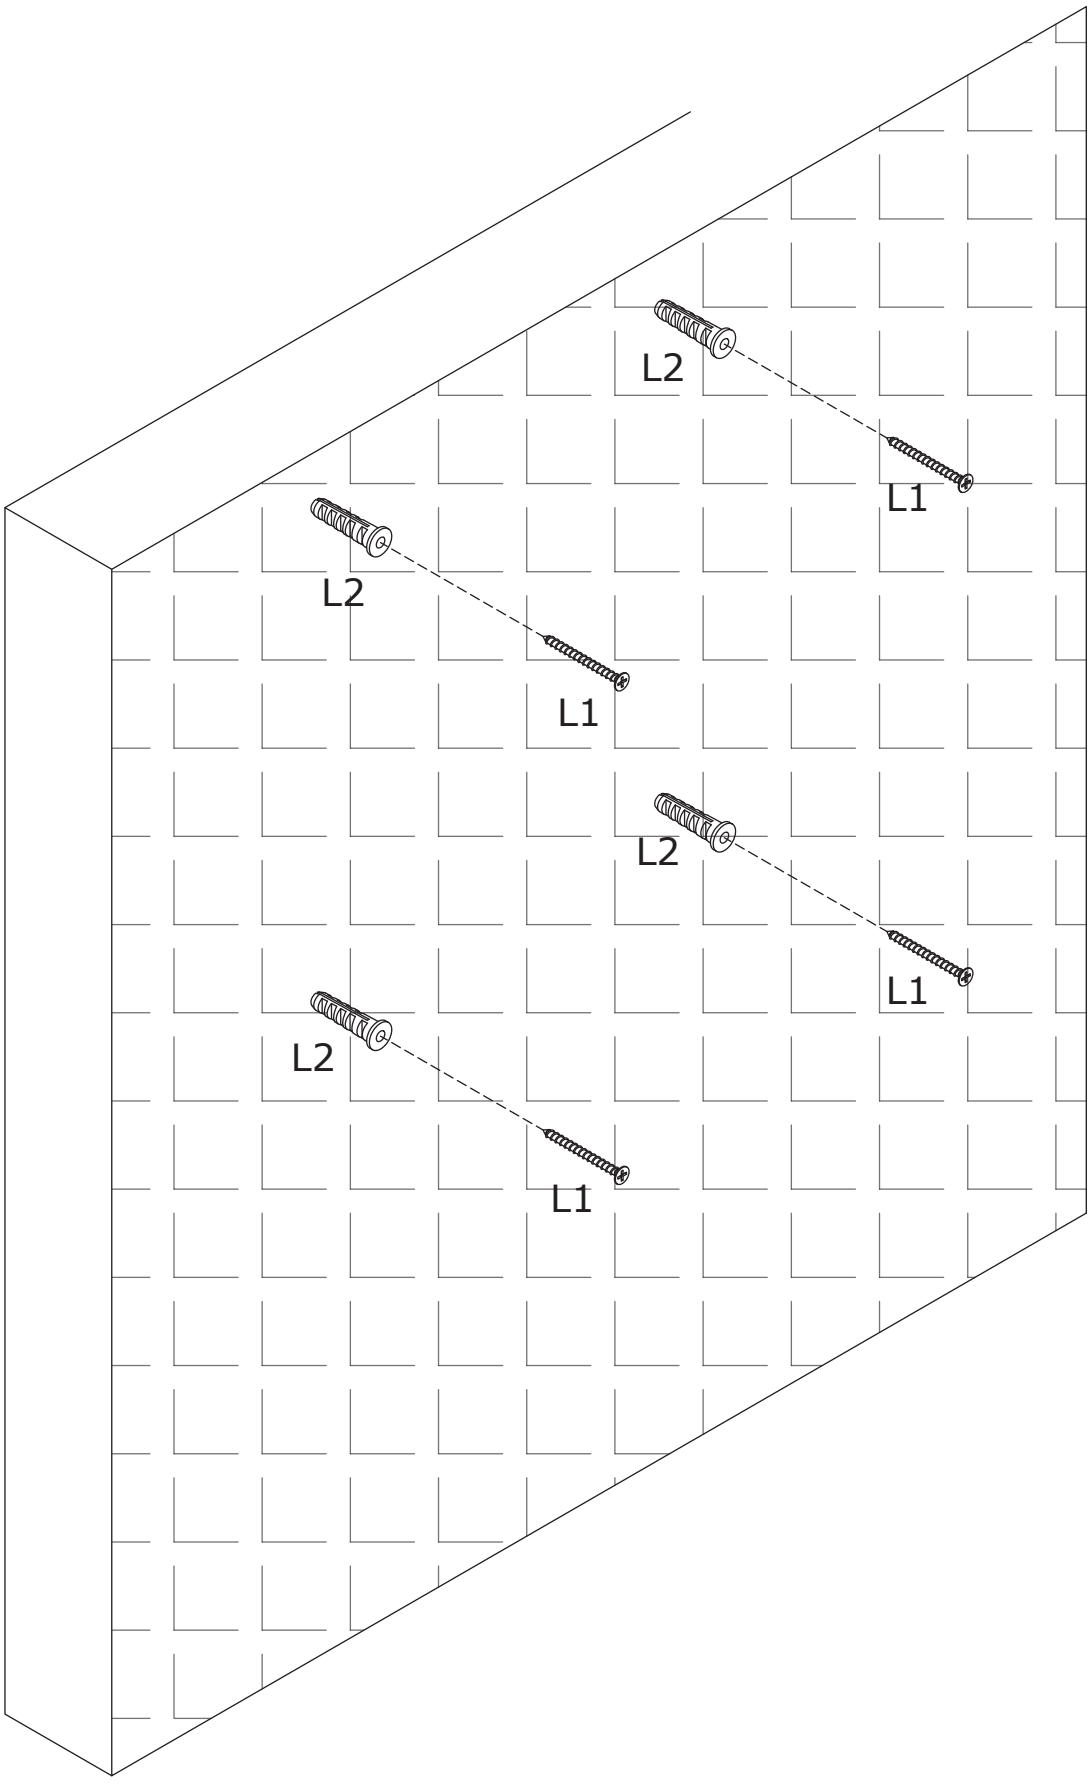

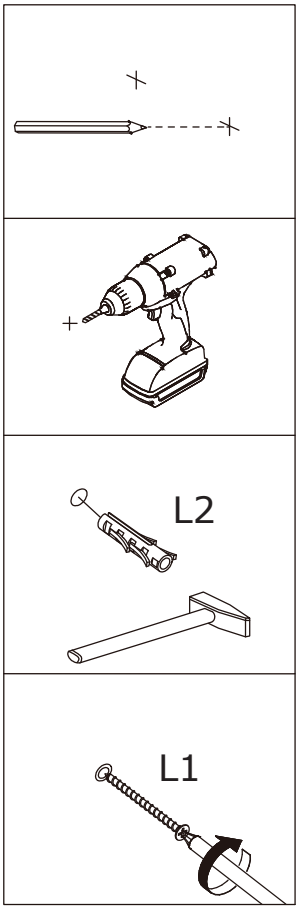


13


Hang all the accessories (G) on the back of the cabinet onto the screws (L) on the wall to prevent them from falling off.

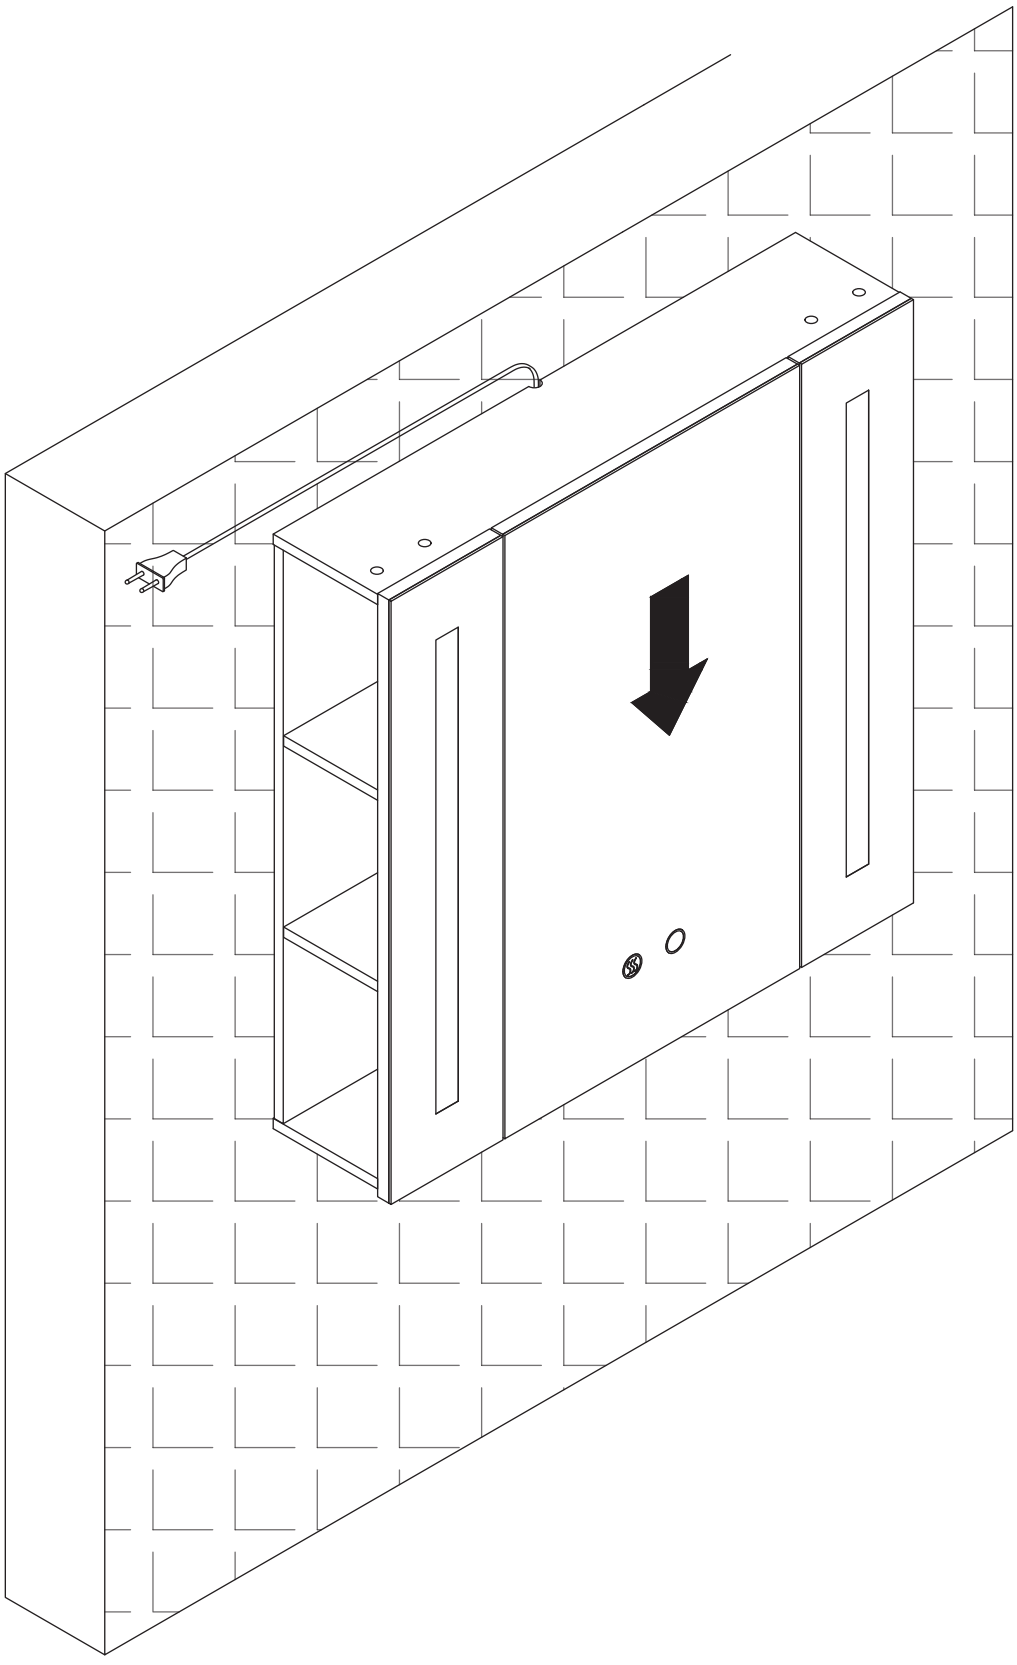



14

K x 4



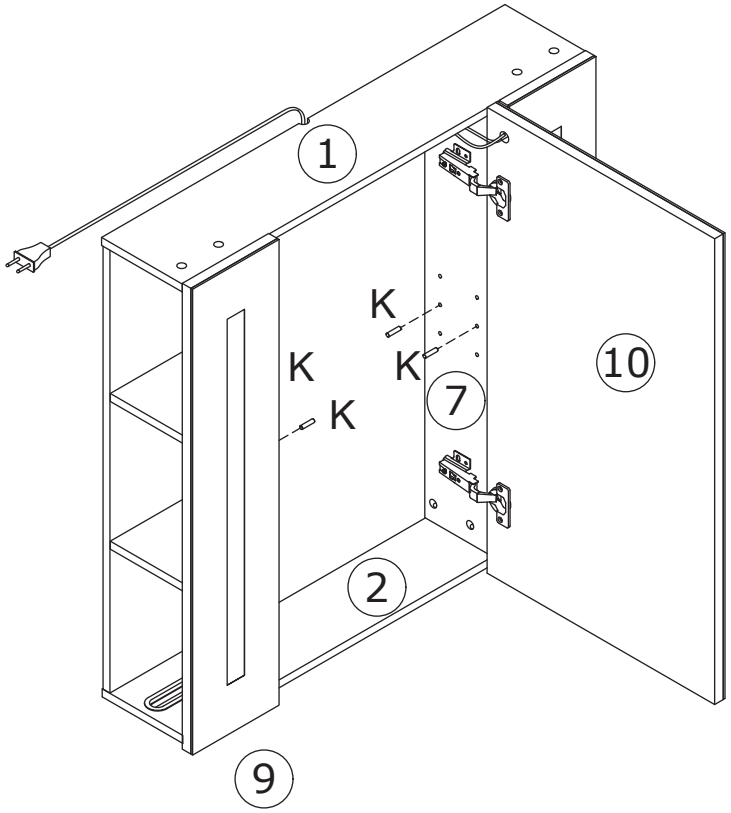

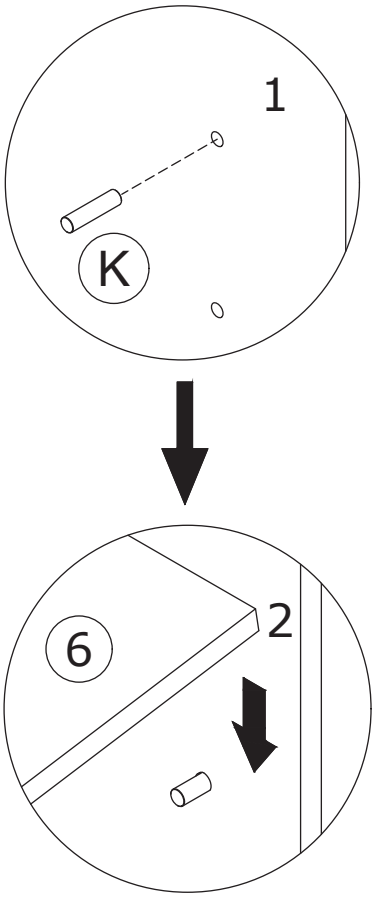

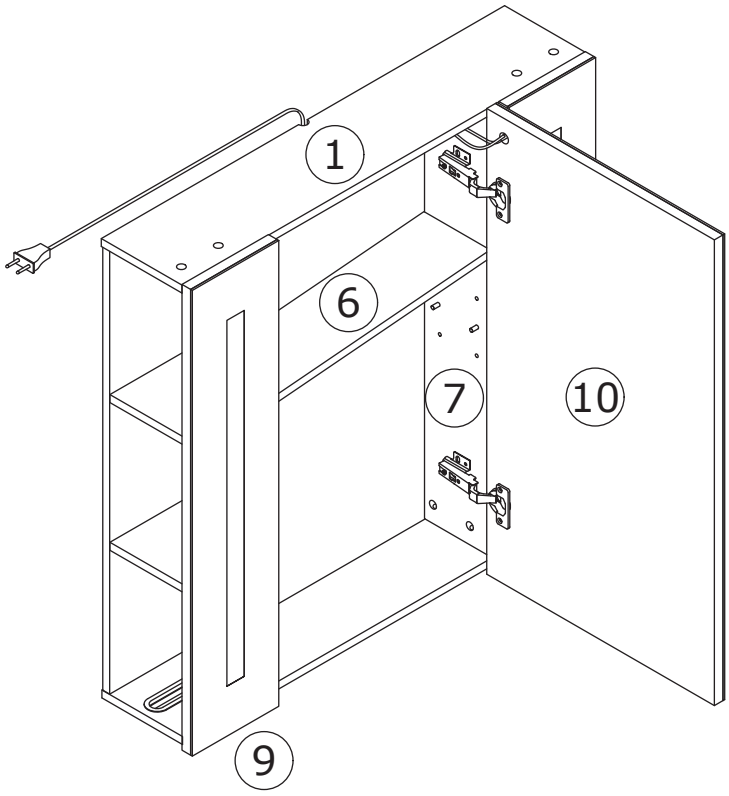

15

-Installation complete.

