



Scan to visit: cloroxhomeappliances.com

Large Room Air Purifier

Purificateur d'air pour grande pièces

Purificador de aire para habitaciones grandes

Read before use / Lire avant utilisation / Lea antes de usar.

For tips, product information and registration: cloroxhomeappliances.com

Pour des conseils, des renseignements sur le produit et l'enregistrement : cloroxhomeappliances.com

Para información del producto y registro: cloroxhomeappliances.com

IMPORTANT SAFEGUARDS

READ AND SAVE THESE INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
- To protect against risk of electrical shock, do not put cord, plug, base, or motor in water or allow water to splash on it.
- Turn the appliance OFF (⏻), then unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Customer Service for information on examination, repair, or adjustment as set forth in the Limited Warranty.
- The use of attachments not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
- Do not use outdoors. Never expose the appliance to rain or water.
- Do not operate this product in any greasy

- environment such as in the kitchen. This product is not intended to filter oil or grease from the air.
- Do not operate this product near an open fire. It may ignite and cause fire, resulting in bodily injury or property damage.
- Do not operate this product in a garage or other area with oil or chemicals such as solvents or insecticides.
- Do not insert foreign objects into the product for any reason. Bodily injury or property damage may occur.
- WARNING:** To reduce the risk of fire or electric shock, do not use this purifier with any solid-state speed control device.
- WARNING:** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer)
- Use only with the power supply cord provided with the appliance. Do not attempt to use the power supply with any other products. Replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Route power cord away from traffic areas, sharp edges, moving parts and hot surfaces. Route power cord away from areas where a person could trip and fall.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This appliance is intended for household use only.

⚠️ WARNING Electrical Shock Hazard:

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so

that it will not drape over the countertop or table top where it can be pulled on by children or accidentally tripped over.

If using an extension cord, it should be connected to the unit's power cord before it is plugged into the outlet. In the case of a power failure, the same procedure should be followed.

This air purifier is equipped with a robust cylindrical three-part filter providing 360-degree filtration. Together the filter captures dust, pollen, dust mites, and smoke. It also helps reduce viruses and bacteria from the air that passes through the filter.

- Pre-Filter:** Removes large particles such as pet hair and large dust particles.
- True HEPA Filter:** Effectively captures 99.97% of airborne particles 0.1 microns and larger.
- Active Carbon Filter:** Reduces gases and bad odors.

NOTE: Do not apply essential oils, fragrance sprays, or any cleaners to the filter as they will damage and reduce efficacy of the filter. Using the air purifier in a room with an open window(s) will reduce purification efficiency and air change rate per hour will significantly decrease.

HOW TO CONNECT TO ALEXA

NOTE: Applies only to Clorox Smart Large Room Air Purifier (model # 11011).

- Download Alexa App from Apple App Store or Google Play Store.
- Plug Air Purifier into outlet. WiFi LED will flash for 5 minutes or until connected to WiFi through Alexa App.
- In Alexa App, select "devices" icon in lower right corner. Next, click "+" icon in top right corner. Select "Air Purifier" from list and then select Clorox brand. Follow on-screen instructions to connect to WiFi.
- Once setup is complete and the WiFi LED is solid red, indicating the device is now online, you can activate remote commands. Press the WiFi-Connect (📶) button again to turn it blue, indicating that the Air Purifier is ready to use remote commands.

NOTE: French and Spanish language commands may not be available.

How to Erase WiFi Profile

Press WiFi-Connect (📶) button and Light (💡) button at the same time for 10 seconds. Two WiFi LEDs will flash red and turn off, indicating WiFi credentials have been erased.

You may also unregister Air Purifier through the app via Alexa App settings page. Supports routers with WEP, WPA, WPA2 802.11 b/g/n 2.4 GHz.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the manufacturer could void your authority to operate the equipment.

Hamilton Beach Brands Consumer Affairs
4421 Waterfront Drive
Glen Allen, VA 23060

Parts and Features

To order parts, visit: cloroxhomeappliances.com

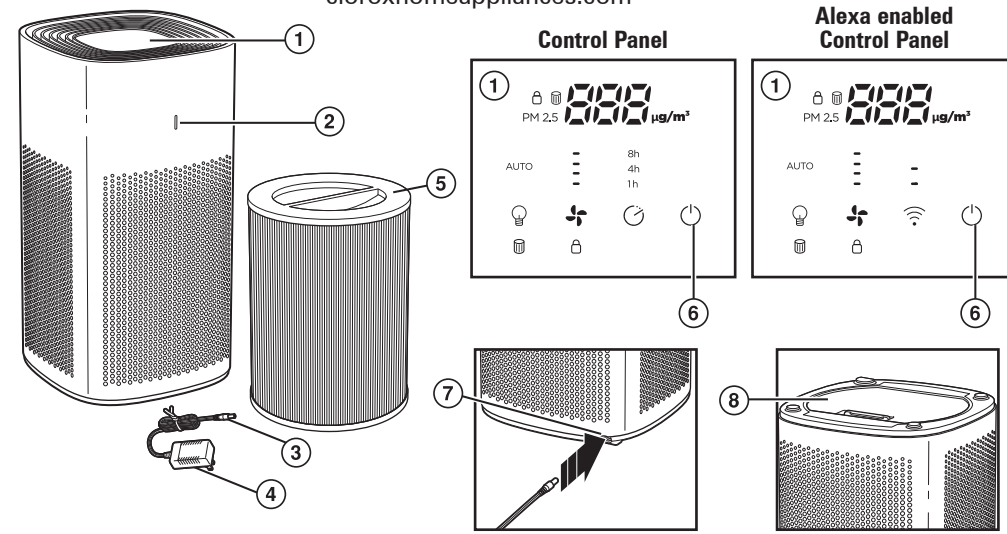

- Control Panel
- Air Quality Indicator Light
- Adapter
- Plug End of Adapter

- Bottom of Air Filter with Handle
- ON/OFF Button (⏻)
- Adapter Opening

- Removable Air Filter Cover with Latch and Tabs

Particulates that are 2.5 microns or smaller can be inhaled and cause irritation, particularly to the lungs. Particles of this size are invisible to the naked eye and can only be seen using a microscope. The PM2.5 sensor measures the quantity of the particulate matter in the air at 2.5 microns (µg/m3) or smaller.

This Air Purifier has 6 air quality ratings, based on the PM2.5 matter in your environment. These ratings provide an accurate indication of indoor air quality. When set to AUTO mode (recommended), the Air Purifier automatically adjusts fan speed to circulate air to clean and improve air quality. To learn more about air quality, visit: <https://www.epa.gov>

PM2.5	RATING	COLOR	AUTO FAN SPEED
0-12	Good	Green	I
13-35	Moderate	Yellow	II
36-55	Unhealthy/sensitive group	Orange	III
56-150	Unhealthy	Red	IIII
151-250	Very Unhealthy	Purple	IIIII
251-999	Hazardous	Maroon	IIIII

Control Panel

ON/OFF Button (⏻): Press to turn unit on or off.
Light (💡): Press to select desired Control Panel and air quality light brightness: On, Dim, or Off. For a quick look at the Control Panel when the lights are off, touch the Fan (🌀) Speeds button once. The Control Panel will turn on for 30 seconds and then will automatically turn off.
Fan (🌀) Speeds: Speeds range from AUTO to I-III.
Time (⌚): Select from 1, 4, or 8 hours hours on non-Alexa enabled model. Set a routine in the

Alexa App for Smart model. If no time is selected the Air Purifier will run continuously.
Screen Lock Feature (🔒): Prevents unintended changes to the function of the Air Purifier. To activate, press and hold Fan (🌀) Speeds button until it beeps and white lock symbol comes on in top left corner of Control Panel.
WiFi-Connect (📶): On Alexa enabled model.
Check Filter Light (🔴): Illuminates red when filter should be checked.

How to Use

- Place Air Purifier on a level surface.
- Plug Adapter into Adapter Opening on back of Air Purifier and plug into outlet. You will hear one beep and the Air Quality Indicator Light will illuminate, then go off.
- Press (🔴) to turn on. Air Quality Indicator Light on front of Air Purifier will illuminate different colors as PM2.5 sensor evaluates air quality. Once complete, color will reflect current air quality. See chart for air quality levels.
- Press Fan (🌀) Speeds button to select AUTO or desired fan speed. AUTO mode automatically adjusts fan speed according to air quality based on PM2.5 sensor. AUTO mode is recommended for daily use.
- Use Light (💡) button to customize the Air Purifier for sleep or everyday use.
NOTE: Air Purifier safety feature: unit will turn off automatically if tilted or knocked over.
Recommended Air Purifier Usage: Set it and forget it! For optimal air quality it is recommended to set Air Purifier to AUTO mode. This will allow Air Purifier to continuously clean the air and will adjust fan speed automatically when there are changes to the air quality.
NOTE: Whenever Air Purifier is moved to a different location and unplugged, WiFi will need to be manually started on Air Purifier display. Select "Add Device", Select "Air Purifier" from the list and select Clorox brand and your model number.

Cleaning (Once per Month; More if Necessary)

- ⚠️ WARNING Electrical Shock Hazard:** Do not immerse unit in water or other liquid.
- Press (🔴) to turn off and unplug.
- To remove Air Filter: Unplug Adapter from bottom and turn Air Purifier upside down.
- Locate Filter Cover and slide Latch towards the center of Cover. Tilt up to remove Air Filter Cover.
- Holding Air Filter Handle, lift Filter straight up to remove. Use a vacuum cleaner with a brush attachment to remove lint or debris.
NOTE: Do not use detergent, solvents or spray cleaner on any part of the Air Purifier or Filter.

To Replace Air Filter

NOTE: Check Filter Light (🔴) illuminates red when Filter should be checked, after approximately 4,380 hours of use. Depending on how often you use the Air Purifier, the Check Filter Light (🔴) should come on after around 6 months of use. You may not have to replace the Filter at this time, but you should check it, and if the Filter is visibly clogged or if you have noticed a reduction in performance, it is time to replace the Filter. It is recommended to replace at least every 6-12 months. You may need to replace your Filter if you notice decreased air flow, smell, or a visibly clogged Filter.

To remove Filter:

- Press (🔴) to turn off, and unplug.
- Unplug Adapter from bottom and turn Air Purifier upside down.

To replace with new Filter:

- Make sure unit is off and unplugged.
- Remove plastic from around new Air Filter.
- Holding Filter Handle, slide straight down into bottom of Air Purifier.
- Holding Filter Cover close to the Latch, tilt and slide Tabs into back of Filter Cover opening.

Storage: When not using the Air Purifier for an extended period, it is recommended to wrap the Filter and

the unit in a plastic bag and place in a cool, dry area. Avoid moisture as it can damage the True HEPA filter.

Troubleshooting

Air Purifier turned off.

- Unit will turn off automatically if tilted or knocked over.

Increase in noise level.

- Check Air Filter. Ensure Air Filter is in correct position.
- Air Filter isn't clean. Replace with new Air Filter.
- Check Air Filter for damage. If damaged, replace with new Air Filter.

Check Filter Light (🔴) on display is illuminated.

- Replace Air Filter and reset the counter. Press and hold Light (💡) button until it beeps to reset.

Air quality status remains poor and Air Quality Indicator Light is red.

- Increase Fan Speed to increase air circulation. If Light remains red, replace with new Air Filter.

WiFi-Connect is not connected.

- Make sure Air Purifier is plugged into an outlet.
- Check WiFi signal. If available, connect to WiFi.

The Clorox name and logo are trademarks of Hamilton Beach Brands and are used under license by Hamilton Beach Brands, Inc.

Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of three (3) years from the date of original purchase. During this period, your exclusive remedy is replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with out returning a product or component under this warranty to you. If the product or component is unavailable, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the

rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make warranty claim, do not return this appliance to the store. Please call 833-480-0692 or write Hamilton Beach Brands, Customer Service Department, 4421 Waterfront Dr., Glen Allen, VA 23060 or visit cloroxhomeappliances.com/contact-us in the U.S. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS IMPORTANTES

VEUILLEZ LIRE ET CONSERVER CES INSTRUCTIONS.

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

- Lire toutes les instructions.
- Une surveillance étroite est requise pour tout appareil utilisé près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.
- Pour protéger contre les risques de choc électrique, ne pas mettre le cordon d'alimentation, la fiche, la base ou le moteur dans l'eau ou ne pas le laisser être éclaboussé par de l'eau.
- Éteindre l'appareil en appuyant sur le bouton OFF (⏻/arrêt), et débrancher ensuite de la prise lorsqu'il n'est pas utilisé, avant d'installer ou d'enlever des pièces et avant de le nettoyer. Pour le débrancher, tenir la fiche et la retirer de la prise. Ne jamais tirer sur le cordon.
- Éviter de toucher les parties mobiles.
- Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Veuillez communiquer avec le service à la clientèle pour obtenir de l'information concernant l'inspection, la réparation ou le réglage, comme précisé dans la garantie limitée.
- L'utilisation d'accessoires non recommandés par le fabricant ou vendus par le fabricant de l'appareil peut provoquer des blessures.
- Ne pas utiliser à l'extérieur.
- Ne pas faire fonctionner ce produit dans des

- environnements gras, comme la cuisine. Ce produit n'est pas conçu pour filtrer l'huile ou la graisse de l'air.
- Ne pas faire fonctionner ce produit près d'une flamme nue. Il peut s'enflammer et causer un incendie, entraînant des blessures corporelles ou des dommages à la propriété.
- Ne pas faire fonctionner ce produit dans un garage ou toute autre zone où il y a présence d'huile ou de produits chimiques, comme les solvants ou les insecticides.
- Ne pas insérer d'objets étrangers à l'intérieur du produit pour quelque raison que ce soit. Cela peut entraîner des blessures corporelles ou des dommages à la propriété.
- AVERTISSEMENT:** Afin de réduire le risque le risque d'incendie ou de choc électrique, ne pas utiliser ce purificateur d'air avec tout dispositif de contrôle de la vitesse semi-conducteur.
- AVERTISSEMENT:** Pour réduire le risque d'incendie, de choc électrique ou de blessure, ne pas utiliser de pièces de remplacement non recommandées par le fabricant (p. ex. des pièces faites à la maison avec une imprimante 3D).
- Utiliser seulement avec le cordon d'alimentation fourni avec l'appareil. Ne pas tenter d'utiliser le cordon d'alimentation avec tout autre produit. Le remplacement et les réparations doivent être effectués par le fabricant, un réparateur agréé, ou toute autre personne possédant les mêmes qualifications afin d'éviter tout risque.

CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur

Cet appareil est destiné à un usage domestique uniquement.

⚠️ AVERTISSEMENT Risque de choc électrique

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Prendre toutes les

précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

Si vous utilisez une rallonge électrique, elle doit toujours être branchée à l'appareil en premier, avant d'être branchée à la prise. En cas de rupture de courant, veuillez suivre le même processus.

Pré-filtre : Élimine les grosses particules comme les poils d'animaux domestiques et les grosses particules de poussière.

1. Filtre True HEPA : Capture 99,97 % des particules aériennes de 0,1 micron et plus de façon efficace.

2. Filtre avec charbon activé : Réduit les gaz et les mauvaises odeurs.

REMARQUE : Ne pas appliquer d'huiles essentielles, de parfums en vaporisateur ou tout type de nettoyant sur le filtre, car ils endommageront le filtre et réduiront leur efficacité.

Débit d'air propre (CADR) : Ce purificateur d'air a un CADR de 206 pieds cubes/minute (pi³/min) ou 350 mètres cube/heure. Le CADR représente le volume d'air en pi³/min dont les particules d'une certaine grosseur ont été éliminées.

Changements d'air par heure : Lorsque la vitesse du ventilateur est réglée à 4, ce purificateur d'air renouvelle l'air d'une pièce de 29,7 m² (320 pi²) 5 fois par heure et une fois par heure pour une pièce d'une

superficie allant jusqu'à 139 m² (1500 pi²)***

Avertissement : ***Données basées sur des essais indépendants de certification de débit d'air purifié (CADR), lorsque le ventilateur fonctionne à la vitesse maximale. Les superficies de pièce suggérées correspondent à une pièce fermée ayant un plafond de 2,43 m (8 pi).

REMARQUE : L'utilisation d'un purificateur d'air dans une pièce dont les fenêtres sont ouvertes réduira l'efficacité de la purification et le taux de changement d'air par heure diminuera de façon considérable.

Comment établir la connexion avec Alexa

REMARQUE : S'applique seulement au purificateur d'air intelligents pour grandes pièces Clorox (modèle n° 11011).
1. Télécharger l'application Alexa à partir du App Store de Apple ou du Google Play Store.
2. Brancher le purificateur d'air dans la prise. Le voyant à DEL du Wi-Fi clignotera pendant 5 minutes ou jusqu'à ce qu'il soit connecté au Wi-Fi avec l'application Alexa.

3. Dans l'application Alexa, sélectionner l'icône « devices » (appareils) située dans le coin inférieur droit. Ensuite, cliquer sur l'icône « + » dans le coin supérieur droit. Sélectionner « Air Purifier » (Purificateur d'air) à partir de la liste, puis sélectionner la marque Clorox. Suivre les instructions sur l'écran pour vous connecter au réseau Wi-Fi.
4. Une fois que l'installation terminée et que le voyant à DEL du Wi-Fi est en rouge, indiquant que l'appareil est maintenant en ligne, vous pouvez activer les commandes à distance. Appuyer sur le bouton WiFi-Connect (📶) de nouveau afin qui s'allume en bleu, indiquant que le purificateur d'air est prêt à recevoir des commandes à distance.

REMARQUE : Il se peut que les commandes en français et en espagnol ne soient pas disponibles.


Comment effacer un profil WiFi

Appuyer sur le bouton WiFi-Connect (📶) et le bouton Light (💡/luminescence) en même temps pendant 10 secondes. Deux voyants à DEL clignoteront en rouge se s'éteindront, indiquant que les informations d'identification Wi-Fi ont été effacées.

Vous pouvez également désenregistrer le purificateur d'air à l'aide de l'application, à partir de la page des paramètres de l'application Alexa. Compatible avec les routeurs avec WEP, WPA, WPA2 802.11 b/g/n 2.4 GHz. Cet appareil répond aux exigences de la section 15 de la réglementation FCC. Le fonctionnement est soumis

Pour commander des pièces, visiter : cloroxhomeappliances.com

Pièces et caractéristiques

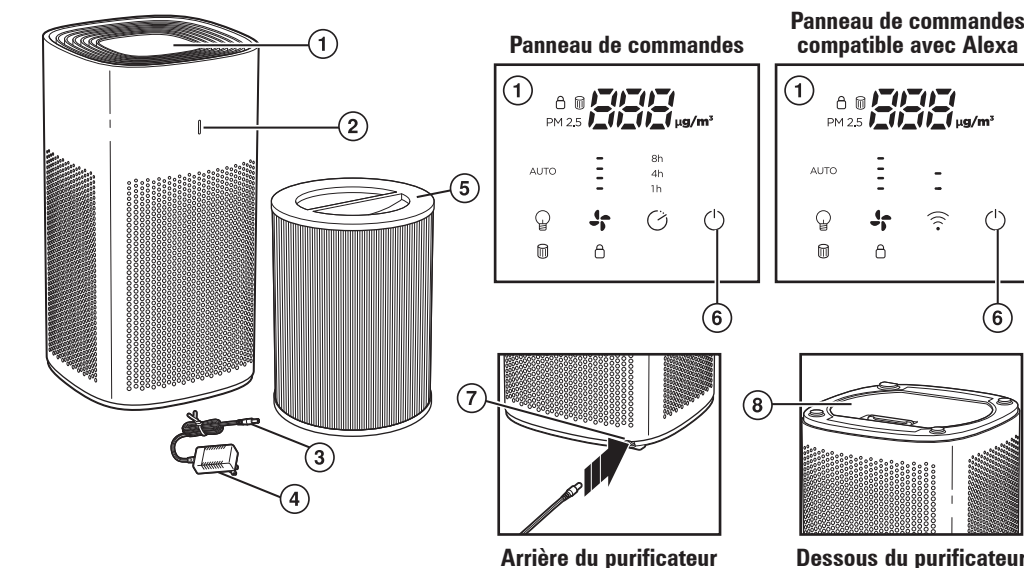

- Panneau de commandes
- Voyant indicateur de la qualité de l'air
- Adaptateur
- Côté fiche de l'adaptateur

- Dessous du purificateur avec poignée
- Bouton ON/OFF (⏻) (marche/arrêt)

- Ouverture pour l'adaptateur
- Couvercle du filtre à air amovible avec loquets et languettes

Les particules de 2,5 microns ou moins peuvent être inhalées et provoquer des irritation, en particulier dans les poumons. Les particules de cette grosseur ne sont pas visibles à l'œil nu et ne peuvent être vues qu'avec un microscope. Le capteur PM2.5 mesure la quantité de matière particulaire dans l'air d'une grosseur de 2,5 microns (µg/m³) ou moins. Ce purificateur d'air dispose de 6 indices de la qualité de l'air selon la quantité de particule fines

(PM2.5) dans votre environnement. Ces indices fournissent une indication précise de la qualité de l'air à l'intérieur. Lorsqu'il est réglé en mode AUTO (recommandé), le purificateur d'air ajuste automatiquement la vitesse du ventilateur pour circuler l'air afin de le nettoyer et d'améliorer la qualité de l'air. Pour en apprendre davantage au sujet de la qualité de l'air, consultez le site : <https://www.epa.gov>

PM2.5	INDICE	COULEUR	VITESSE DE VENTILATEUR AUTOMATIQUE
0-12	Bon	Vert	I
13-35	Modéré	Jaune	II
36-55	Malsain/groupe sensible	Orange	III
56-150	Malsain	Rouge	IIII
151-250	Très malsain	Violet	IIIII
251-999	Dangereux	Rouge foncé	IIIII

Panneau de commandes

Bouton ON/OFF (⏻/marche/arrêt) : Appuyer pour mettre l'appareil en marche ou l'arrêter.

Luminosité (💡) : Appuyer pour sélectionner la luminosité du panneau de commandes et du voyant de la qualité de l'air : Allumé, faible, éteint. Pour voir le panneau de commandes rapidement lorsque les lumières sont éteintes, toucher le bouton

des vitesses du ventilateur (🌀) une fois. Le panneau de commandes s'allumera pendant 30 secondes puis s'éteindra automatiquement.

Vitesses du ventilateur (🌀) : les vitesses vont de AUTO à I-III.
Durée (⌚) : Sélectionner 1, 4 ou 8 heures sur les modèles qui ne sont pas compatibles avec

