ASSEMBLY INSTRUCTIONS



TOOLS REQUIRED



Screwdriver
(Not Included)




(Included)

Allen Wrench



2 - People

ASSEMBLY RATING



EASY ——————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK BEFORE STARTING

- [ ] Are you missing anything?

  Double-check all parts, hardware and accessories listed are all acccounted for.

- [ ] Should we send any replacements?

  Are there any irregularities or flaws in the parts? We can send replacements!

- [ ] Check out our Quick Tips!


  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

- [ ] Prep Time!

  Please review the assembly instructions and all diagrams prior to assembling.


PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

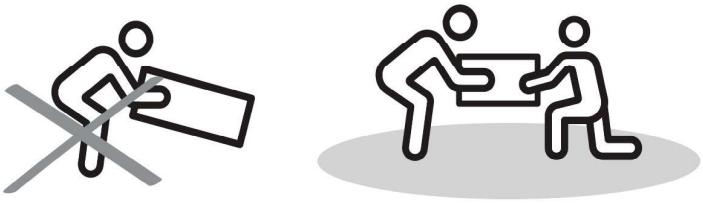

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

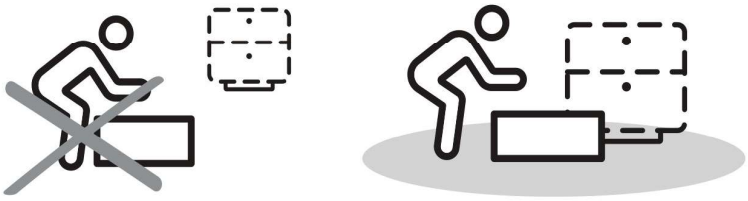


Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.

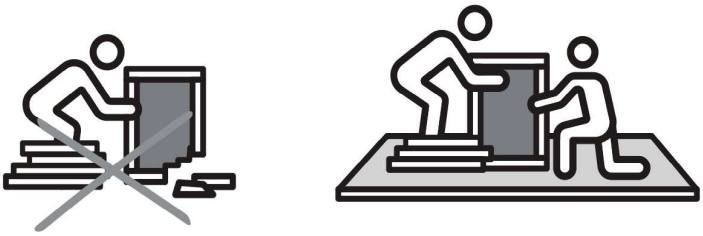

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

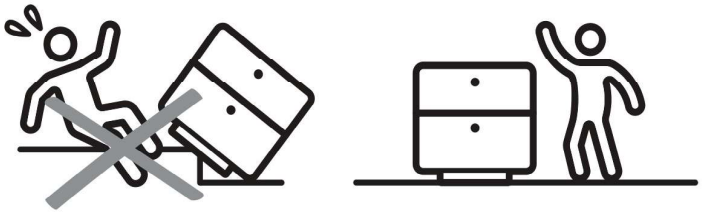

Flat Surface


Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE

FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

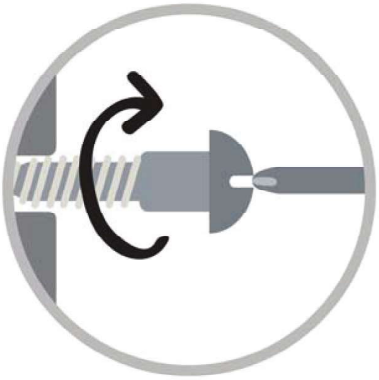


Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.




Save the instructions and store any supplied tools for later maintenance.

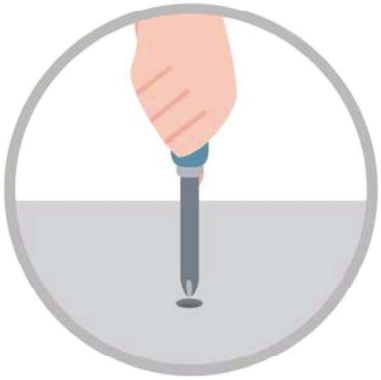


After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.



IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DINING CHAIR

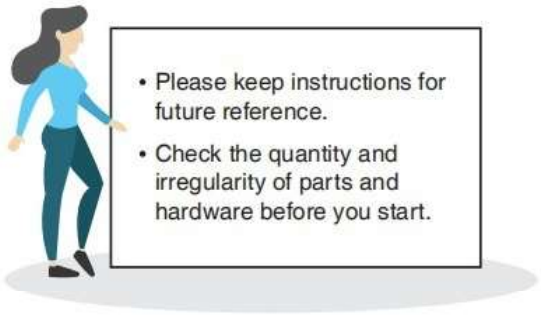



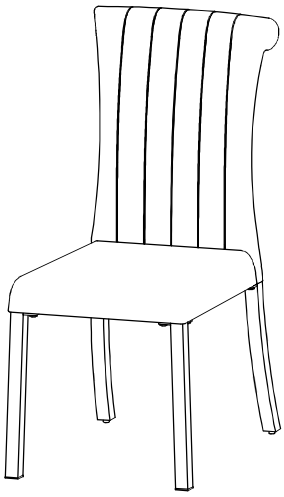


PARTS
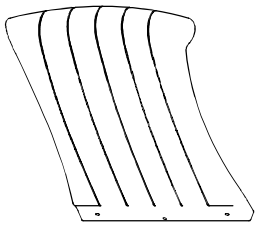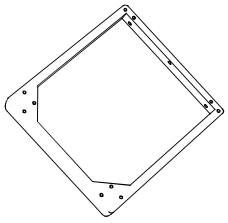
#1	#2	#3	#4	#5
				
Backrest 1pc	Seat Bag 1pc	Leg 2pcs	Leg 1pc	Leg 1pc

HARDWARE


#A	#B	#C	#D
			
Allen Wrench 1pc	Bolt 5/16" x 1" 12pcs	Bolt 5/16" x 1-9/16" 3pcs	Flat Washer 15pcs

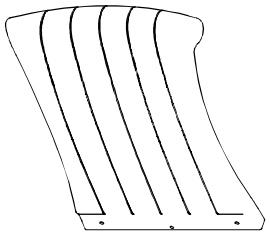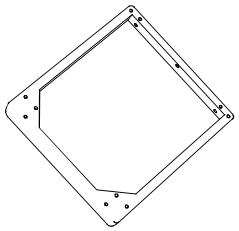Carton	Designation	Part		Hardware
2089	Backrest 1pc	#1		#A 1pc  #B 12pcs  #C 3pcs  #D 15pcs 
	Seat Bag 1pc	#2		
	Leg 2pcs	#3		
	Leg 1pc	#4		
	Leg 1pc	#5		

ASSEMBLY INSTRUCTIONS


1

Part #1 x1pc
Part #2 x1pc
Hardware #A x1pc
Hardware #C x3pcs
Hardware #D x3pcs

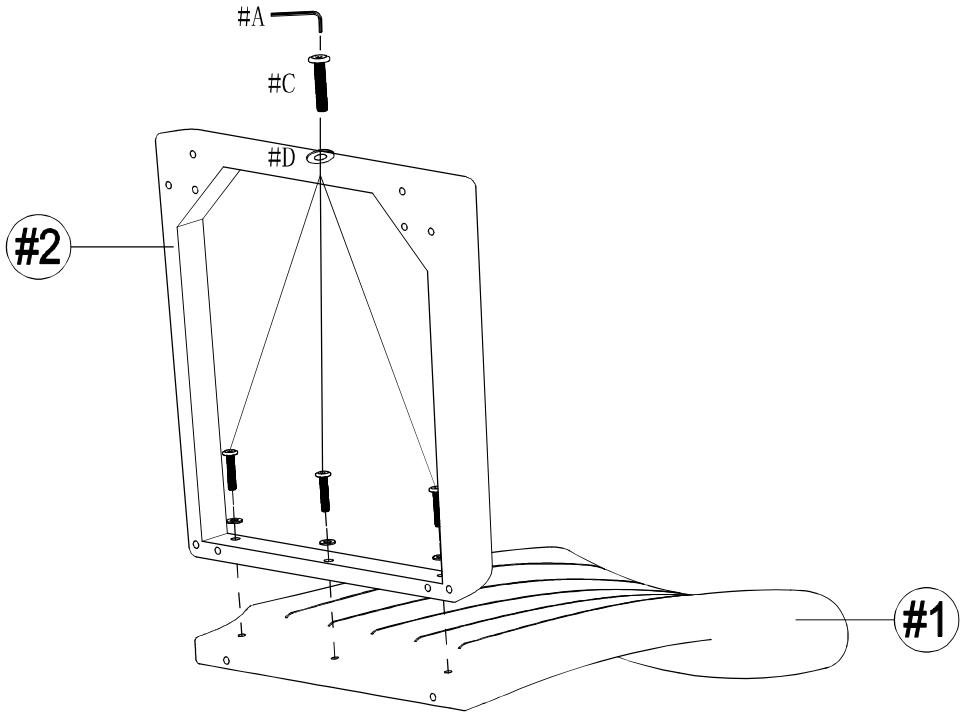

2


Part #4 x1pc
Part #5 x1pc
Hardware #A x1pc
Hardware #B x6pcs
Hardware #D x6pcs

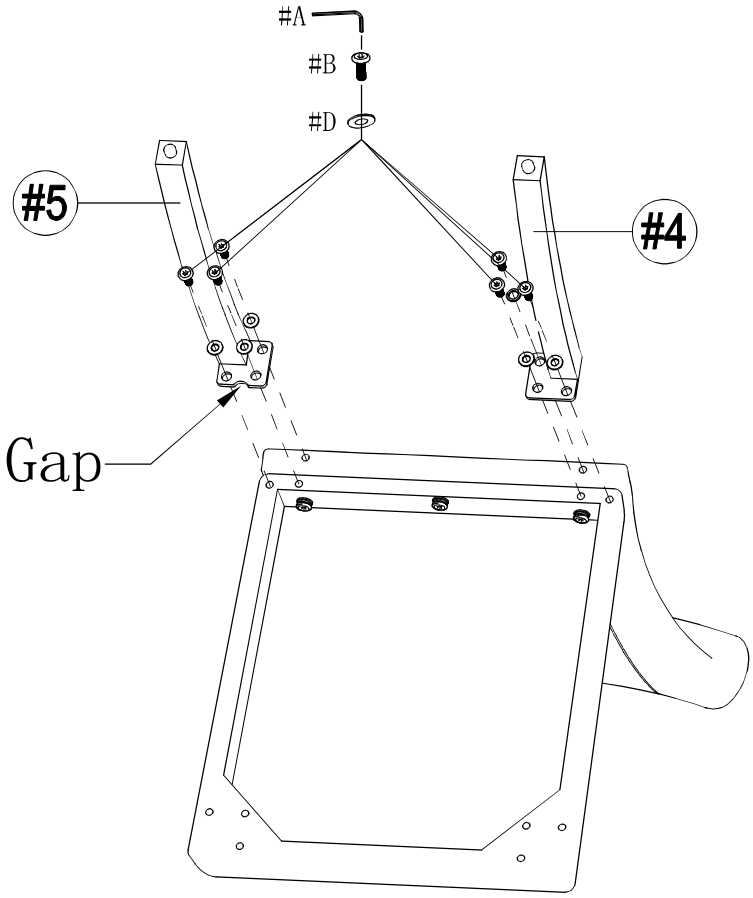


ASSEMBLY INSTRUCTIONS

3

Part (#3) x2pcs
Hardware (#A) x1pc
Hardware (#B) x6pcs
Hardware (#D) x6pcs

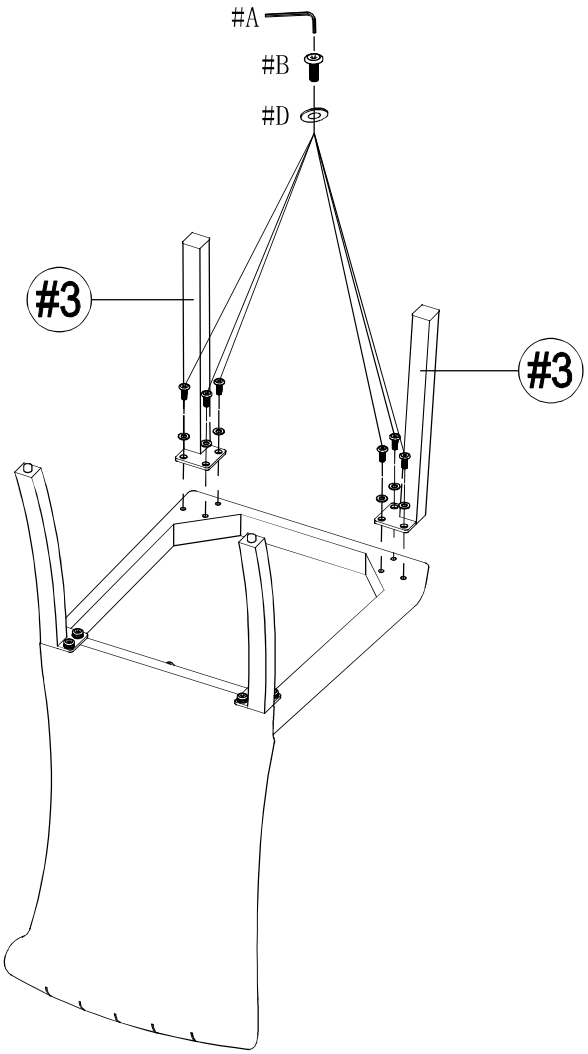

COMPLETED

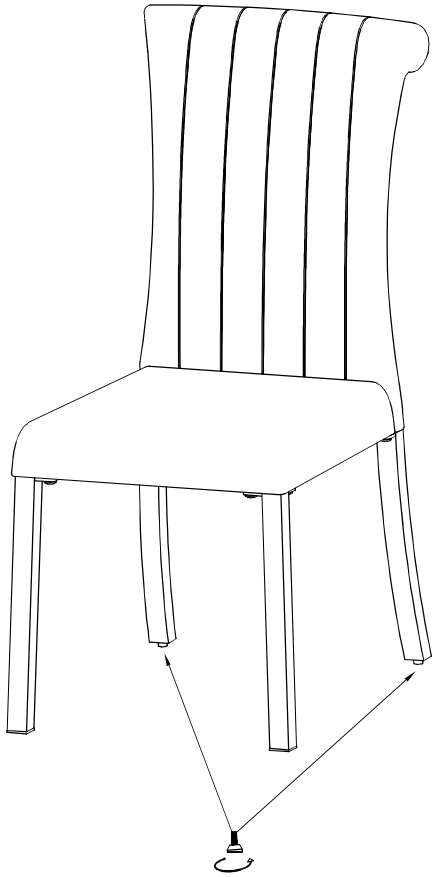

Adjustable feet can be used to adjust the balance of the product

ASSEMBLY COMOLETED

Please ensure the furniture rests on an even and flat surface.If the product wobbles or feels loose,double-check all bolts and/or screws are properly tightened and secured

Keep this handy!

Please relain this instruction manual and any order-related information for future reference.

Lift,don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intented for RESIDENTIAL USE ONLY and not for commercial use.