
RPC70FP36P

Assembly Instructions

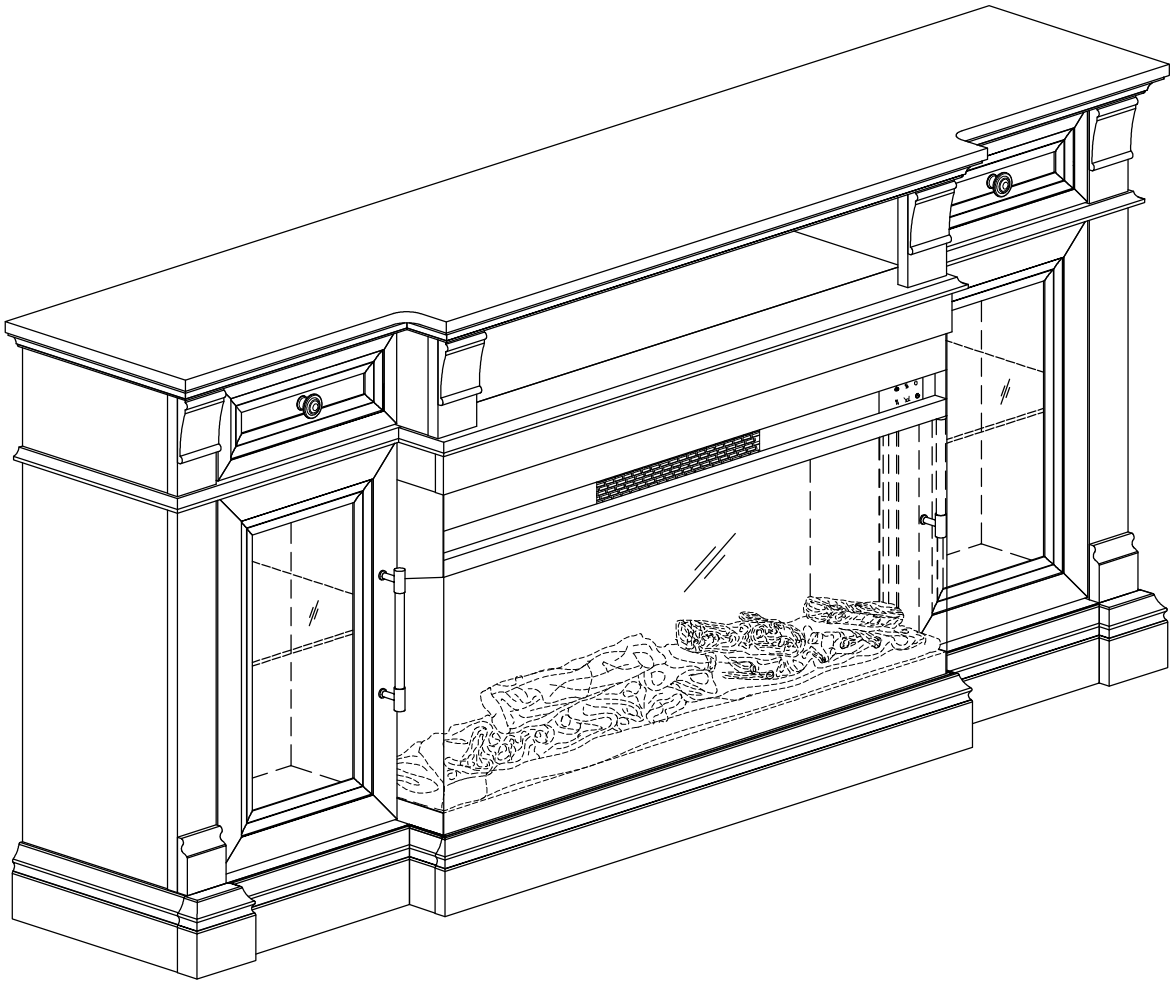

Date 2025-08-06 Rev.01-A


General Assembly Guidelines

I. Ensure that all parts and hardware are available before beginning assembly.


II. Follow each step carefully to ensure the proper assembly of this product.

III. Two people are recommended for ease in the assembly of this product.


IV. A Phillips head screwdriver is required for the assembly of this product .

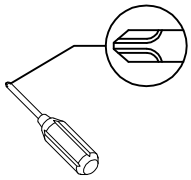

V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

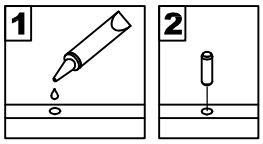

In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

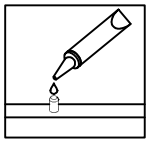


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.


4.Use the sticker to conceal the Cam.

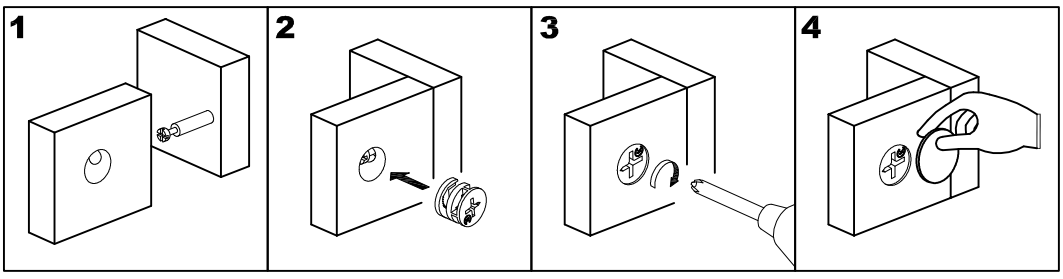








VII. Power tools should not be used to assemble this product .

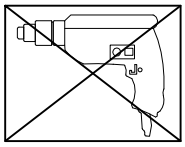





Parts List

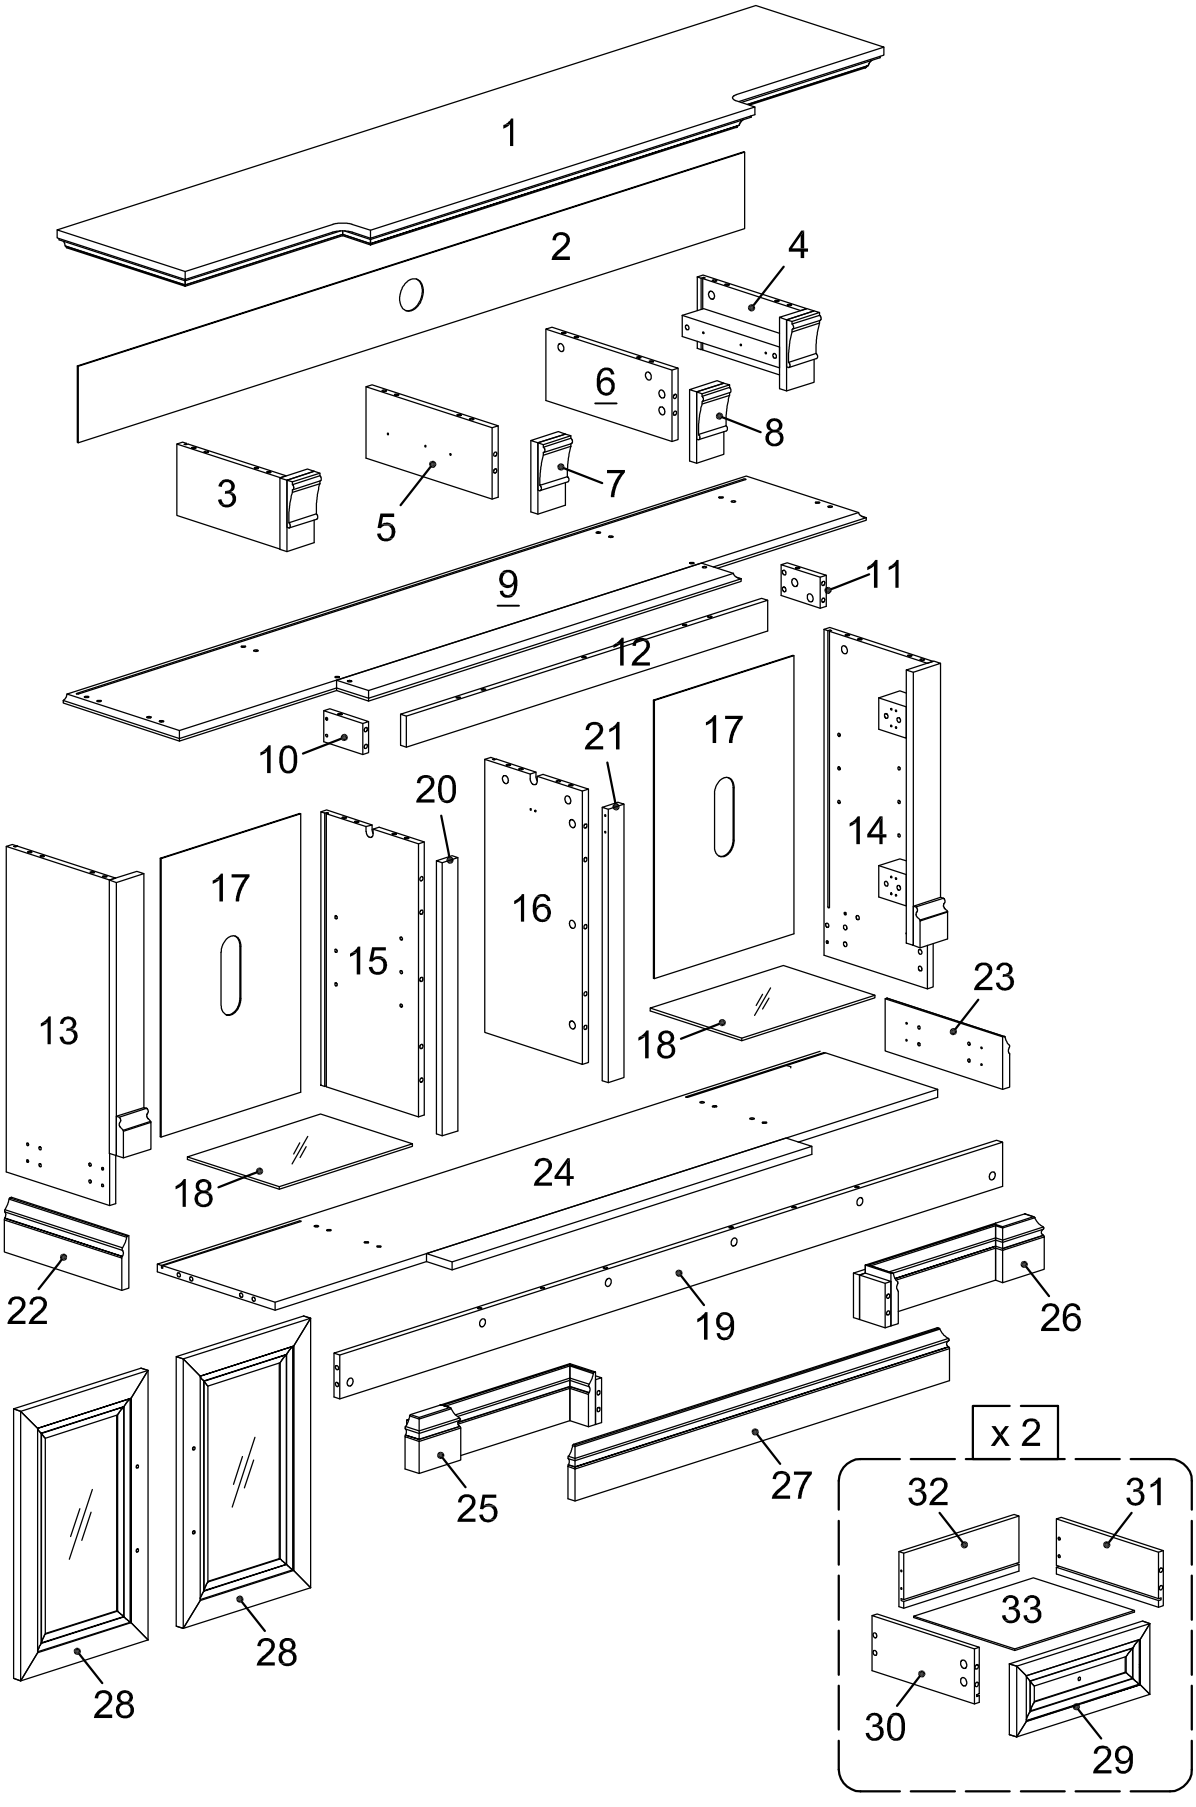

1
2
4
6
8
3
5
7
9
11
12
10
21
17
20
14
17
16
15
13
23
18
18
24
22
19
26
25
27
x 2
32
31
33
30
29
28
28

Hardware List

A		Ø8x30mm	Wood dowel	52	pcs
B		Ø6x35mm	Cam bolt	55	pcs
C		Ø15x11mm	Cam lock (Large)	47	pcs
D			Sticker	55	pcs
E		Ø15x9.5mm	Cam lock (Small)	8	pcs
F			Shelf support pin	8	pcs
G		Ø1/4"x12mm	Bolt	6	pcs
H			Glue	2	pcs
I		Ø6x50mm	Screw	12	pcs
J			Plastic wedge	20	pcs
K		Ø3x17mm	Flat-head screw	20	pcs
L		M4	Hex key	1	pc
M		Ø3x12mm	Screw	36	pcs
N			Clip	6	pcs
O		Ø4x25mm	Screw	8	pcs
P			Connector	3	pcs
Q		Ø8x20mm	Wooden dowel (Small)	8	pcs
R		Ø5/32"x10mm	Knob bolt	2	pcs
S		10"	Drawer Slider	2	set
T			L shape bracket	2	pcs
U		Ø4x12mm	Screw	4	pcs
V		Ø4x38mm	Screw	12	pcs


Hardware List

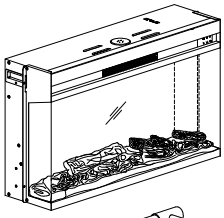X		Ø35mm	Slow-close Euro hinge	4	pcs
Y		Ø3.5x14mm	Hinge screw	40	pcs
Z			L shape bracket	8	pcs
AA			Led strip light (In the fire insert box)	2	pcs
BB			Knob	2	pcs
CC		Ø5/32"x20mm	Handle bolt	4	pcs
DD			Tipping Restraint Hardware	2	set
EE		3622-L-D7	Fireplace Insert	1	pc
FF			Handle	2	pcs

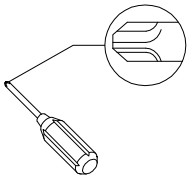


Philips head screwdriver required for assembly
(not included)


Step 1

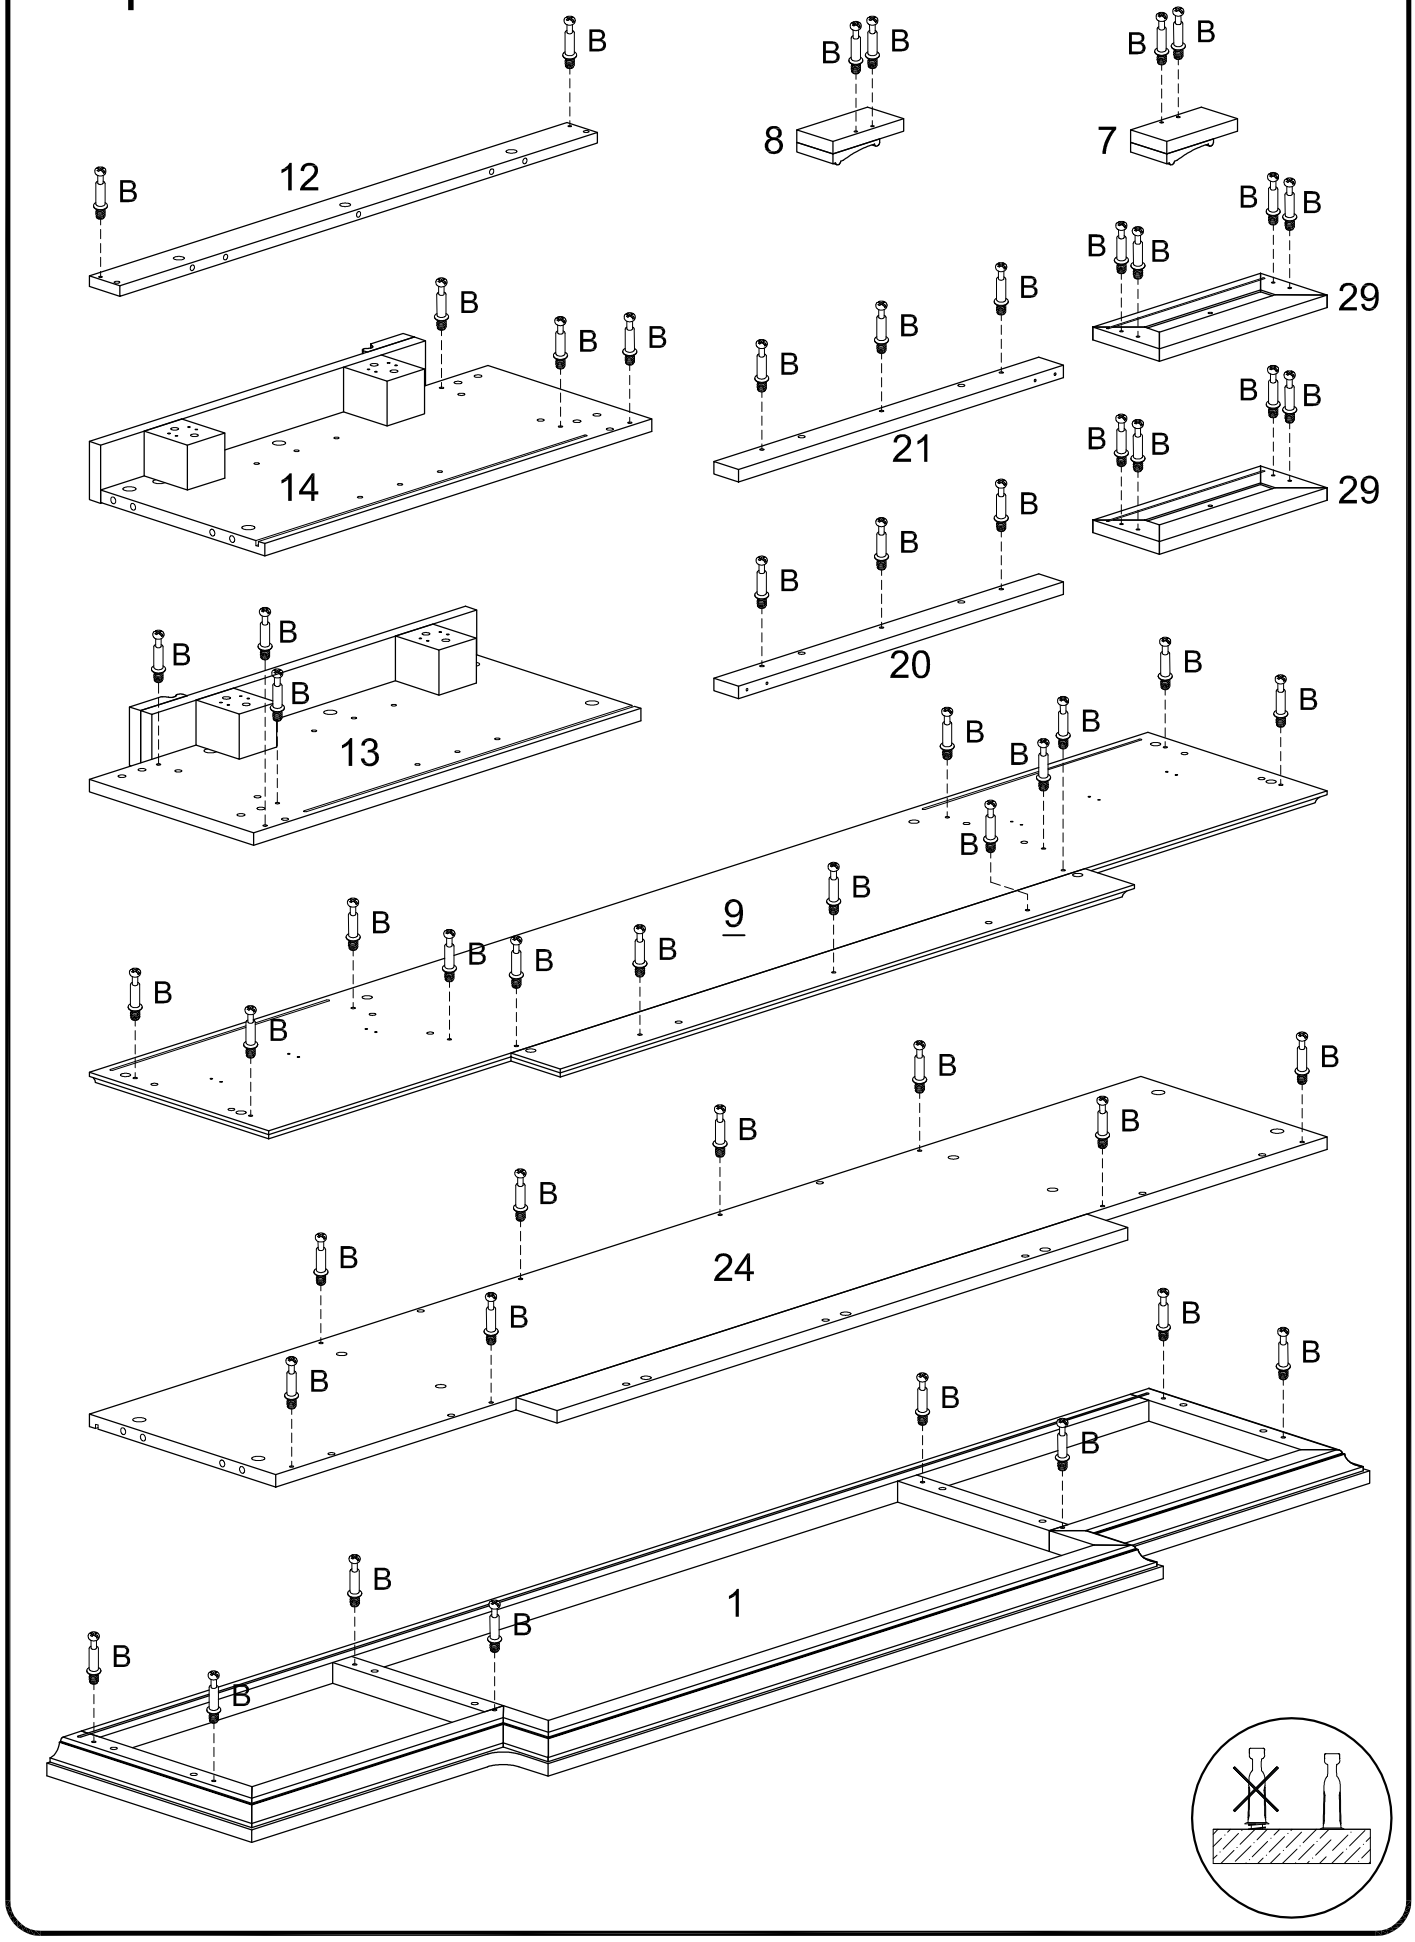


Step 2

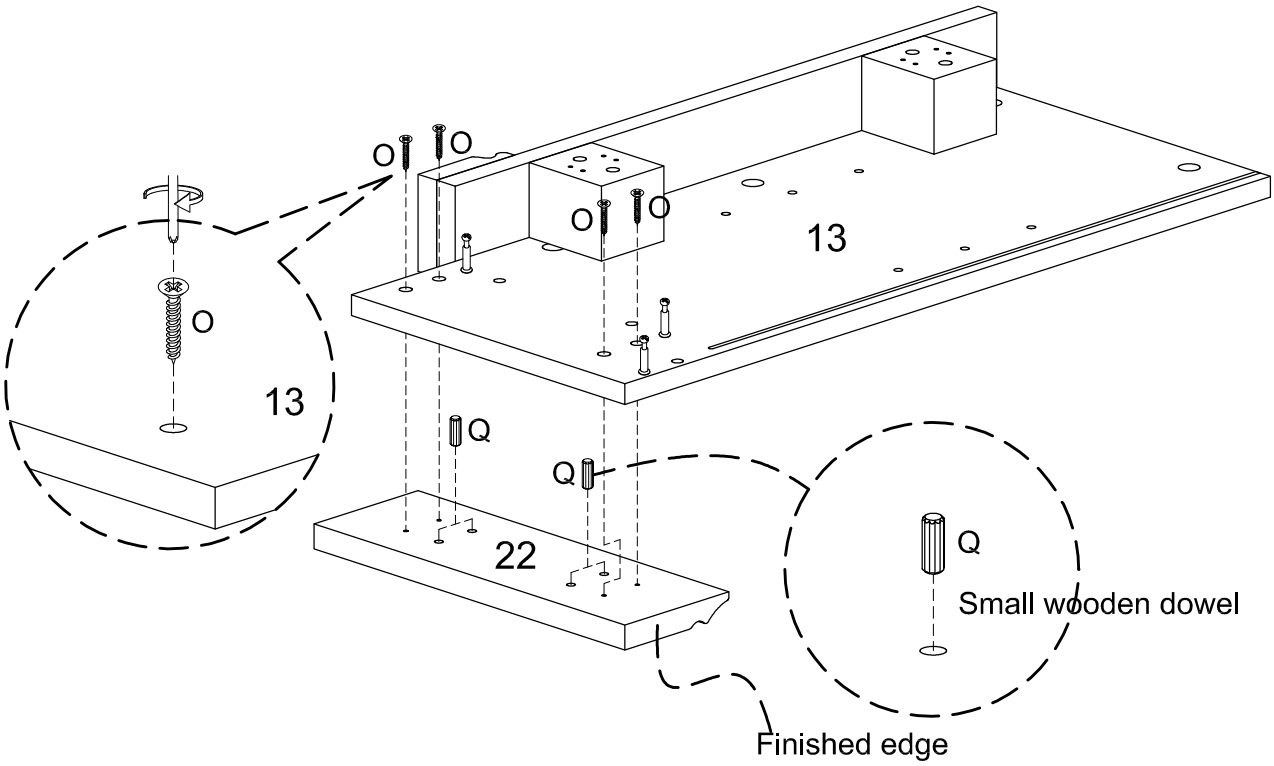
O
O
O
O
13
O
13
Q
Q
22
Q
Small wooden dowel
Finished edge


Step 3

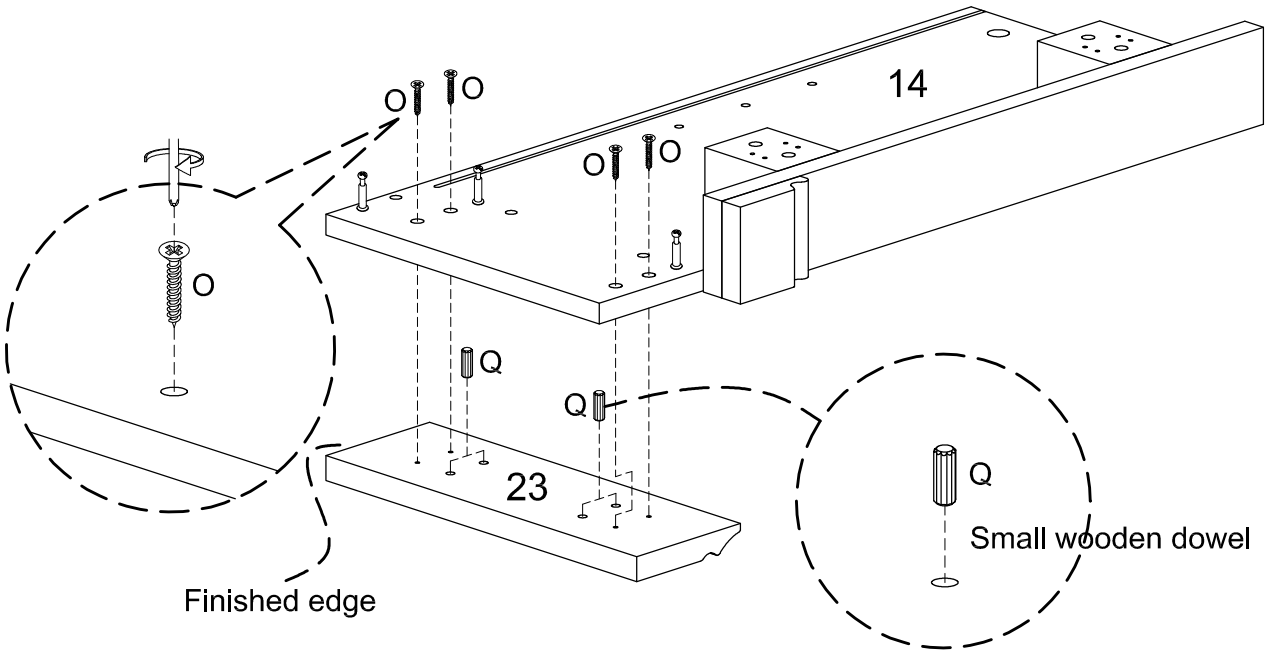
O
O
14
O
O
O
Q
Q
23
Q
Small wooden dowel
Finished edge


Step 4

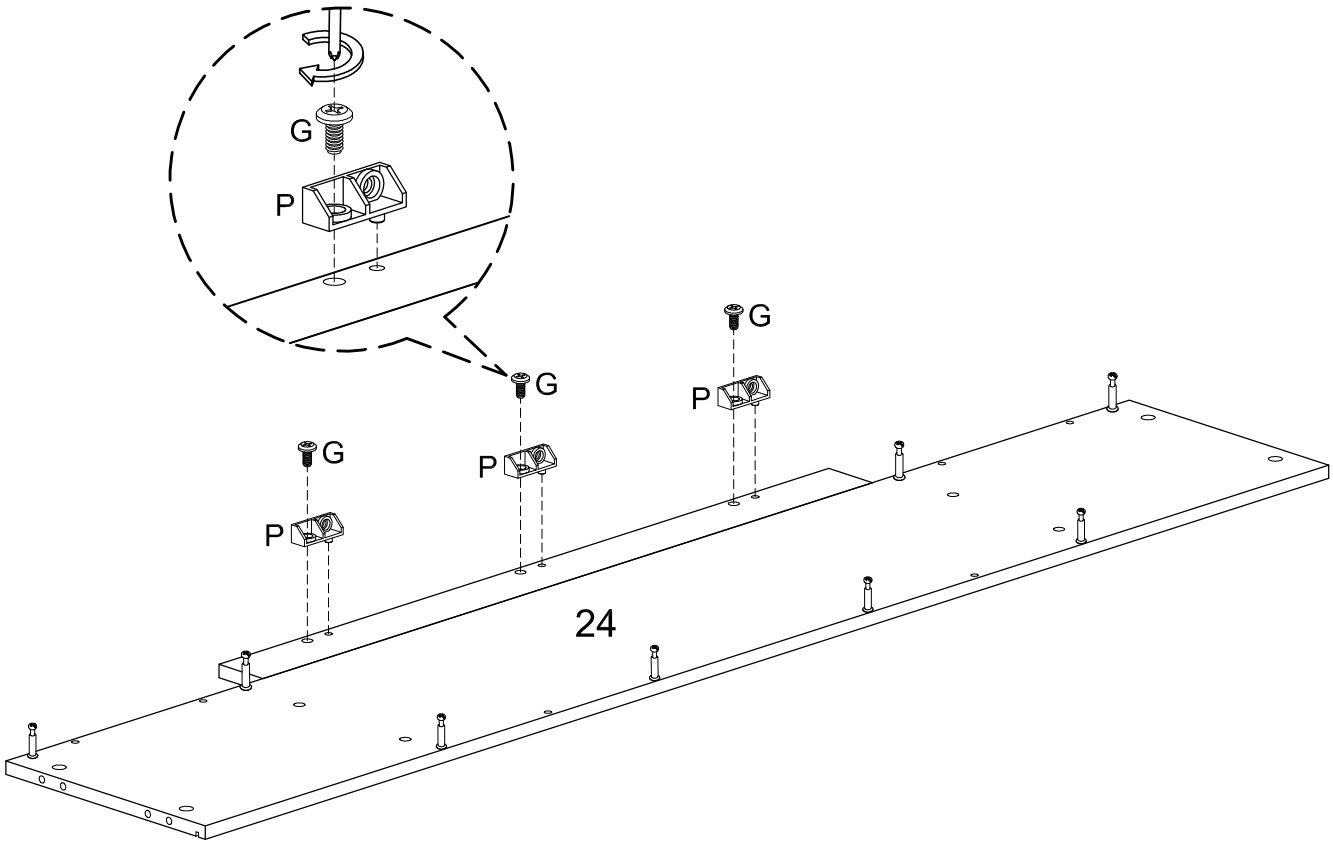


Step 5

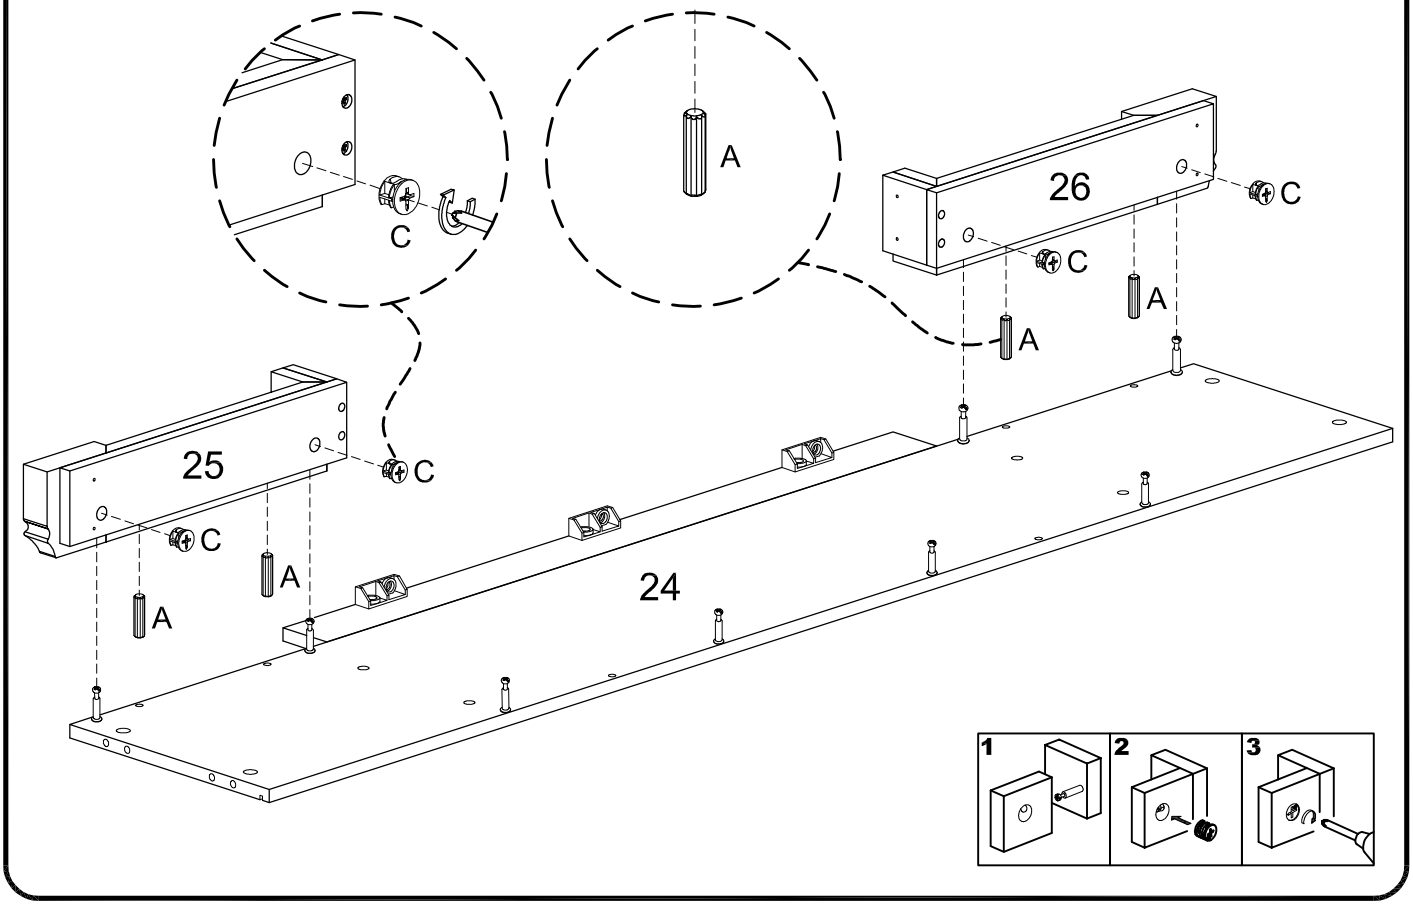


Step 6

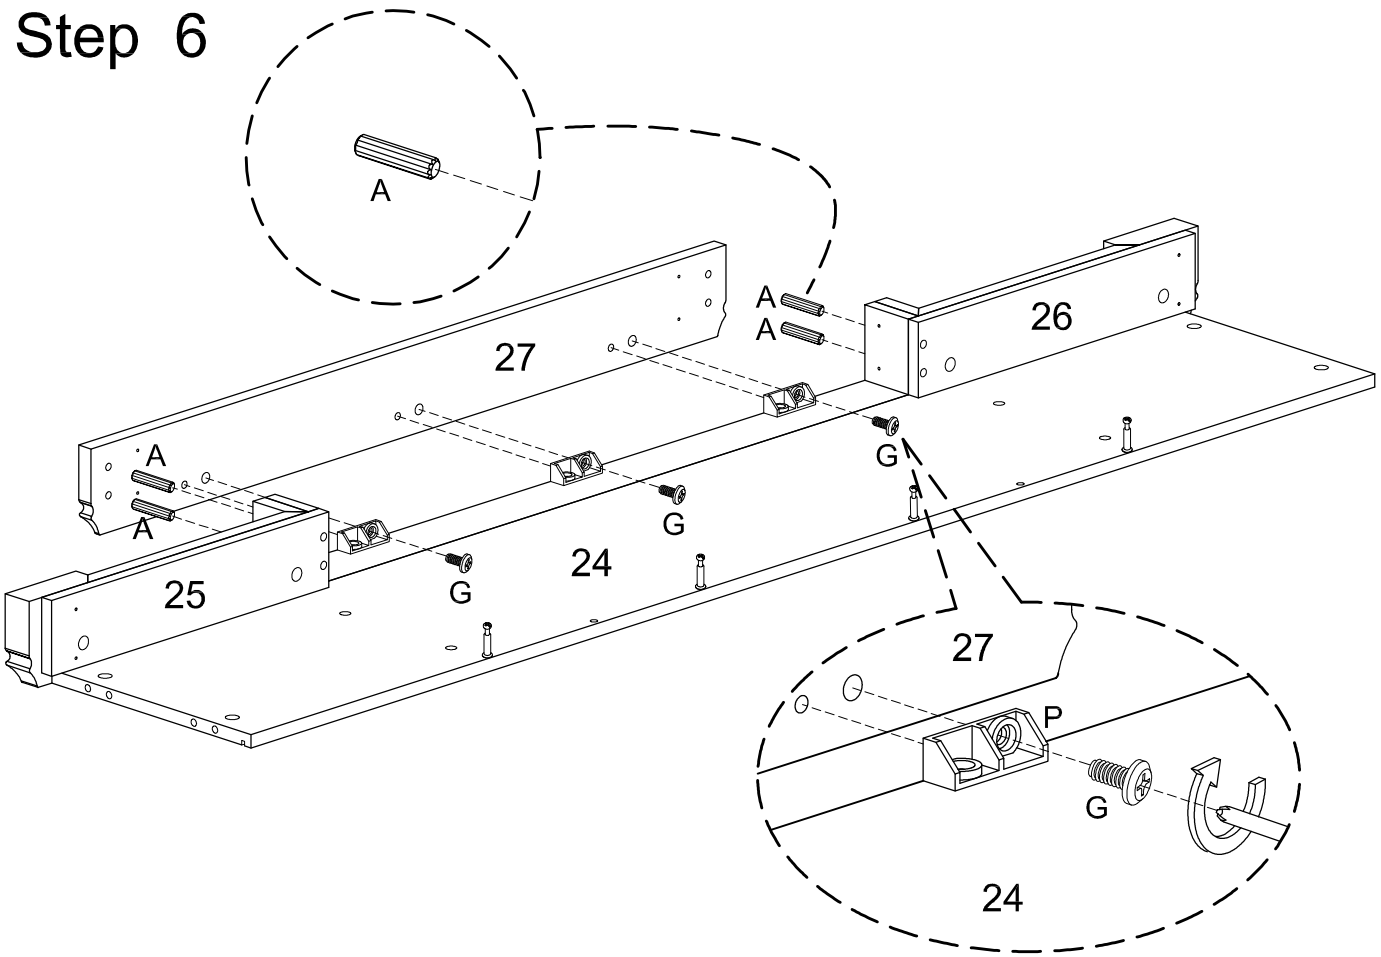


Step 7

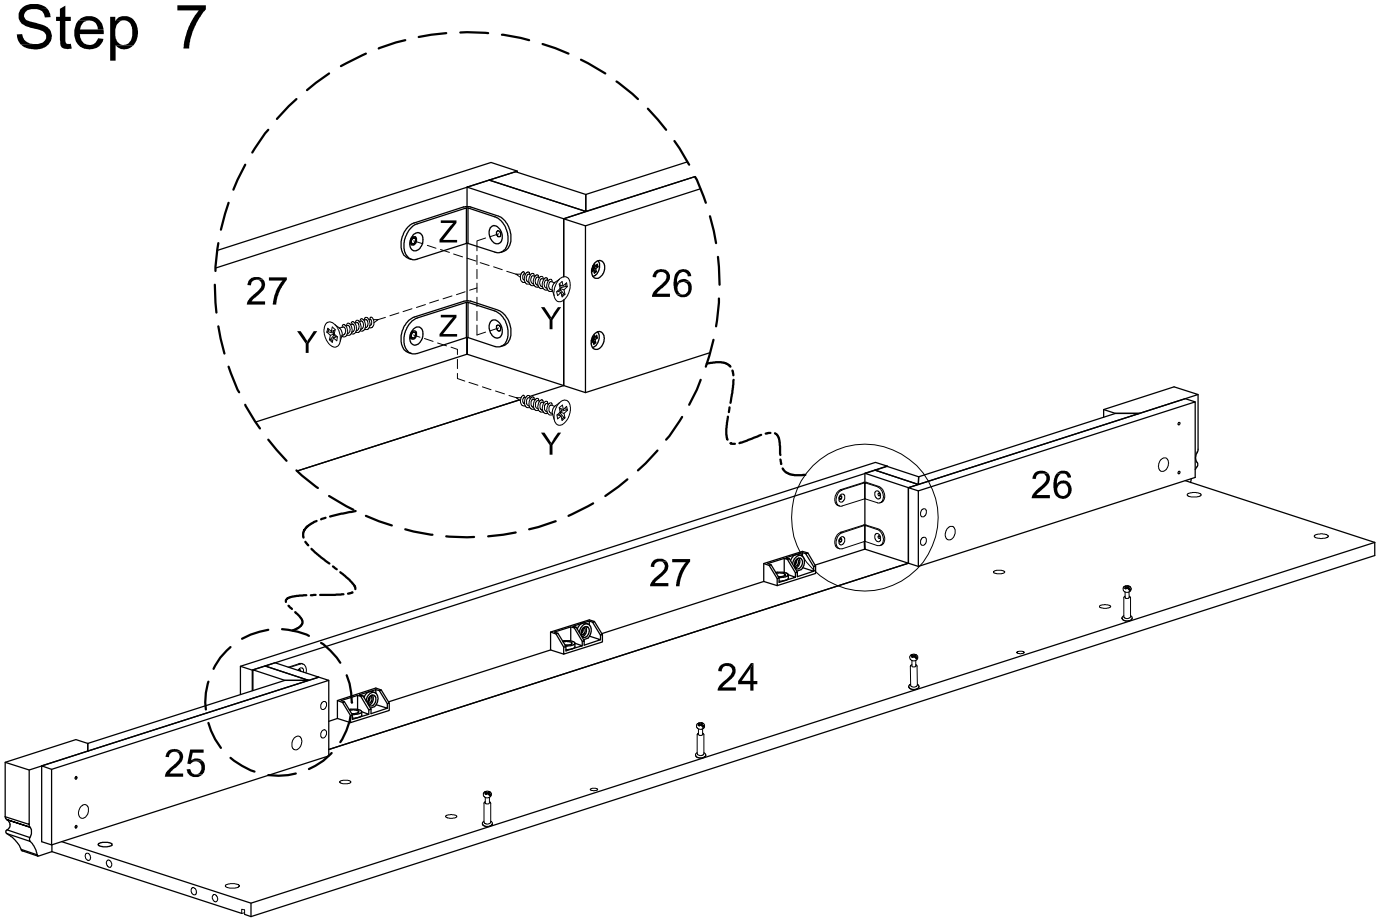


Step 8

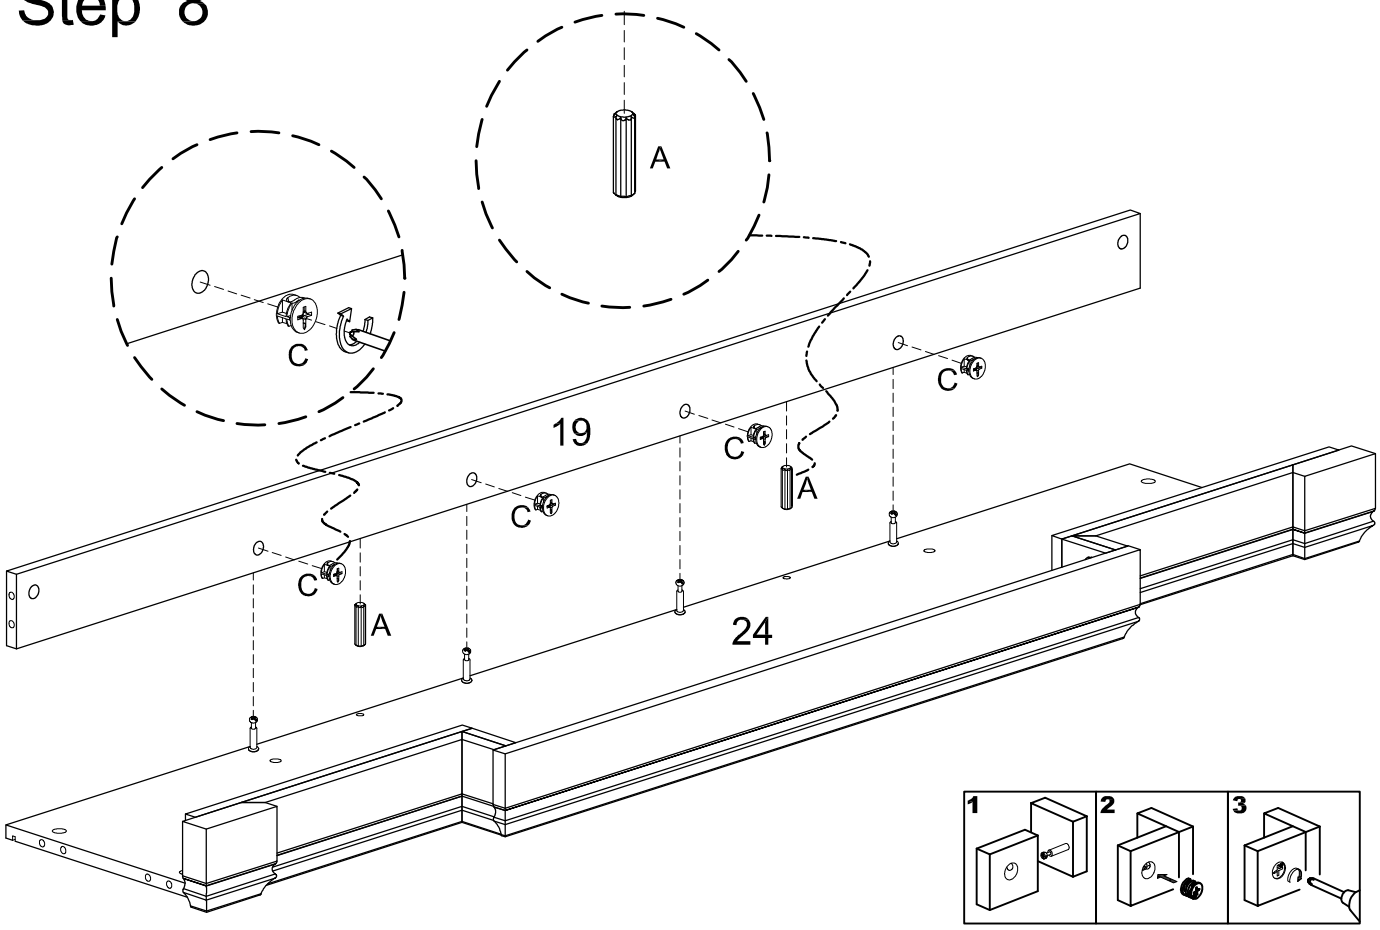
A
C
19
C
C
A
C
C
A
24
1
2
3


Step 9

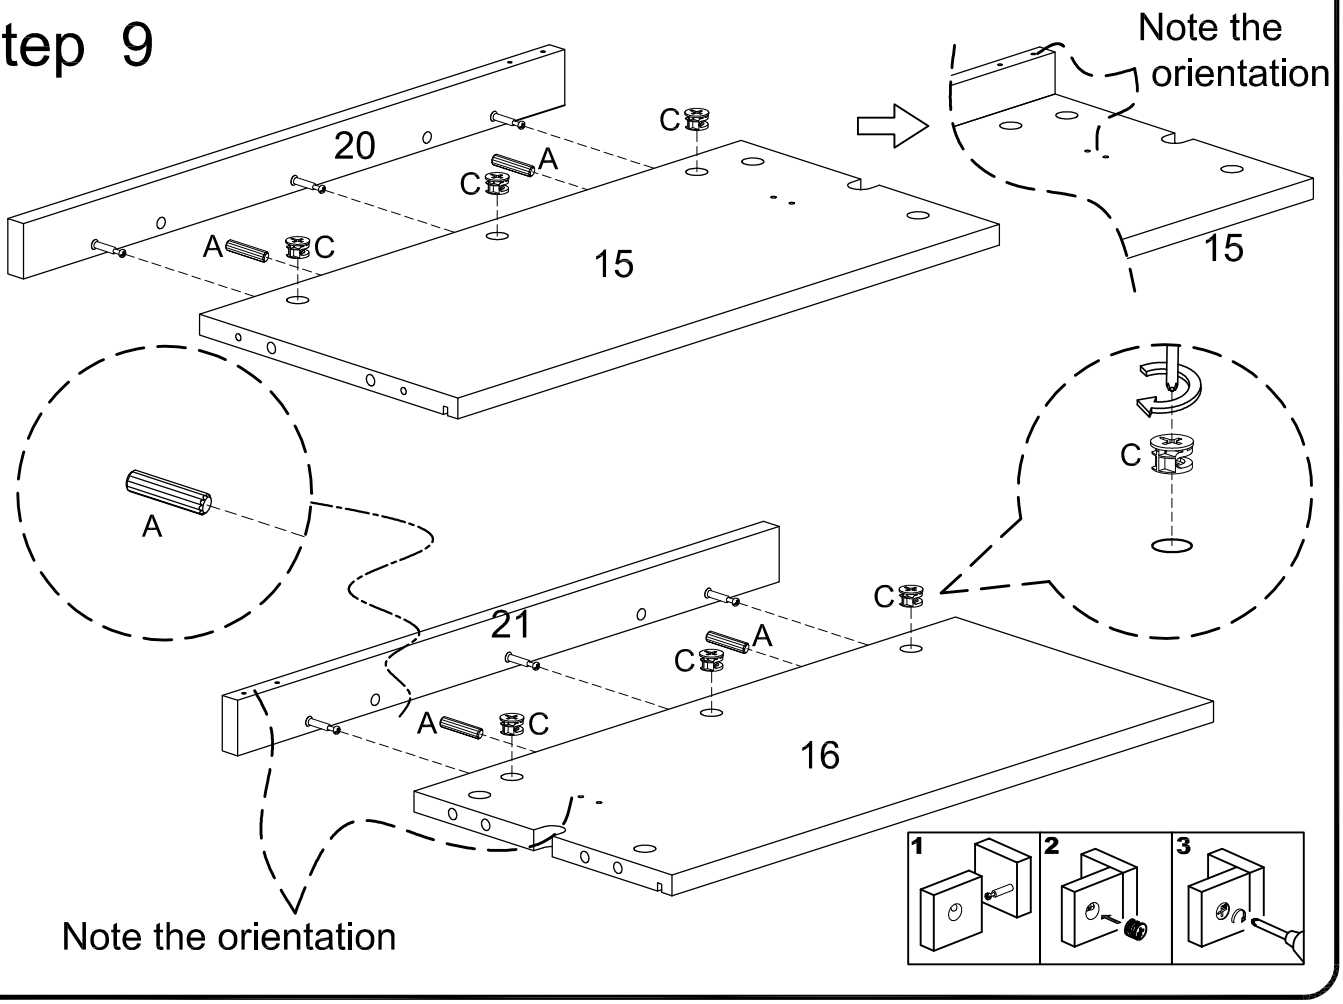
Note the orientation
20
C
A
C
A
C
15
15
A
C
21
C
A
C
A
C
16
1
2
3
Note the orientation


Step 10

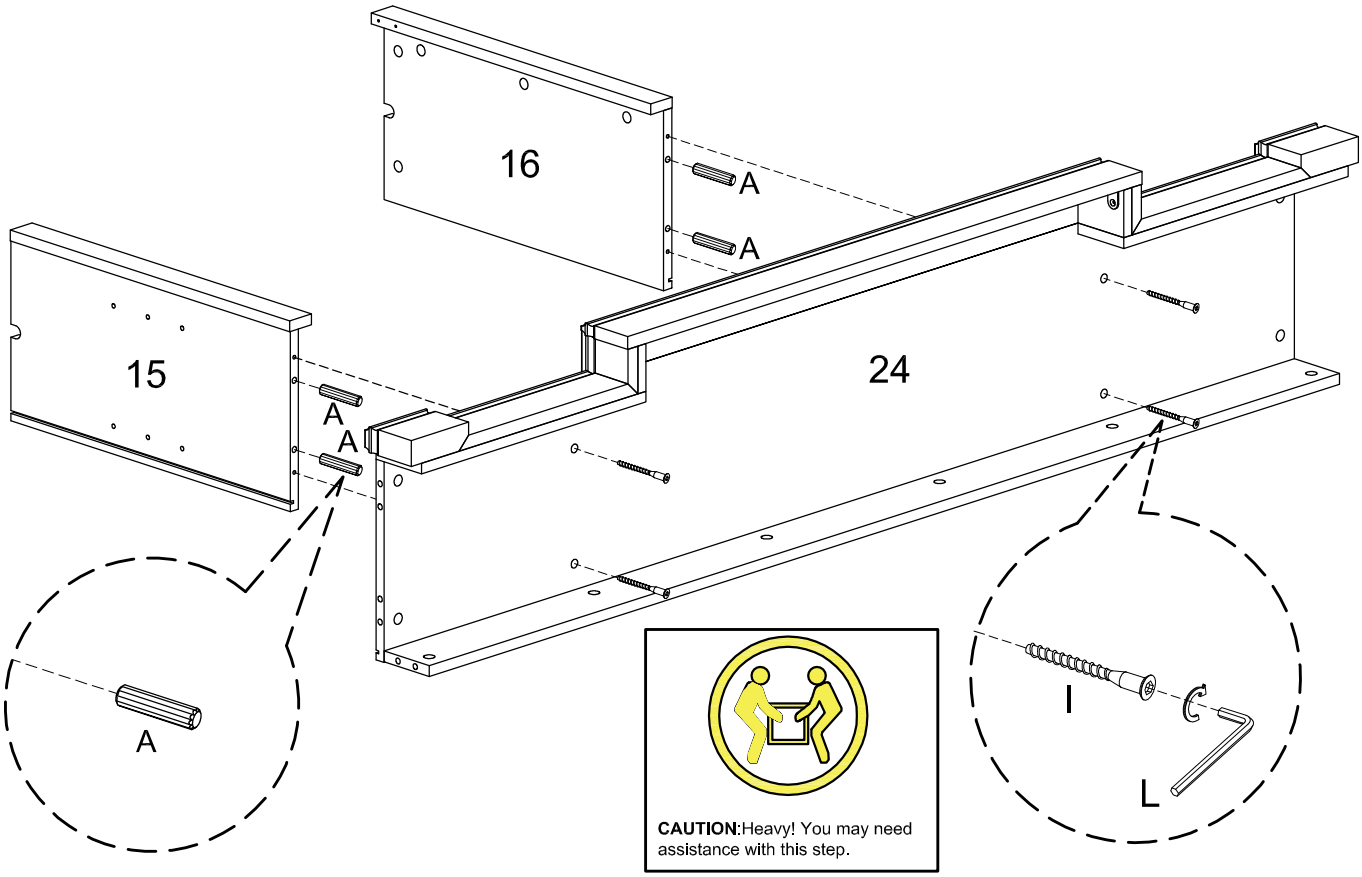


Step 11

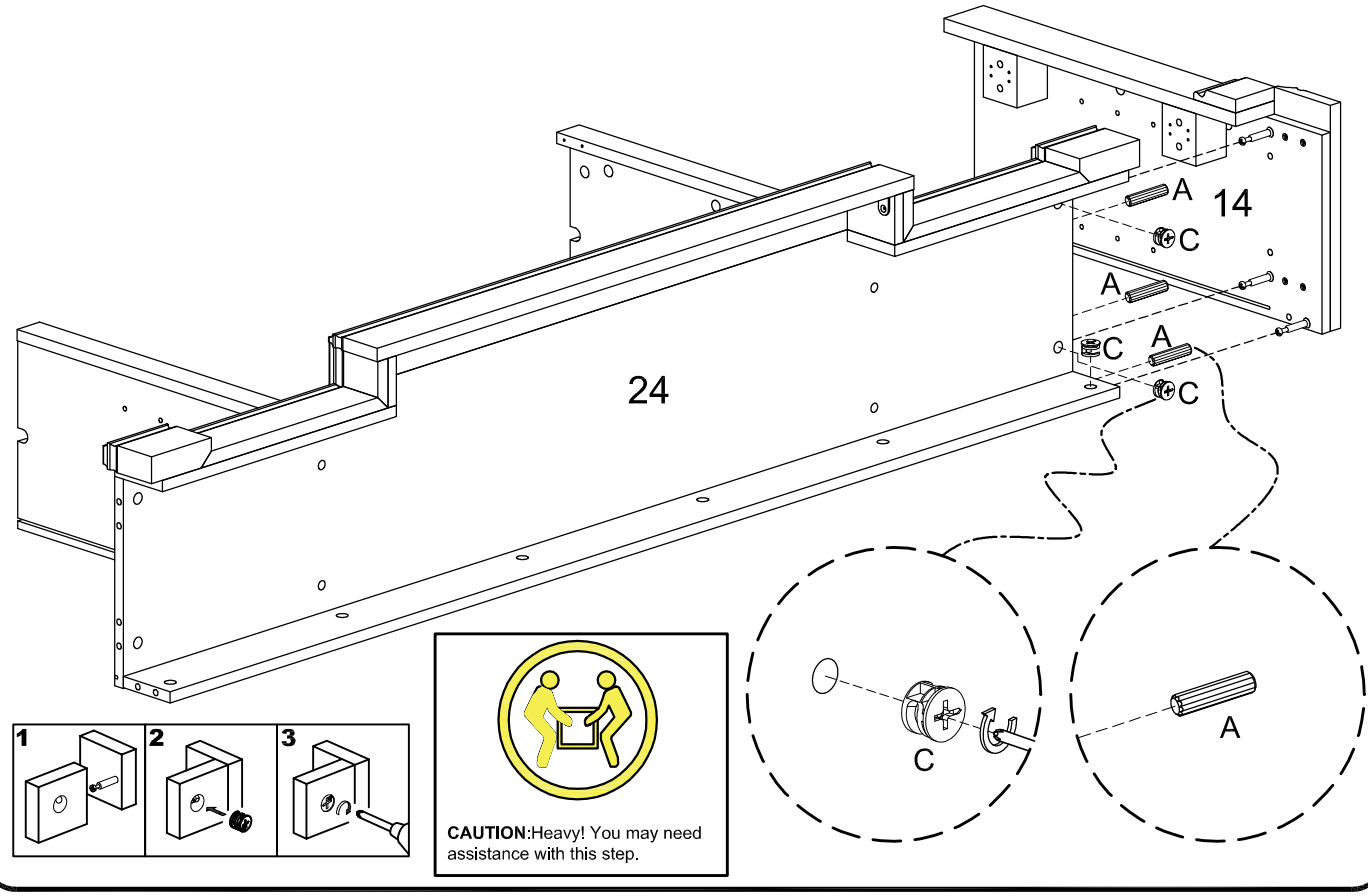


Step 12

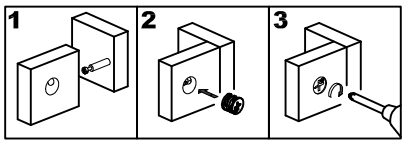


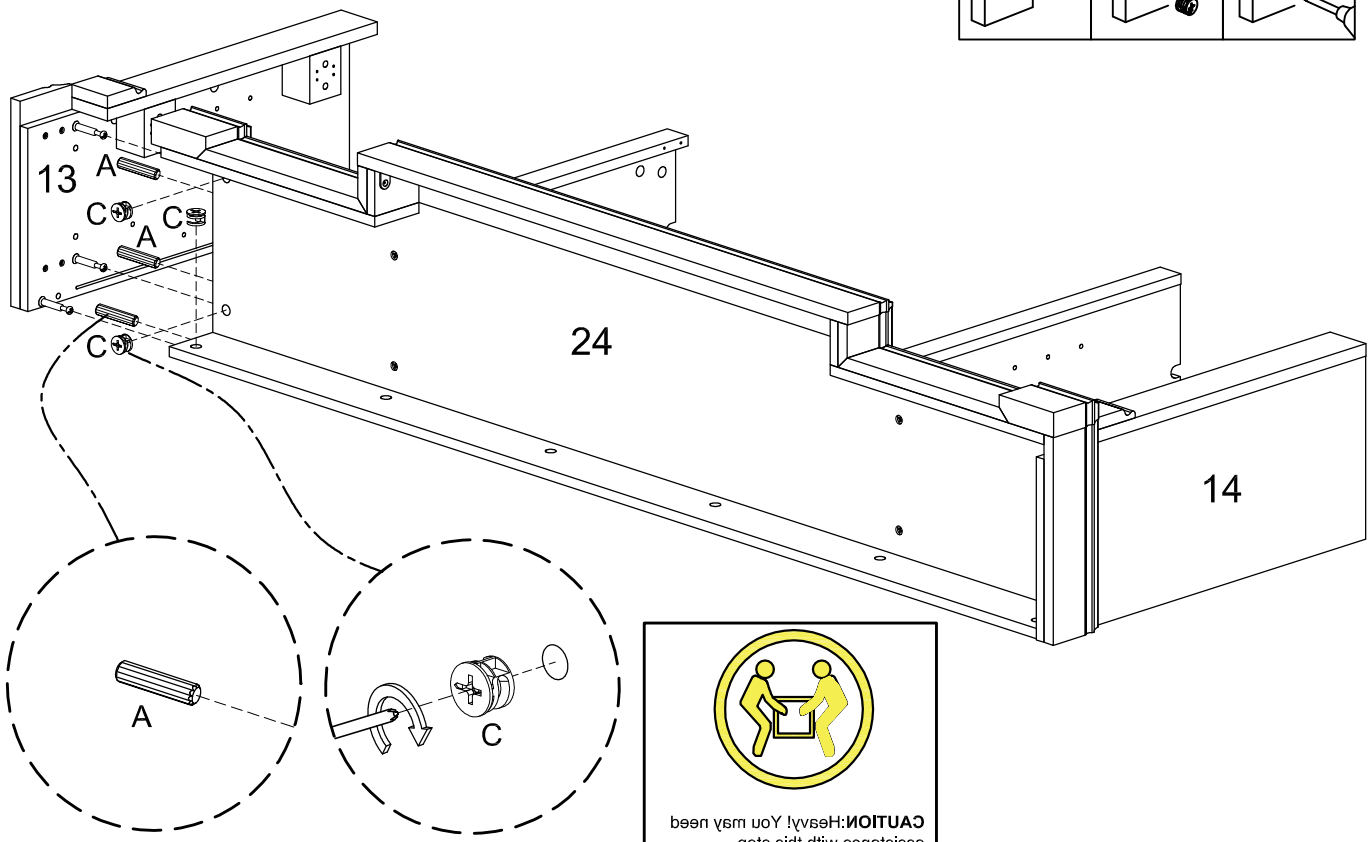


Step 13

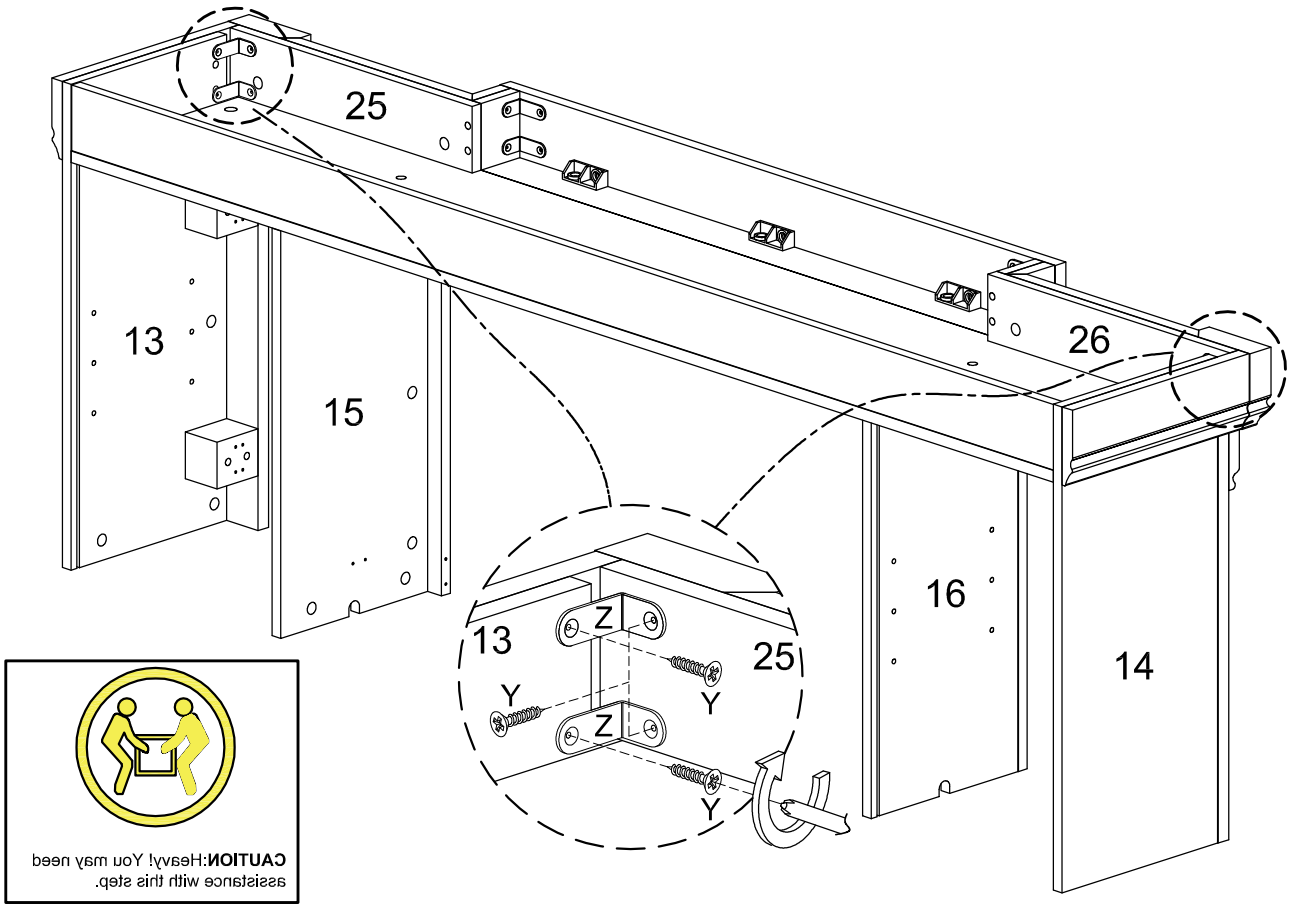


Step 14

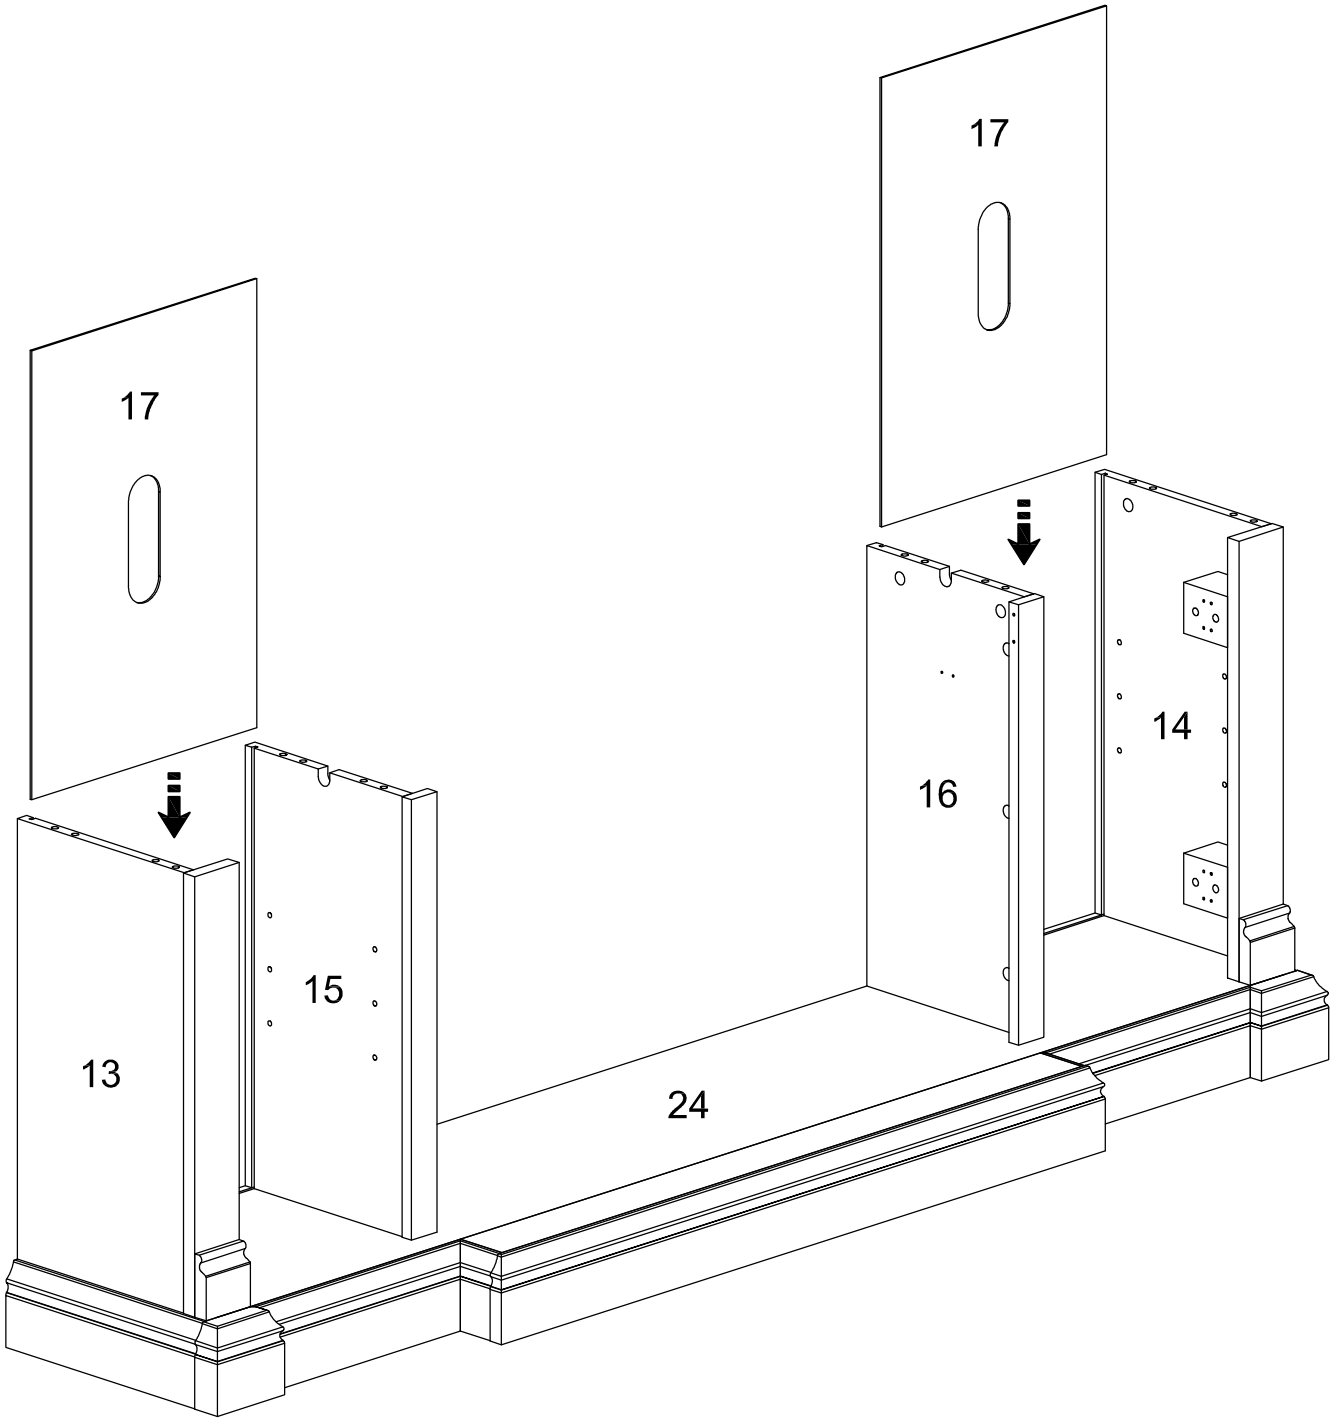



Step 15

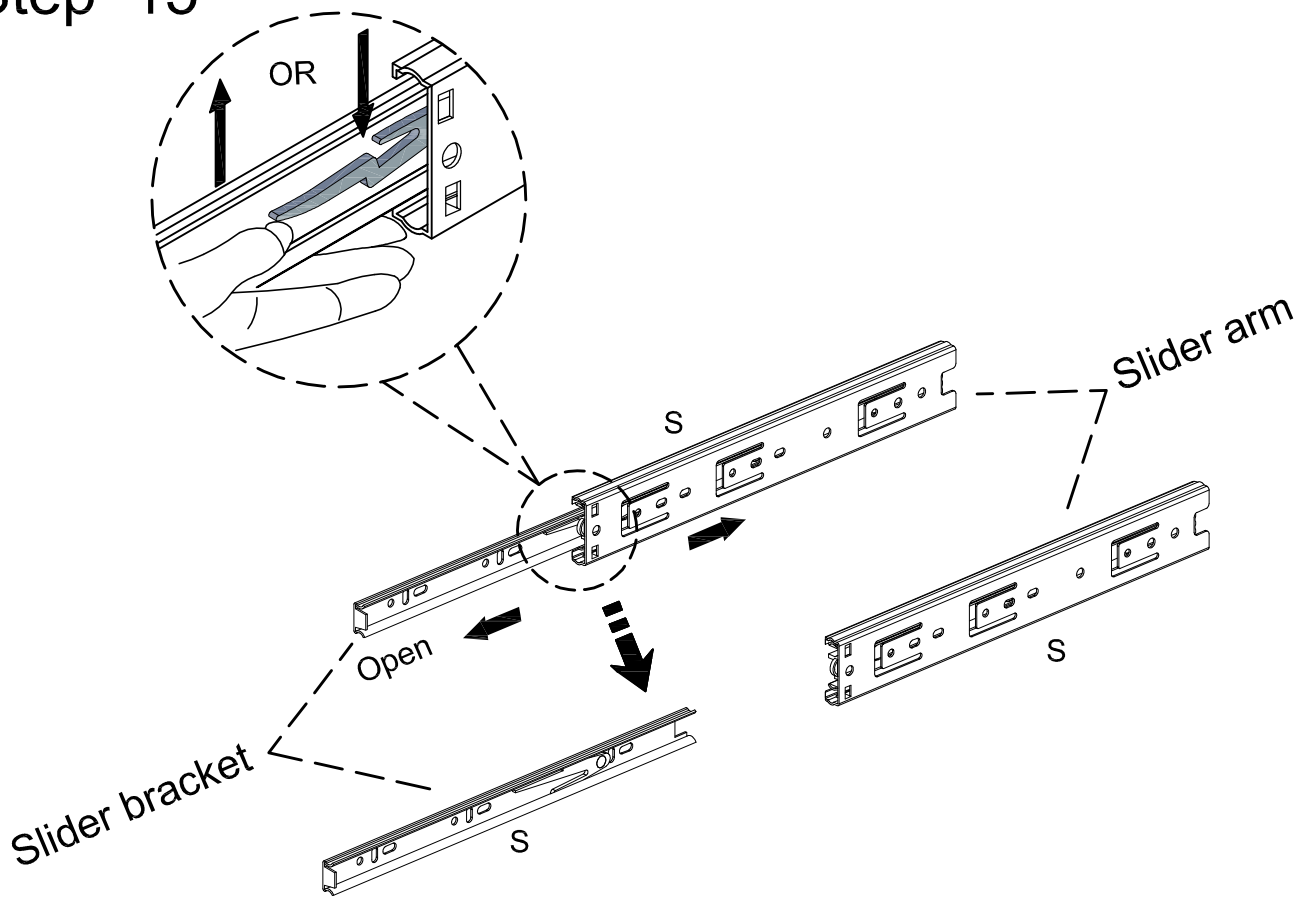


Step 16

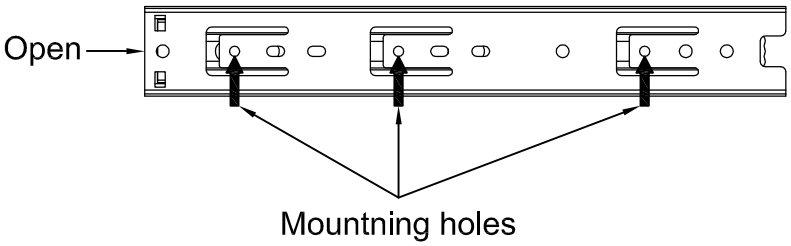


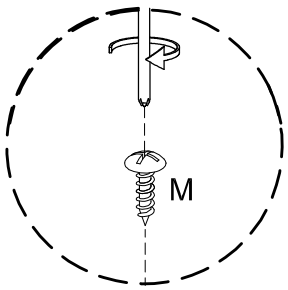

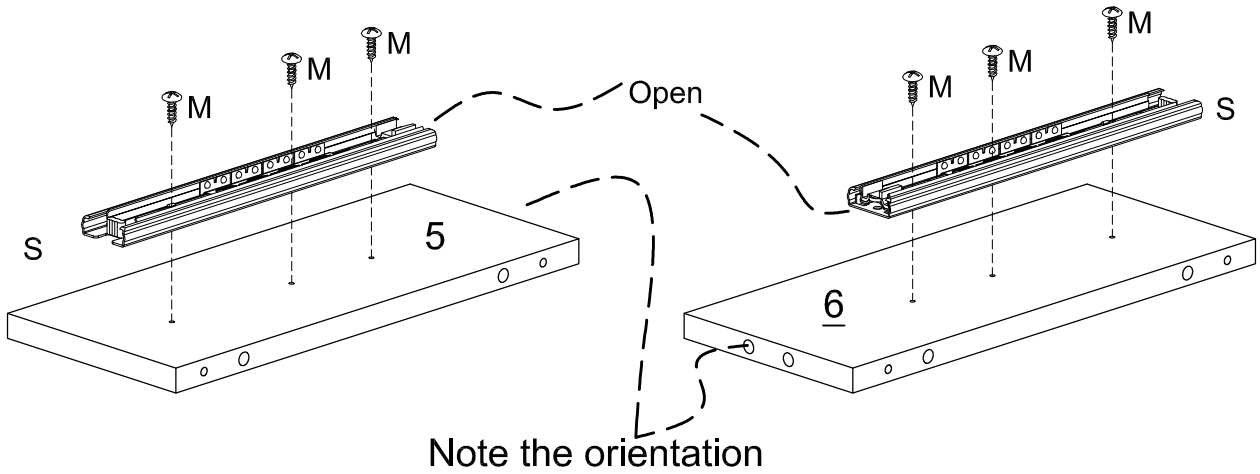


Step 17

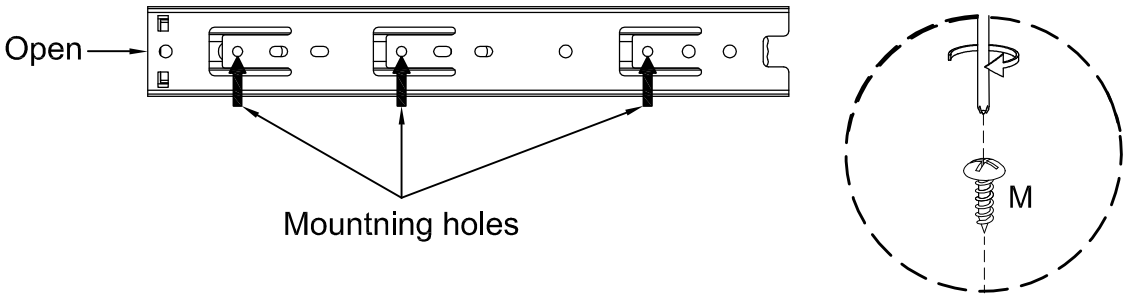


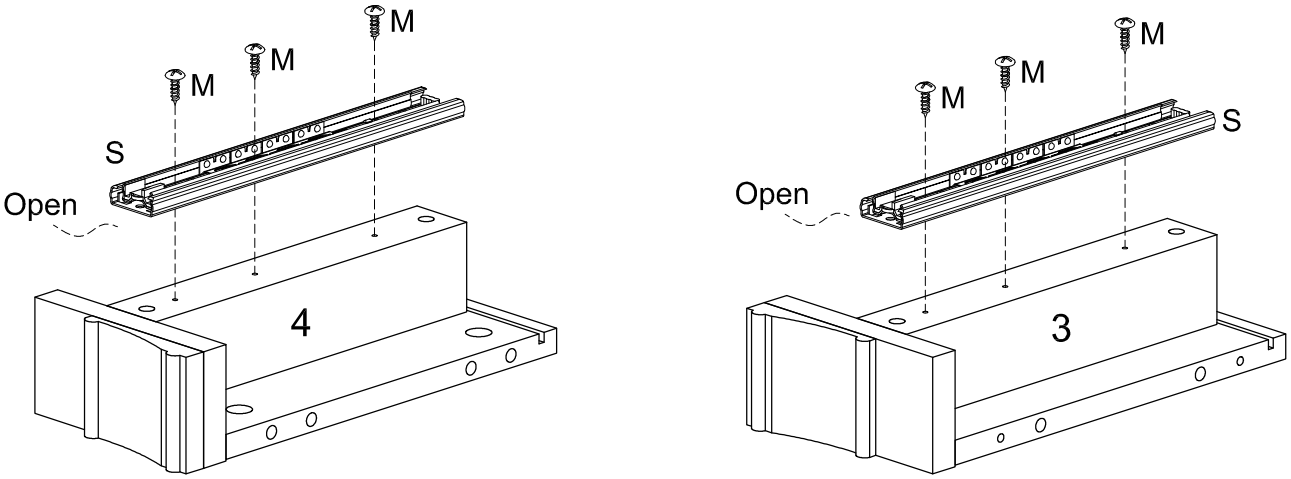


Step 18

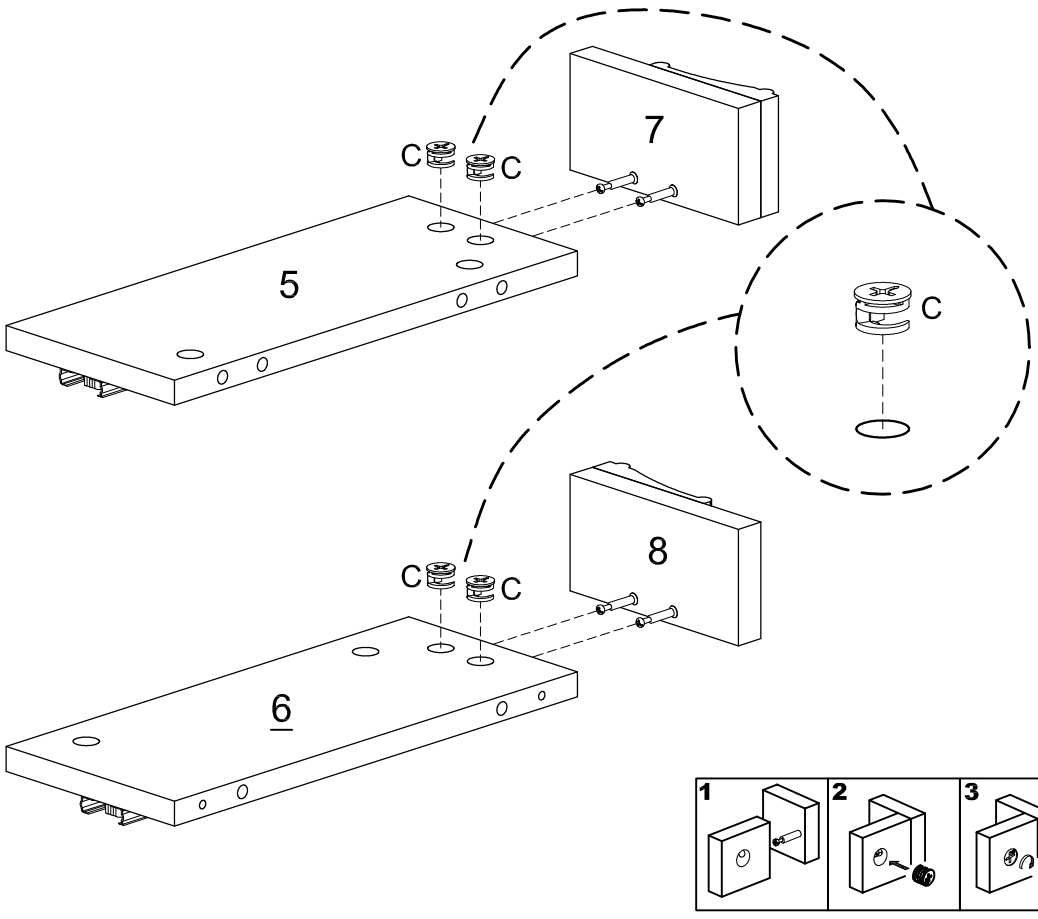


Step 19

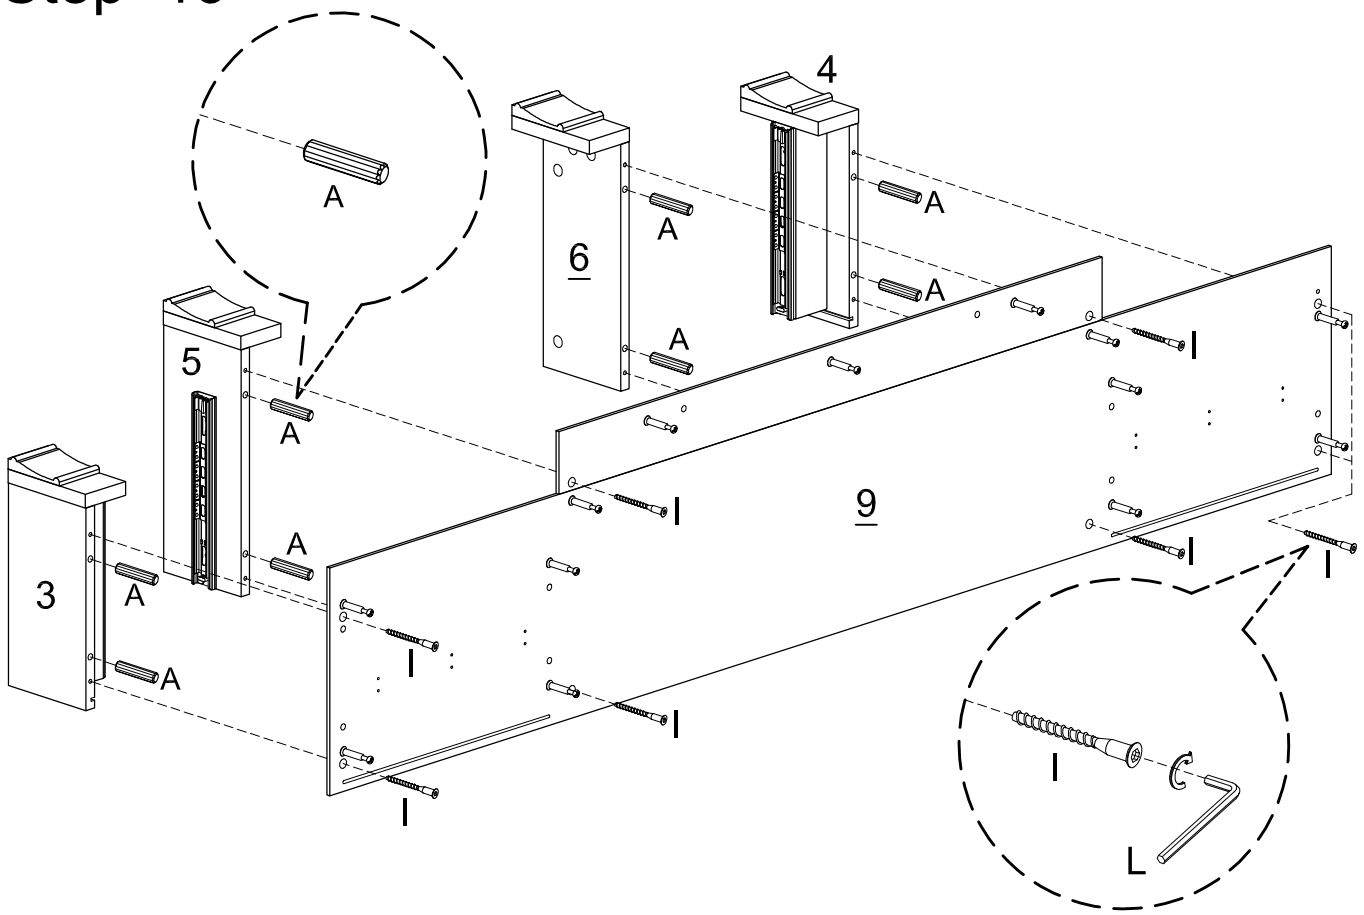


Step 20

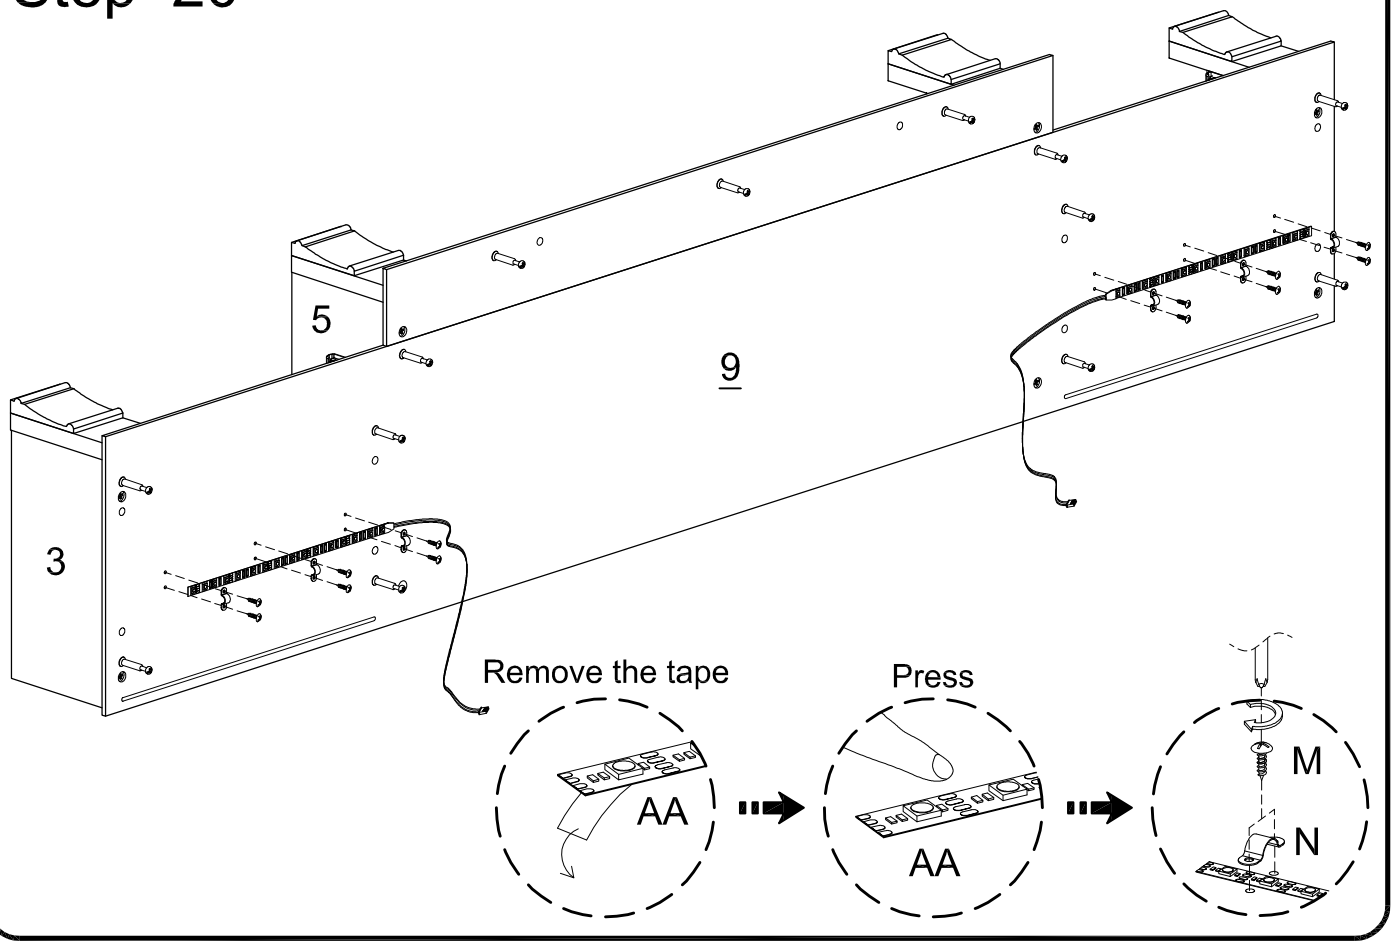


Step 21

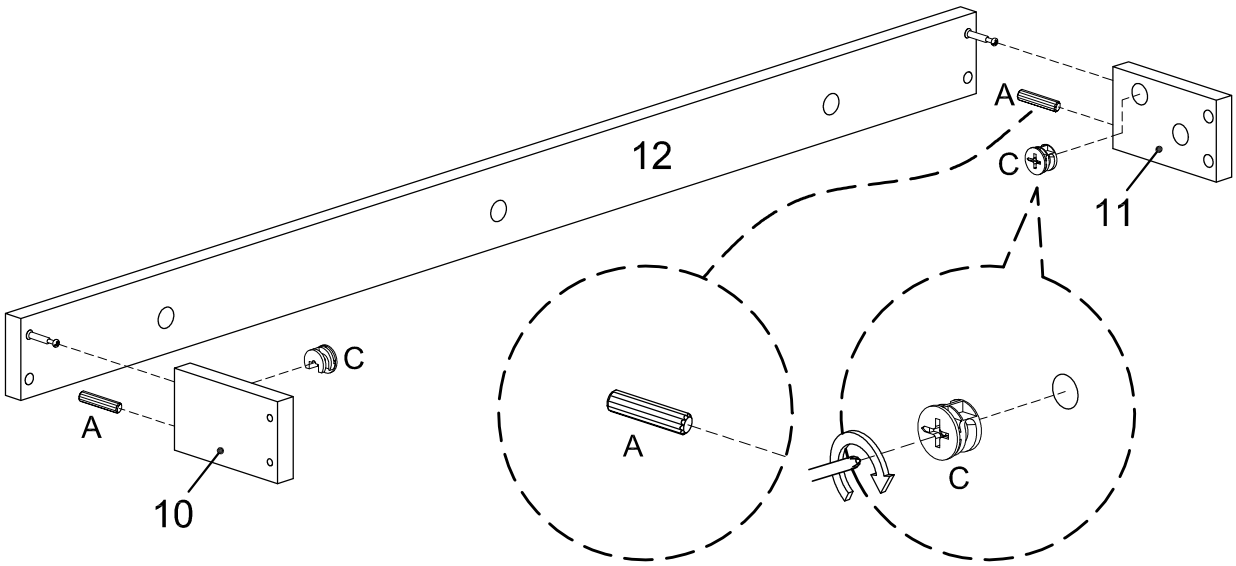


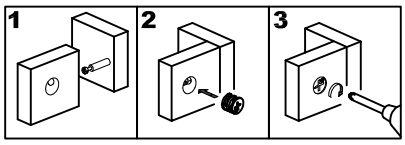


Step 22

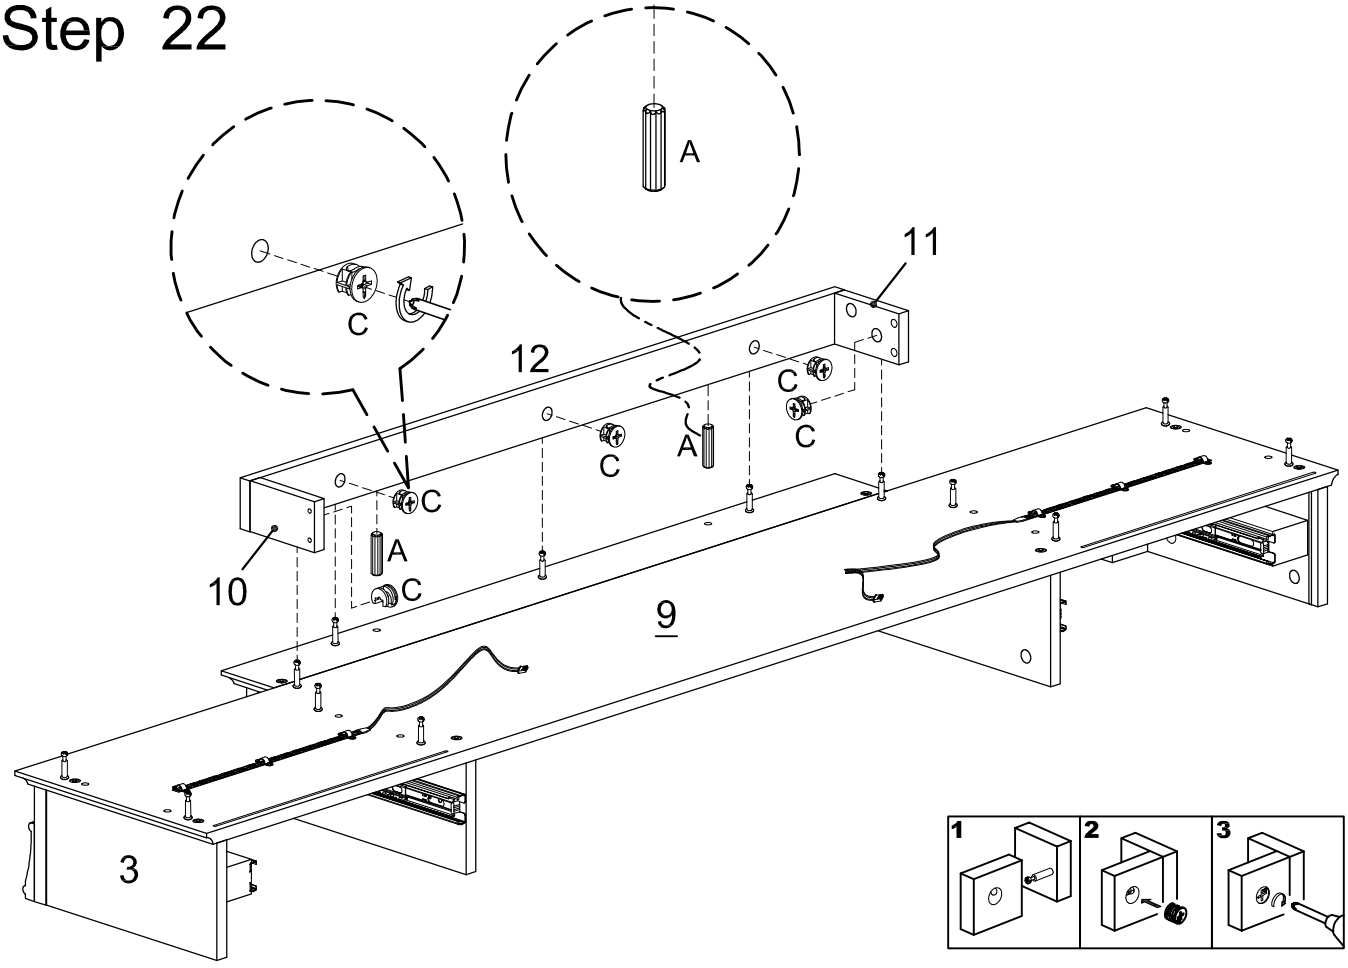


Step 23

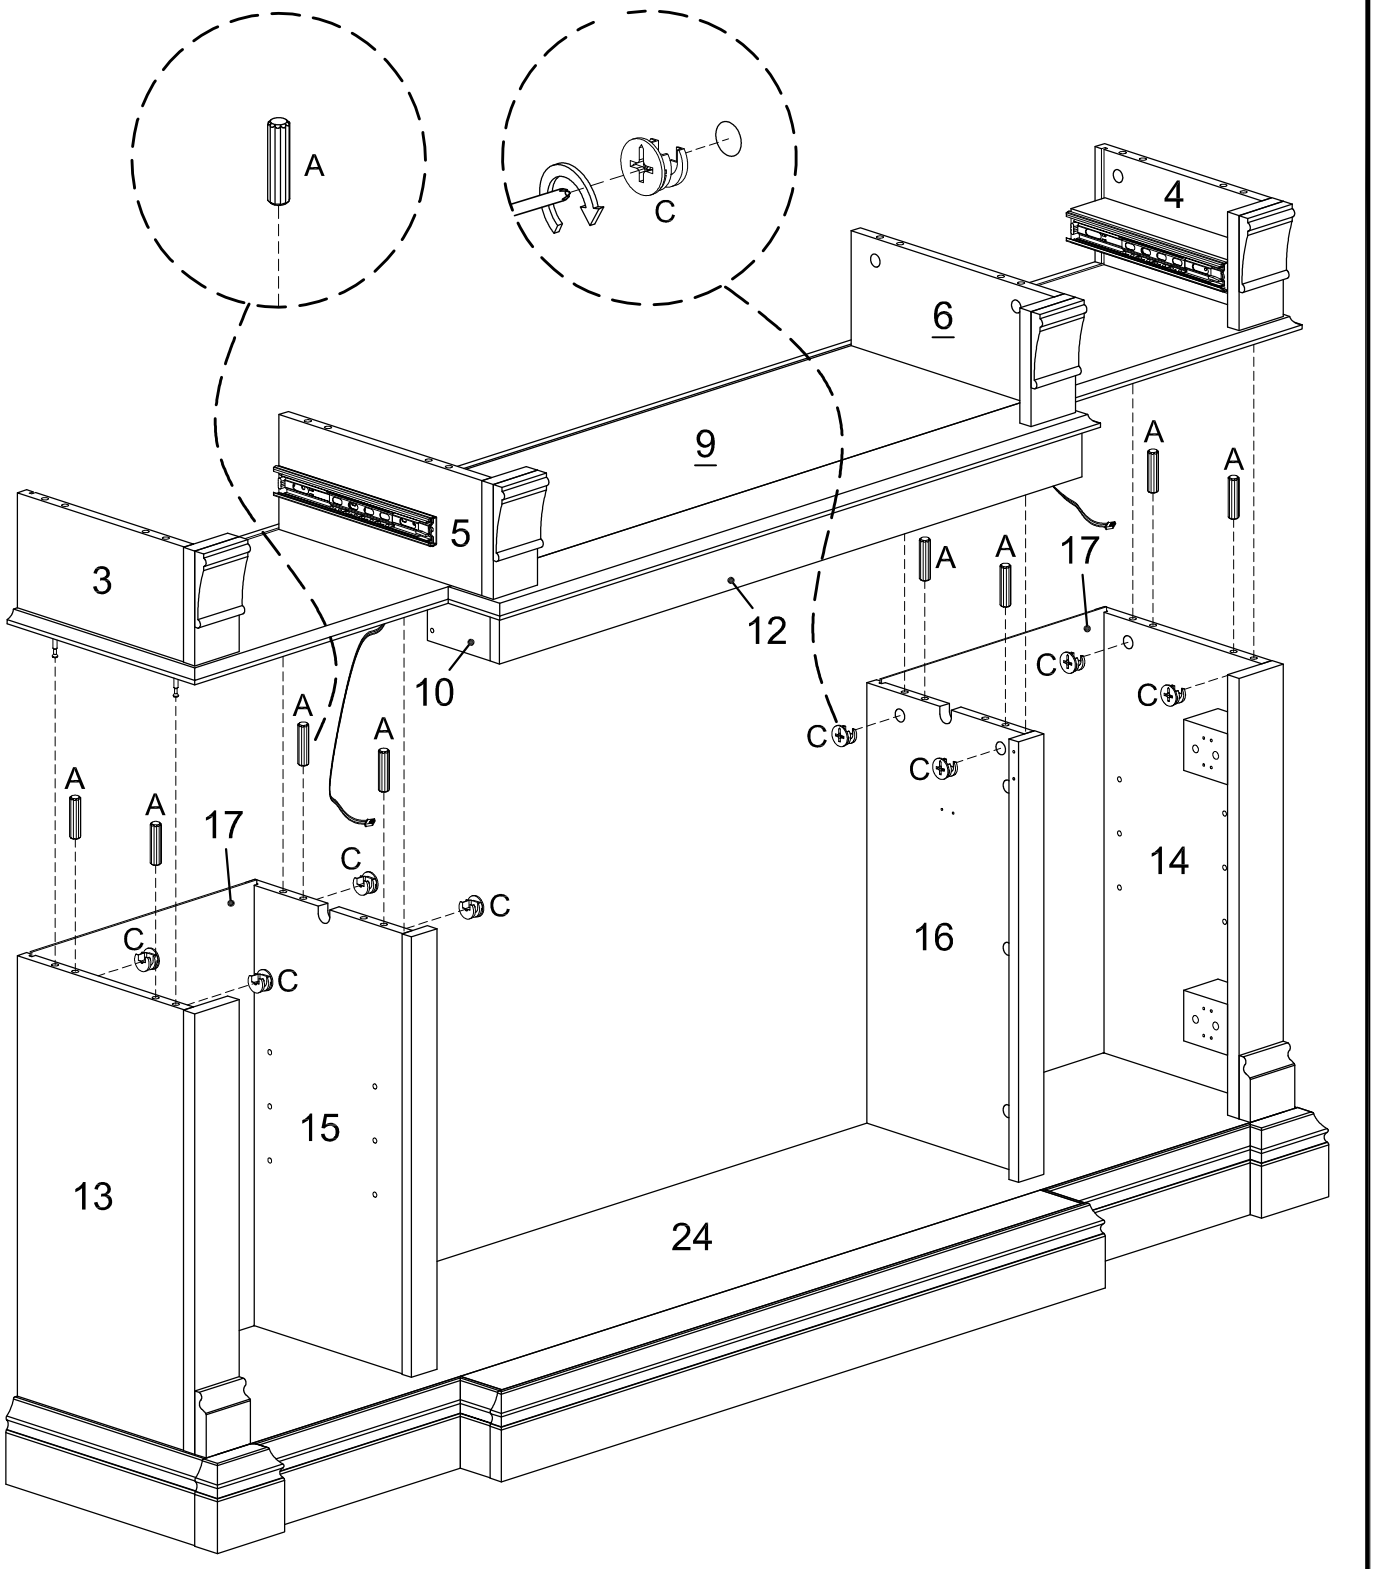
A
C
4
6
9
5
3
12
10
17
14
16
15
13
24



CAUTION:Heavy! You may need
assistance with this step.

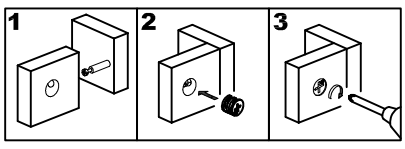
1
2
3


Step 24

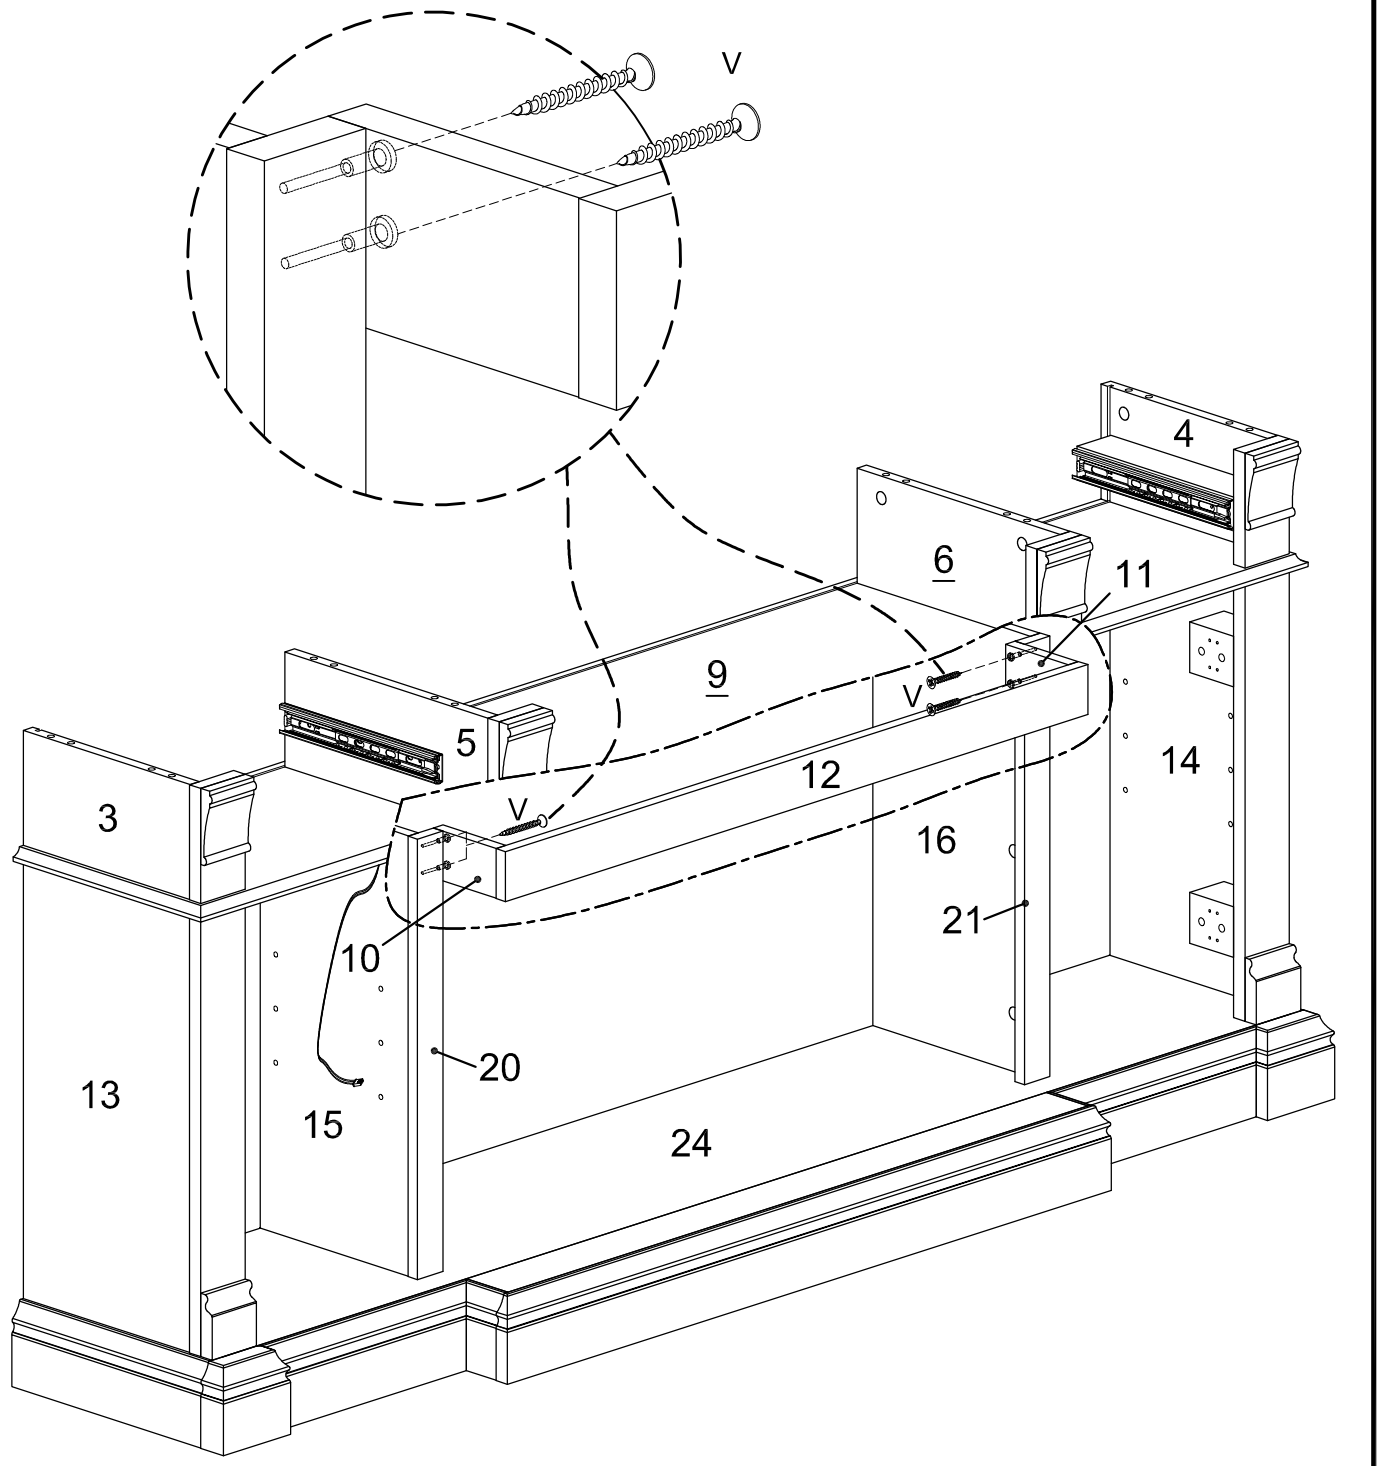


Step 25

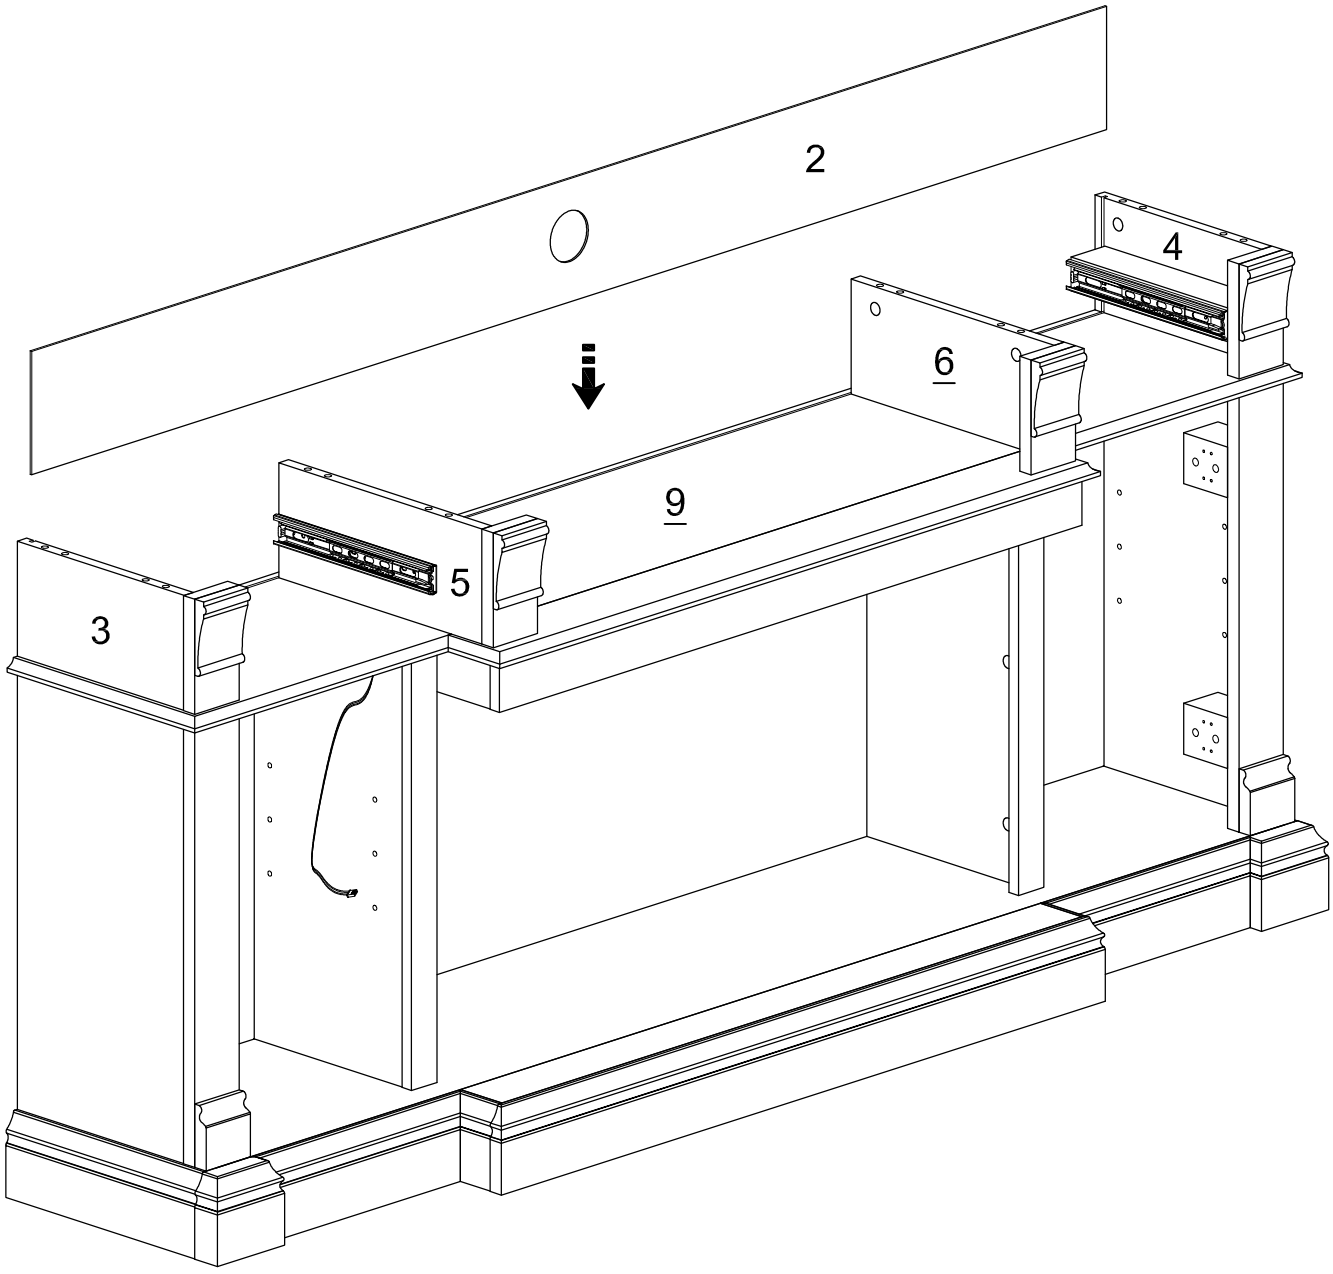


Step 26

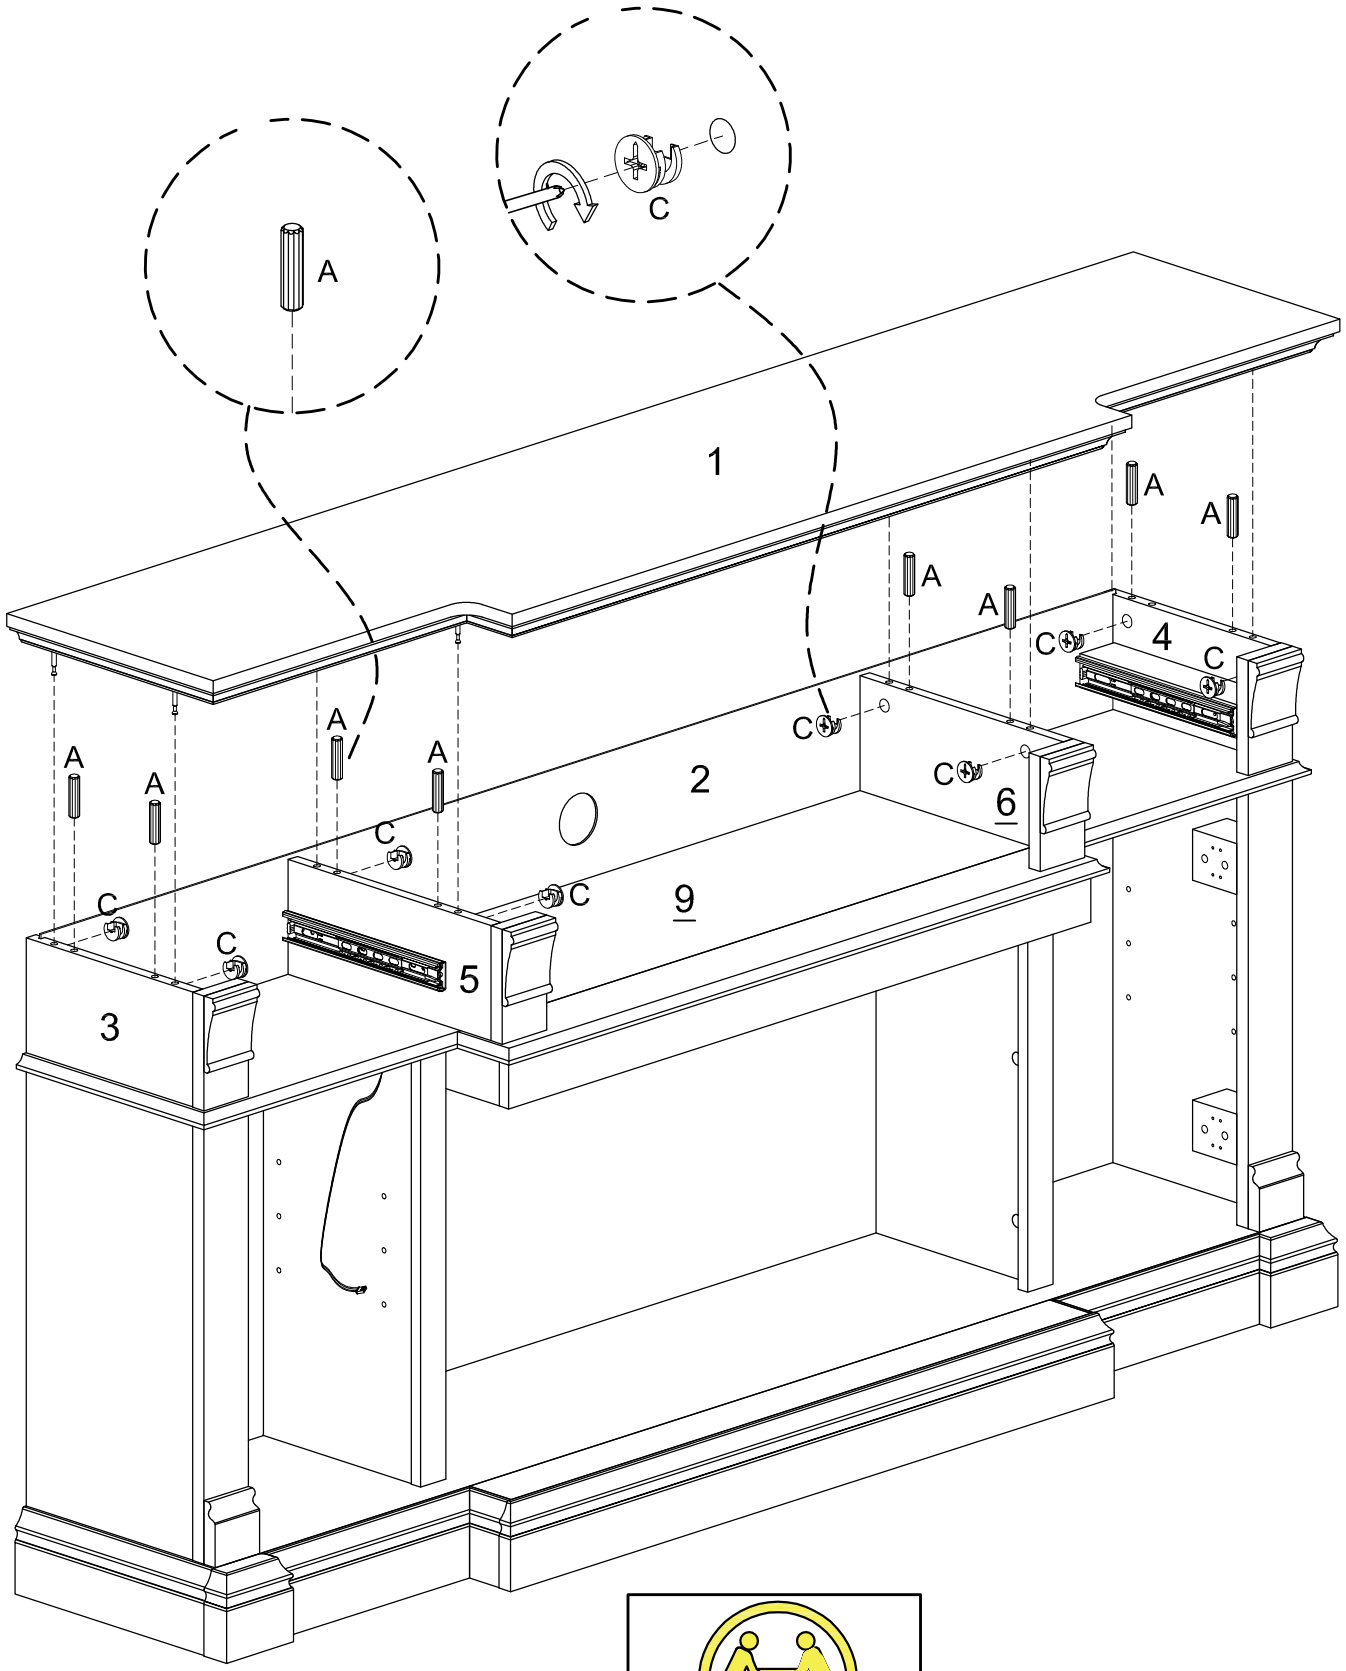
A
C
1
A
A
A
A
A
C
4
C
A
A
C
C
2
6
C
C
C
9
5
3



CAUTION:Heavy! You may need
assistance with this step.

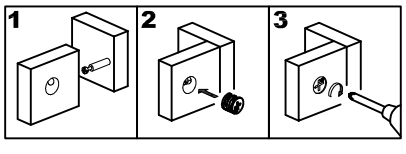
1
2
3


Step 27

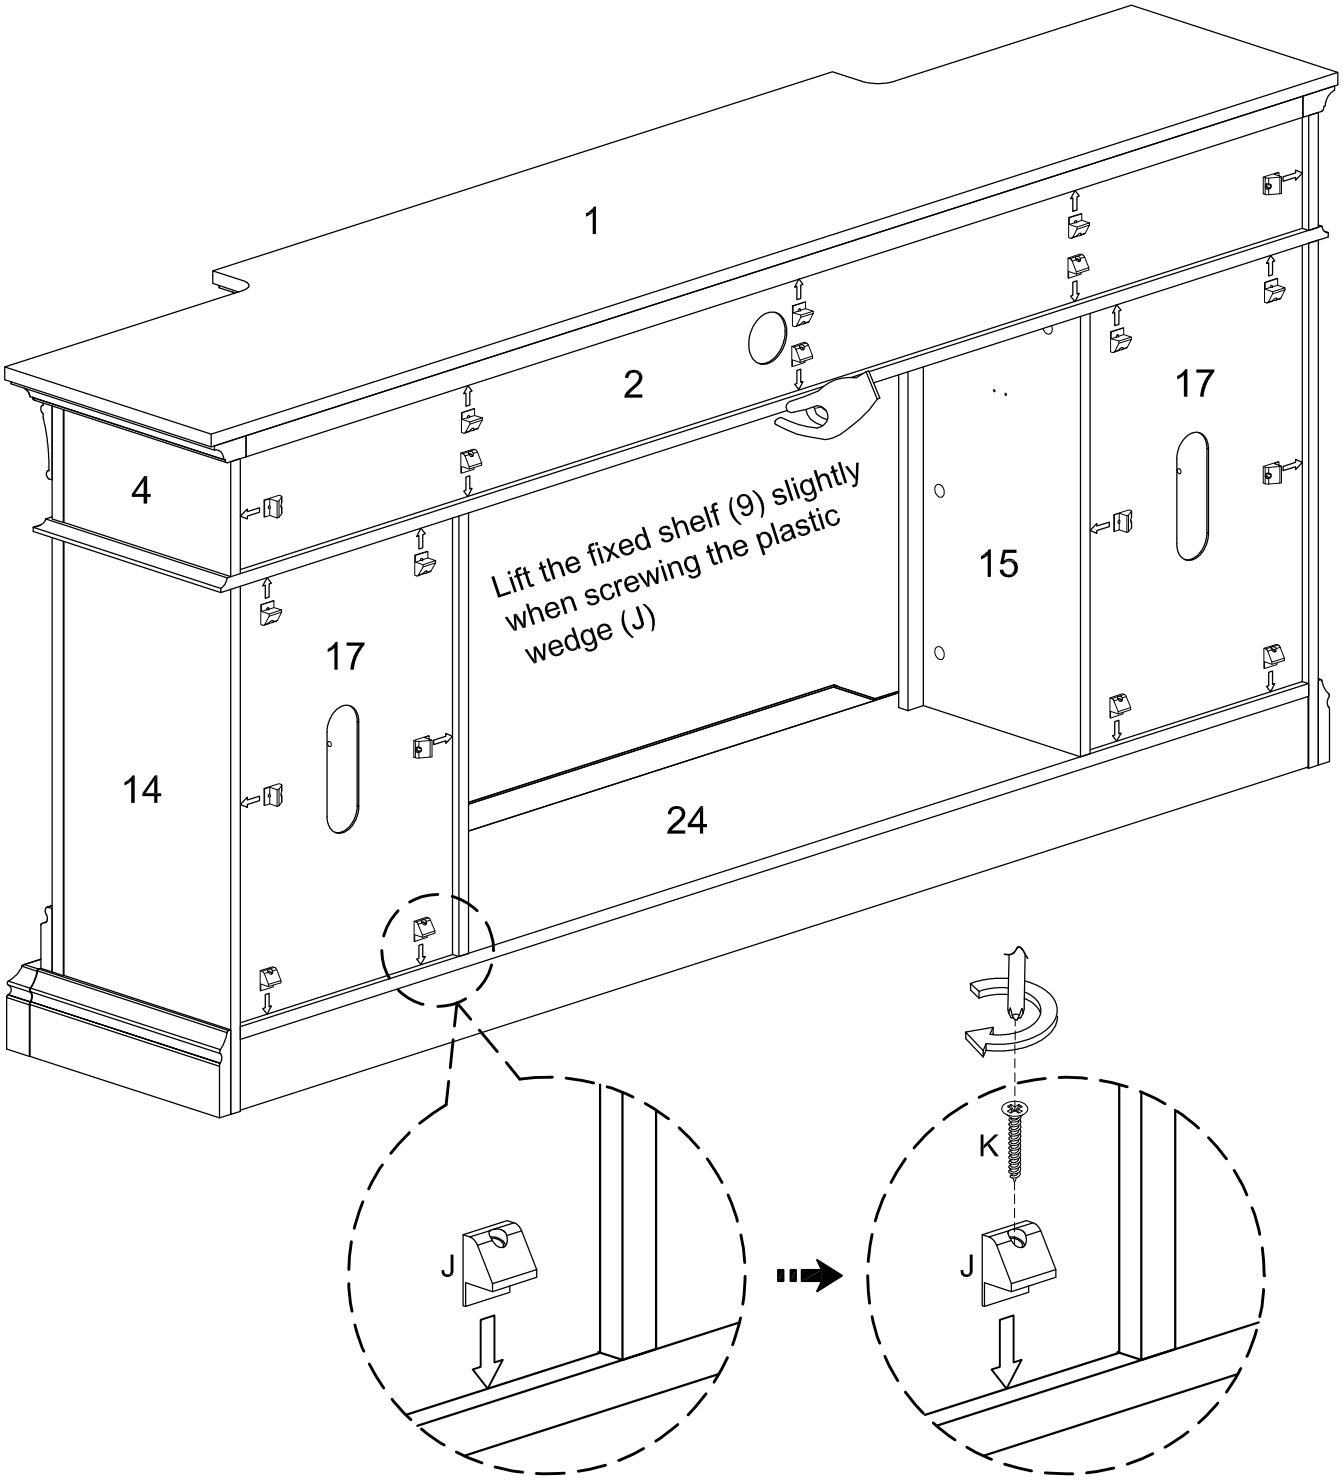
1
2
4
17
15
17
14
24
Lift the fixed shelf (9) slightly when screwing the plastic wedge (J)
J
K
J


Step 28

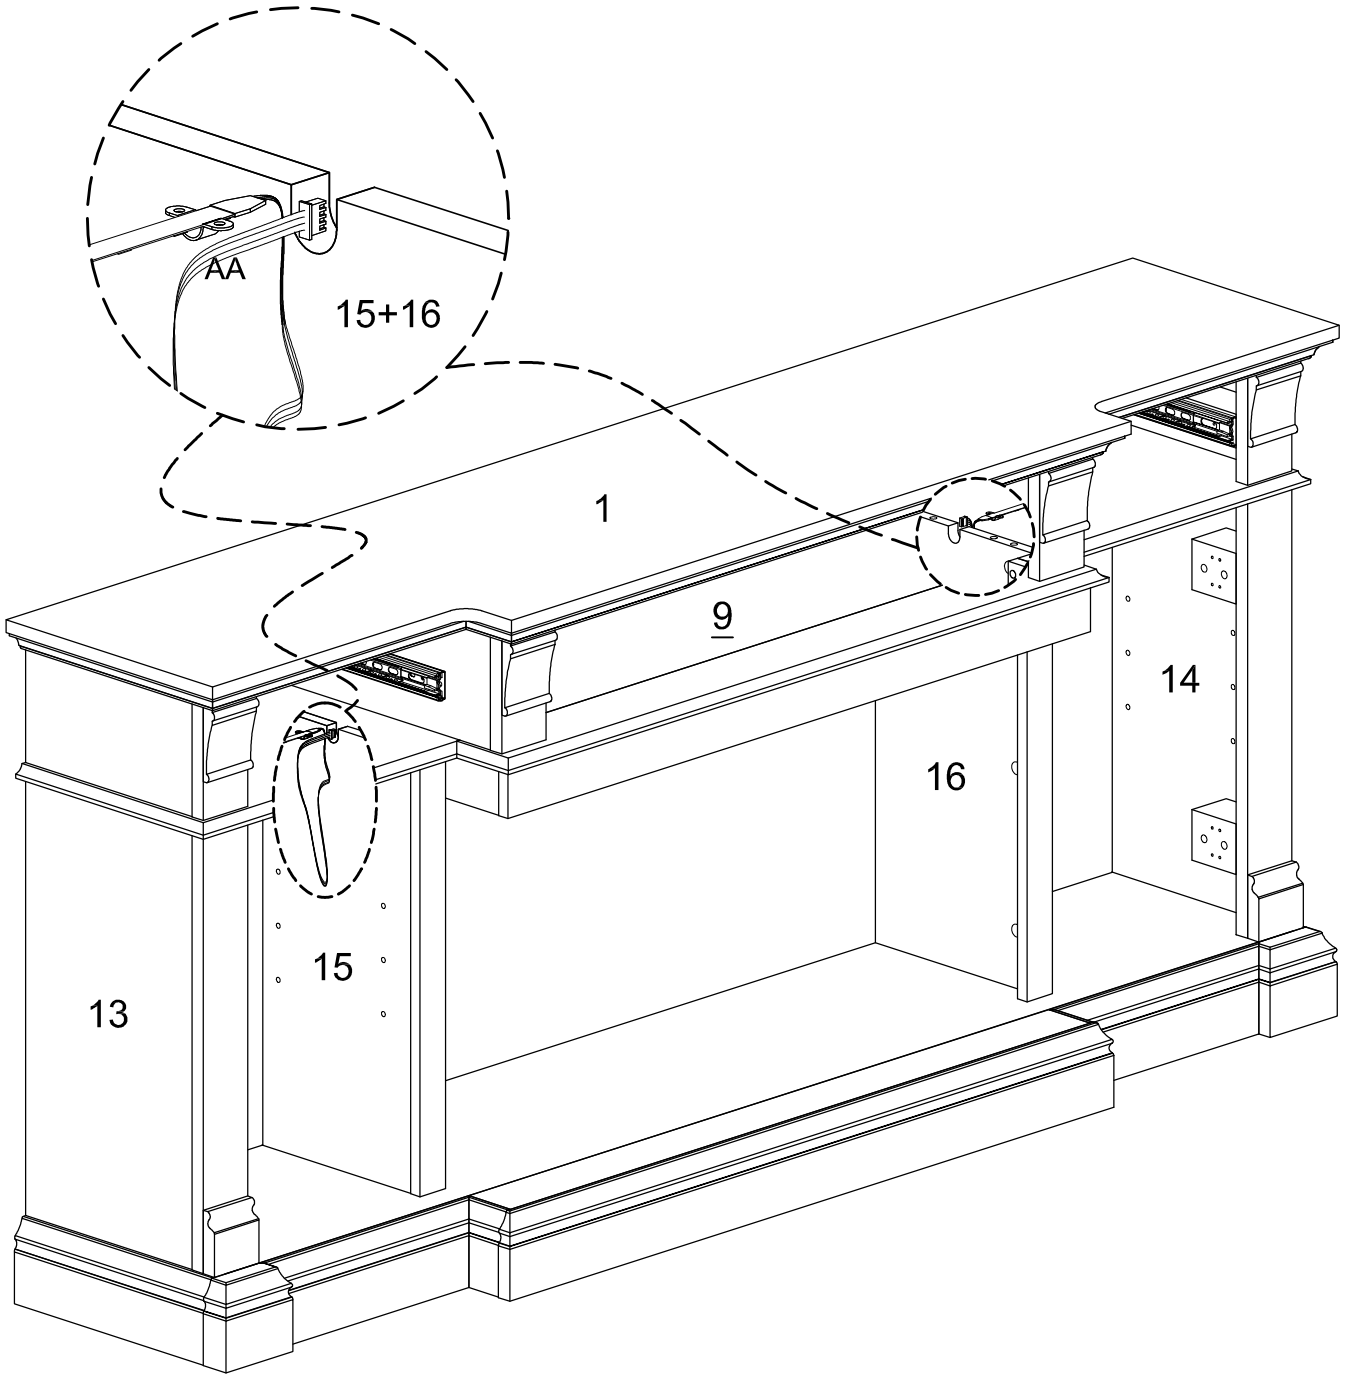


Step 29

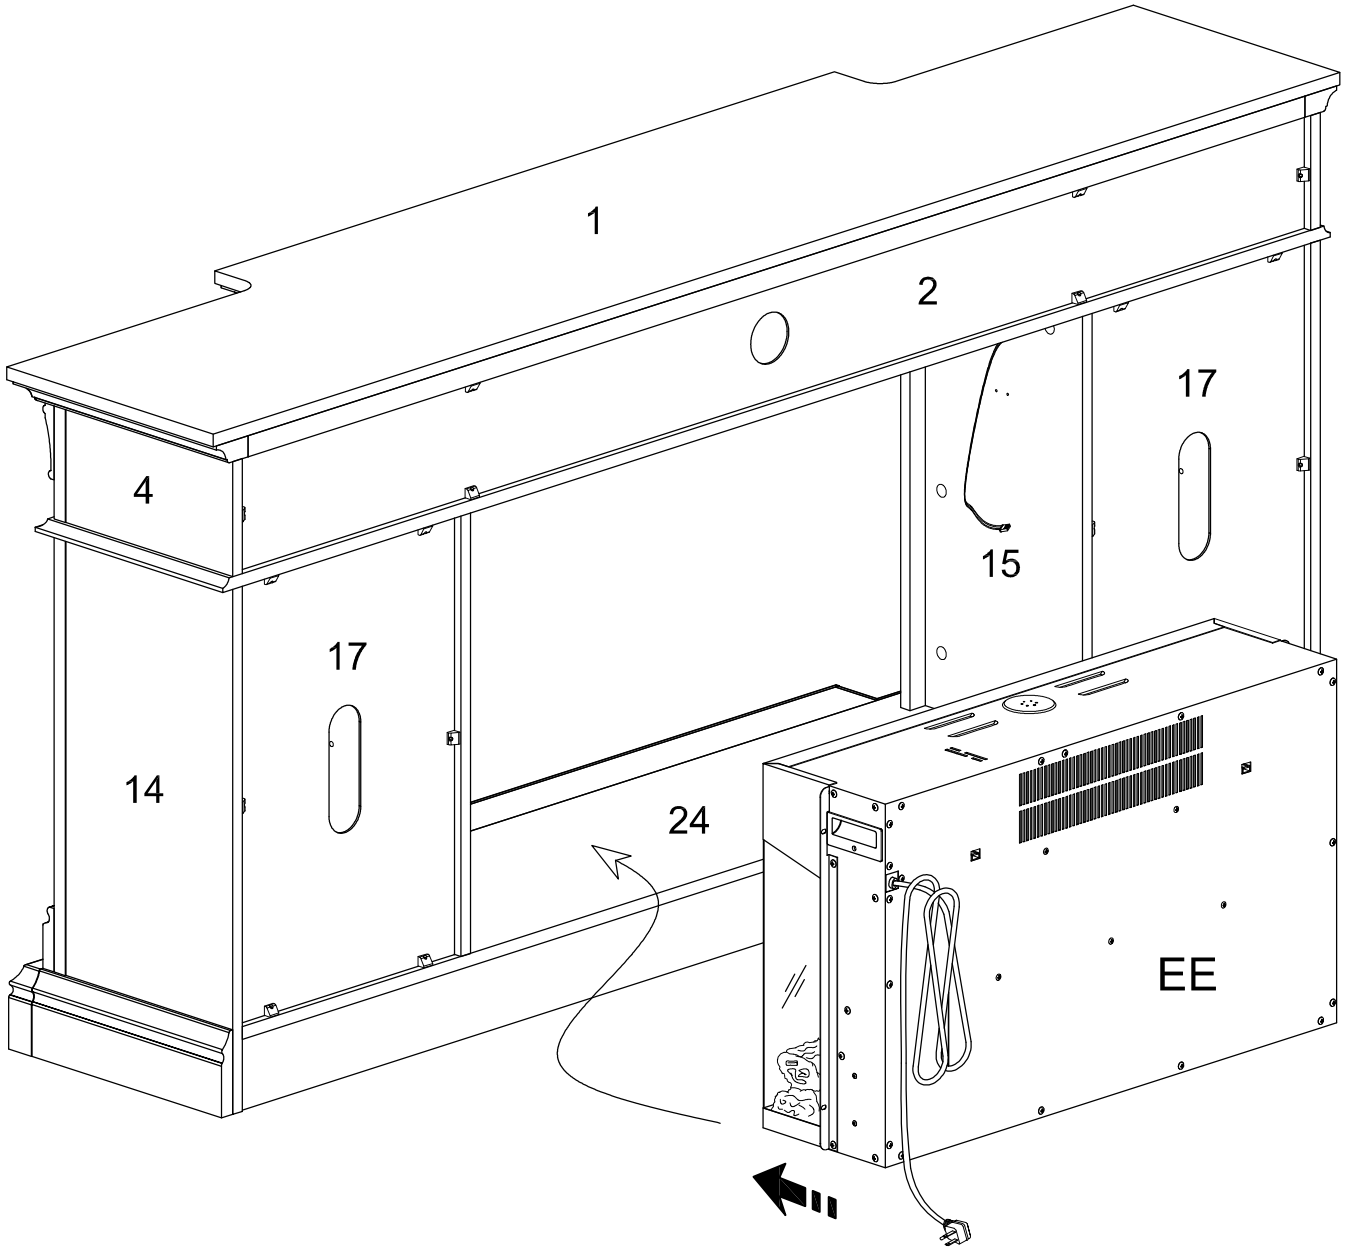


Step 30

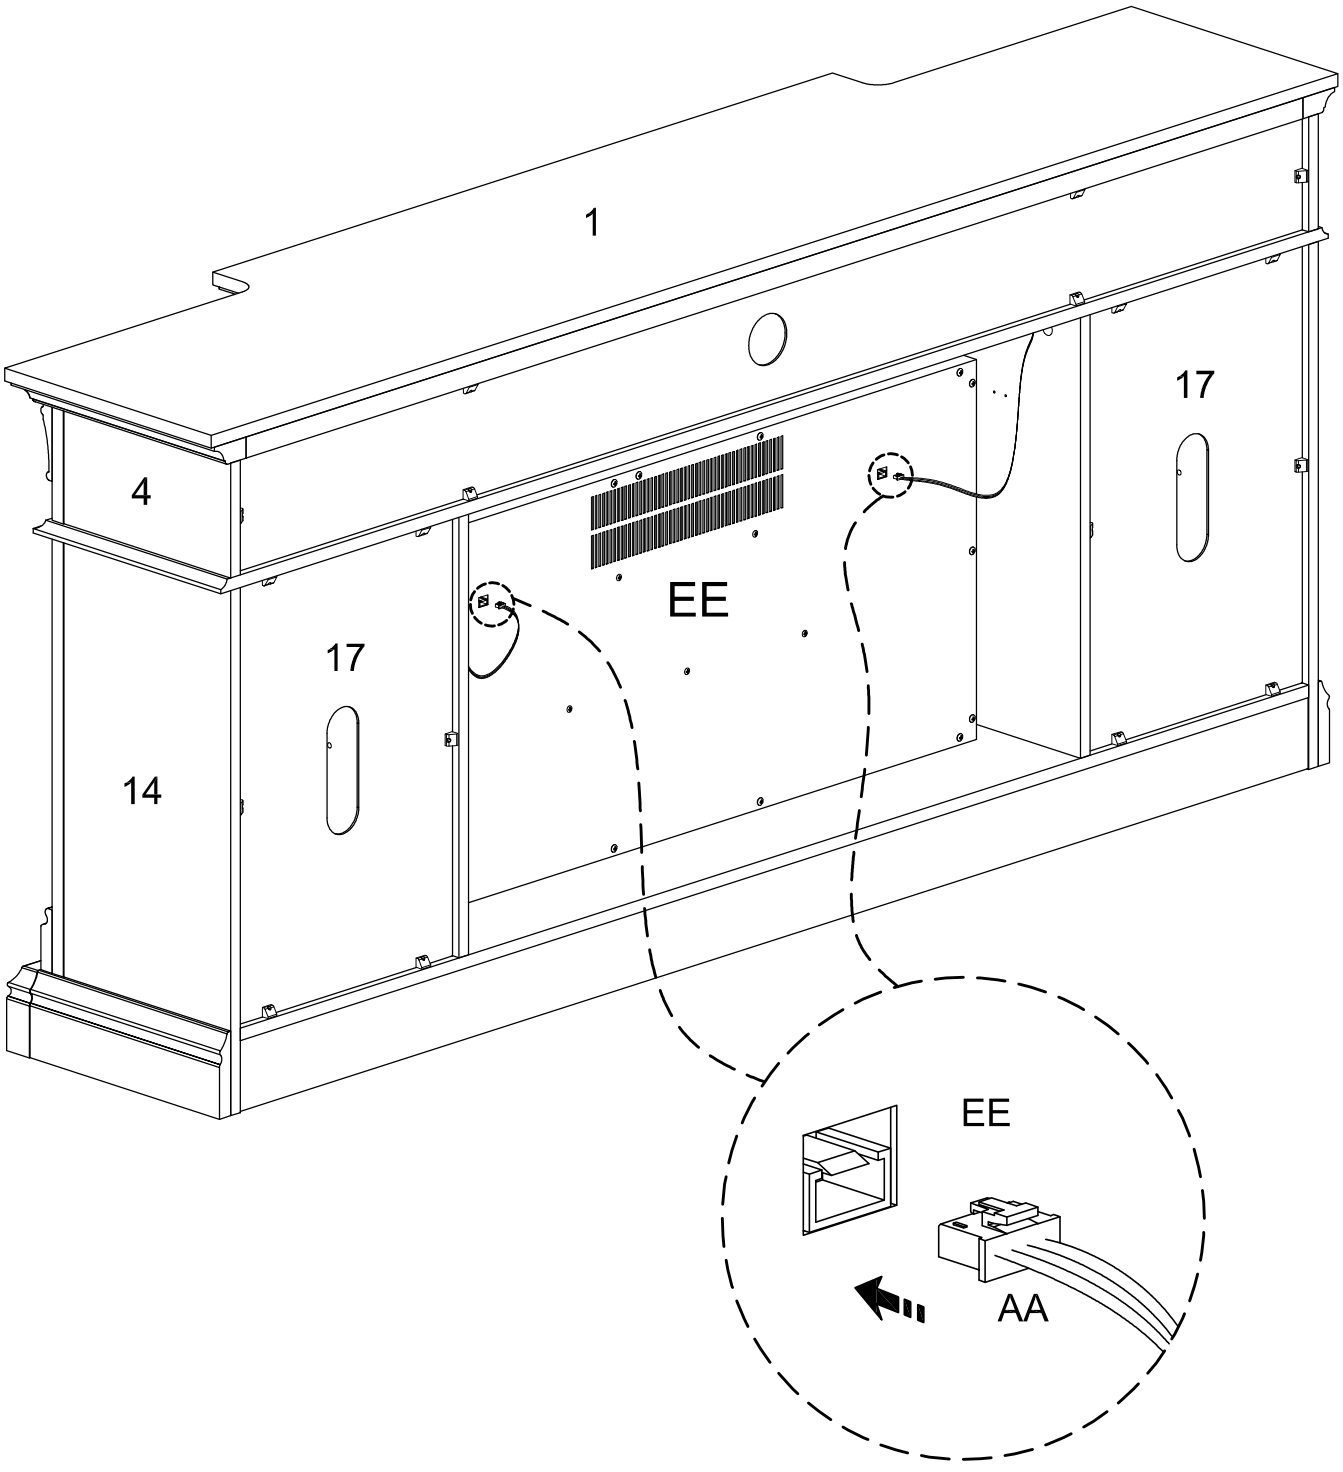


Step 31

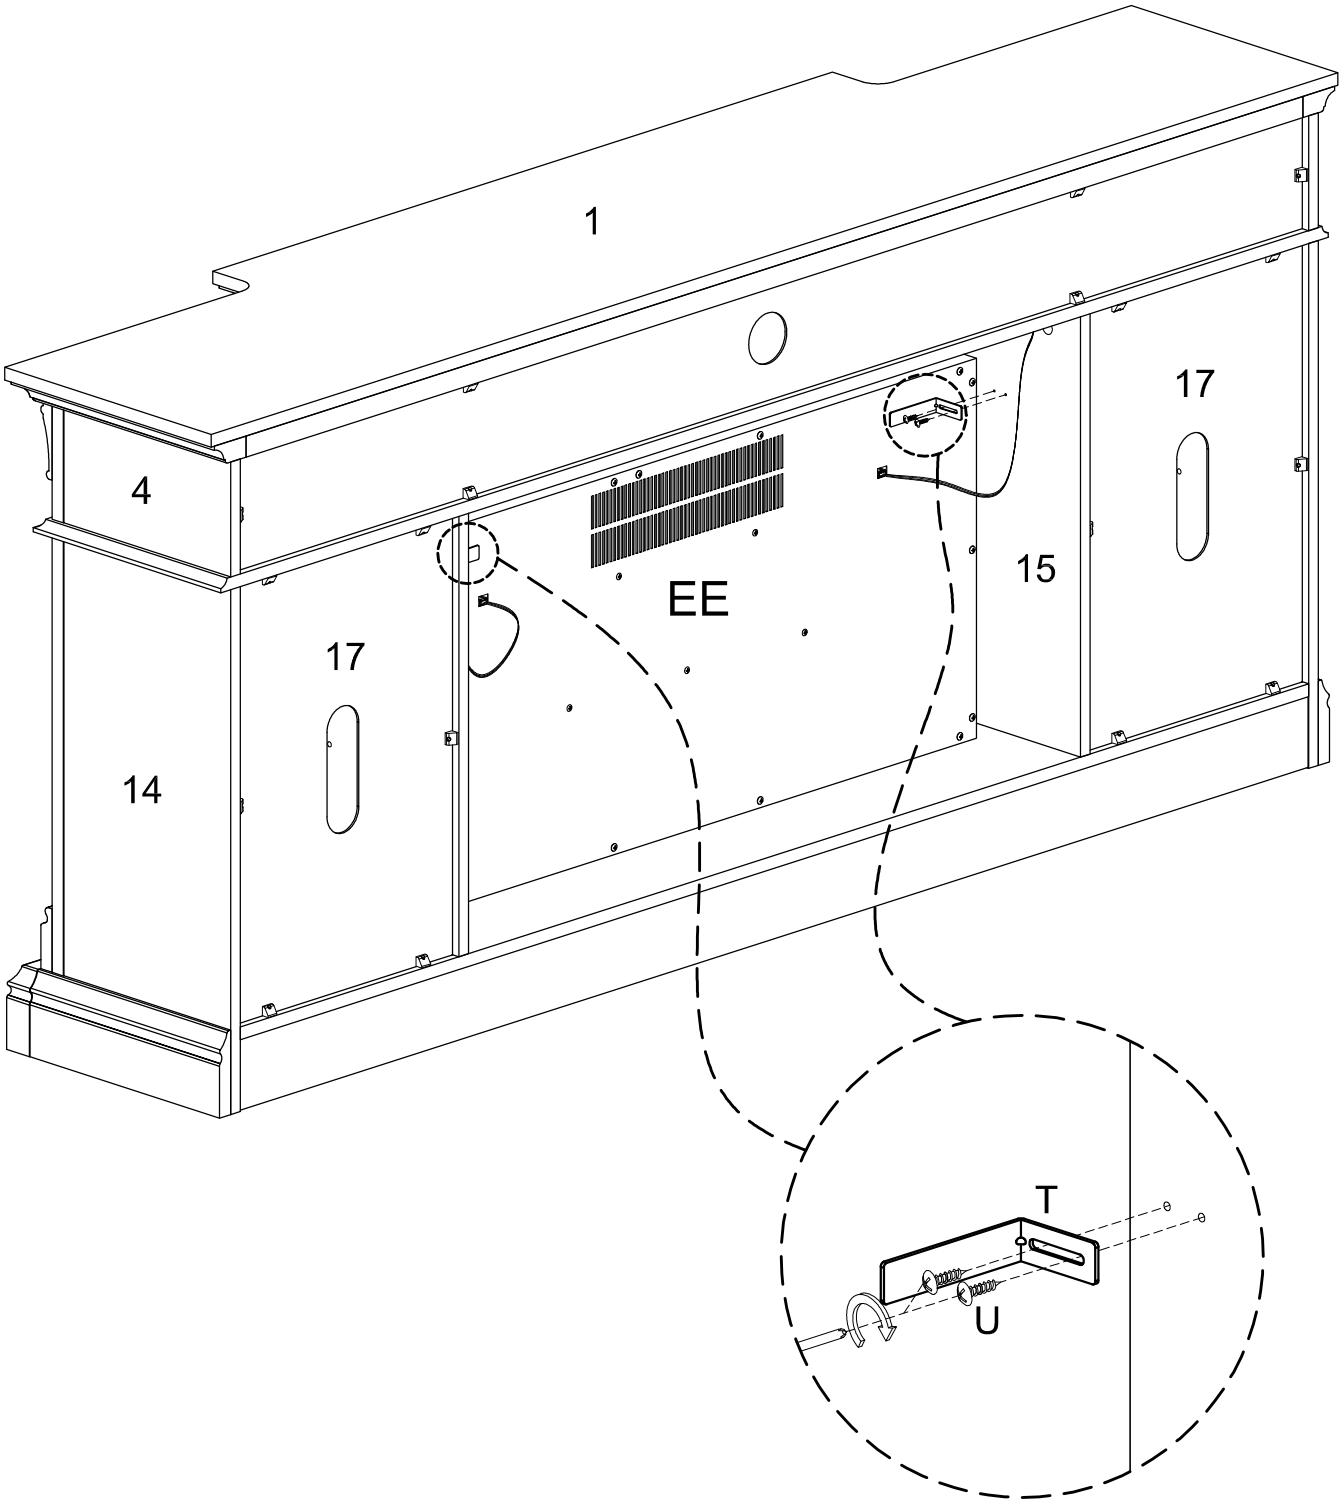


Step 32

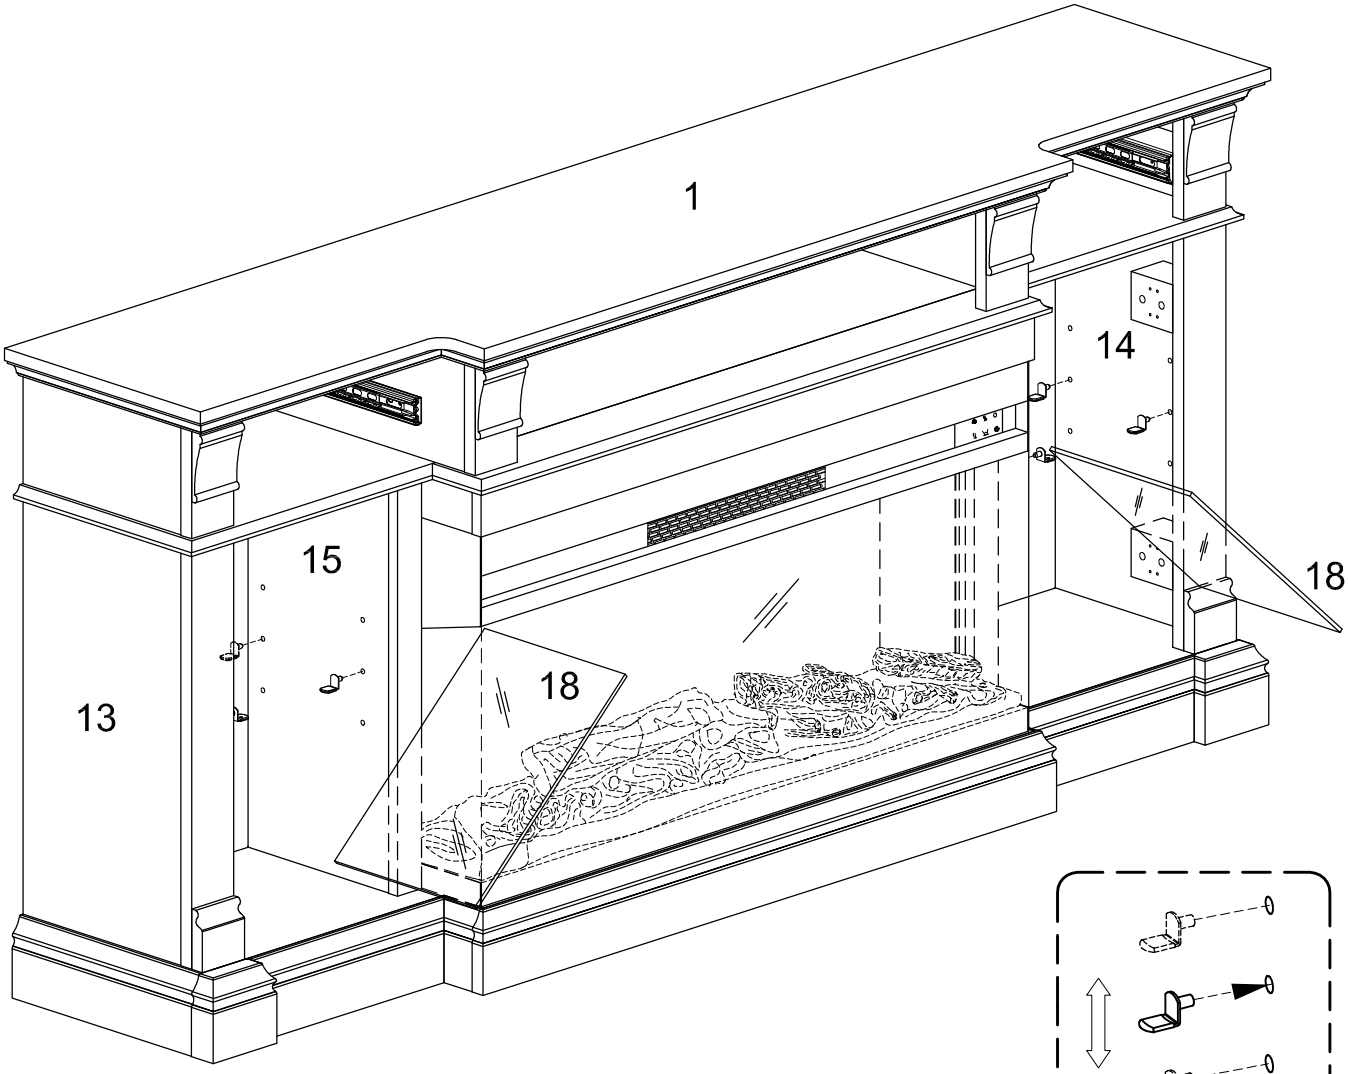

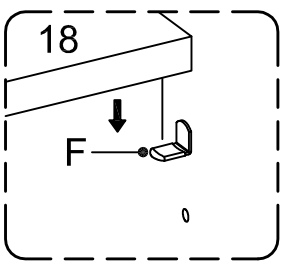


Step 33

x 2

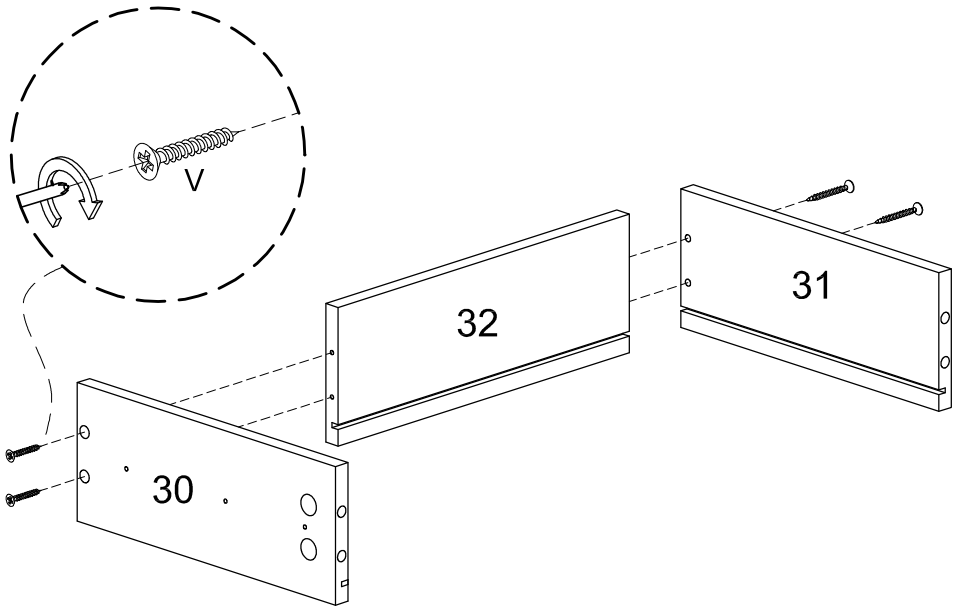


Step 34

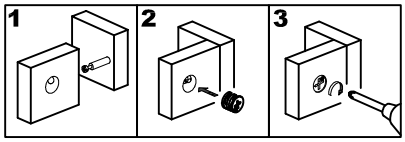

x 2


Step 35

x 2

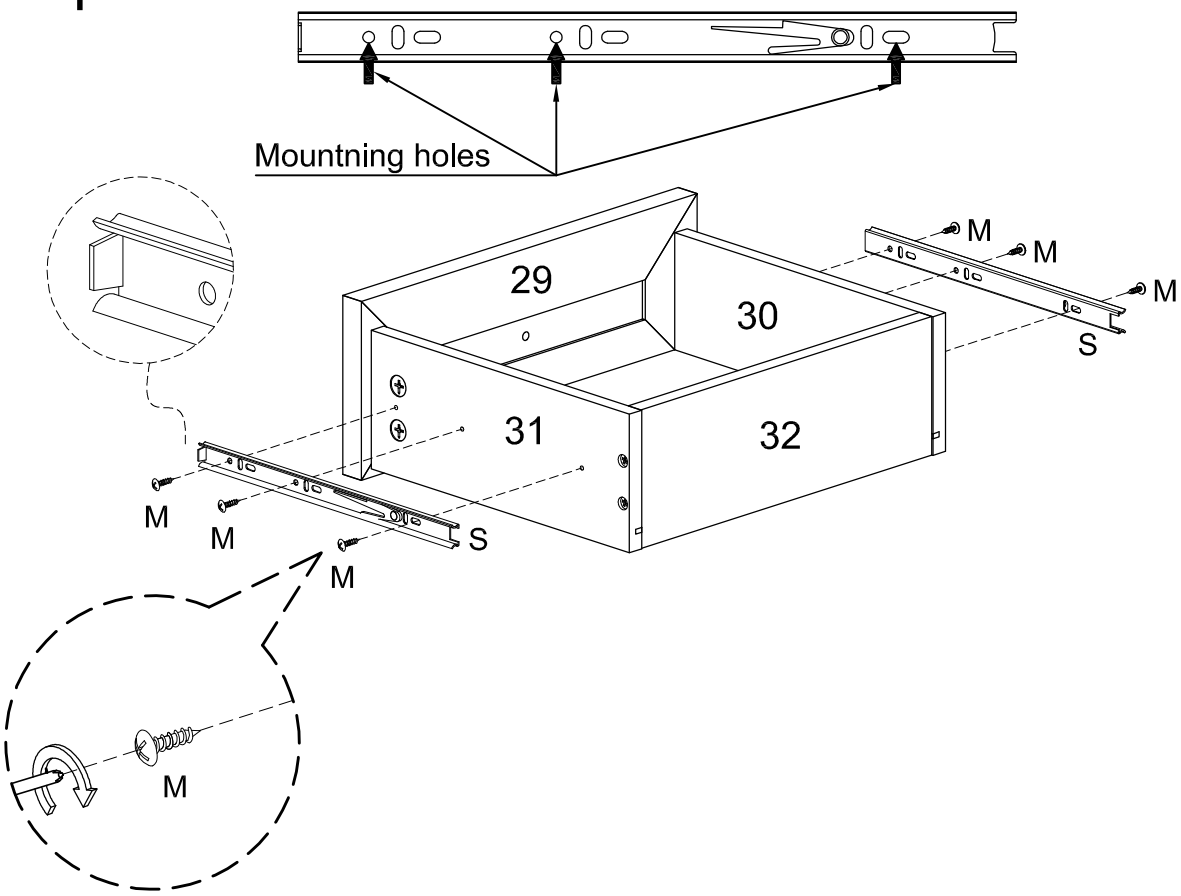


Step 36


x 2

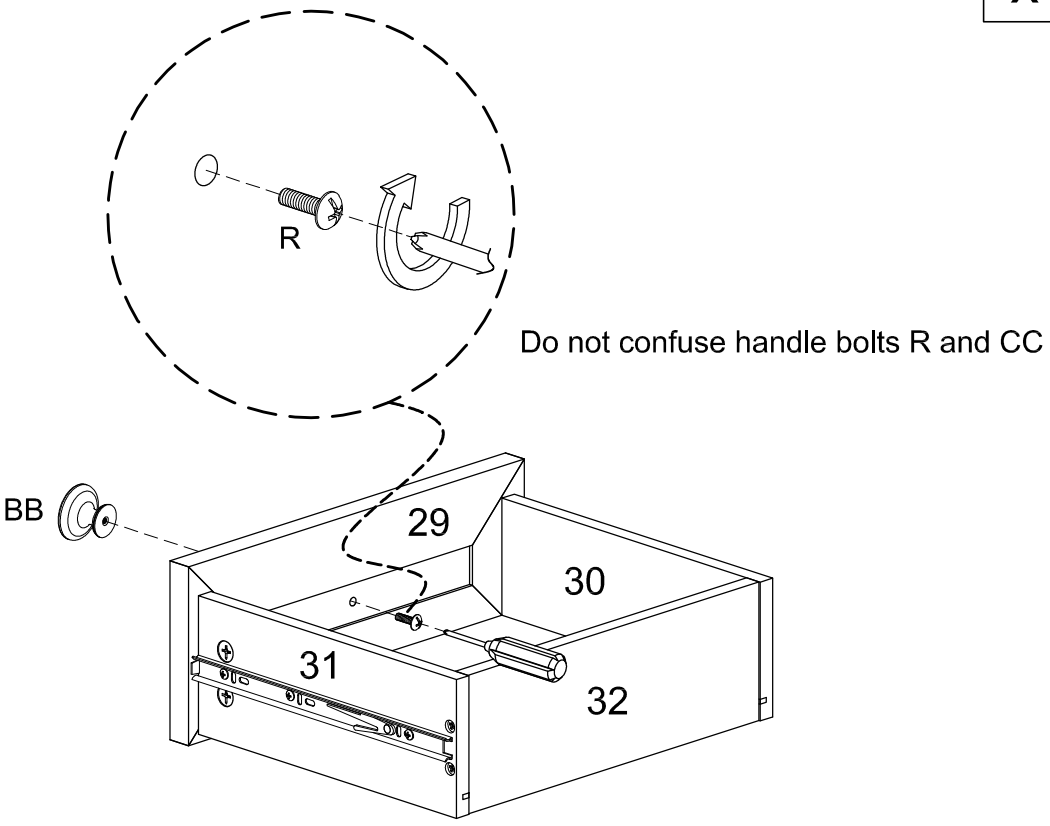


Do not confuse handle bolts R and CC

Step 37

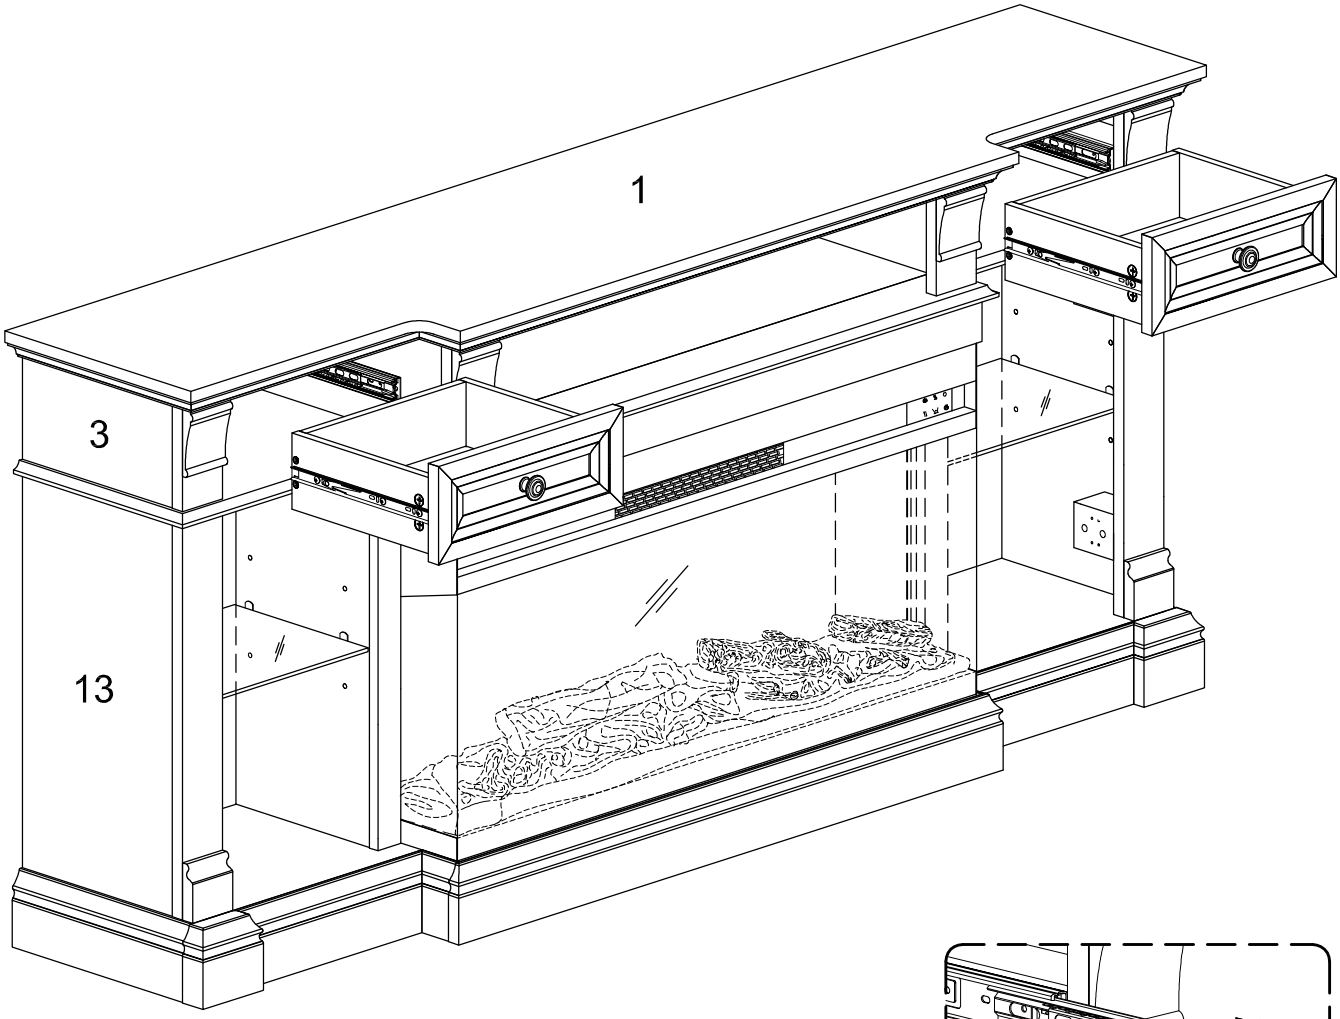


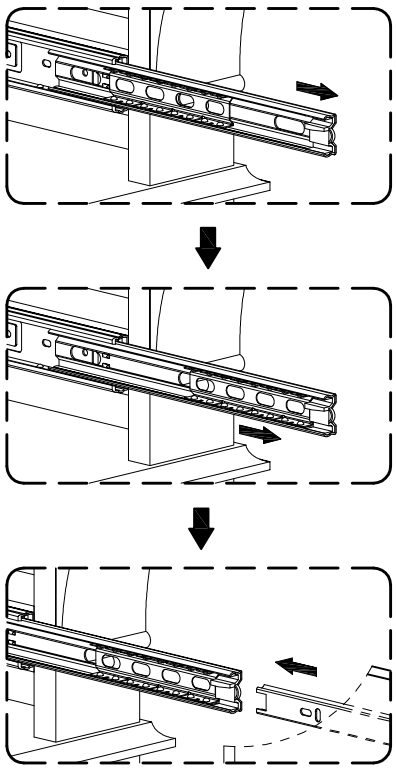


Step 38

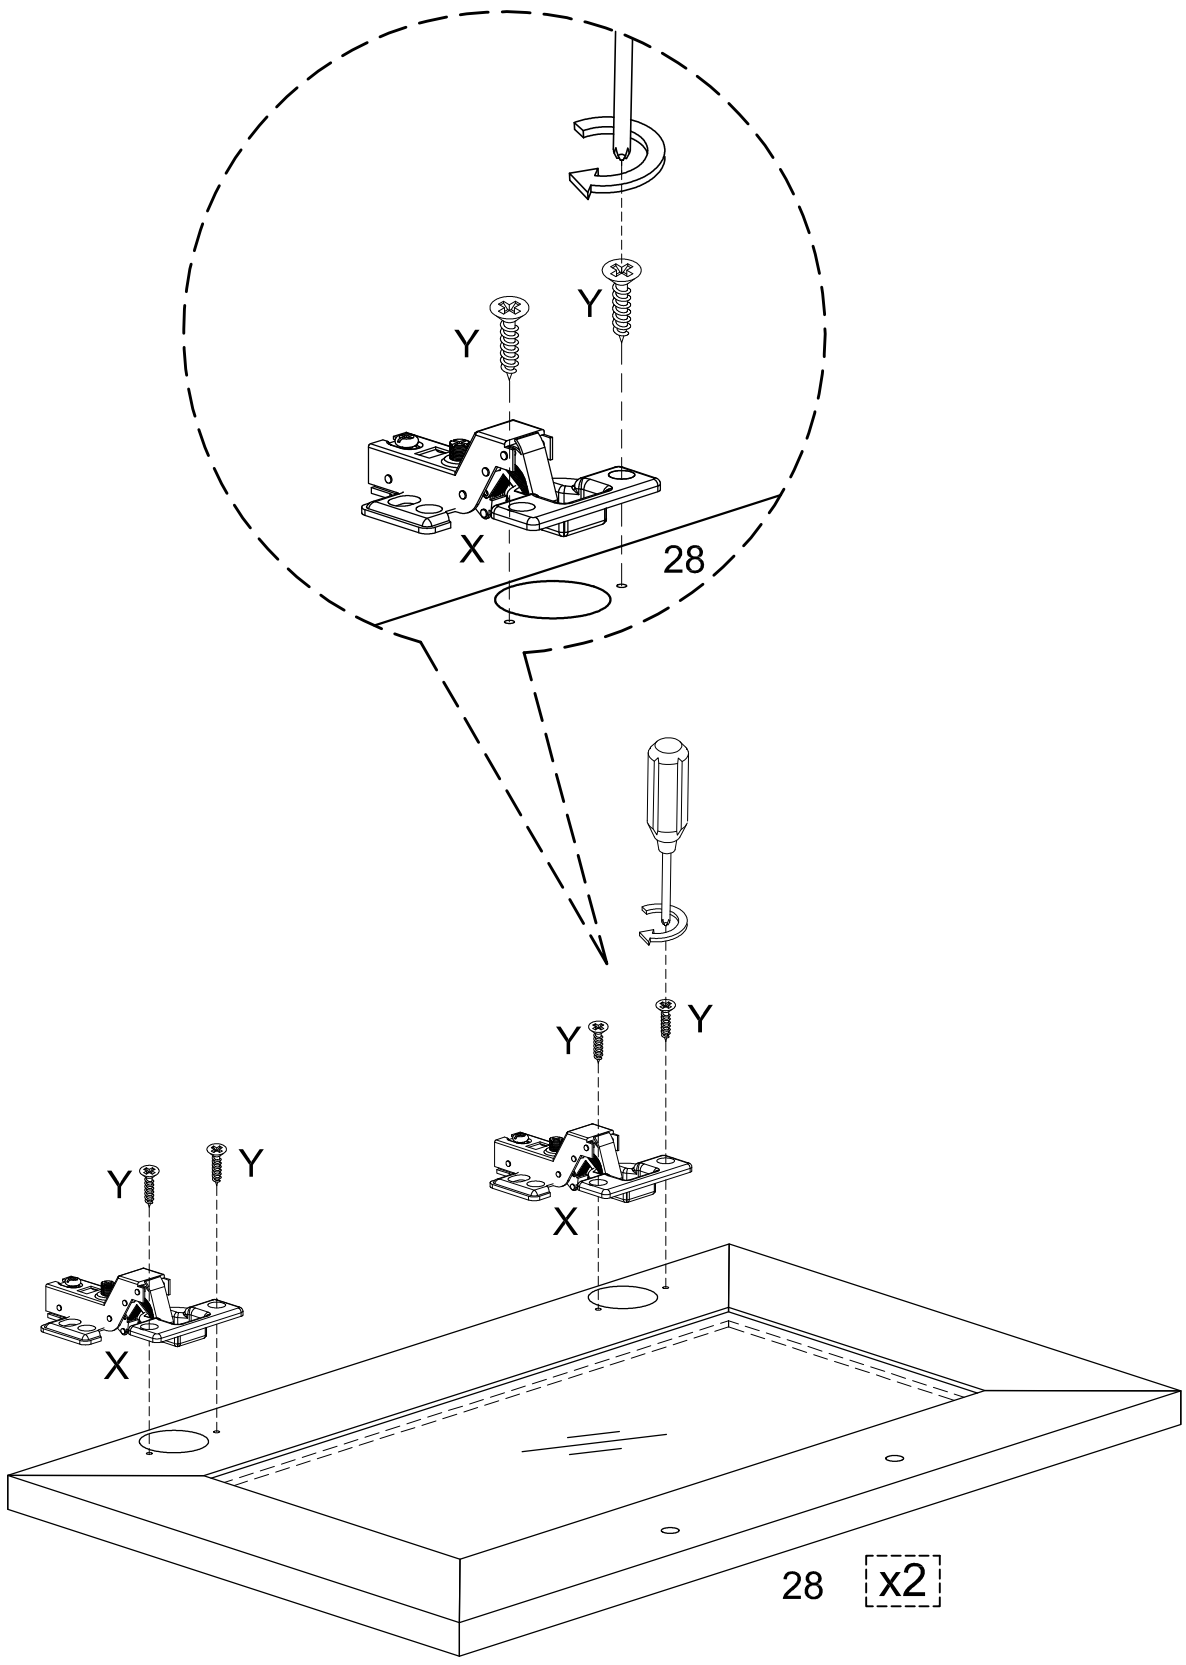


Step 39

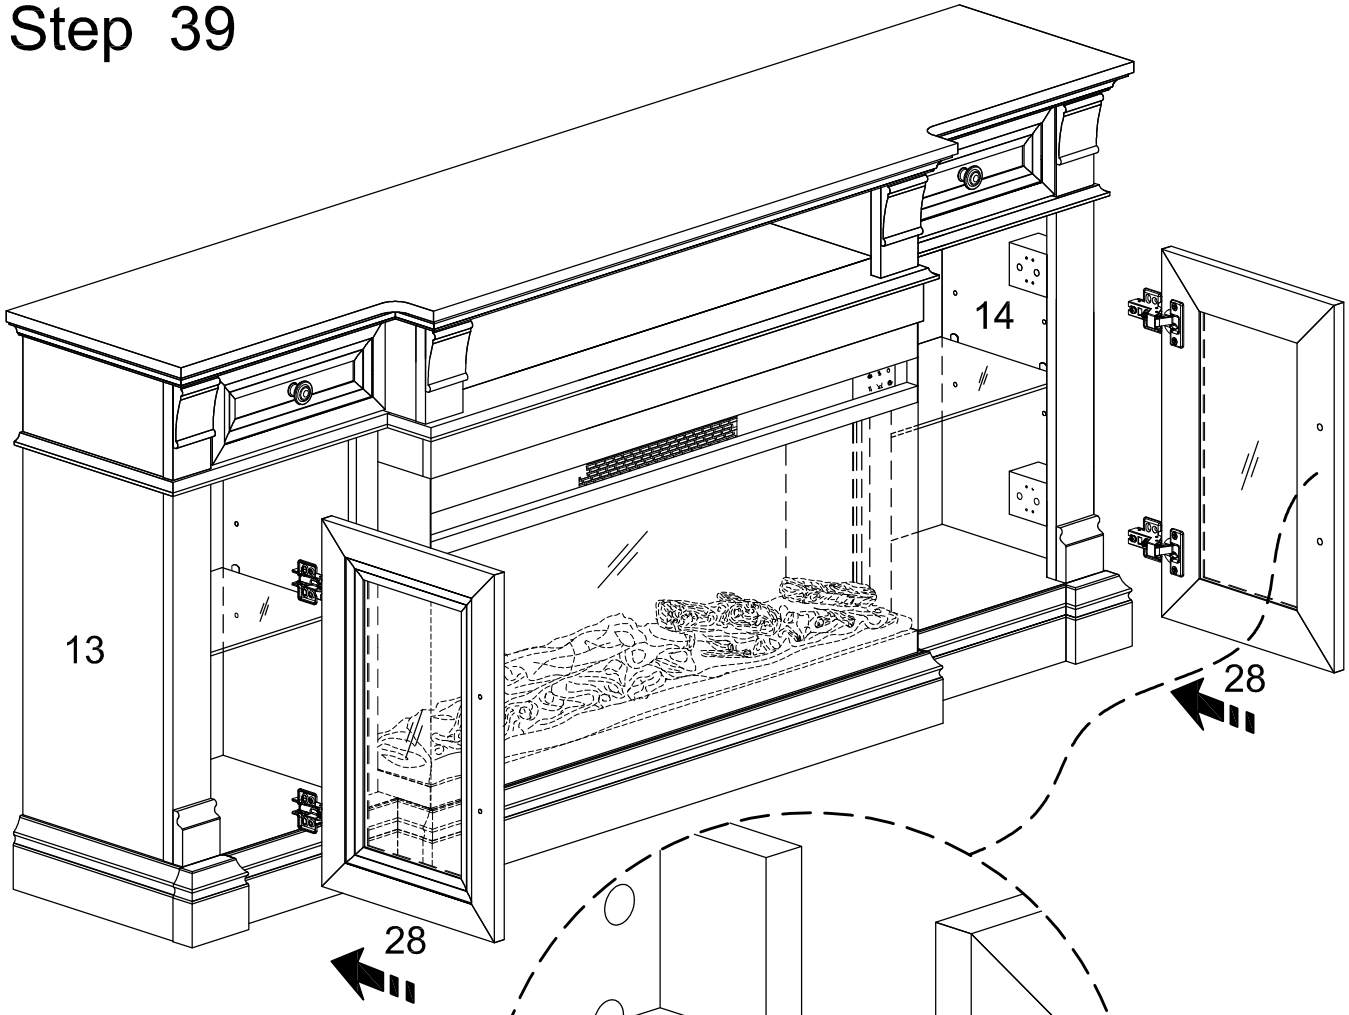


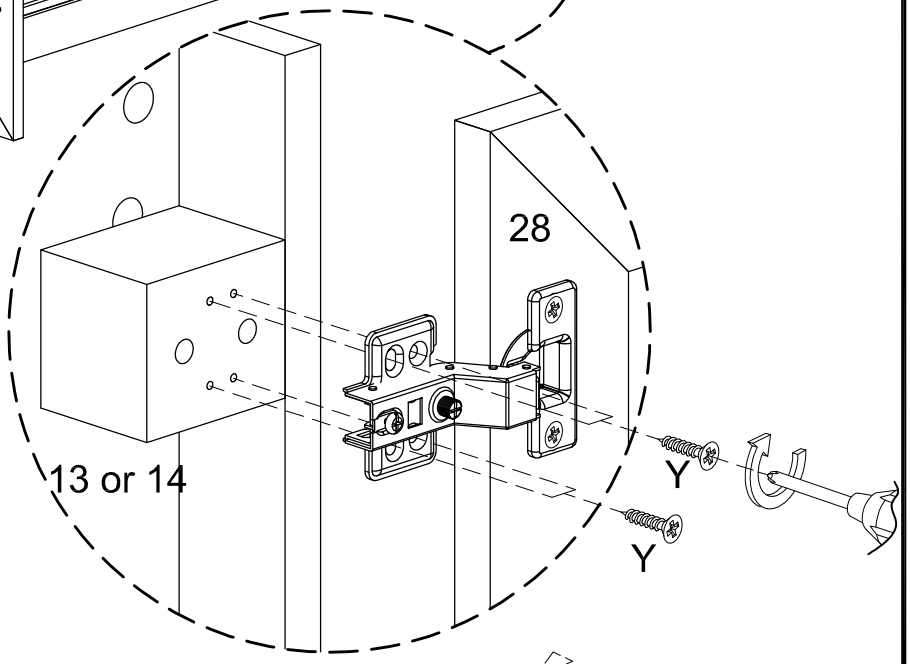


Concealed hinges are three-way adjustable.

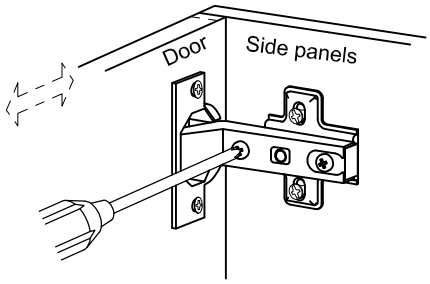

Horizontal
by screw adjustment

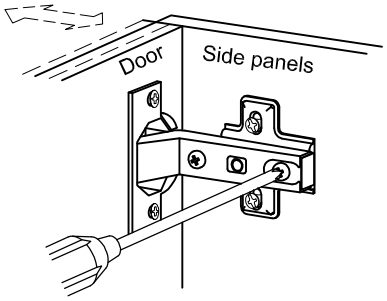


In-and-Out
by loosening the hinge-arm mounting screw or via cam adjustment

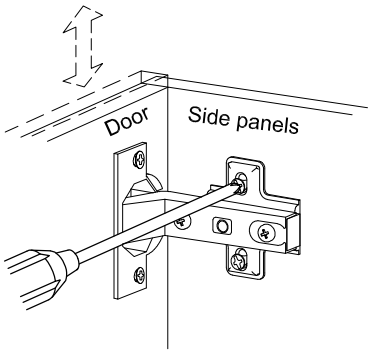

Vertical
Via slots in the mounting plate or via cam adjustment


Step 40

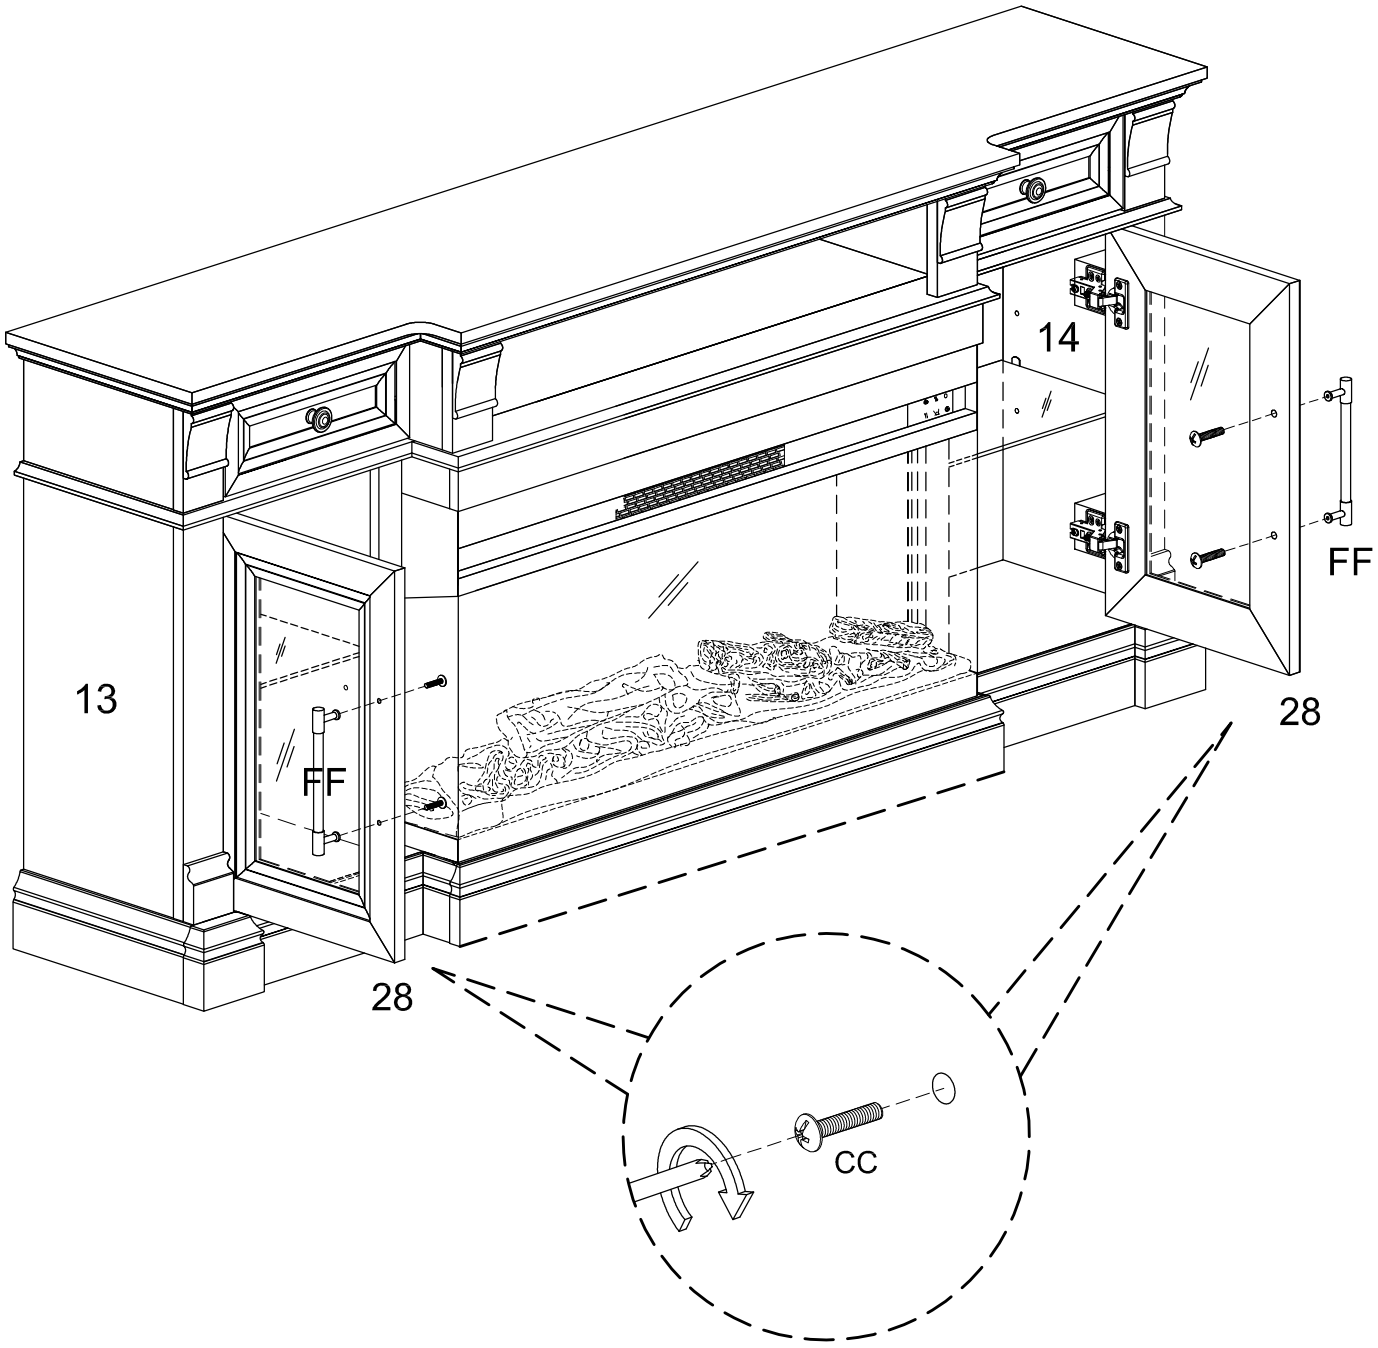



Step 41

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

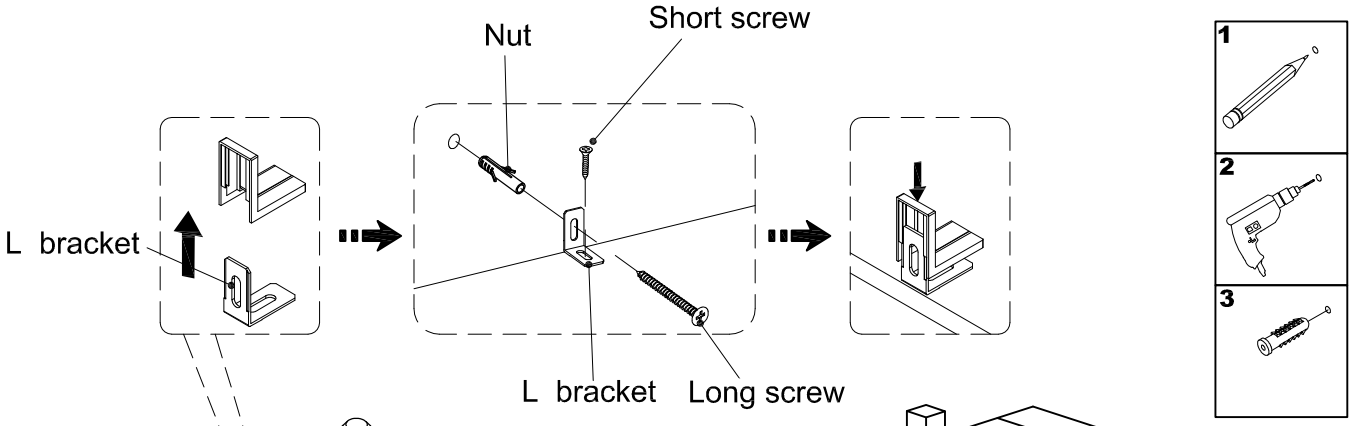

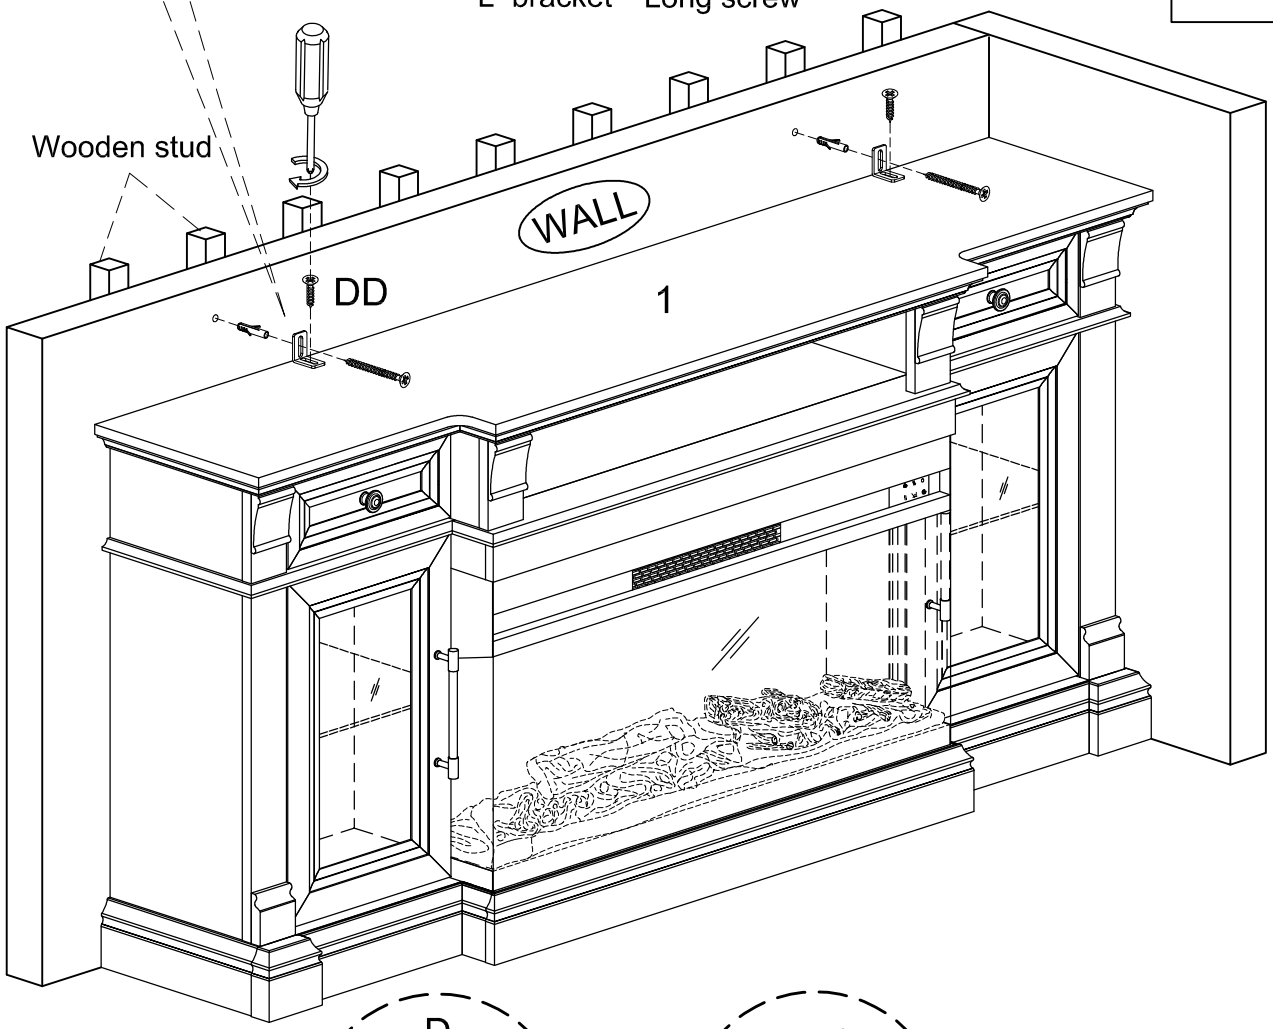

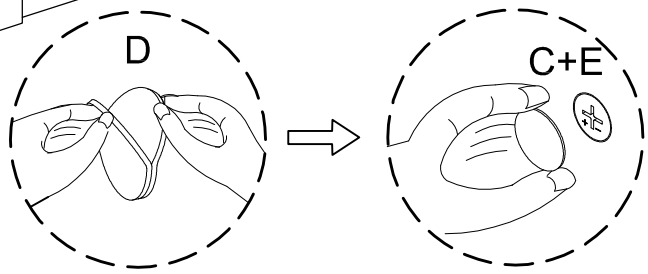

Use stickers(D) to conceal cam locks(C+E)

Final Assembly