

INSTALLATION
Product Manual

Version: 200335US-01-26A-AA

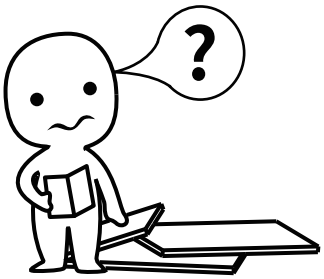


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

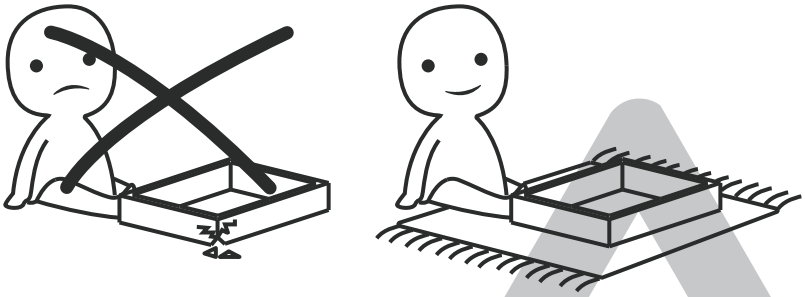


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

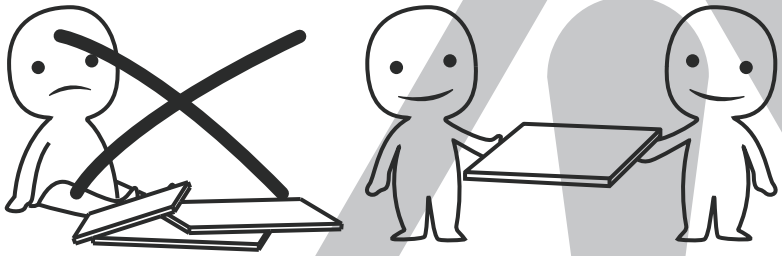

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

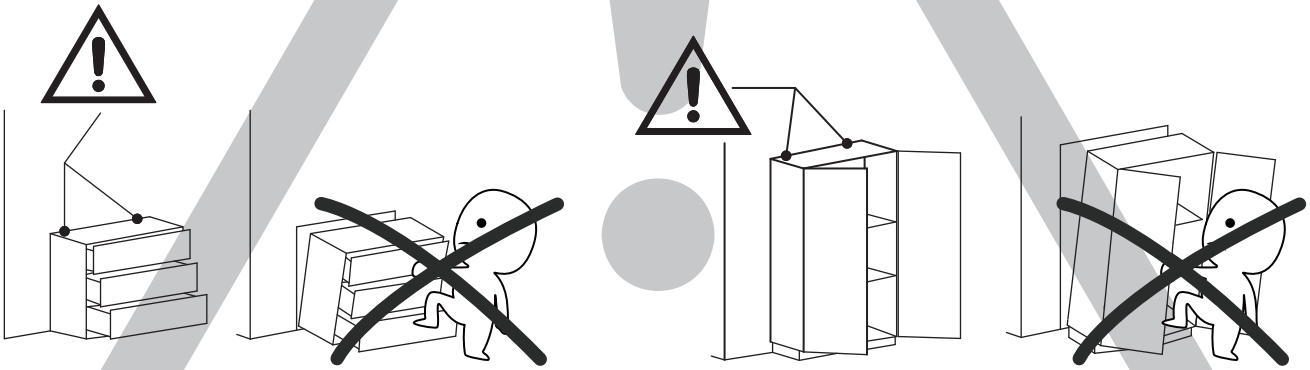

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.




Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



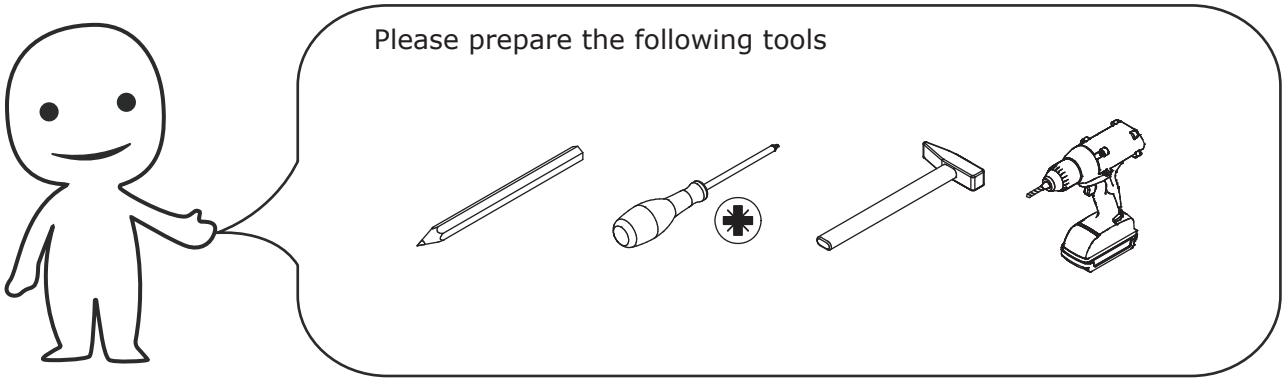



















When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

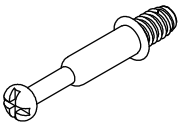
A x 30	B x 30	C x 30	D x 36
			
∅15 x 10 mm	∅6 x 35 mm		∅6 x 30 mm

E x 31	F x 2	G x 2	H x 68
			
∅5 x 40 mm			∅3.5 x 14 mm

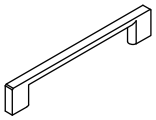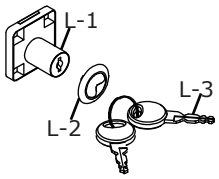J x 2	K x 4	L x 1	M x 4
			
	∅4 x 18 mm		∅3.5 x 20 mm

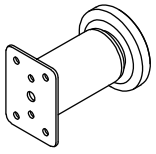N x 4	P x 16	Q x 18	R x 1
			
		∅3 x 14 mm	

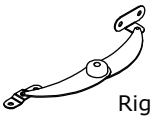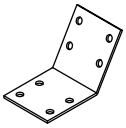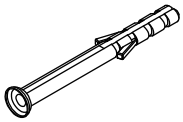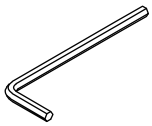S x 1	T x 1	U x 2	V x 1
 Left	 Right		
W x 6	X x 6	Y x 8	Z x 8
 ∅8 x 80 mm	 ∅5 x 80 mm	 ∅6 x 12 mm	
AA x 1	BB x 1	CC x 30	DD x 24
		 ∅4 x 68 mm	 ∅8 x 38 mm
EE x 30	FF x 10		
			

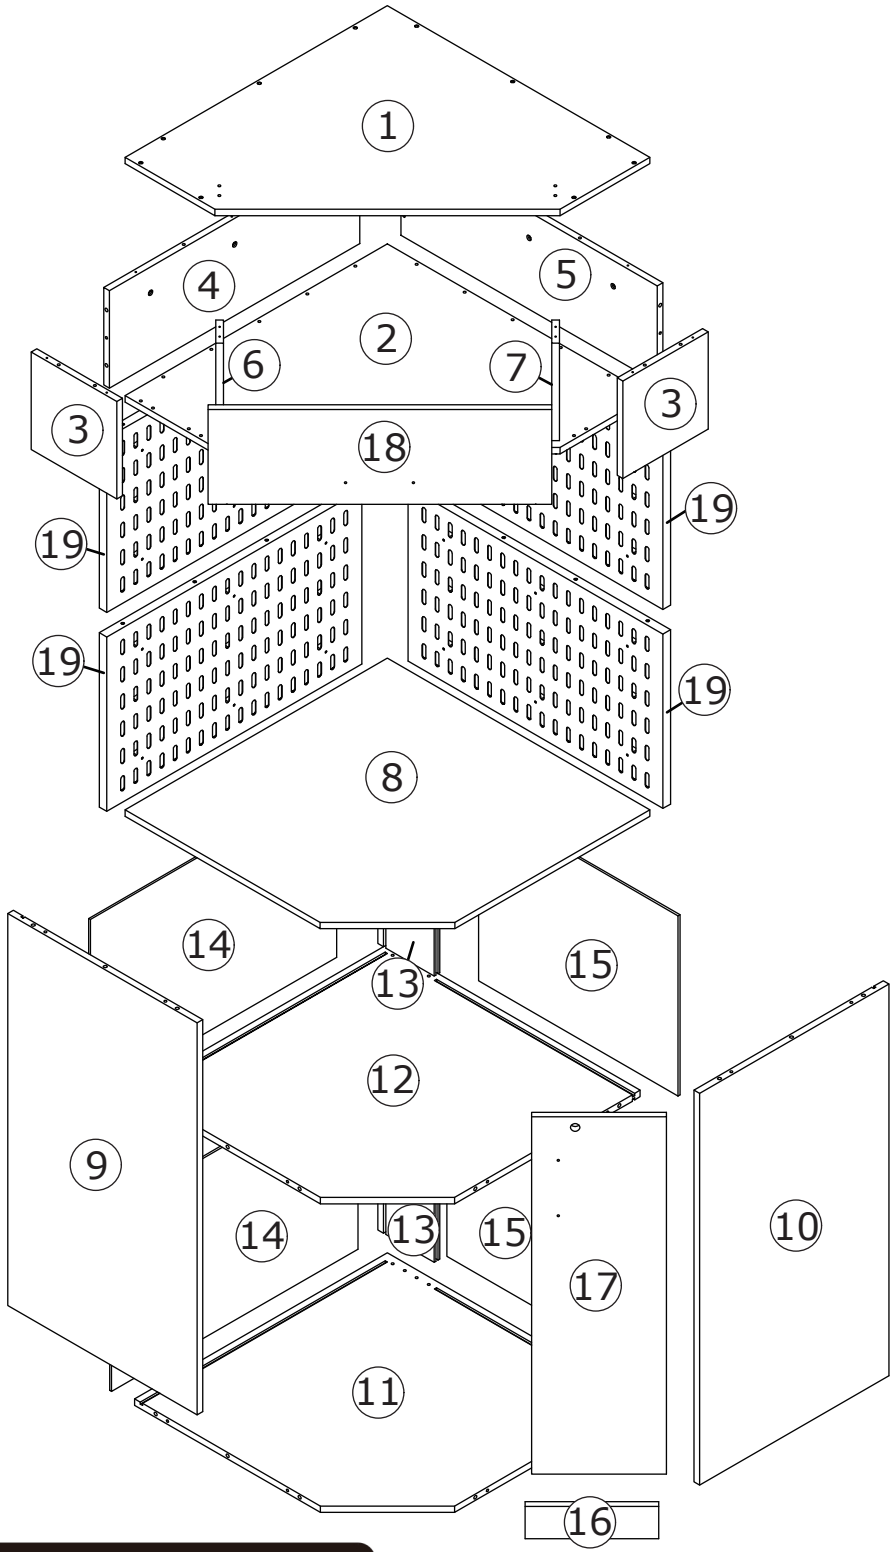

⚠WARNING







Children have died from furniture tipover.To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!


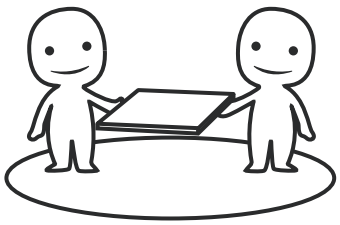



ASSEMBLED BY 2 ADULTS

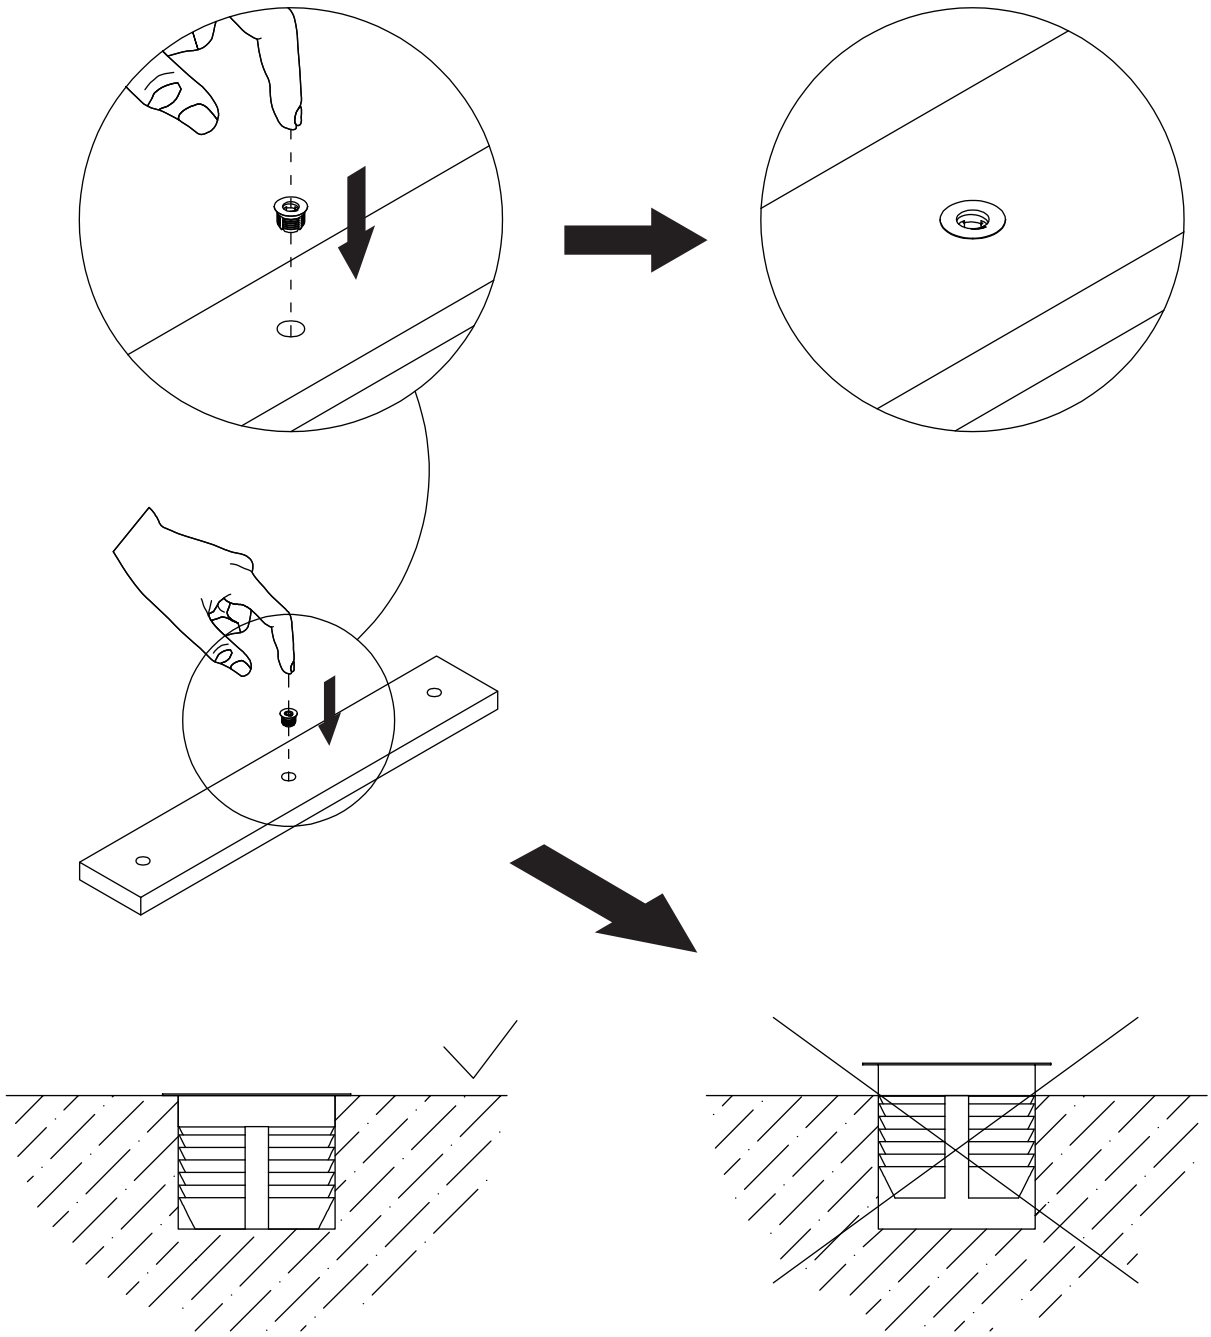

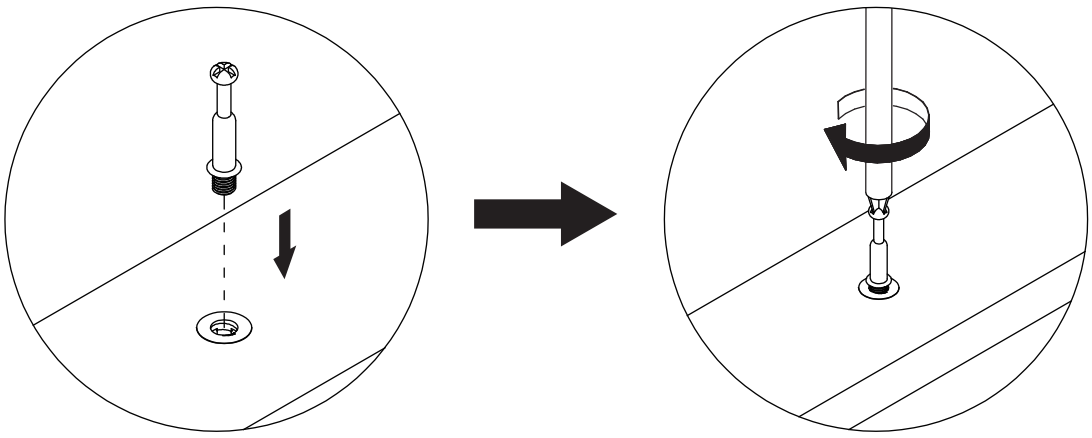


1



B x 2	C x 2	
 ∅6 x 35 mm		

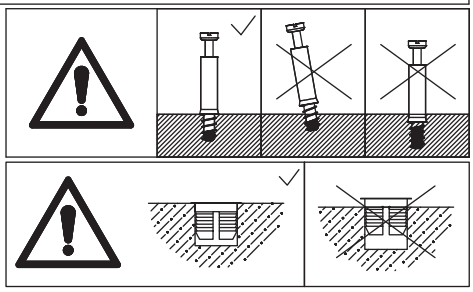


Install plug (C) onto panel 12, then screw self-tapping rod (B) into panel 12.

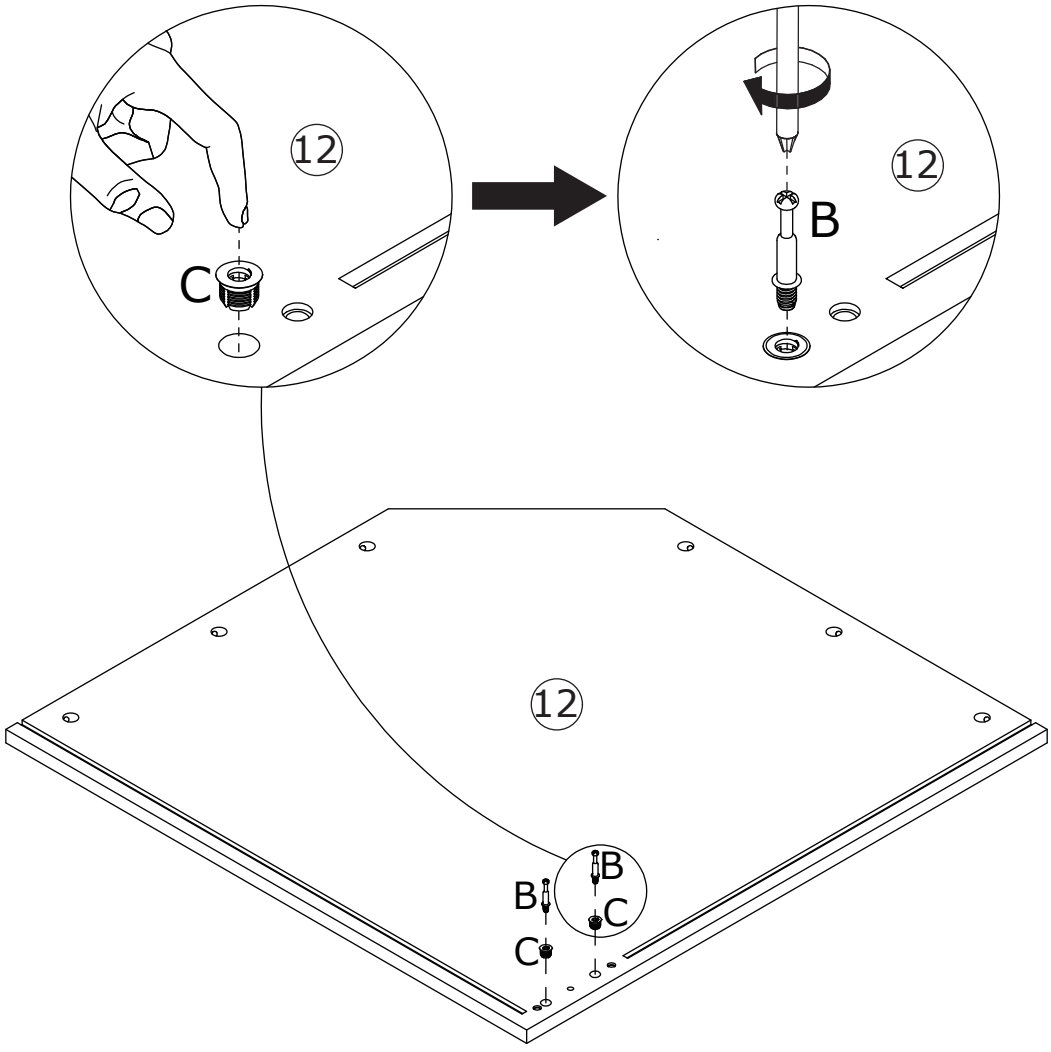


2


D x 2	E x 2	
		
∅6 x 30 mm	∅5 x 40 mm	

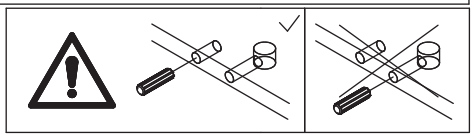


Connect panel 13 to panel 12 using wooden dowel (D), and secure them with screw (E).

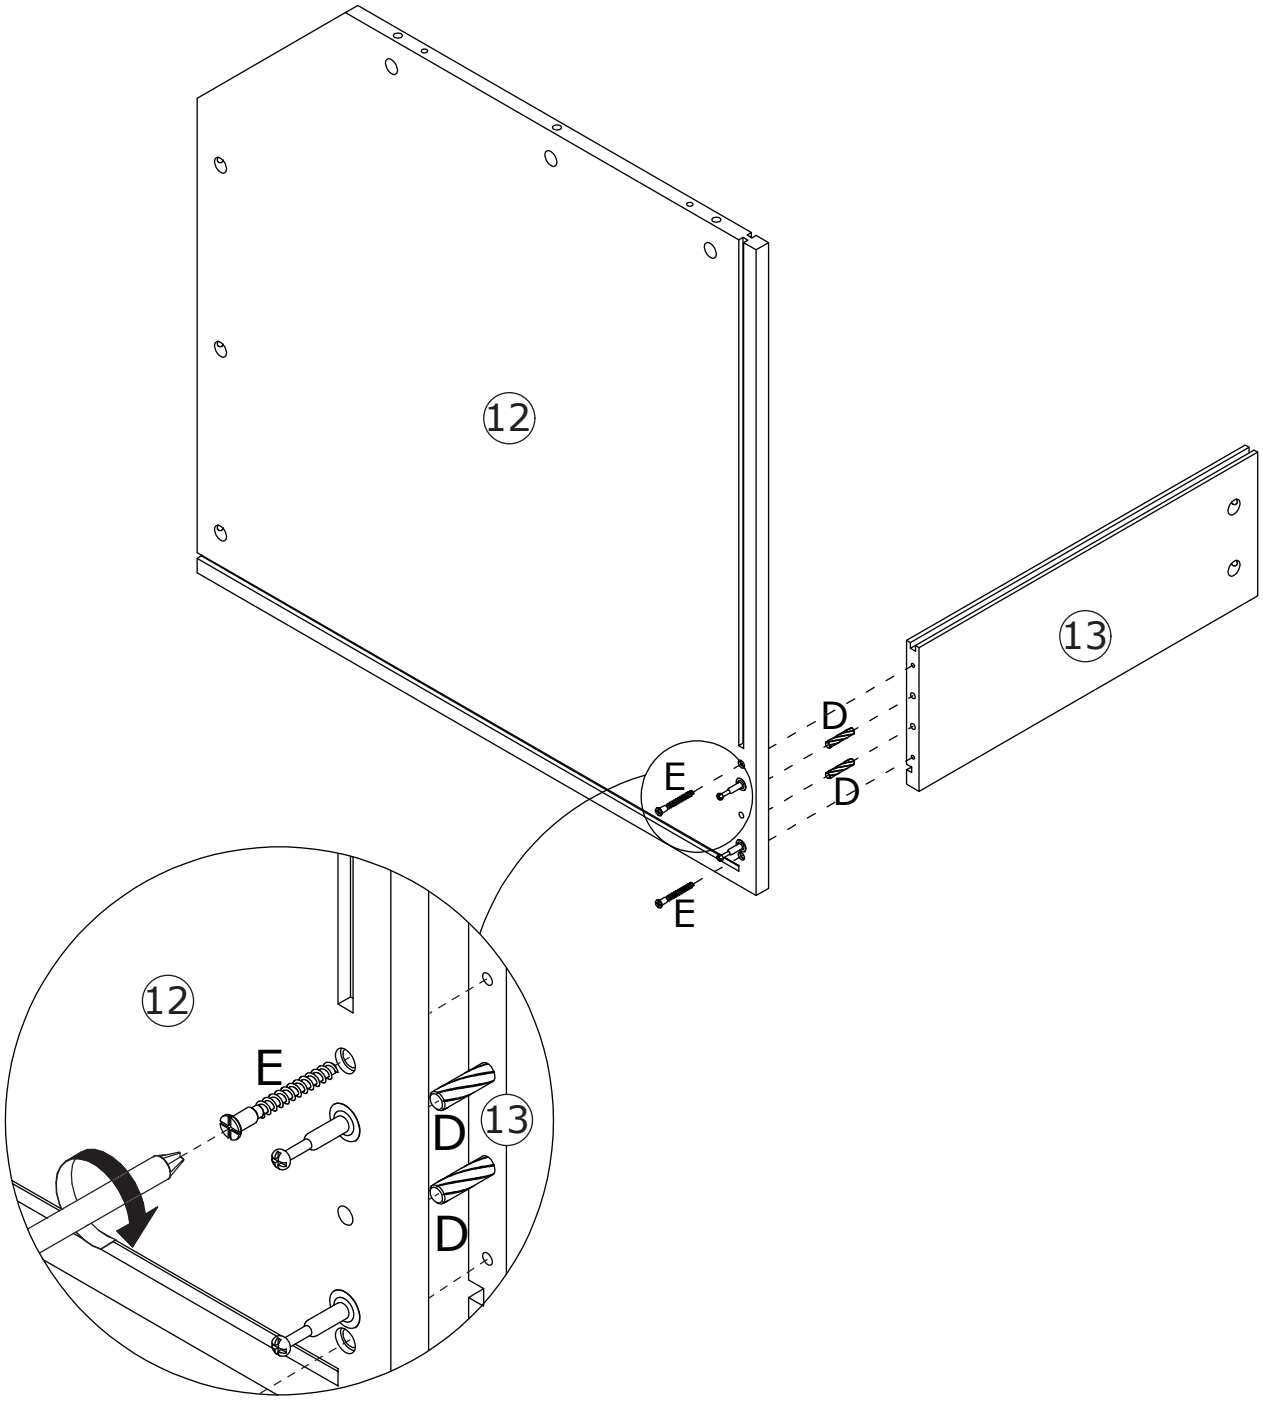


3



A x 2	D x 1	
		
∅15 x 10 mm	∅6 x 30 mm	

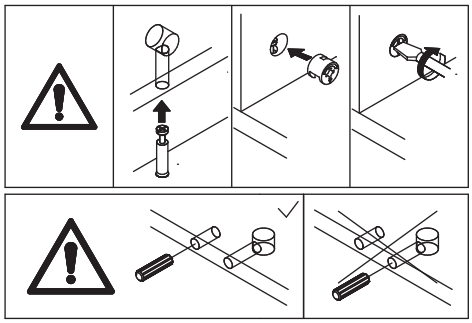


Connect panel 13 to panel 12 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

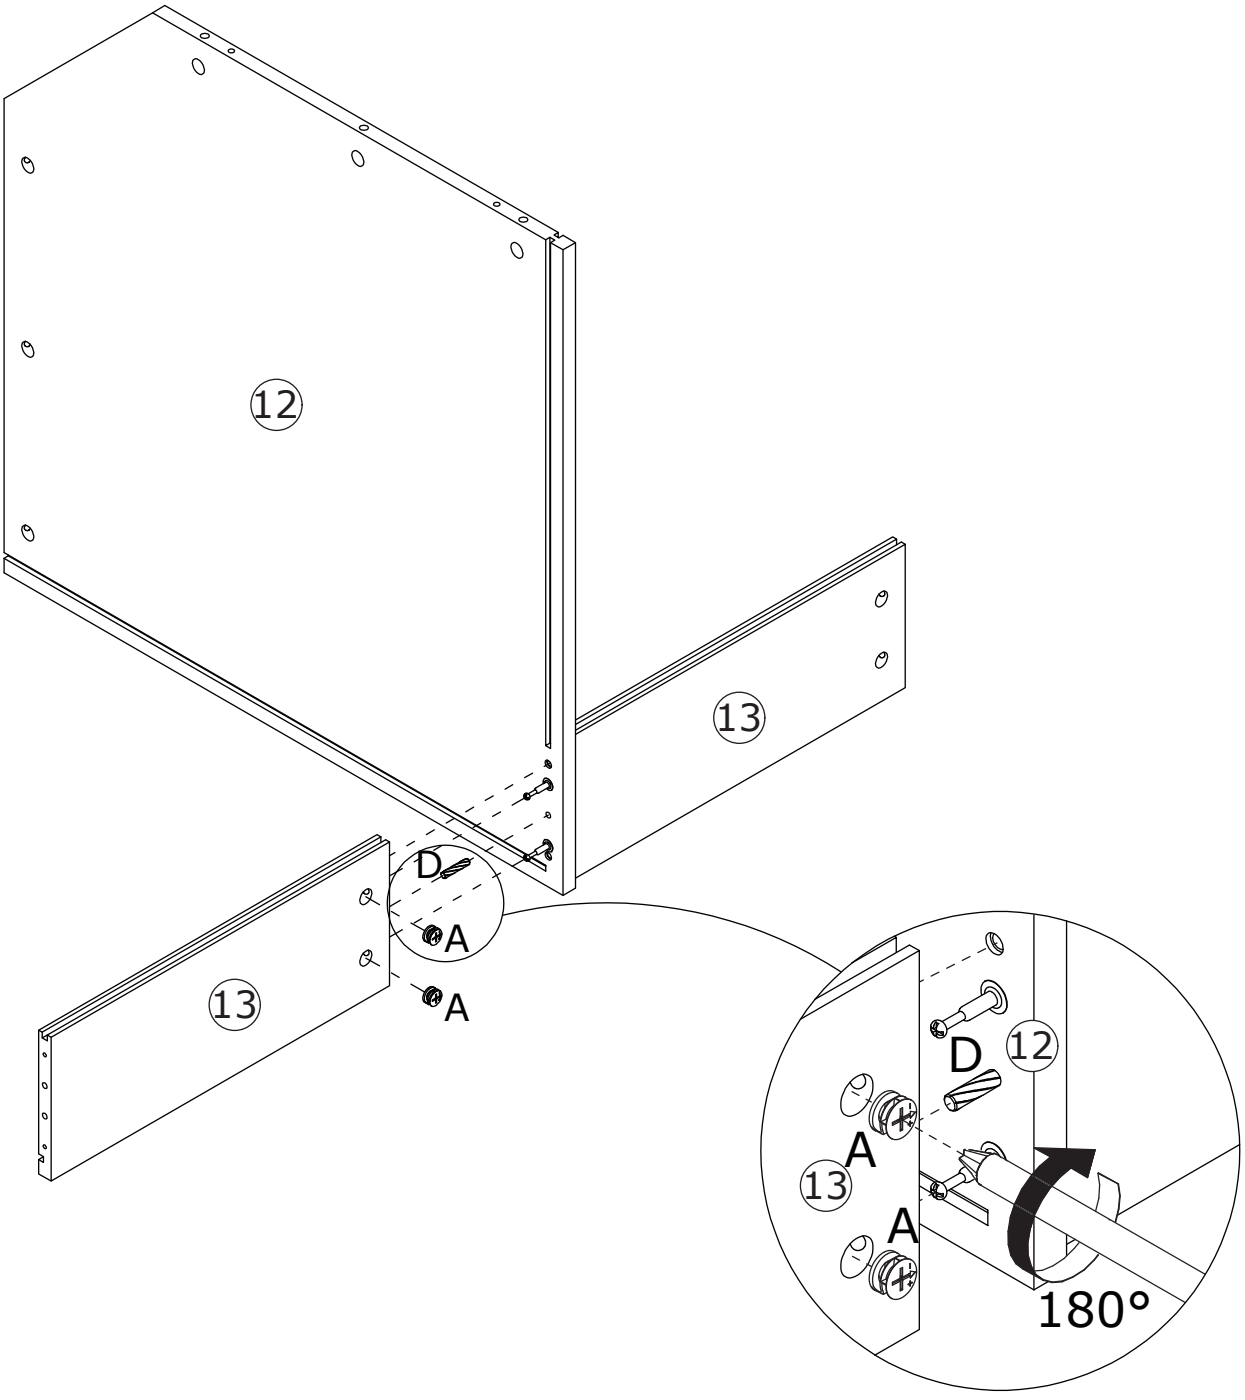


4

D x 2	E x 2	
		
∅6 x 30 mm	∅5 x 40 mm	

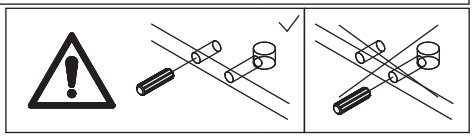


Connect panel 11 to panel 13 using wooden dowel (D), and secure them with screw (E).

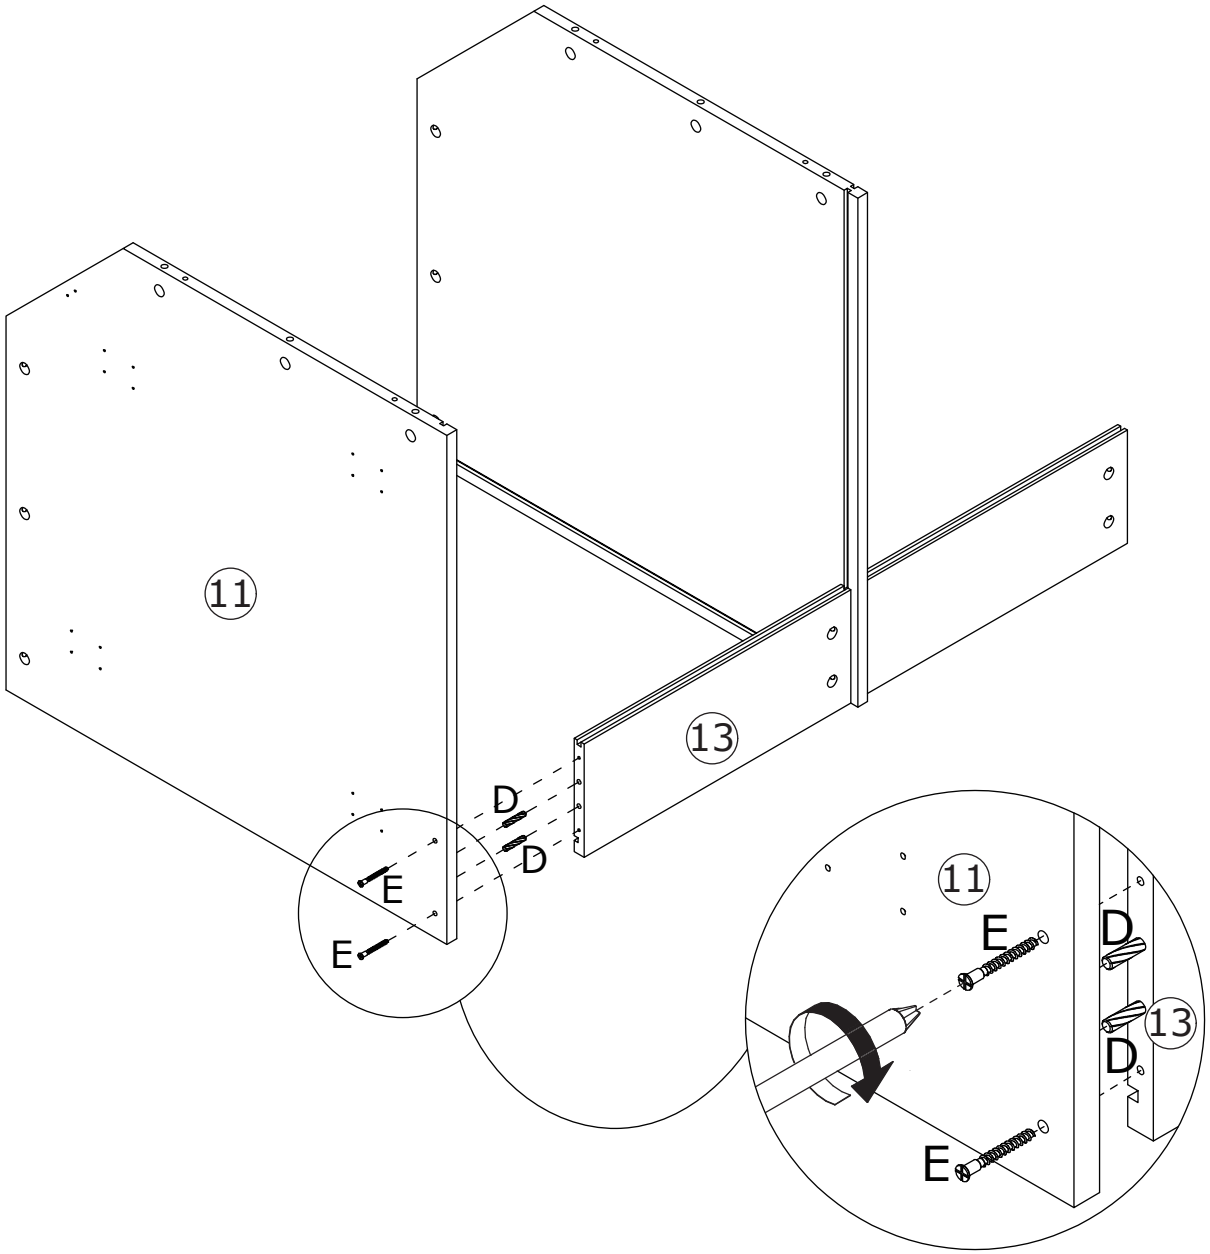


5



Insert panel 15 into the available slots, then flip the cabinet over.

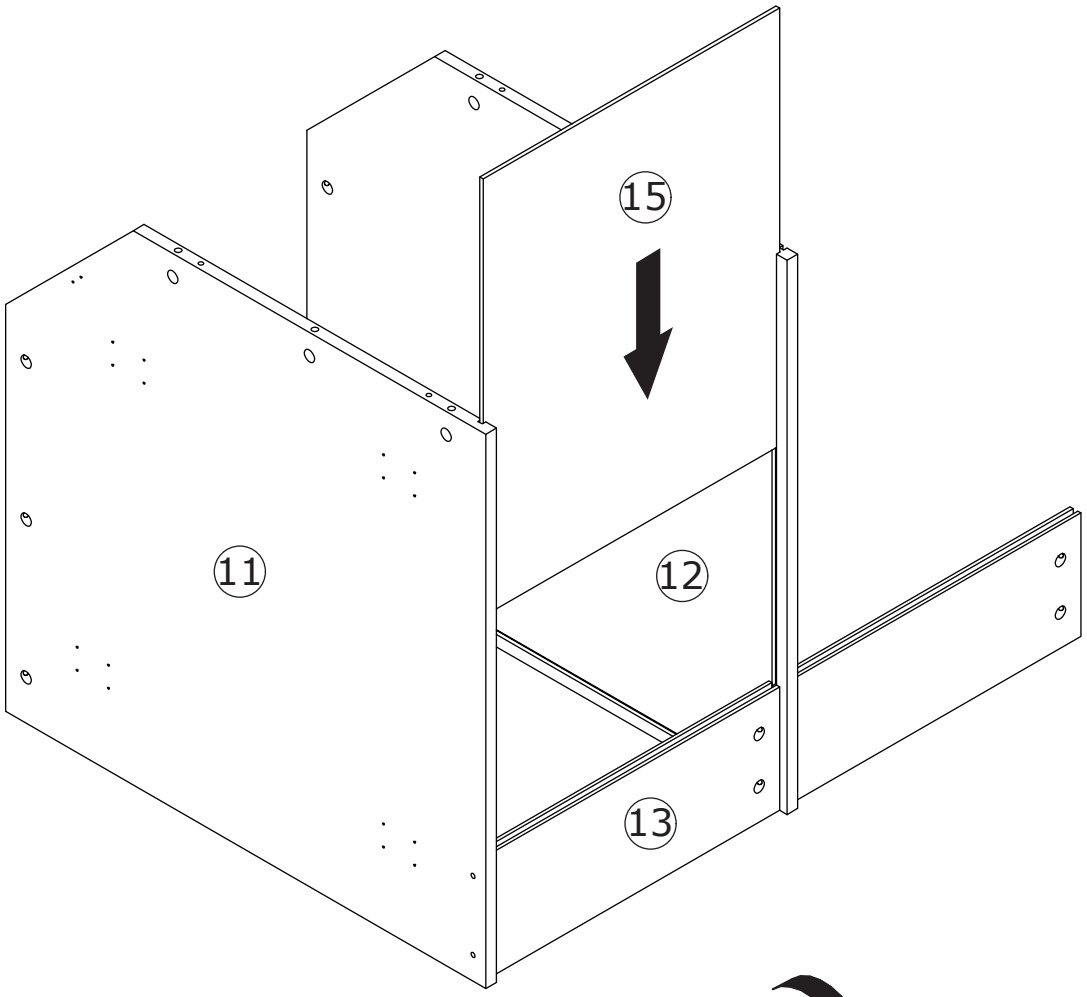


Flip 180°

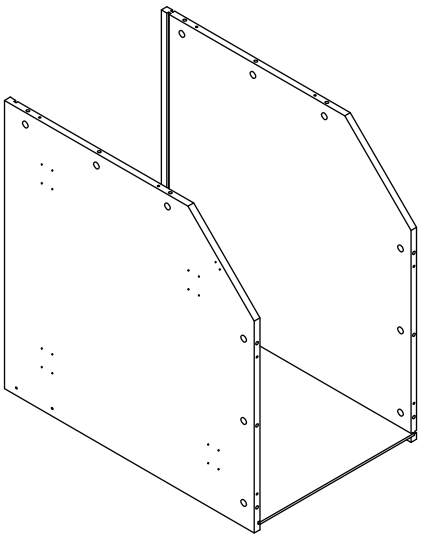


6


B x 12	C x 12	
 ∅6 x 35 mm		

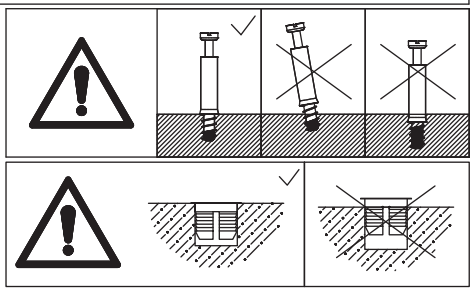


Install plug (C) onto panels 9 and 10, then screw self-tapping rod (B) into panels 9 and 10.

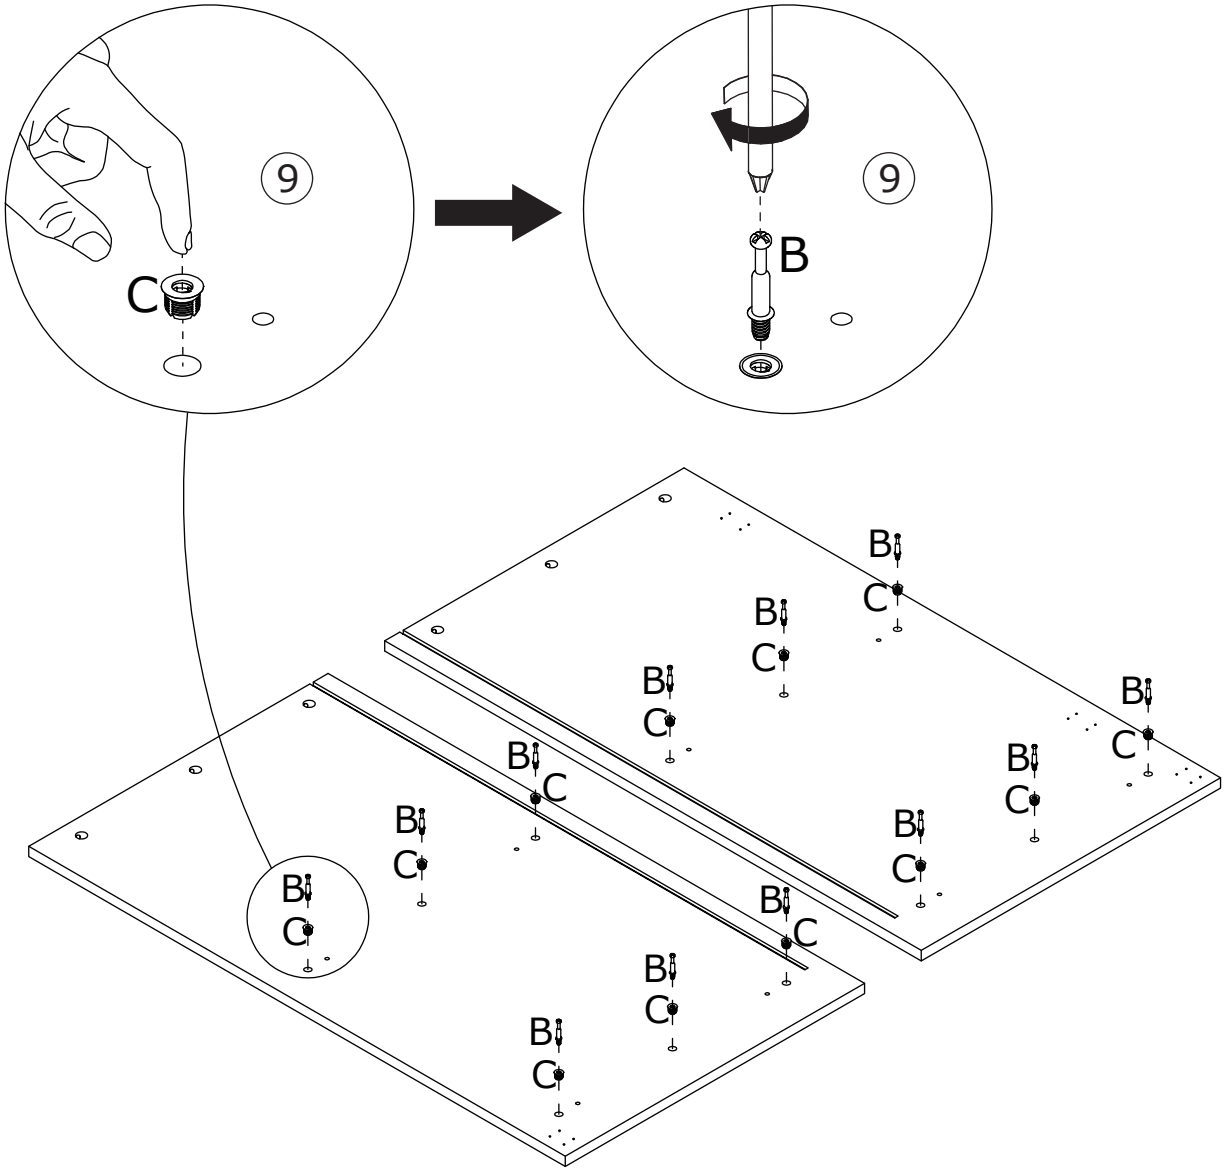


7

A x 6	D x 4	
		
∅15 x 10 mm	∅6 x 30 mm	

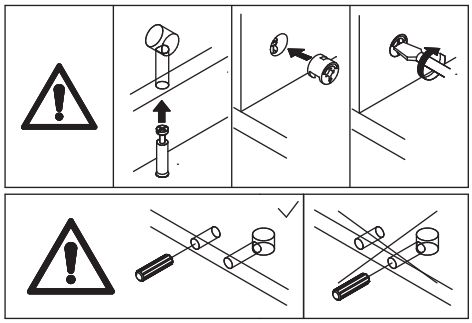


Connect panel 10 to panels 11 and 12 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

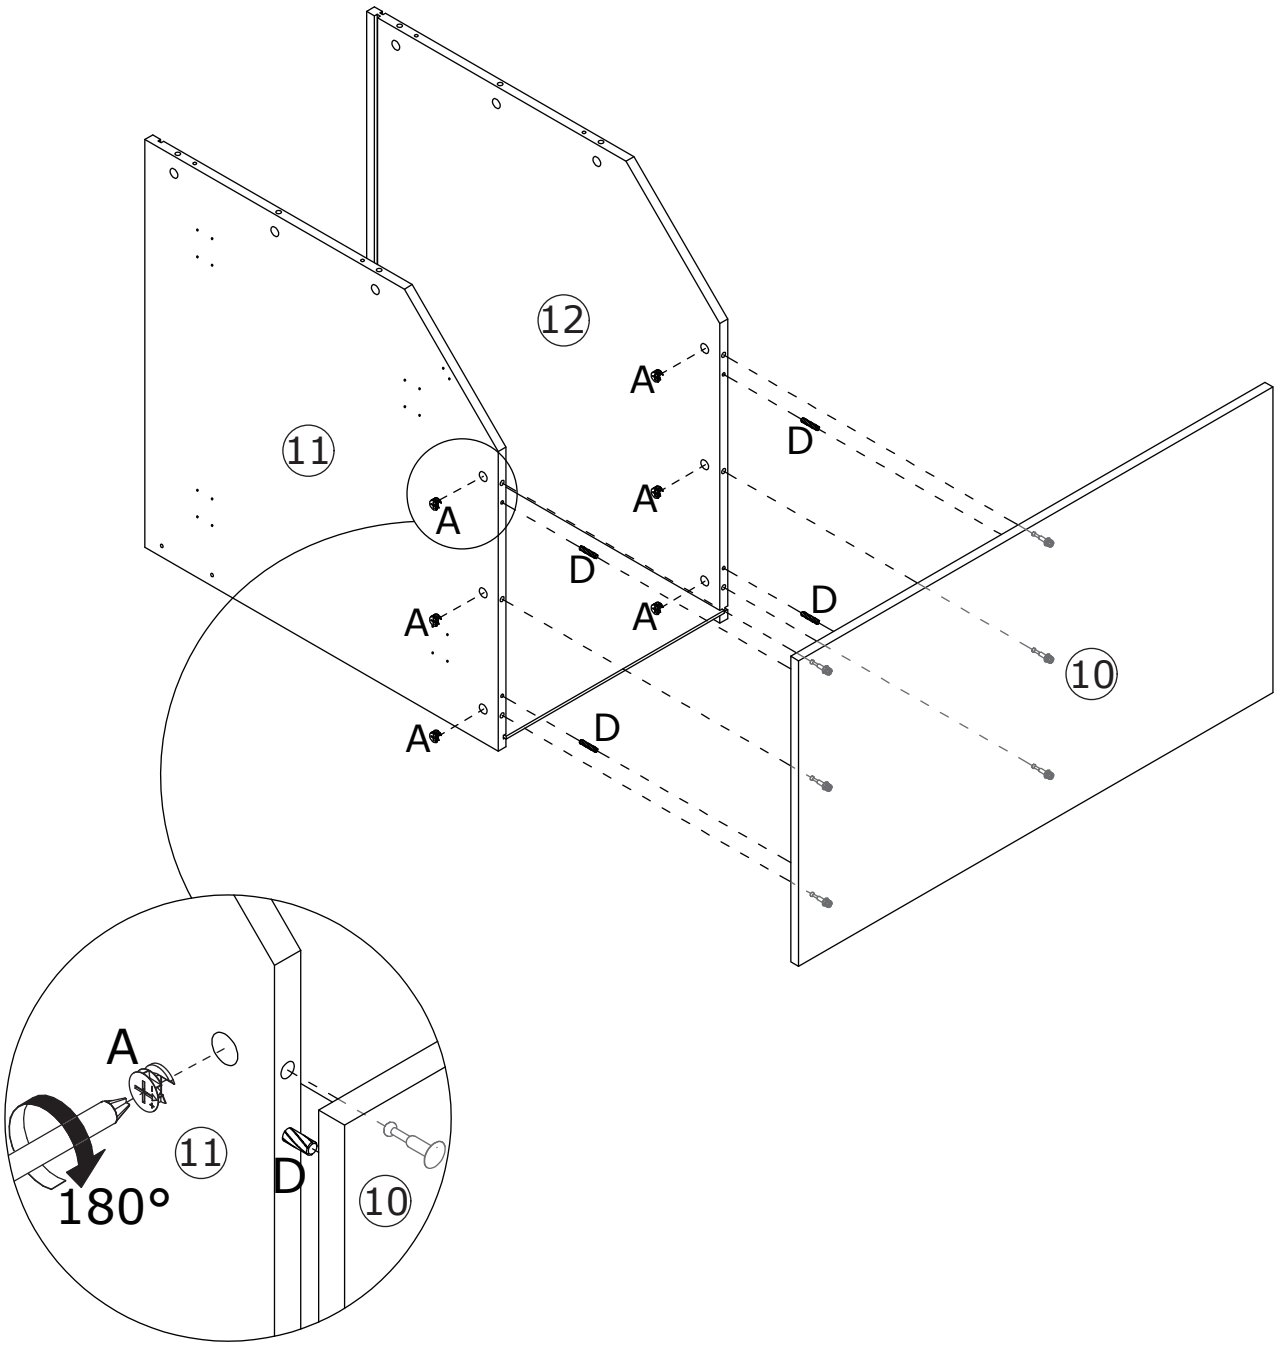

8

Insert panel 14 into the available slots.

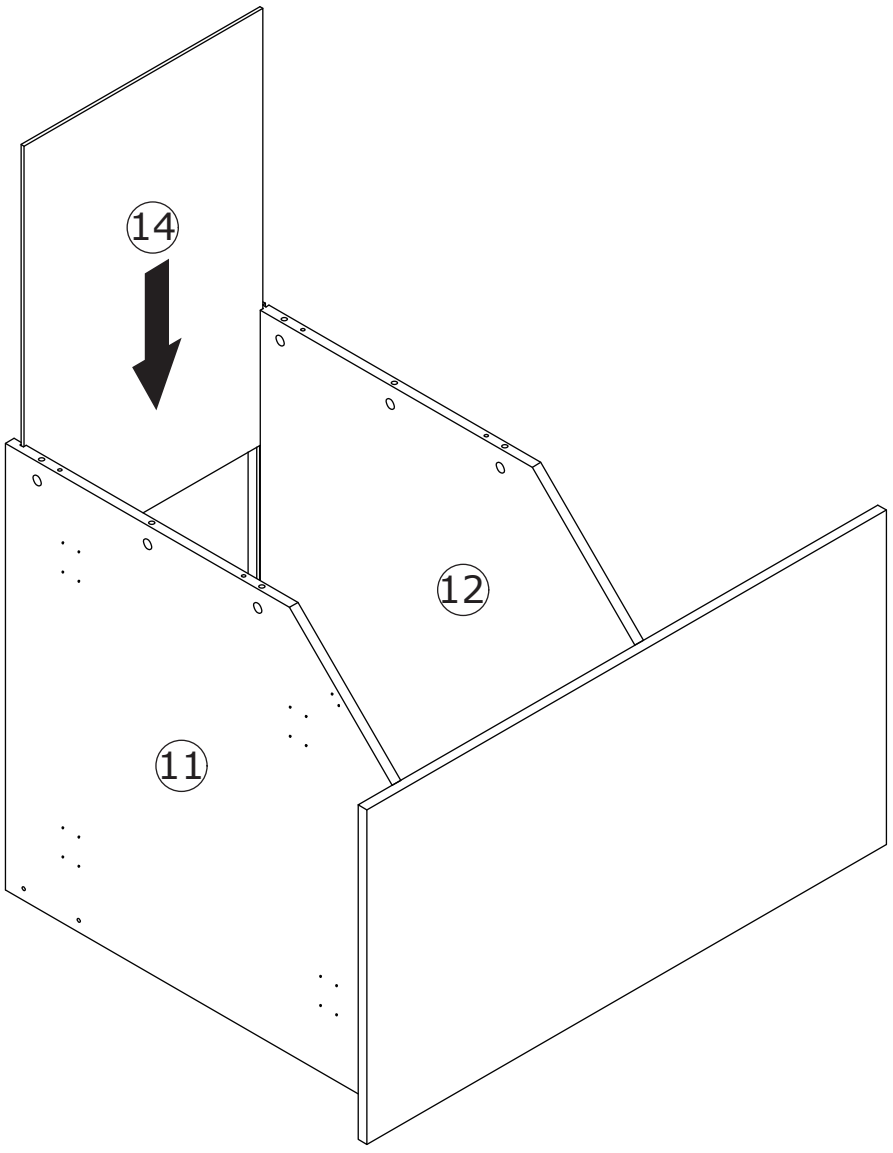


9

H x 10	U x 2	V x 1	
∅3.5 x 14 mm			

	H	Q
	∅3.5 x 14 mm	∅3 x 14 mm

Pay attention to the hole spacing on panel 16 and the installation orientation of component (V).

Secure bracket (V) and (U) to panel 16 using screw (H).

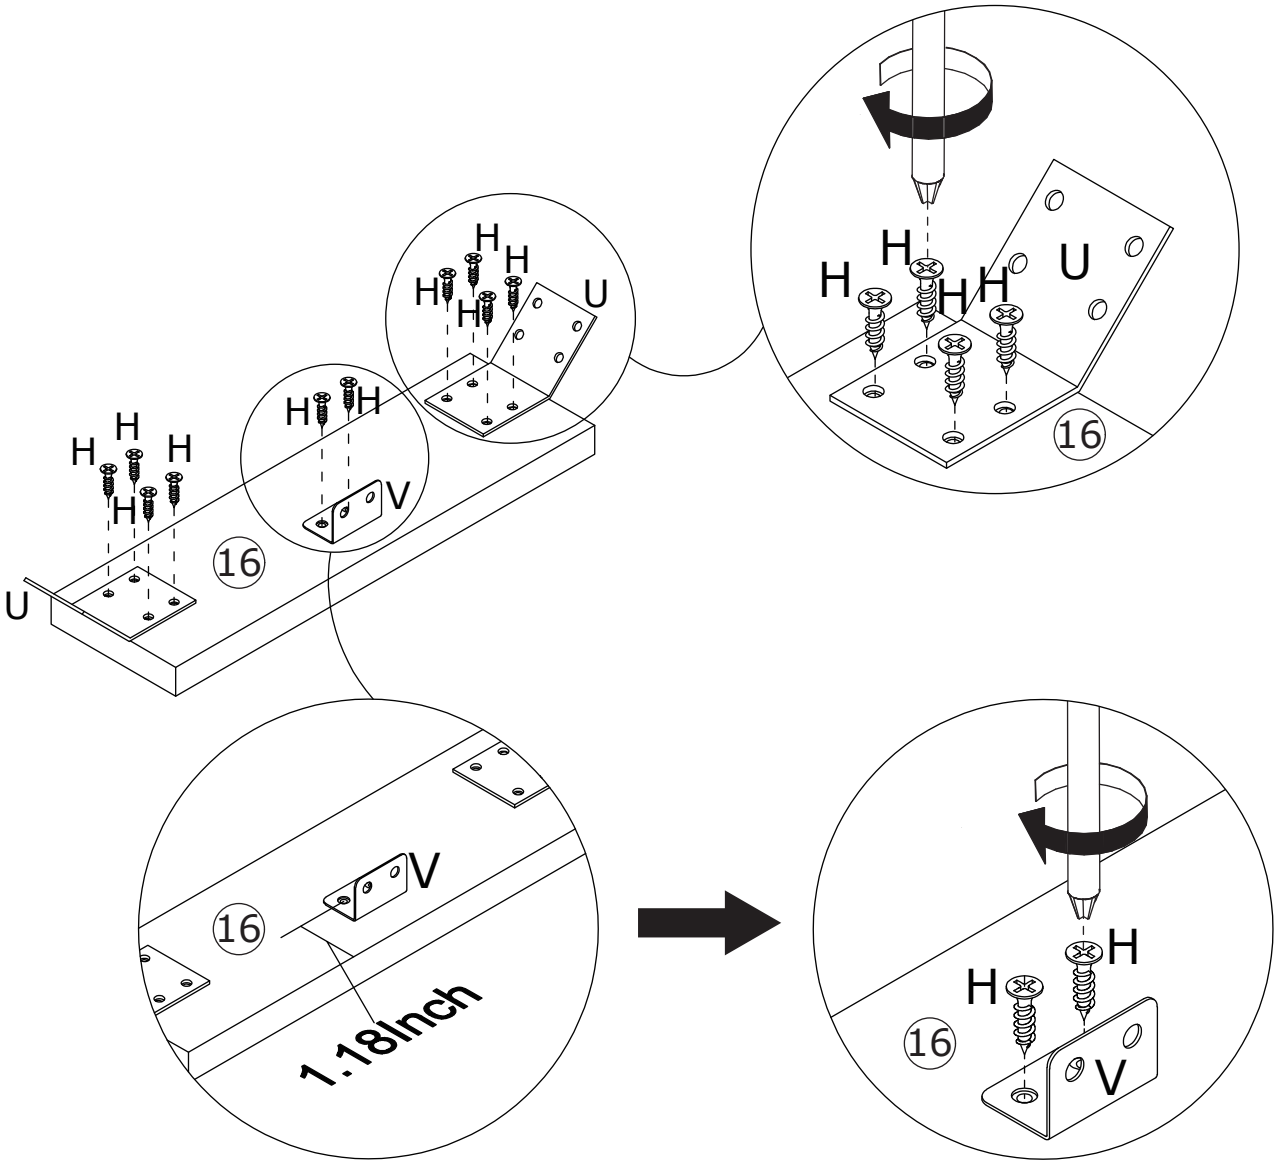


10

H x 6



∅3.5 x 14 mm






H




∅3.5 x 14 mm

Q





∅3 x 14 mm

Secure panel 16 to panels 10 and 11 using screw (H).

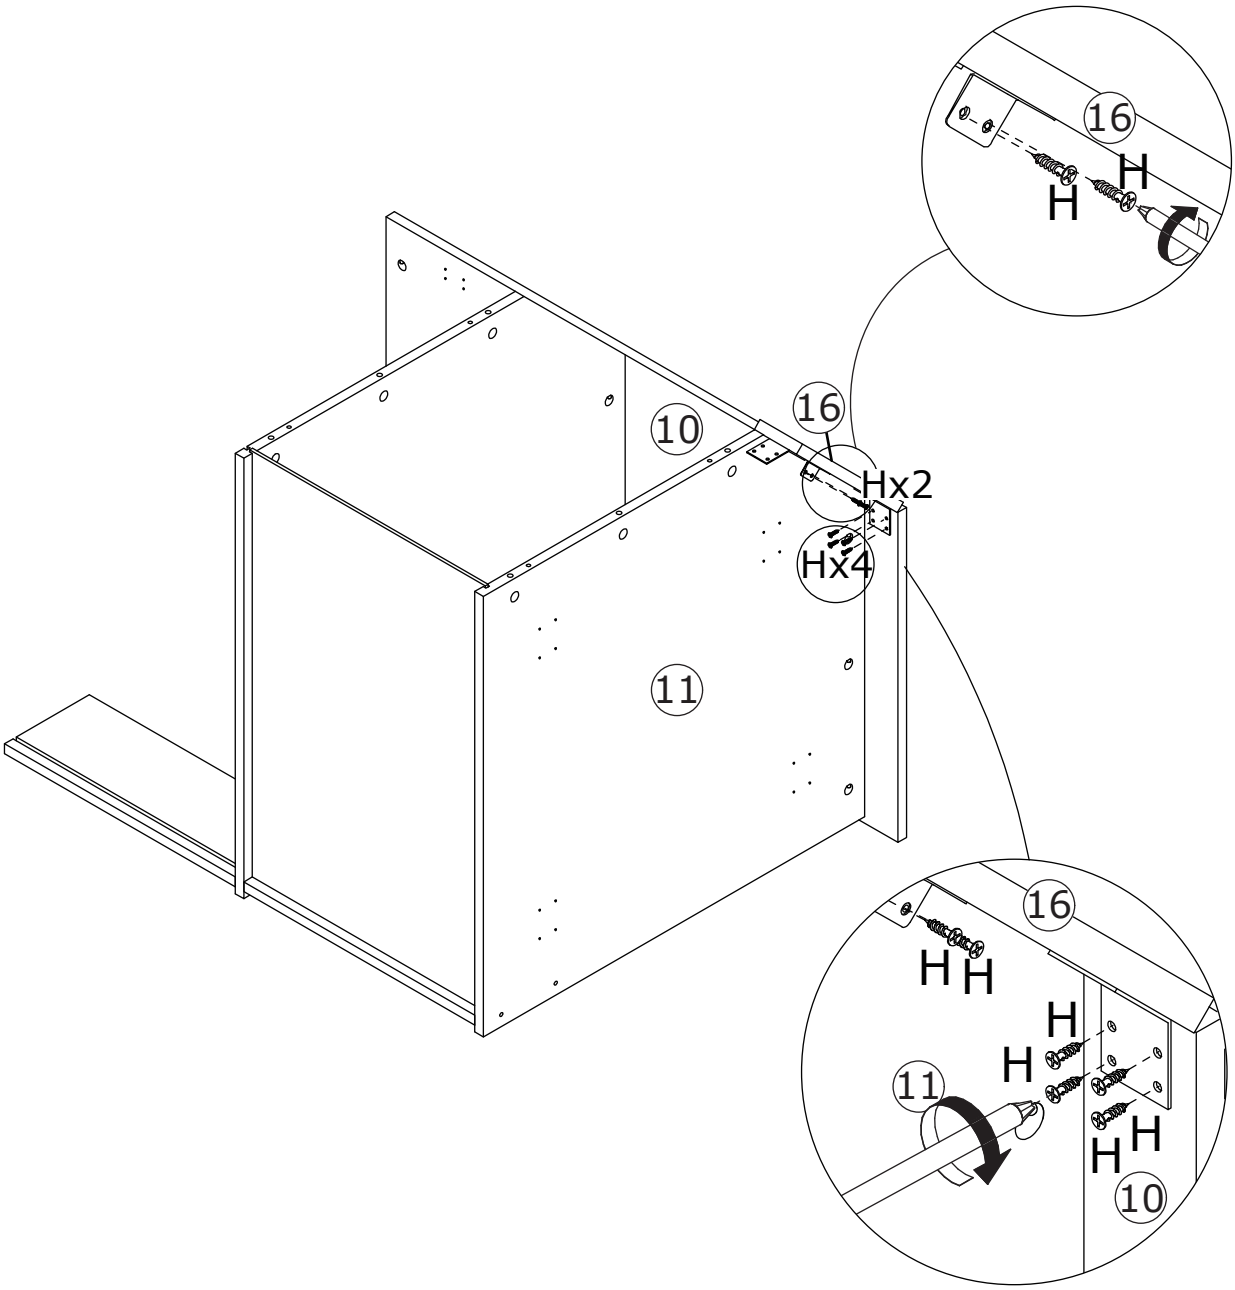


11

A x 6	D x 4	
		
∅15 x 10 mm	∅6 x 30 mm	

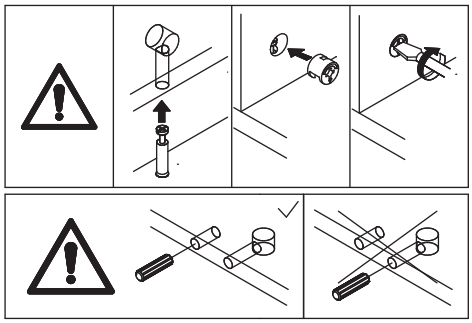

Connect panel 9 to panels 11 and 12 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

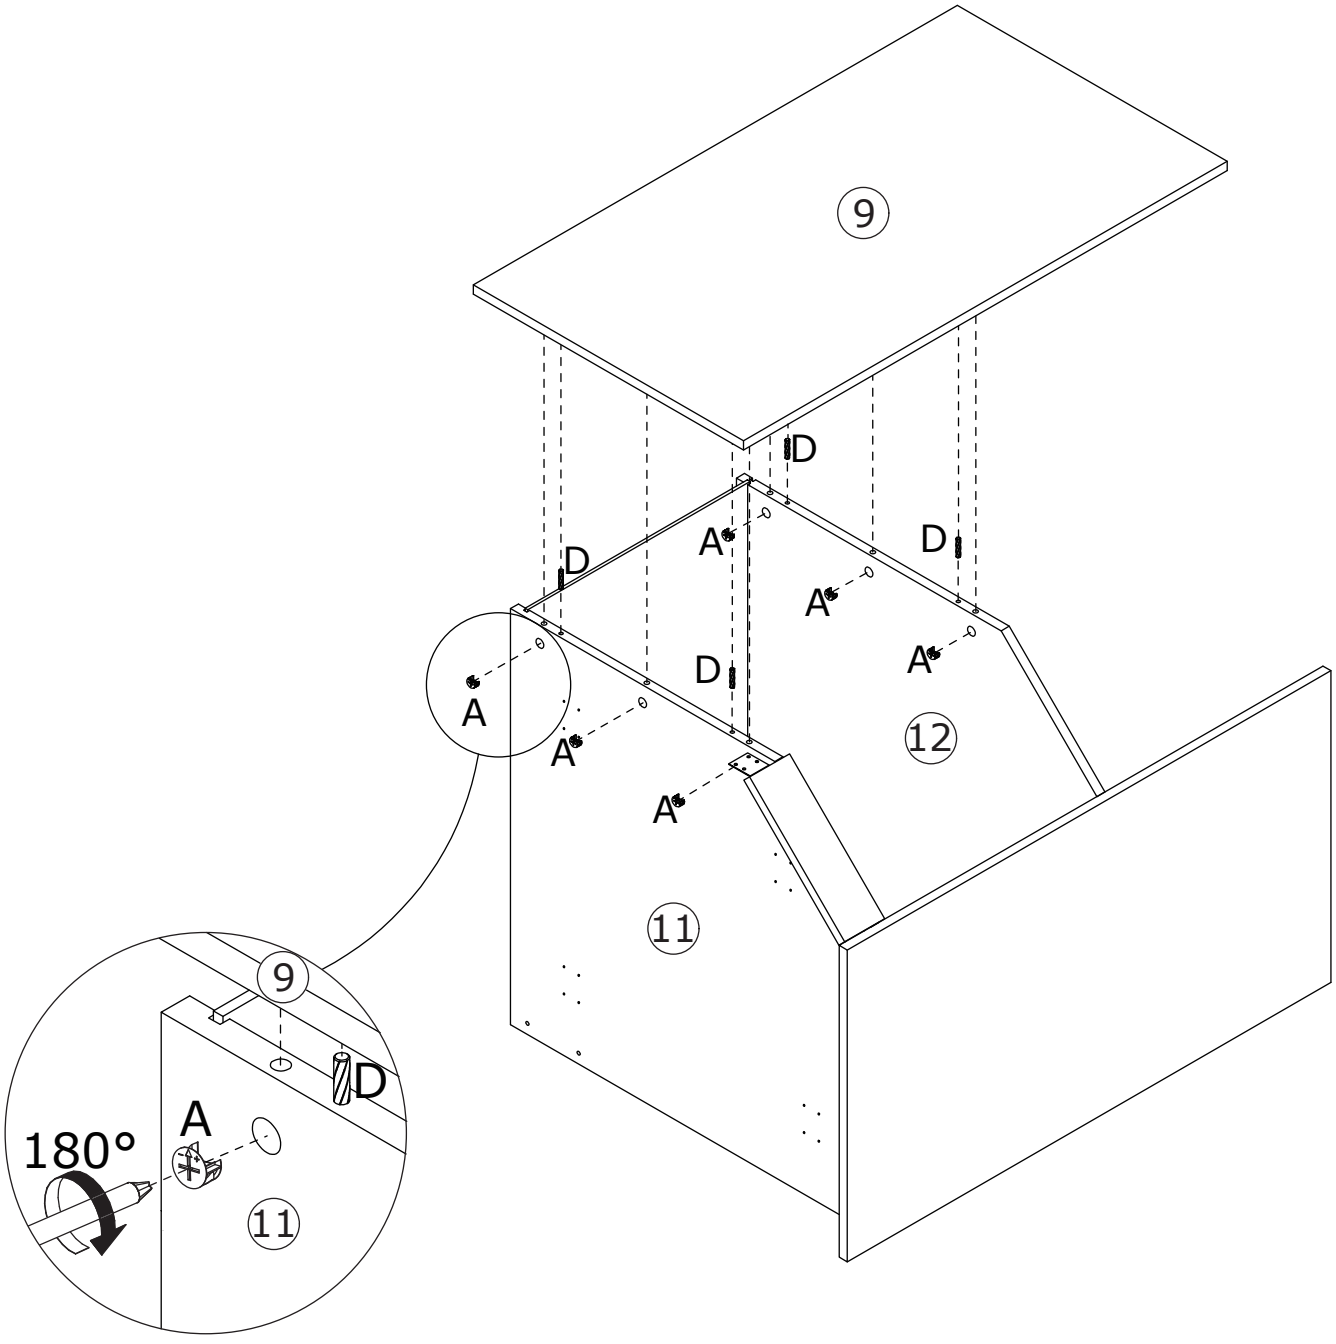


12

H x 4



∅3.5 x 14 mm






H




∅3.5 x 14 mm

Q



∅3 x 14 mm

Secure panel 16 to panel 9 using screw (H).

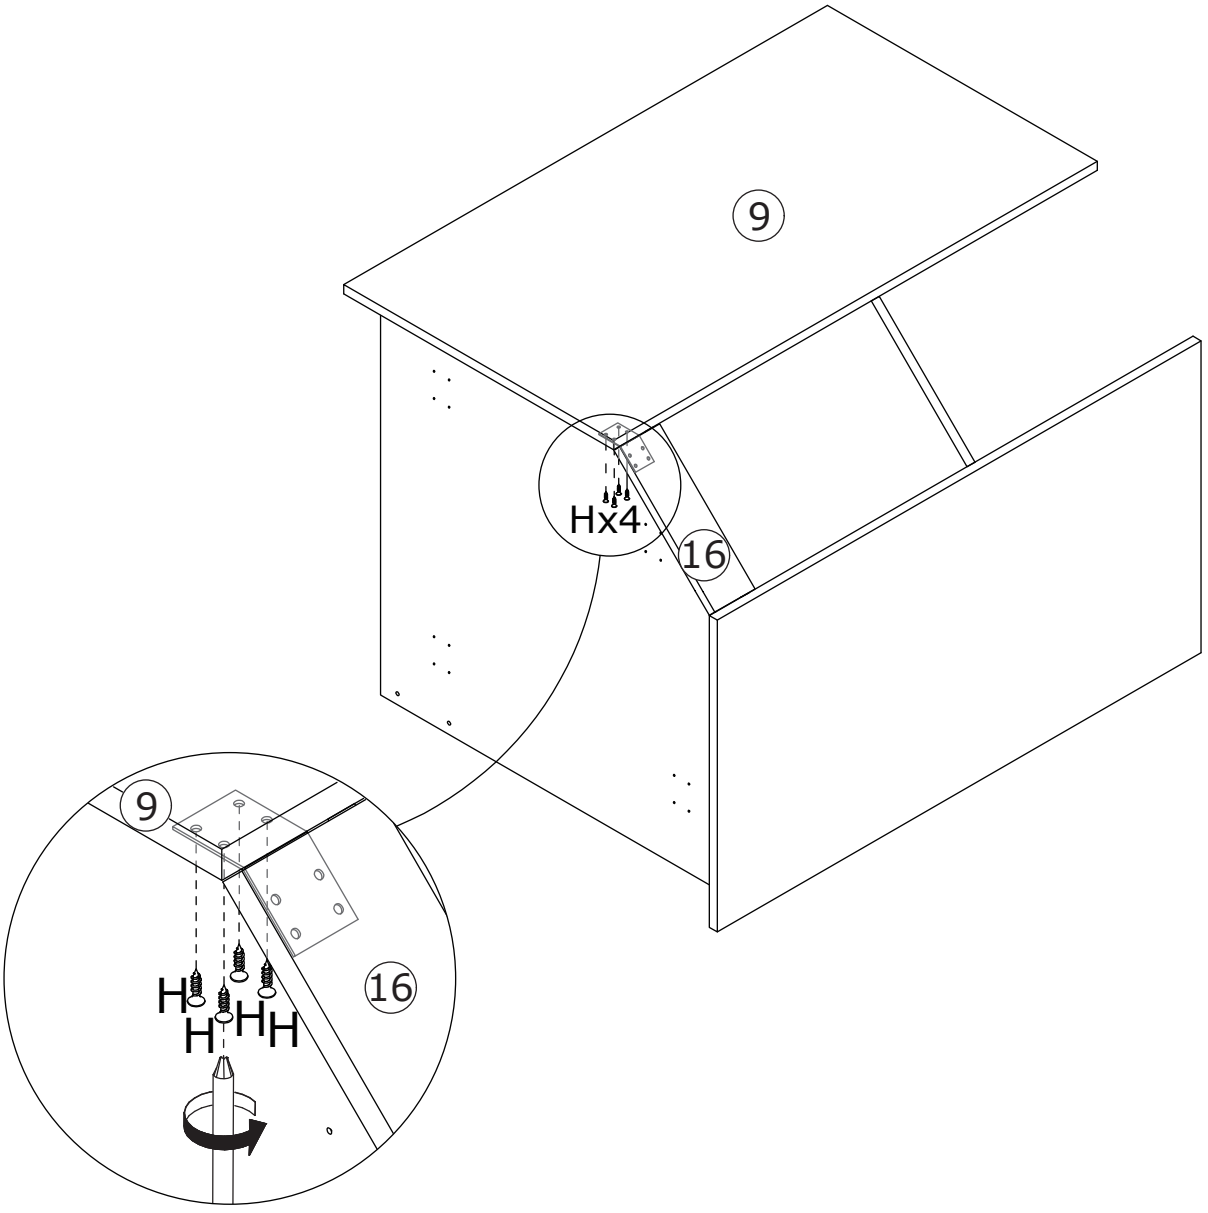


13

H x 16	N x 4	
∅3.5 x 14 mm		


	H	Q
	∅3.5 x 14 mm	∅3 x 14 mm


Secure leg (N) to panel 11 using screw (H).

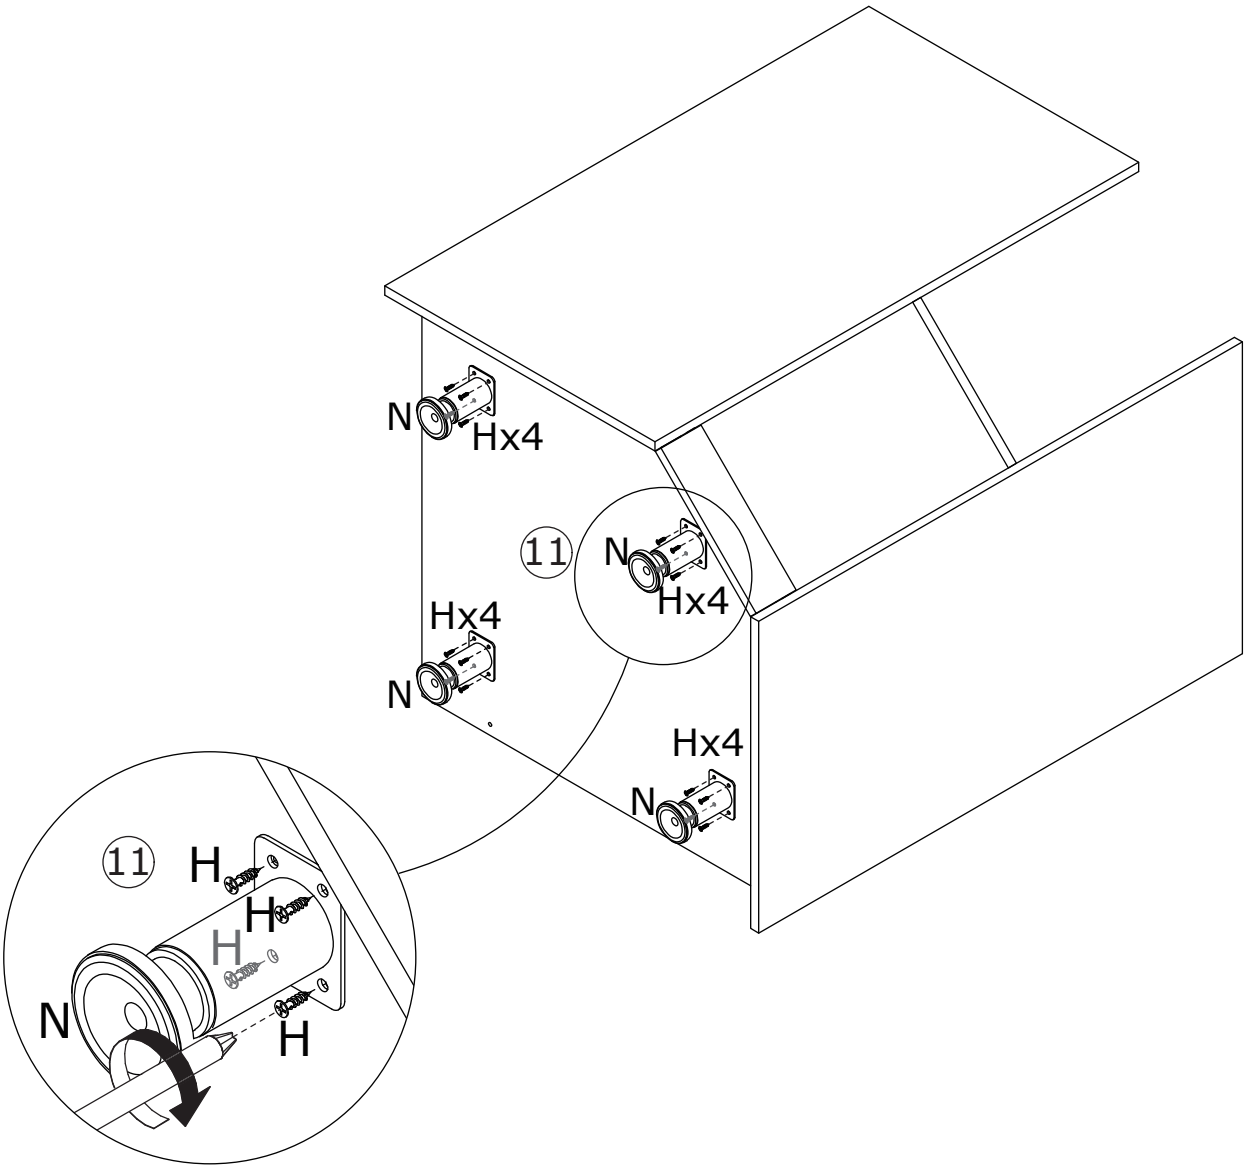

14


Upright the unit. If the cabinet is unstable, lay it back down and adjust leg (N).

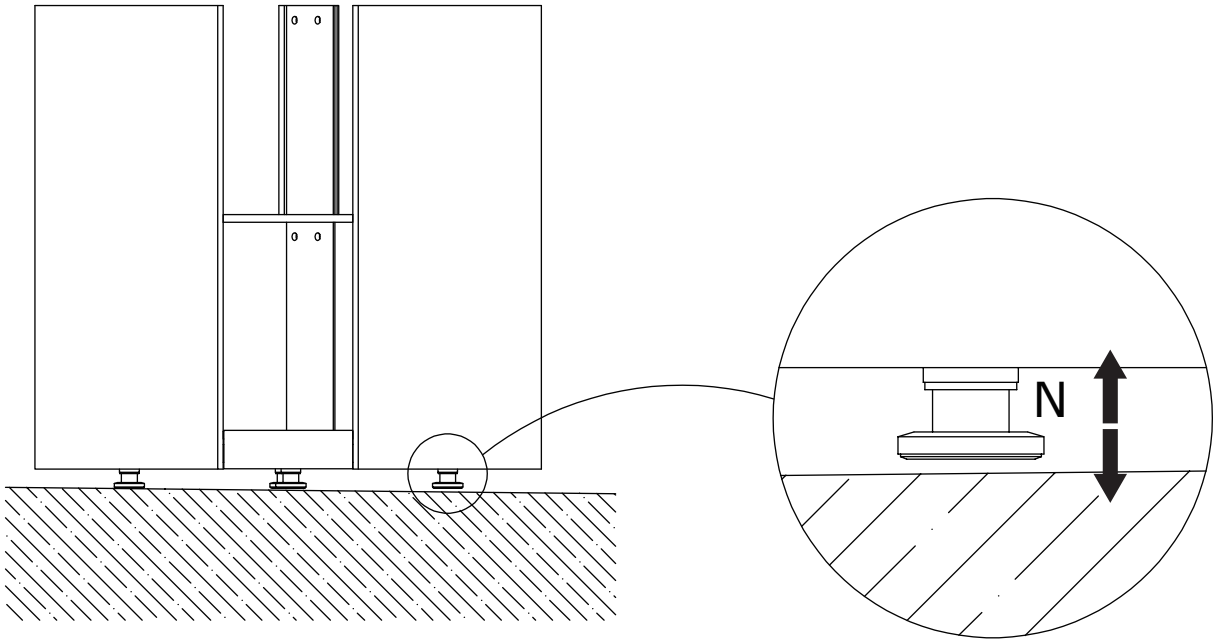


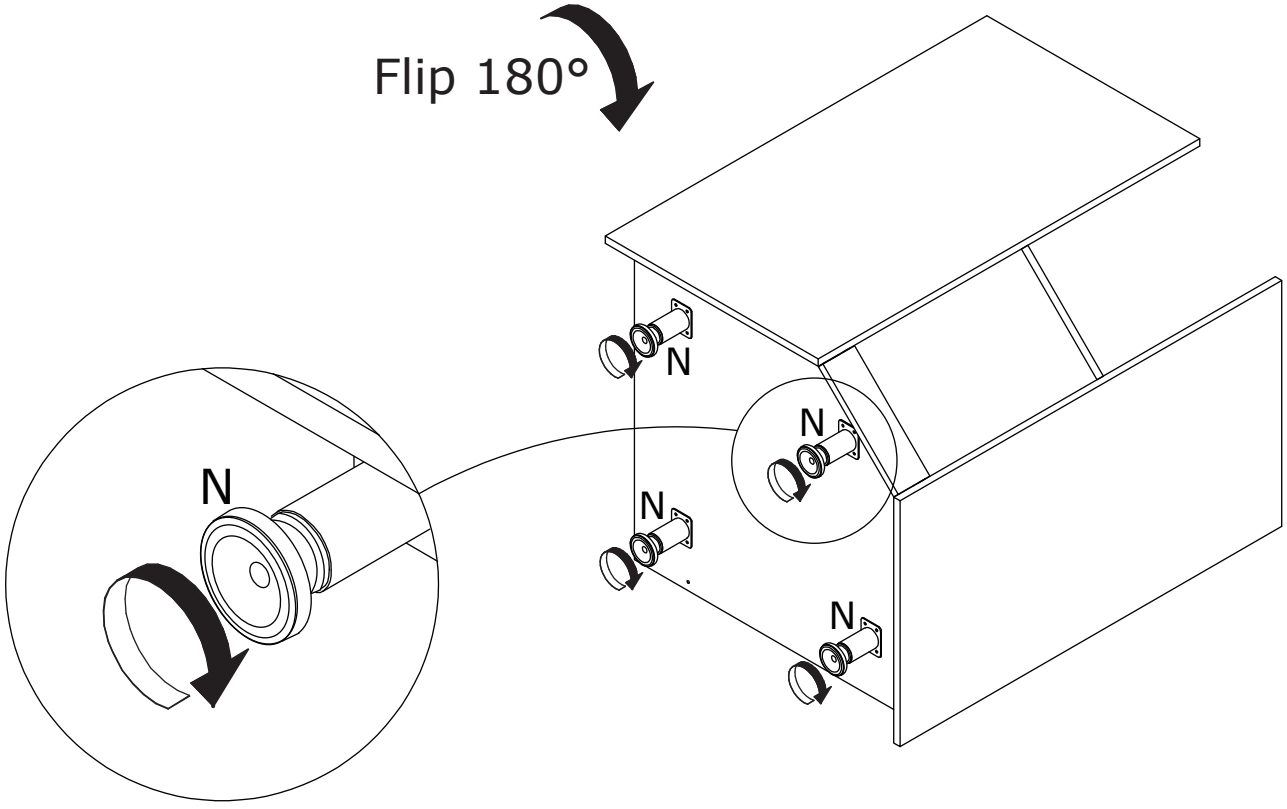



15

Insert panels 14 and 15 into the available slots.

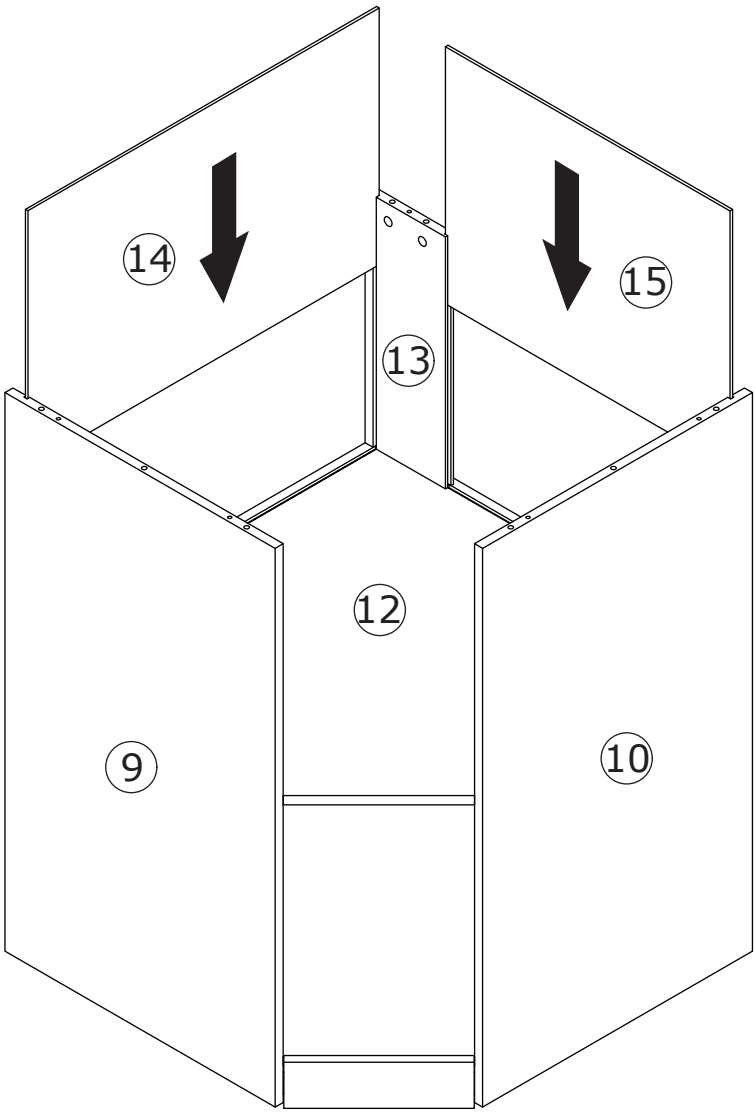


16


B x 8	C x 8	
 ∅6 x 35 mm		

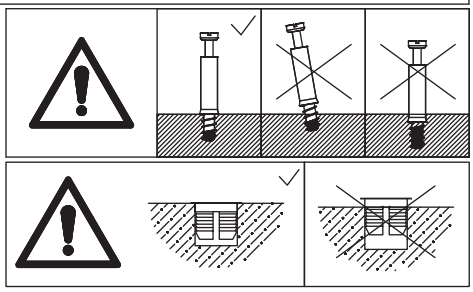


Install plug (C) onto panel 8, then screw self-tapping rod (B) into panel 8.

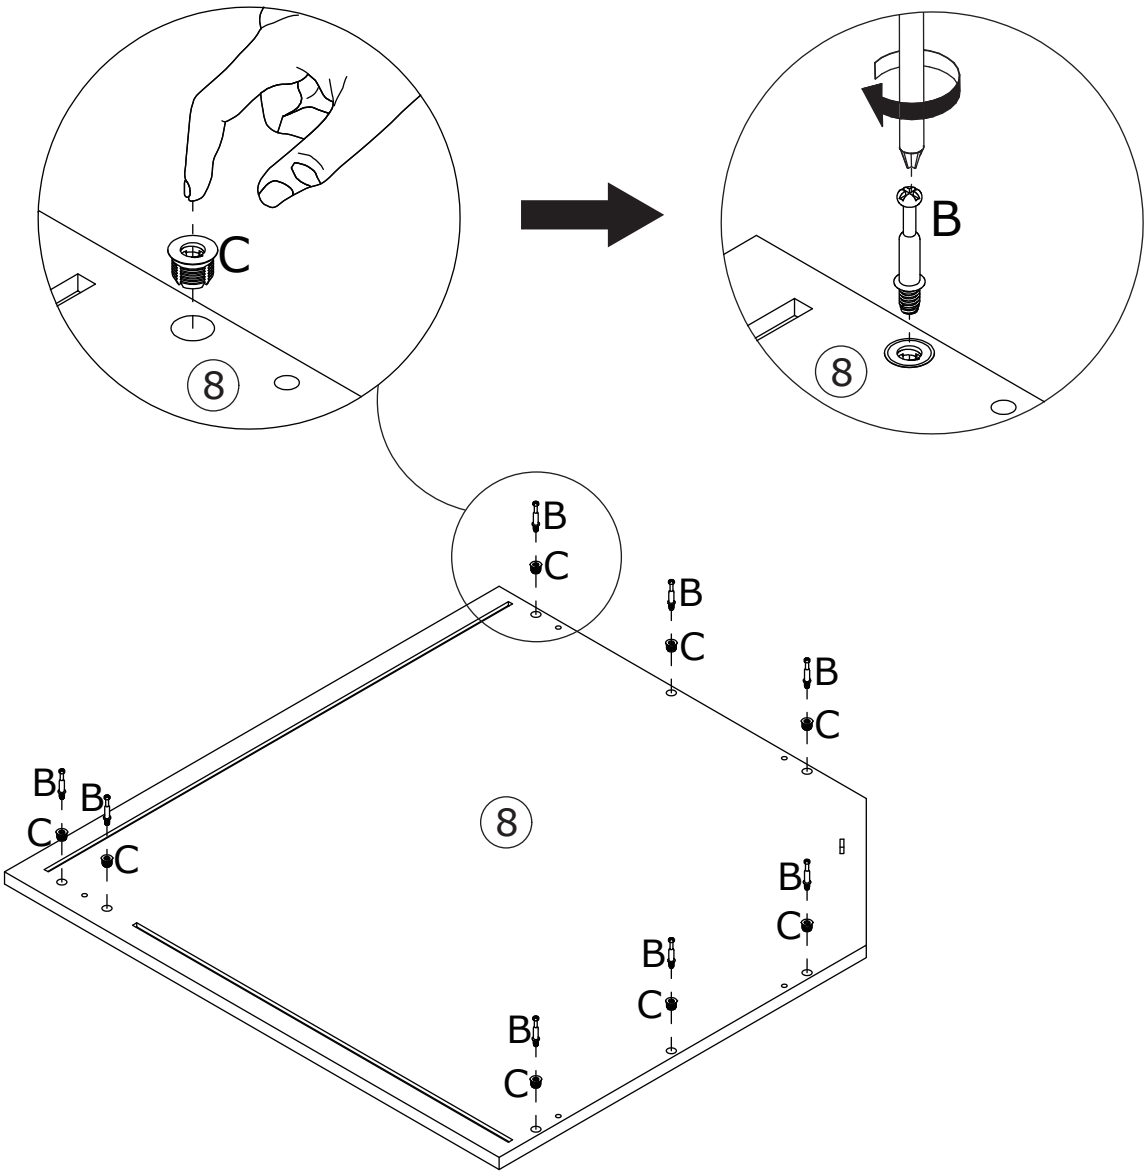


17

A x 8	D x 5	
		
∅15 x 10 mm	∅6 x 30 mm	

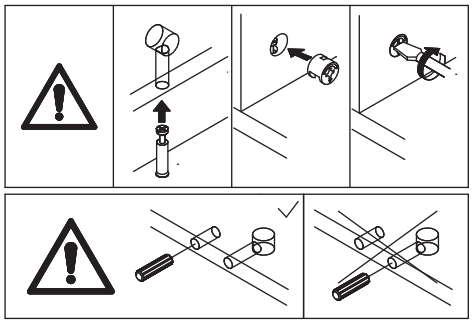


Connect panel 8 to panels 9 and 10 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

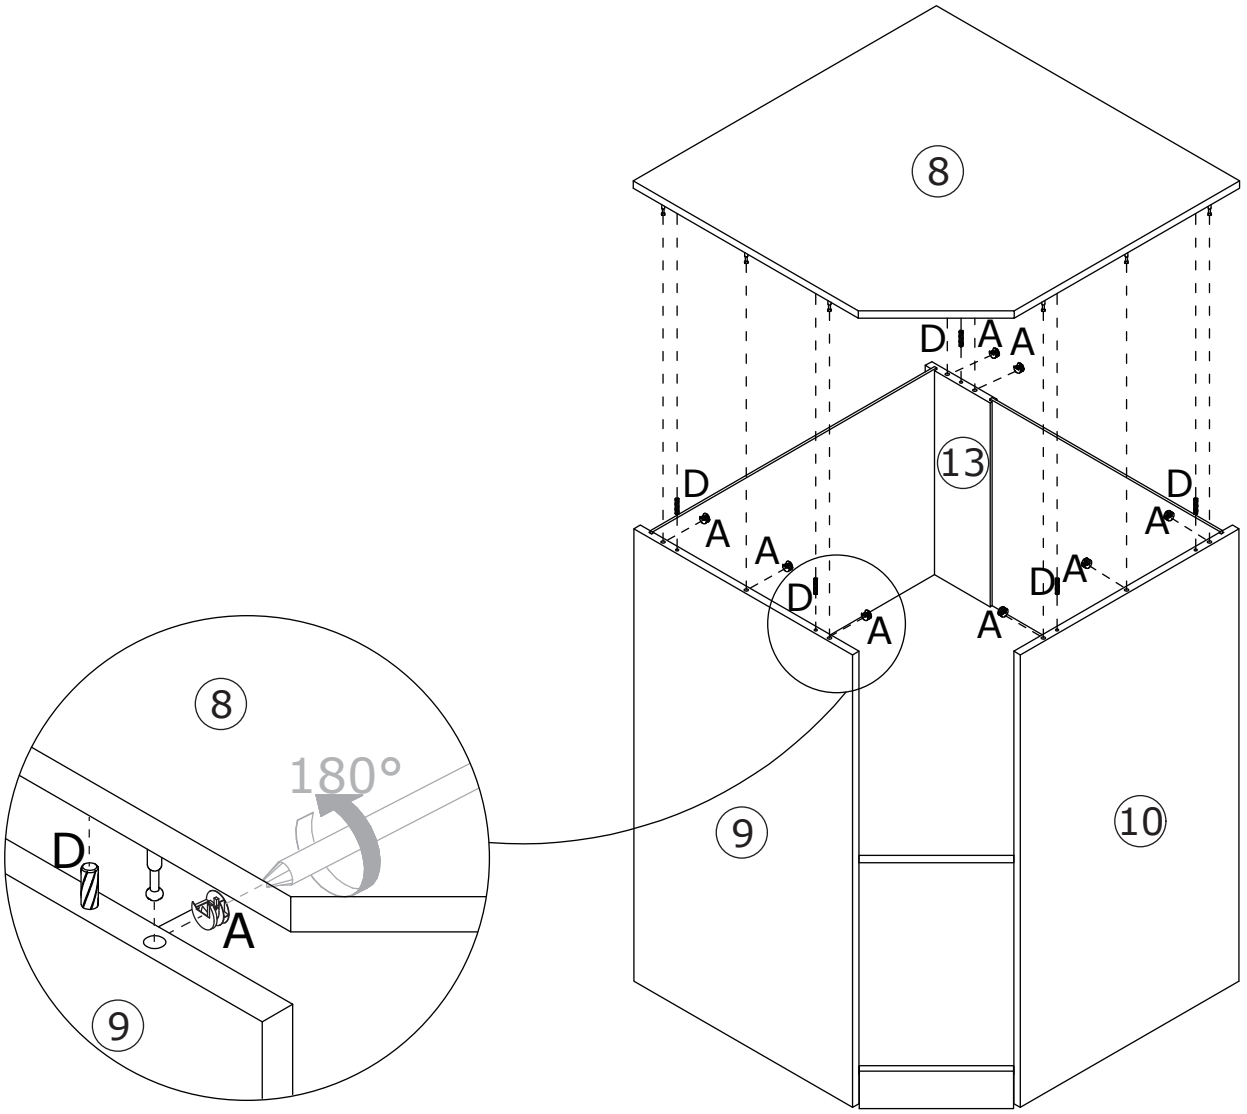


18

Pay attention to the difference between the middle parts of the two types of door hinges.

- Door hinges (F) are used for upper door panels.
- Door hinges (G) are used for lower door panels.


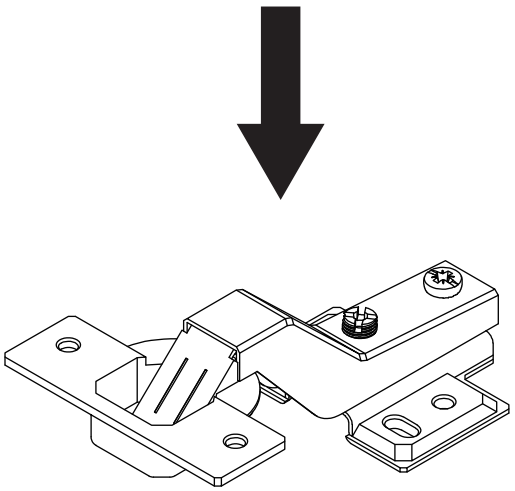



F

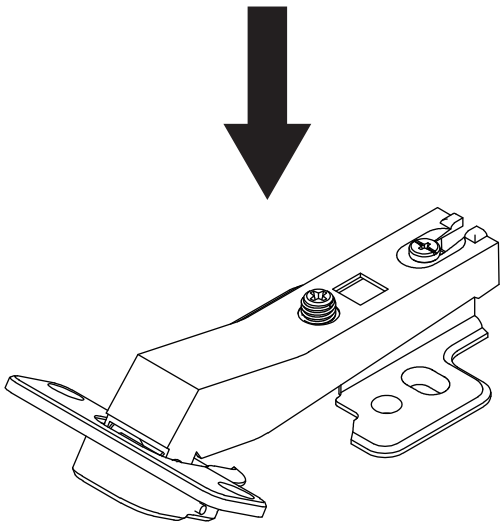


G


19

G x 2	H x 4	
	 ∅3.5 x 14 mm	

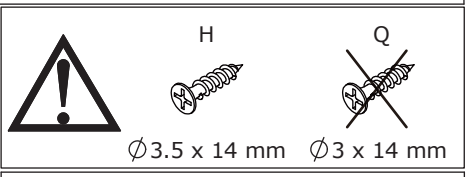

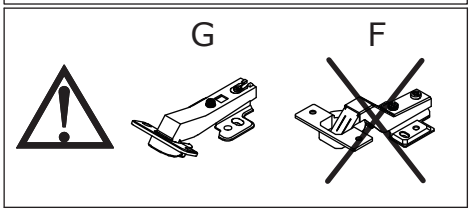

Secure hinges (G) to panel 17 using screw (H).

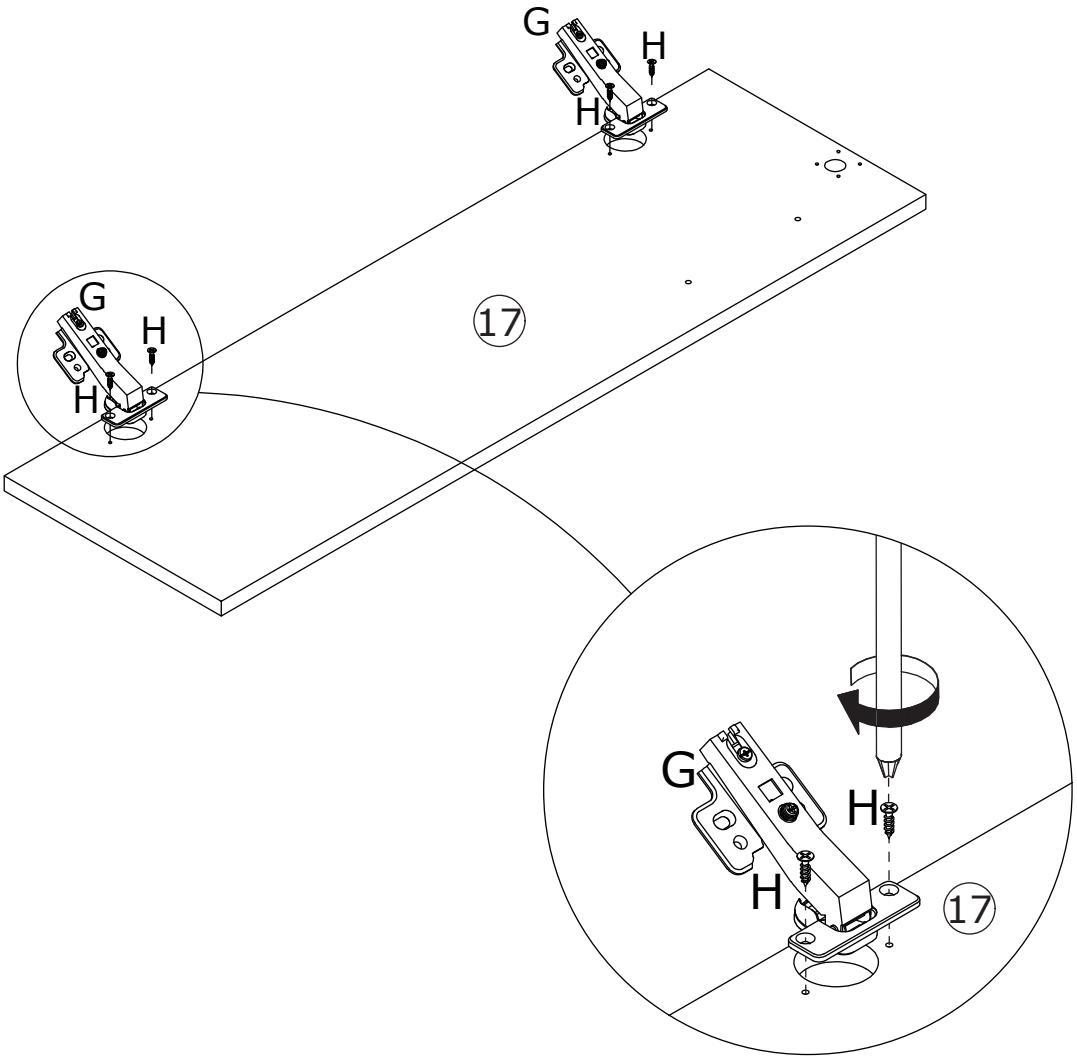


20

H x 8



∅3.5 x 14 mm






H




∅3.5 x 14 mm


Q





∅3 x 14 mm

Connect panel 17 to panel 10 using screw (H).

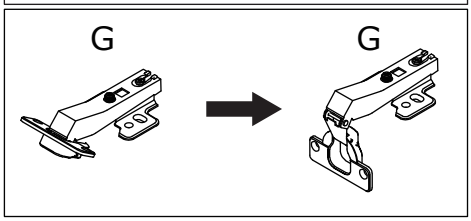


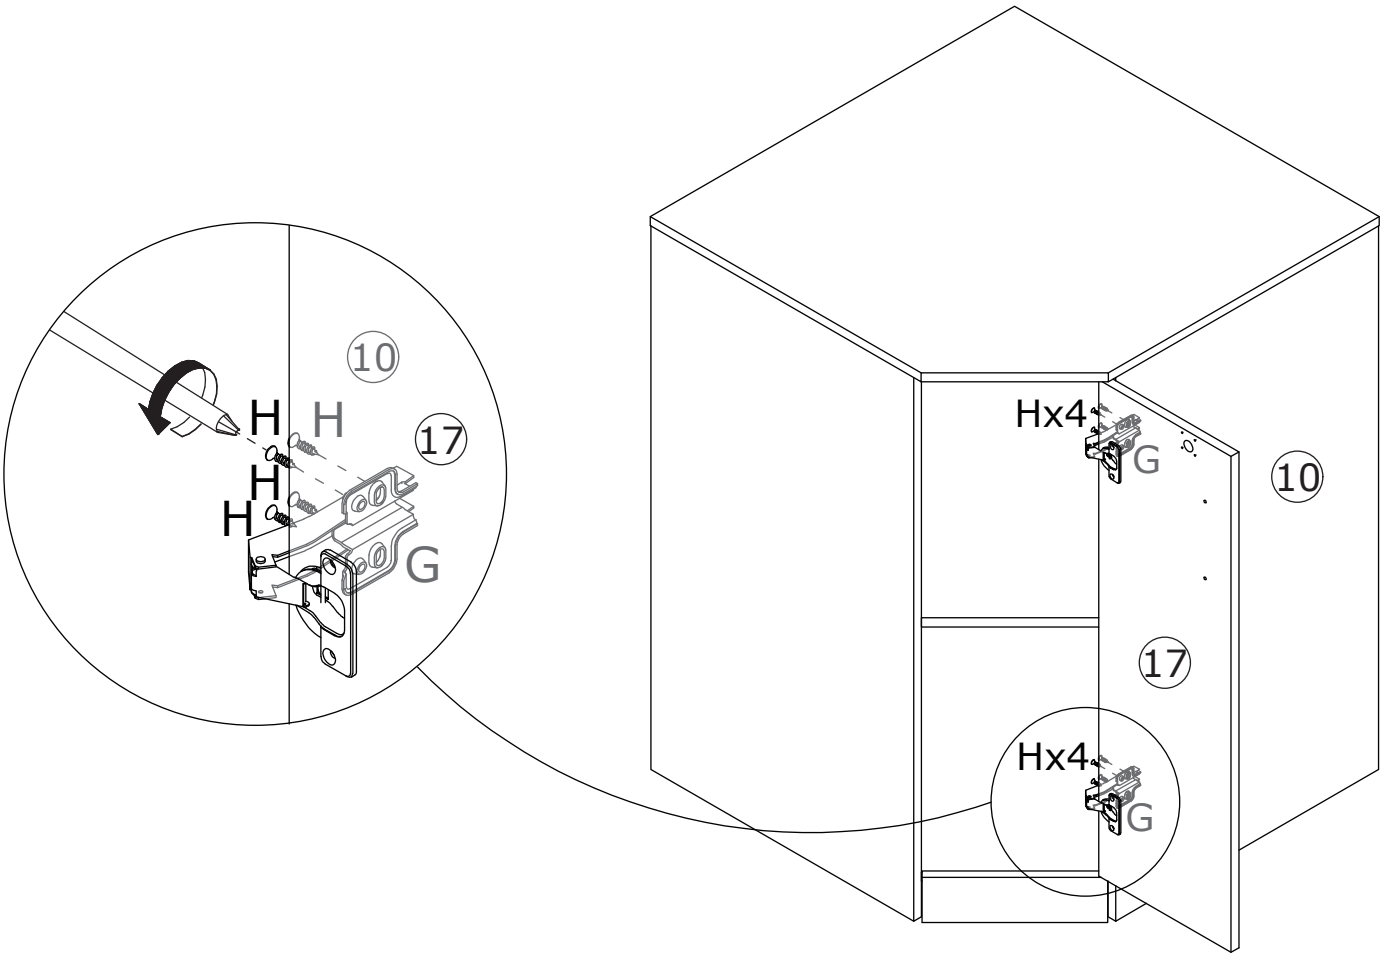



21


J x 1	K x 2	
	 ∅4 x 18 mm	

Secure handle (J) to panel 17 using screw (K).

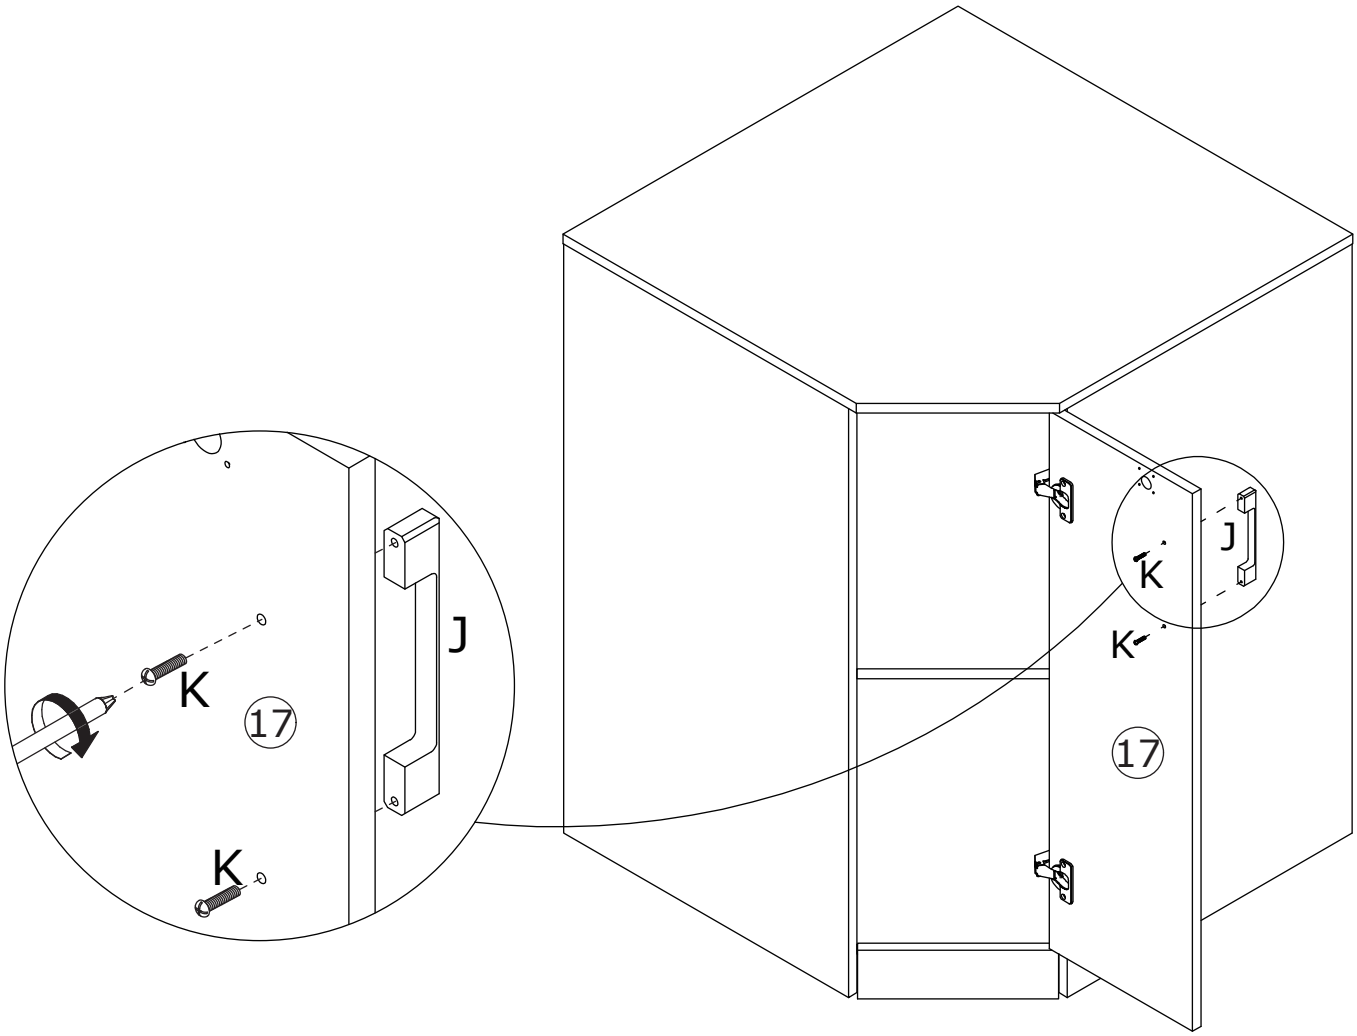


22

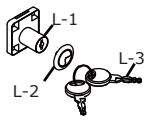

L x 1	M x 4	
	 ∅3.5 x 20 mm	

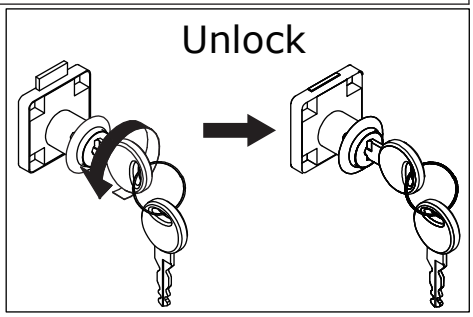

Secure parts (L-1) and (L-2) to panel 17 using screw (M).

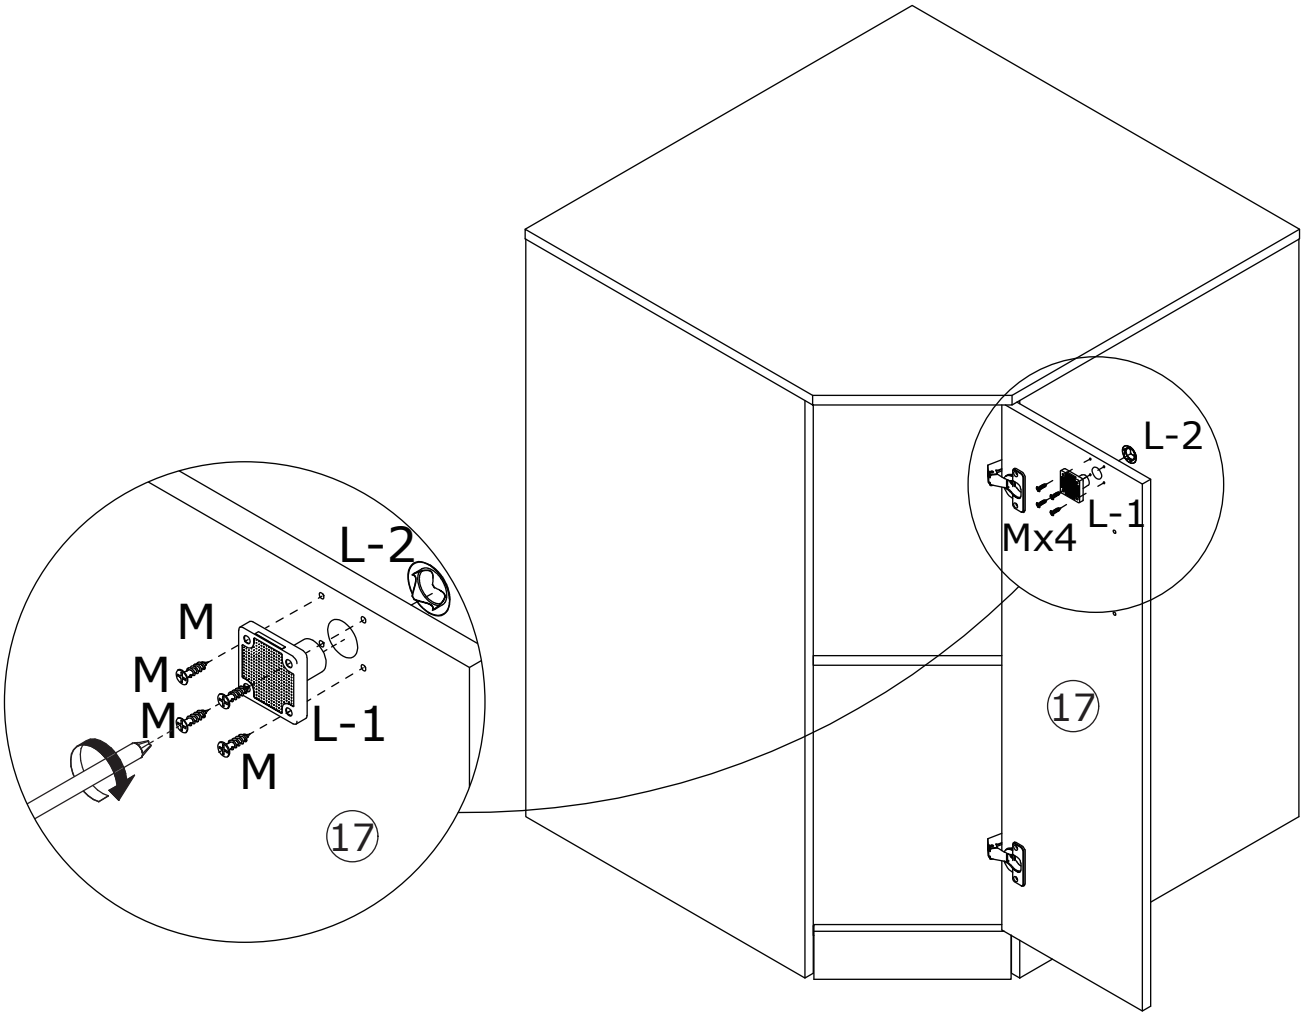

23


P x 16	Q x 16	
	 ∅3 x 14 mm	



Q  ∅3 x 14 mm


H  ∅3.5 x 14 mm

Insert clip (P) into the available slots, then secure them with screw (Q).

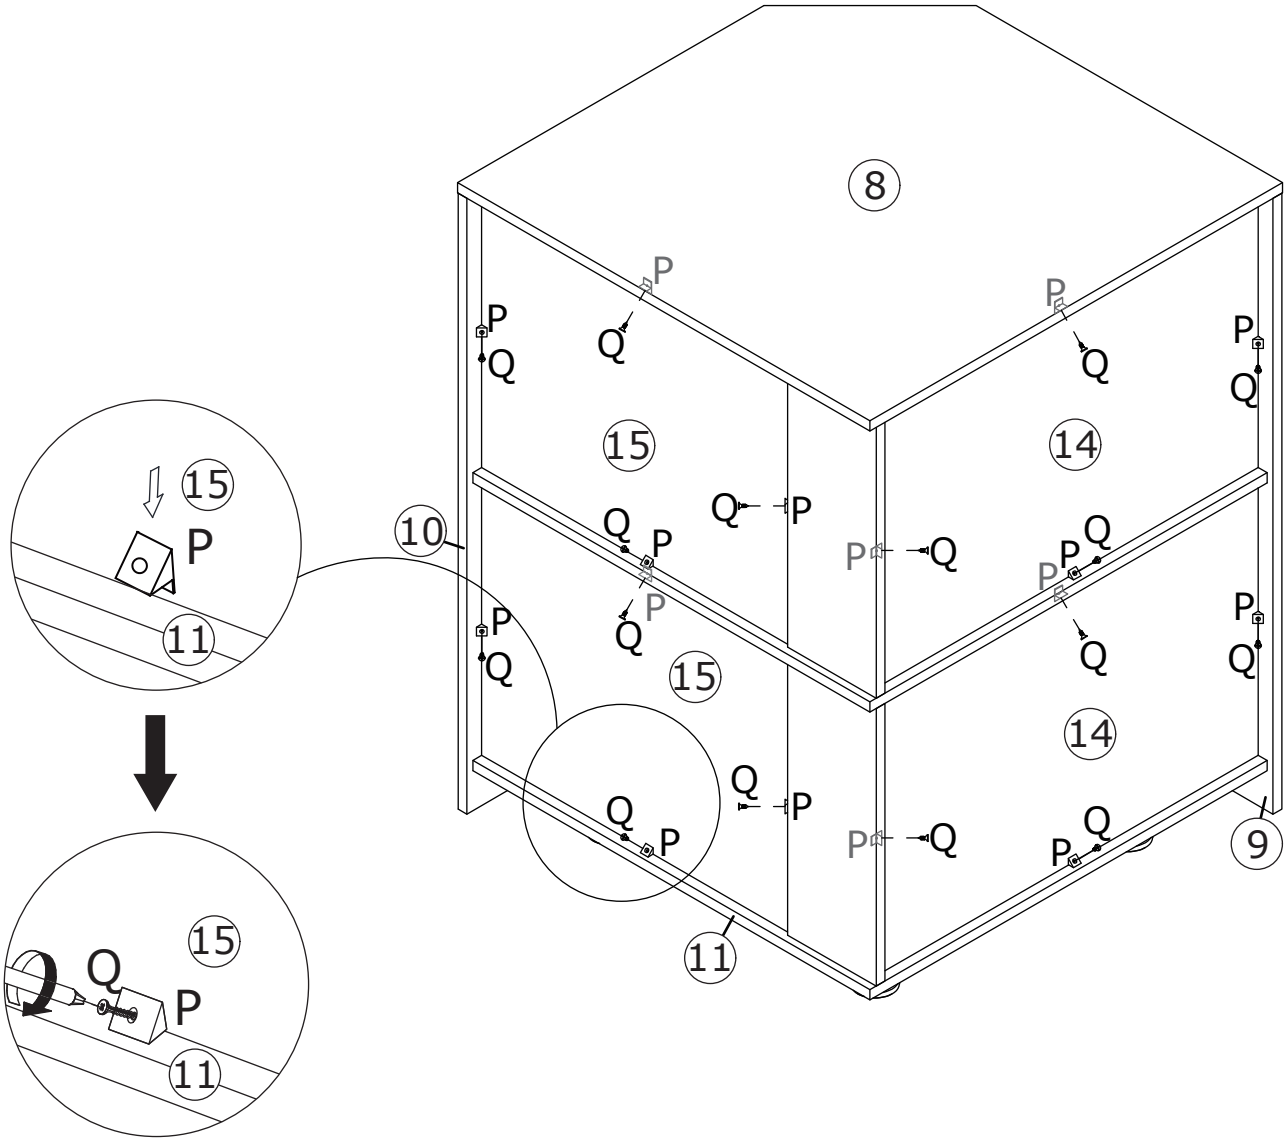


24


E x 3





∅5 x 40 mm




Secure panel 5 to panel 4 using screw (E).

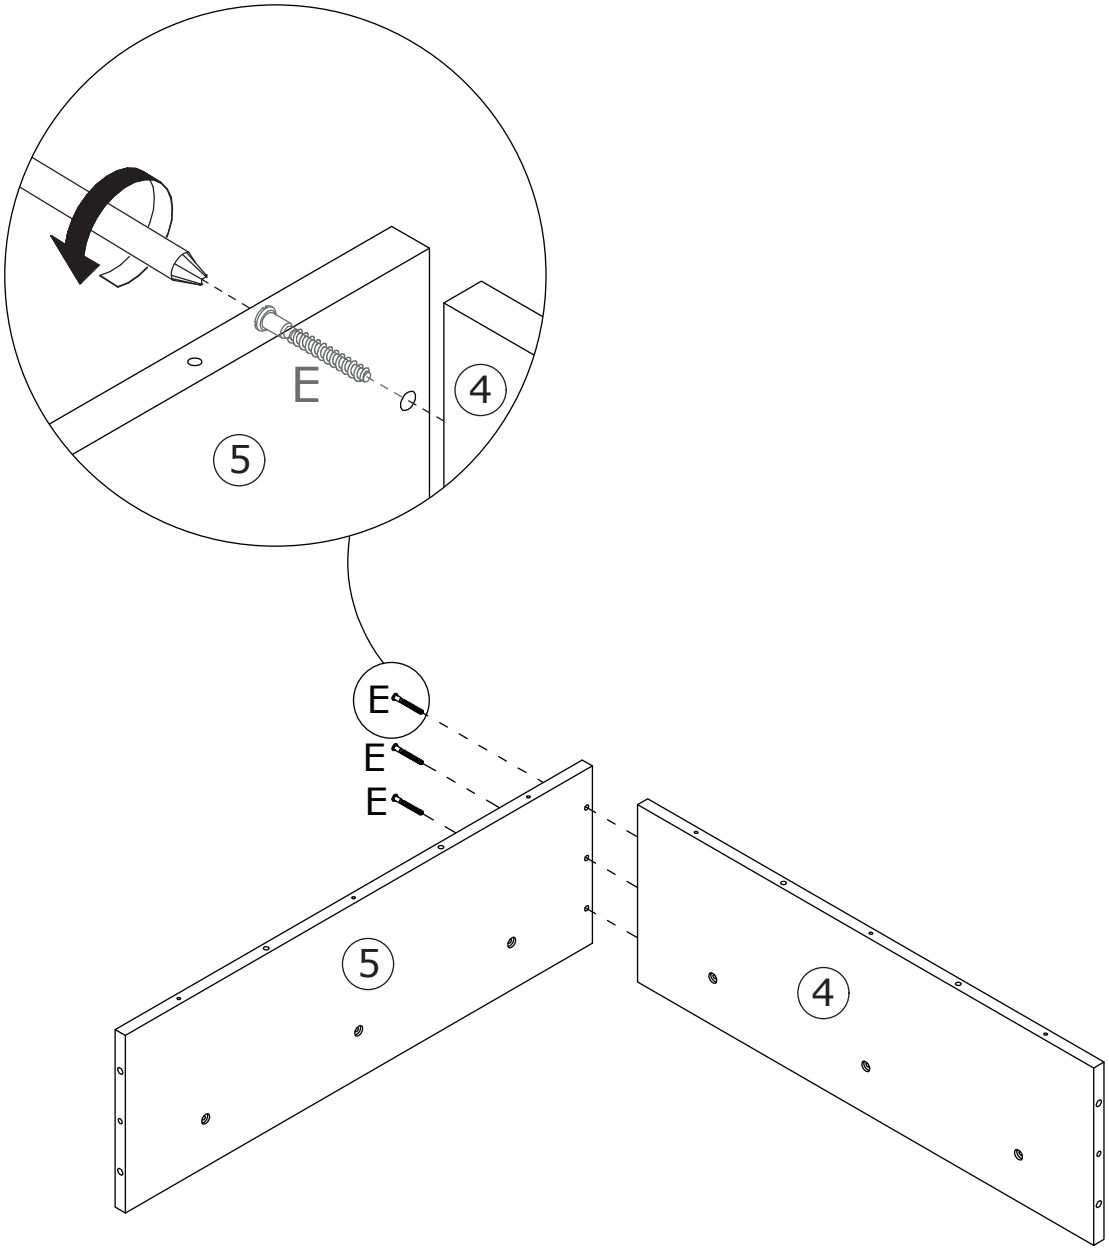


25


B x 4	C x 4	
 ∅6 x 35 mm		

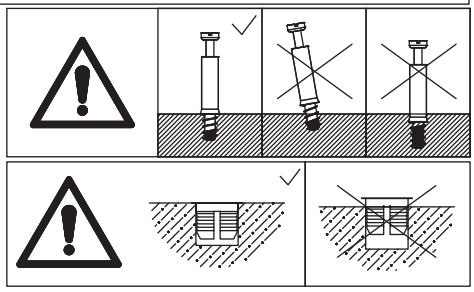


Install plug (C) onto panel 3, then screw self-tapping rod (B) into panel 3.

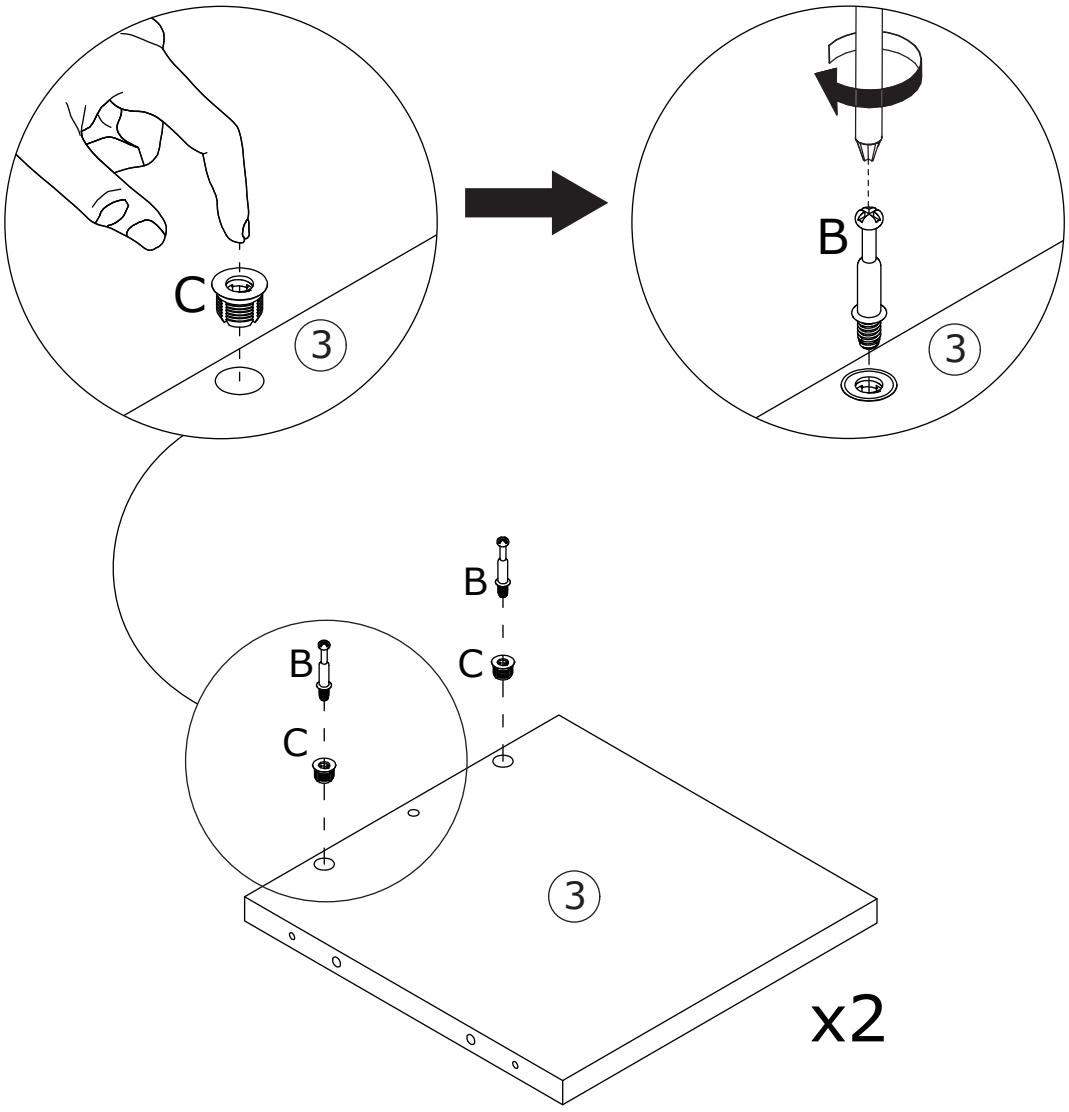


26



A x 4	D x 2	
		
∅15 x 10 mm	∅6 x 30 mm	

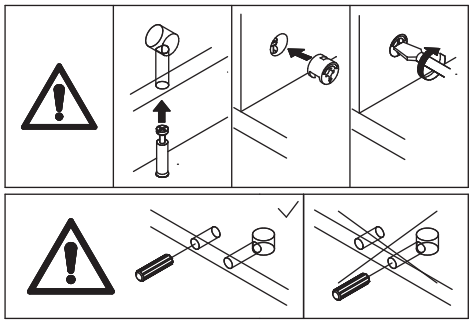


Connect panel 3 to panels 4 and 5 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

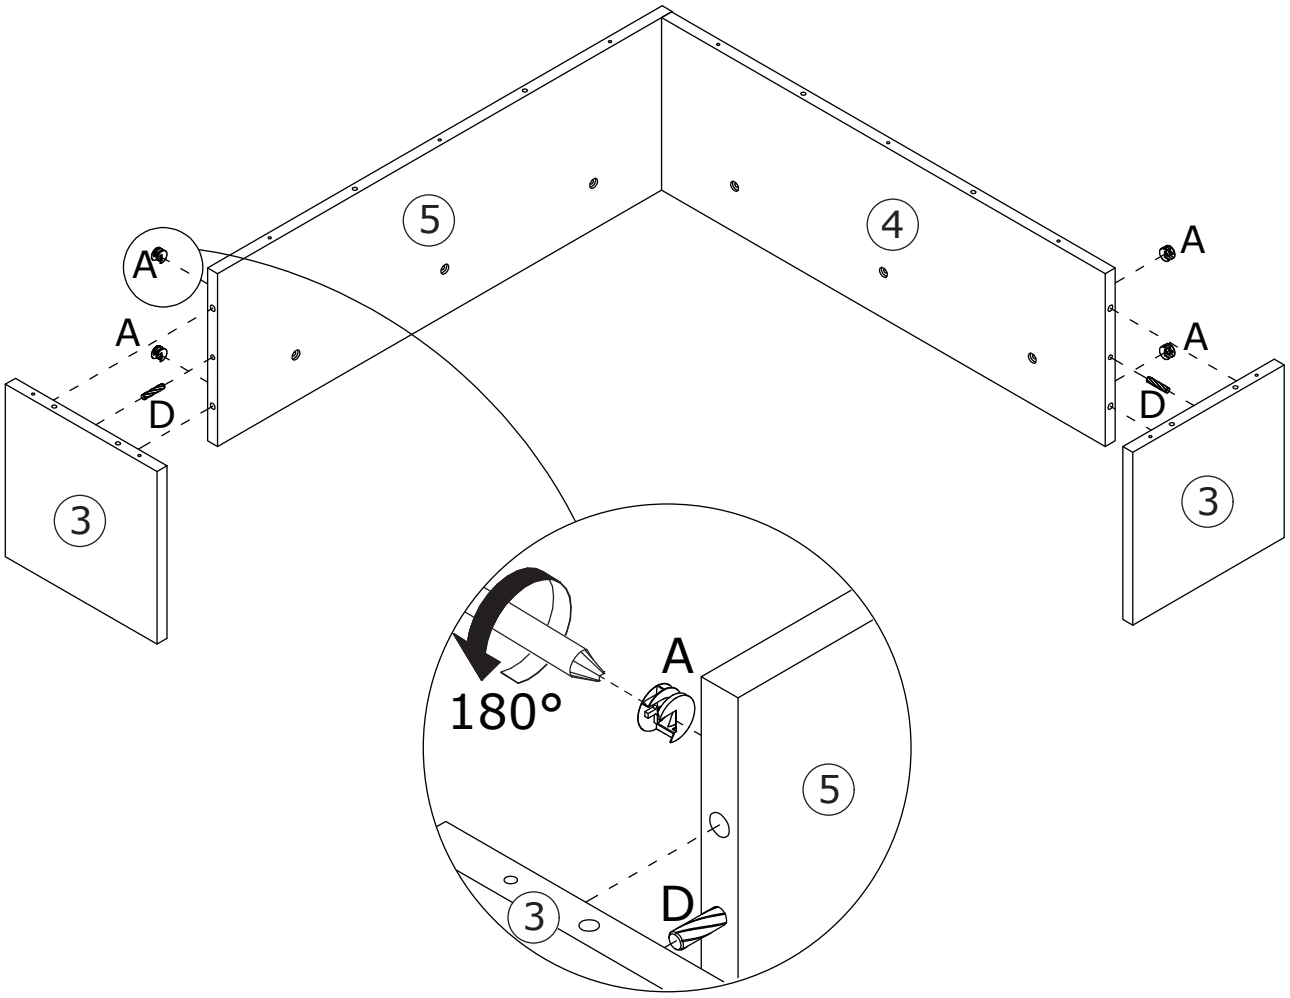


27

B x 4	C x 4	Q x 2	R x 1	
				
∅6 x 35 mm		∅3 x 14 mm		

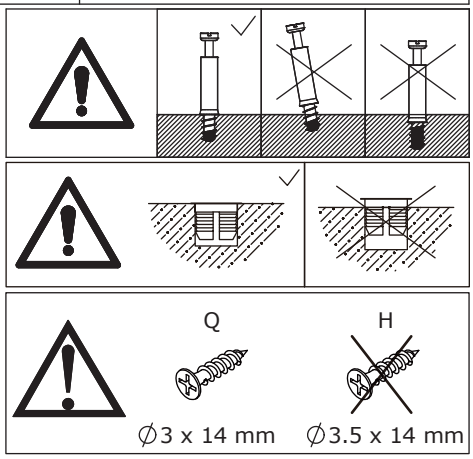

Install plug (C) onto panel 2, then screw self-tapping rod (B) into panel 2.
Secure part (R) to panel 2 using screw (Q).

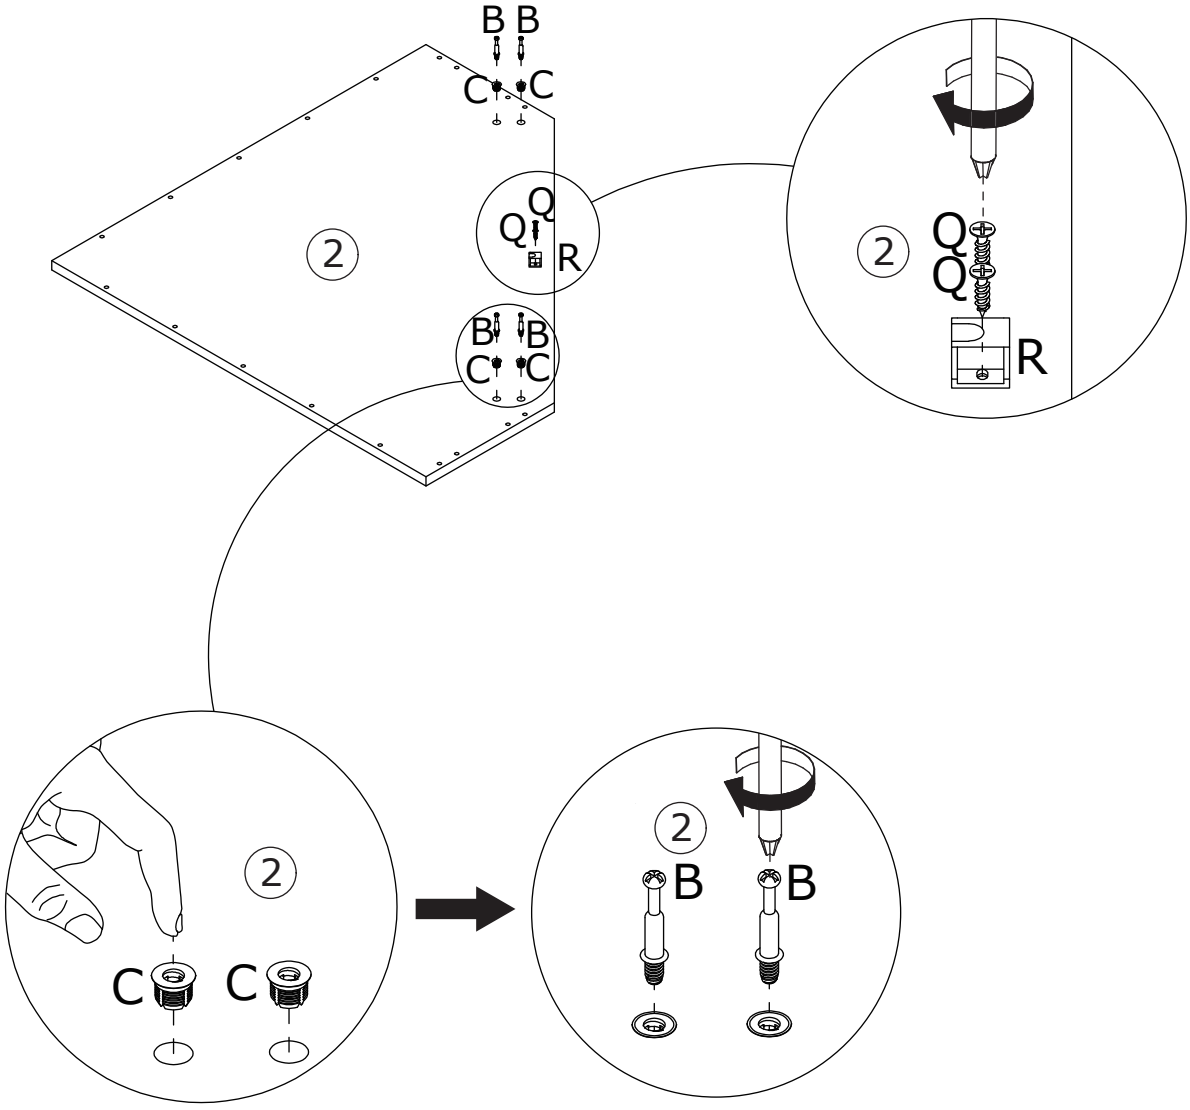



28

A x 4




∅15 x 10 mm





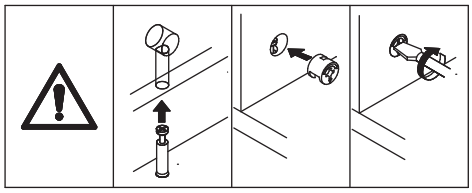


Connect panels 6 and 7 to panel 2, then tighten by turning cam lock (A) clockwise.

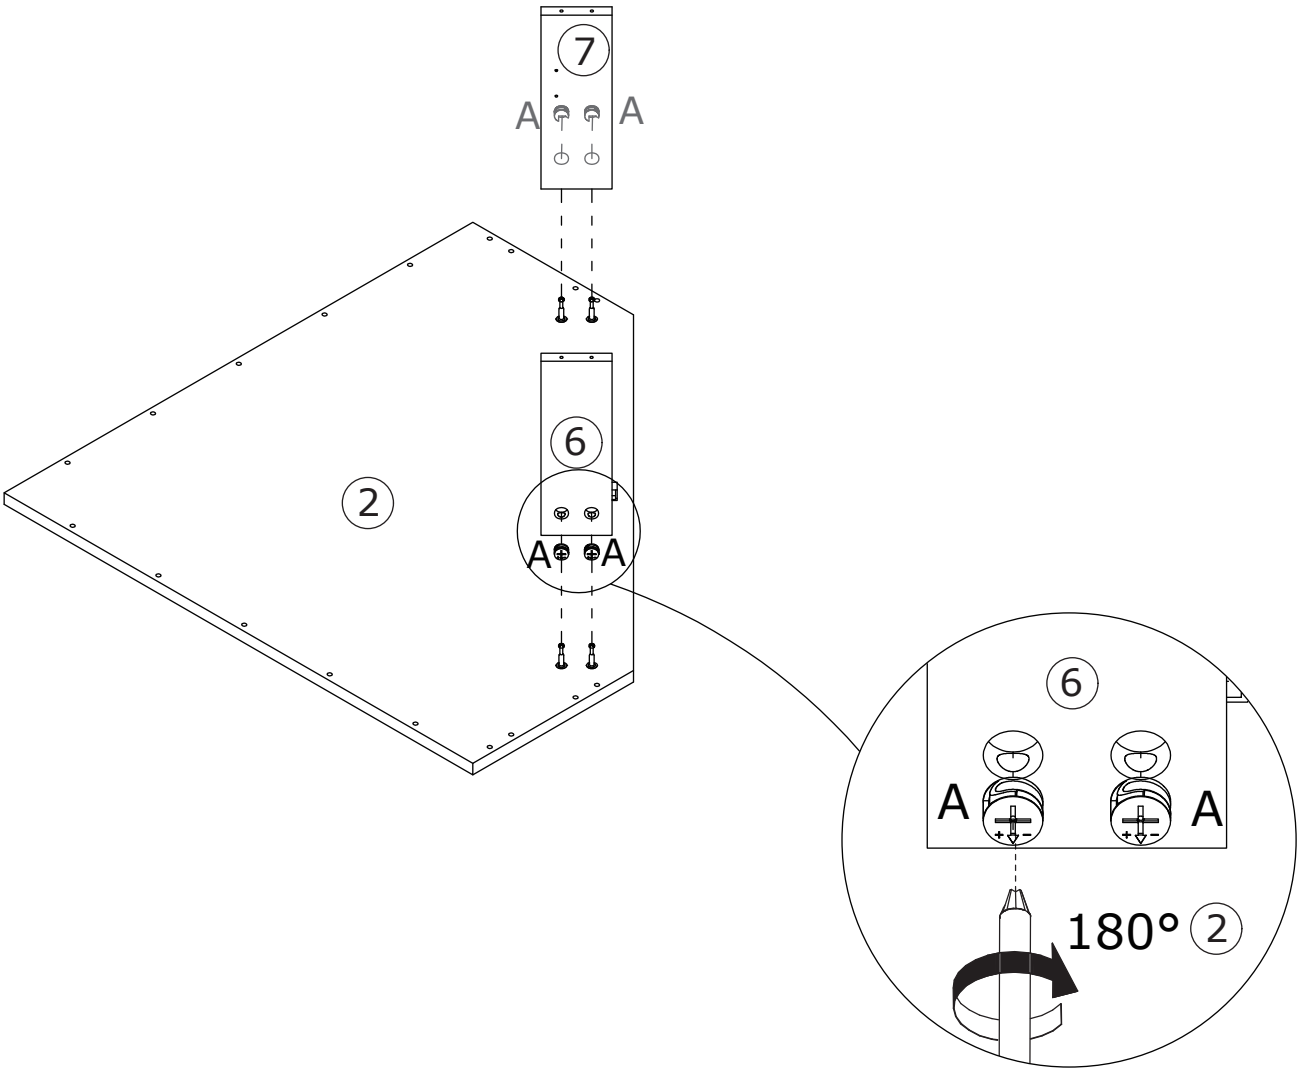


29



D x 8	E x 10	
		
∅6 x 30 mm	∅5 x 40 mm	

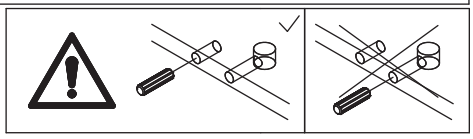


Connect panel 2 to panels 3, 4, and 5 using wooden dowel (D), and secure them with screw (E).

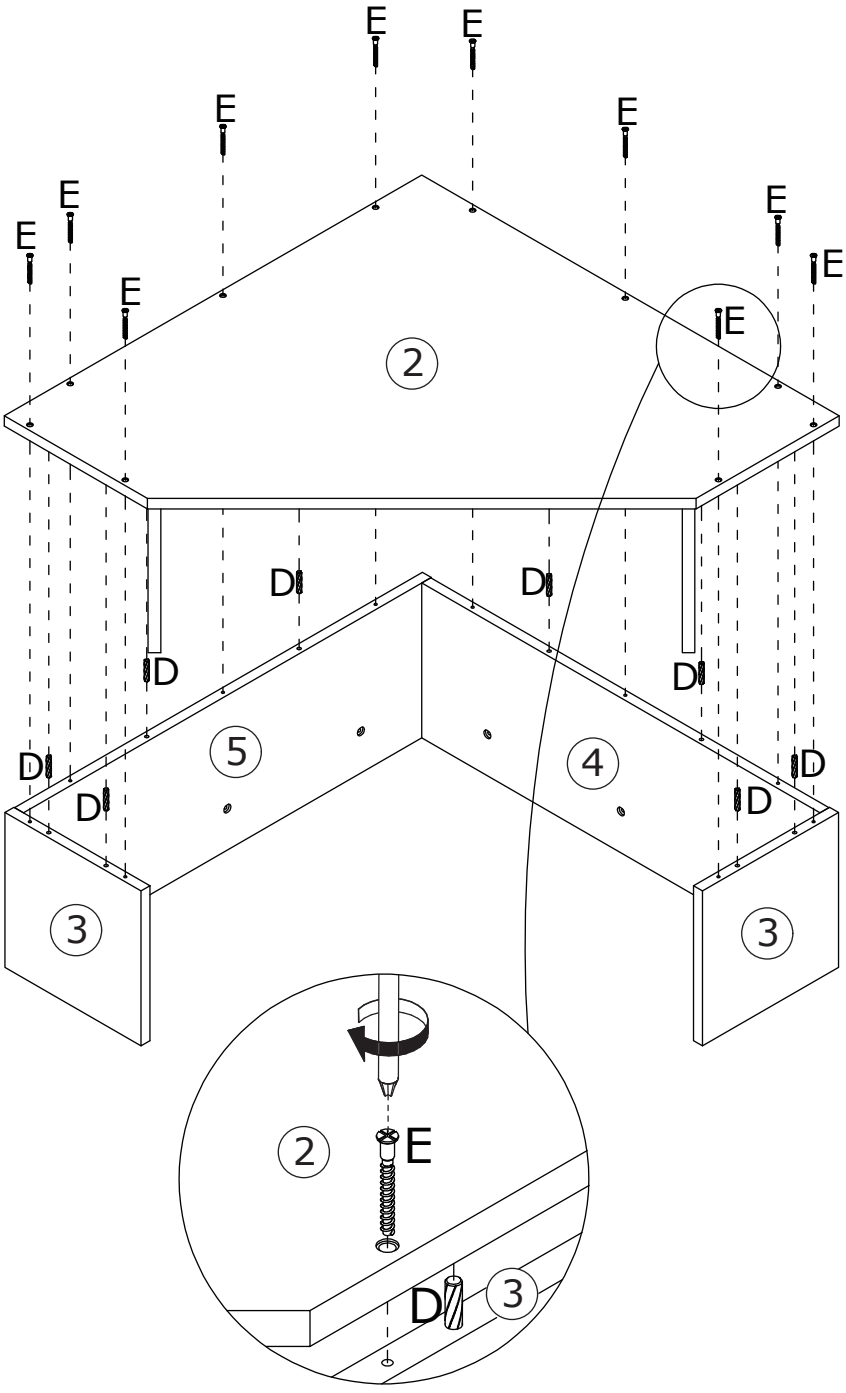



30

D x 8	E x 14	
		
∅6 x 30 mm	∅5 x 40 mm	

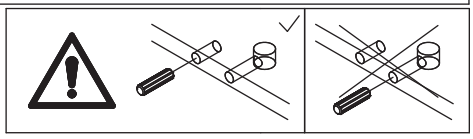


Flip the unit over.
Connect panel 1 to panels 3, 4, 5, 6, and 7 using wooden dowel (D), and secure them with screw (E).

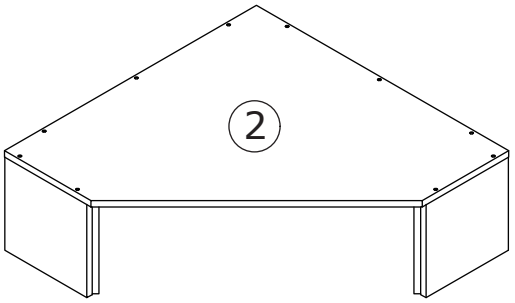


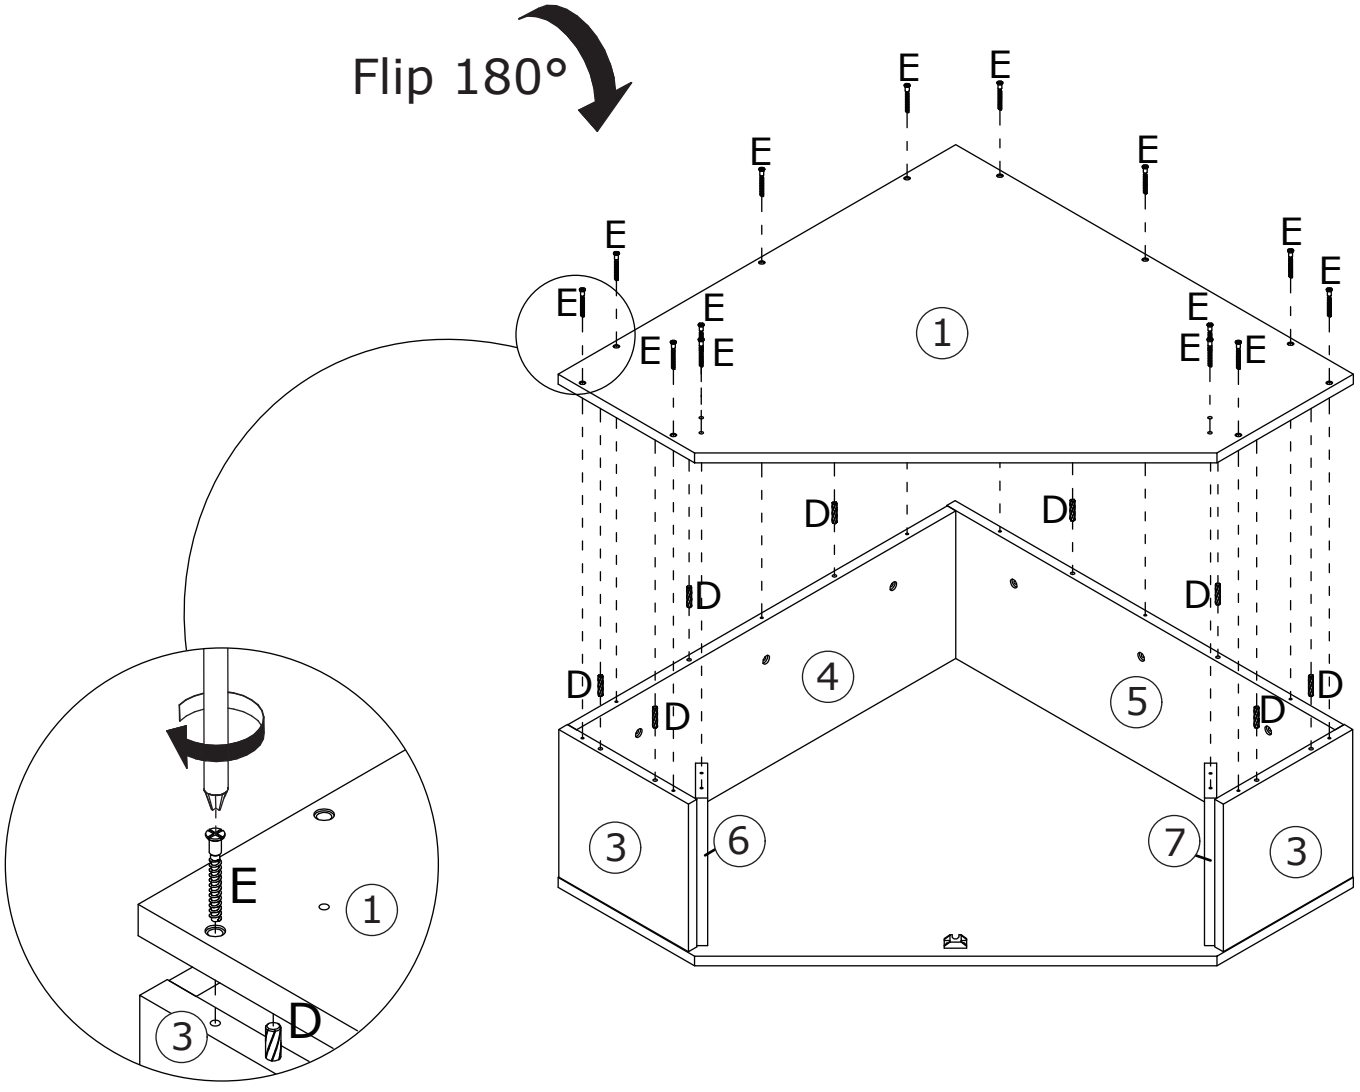



31

F x 2	H x 4	
	 ∅3.5 x 14 mm	

Secure hinge (F) to panel 18 using screw (H).

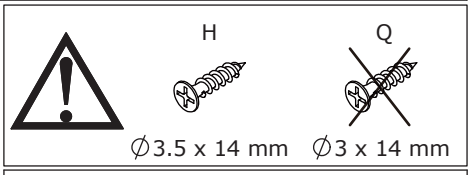

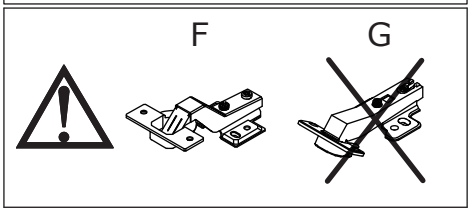

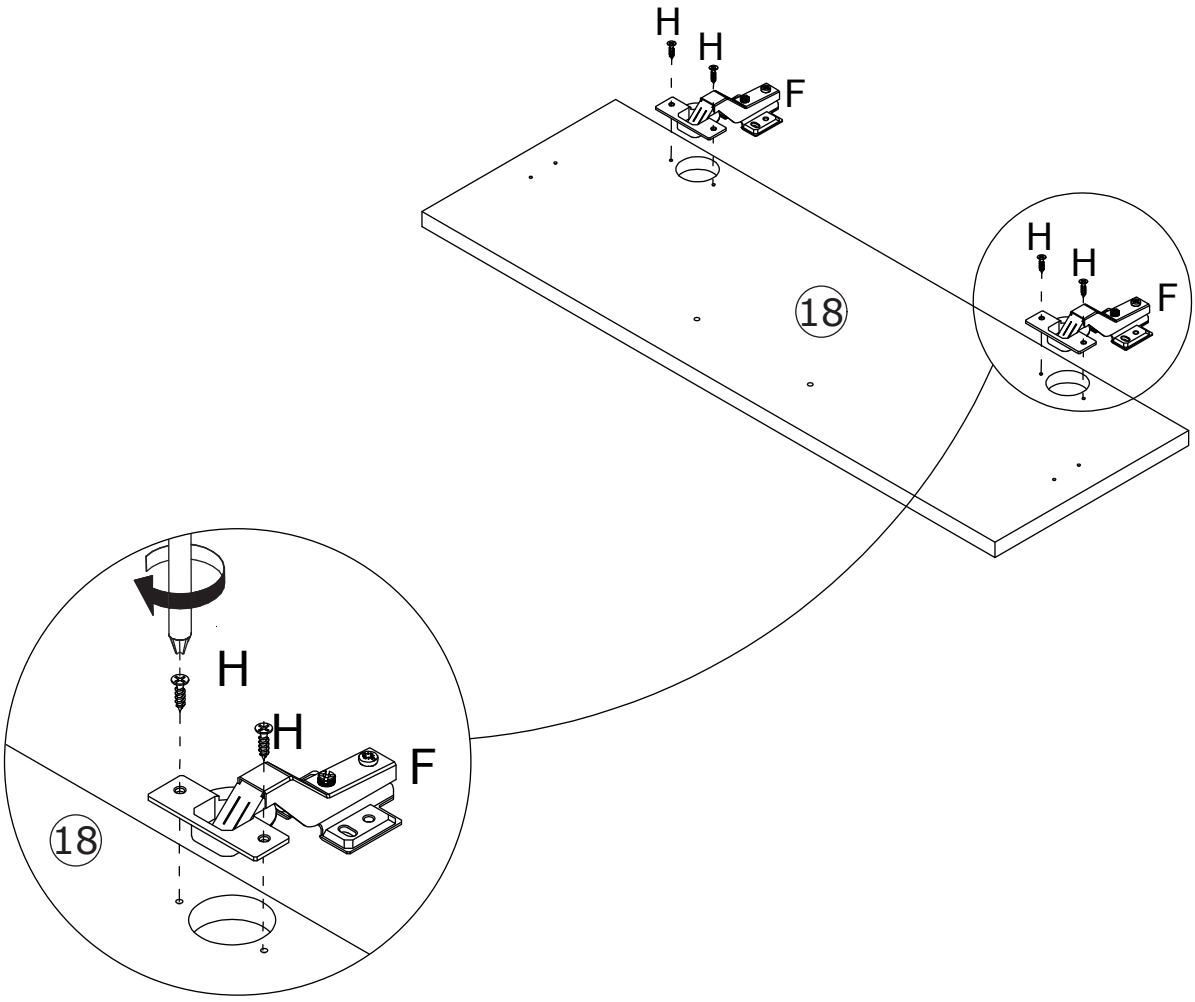


32

H x 8



∅3.5 x 14 mm



Flip the unit over. Connect panel 18 to panel 1 using screw (H).




H




∅3.5 x 14 mm


Q




∅3 x 14 mm

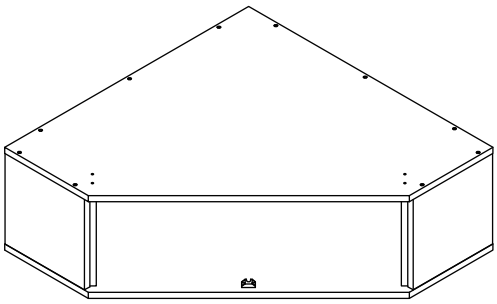


Flip 180°

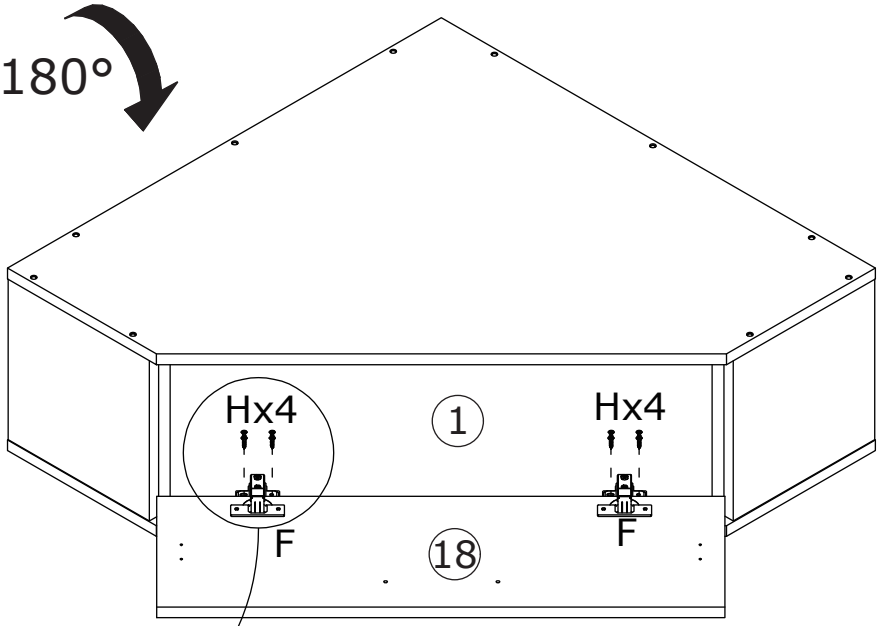

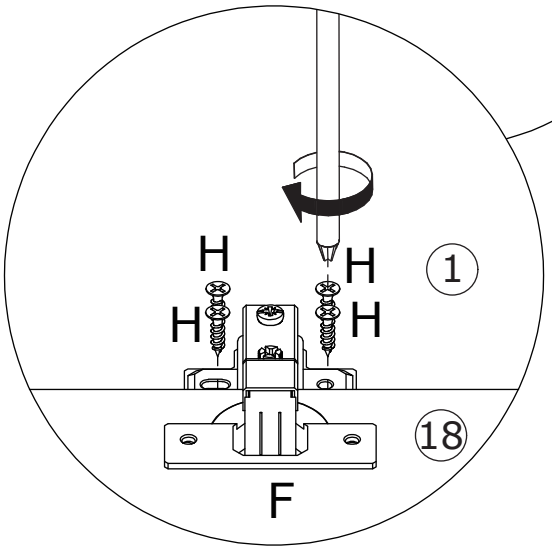


33




Left

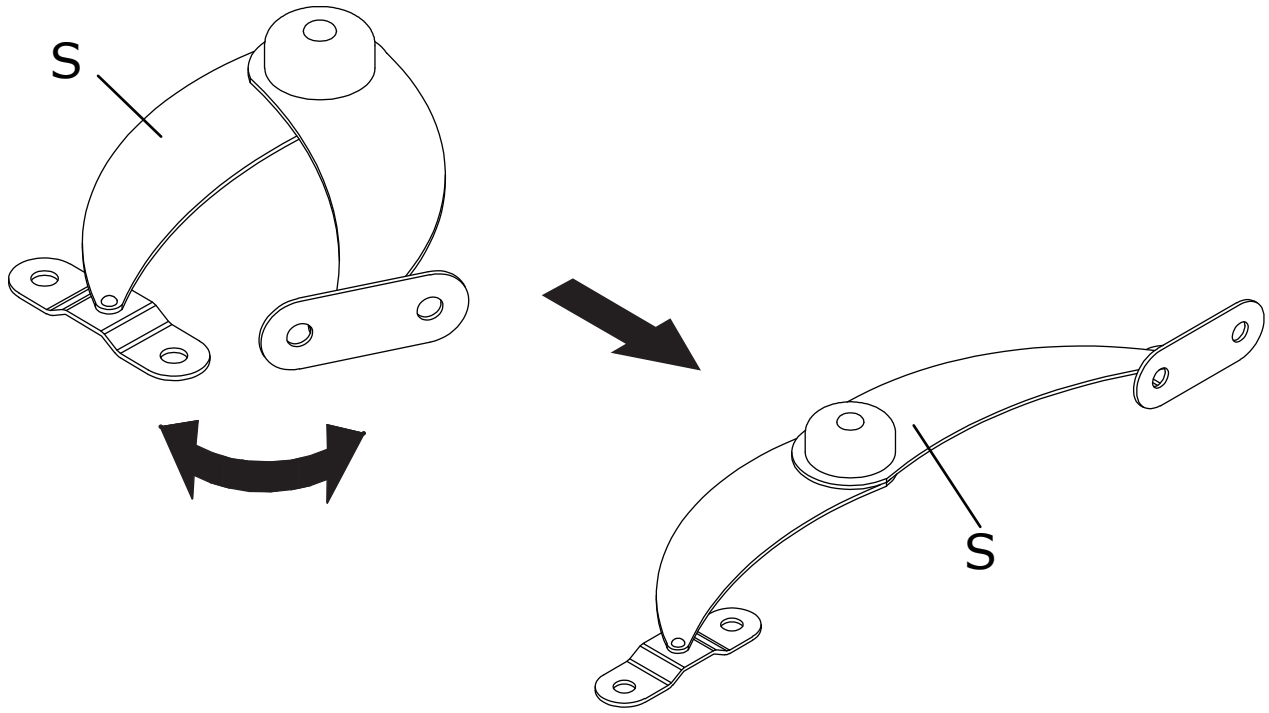

Right

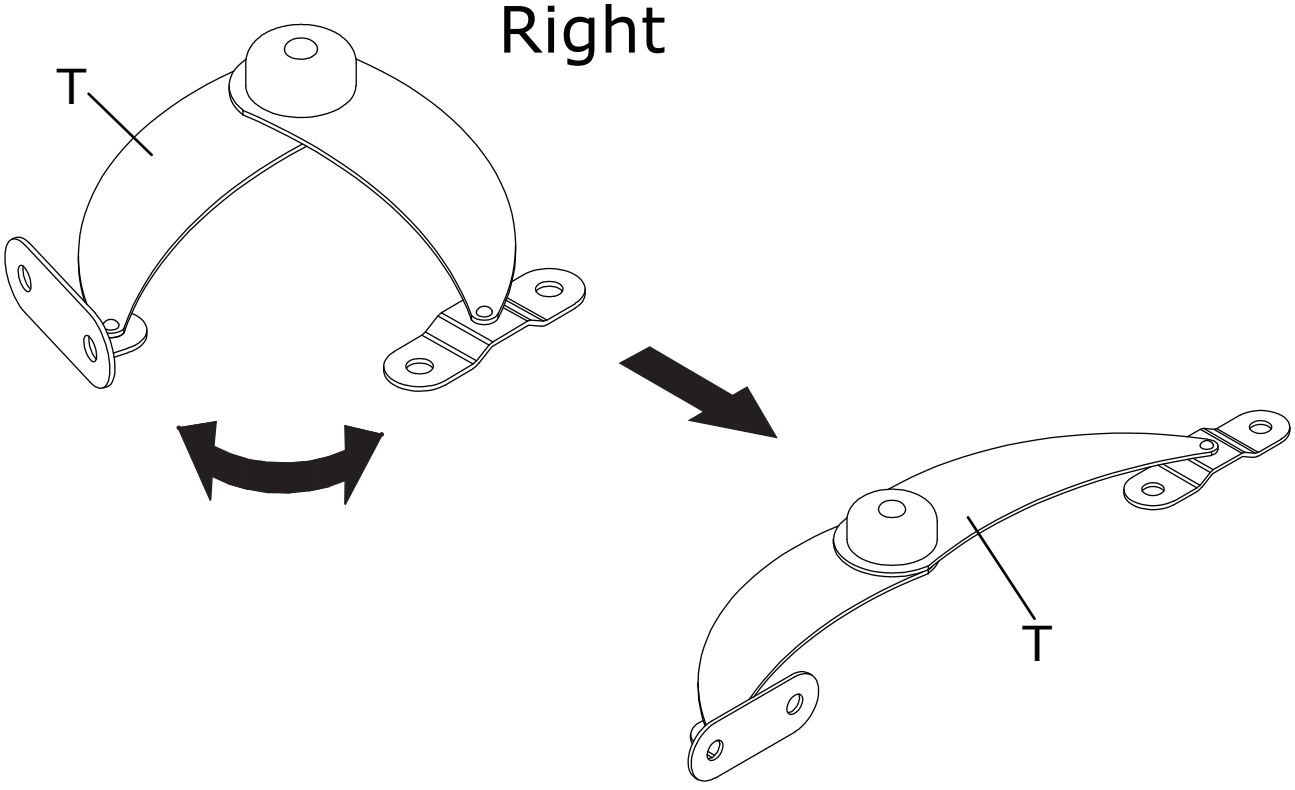


34


H x 8	S x 1	T x 1	
 ∅3.5 x 14 mm	 Left	 Right	





H  ∅3.5 x 14 mm

Q  ∅3 x 14 mm


Secure part (S) and (T) to panels 6, 7 and 18 using screw (H).

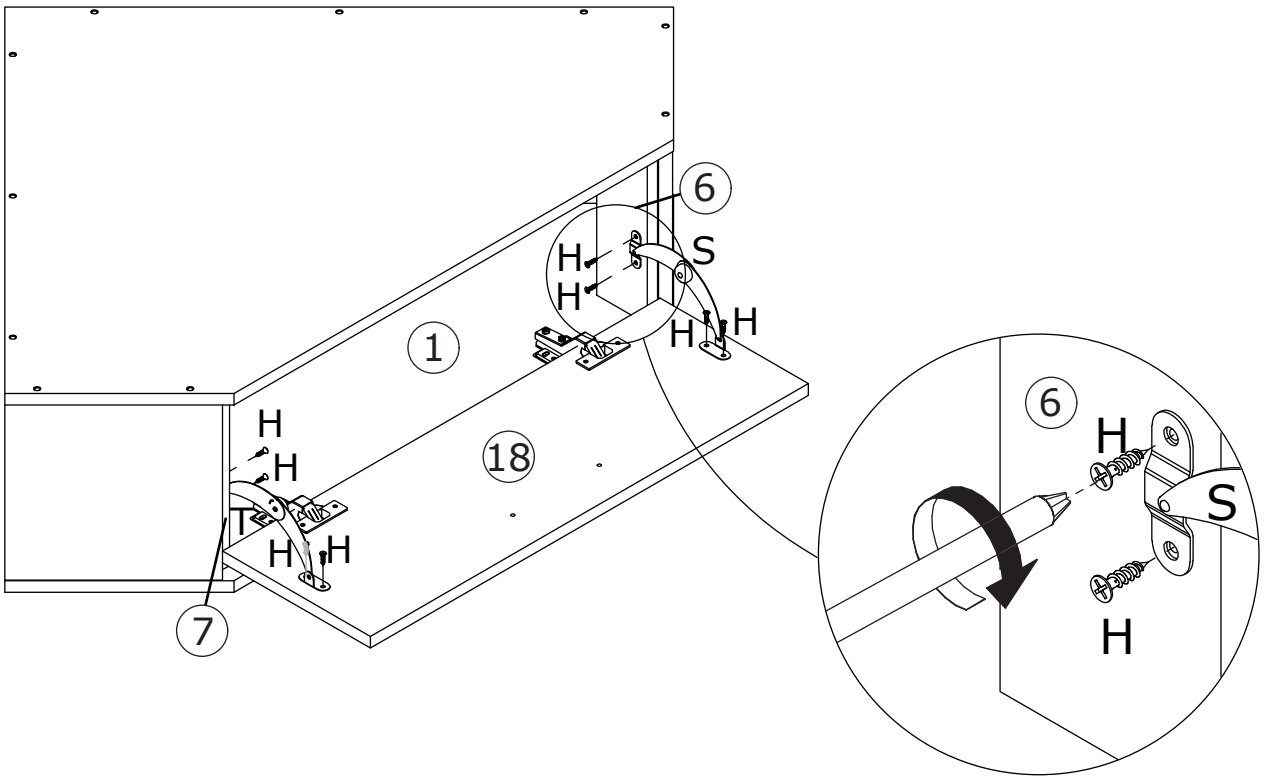


35

J x 1	K x 2	
	 ∅4 x 18 mm	


Flip the unit over. Secure handle (J) to panel 18 using screw (K).

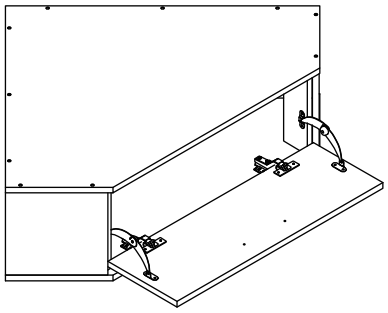

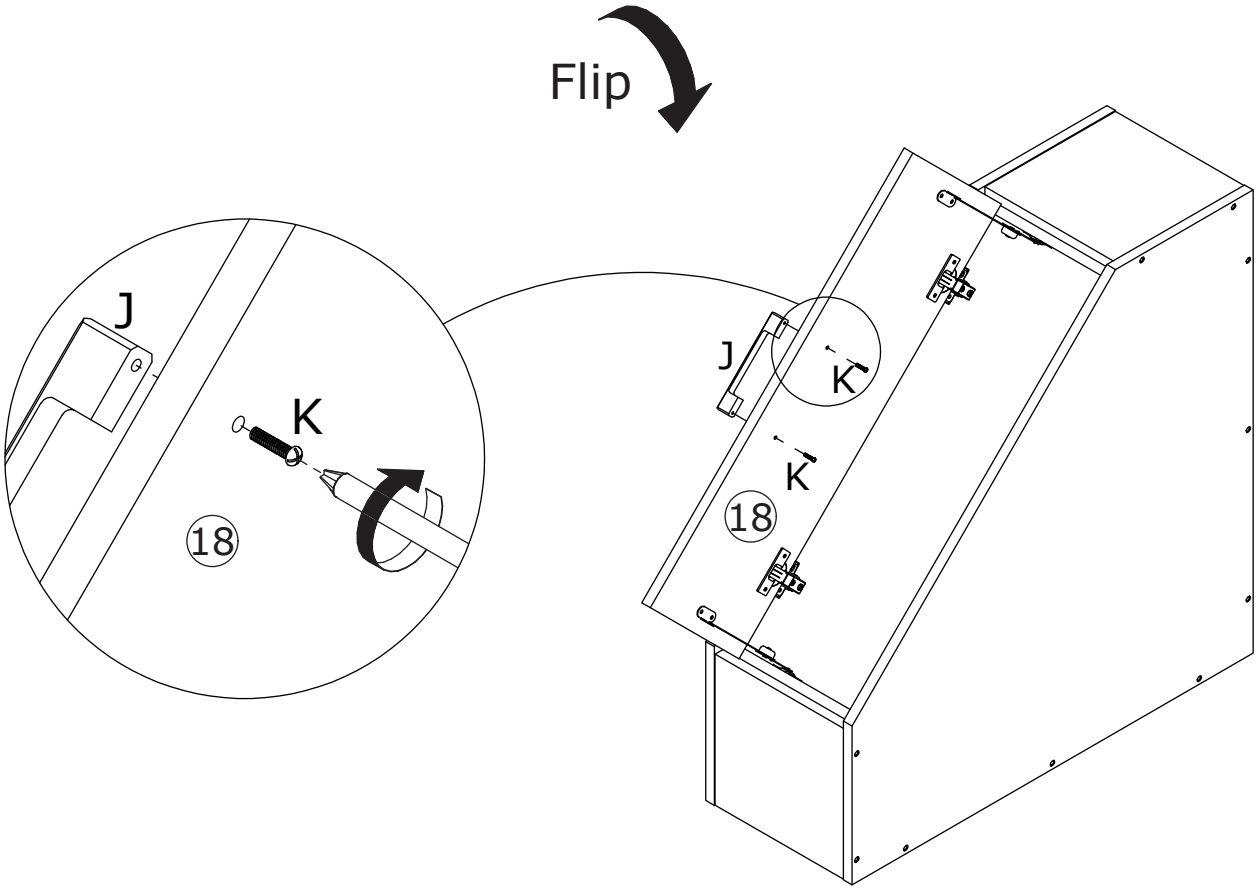


36


FF x 10

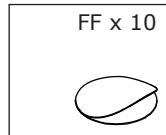


Cover the visible holes on panel 2 using sticker (FF).

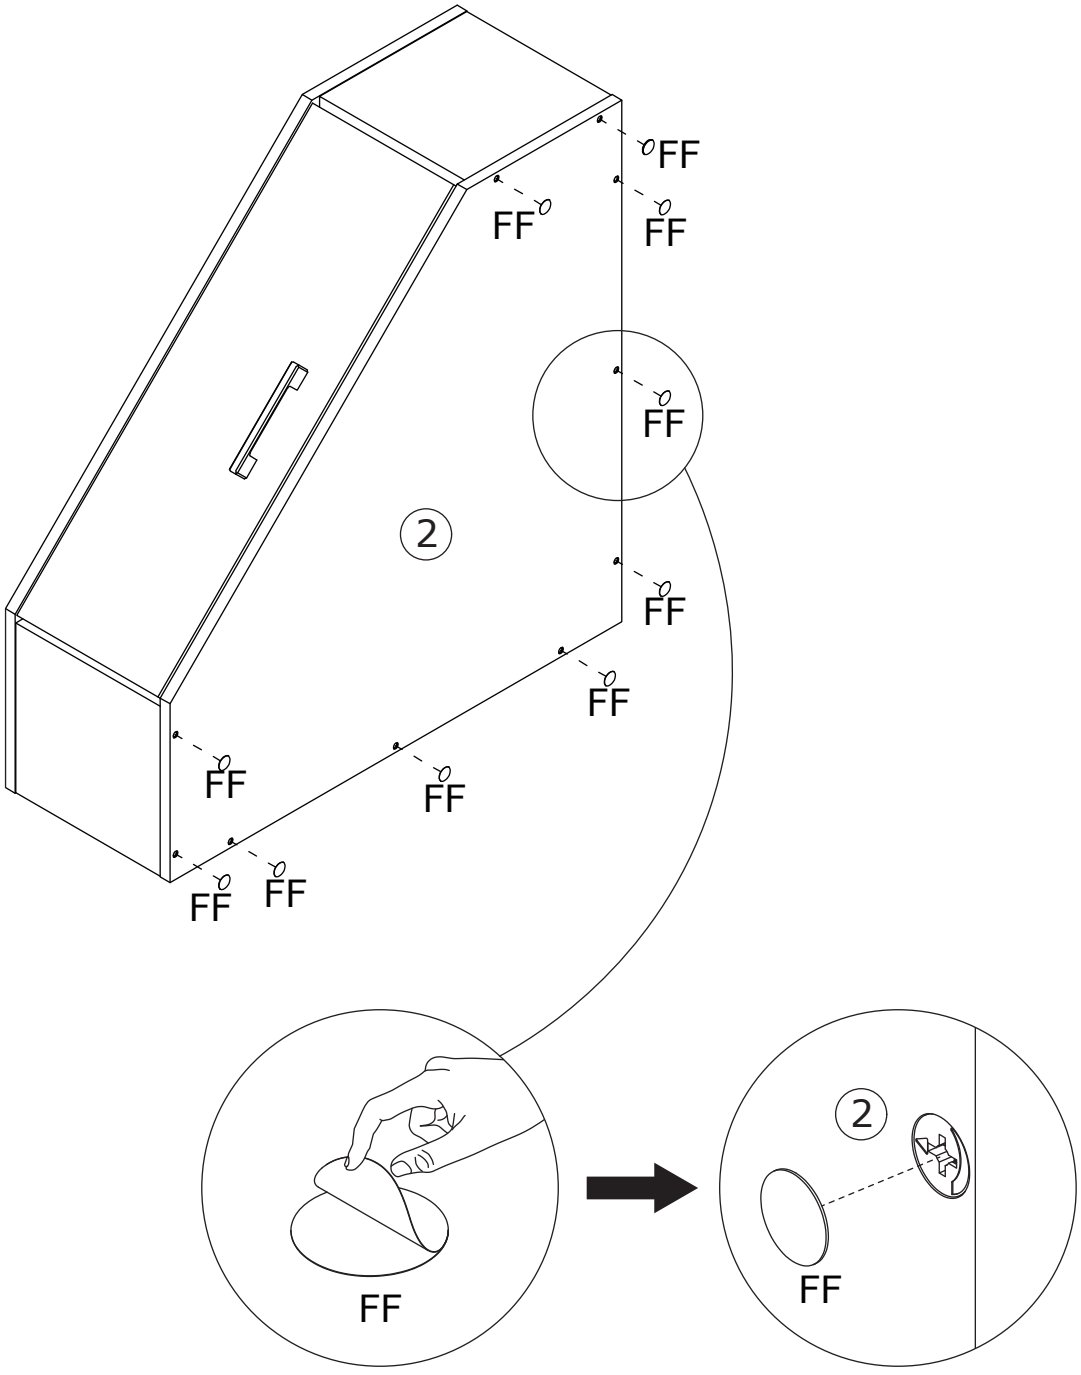


37

Y x 8	Z x 8	AA x 1	BB x 1	
 ∅6 x 12 mm				

Connect the two pieces of part (19) using screw (Y) and nut (Z).

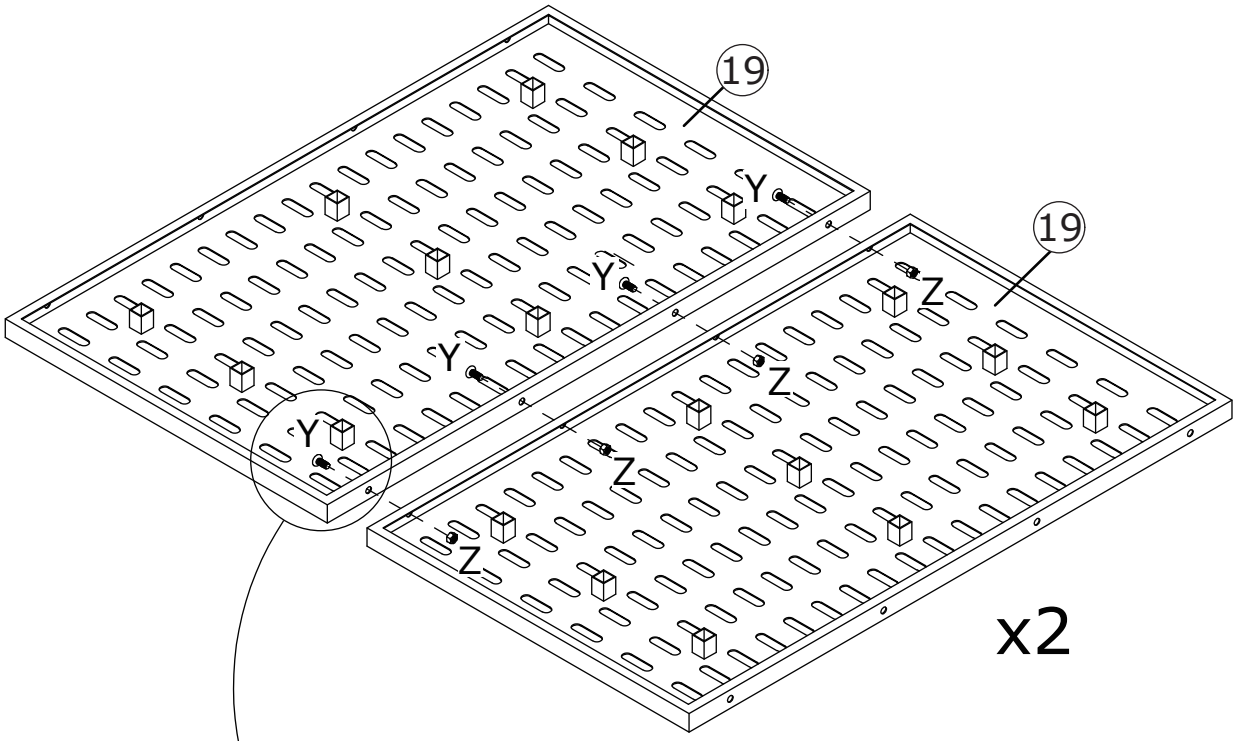


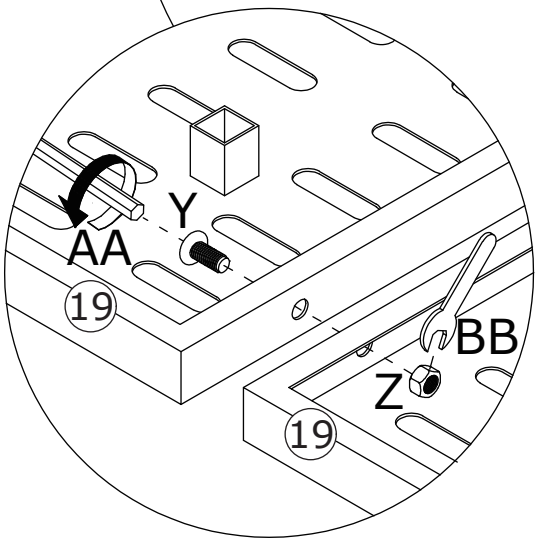


Choose the appropriate installation method based on the material of your wall.

- If it is a solid wall, please select Option A.
- If it is not a solid wall, please select Option B.

Option A

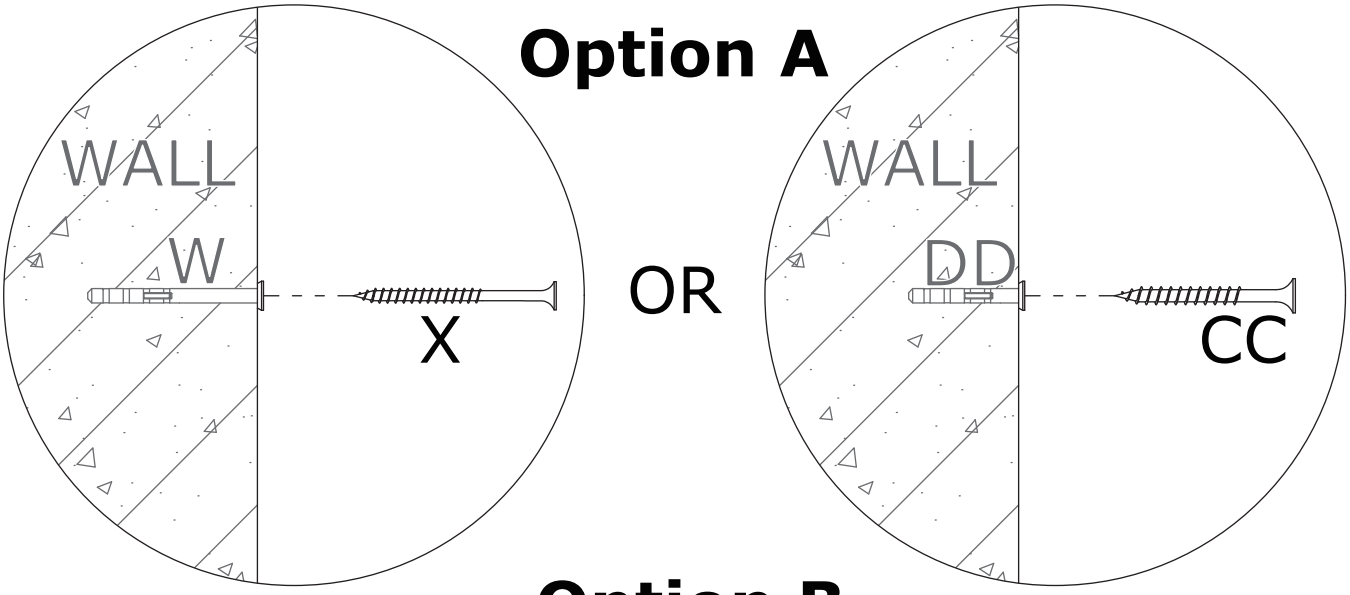



Option B

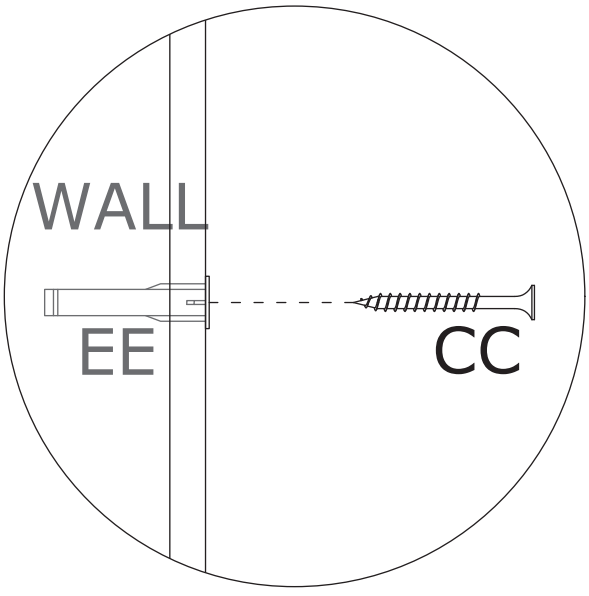


38


Position four pieces of panel 19.

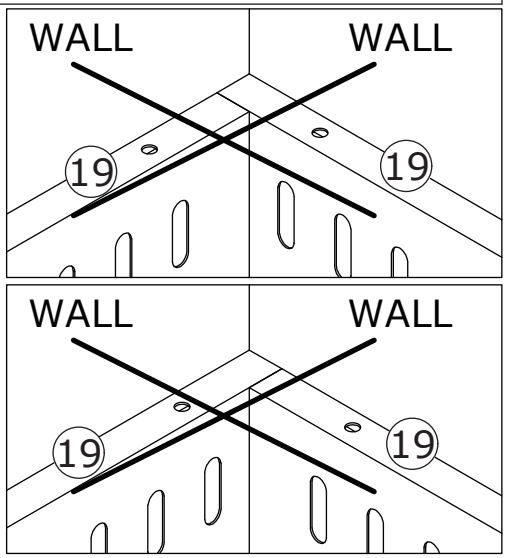

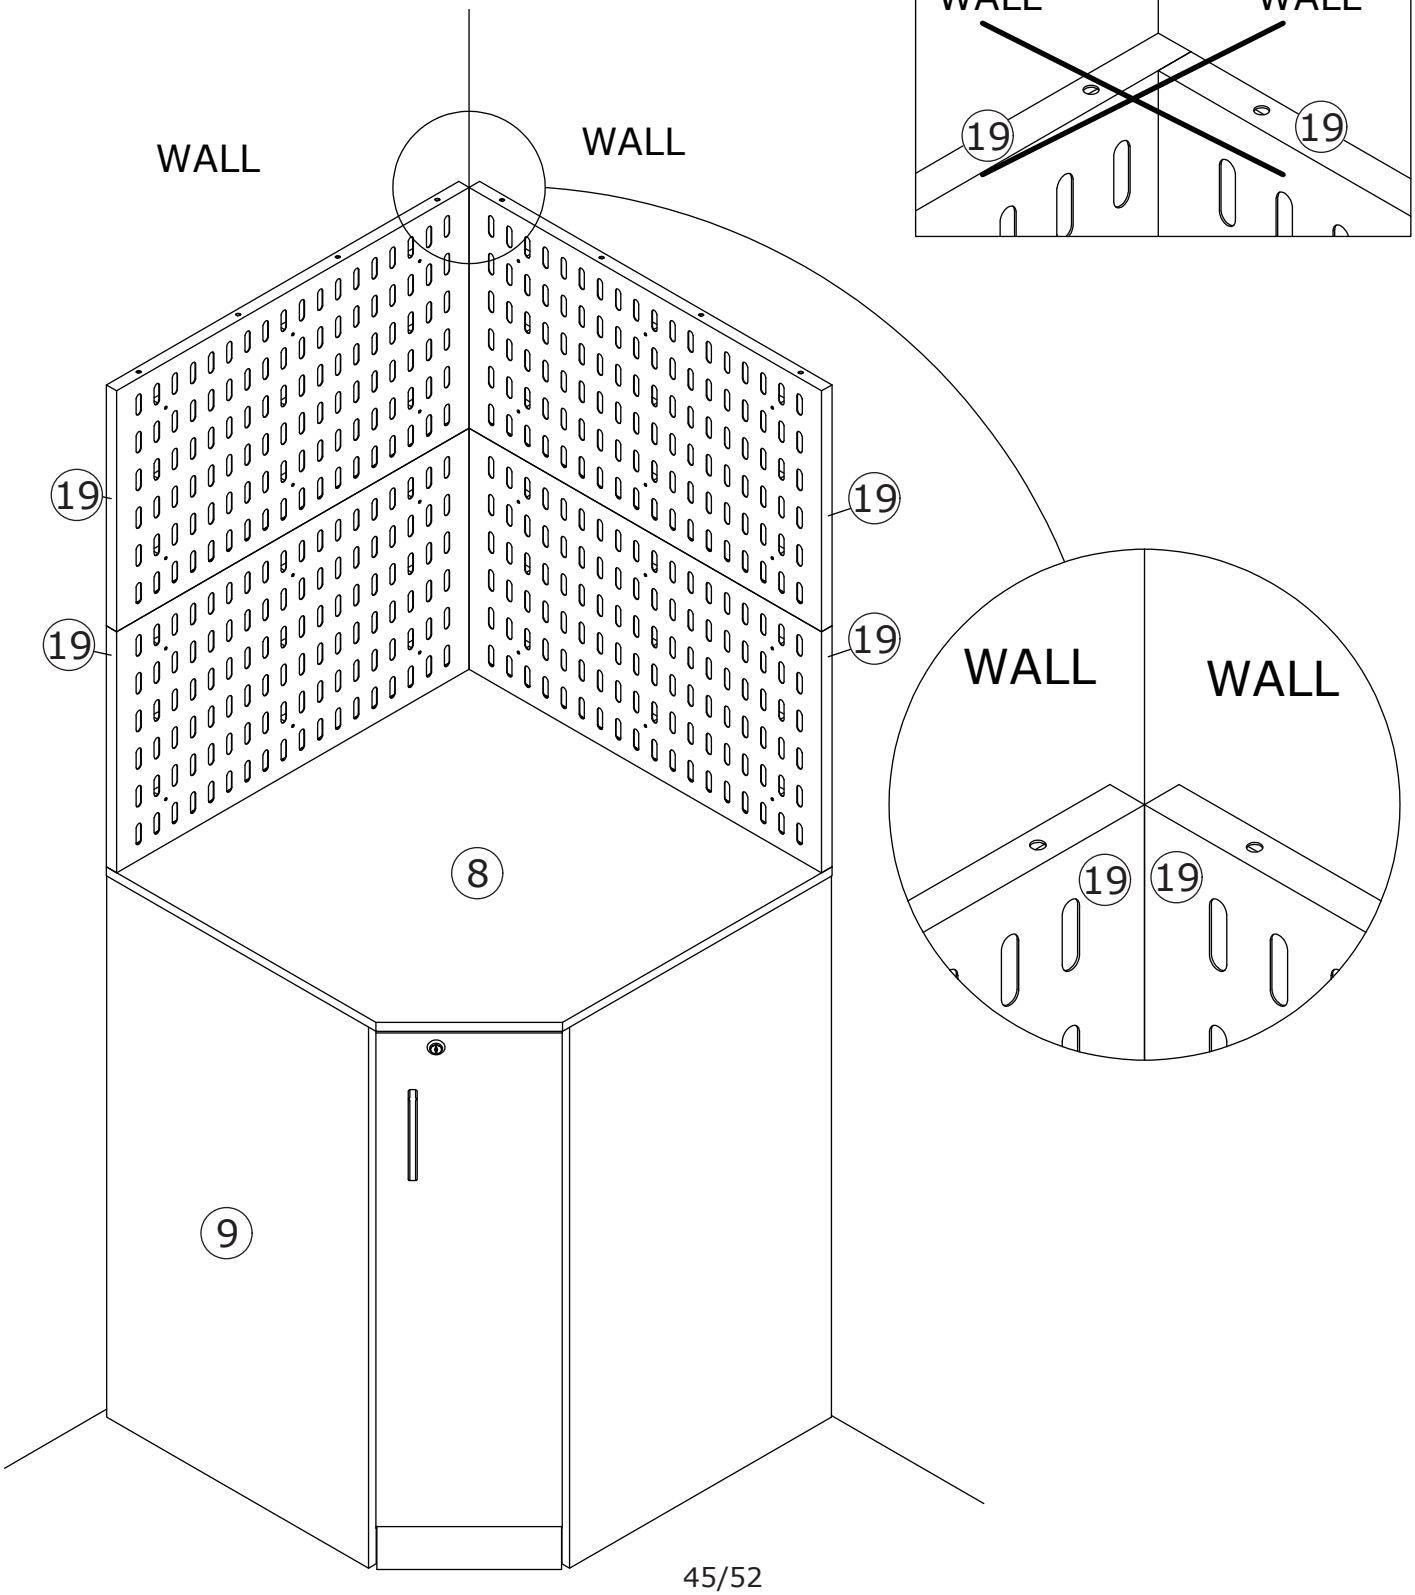



39

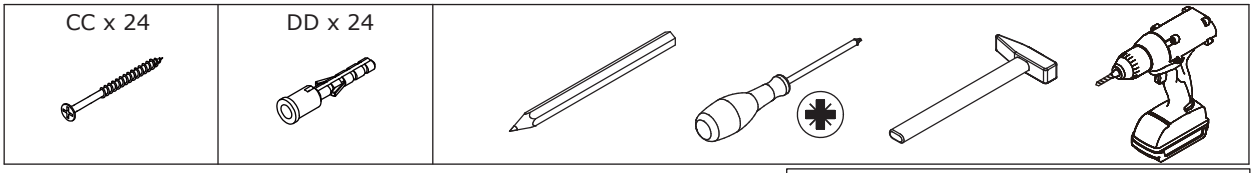

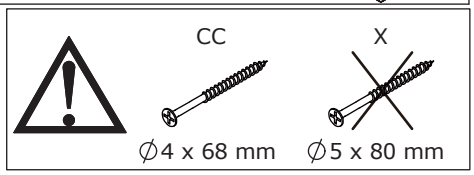



Drill holes to wall, and insert the expansion screw (DD).
Secure the unit to the wall using screw (CC).

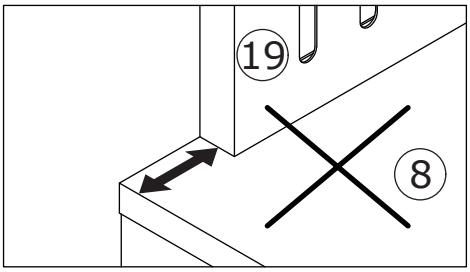


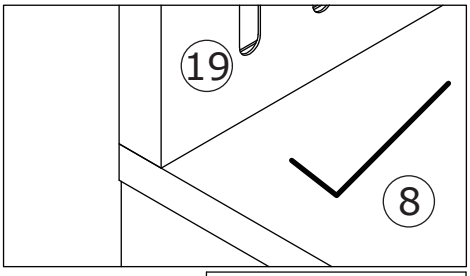


Option A

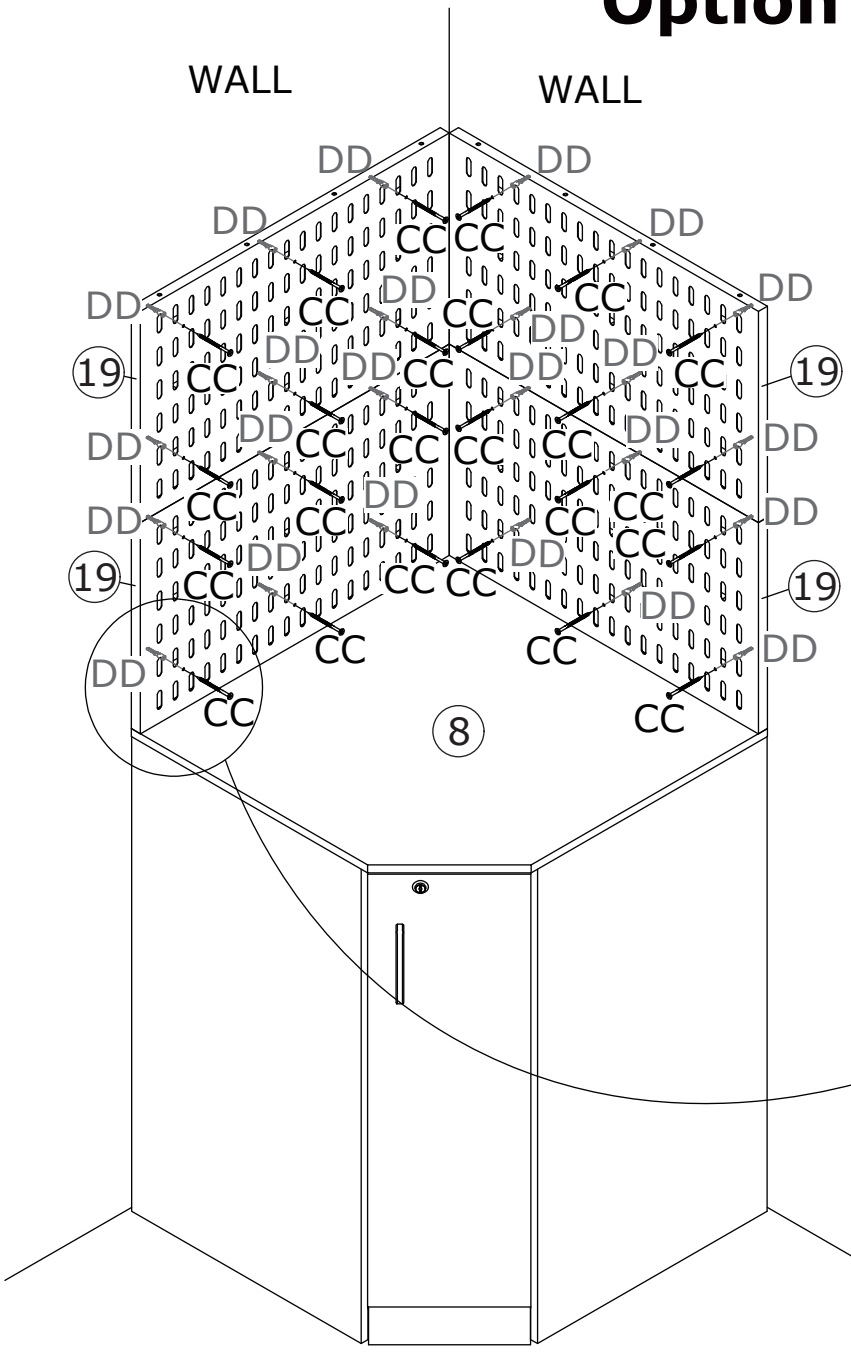

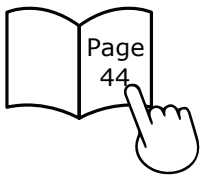


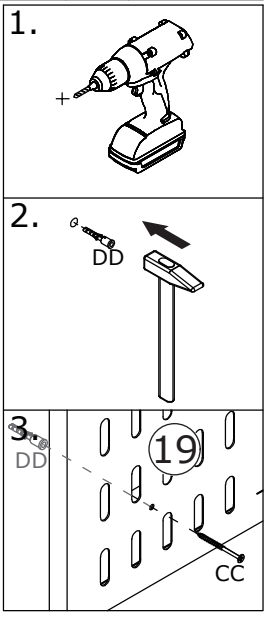

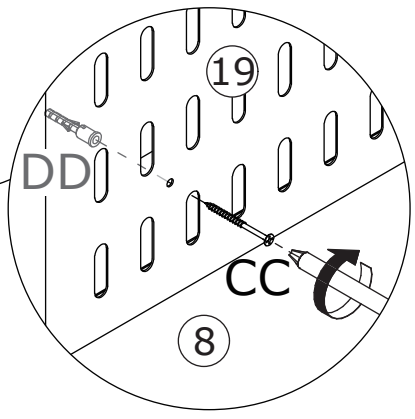



40

CC x 24	EE x 24	
∅4 x 68 mm		

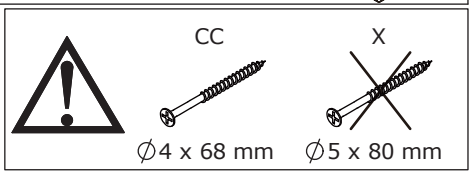



Drill holes to wall, and insert the expansion screw (EE).
Secure the unit to the wall using screw (CC).

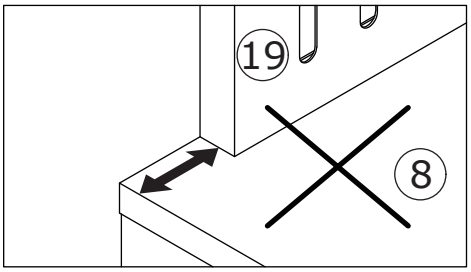


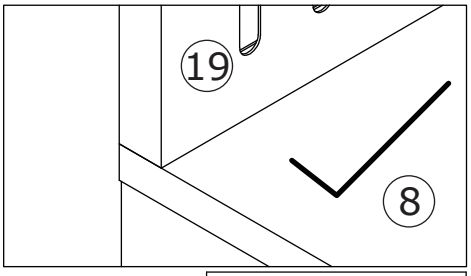


Option B

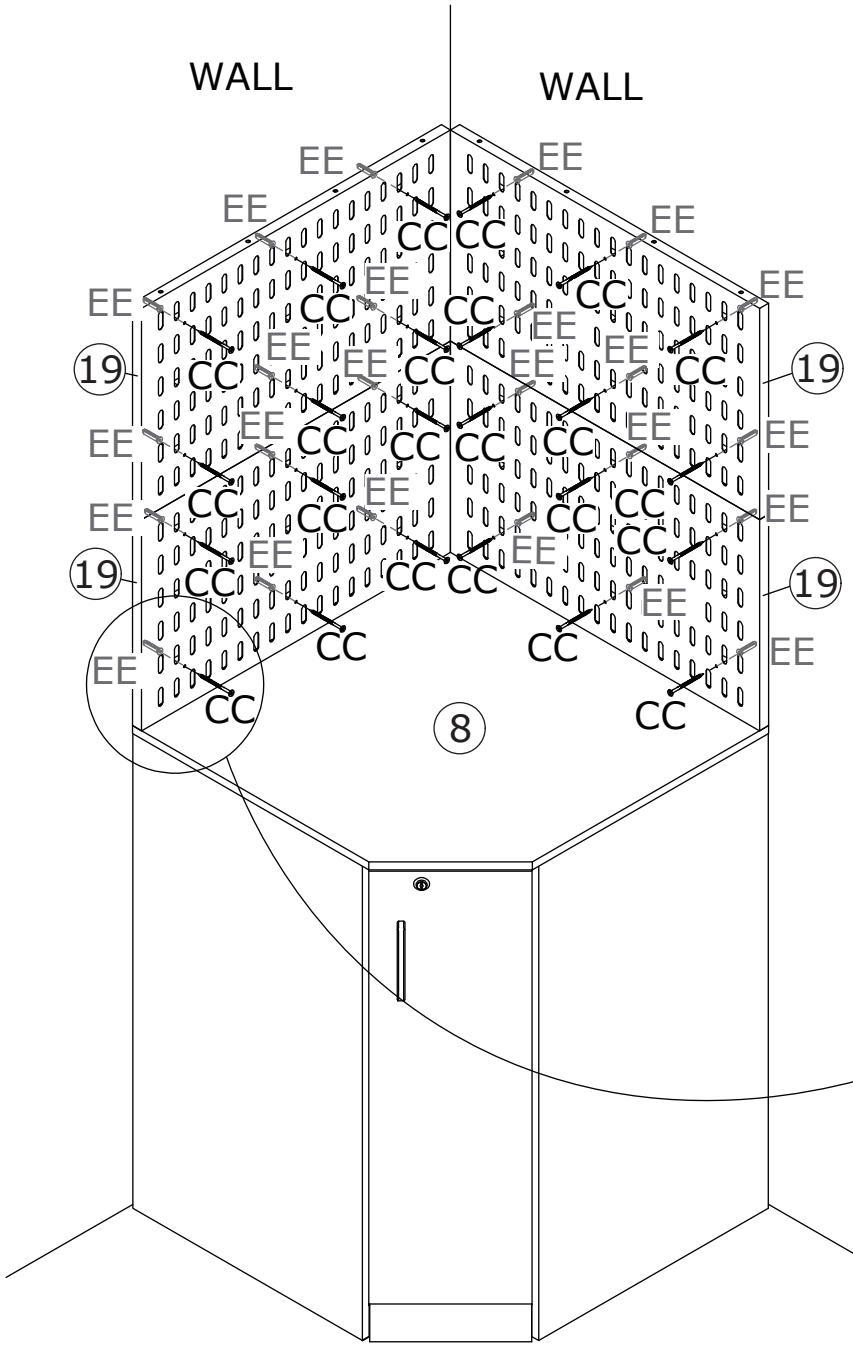


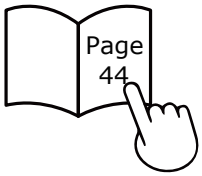

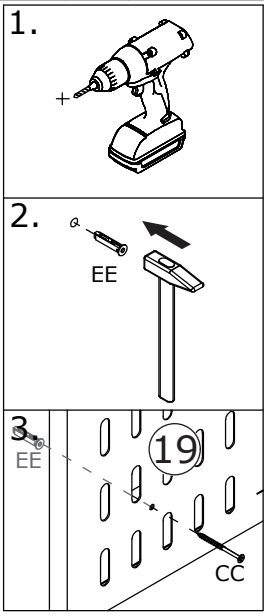


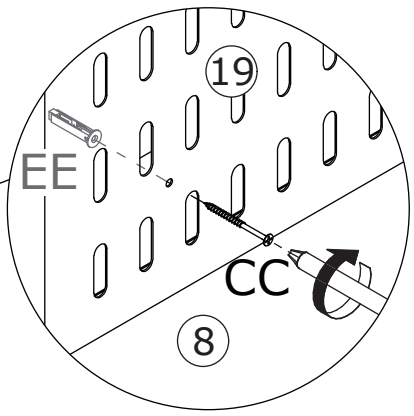



41





Place the wall-mounted cabinet onto part (19), and mark the hole positions on panels 4 and 5.

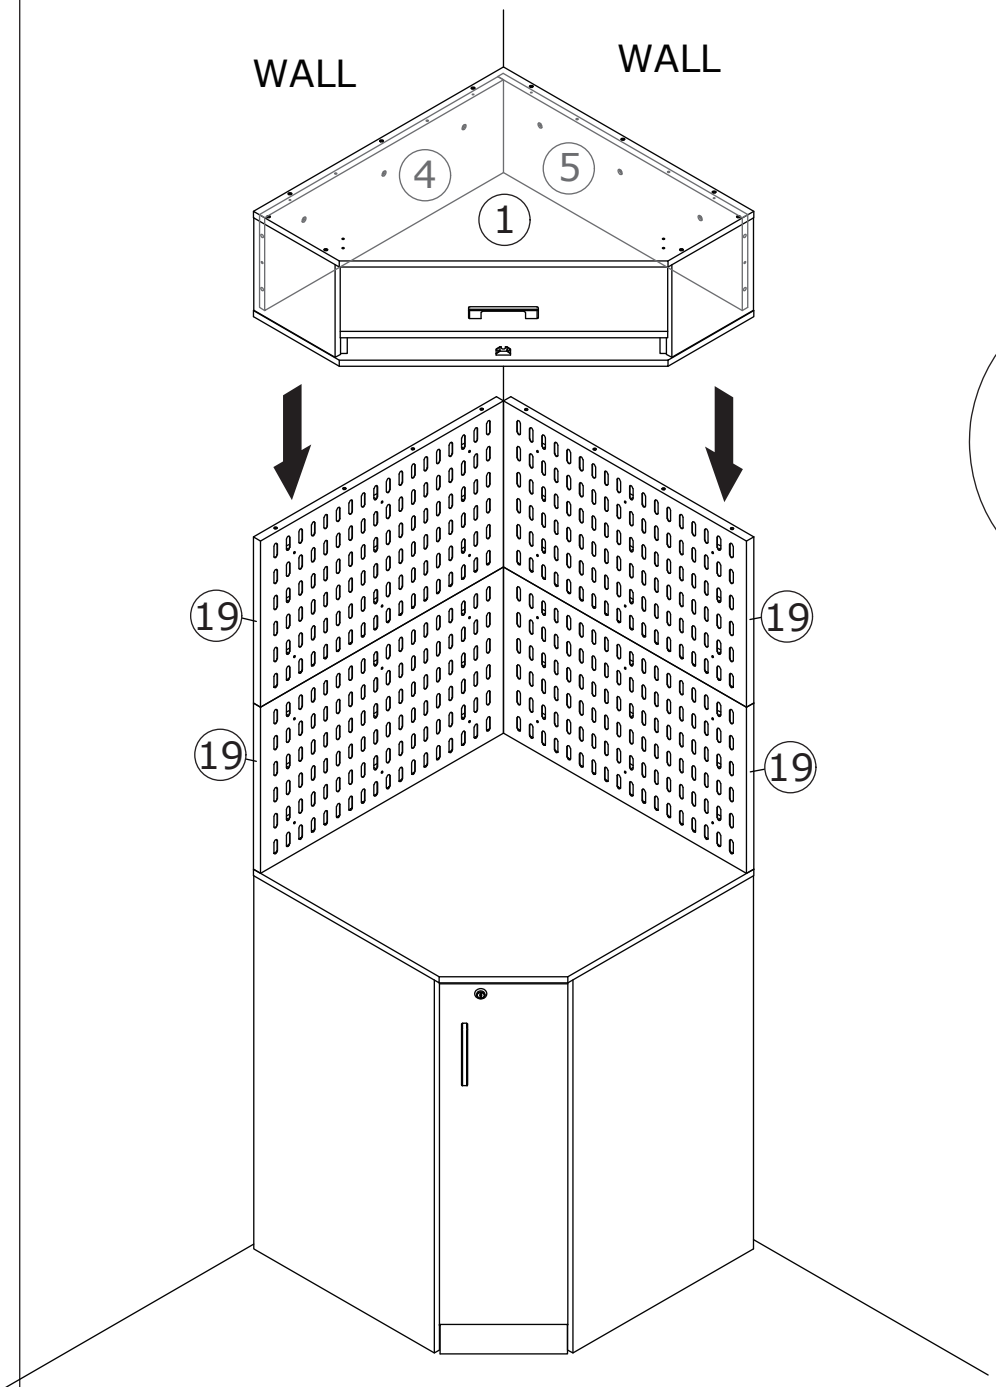


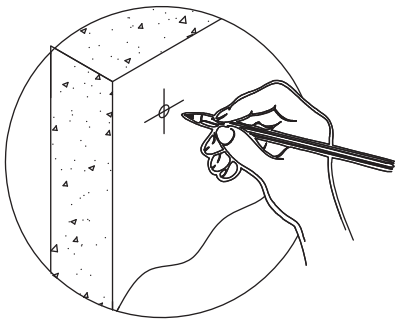

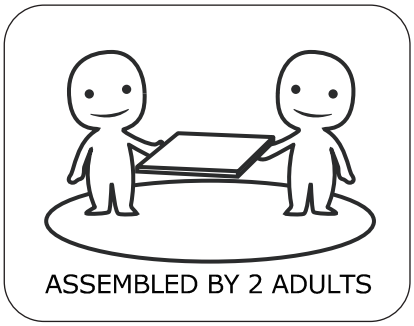



42

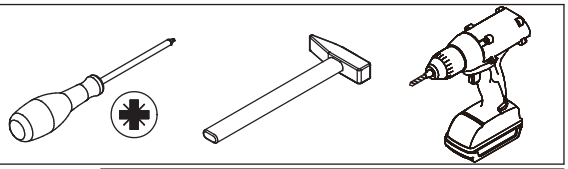W x 6	X x 6	
		
∅8 x 80 mm	∅5 x 80 mm	

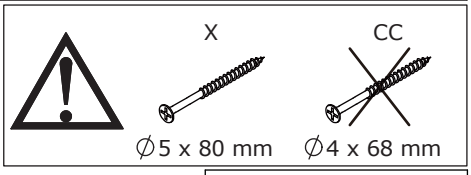

Drill holes to wall, and insert the expansion screw (W).
Install the unit onto the wall using screw (X).

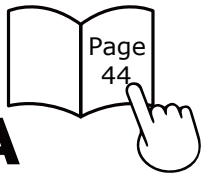

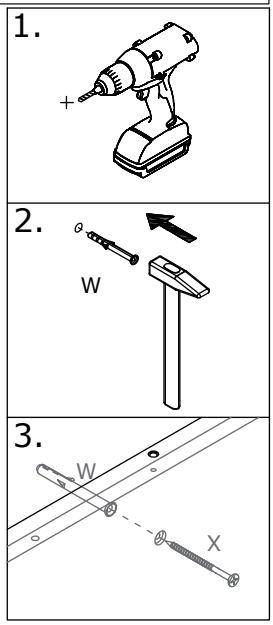

Option A

43

CC x 6	EE x 6	
∅4 x 68 mm		

CC ∅4 x 68 mm

X ∅5 x 80 mm

Drill holes to wall, and insert the expansion screw (EE).
Install the unit onto the wall using screw (CC).


Page 44

1.


2. EE


3. EE CC


Option B

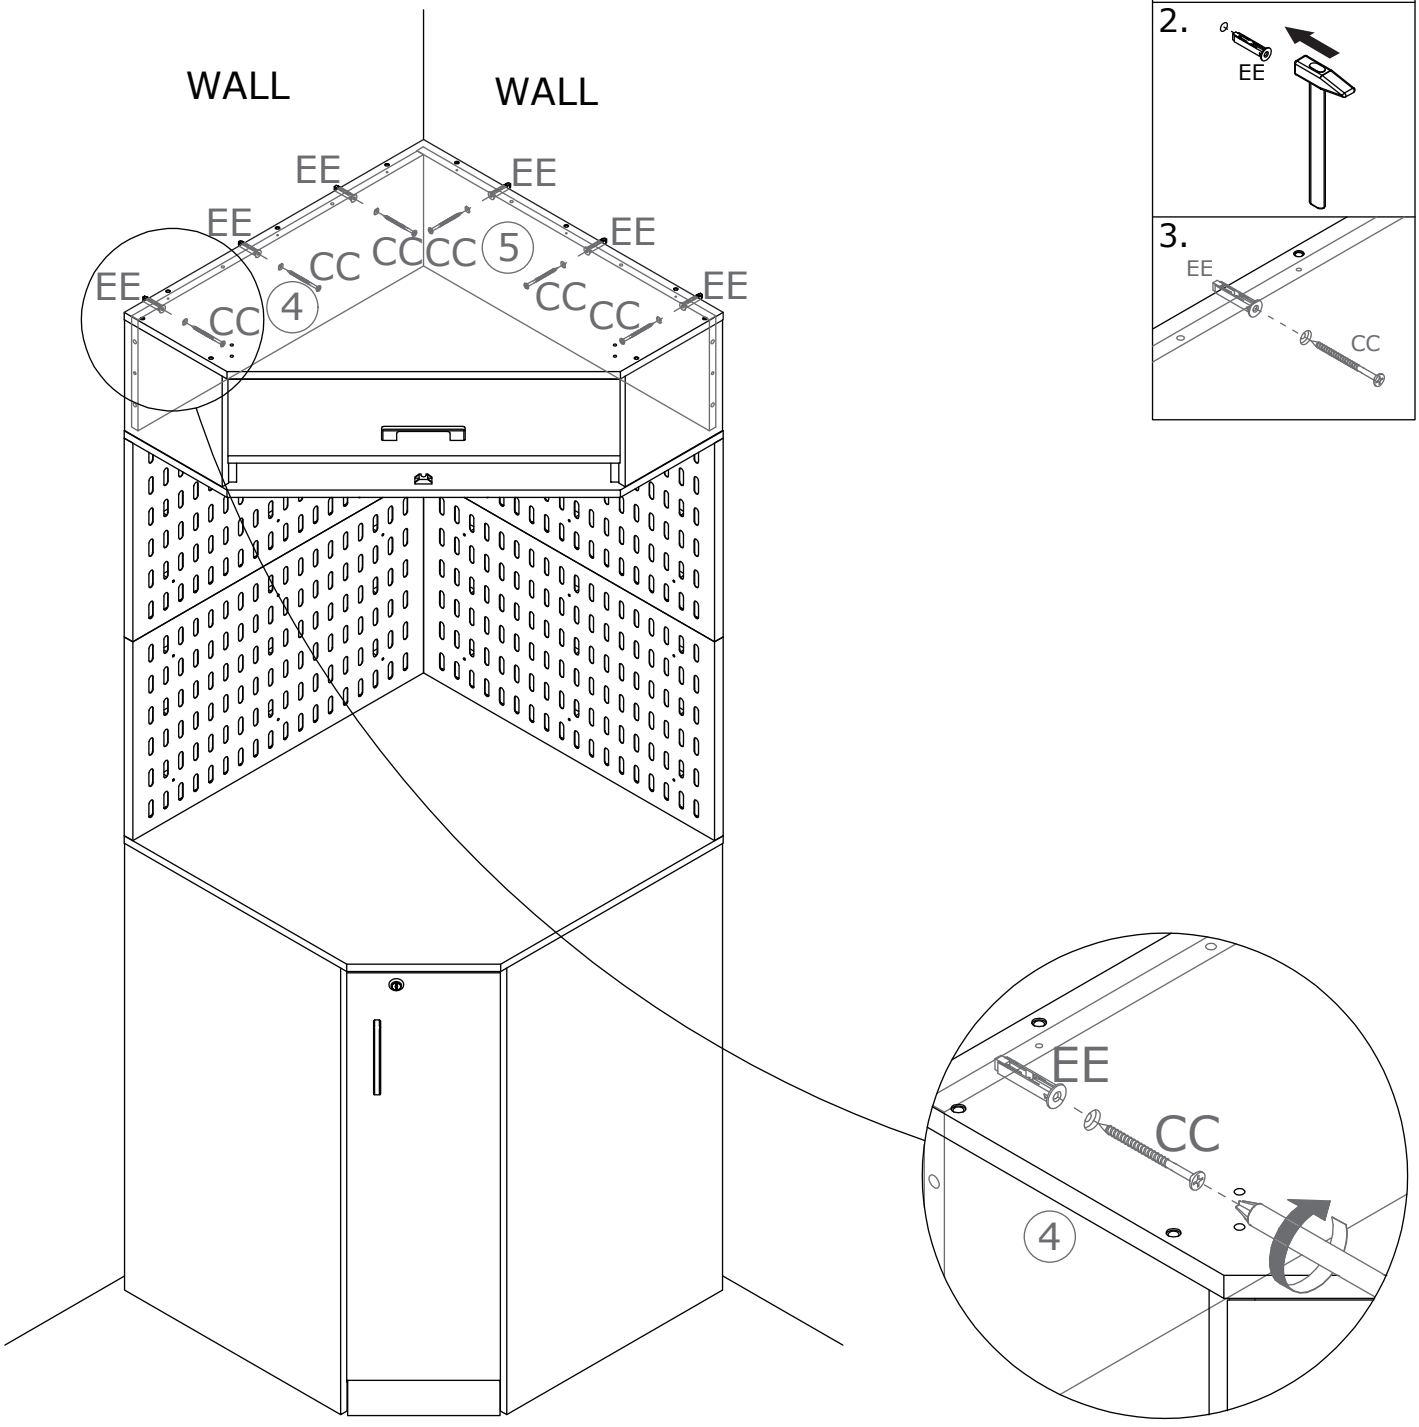


44

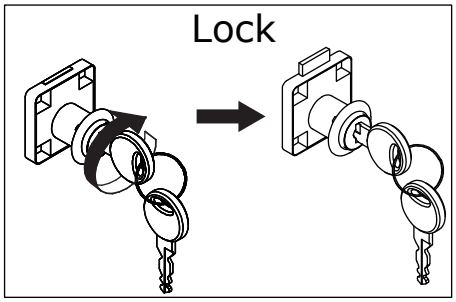

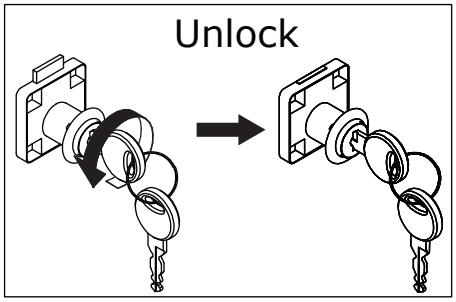


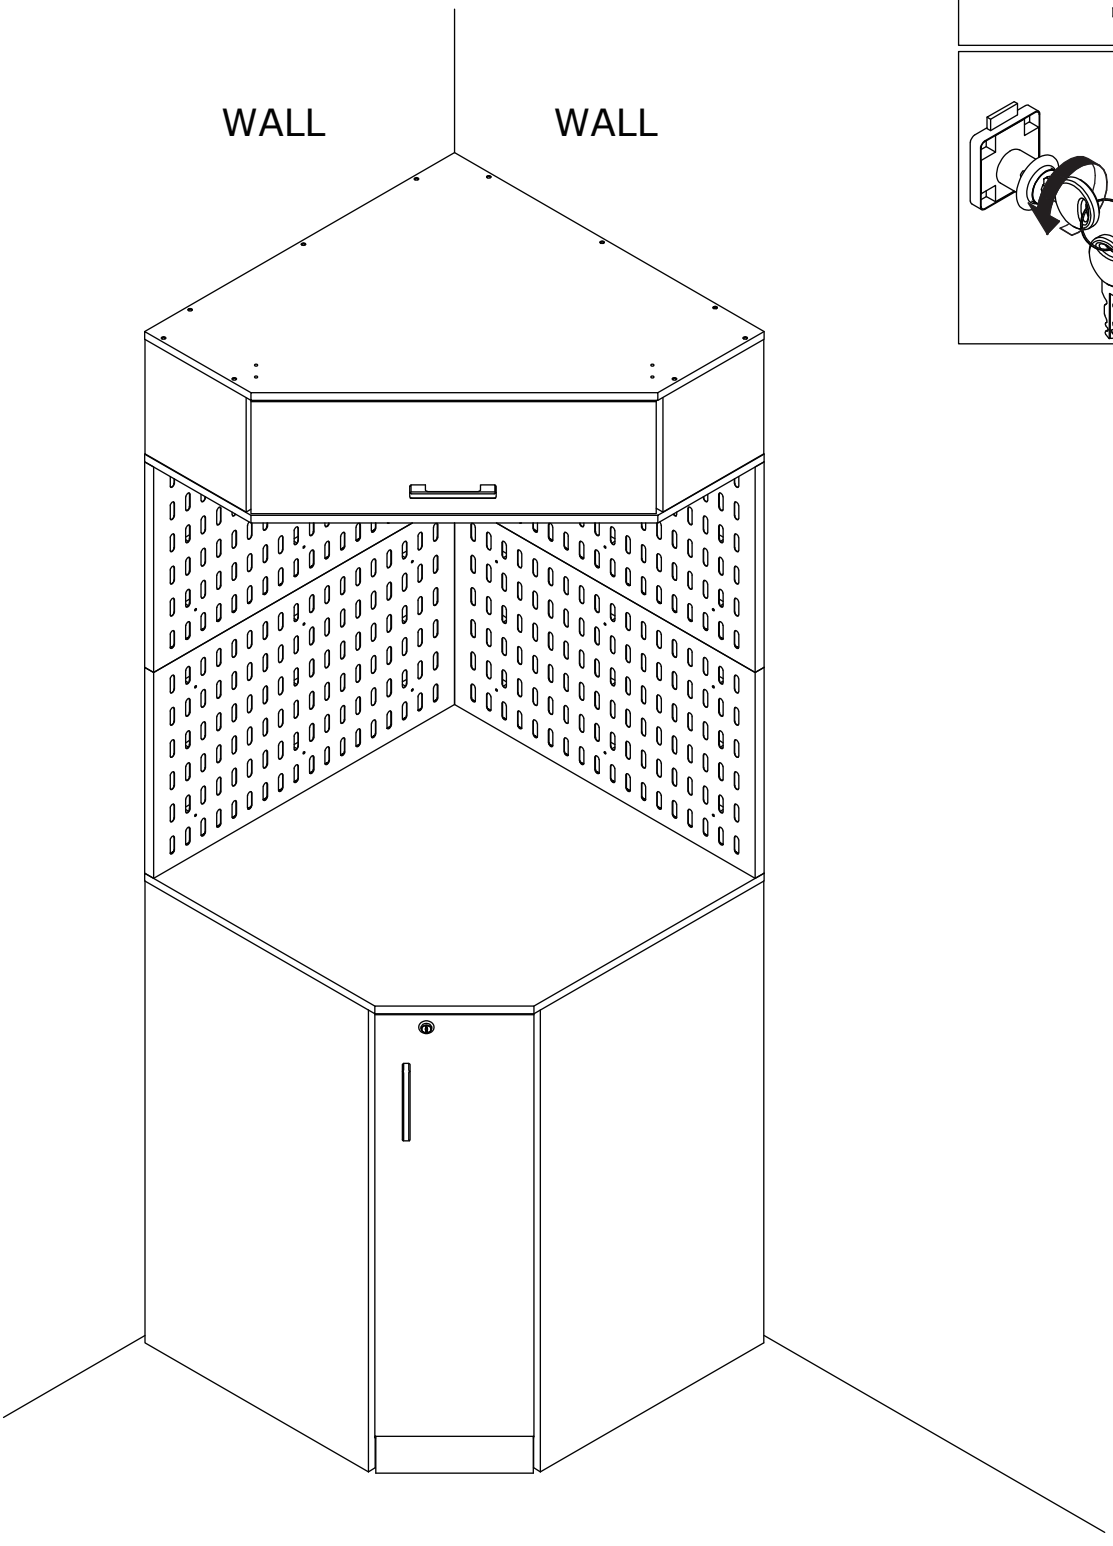


45



If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

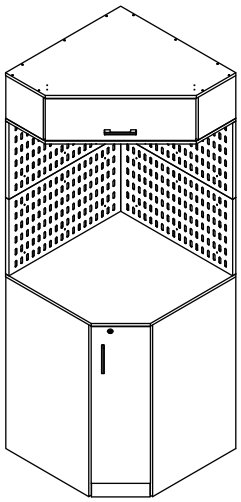

Or you can search this link to view the teaching video.
https://youtu.be/n0Lb36SoODM

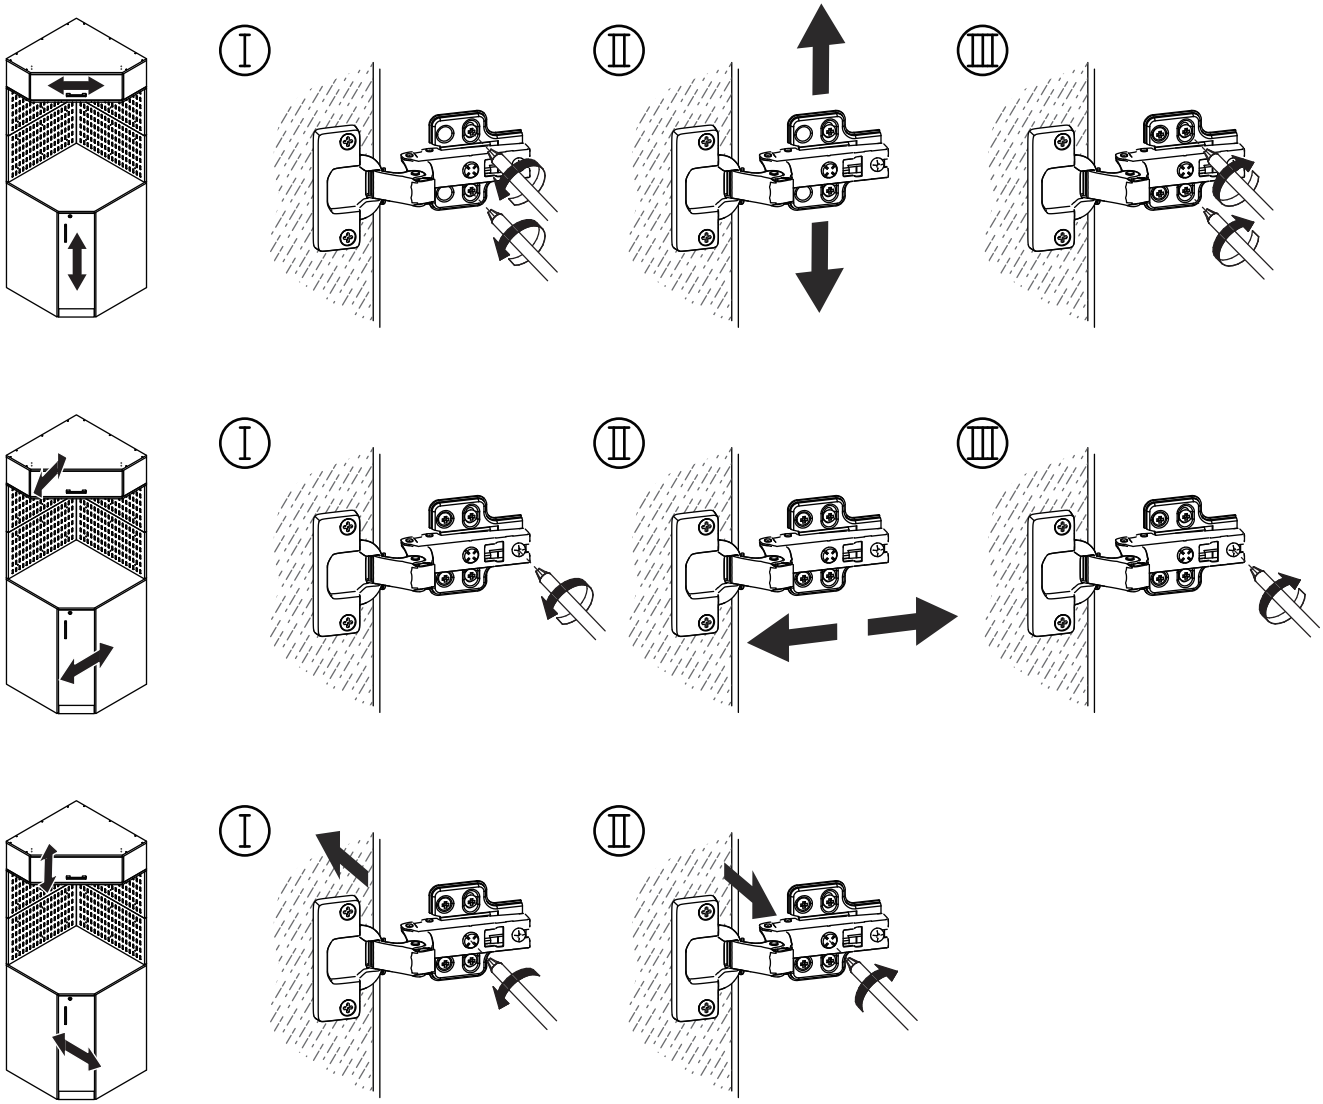

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068