Porable blender

User Manual
SF718

support@praskylife.com

praskylife.com

1-866-228-7981



CUSTOMER SERVICE & WARRANTY

Thank you for choosing Prasky Blender and becoming our valued customer. At Prasky, we value every customer's trust and are dedicated to delivering the best in both product performance and customer support.

Prasky offers a 1-year warranty + 30-day return/exchange policy lifetime support for this product. We will provide the best service for our brand's customers.

For any user manual problem, missing accessories, damaged package, any questions or feedback, or if you want to extend the warranty for one more year. Please contact the brand support team at:

support@praskylife.com
praskylife.com
1-866-228-7981

In order to help you solve the problem efficiently, please send us the following information when you contact us:

*Order number.
*A brief description of the problem: problem + the efforts you tried+photos/video.

CONTENTS

BEFORE USE

Important Safeguards ---------- 01

PRODUCT OVERVIEW ---------- 03

HOW TO USE

How to Use ---------- 03

Cleaning And Maintenance ---------- 06

Other

Product Parameters ---------- 06

Common Problems and Solutions ---------- 07

Important Safeguards

WARNING: This device contains electrical connections and moving partsthat may pose a risk to the user. Avoid the risk of serious injury whenusing the blender. Basic safety precautions should be followed, includingbut not limited to the following:***Please read all instructions, safety precautions and warnings beforeoperating.

***Please take your time and use caution during unboxing and equipmentinstallation. This device contains sharp blades that may cause injury if nothandled properly.

***Inventory everything to make sure you have all the parts you need tooperate your equipment correctly and safely.

1.**Do not** allow children to operate or use this appliance as a toy. Closesupervision is necessary when any appliance is used near children.

2.**Do not** operate the blender with a damaged power cord or plug, or ifthe blender has malfunctioned, been dropped, or damaged in any way.

3.**Do not** let the cord hang over the edge of the table or counter. Do notlet the cord come into contact with a hot surface, including the stove.

4.**DO not** operate this appliance on or near any hot surfaces (such as agas or electric burner or in a heated oven).

5.**Do not** leave foreign objects, such as spoons, forks, knives, or the lidplug, in the container as this will damage the blades and other compo.nents when starting the machine and may cause injury.

6.**DO not** use the appliance if the blade assembly is bent or damaged

7.**DO not** attempt to remove the container and lids from the motor basewhile the blades are still spinning. Allow the appliance to come to a complete stop before removing lids and containers.

8.**Do not** attempt to Defeat the interlock mechanism.

9.**DO not** use your container to heat ingredients.

10.Do not attempt to sharpen blades.

11.Do not store ingredients in containers with blades before or afterblending.Some foods may contain active ingredients or release gasesthat can expand if placed in a sealed container, causing excessive pressure buildup that may pose a risk of injury.

12.Do not submerge the appliance or allow the power cord to contactany form of liquid to protect against the risk of electric shock.

13.Do not use this product outdoors or for commercial purposes. For indoor household use only.

14.Do not use the appliance if the power cord is damaged. It must be replaced by the manufacturer or a qualified person to avoid hazard.

15.Do not use accessories or attachments (including blending jars) not recommended by the manufacturer, as this may cause fire, electric shock, or injury.

16.Do not operate the blender when the jar is empty or without liquid.

17.Do not operate the blender without the lid properly in place.

18.Do not fill liquid past the maximum fill line.

19.Never operate the appliance on soft surfaces. Always use the appli.ance on a dry level and firm surface.

20.Never leave an appliance unattended when in use.


Safety Note:

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility. If the thermal cut-out operates during using, please switch off the product and unplug the plug from the supply main, let the product cool down before use.

Single use: Run for max 3 minutes, then cool for 30 minutes.

Cyclic use: Run for 1 minute, rest for 1 minute. After 10 cycles, rest for 30 minutes.


PRODUCT OVERVIEW



Blending jar lid




Blending jar



Blade set

Blades

Blade base

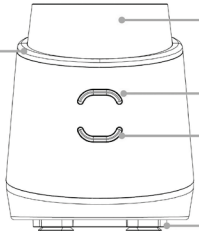

Main housing


Decorate ring

Indicator light

ON/OFF button

Foot pad

to-go cup

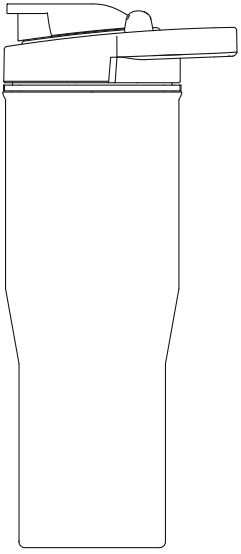


How to Use


Step 1: Wash the fruit, peel, remove pits or seeds, and cut into approximately 1cm × 1cm × 1cm cubes.



Step 2: Place the prepared fruit into the blending jar. Make sure the total amount does not exceed one-third of the blending cup's capacity. Then add water or milk — do not exceed the maximum fill line.

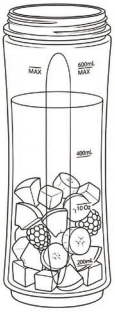


Step 3: Securely screw the Blade base onto the blending jar.

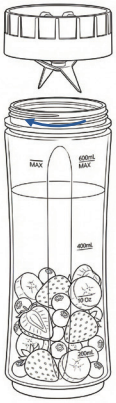


Step 4: Rotate the whole blending jar set clockwise into mainhousing by aligning 3 feet of Blending jar with 3 holes ontop of Main housing.




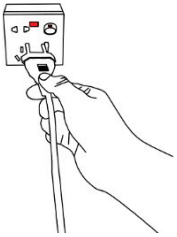

Step 5: Plug the adapter into a power outlet.Press the button on the base to start blending. Once the ingredients are fully mixed, press the button again to stop.

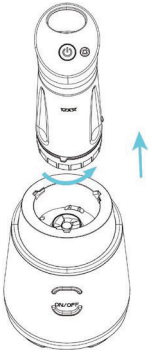

Step 6: Pour out plug from power supply. Rotate the whole blending jarset anti-clockwise and take it out from main housing.The Blending jar base is detachable by rotating anticlockwise, it can be cleaned easily.
For on-the-go convenience, you can also use the included Blending jar lid to seal the jar and take your drink anywhere.

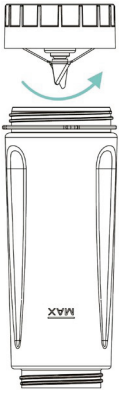

CLEANING AND MAINTENANCE

1. Before cleaning, make sure the power switch and speed regulatora-rein “0" position, remove the plug from the supply main.

2. Use water to clean the mixing container, without chemicals or any othertype of liquid.

3. Cleaning motor base only use the dry cloth, never use wet cloth cleanthe motor base, orimmerse the motor base into water.

4. lf the product operating with abnormal noise, or shaking seriously. Pleasestop use this product, and send back to the service agent to check it.Never repair the product by yourself.

Storage

After use the product, please repack the product, and store it in a dryplace and avoid sun exposure.

Make sure the children could not reach the product.

Keep the product dry before repack.

Product Parameters

Power supply	120V 50-60Hz
Average Power	300W
Number of speeds	22000
Maximum working hours	≤3min
Cool down time	≥30min
Capacity	600ML
Power cord length	1M

Common Problems and Solutions

Cases	Consider possible reasons	Solution
Does not work even when connected to power	Is the power plug disconnected from the outlet?	Make sure the power is properly connected.
Idling (doesn't stir well)	Is the amount of fluid too low?	Please add an appropriate amount of liquid (not less than 50ml).
	Too many ice cubes?	Please reduce the number of ice cubes.
	The safety device was activated due to the use of too large or too much material.	Cut the material into small pieces and wait about 10 minutes for the body to cool before use.
	Is it used continuously?	Please wait for the machine to cool down before use.
Water leakage	Is the cover tight?	Please tighten the cover.
	Is the cup out of place?	Please place the cup correctly on the machine.
	Does the blade wobble?	Prolonged use may cause wear to the blade.
Abnormal sound	Is the material too large or too much?	Cut the material into small pieces/reduce.
	Are the ice cubes too big?	Will cause damage to the blade, please do not use ice cubes that are too large.
Vibration is severe	Are you using the product on uneven or unstable surfaces?	Please use it on a level table.
	Is the food too big or too much?	Cut the material into small pieces and reduce.
Machine heat/odor	Is the food too big or too much?	Cut the material into small pieces and reduce.
	Is the continuous run time too long and the rest time too short?	The maximum operating time is 3 minute. Please wait about 30 minutes for the body to cool down before use.

PRASKY®

Learn more about **Prasky,** please visit us at

praskylife.com



Support Online Instant Chat

24/7 SUPPORT

support@praskylife.com
praskylife.com
1-866-228-7981

c ETL us LISTED Intertek 5001694 CONFORMS TO UL STD.982

Made in China