ASSEMBLY INSTRUCTION

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch foors. We recommennd using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh creansers or polish.
- ⊘  • Do not plase furnimture under direct sunlight.
- ⊘  • Do not plase furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside. For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.






- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.





DINING CHAIR
N768P519418

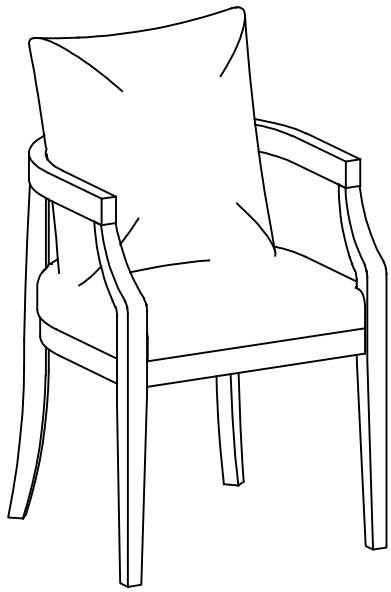

Parts List

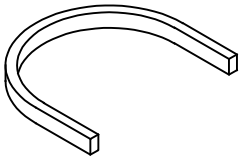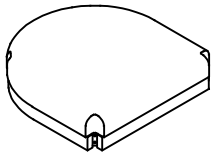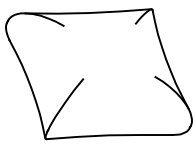Label	Picture	Description	QTY
A		Backrest	1
B		Right front leg	1
C		Left front leg	1
D		Back leg	2
E		Seat cushion	1
F		Back pillow	1

HARDWARE LIST

Label	Picture	Description	QTY
①		Bolt (1/4" x40mm)	4+1
②		Bolt (1/4" x60mm)	4+1
③		Spring washer (10mm)	8+1
④		Flat washer (19 mm)	8+1
⑤		Allen wrench	1+1
⑥		Metal bracket	4+1
⑦		Screw (4x30mm)	8+1
⑧		Felt pad	2

Assembly Preparation

Before Begining Assembly:




A B C D E F



①x5 ②x5 ③x9 ④x9 ⑤x2 ⑥x5 ⑦x9 ⑧x2


not included

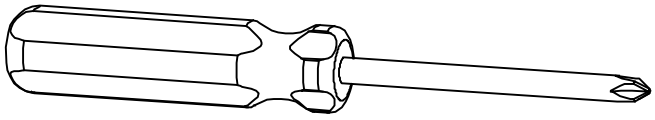

- Read instructions, cover to cover-
- Have 2 adults on hand fo assembly-
- Do not assemble on flooring of carpet-
- Assemble on a clean non-marring suface (packing foam)-
- Save all packaging until finshed-

Assembly Steps


Overview

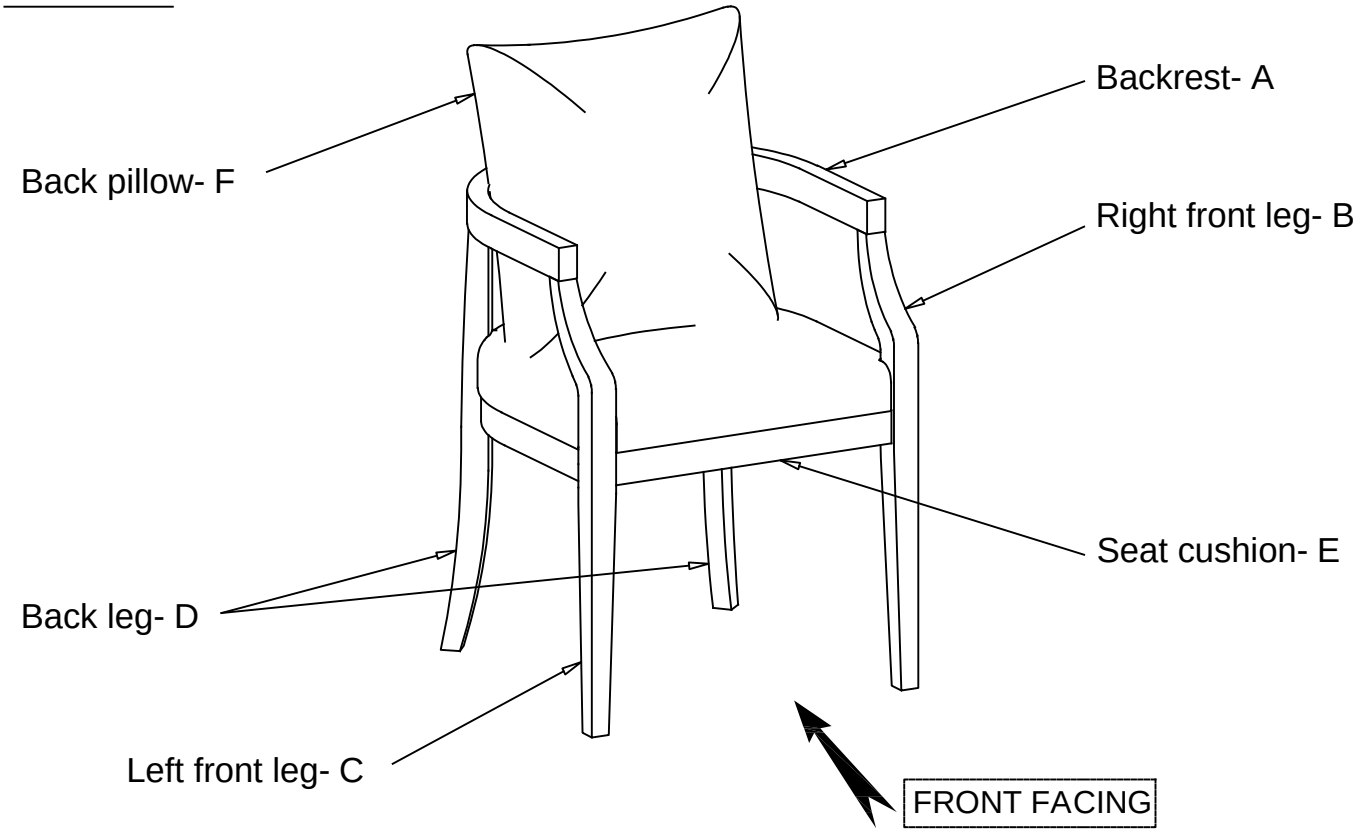

This chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the chair parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


CAUTION : When tightening these bolt, tighten sequentially.
DO NOT tighten any bolt fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the bolt and execute this same process.
WARNING!! IF IT IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Step 1

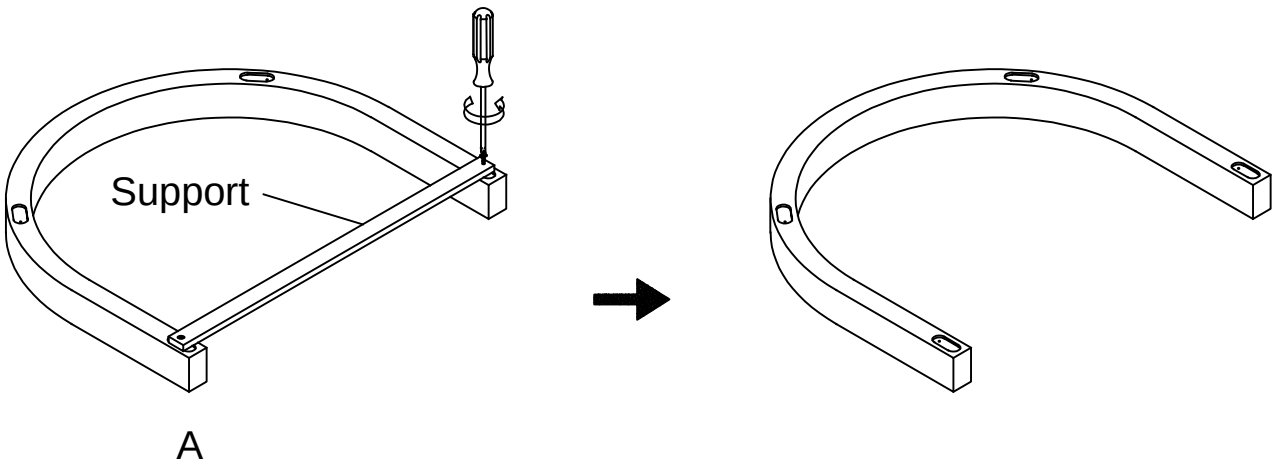


Remove the screws and support beams on the backrest.

Step 2

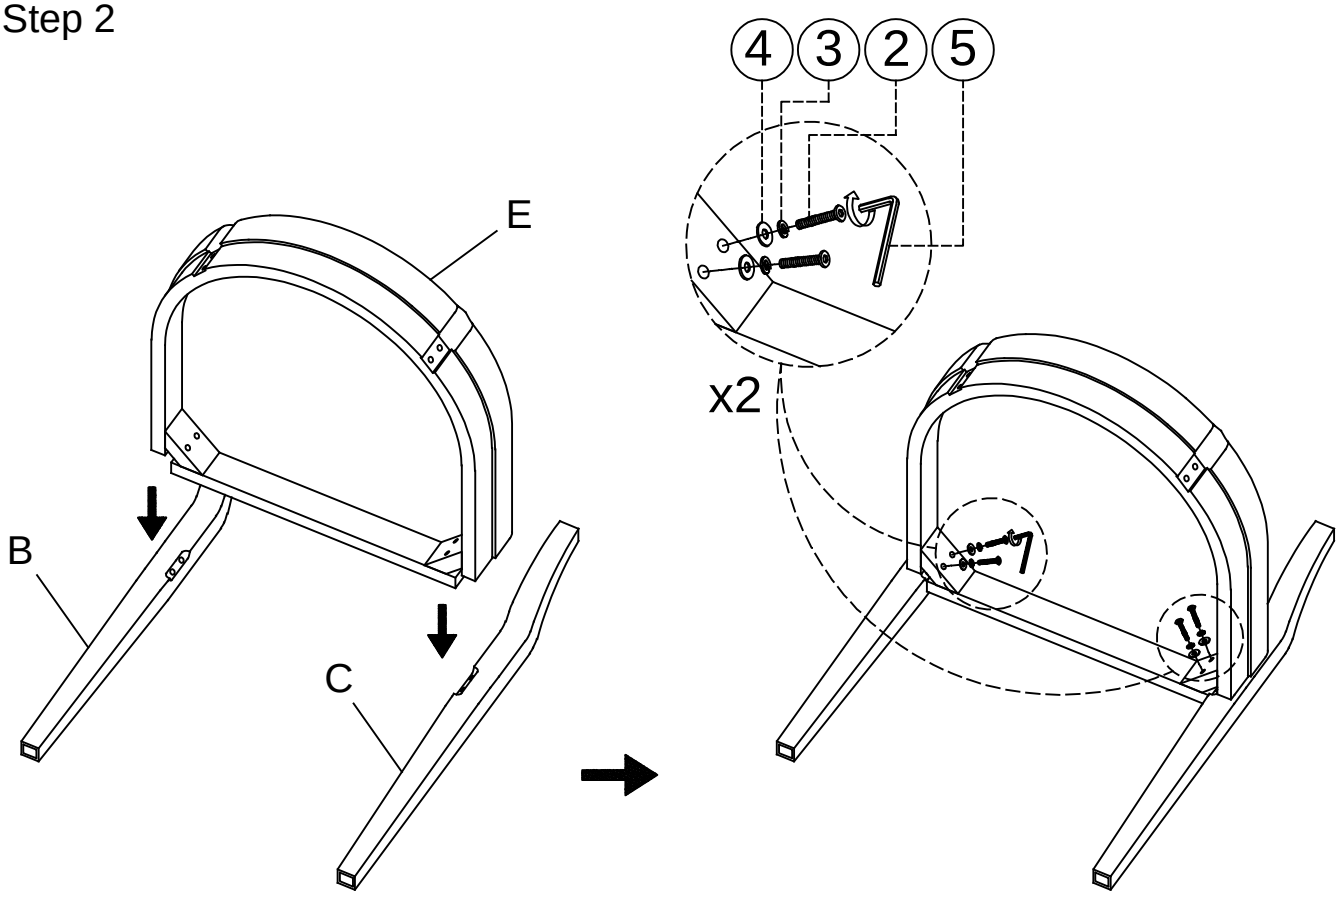


Attach the right front leg B and left front leg C to the seat cushion E.
Using bolt ②, spring washer ③, Flat washer ④and allen key ⑤. Do not full tighten.

Step 3

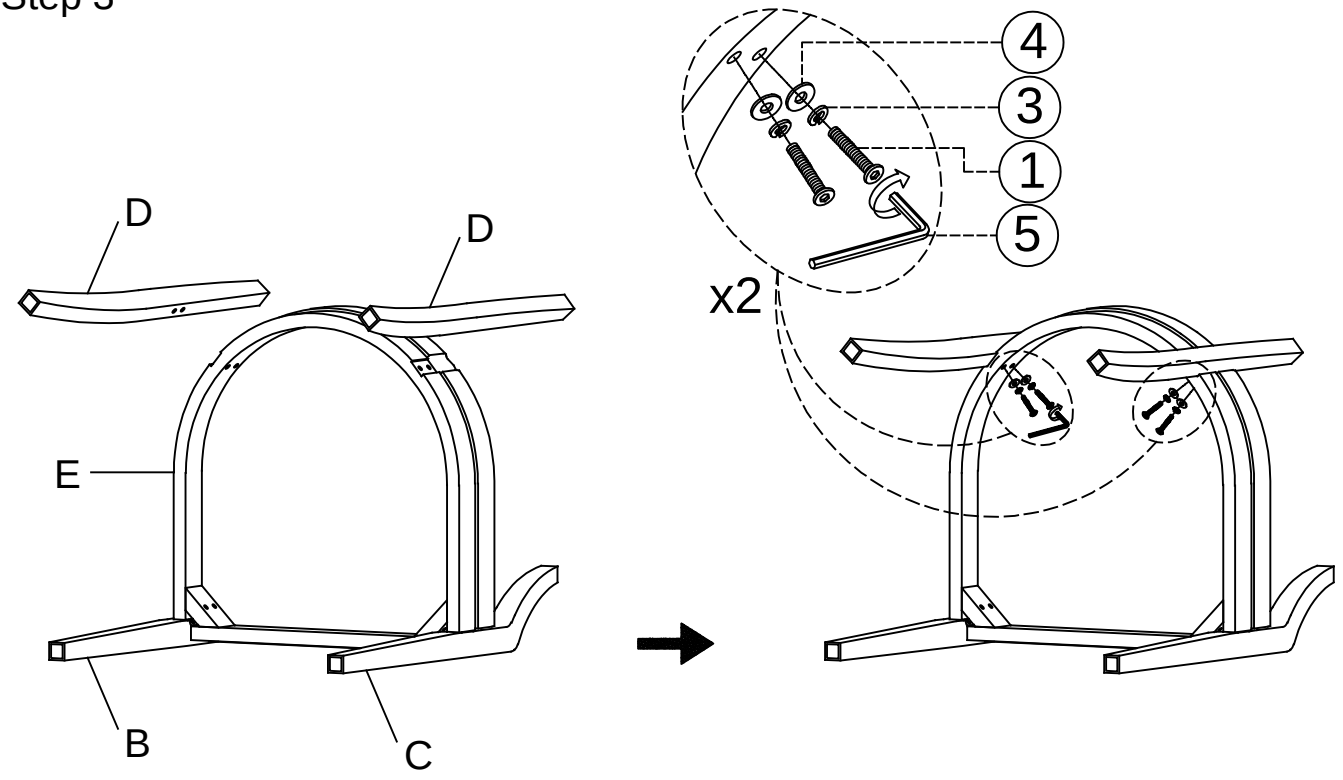


Attach the back leg D to the seat cushion E.
Using bolt ①, spring washer ③, Flat washer ④and allen key ⑤. Do not full tighten.

Step 4

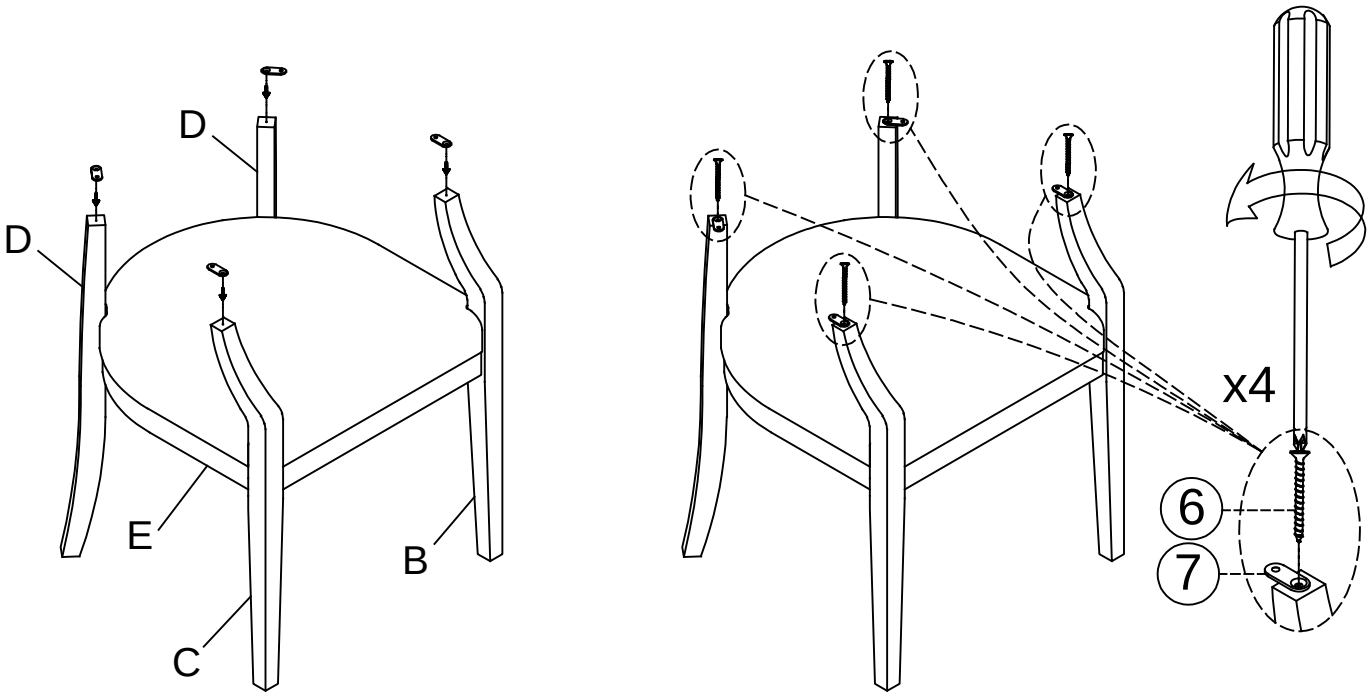


Stand the chair up. Attach the metal bracket ⑥ to all legs.
Using screws ⑦ and screwdriver. Fully tighten

Step 5

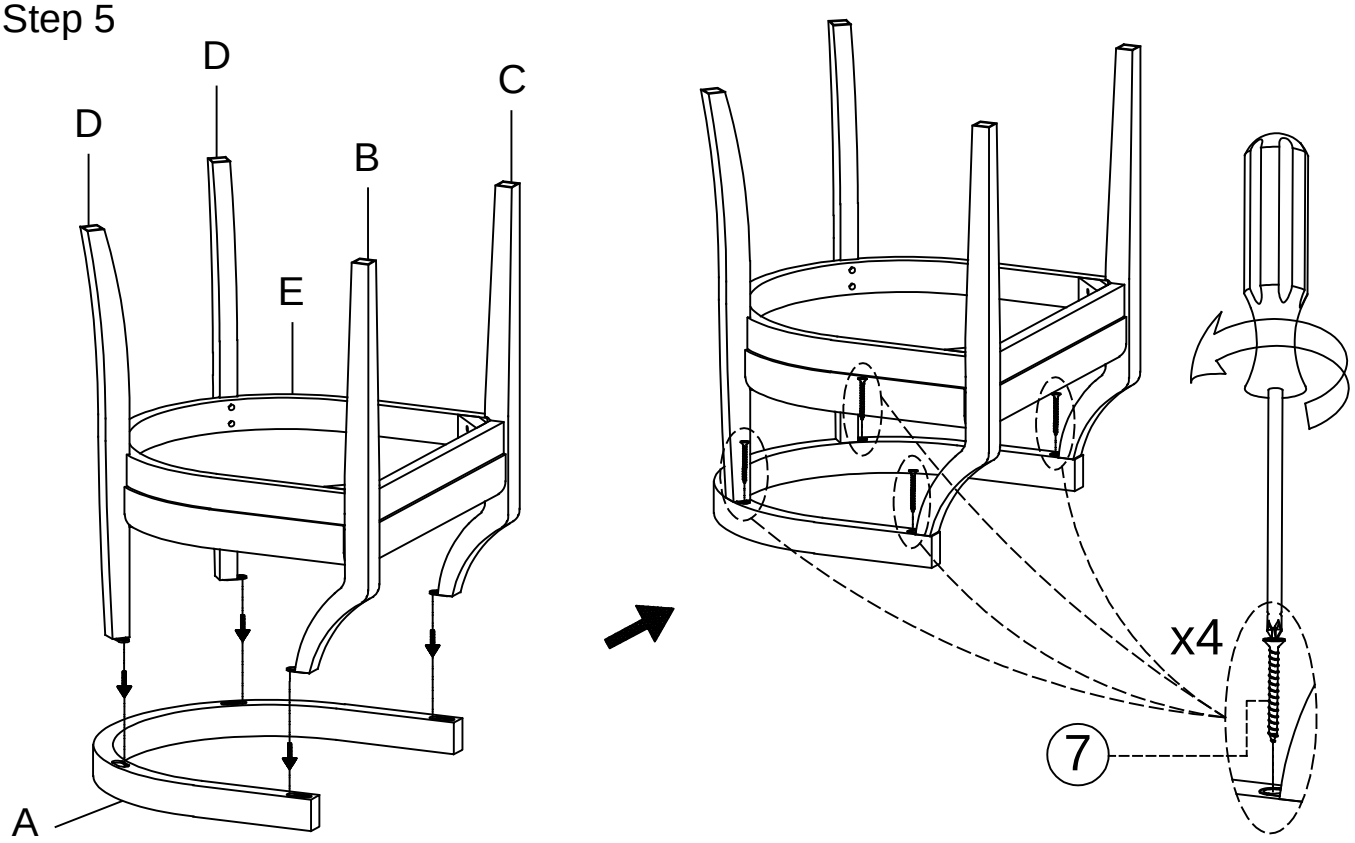


Attach the backrest A to all legs.
Using screws ⑦ and screwdriver. Fully tighten

Step 6

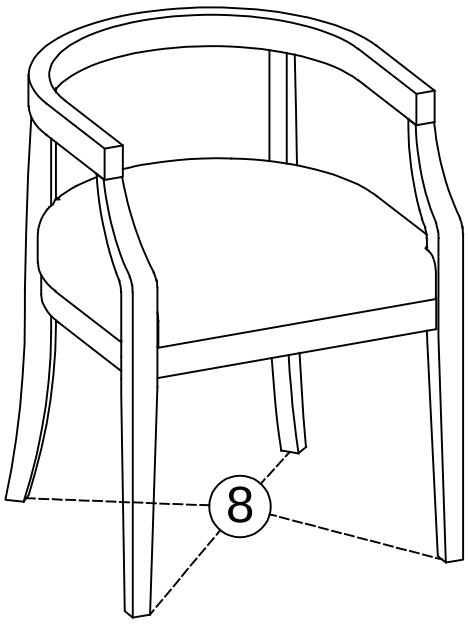

After checking the chair, if no problem, tighten all the bolts.
Stand the chair up .
Place the chair on a LEVEL SURFACE to check for wobbles .
Note: If missing or fall out the felt pad on the rear legs, attach new one ⑧ .

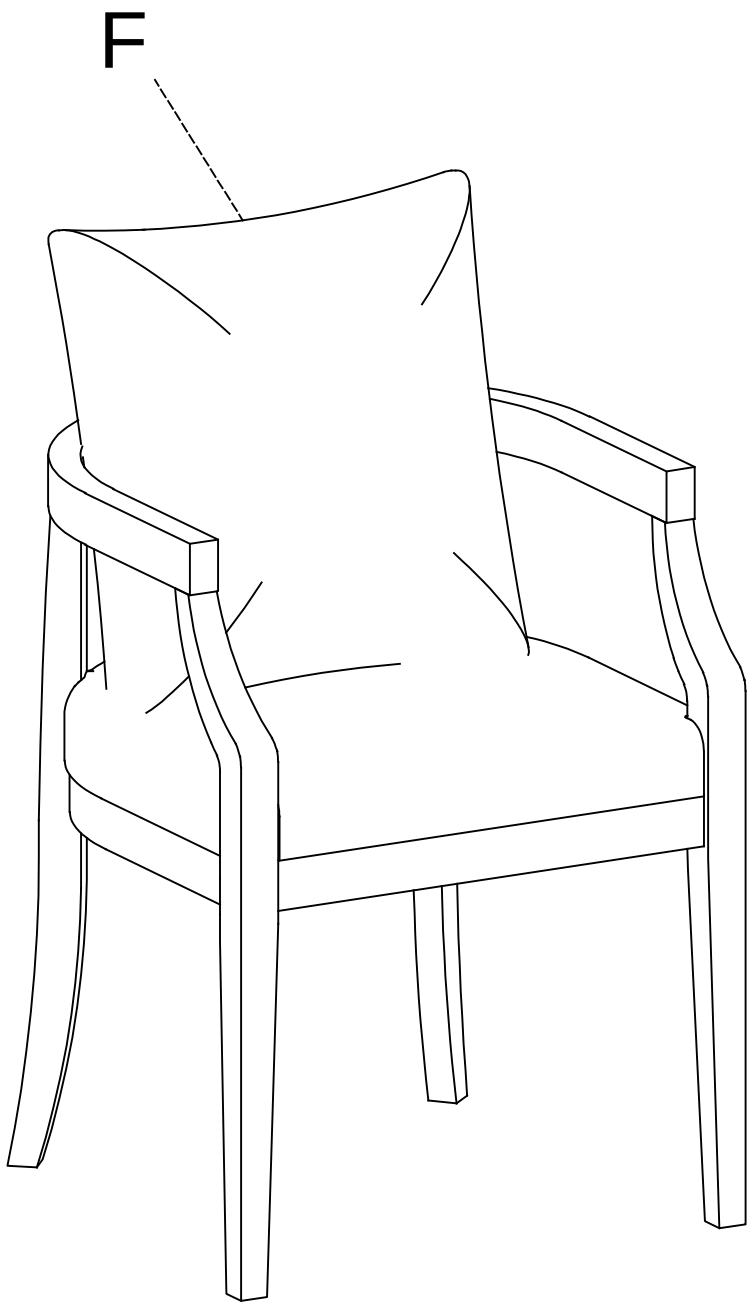

Place the back pillow F on the chair
Your chair is ready for use .
This chair can only be used on a flat, level surface.