



# TV / Entertainment Stand

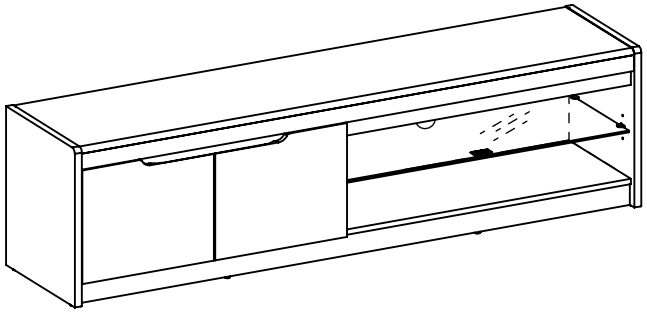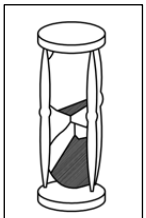

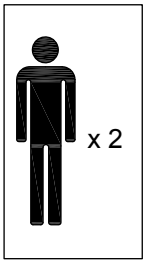



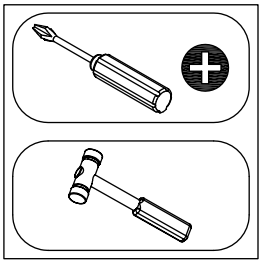



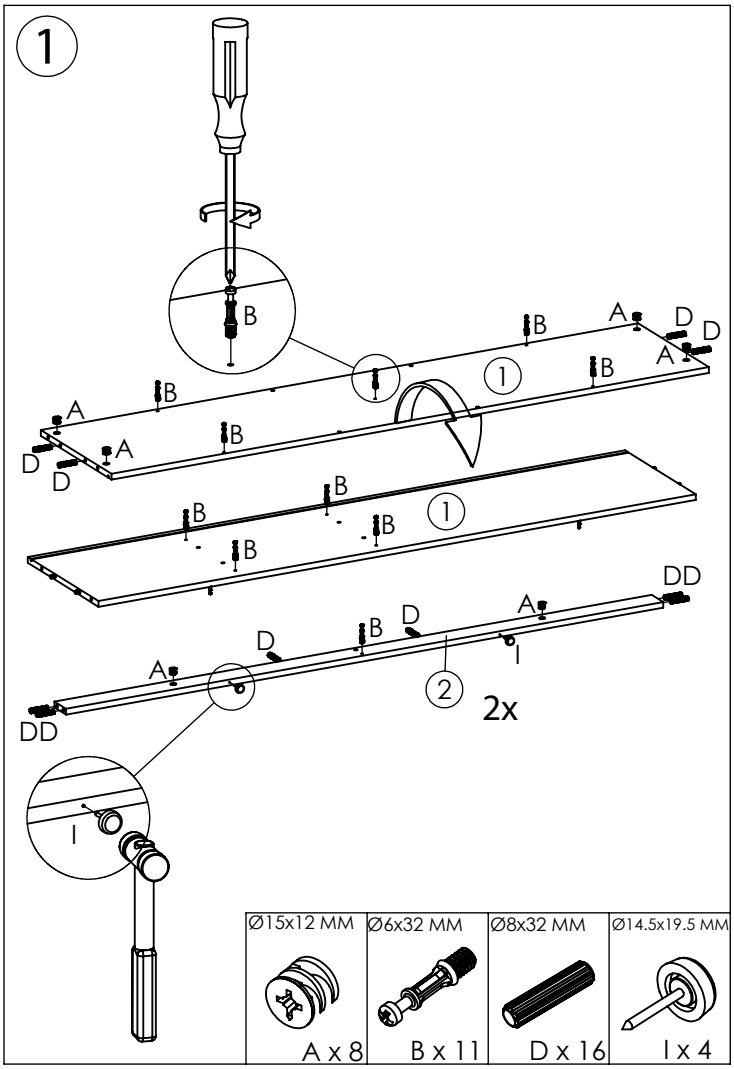
**USEFUL HINTS BEFORE YOU START:**

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth.
   Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.

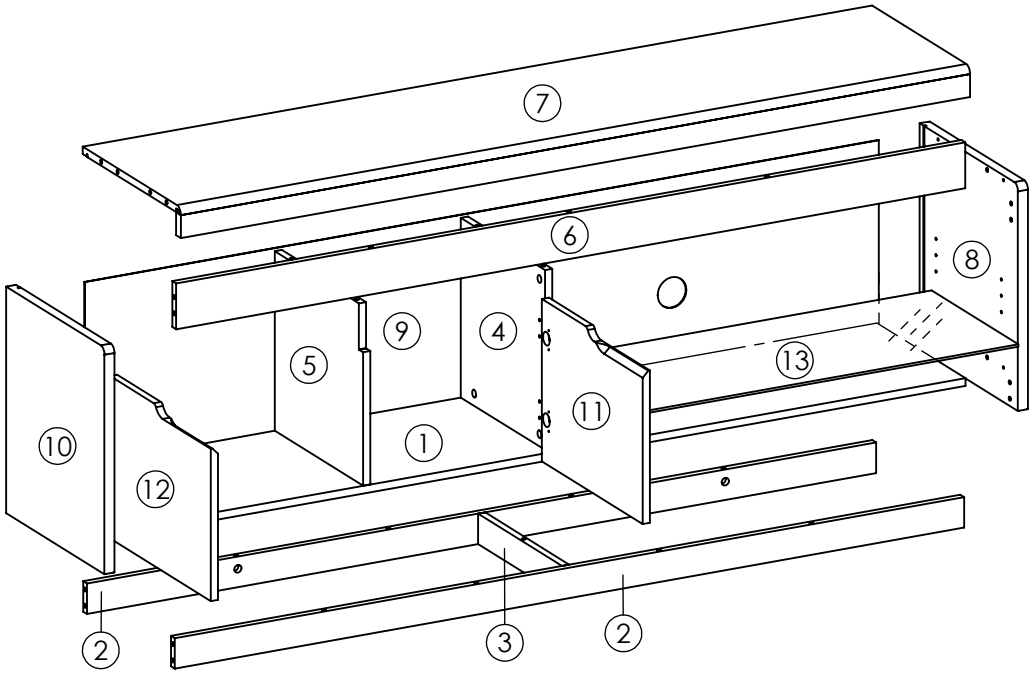



| | | | | | |
|---|---|---|---|---|---|
| Ø15x12 MM  A x 24 | Ø6x32 MM  B x 24 | Ø18x5 MM  C x 24 | Ø8x32 MM  D x 36 | Ø6x13 MM  E x 16 | Ø5x16 MM  F x 8 |
| 14x13x9 MM  G x 8 | 85x50x27.5 MM  H x 2 | Ø14.5x19.5 MM  I x 8 | Ø21x20 MM  J x 4 | 92x50x23 MM  K x 2 | |

1





| Ø15x12 MM | Ø6x32 MM | Ø8x32 MM | Ø14.5x19.5 MM |
|---|---|---|---|
| A x 8 | B x 11 | D x 16 | I x 4 |

2

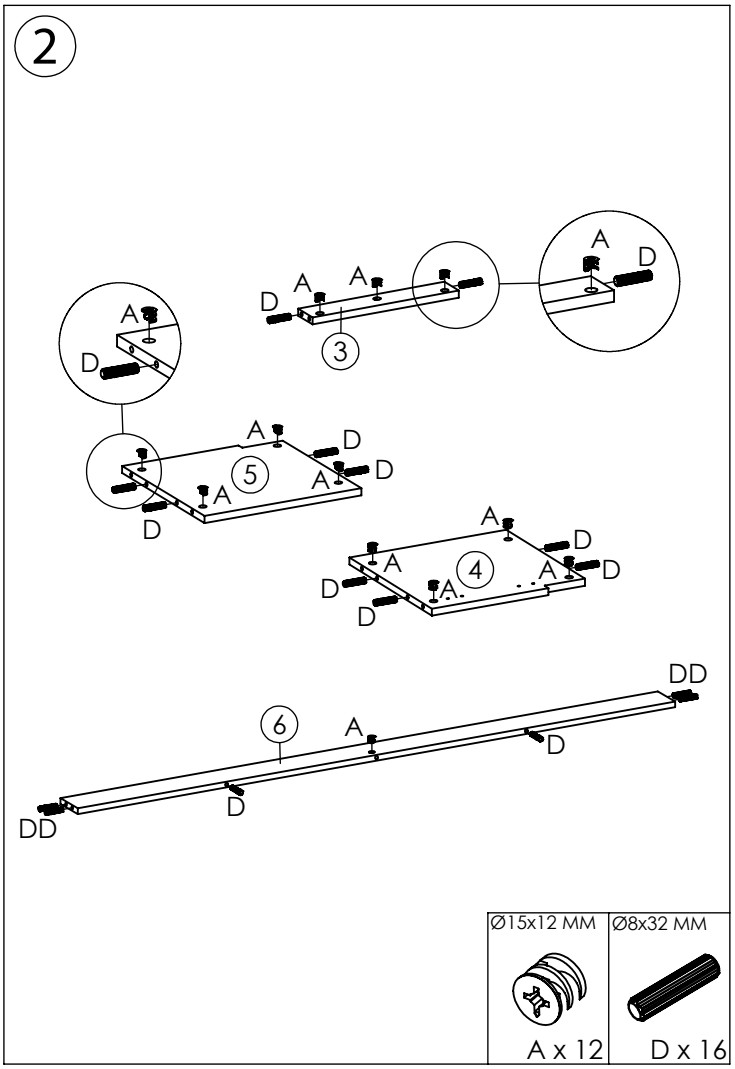



| Ø15x12 MM | Ø8x32 MM |
|---|---|
| A x 12 | D x 16 |

3

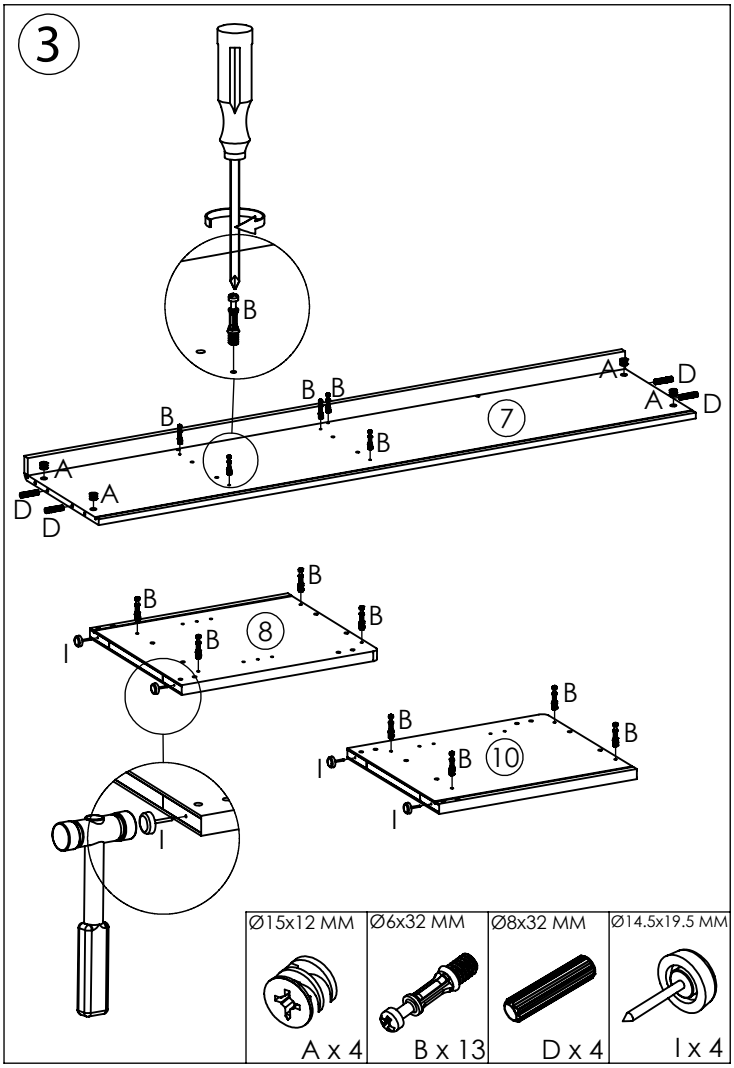



| Ø15x12 MM | Ø6x32 MM | Ø8x32 MM | Ø14.5x19.5 MM |
|---|---|---|---|
| A x 4 | B x 13 | D x 4 | I x 4 |

4

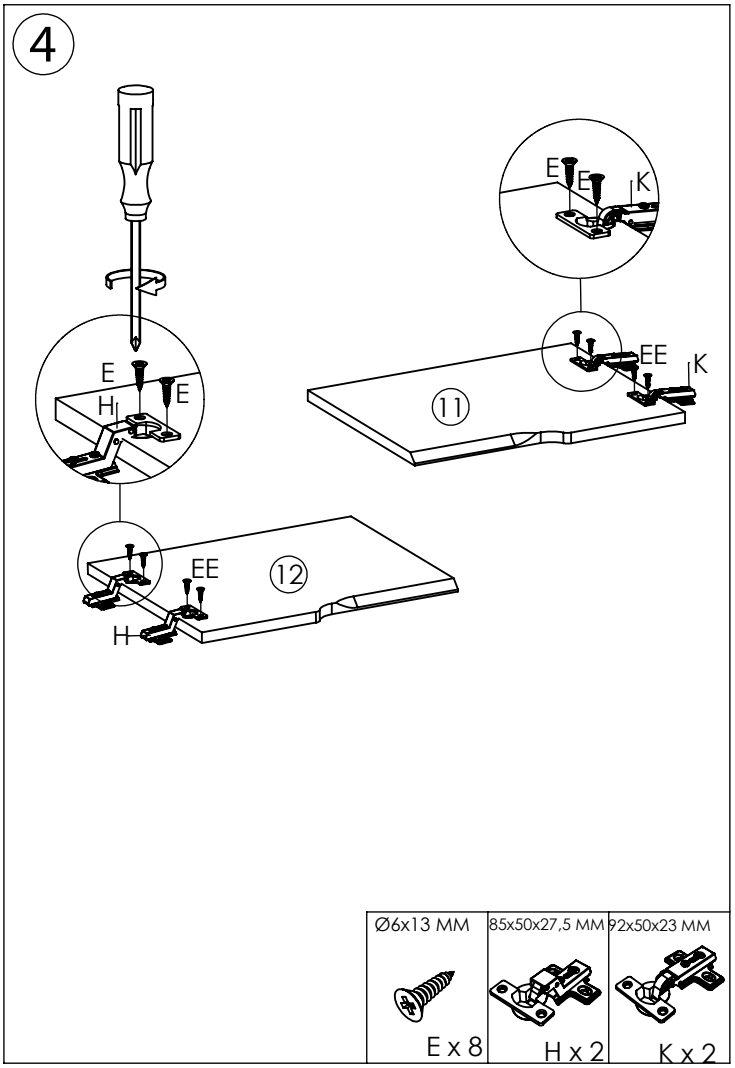


| Ø6x13 MM | 85x50x27,5 MM | 92x50x23 MM |
|---|---|---|
| E x 8 | H x 2 | K x 2 |

5

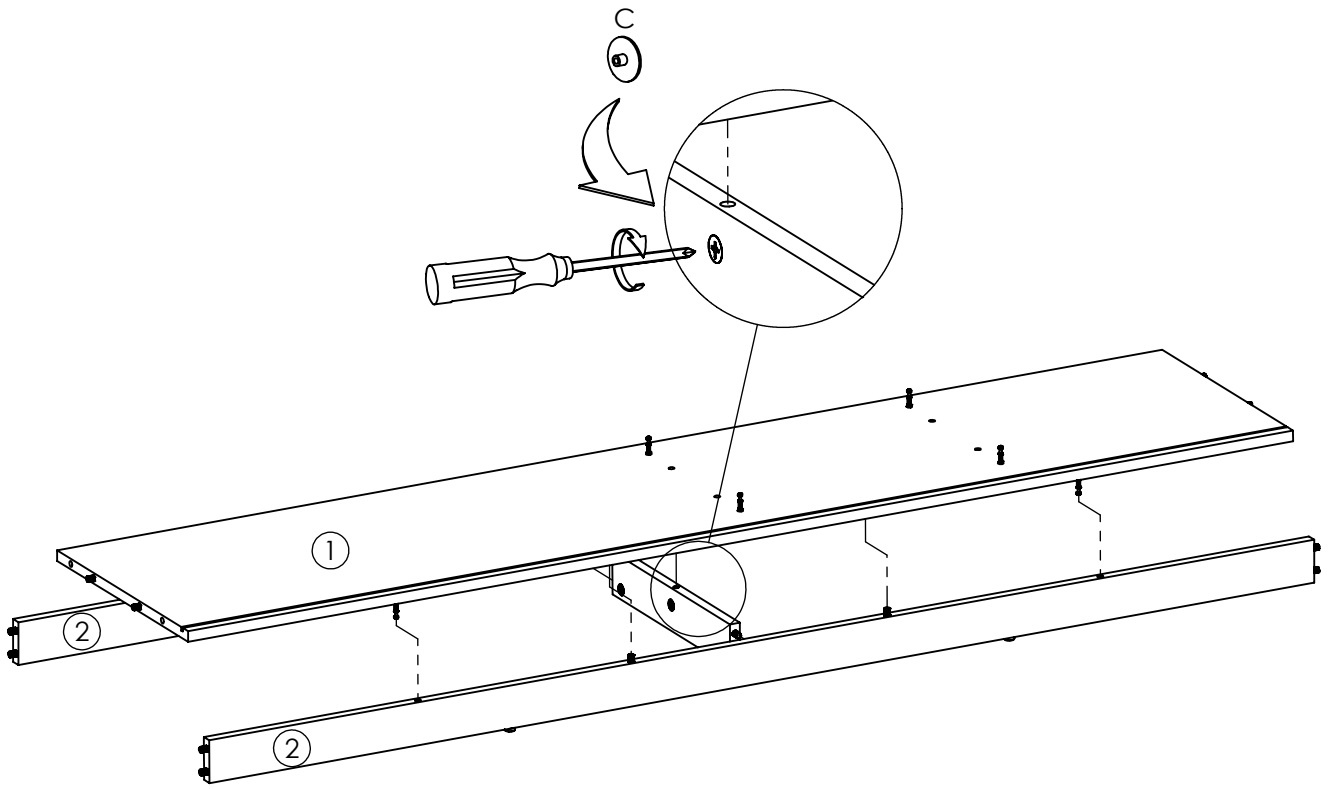



Ø18x5 MM



C x 7

6

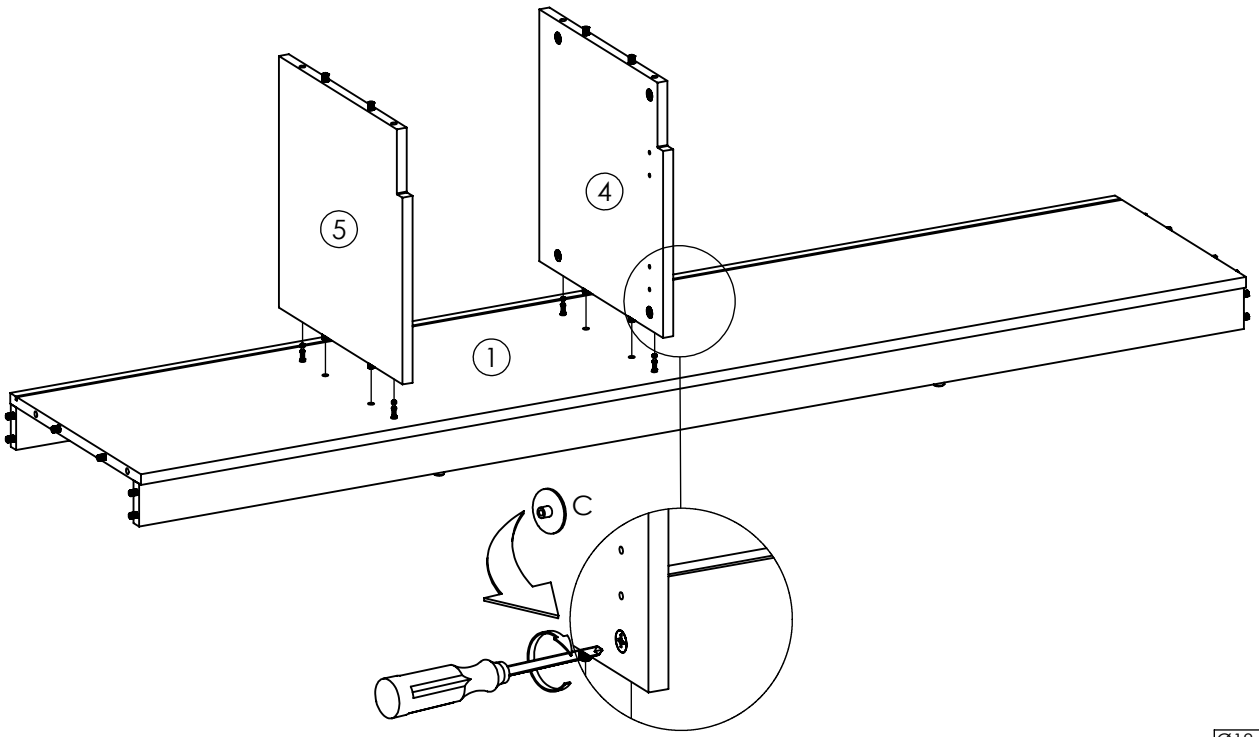



Ø18x5 MM



C x 4


7

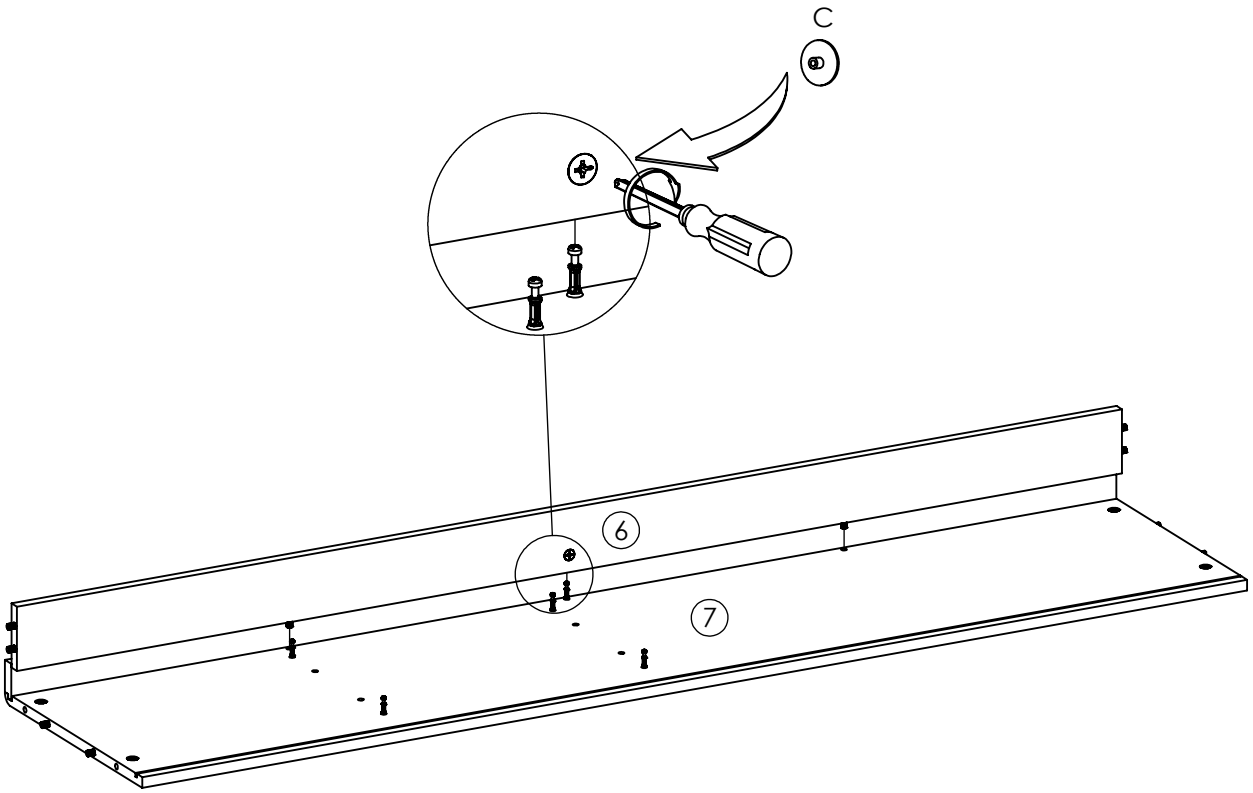


Ø18x5 MM

C x 1


8

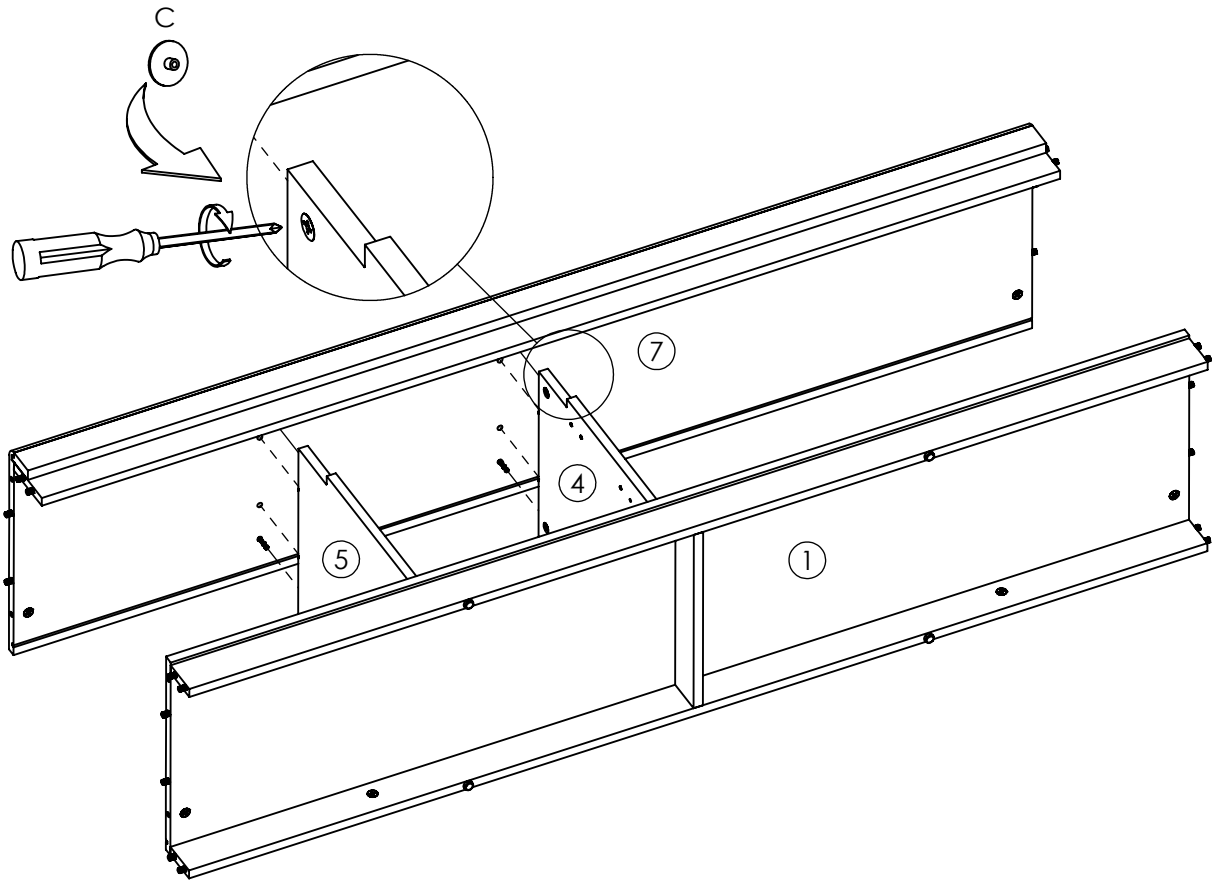


Ø18x5 MM


C x 4

9

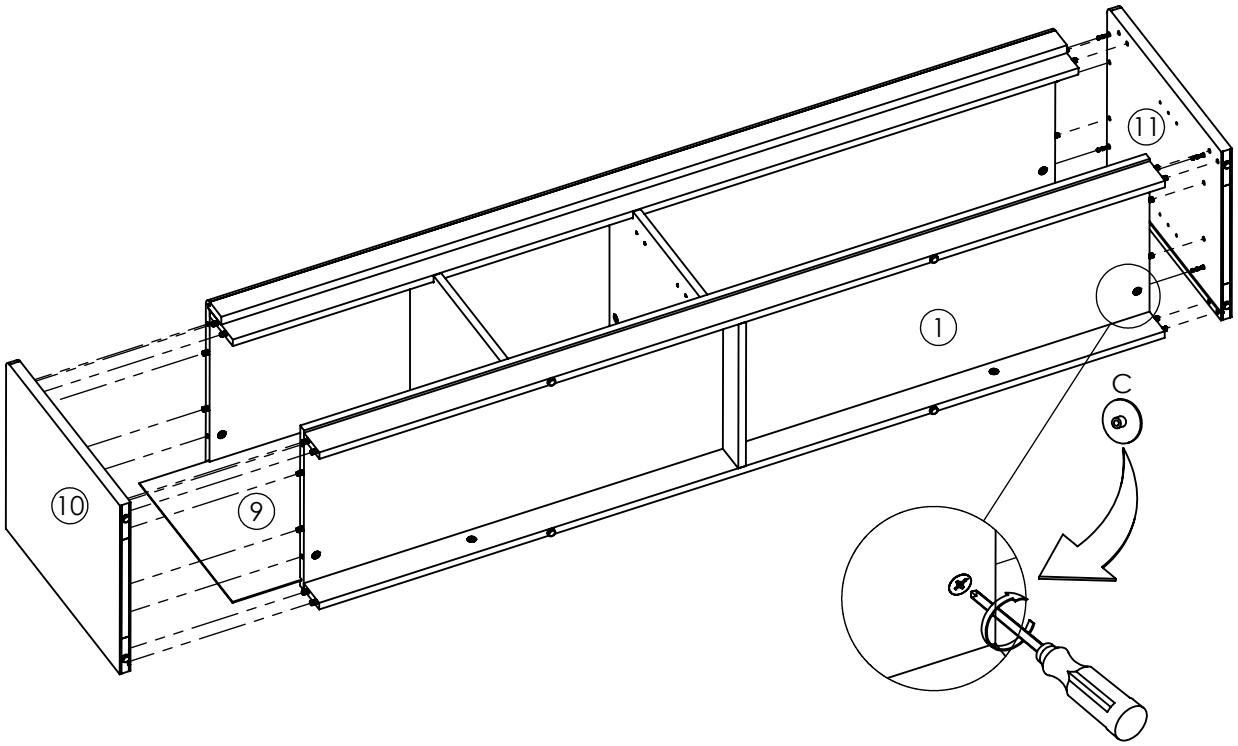



| Ø18x5 MM |
| --- |
| C x 8 |

10

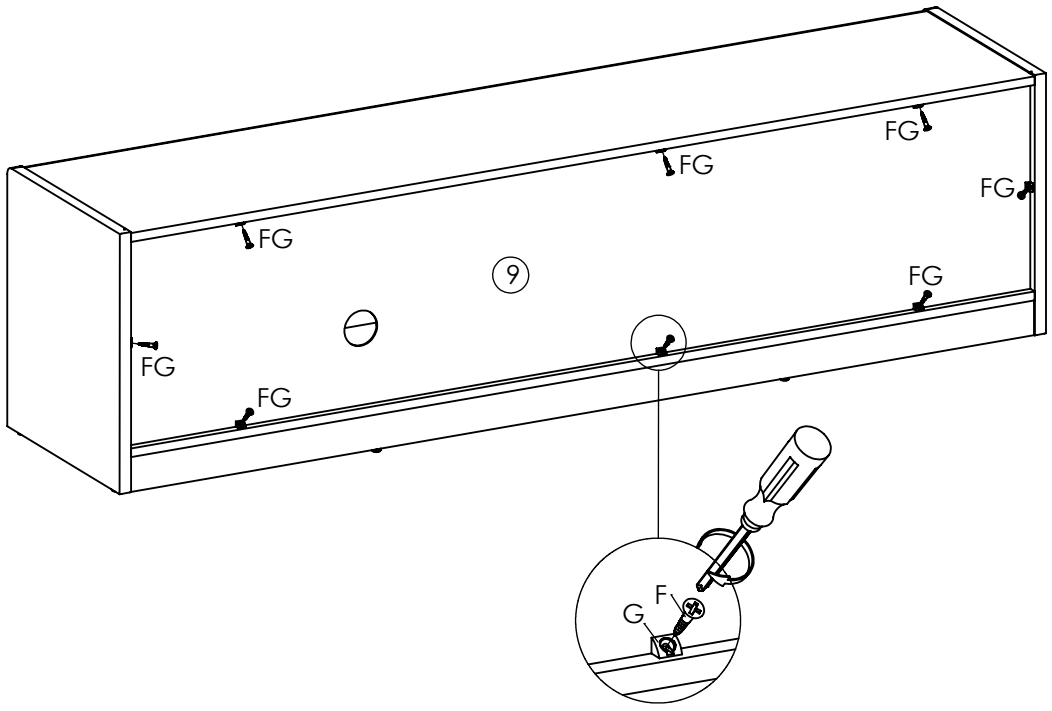


| Ø5x16 MM | 14x13x9 MM |
| --- | --- |
| F x 8 | G x 8 |

11

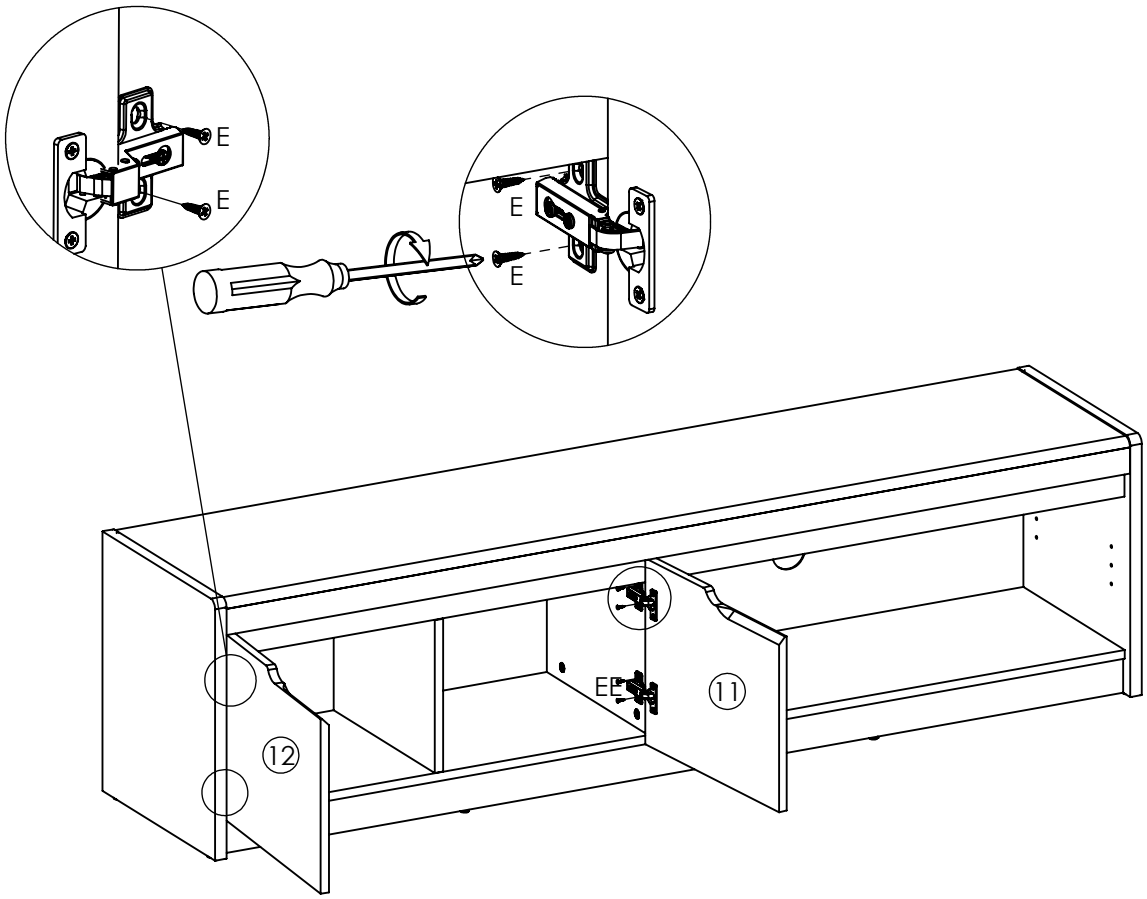



Ø6x13 MM



E x 8

12

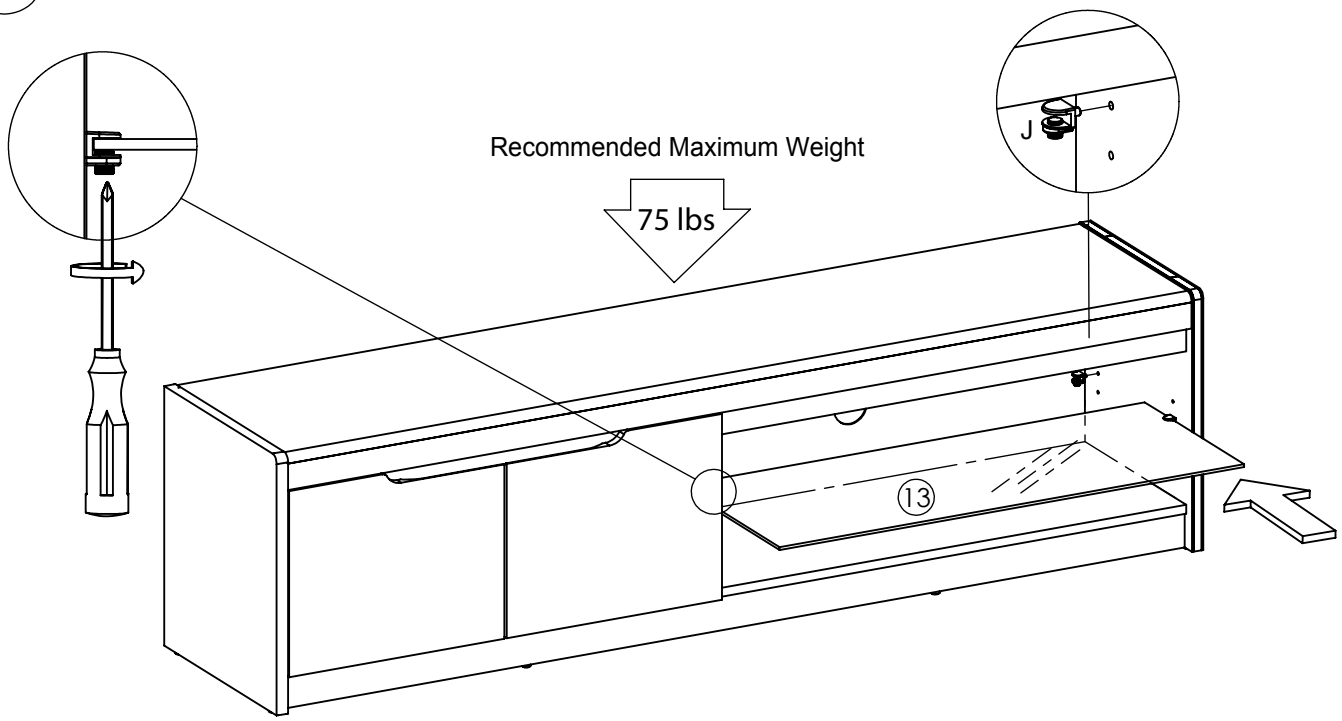


***WARNING:***

*>This unit has been designed to support the maximum loads shown.*
*Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.*

*>DO NOT allow children to climb on unit.*

Ø21x20 MM



J x 4