
DeckTok

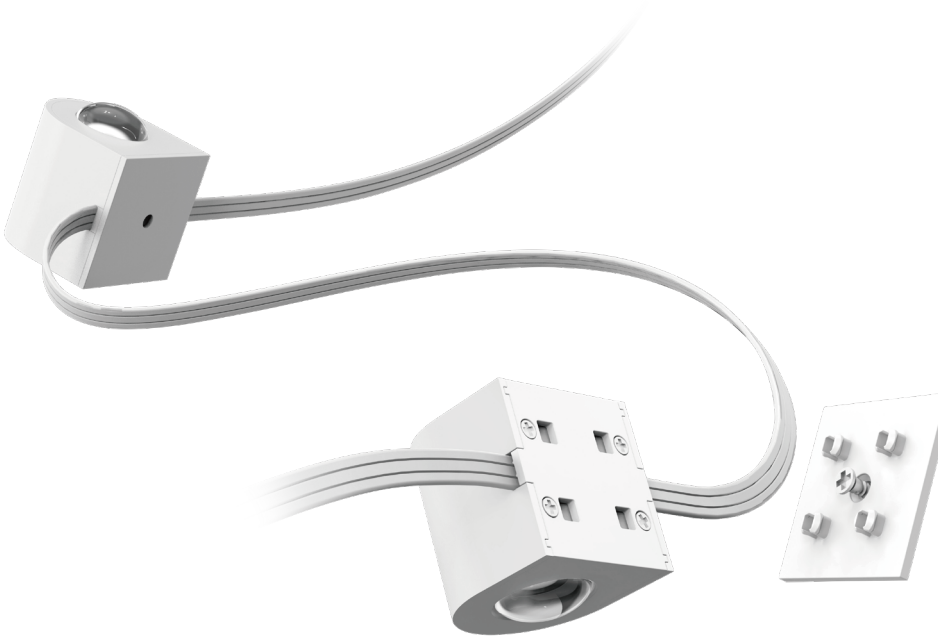

User Manual

Indoor Smart Wall Light 8/12 Heads

（23.3FT/31.8FT）


1.What You Get

Lamp Holder 8 Heads:


10 x Plastic Backplate



1 x Indoor Smart Wall Light

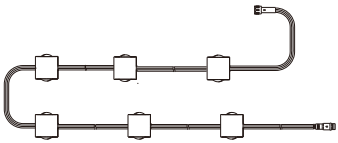

1 x Power Adapter



1 x Control Box



10 x Screws



10 x Expansion Tube



2 X Ni-mh Batteries



1 x Remote Control



1 x User Manual




Lamp Holder 12 Heads:


14 x Plastic Backplate



1 x Indoor Smart Wall Light

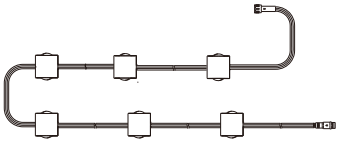

1 x Power Adapter



1 x Control Box



14 x Screws



14 x Expansion Tube



2 X Ni-mh Batteries



1 x Remote Control



1 x User Manual




2.Specification

Lamp Holder	8/12 Heads
Length	23.3FT/31.8FT (not include the power cord behind)
Adapter Input	AC 100-120V
Adapter Output	DC 24V
Power	24W
Light Color	2700K+RGBIC
Lumen	500LM/750LM
Dimmable	0%-100%
Control Method	Control Box / Remote Control / APP Control / Voice Control / WiFi 2.4GHz
Waterproof	IP20
Special Features	Energy Efficient, Dimmable, Automatic On-Off, Color Changing,Set Time,Group Control, Musical Rhythm


Important: Do Not Connect Multiple Sets
This light string is designed to be used independently, not in series with other sets.
Connecting multiple strings together may cause:
Dimming or non-functioning lights at the end of the chain.
Overload issues that affect performance and lifespan.
Please use each set with its own power adapter for best results.

3.Dimenson

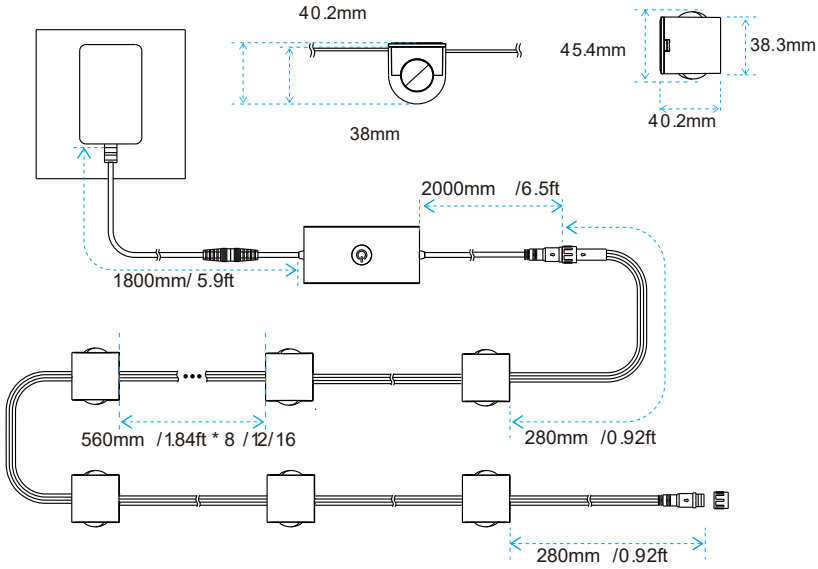


4.Installation


(1) Pre-drill holes in the wall.

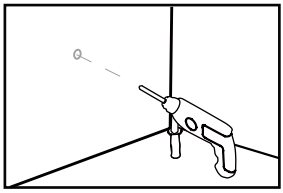


(2) Tap the included wall anchor into the hole.

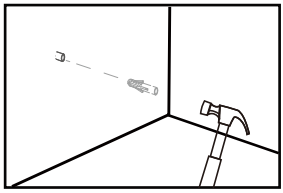


(3) Peel off the 3M tape, align the back plate's holes with the pre-drilled wall holes, and stick it on.

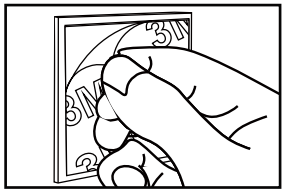


(4) Align the screws with the holes and tighten them.

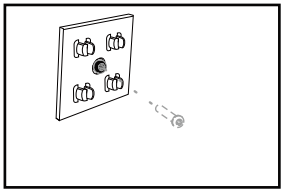


(5) Finally, mount the product onto the back plate by aligning the corresponding holes with the mounting posts.

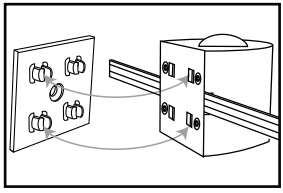

(6) Installation complete — plug into a power outlet and enjoy.

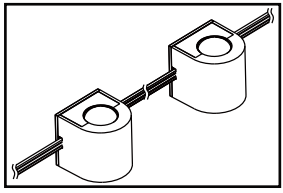


5.Remote control

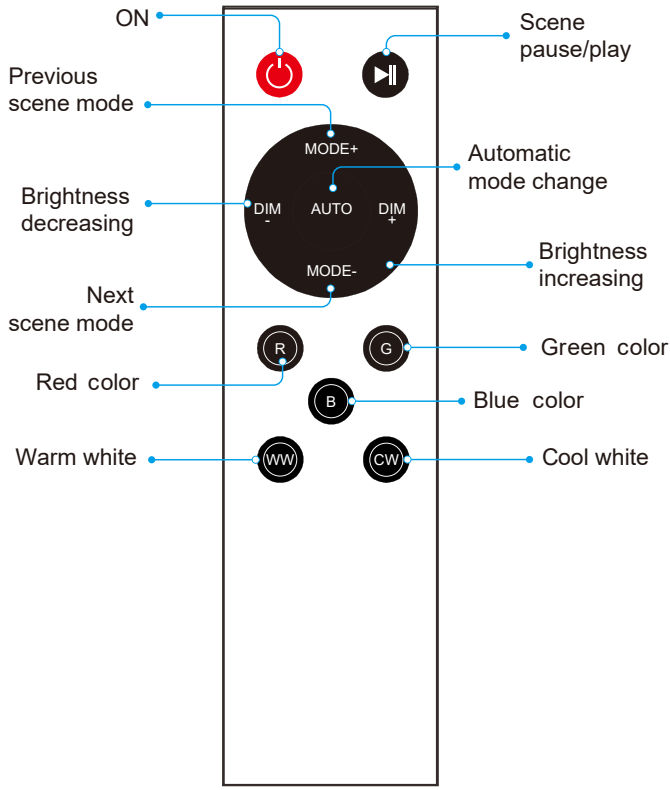

6.Control Box Operations


(1)Press once (when off) – Turn on the light string.
(2) Single press – Cycle through color modes.
(3) Double press – Turn off the light string.
(4) Press and hold for 5 seconds – Enter pairing mode.

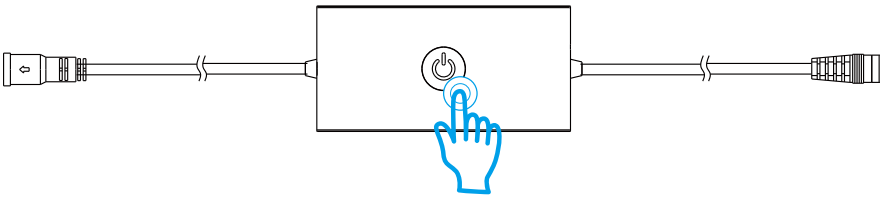

7.APP control

FUNCTION INTRODUCTION

APP control

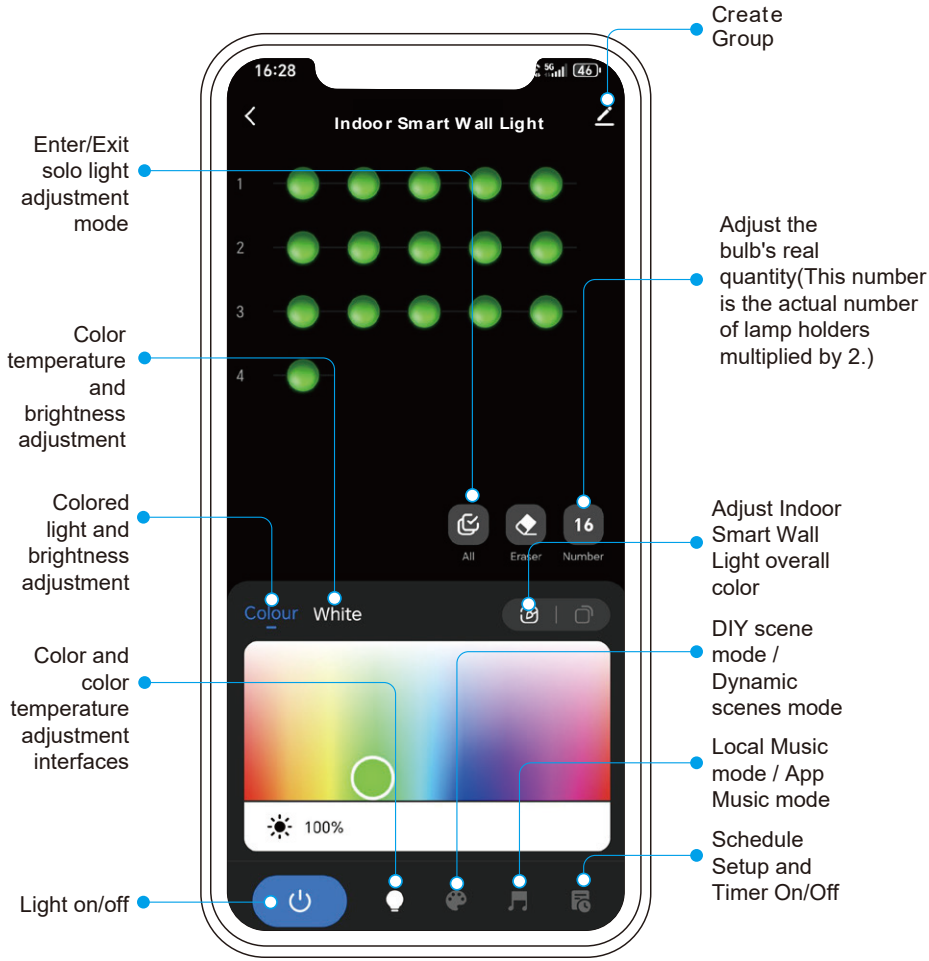

8.Register In The App

Download the DeckTok Smart App from APP Store in Apple iPhone / APP market in Android mobile phone. Take the iPhone as an example, the following figure shows the app icon and the QR code for downloading the app.

DeckTok APP

App Store

GET IT ON Google Play

Cannot connect the device.

- First make sure to connect to the mobile data network or Wi-Fi, and turn on Bluetooth and GPS.
- If the lamp does not flash quickly, long press the button " ⏻ " the control box for 5 seconds to reset your device until it flashes quickly.
- Please complete pairing process within 3 minutes after device reset.
- When using a Wi-Fi connection: Make sure you entered the correct Wi-Fi password during the Wi-Fi setup.
- Check whether there are problems with your internet connection. If the Wi-Fi signal is not stable, reset your Wi-Fi router and try again.


9.How To Use DeckTok


(1) Open the app, Tap "Sign Up" and go to the Register page.

(2) Enter your phone number or email and enter the verification code, then set a password.

(3) Log in with the account name and the password you just set.




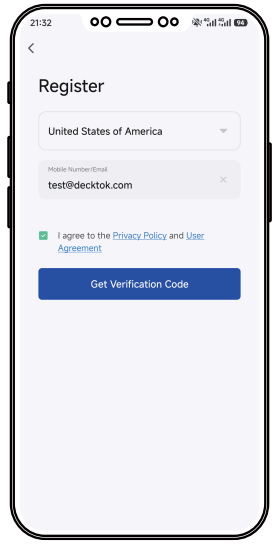

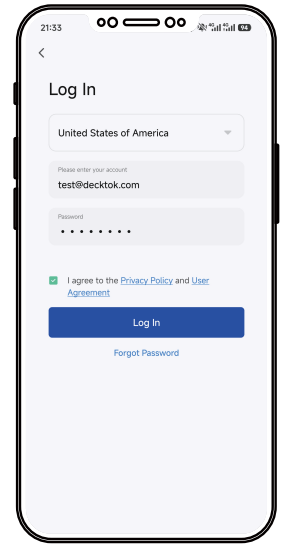


10.Add Device


(1) Tap the "Add Device" button in the center of the screen, or tap the plus icon (+) in the top-right corner and then select "Add Device" from the menu.

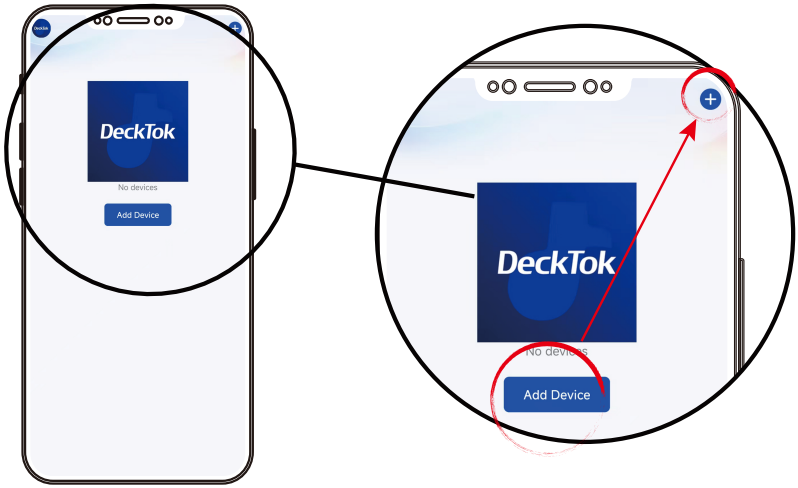


(2) Tap the discovered device to enter the network setup page.

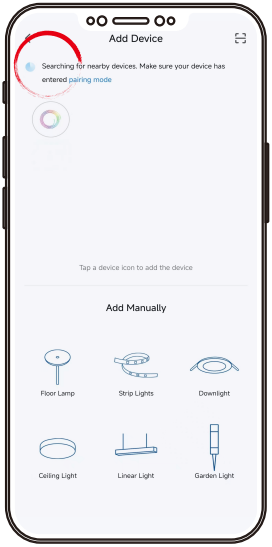

(3) Select the Wi-Fi network you want to connect to, enter the password, and allow the device to join the control system.

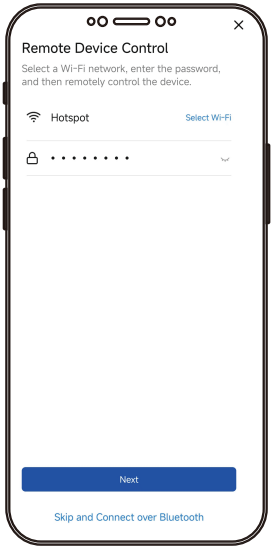


(4) You can now see your device icon on the home screen. Tap the switch button to turn the light on or off, and tap the product icon to enter the detailed control interface.

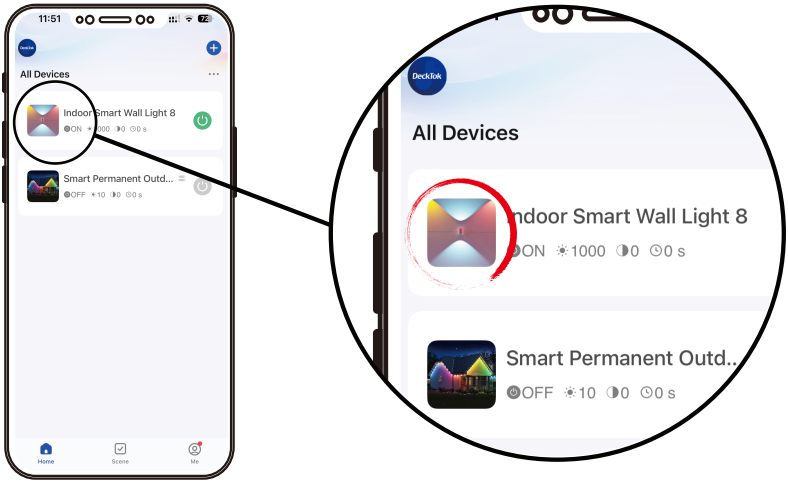


11.APP Function

When you enter the App, you can see five sections: OFF/ON, Color, Scene, Music, Plan. Detailed function description please check below:


(1) OFF/ON:Analog key switch,control the switch of the whole set of permanent lights.

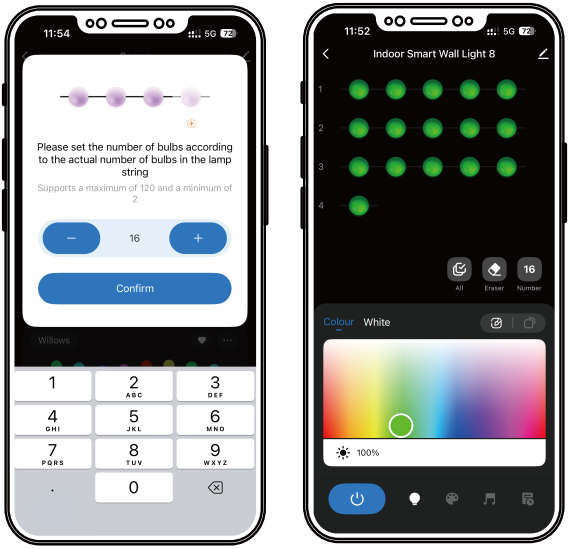

(2) Color.Affter the successful connection,you will enter the Color UI page by default. This UI page is with 2 icons and 1 digital display.

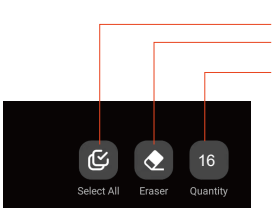

(3) Click on the two icons to switch between the two available color format choices.

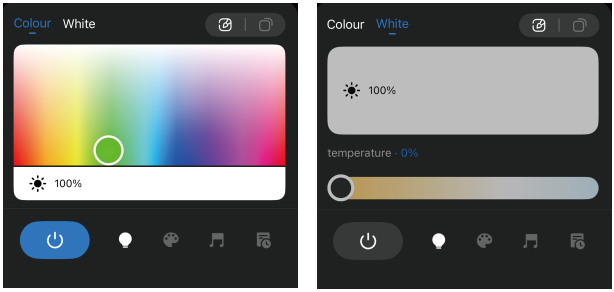

(4) Scenes: There are 25 landscape scenes, 8 life scenes, 8 holiday scenes, and 8 mood scenes. Additionally, the app supports DIY scene creation, with up to 30 DIY scenes supported.You can also edit existing scenes and save up to 30 edited scenes. Once saved, the edited scenes will appear in the DIY column for quick access to your favorite modes.(Note: After finishing your editing, please preview your changes and click "save" to apply them.)




(5) Music Rhythm: when you activate the music rhythm mode,the lights will synchronize with the music in the following two scenarios:


If you open the music app on the controlling mobile phone and smart play music,the lights will synchronize with the rhythm of the music.

If the controlling mobile phone is not playing music but receives other sound, such as notifications or incoming calls, the lights will synchronize with the rhythm of those sounds.

Tip: Exiting the music rhythm mode will stop the synchronization with the rhythm.

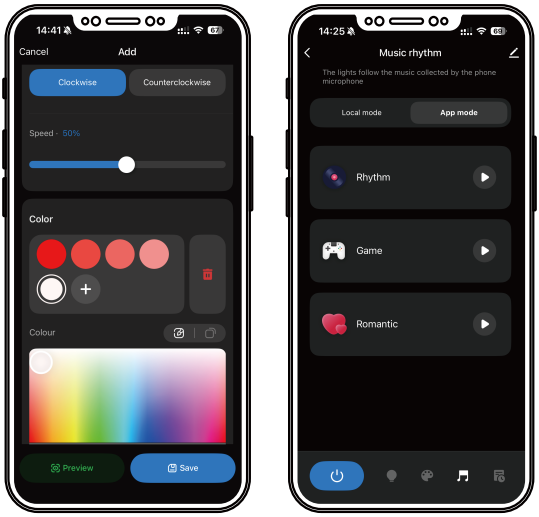


(6) Plan： The owner can freely set the on/off time of the light every day.

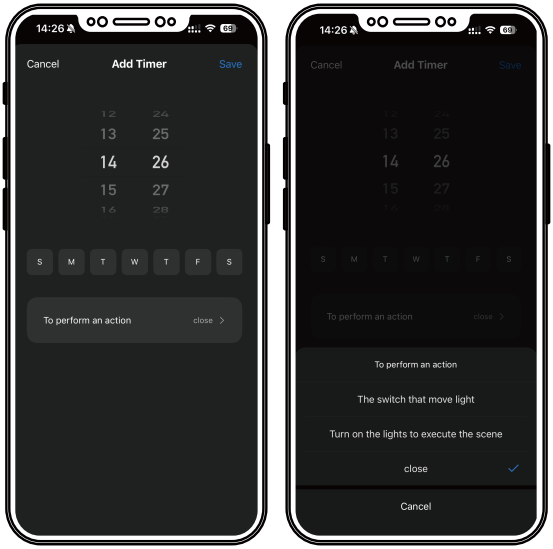


12.Group Control Setup


(1) Log in to Tuya/Smart life App,tap the smart device and enter into, click“ ” in the top right corner.

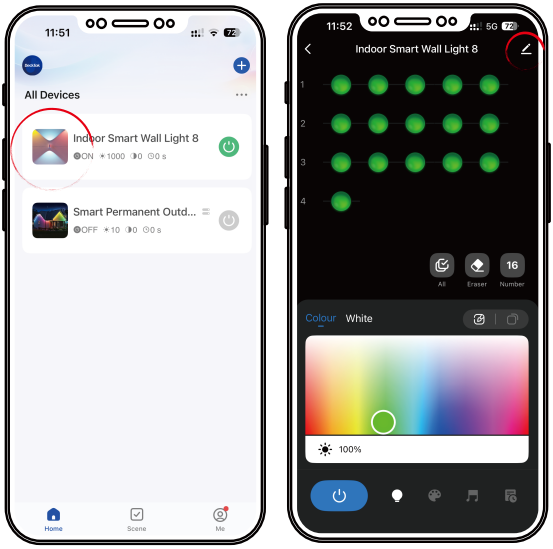

(2) Click “ Create Group ”, then select a device and save.

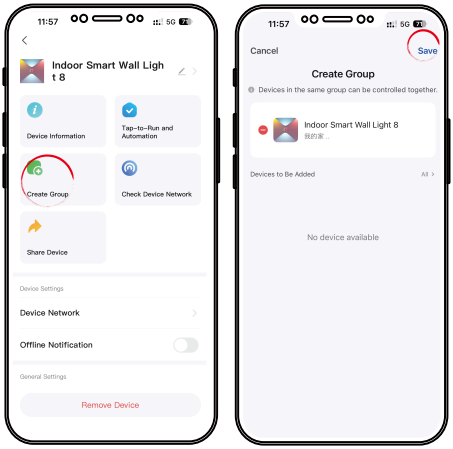

(3) You can reset the group name and save it, and the group can control devices.

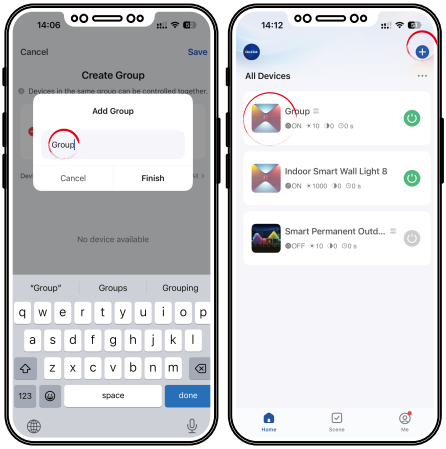

13.Troubleshooting Guide

CONNECTION & SETUP ISSUES

ISSUE	TROUBLESHOOTING STEPS
Cannot connect to the DeckTok App	a.Check if the fixture light is powered on.
	b. Ensure your smartphone is connected to mobile data or Wi-Fi, and that Bluetooth and GPS are turned on.
	c. When connecting for the first time, keep your smartphone near the light.
	d. If the lamp does not flash quickly, long-press the button on the control box for 5 seconds to reset the device until it flashes quickly.
	e.Complete the pairing process within 3 minutes after resetting the device.
	f. When using a Wi-Fi connection: Make sure you entered the correct Wi-Fi password during setup.
	g. Check for internet connection issues. If the Wi-Fi signal is unstable, reset your router and try again.
	h. If the error persists, delete the connected light from "My Device" in the app.
	i. Reconnect to the DeckTok App by following the provided instructions.
Wi-Fi disconnects or fails to connect	a.Check if the light is powered on.
	b.Do not skip the Wi-Fi connection step during the pairing process.
	c.Ensure your Wi-Fi router supports the 2.4GHz band (5GHz is NOT supported).
	d.Verify that you entered the correct Wi-Fi password.
	e.Try connecting the light to a smartphone hotspot to check if your home network is functioning properly.
	f.Shorten the distance between the light and the Wi-Fi router to less than 50ft, then try reconnecting.
Cannaopair with Alexa or Google Assistant	a.Ensure your Wi-Fi connection is stable.
	b.Go to the Device Settings page in the app and follow the instructions under "User Guide" to re-pair the device.
	c.If the problem persists, please contact the DeckTok support team for assistance
Multi-User Control	a.Each device can only be controlled by one account at a time.
	b. If multiple users wish to control the same device, they must use the same shared account.

HARDWARE DIAGNOSTIC STEPS

IMPORTANT: Please perform the following steps in order. Provide two separate videos to DeckTok support (if there is NO sound in Step 1, Step 2 is NOT needed).			
STEP	ACTION	OBSERVATION	ACTION REQUIRED
STEP 1	Unplug the light string from the controller. Keep the controller connected to the power adapter and plug it into the outlet.	Listen carefully for any unusual chirping or squealing sounds coming from the controller or adapter.	Please film the powered controller (showing the connection) and record the sound.
STEP 2(Only if sound is heard in Step 1)	Unplug the controller. Plugthe power adapter directly into the outlet (with no loadattached).	Listen carefully for any unusual sounds coming from the adapter itself.	Please film the powered adapter and record the sound.
DIAGNOSIS & AFTER-SALES SOLUTIONS			
Sound in Step 1?	Sound in Step 2?	Diagnosis	After-Sales Solution
No	Not needed	The light string may have an internal shortcircuit or open circuit.	Replace the full light string.
Yes	No	The controller is faulty.	Send a replacement controller.
Yes	Yes	The power adapter is faulty.	Send a replacement adapter.

QUICK REFERENCE - COMMON FIXES

SYMPTOM	QUICK FIX
Light not responding	Check power connection and reset controller (hold button 5 sec)
App cannot find device	Ensure Bluetooth is ON and phone is within 3 feet of light
Wi-Fi keeps disconnecting	Move router closer (within 50ft) and check for 2.4GHz band
Colors not working properly	Reboot the device and reconnect to app
Device offline in app	Delete device from app and re-pair

14. Safety Instructions

Read and follow all the safety instructions:

- This product is not waterproof. Avoid exposing its components to splashes, water drops, or high-humidity environments.
- The working temperature should be between 14°F to104°F (-10°C to 40°C).
- The internal light sources of this product cannot bereplaced. If the light sources sustain damage, the productshould be replaced.
- Due to limitations in power supply wattage and cable current load, connecting more than one set of lights together is strictly prohibited.
- Use each set separately with its own adapter.
- Avoid installing this product near major heat sources.
- Avoid installing this product near potentially dangerous sources (e.g., candles, liquid-filled objects.)
- Make sure to unplug the Indoor Smart Wall Light wheninstalling.
- Avoid damage to wiring and fixture componentsduring installation.
- Ensure that all parts are locked during installation.
- The adapter must be connected in place without loose or poor contact.

15.Customer Service

Warranty: 1 Year Warranty Email: info@DeckTok.com

www.decktok.com @DeckTok @decktokofficial @DeckTok @decktok_official