
Owner Manual

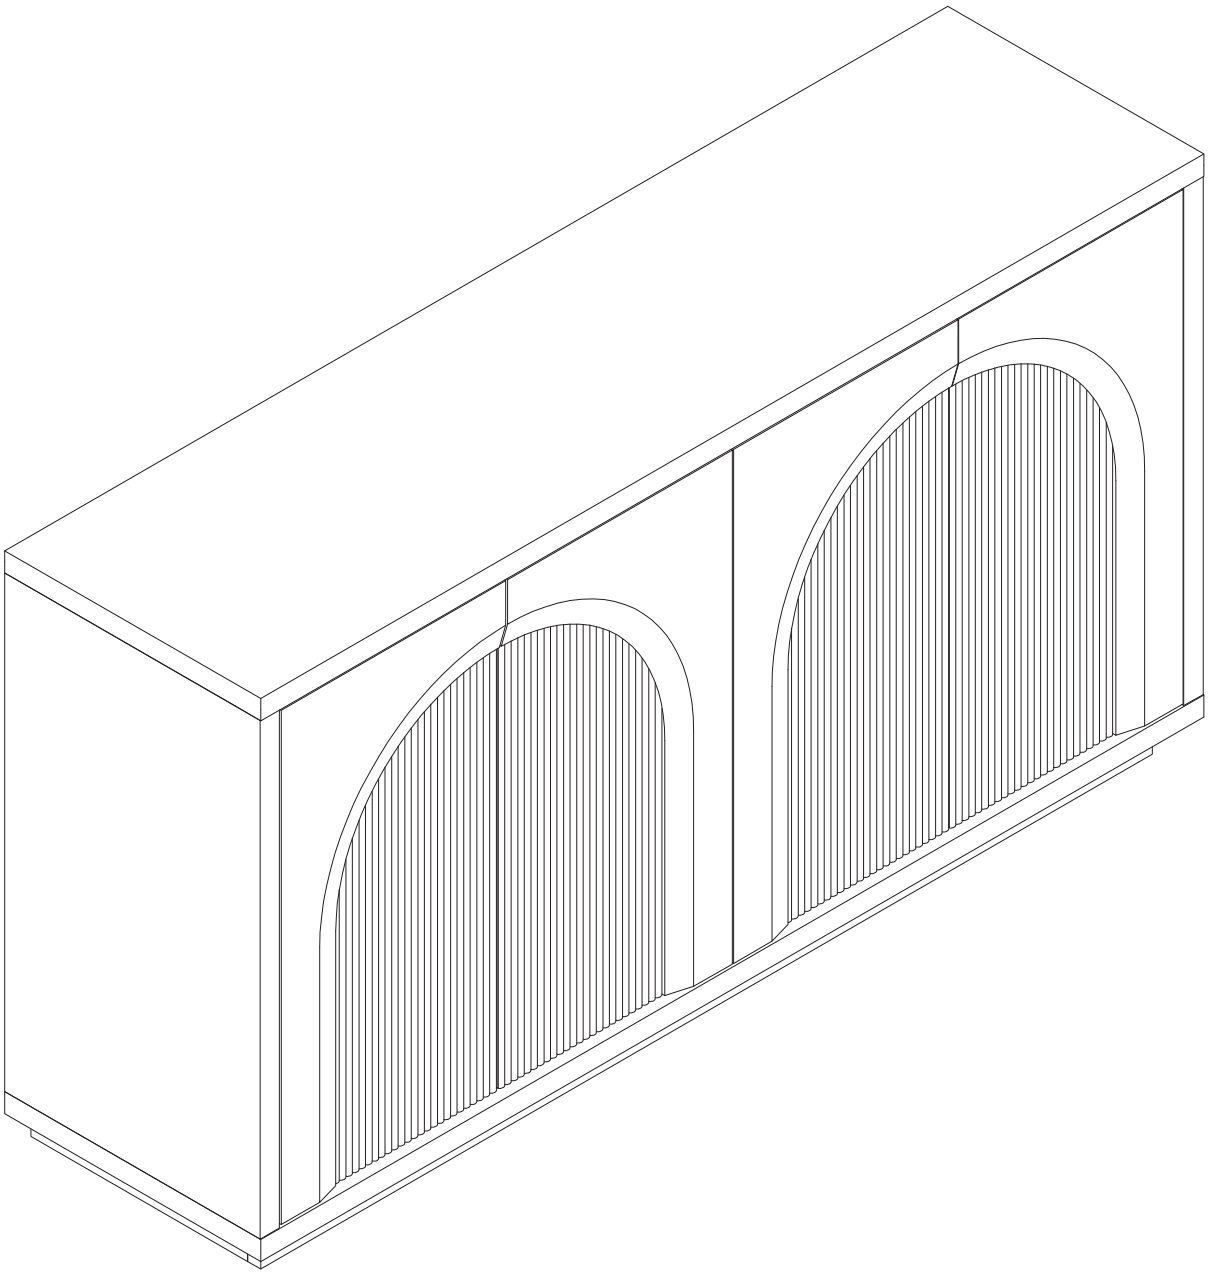

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.
Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.


NOTE :
This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS



Installation:
30 minutes.

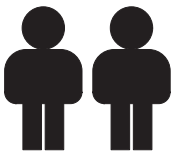

Two Person



Before You Start

Please follow the steps below:

- Unbox the package and check if all parts and accessories are complete.
- If you find something missing, stop assembly and contact your supplier immediately.
- Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.
- NOTE:Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.

Warranty

We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having dificulty with assembly? Missing parts? Please send email with your order number


For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis,or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all the parts in the box and start the installation.

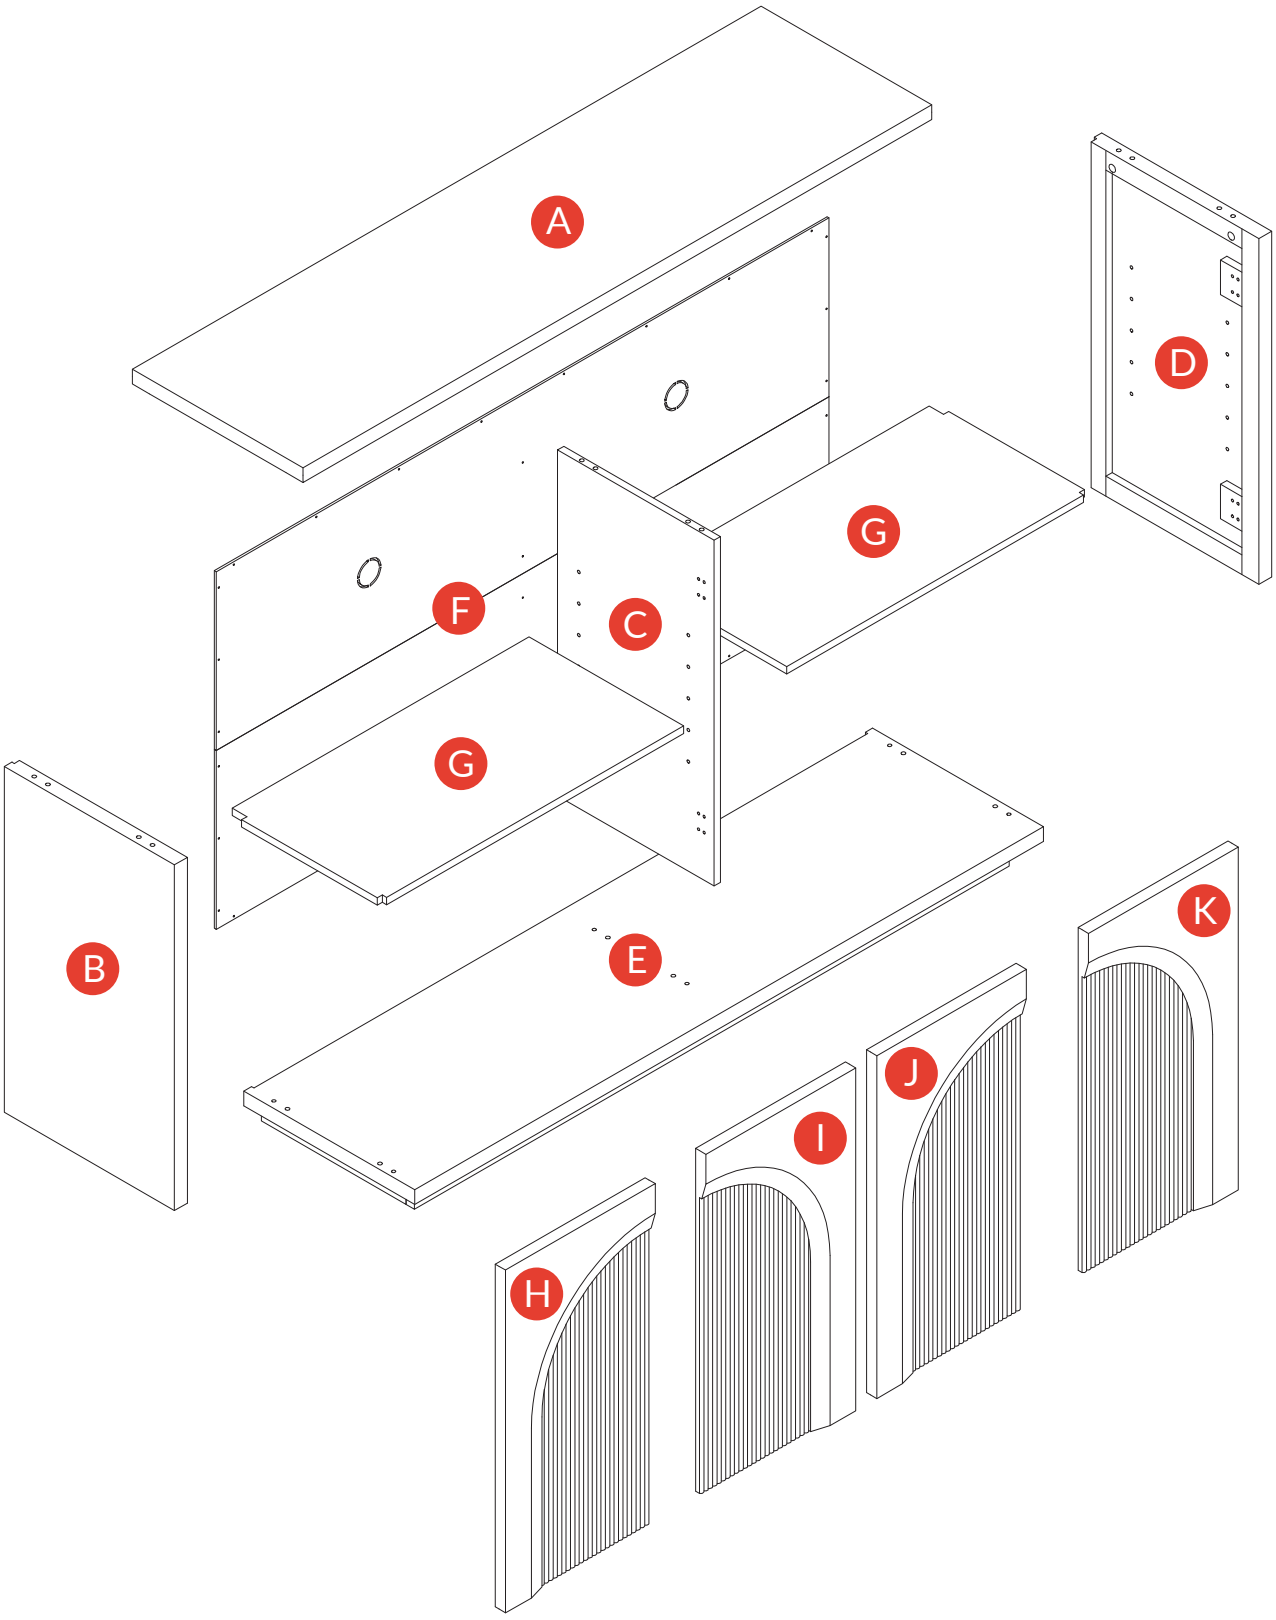


Parts List

A ×1

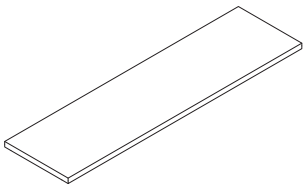


Panel

B ×1




Left panel

C ×1




Middle side panel

D ×1




Right side panel

E ×1

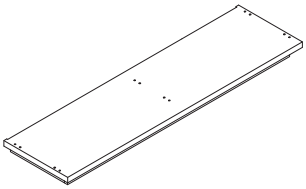


Base plate

F ×1

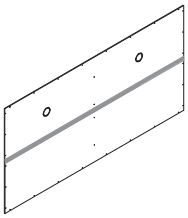


Back panel

G ×2




Activity shelf

H ×1




Left door panel

I ×1




Middle door panel

J ×1



Middle door panel


K ×1



Right door panel


Hardware List

1 ×4

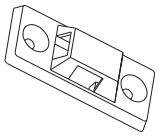


Anti-tip component

2 ×4




Self-tapping screw
D4x20mm

3 ×2

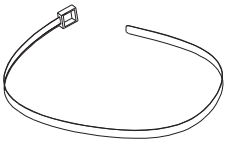


Hardware pack

4 ×4




Expansion pipe
L30mm

5 ×4



Self-tapping screw
D4x40mm

6 ×1

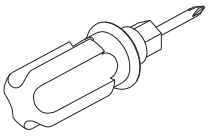


Screwdriver

7 ×1



Hexagonal socket wrench
M4

8 ×6




Straight repair screws
Ø6.3X40mm

9 ×6+1




Eccentric wheel

10 ×6+1




Three in one
M6x35mm

11 ×12+2



Wood plug
Ø8x30mm

12 ×32+4



Self-tapping screw
D3x16mm

13 ×6+1




Moviwall sticker

14 ×4




Internal clamp door hinge
Ø35 nn

15 ×4

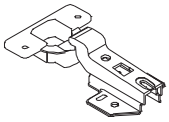


Half-covered door hinge
Ø35 nn

16 ×56+4




Self-tapping screw
D4x16mm

17 ×8



Layer board support

18 ×4

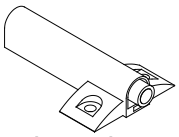

Rebounder

19 ×4



Rebounder round gasket

20 ×4+1




Self-tapping screw
D3x14mm

ASSEMBLY INSTRUCTIONS

Step 01


1. Insert the self-tapping screws (16) through the rebounder (18) and the panel (A), then secure them with a screwdriver (6).
2. Insert the three-in-one component (10) into the corresponding hole on the panel (A), and secure it with a screwdriver (6).

6	x1	Screwdriver	18	x 4	Rebounder
10	x 6	M6x35mm	16	x 8	D4x16mm

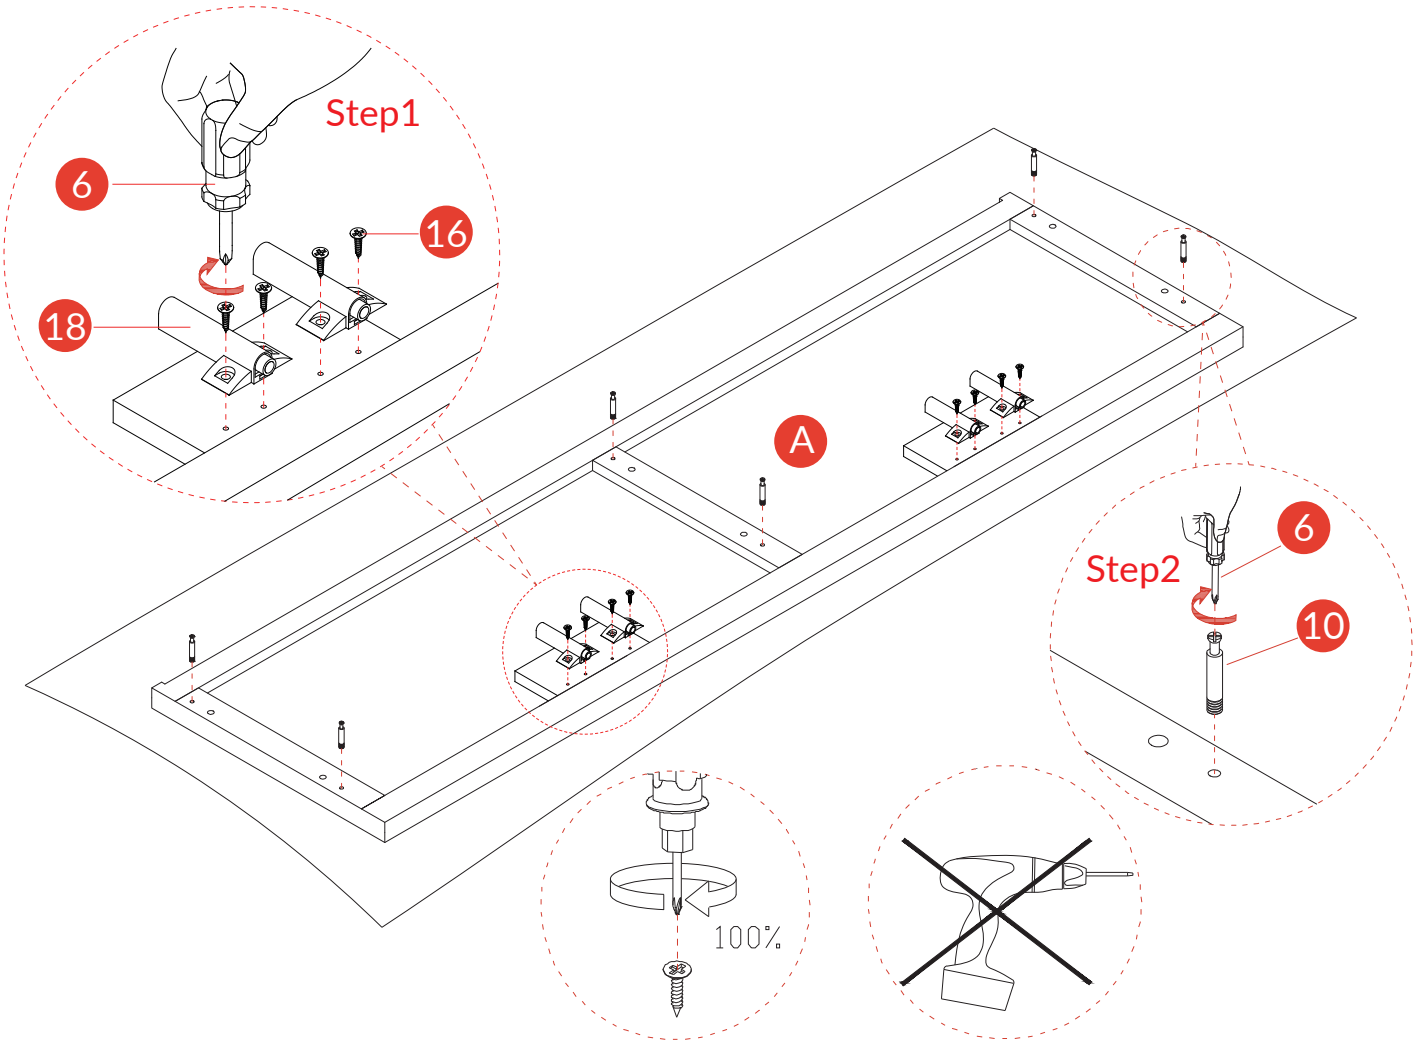

Step 02


1. Insert the wooden dowels (11) into the corresponding holes of the panel (A), the left side panel (B), the middle side panel (C), and the right side panel (D). Insert the eccentric wheel (9) into the corresponding holes of the left side panel (B), the middle side panel (C), and the right side panel (D), and secure it with a screwdriver (6).
2. Stick the Scotch tape (13) onto the corresponding holes of the left side panel (B), the middle side panel (C), and the right side panel (D).

9	 x 6	Eccentric wheel	11	 x 6	Ø8x30mm
6	 x1	Screwdriver	13	 x 6	Moviwall sticker

Step 03

1. Insert the wooden dowels (11) into the corresponding holes of the bottom plate (E), left side plate (B), middle side plate (C), and right side plate (D).
2. Pass the straight screws (8) through the bottom plate (E) and the left side plate (B), middle side plate (C), and right side plate (D) to assemble them, and then lock them with a wrench (7).


8	x 6	Ø6.3X40mm	11	x 6	Ø8x30mm
7	x 1	M4			

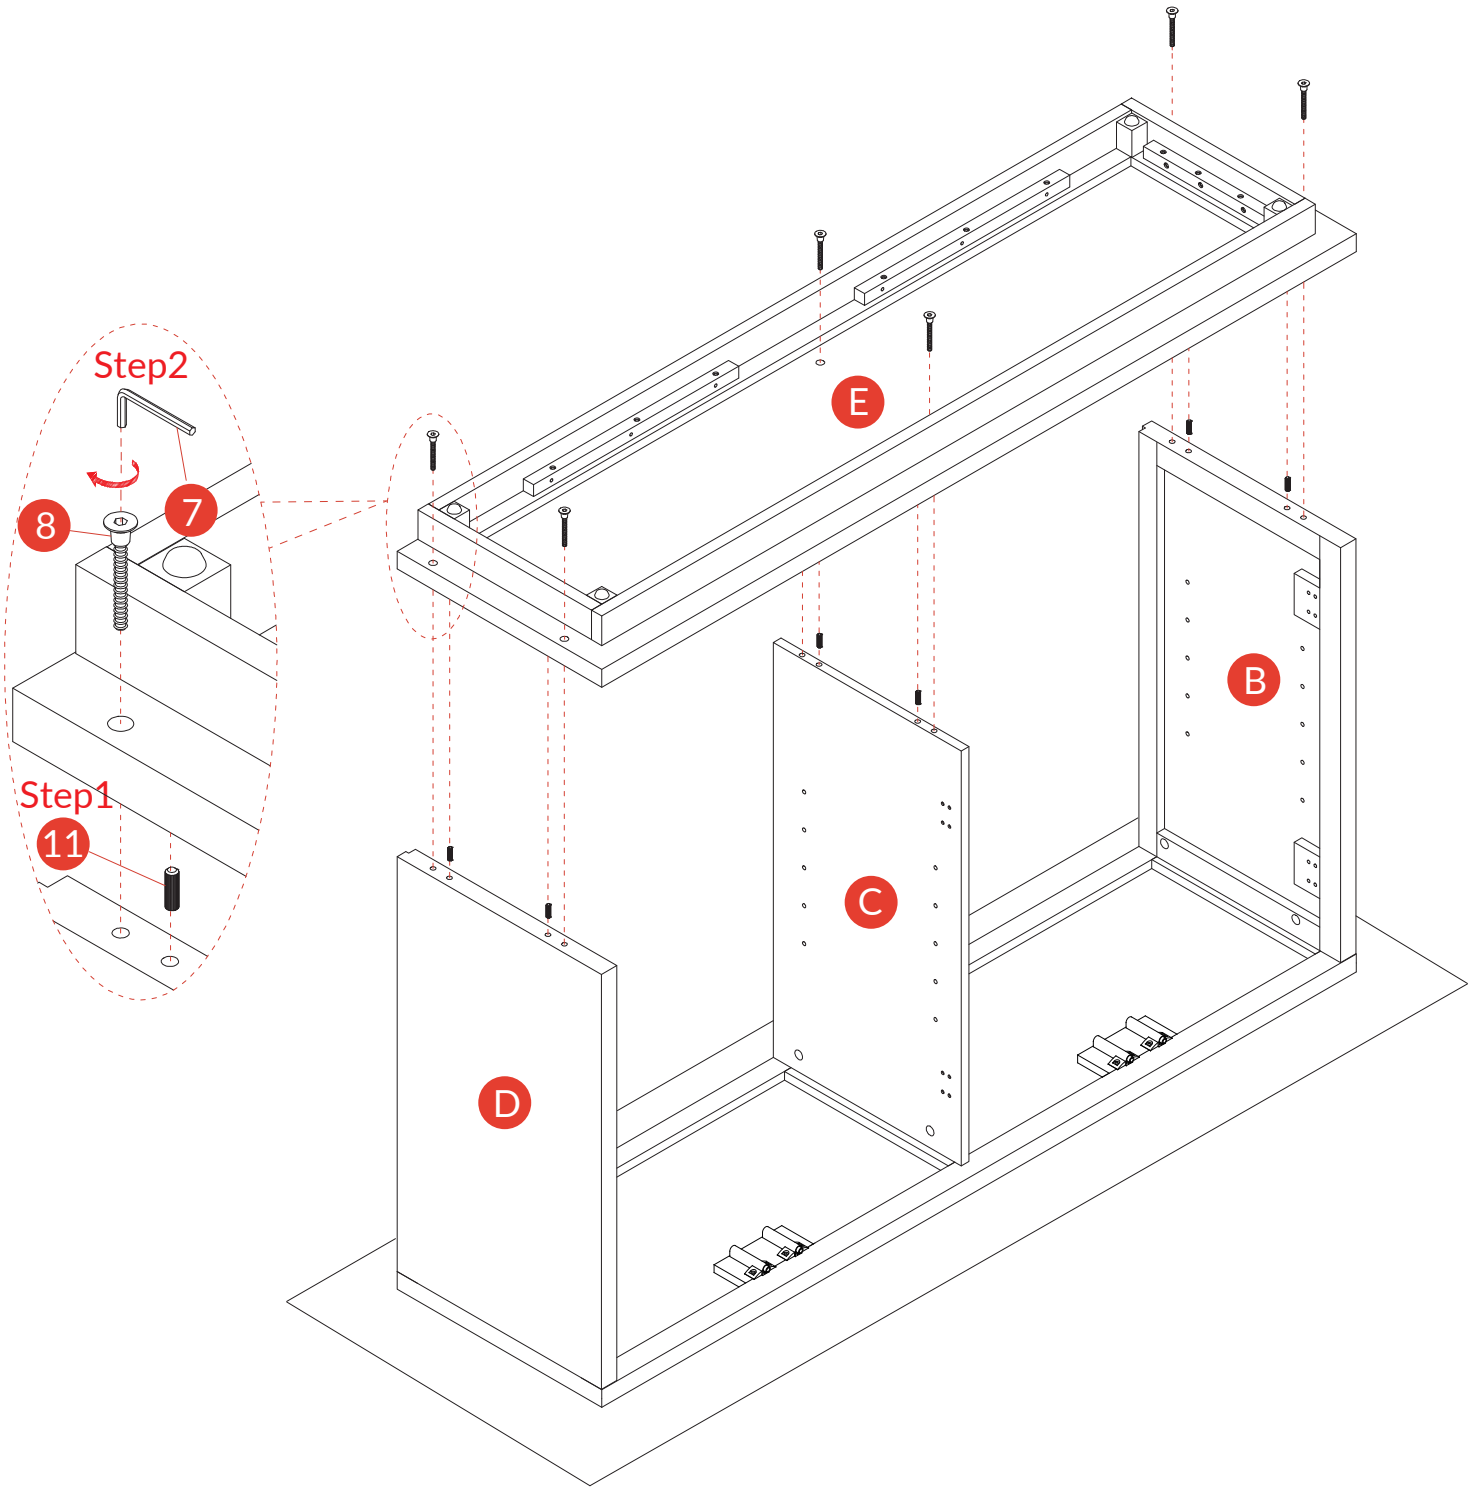


Step 04

1. Open the back panel (F), and then insert it into the back panel slot of the assembled cabinet.
2. Thread the screws (12) through the back panel (F) and the cabinet to assemble them, and then tighten them with a screwdriver (6).

6	x 1	Screwdriver
12	x 32	D3x16mm

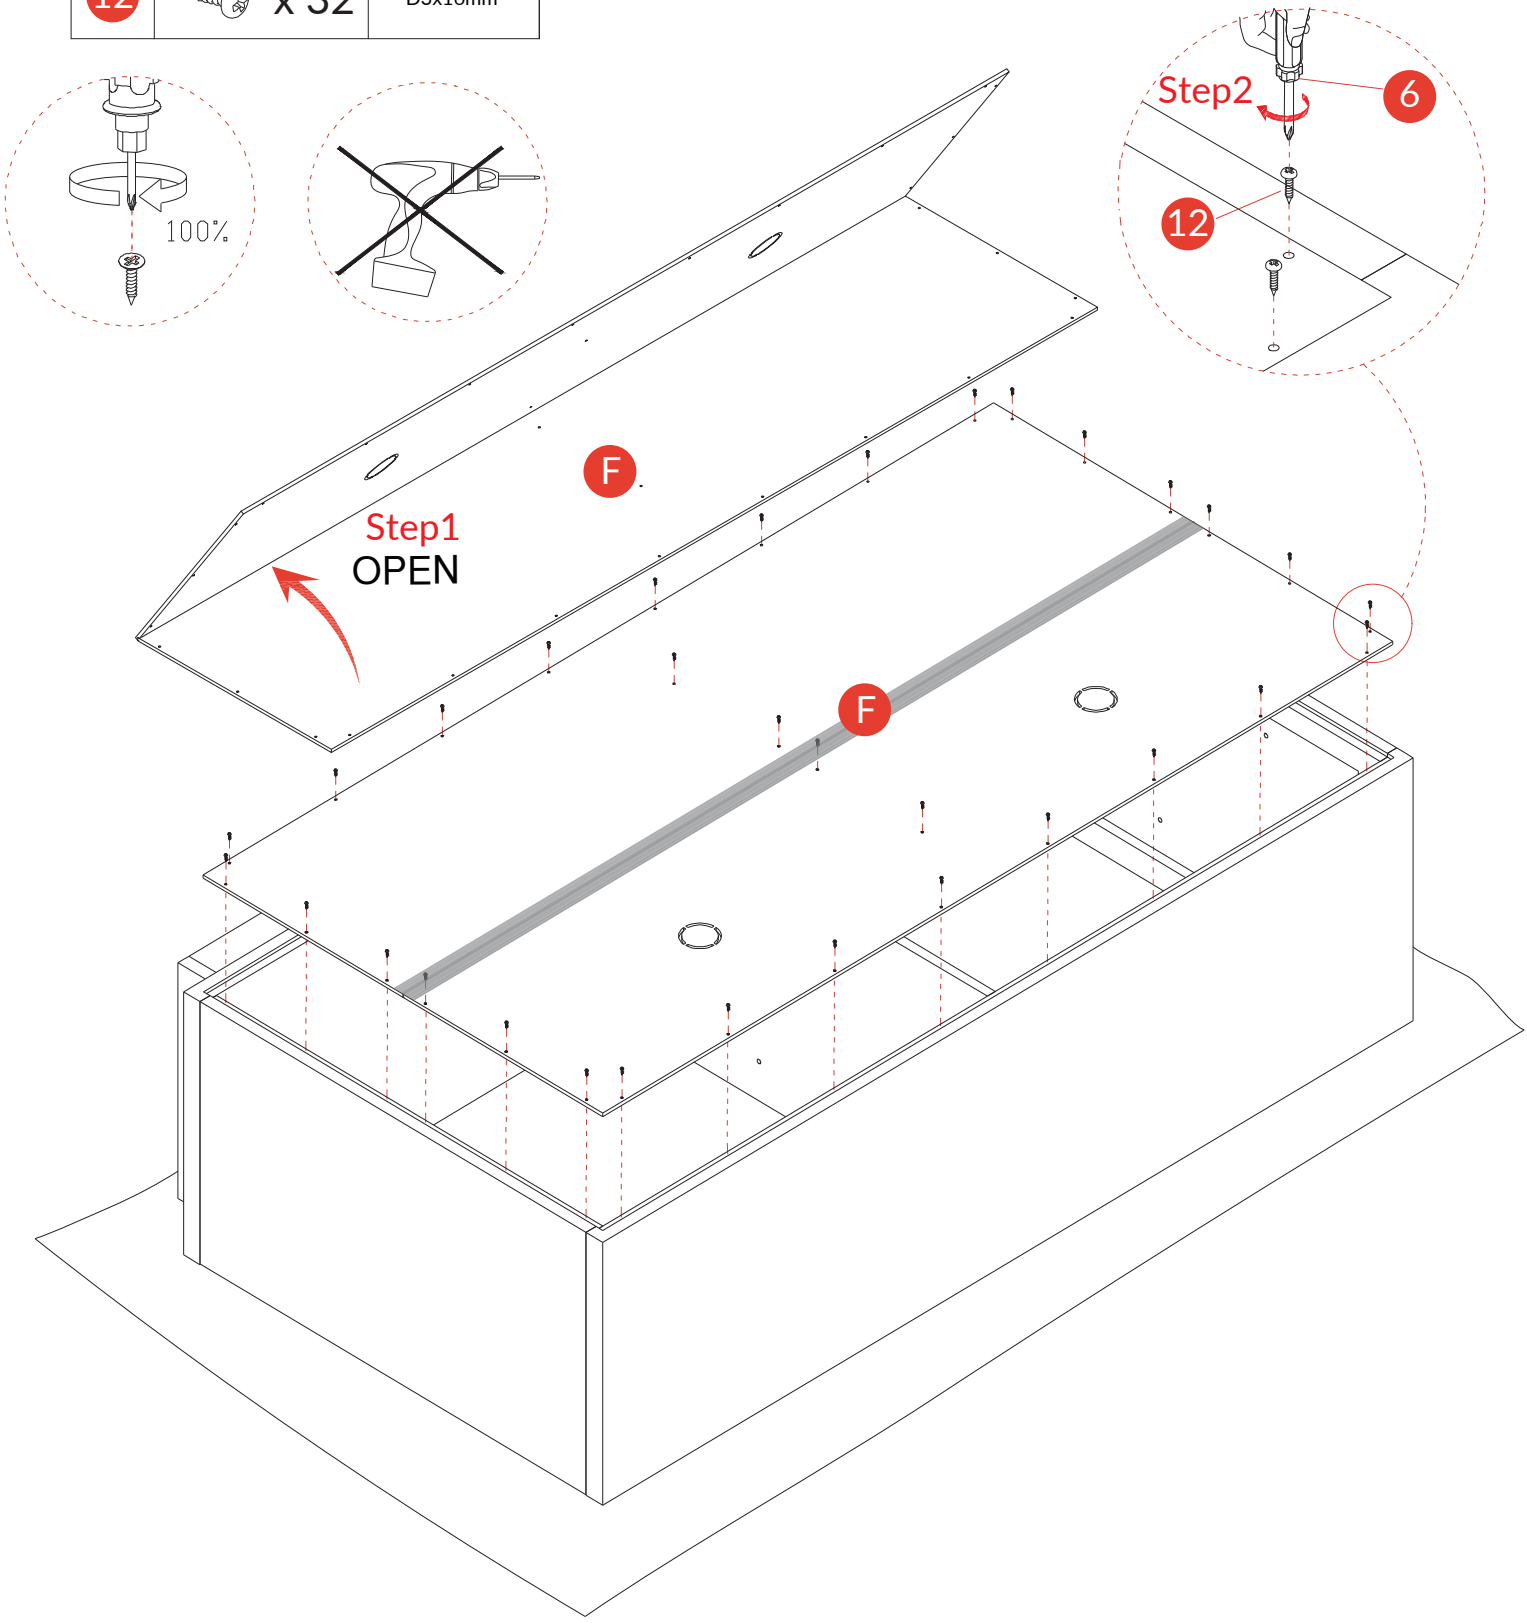

Step 05

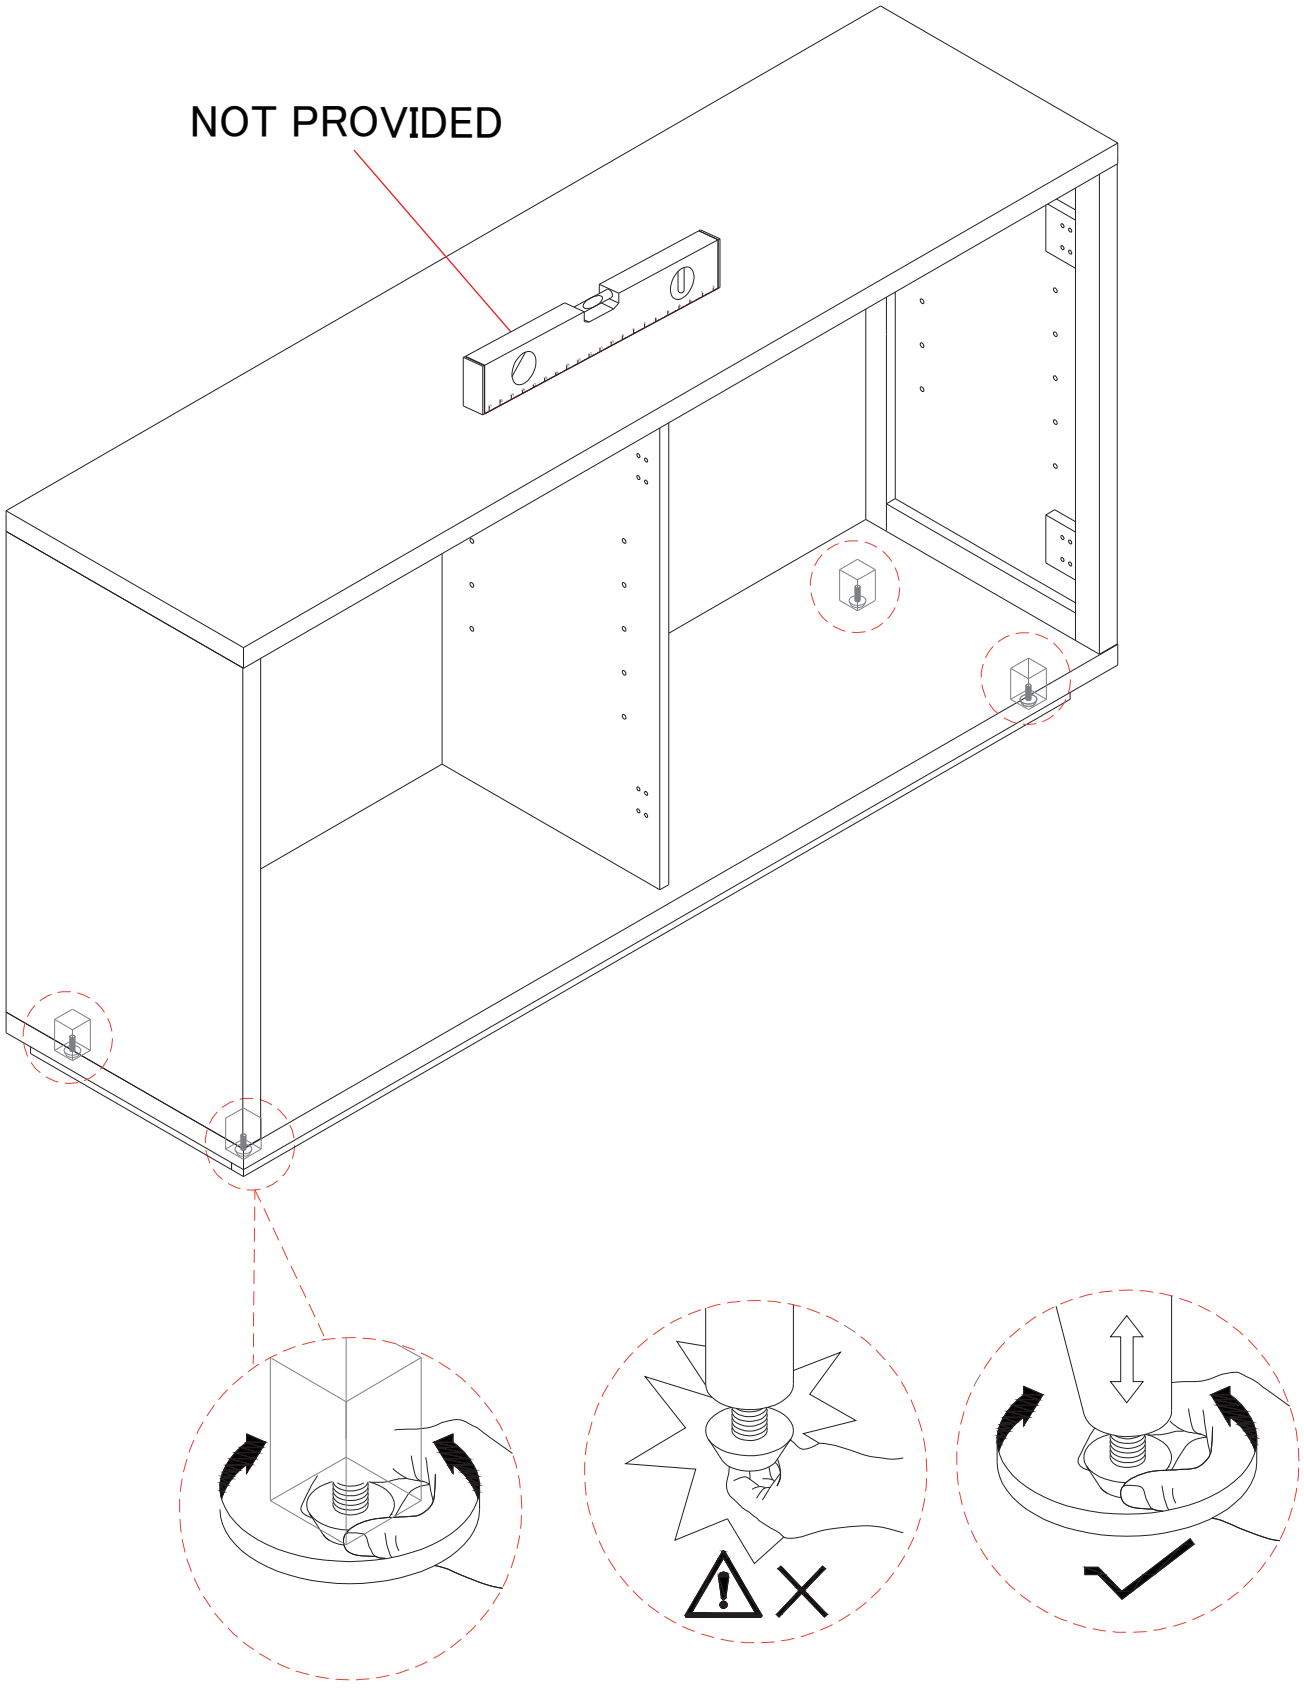


Note:
Before the next step, adjust the feet of the locker to keep it level.

Step 06



Insert the shelf support (17) into the corresponding holes of the left side panel (B), the middle side panel (C), and the right side panel (D), and place the movable shelf panel (G) inside the cabinet.


17	x 8	Layer board support

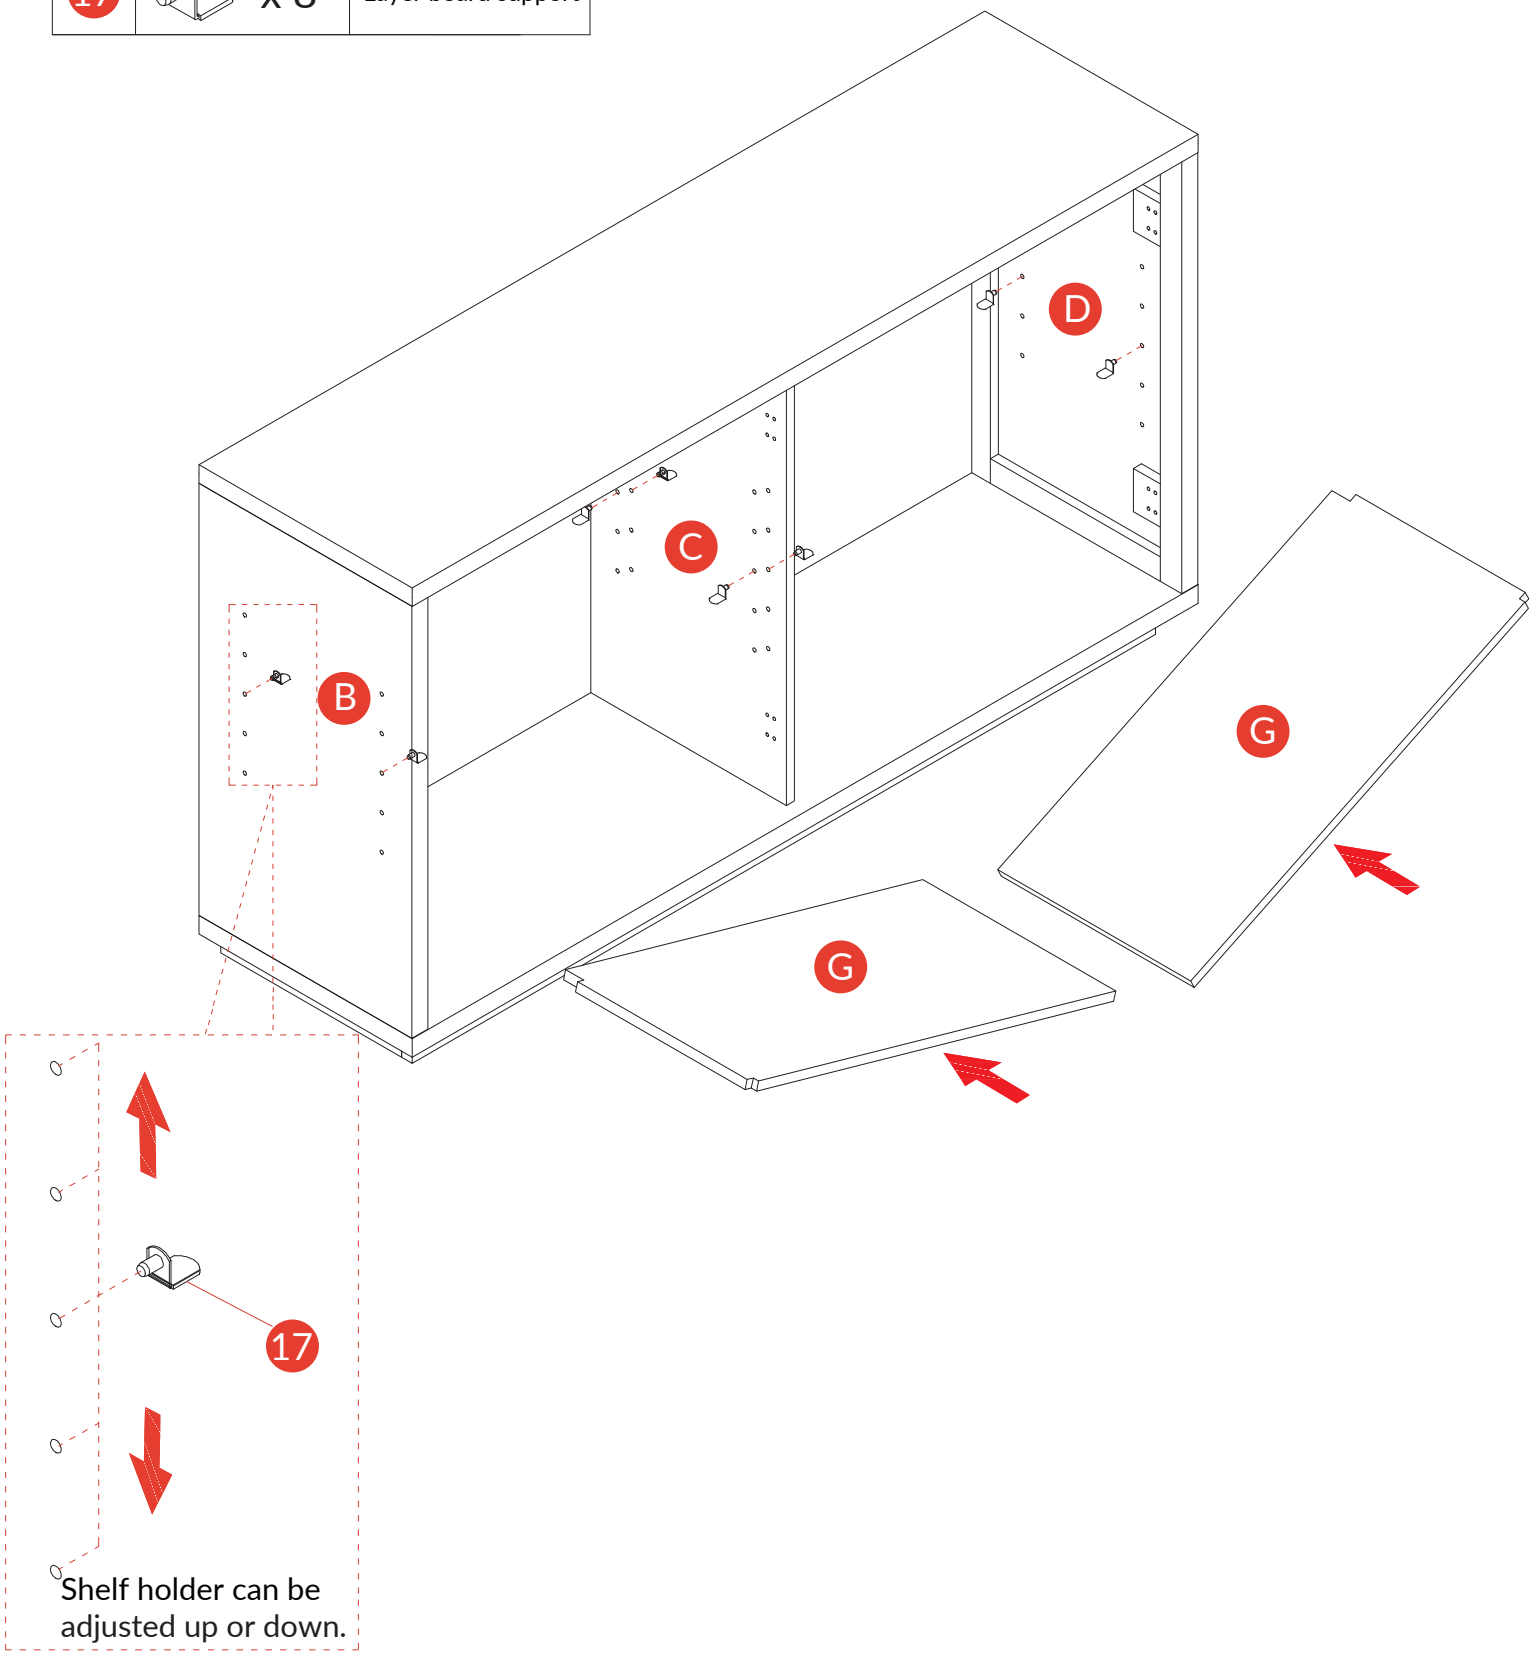

Step 07

1. Insert the self-tapping screws (16) through the large curved door hinge (14) and the left door panel (H), as well as the right door panel (K), and then secure them with a screwdriver (6).
2. Insert the self-tapping screws (20) through the rebounder circular gasket (19) and the left door panel (H), as well as the right door panel (K), and then secure them with a screwdriver (6).


14	 x 4	Ø35 nn	19	 x 2	Rebounder round gasket
16	 x 8	D4x16mm	20	 x 2	D3x14mm
6	 x 1	Screwdriver			

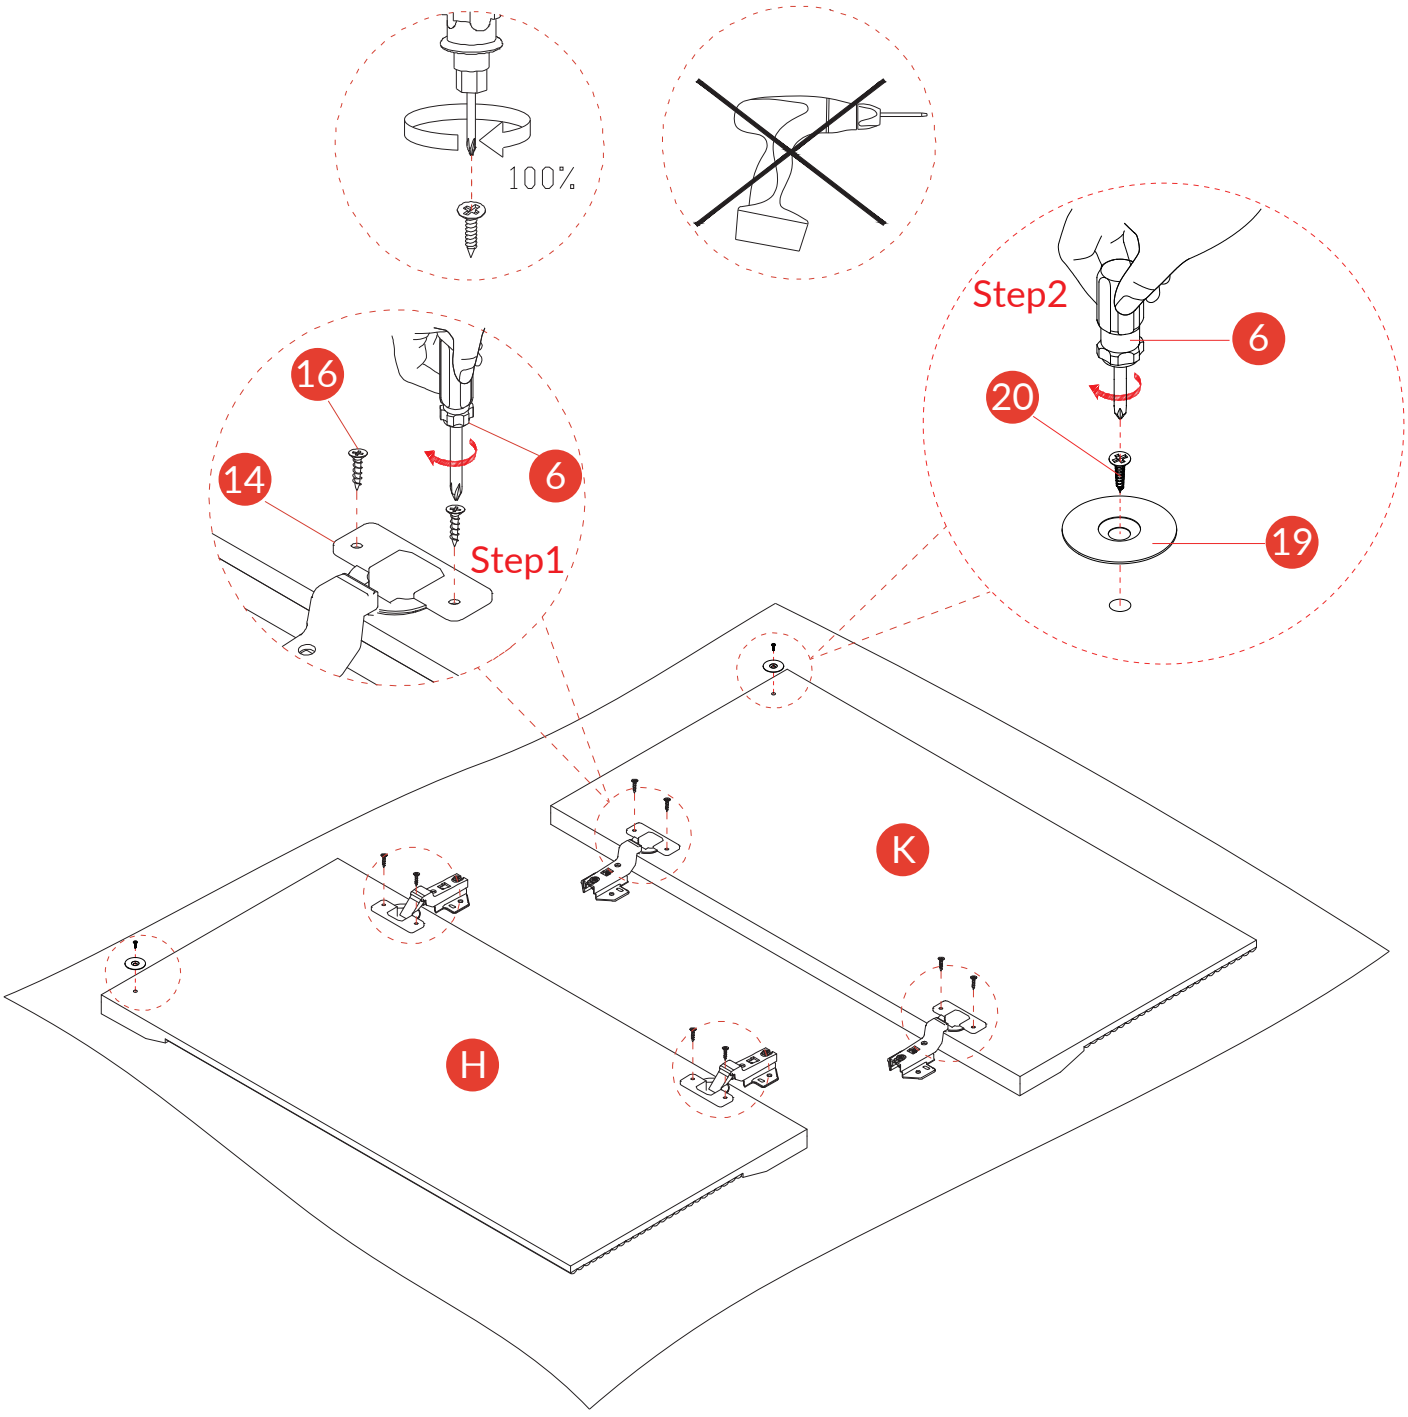

Step 08

1. Insert the self-tapping screws (16) through the middle curved door hinge (15) and the middle door panels (I) and (J), then secure them with a screwdriver (6).
2. Insert the self-tapping screws (20) through the rebounder circular gasket (19) and the middle door panels (I) and (J), then secure them with a screwdriver (6).


15	x 4	Ø35 nn	19	x 2	Rebounder round gasket
16	x 8	D4x16mm	20	x 2	D3x14mm
6	x 1	Screwdriver			

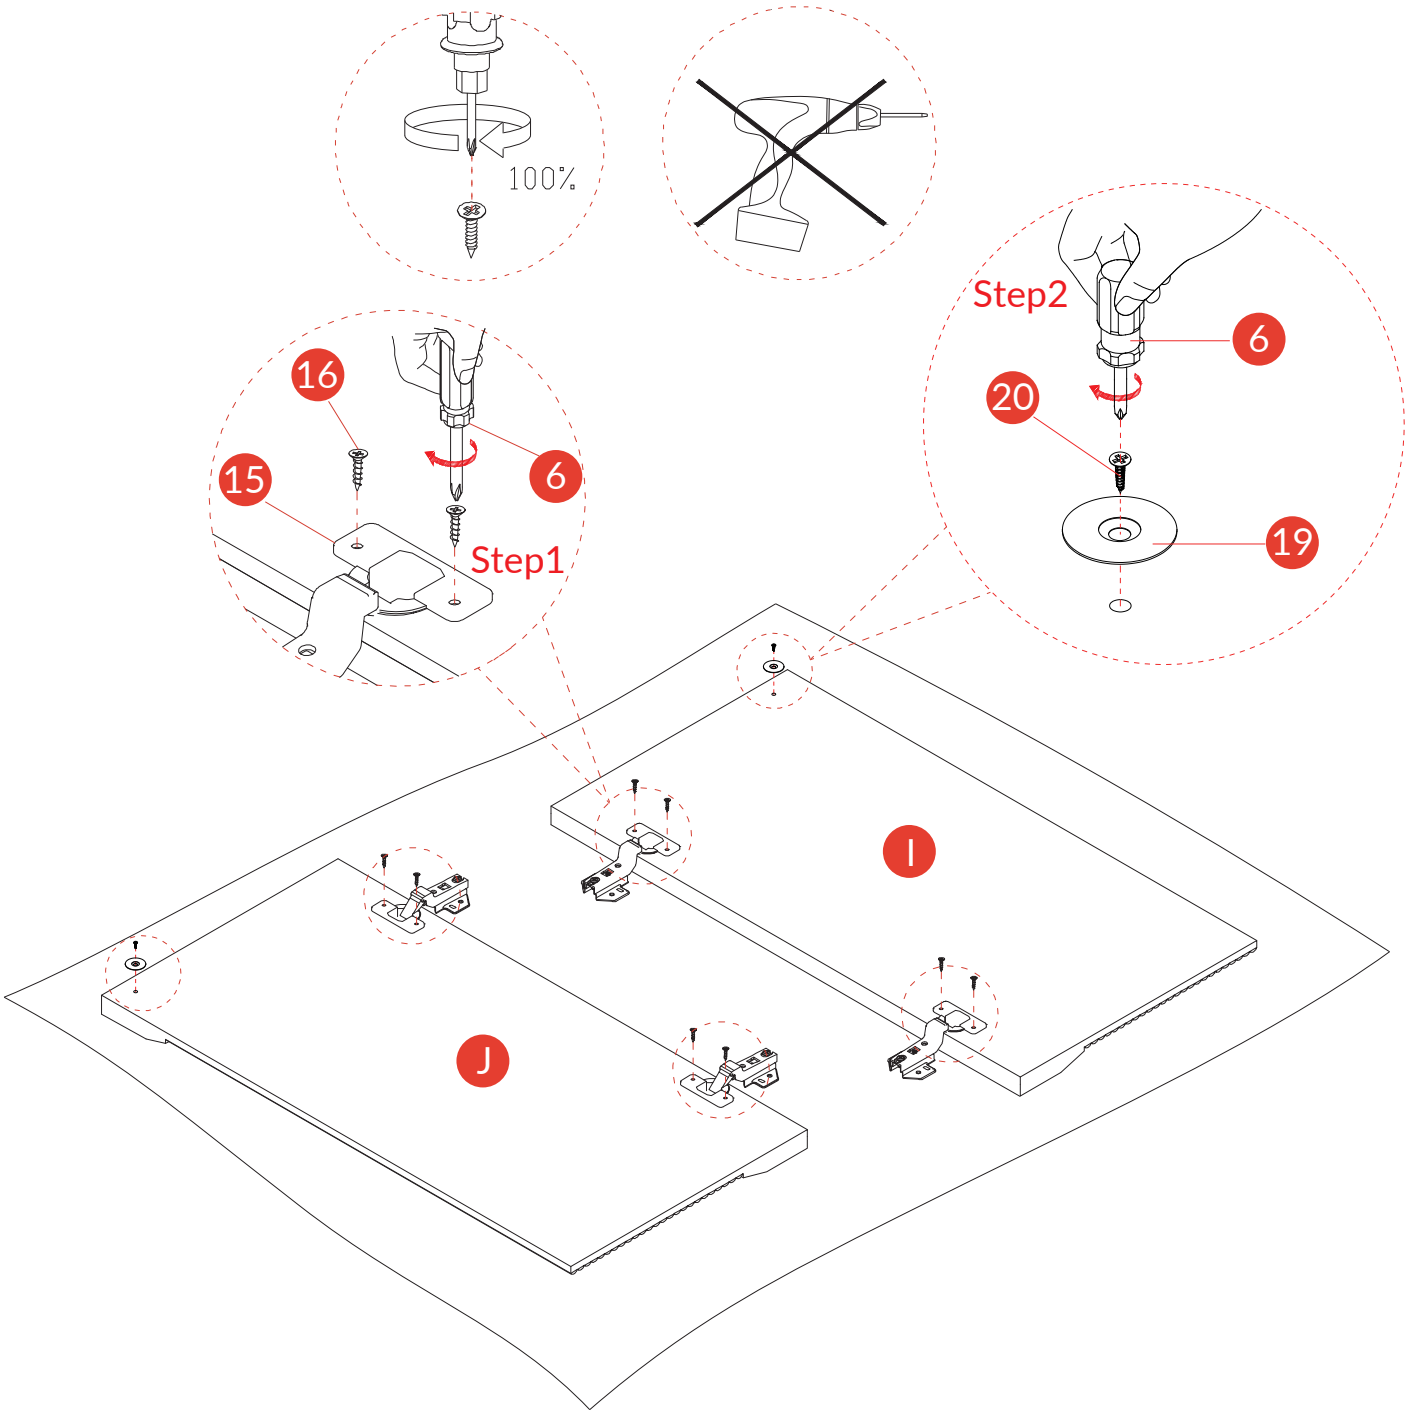

Step 09

Pass the self-tapping screws (16) through the assembled left door panel (H) and the left side panel (B) to assemble them. Lock them with a screwdriver (6). Then pass the self-tapping screws (16) through the assembled right door panel (K) and the right side panel (D) to assemble them, and lock them with a screwdriver (6).


6	x 1	Screwdriver
16	x 16	D4x16mm

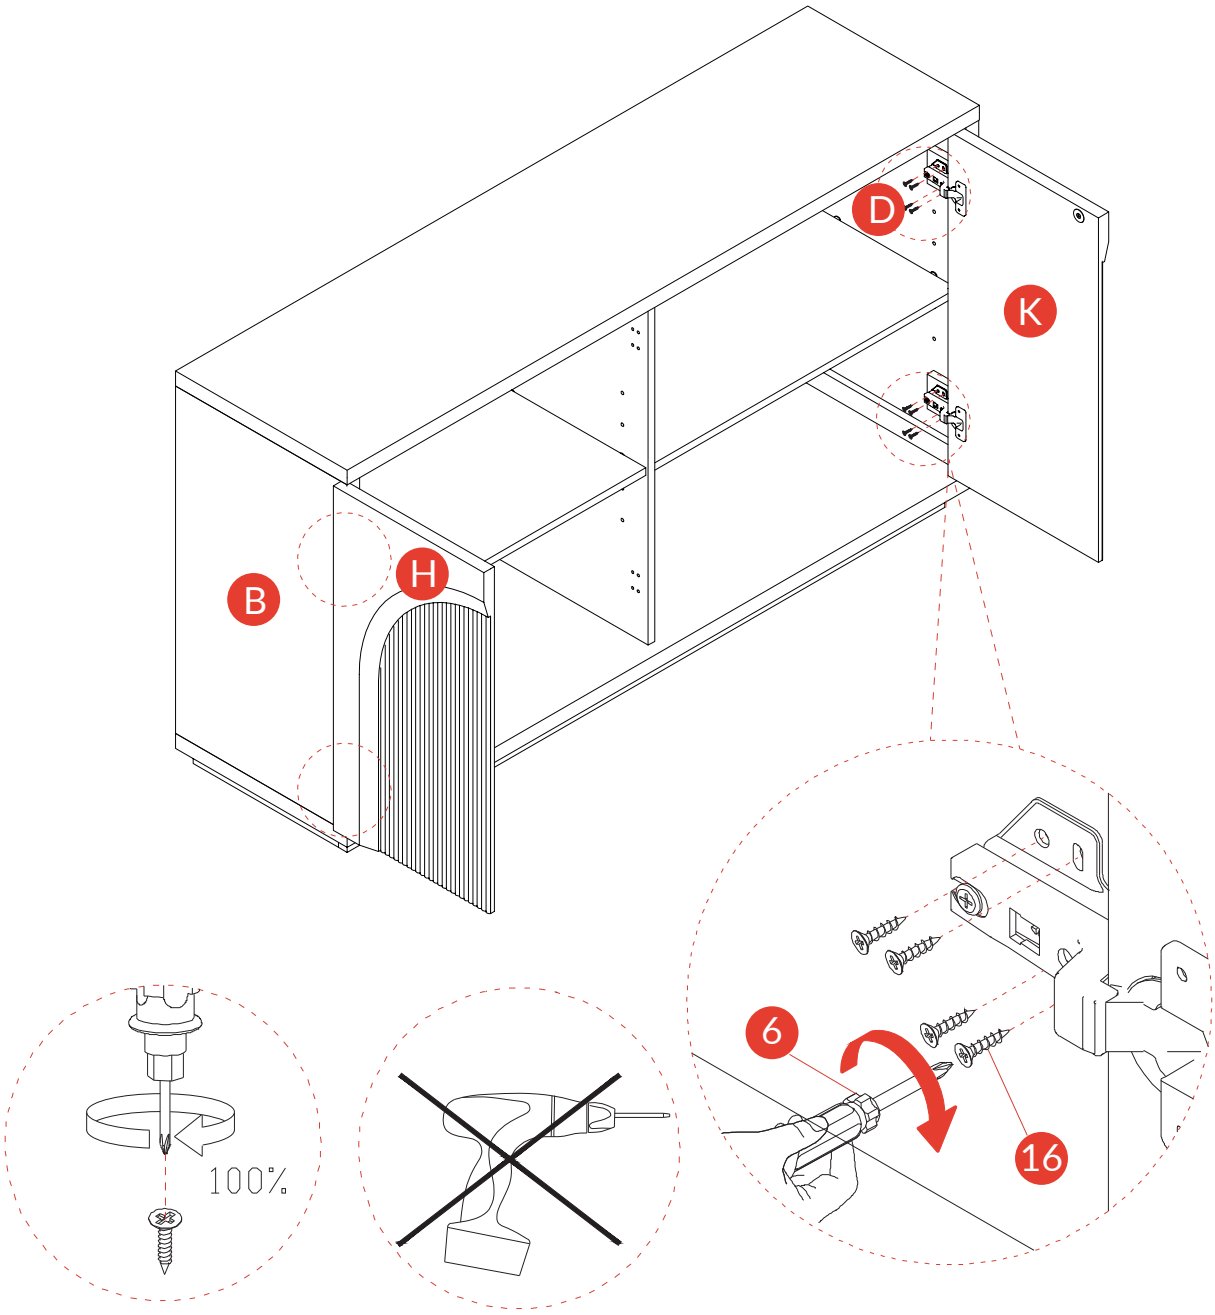

Step 10


Pass the self-tapping screws (16) through the assembled middle door panel (I) and middle side panel (C) to assemble them, then lock them with a screwdriver (6). Repeat this process for the assembled middle door panel (J) and middle side panel (C), locking them with a screwdriver (6).

6	x 1	Screwdriver
16	x 16	D4x16mm

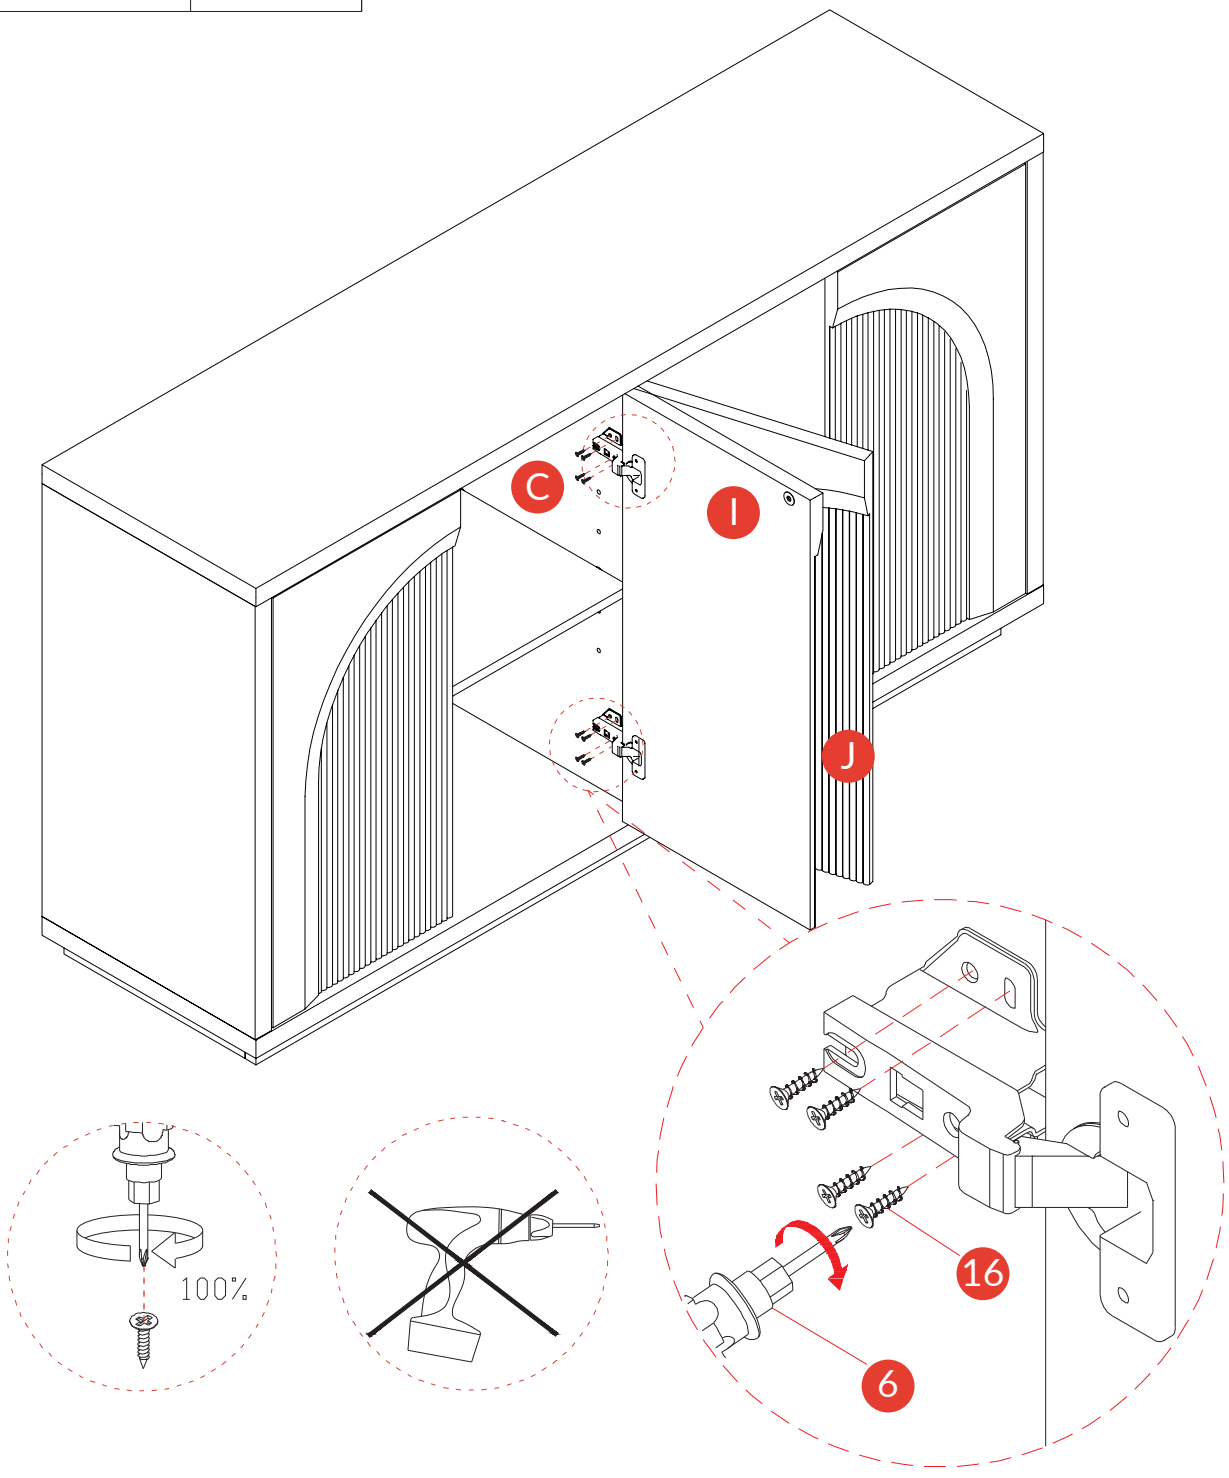


Door Hinge Adjustment Instructions


Concealed hinges are three-way adjustable.

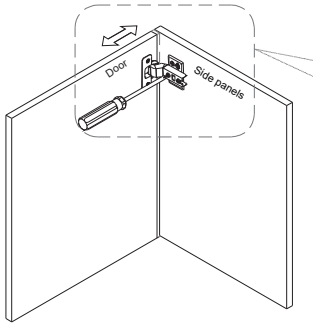


Horizontal by screw adjustment!

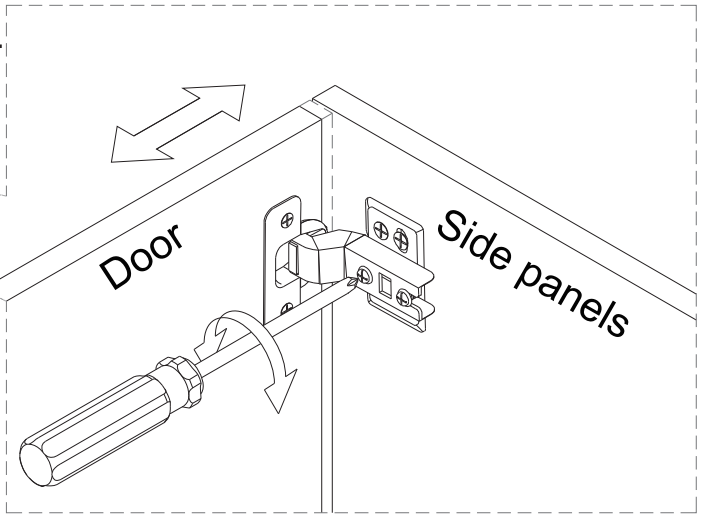


Concealed hinges are three-way adjustable.

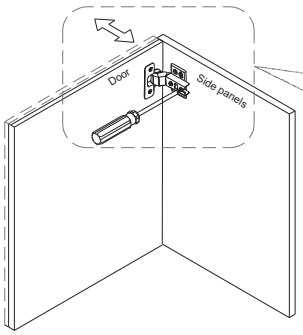


In-and-out by loosening the hinge arm mounting screw or via cam adjustment!

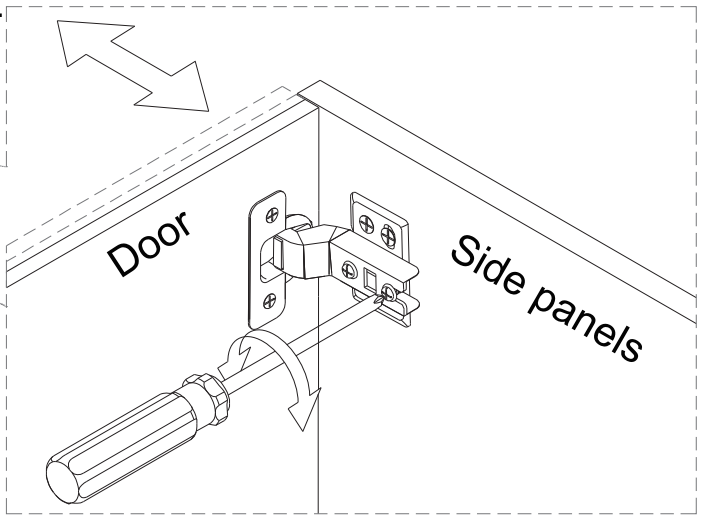

Concealed hinges are three-way adjustable.

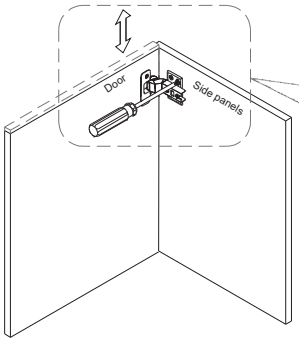


Vertical via slots in the mounting plate or via cam adjustment!

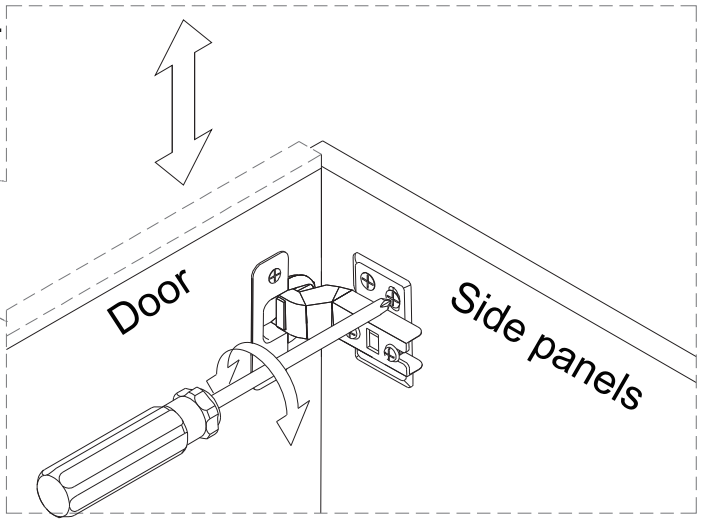


Step 11


If you want to open the door, you need to gently press on the upper part of it.

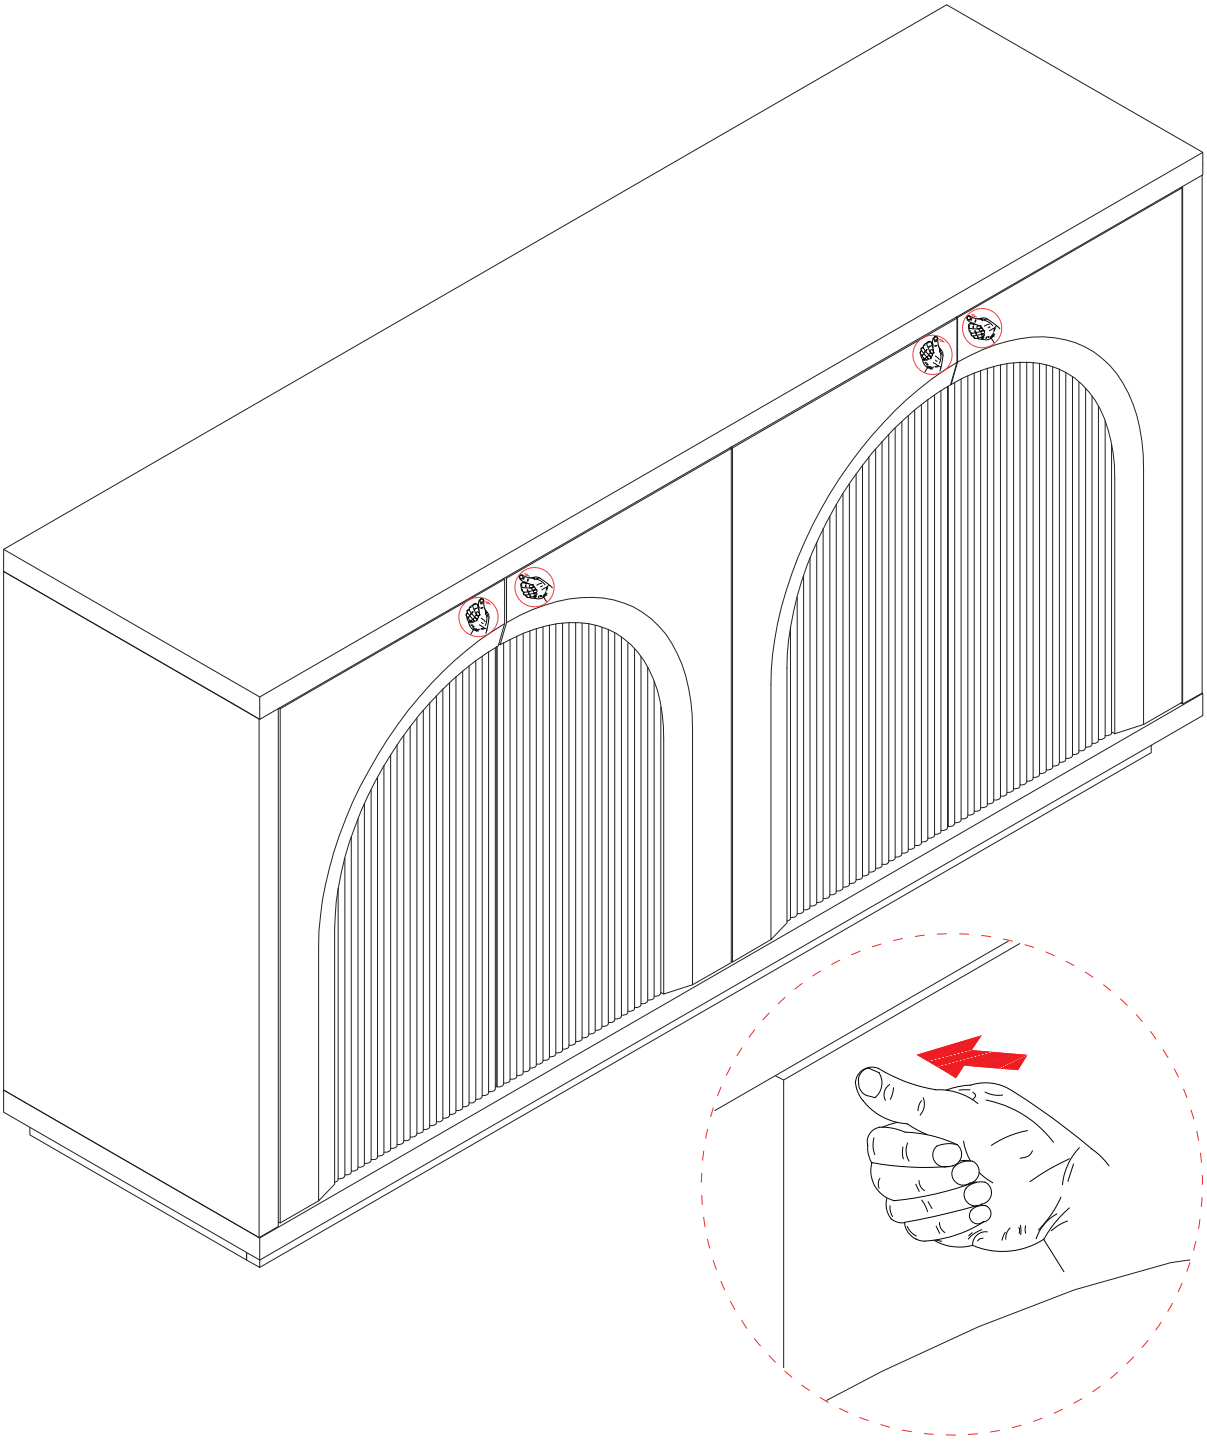



Step 12

Pass screw (2) through the anti-fall part (1) and insert it behind the panel, then tighten with screwdriver(6).

2	 x 4	D4x20mm	6	 x 1	Screwdriver
1	 x 2	Anti-tip component			



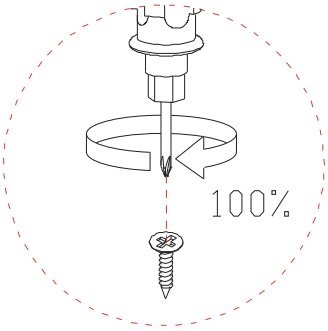


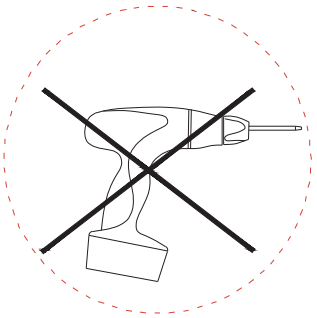


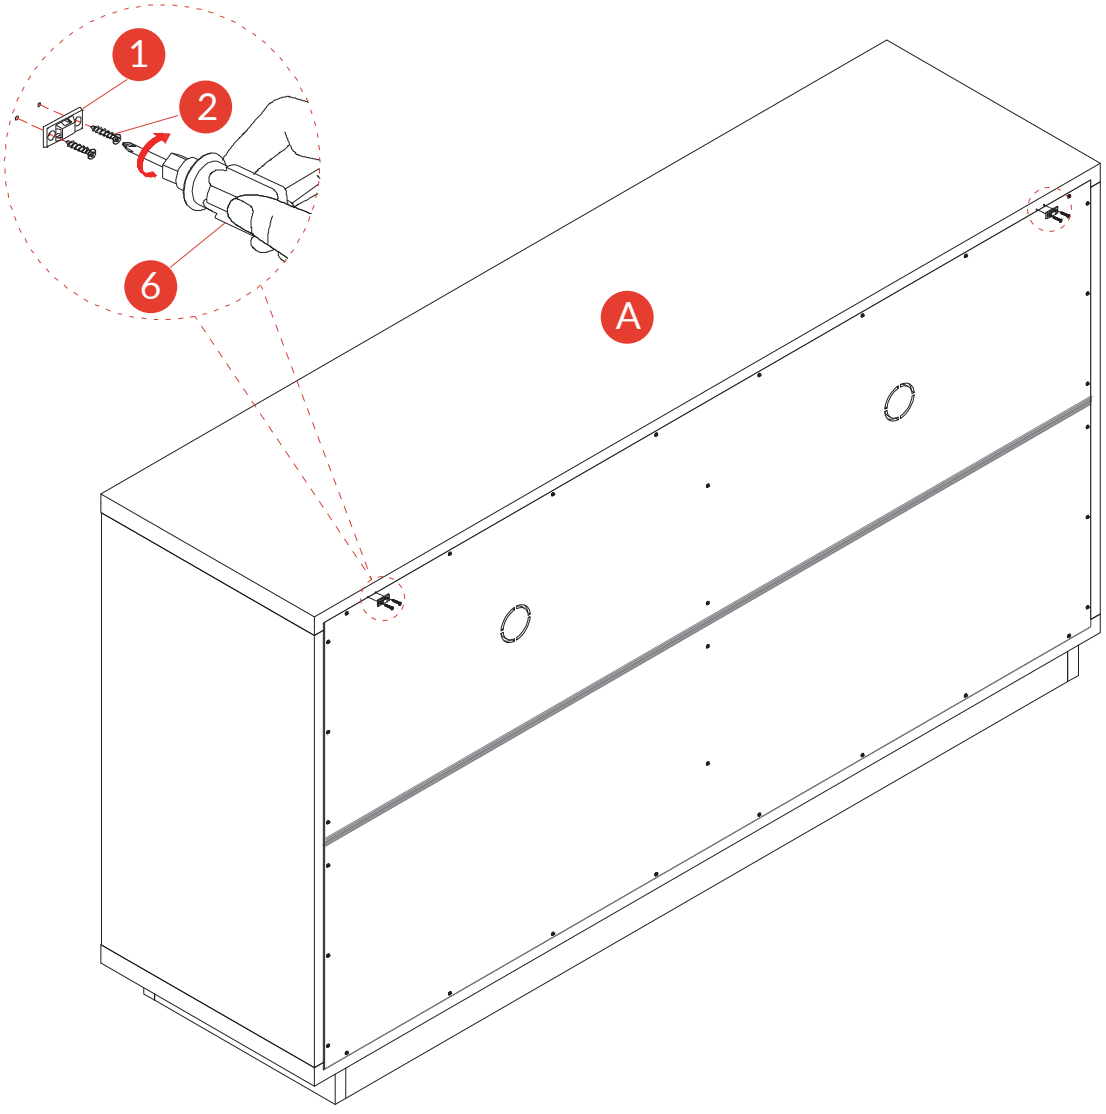


Step 13


Install Anti-tip device (1) to the wall in this step.

5	 x 4	D4x40mm	6	 x 1	Screwdriver
1	 x 2	Anti-tip component	4	 x 4	L30mm

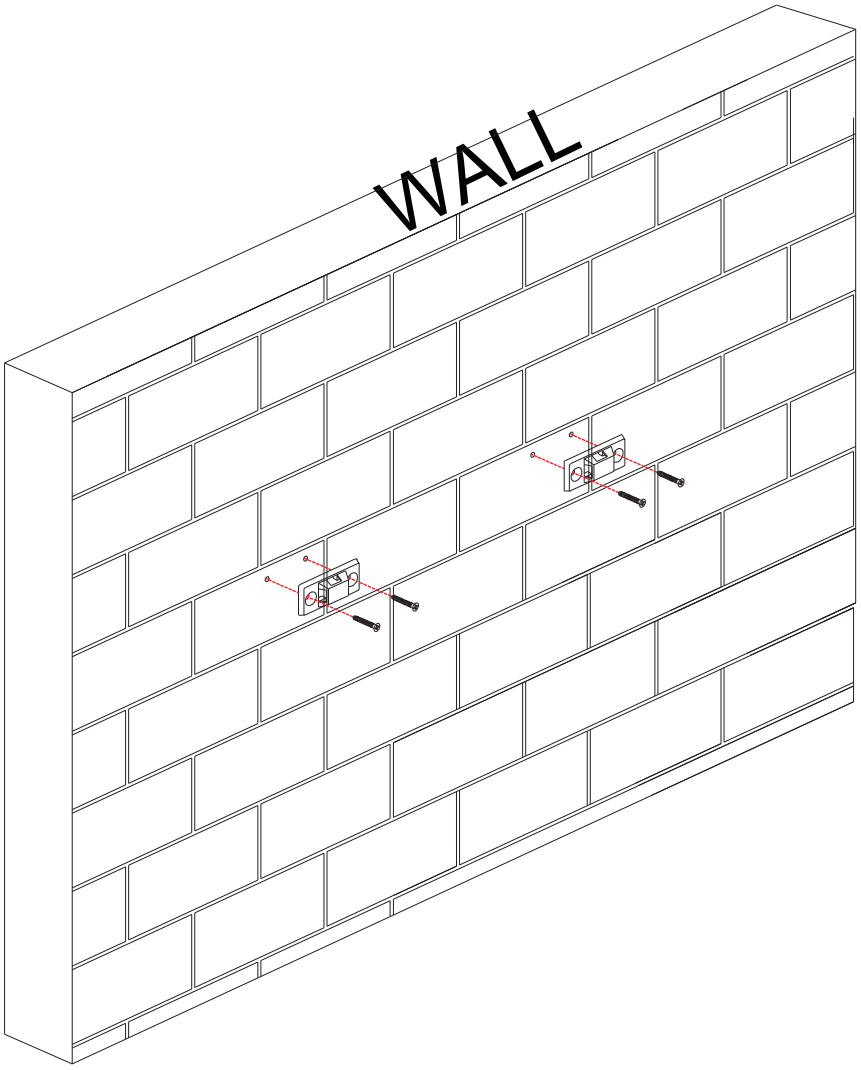


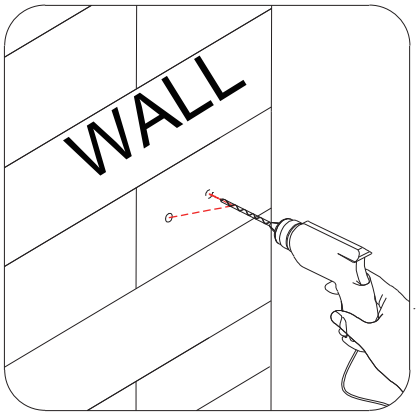

1.Drill a hole in the wall with an electric drill.

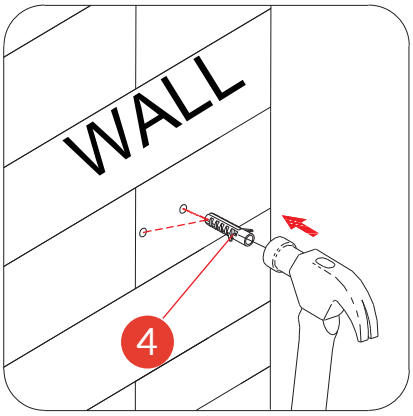

2.Tap the plastic wall anchor into the hole with a hammer.

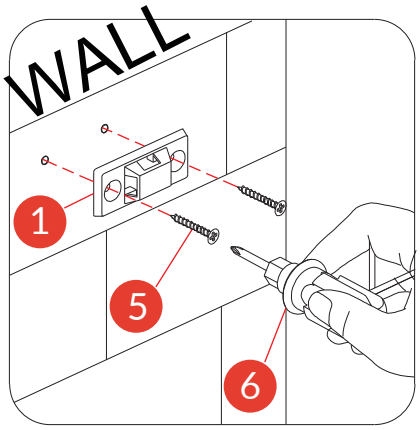

3.Secure the Anti-tip device 1 to the wall with screws 5.

Step 14

⚠WARNING





Children have died from furniture tipover.To reduce the risk of furniture tipover:

-ALWAYS install anti-tip device provided.
-NEVER put a TV on this product.
-NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
-NEVER open more than one drawer at a time.
-Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

3	x 2	Hardware pack

