
# Side Knob Function Description

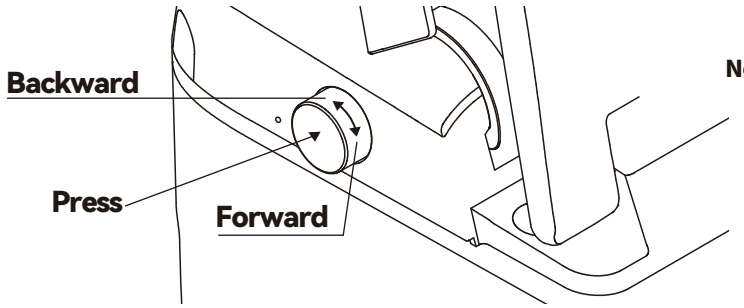


**Knob function description**
**No need to reset the side knob after use**

## User sitting

- Hip wash: knob backward,spray bar extend,hip wash works
- Female wash: Knob forward, spray bar extend, female wash works.
- Mobile Wash: Under hip/female wash, twist the side knob forward or backward to start the nozzle moving and wash.
- Stop: Under wash working status， press the knob to stop current working function.

## Not user sitting

- Press the knob to flush.

## Foot Kicking

- When the lid and seat are closed, foot kick the button to open the seat lid.
- When the lid open， seat closed, foot kick the button， the seat automatically opens;
- When the lid and seat are open， foot kick the button to activate the flushing function.

# Remote Control Sync

This remote is pre-synced with current smart toilet at the factory. Normally, no additional syncing is needed.

If the remote is not working, you can try to re-sync it using the method below:



1. Turn off the circuit breaker (power supply).

2. Rotate the knob backward to the hip wash position and hold it in place. Simultaneously, restore power to the toilet.

3.After hearing a long beep, press any button on the remote control within 2 seconds.

4.Once another long beep is heard, the pairing is successful

SM8012


# Remote Control Hidden Functions

Short Press: Instantly activates the primary function labeled on the button.

Long press (hold for 6s) Activates a hidden functions)

**UV Lamp:**

Without sitting on the toilet, press and hold the "**Cleaning/UV Lamp**" button for 6s to activate ultraviolet sterilization.

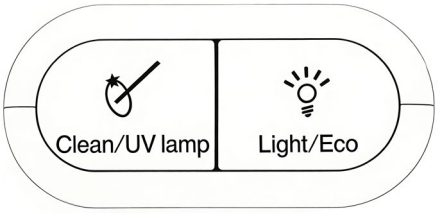


Eco:
Press and hold the button
more than 6s to turn on/off Eco function

**Flushing Time Setting:**

1.While powered on, press and hold the "**Stop**" button for 6s to turn off the toilet.

2.Within 15s, briefly press the "**Flush**" to enter settings. Press the "**Before**" to increase flushing time, or the "**After**" to decrease it.

3.Once set, press the "**Stop**" for 6s to power on and save the settings. Audio prompts will sync with the process—the number of beeps indicates the setting level.

**Automatic Drying On/Off:**

1.Press the "**Stop**" button for 6 seconds to turn off the toilet.

2.Within 15s, briefly press the "**Dryer**". Two beeps indicate the automatic drying is turned on; one beep indicates it is turned off

3.Press the "**Stop**" button again to turn on and save the settings.

4.The drying duration is 3 minutes.

**Lid Opening Distance Adjustment:**

1.Press "**Stop**" for 6 seconds to turn off the toilet. Within 15 seconds, briefly press the "**Smart Tum**"—the display will show the "U2" symbol.


2.Then, briefly press the "**Before**" to increase the sensing distance, or the "**After**" to decrease it. There are 5 adjustable levels in total, with level 2 set as the default.

**Foot Sensor Switch:**

Press the "**Air Temp**" button for 6 seconds. Two beeps indicate the sensor is turned on; one beep indicates it is turned off. It is enabled by default.

**Atmosphere Light Switch:**

Press the "**Lady**" button on the remote control for 6 seconds. One beep turns it off, while two beeps turn it on. This function works regardless of whether someone is seated and is enabled by default.

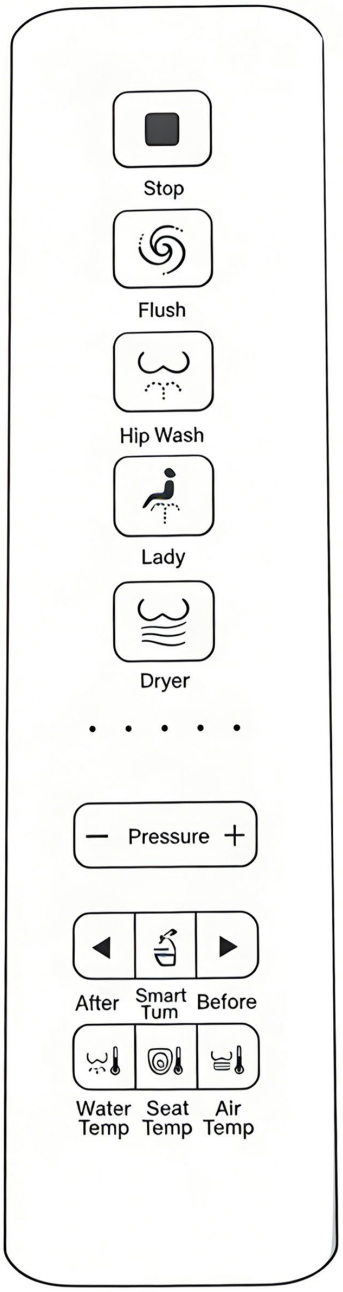


**Automatic Flush :**

Press "**Flush**" button for 6s to turn on (2 beeps); 1 beep is off.

Auto-flush (default on): activates after effective sitting for 5s,

**Switch between radar and foot-sensing flip cover:**

Press the "**Hip Wash**" button for 6s. Two beeps turn it on, one beep turns it off. Default is on.

**Rinse Flushing:**

Press the "**Water Temp**" button for 6s. Two beeps turn it on, one beep turns it off. Default is on.

**Restore Factory Settings:**

Without sitting, press and hold the "**Seat Temp**" button for 6s. One beep indicates the factory settings have been restored.

**Lid Opening Force Adjustment:**

1.Press the "**Stop**" for 6s to turn off the toilet.

2.Within 15s, briefly press the "**Before**" button—the display will show "07".

3.Briefly press the "**Before**" button to adjust the lid opening force. A higher number indicates greater force, with a total of 14 levels available. The default setting is level 7.

Press the "**Stop**" button again to power on and save the settings.

Seat Opening Force Adjustment:

The method is the same as for adjusting the lid opening force, but briefly press the "**After**" button to adjust the seat opening force.

Customer Service email: wzcustomerservice@outlook.com