

QUICK START GUIDE

CROSLEY PROFESSIONAL® DRYER

OPERATING INSTRUCTIONS

⚠️

WARNING

Fire Hazard

No washer can completely remove oil.
Do not dry anything that has ever had any type of oil on it (including cooking oils).
Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.
Failure to follow these instructions can result in death or fire.

⚠️

WARNING

Explosion Hazard


Keep flammable materials and vapors, such as gasoline, away from dryer.
Do not dry anything that has ever had anything flammable on it (even after washing).
Failure to follow these instructions can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.


STEP 1. CLEAN LINT SCREEN




STEP 2. LOAD CLOTHES

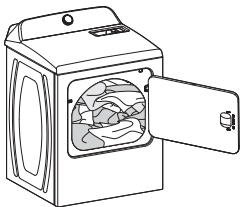


STEP 3. PRESS POWER BUTTON

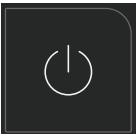

STEP 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*

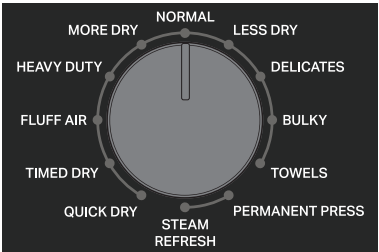

STEP 5. ADJUST CYCLE SETTINGS AND OPTIONS, IF DESIRED

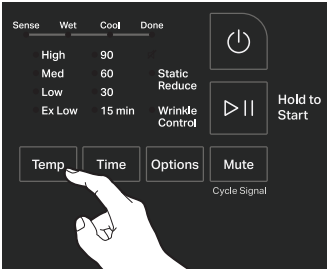

STEP 6. PRESS, HOLD, AND RELEASE START BUTTON




Hold to Start

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

**Not all cycles, settings or options are available with all models.*

CONTROL PANEL AND FEATURES

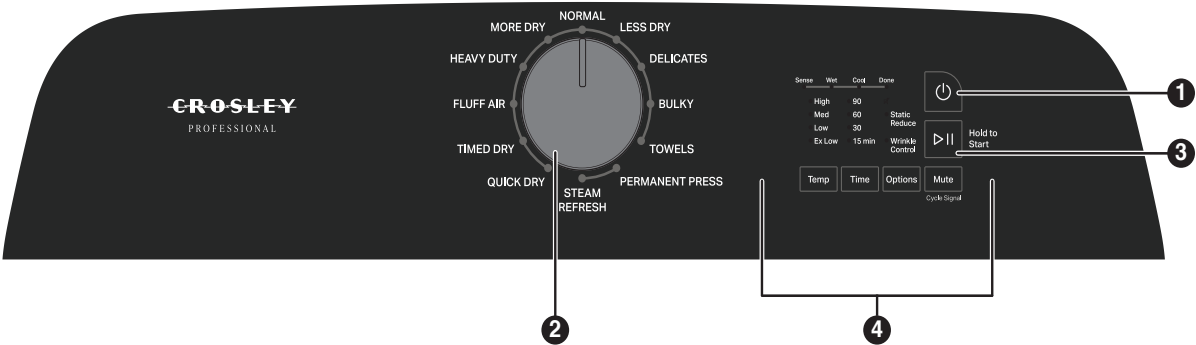

**Not all features, cycles, and options are available on all models. Appearance may vary.*

1 POWER

Press to turn on/off or to stop/cancel a cycle.

2 CYCLE KNOB

Turn knob to select desired cycle.

NOTE: Your dryer comes with two types of cycles - Sensor drying cycles and Timed drying cycles.

SENSOR DRYING CYCLES:

Use Sensor Cycles for better fabric care and energy savings. The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

TIMED DRYING CYCLES:

In these cycles, you can specify the drying time. Time options available are 15, 30, 60 and 90 minutes. For a complete list of all cycles, please refer to the cycle guide document.

3 START/PAUSE

Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle.

NOTE: These clothes dryer's Government energy certifications were based on the Timed Dry Cycle, Maximum Drying Temperature and Maximum Dry Time Settings. The as-shipped defaults of Normal Dryness, Wrinkle Control™ off, were used.

4 CYCLE MODIFIERS (Not all modifiers are available on all cycles)

TEMP

Press to modify the cycle's available temperature. (Extra Low, Low, Medium, and High)

TIME (Fluff Air, Timed Dry, and Quick Dry Only)

Press to modify the time for the timed cycle between 15, 30, 60, and 90 minutes.

OPTIONS

Press to add or remove options for each cycle. Press once to activate Wrinkle Control™, twice to activate Static Reduce and three times for both.

WRINKLE CONTROL™

If you will be unable to remove a load immediately, activate this option to add 150 minutes of periodic tumbling to help reduce wrinkles from forming after the cycle completes.


STATIC REDUCE

This option can help reduce the build up of static cling formed during the drying process. When activated, this option will tumble with steam towards the end of the cycle to reduce static.

MUTE CYCLE SIGNAL

Use this option to turn the end of drying cycle signal on or off.

CHOOSING THE RIGHT CYCLE

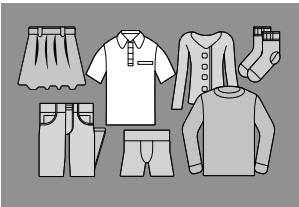

A cycle guide for your dryer can be found online at www.crosley.com. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Medium temperature for cottons, linens and mixed-garment loads.

SPECIALITY CYCLE

PERMANENT PRESS:

This cycle is designed to help remove or reduce wrinkles, this cycle is great for permanent press clothing. The dryer cycle uses low heat and a cool down period to keep clothes from wrinkling or creasing.

STEAM REFRESH:

This cycle is best for reducing wrinkles and odors from dry items. This cycle is great to refresh a wrinkled garment or when a load was left in the dryer too long.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit www.crosley.com . This may save you the cost of a service call.						
Register Product	Schedule Service	How To's & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
		To speak with a customer service representative or if you have additional questions, call us toll free at 1-866-698-2538 . You can write with any questions or concerns at: Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 Please include a daytime phone number in your correspondence.				

GUÍA DE INICIO RÁPIDO

CROSLEY PROFESSIONAL® SECADORA

INSTRUCCIONES DE FUNCIONAMIENTO

⚠️

ADVERTENCIA

Peligro de Incendio

Ninguna lavadora puede eliminar completamente el aceite.

No seque ningún artículo que haya tenido alguna vez cualquier tipo de aceite (incluyendo los aceites de cocina).

Los artículos que contengan espuma, hule o plástico deben secarse en un tendedero o usando un Ciclo de Aire.

No seguir estas instrucciones puede ocasionar la muerte o incendio.

⚠️

ADVERTENCIA

Peligro de Explosión


Mantenga los materiales y vapores inflamables, tales como la gasolina, alejados de la secadora.

No seque ningún artículo que haya tenido alguna vez cualquier sustancia inflamable (aún después de lavarlo).


No seguir estas instrucciones puede ocasionar la muerte, explosión o incendio.

ADVERTENCIA: A fin de reducir el riesgo de incendio, choque eléctrico o lesiones personales, lea las INSTRUCCIONES IMPORTANTES DE SEGURIDAD que se encuentran en el Manual del propietario, antes de usar el electrodoméstico.

PASO 1. LIMPIE EL FILTRO DE PELUSA

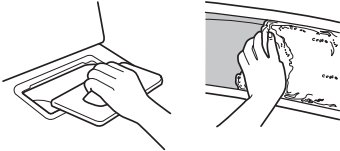

PASO 2. CARGUE LA ROPA Y CIERRE LA PUERTA

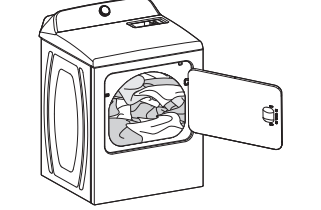


PASO 3. PRESIONE EL BOTÓN POWER (ENCENDIDO)



PASO 4. SELECCIONE EL CICLO DESEADO PARA SU CARGA*



PASO 5. AJUSTE LA CONFIGURACIÓN DEL CICLO Y OPCIONES, SI LO DESEA

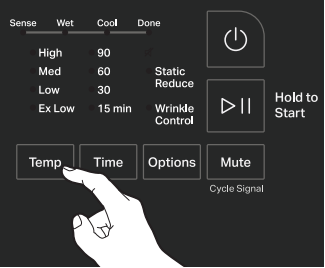


PASO 6. MANTENGA PRESIONADO Y LUEGO SUELTE EL BOTÓN DE INICIO



NOTA: Para iniciar el ciclo, debe presionar el botón Start (Inicio) durante 1 segundo. Luego de que se enciendan las luces de estado, suelte el botón de inicio.

PANEL DE CONTROL Y CARACTERÍSTICAS

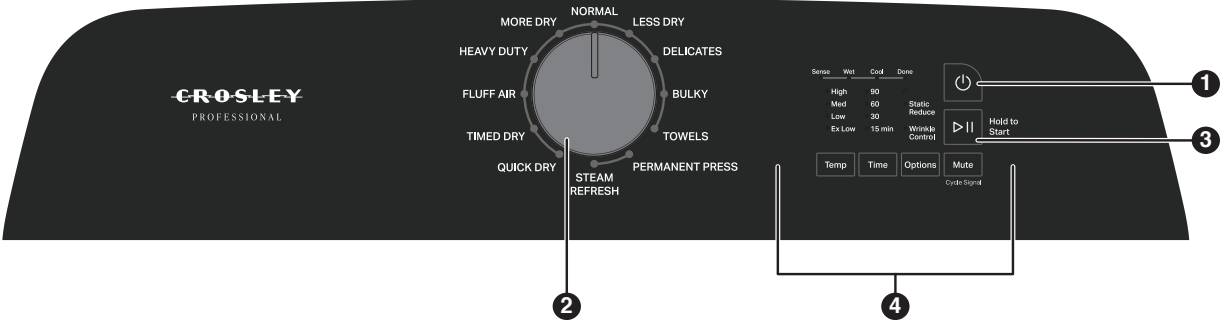

**No todas las funciones, los ciclos ni las opciones están disponibles en todos los modelos. El aspecto puede variar.*

1 POTENCIA

Oprimalo para encender/apagar o para detener/cancelar un ciclo.

2 PERILLA DE CICLO

Gire la perilla para seleccionar el ciclo deseado.

NOTA: Su secadora se suministra con dos tipos de ciclos: ciclos de secado por sensor y ciclos de secado programado.

SENSOR DRYING CYCLES (CICLOS DE SECADO POR SENSOR):

Utilice los ciclos con sensor para un mejor cuidado de las telas y ahorros de energía. La secadora detecta la humedad en la carga o la temperatura del aire y se apaga cuando la carga alcanza el nivel de sequedad seleccionado. Tenga en cuenta que no puede ajustar el tiempo de estos ciclos.

TIMED DRYING CYCLES (TEMPORIZADOS SECADO CICLOS):


En estos ciclos, puede especificar el tiempo de secado. Los siguientes son los tiempos disponibles: 15, 30, 60, y 90 minutos. Para ver una lista completa de todos los ciclos, consulte el documento de guía de ciclos.

3 START/PAUSE (INICIO/PAUSA)

Mantenga presionado el botón Start/Pause (Inicio/Pausa) durante un segundo, hasta que se hayan encendido todas las luces de estado; a continuación, deje de presionar para que se inicie el ciclo. Oprima esta opción durante un ciclo para pausarlo.

NOTA: Las certificaciones de energía gubernamentales de esta secadora de ropa se basaron en el ciclo Timed Dry Cycle (Secado programado), y los ajustes Maximum Drying Temperature (Temperatura de secado máximo) y Maximum Dry Time (Tiempo de secado máximo). Se utilizaron los valores predeterminados de Nivel de secado normal y la opción Wrinkle Control™ (Control de arrugas) desactivada.

CÓMO ELEGIR EL CICLO ADECUADO

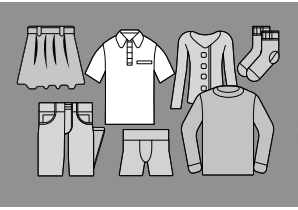

Puede encontrar una guía de ciclos de la secadora en línea en www.crosley.com. El documento ayuda a identificar qué ciclo puede elegir para los diferentes tipos de carga y también las opciones de ciclo predeterminadas. Por ejemplo, recomendamos usar el ciclo NORMAL con temperatura media para cargas de ropa de algodón, lino y mixtas.

Para obtener instrucciones de instalación e información sobre mantenimiento, almacenamiento durante el invierno y sugerencias sobre transporte, consulte el Manual del propietario que viene incluido con su electrodoméstico.

CICLO DE ESPECIALIDAD

PERMANENT PRESS (PLANCHADO PERMANENTE):

Este ciclo está diseñado para ayudar a eliminar o disminuir las arrugas, este ciclo es excelente para prendas de planchado permanente. El ciclo de la secadora utiliza calor bajo y un periodo de enfriamiento para evitar que las prendas se arruguen.

STEAM REFRESH (REVITALIZADO CON VAPOR):

Este ciclo es ideal para reducir las arrugas y los olores de las prendas secas. Este ciclo es excelente para revitalizar una prenda arrugada o cuando se deja una carga en la secadora por demasiado tiempo.

ASISTENCIA O SERVICIO E INFORMACIÓN ADICIONAL

Para obtener información sobre cualquiera de los siguientes artículos, la guía de ciclos completa, garantía, las dimensiones detalladas del producto o para obtener instrucciones completas de uso e instalación, visite www.crosley.com . Esto le podría ahorrar el costo de una llamada al servicio técnico.						
Registrar el producto	Solicitar una visita de servicio	Instrucciones y preguntas frecuentes	Manuales y descargas	Agregar plan de servicio	Piezas	Accesorios
		Para hablar con un representante de atención al cliente o si tiene más preguntas, llámenos sin cargo al 1-866-698-2538 Vous pouvez adresser tous commentaires ou toutes questions à : Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 Incluya en su correspondencia un número de teléfono en el que se le pueda localizar durante el día.				