
# DINING CHAIR

## ASSEMBLY GUIDE

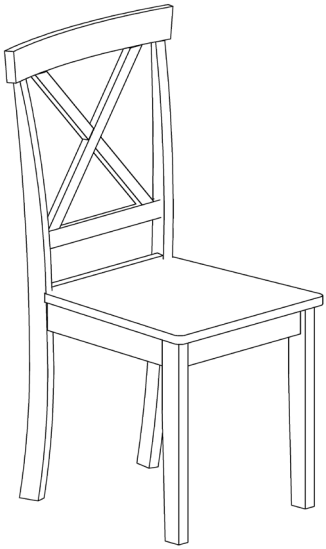

**Important - Please read these instructions fully before starting assembly**



**SAFETY AND CARE ADVICE**



**NO POWER TOOLS**

## SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre

# IMPORTANT INFORMATION

30 MINUTE BUILD

TWO PERSON



MAXIMUM CAPACITY 120Kg

PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

## LIST OF PARTS

| No | Description | Qty |
|---|---|---|
| 1 | Chair Back | 2 |
| 2 | Front Legs | 2 |
| 3 | Apron | 4 |
| 4 | Seat | 2 |

## HARDWARE LIST


| No | Description | Qty |
|---|---|---|
| A | JCBC  | 12 |
| B | Spring Washer  | 12 |
| C | Wood Screw  | 6 |
| D | Wood Dowel  | 12 |
| E | Allen Key  | 1 |


**NOTE:** The quantities above are the correct amount to complete the assembly for 2x chairs. In some cases more fittings may be supplied than are required.

## STEP 1

Use a clean, flat, soft surface to avoid any bumps or scratches.

Insert 6 x dowels into the ends of 2 x support aprons [3] - 2 in one end and 1 in the other.

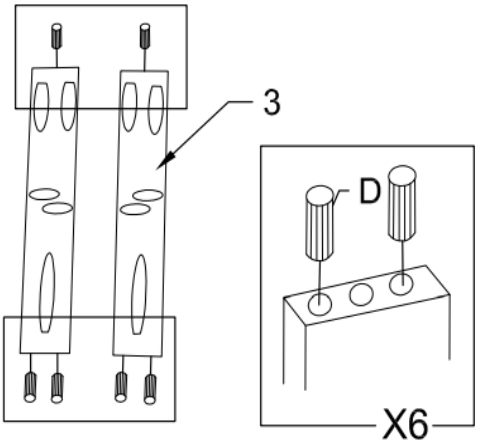

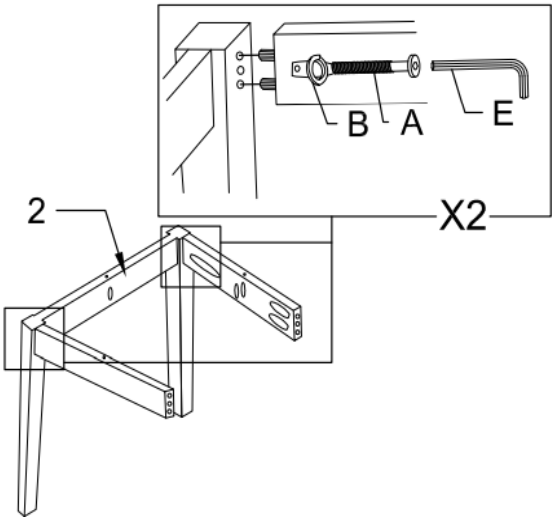



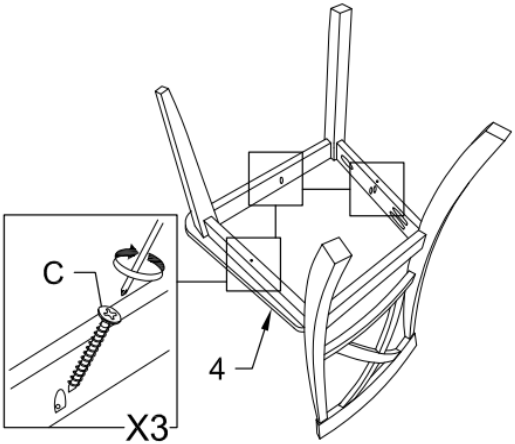

## STEP 2

Align the dowels on the 2 x support aprons [3] with the pre drilled holes on front leg [2].
Secure using 2 x spring washer [B] and 2 x bolt [A] into the pre drilled holes.
Tighten using allen key [E]

## STEP 3

Place the chair back [1] upside down and align the dowel on the other end of the 2 x support aprons [3] with the pre drilled holes.
Secure using 2 x spring washer [B] and 2 x bolt [A] into the pre drilled holes.
Tighten using allen key [E]

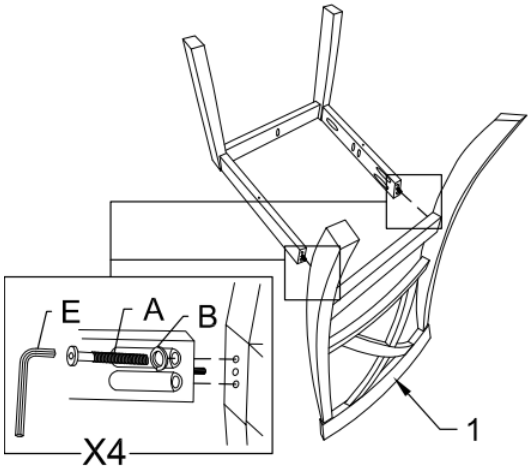


## STEP 4

Place seat pad [4] upside down under the seat frame and align with the pre drilled holes.
Secure using 3 x screw [C] and tigthen with a screwdriver.


Repeat all steps for the second chair.

## STEP 5

Carefully, and with help,  flip the chairs upright on to the legs. Check the stability.

Your Chairs are now ready to use!

NOTE: This chair is not suitable to stand on.

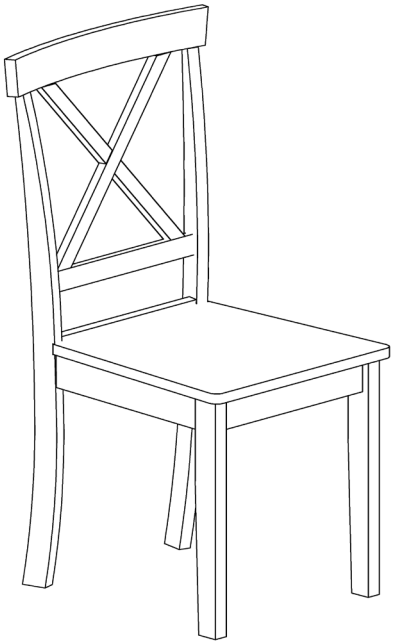




## OUR 2 YEAR GUARANTEE

our products come with a 2 year guarantee to give you peace of mind shopping

some garden furniture items have a 1 year guarantee

# WHAT THE GUARANTEE COVERS

**PRE-INSERTED FIXINGS**
e.g. loose metal threads

**FAULTY JOINTS**
e.g. legs bending

**EXTERNAL FIXING FAULTS**
e.g. metal discs removing from table top

**STRUCTURAL INTEGRITY**
e.g. the frame of the product