Assembly Instructions

Caution: You must read this **assembly instructions** before you proceed.

Care & Maintenance:

⊘  • Not for commercial use. For residential use only.

⊘  • DO NOT put hot items directly on furniture surface.

⊘ 

• DO NOT clean furniture with harsh cleansers or polish.

✓  • To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.

⊘  • Children should not climb or jump on the furniture.

⊘  • DO NOT write on furniture without a padded barrier to protect the surface.

✓  • To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and / or place under patio or awnings


⊘ 

• Stains may be removed with mild soap solution and damp cloth.

✓  • Dust and pick-up spill using a clean, non-colored, lint-free cloth.







Please look in the **Backrest front side** for all hardware.

DINING CHAIR



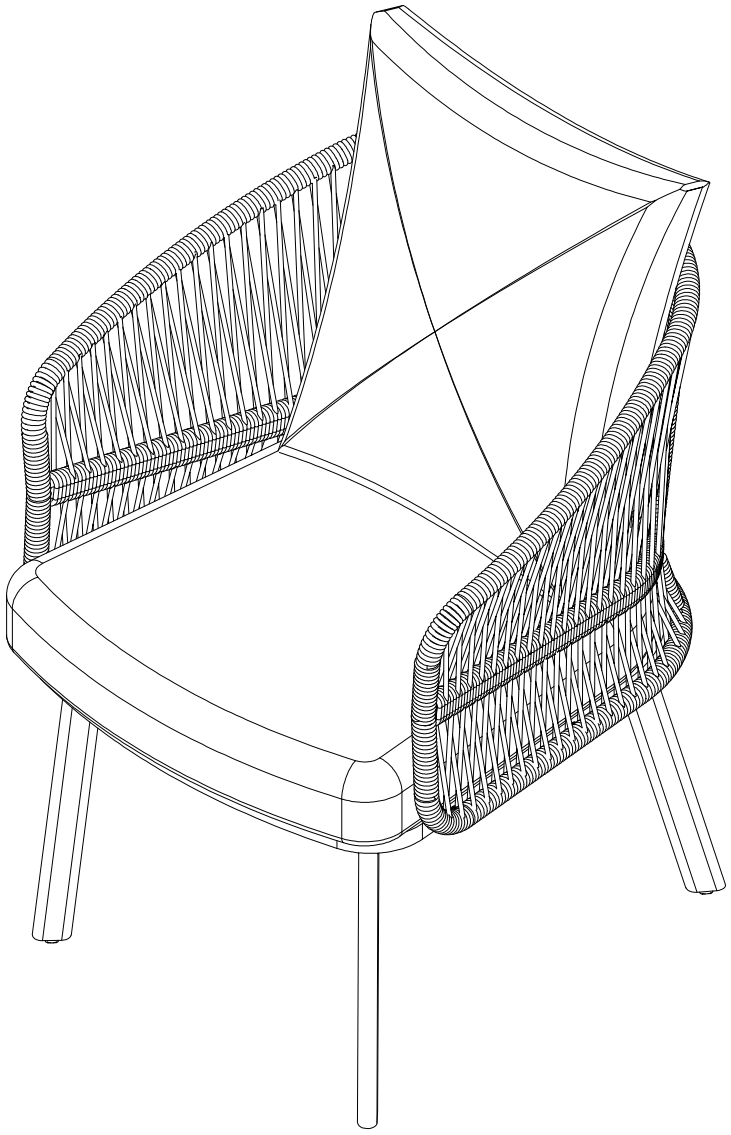


Caution: This Dining Chair is NOT a TOY.
Keep your child/children at bay during the assembly process.
Whenever moving/lifting the Dining Chair and to prevent damage to the chair, two adult partners may be needed to execute these actions.

Part list:

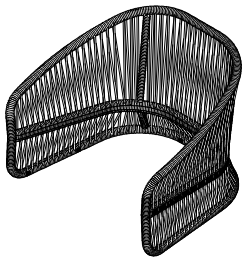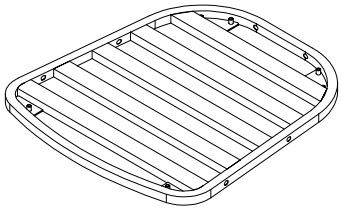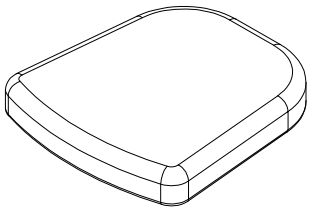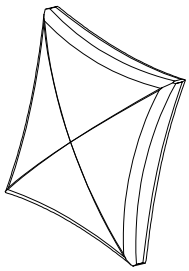
Label	Picture	Description	QTY
①		Backrest	1
②		Seat Panel	1
③		Front Leg	2
④		Back Leg	2
⑤		Seat Cushion	1
⑥		Back Cushion	1

Hardware:

Label	Picture	Description	QTY
A		Bolt ($\frac{1}{4}$"x35)	6
B		Bolt ($\frac{1}{4}$"x15)	12
C		Leveler Ø19x1/4"x15mm	4
D		Allen Wrench #4	1

Assembly Preparation:


Before Beginning Assembly:

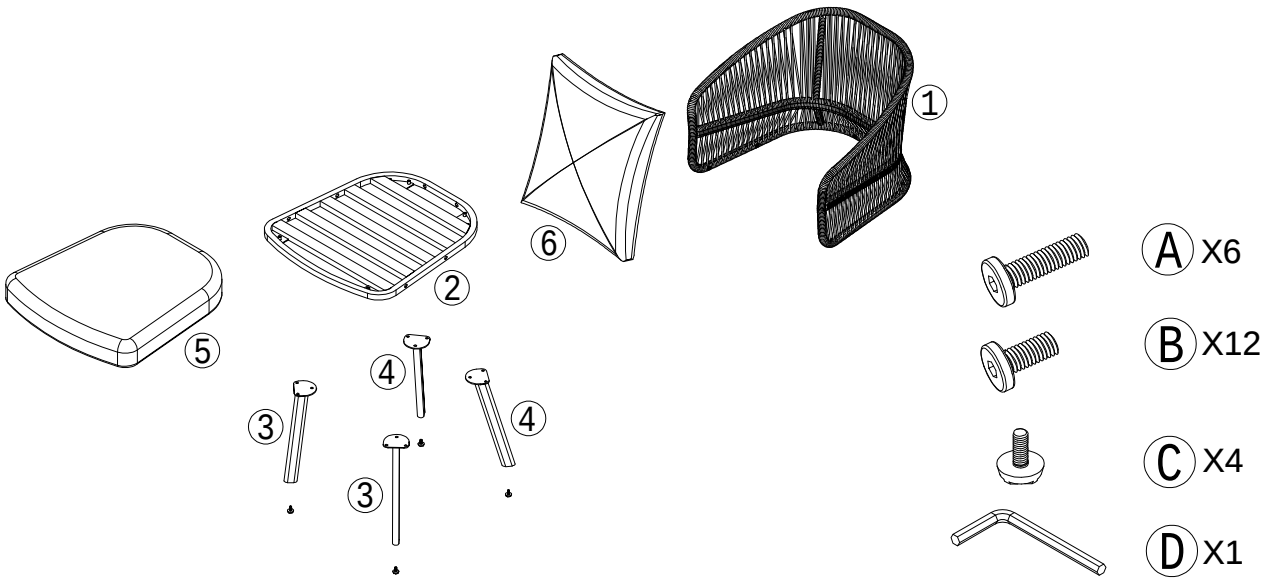

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-


Assembly Steps:

Overview

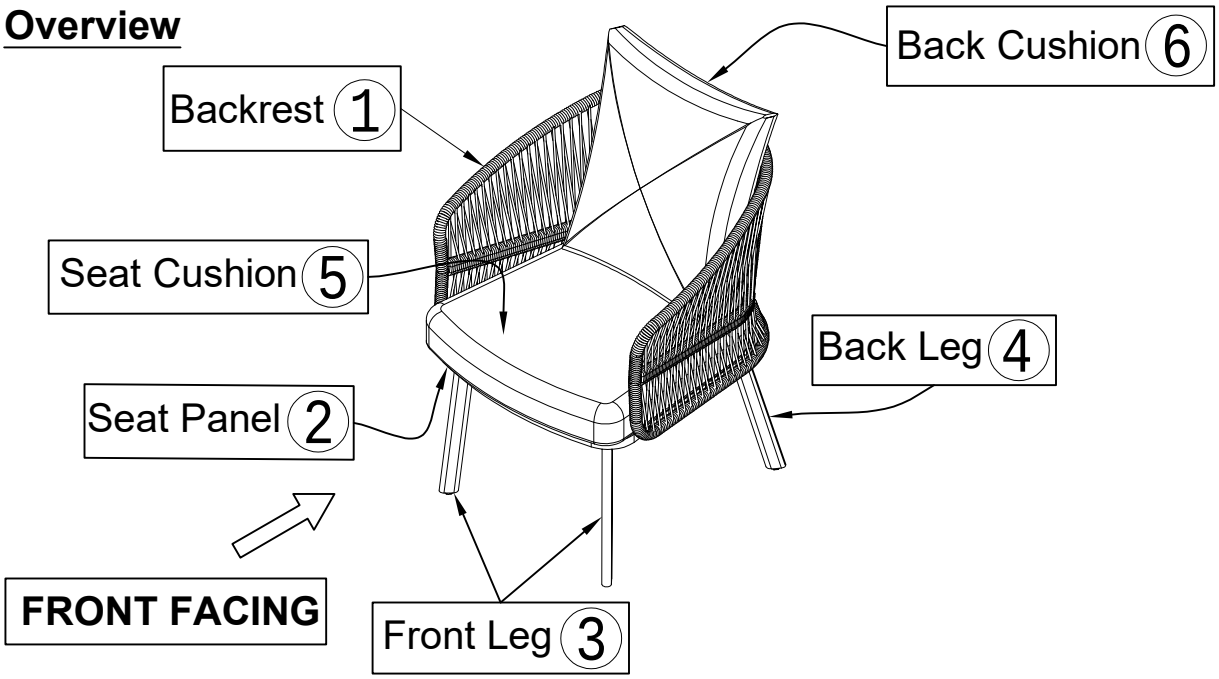


This Dining Chair has multiple parts and may require up to 15 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

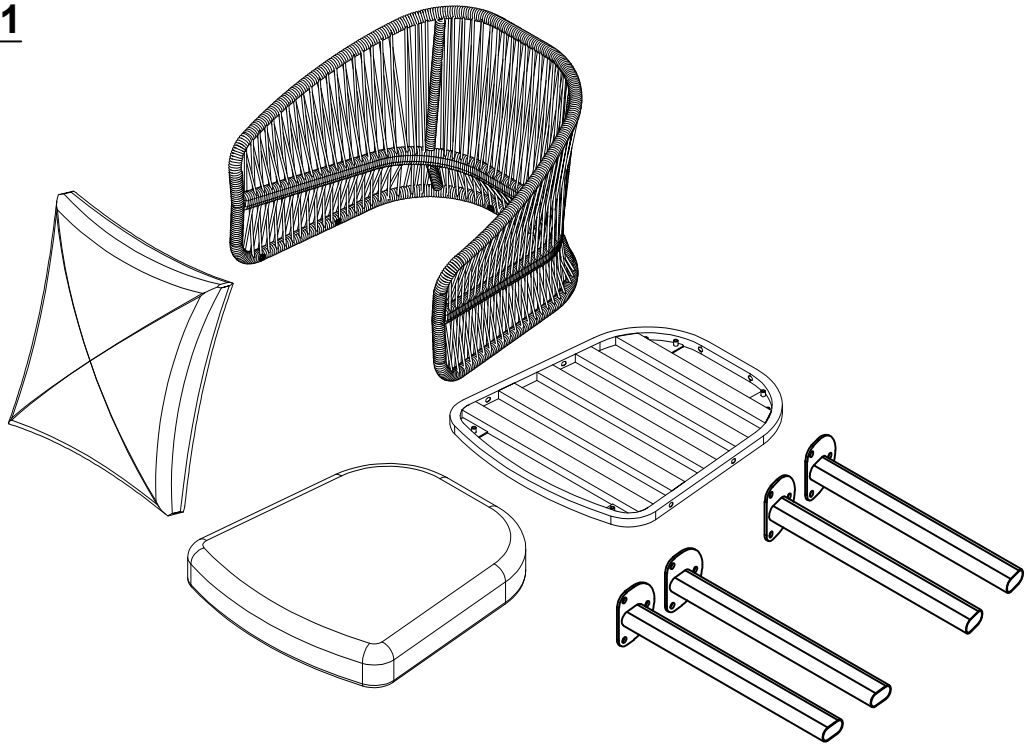


Unpack and place all parts on a clean, non-marring surface.

Step 2

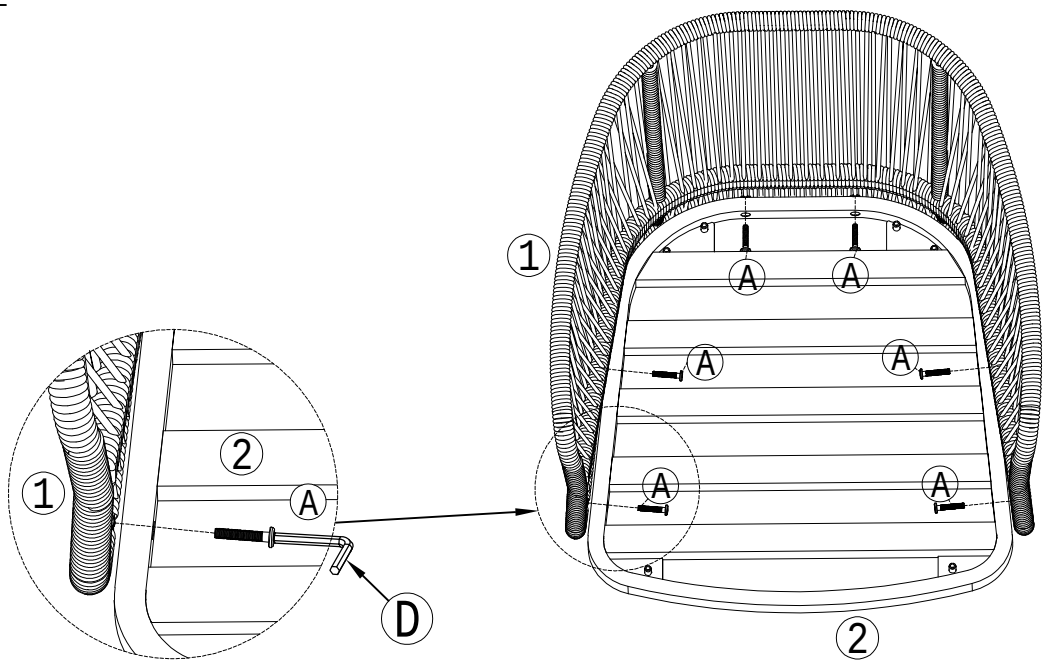


With assistance from your adult partner, position the Backrest(1) to the Seat Panel (2) as shown in the above picture.
Attach the Backrest (1) to the Seat Panel (2) using Bolts (A) and the Allen Wrench (D).
DO NOT fully tighten the Bolts at this time.

Step 3

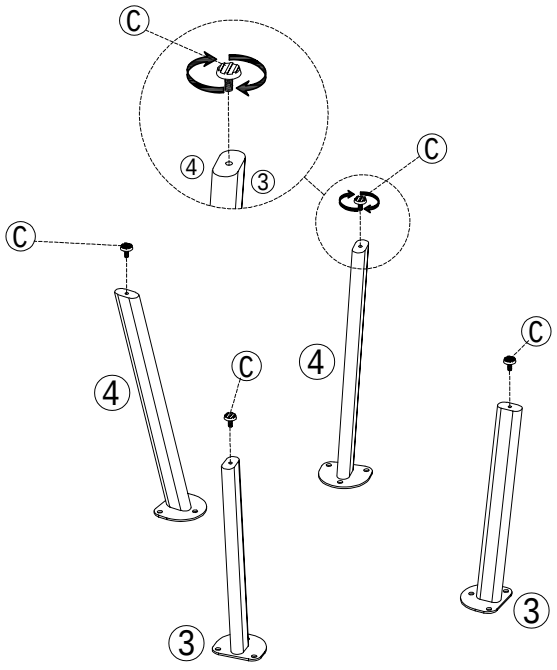


With assistance from your adult partner, position the Levelers (C) to Front Leg (3) and Back Leg (4) as shown in the above picture.
Attach the Levelers (C) to Front Leg (3) and Back Leg (4) as shown in the above picture.

Step 4

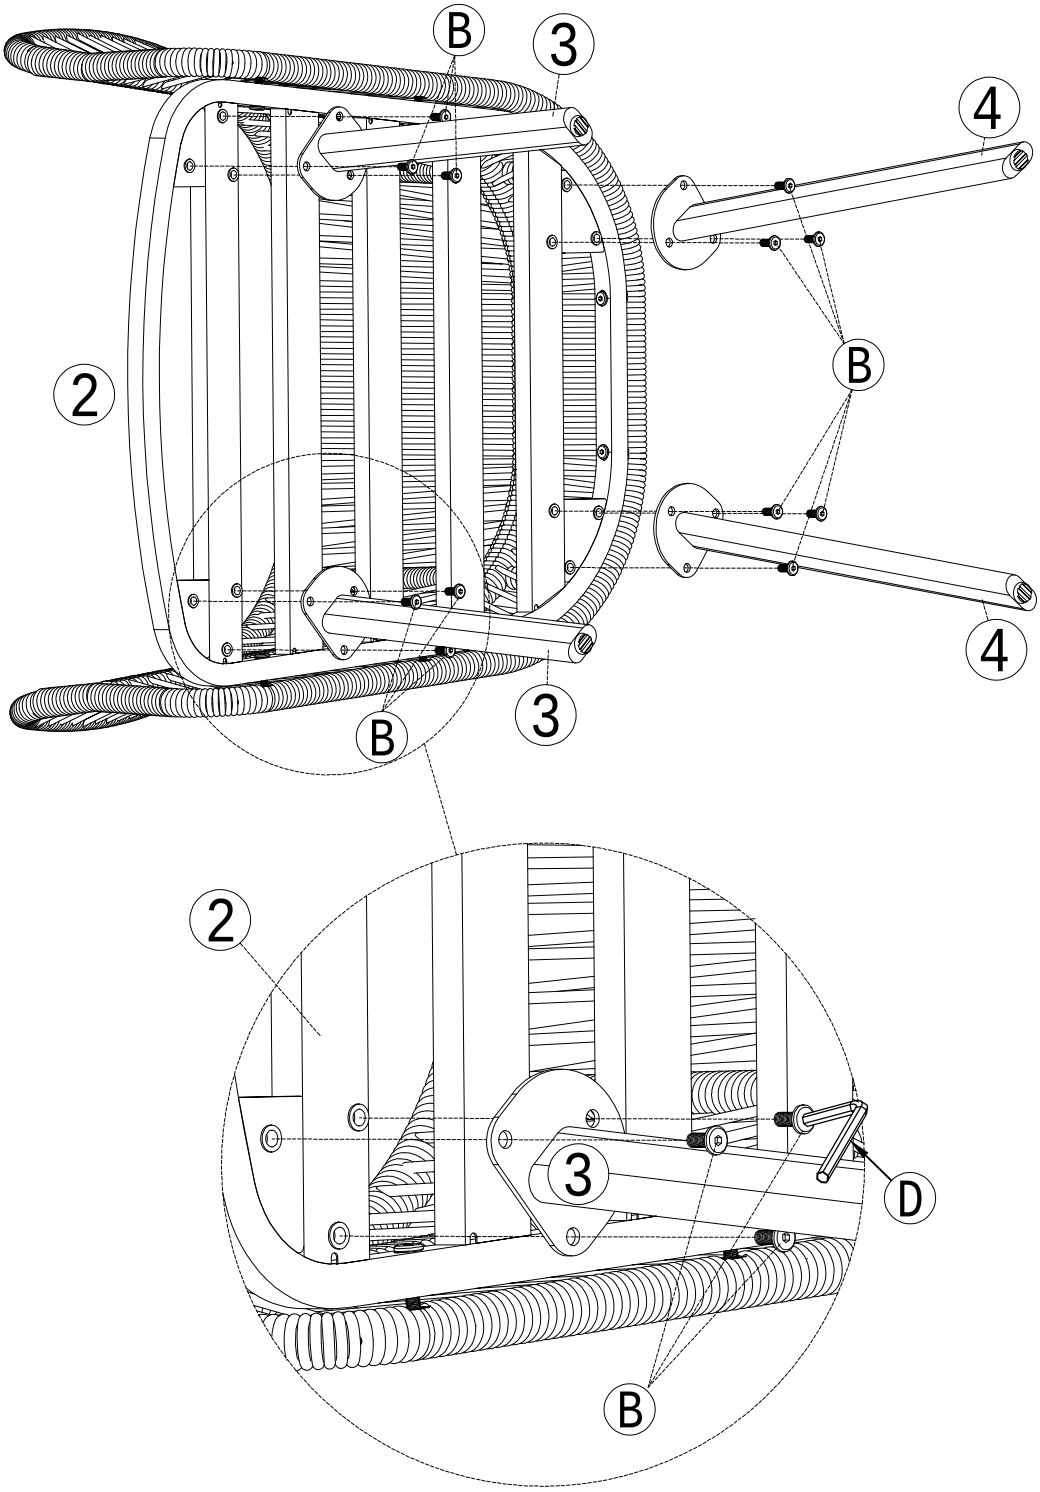


With assistance from your adult partner, position the Front Leg (3) and Back Leg (4) to the Seat Panel (2) as shown in the above picture.
Attach the Front Leg (3) and Back Leg (4) to the Seat Panel (2) using Bolts (B) and the Allen Wrench (D).
DO NOT fully tighten the Bolts at this time.

Step 5

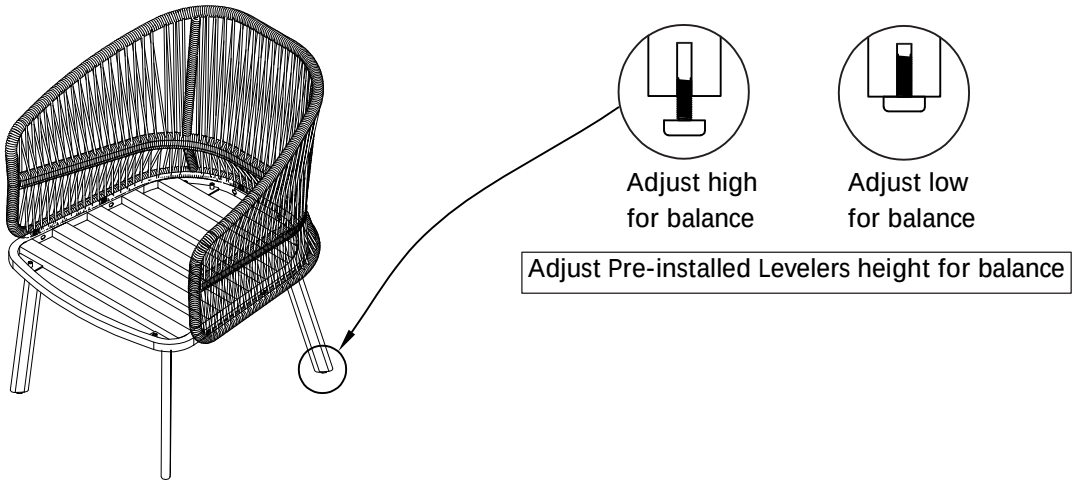

With the assistance from your adult partner Stand the Dining Chair up.
Inspect it and make sure all parts are adequately connected.
Gently and gracefully, sit onto the Chair.
This will help to align all the parts at all joint areas.
Then get off the Chair and proceed to tighten the Bolts and Screws in a sequential manner.
When tightening the Bolts and Screw tighten sequentially.
Do not tighten any Bolt fully and then move on towards the next one.
If there are still wobbles after tightening, loosen the Bolts and execute the same above process.

Step 6

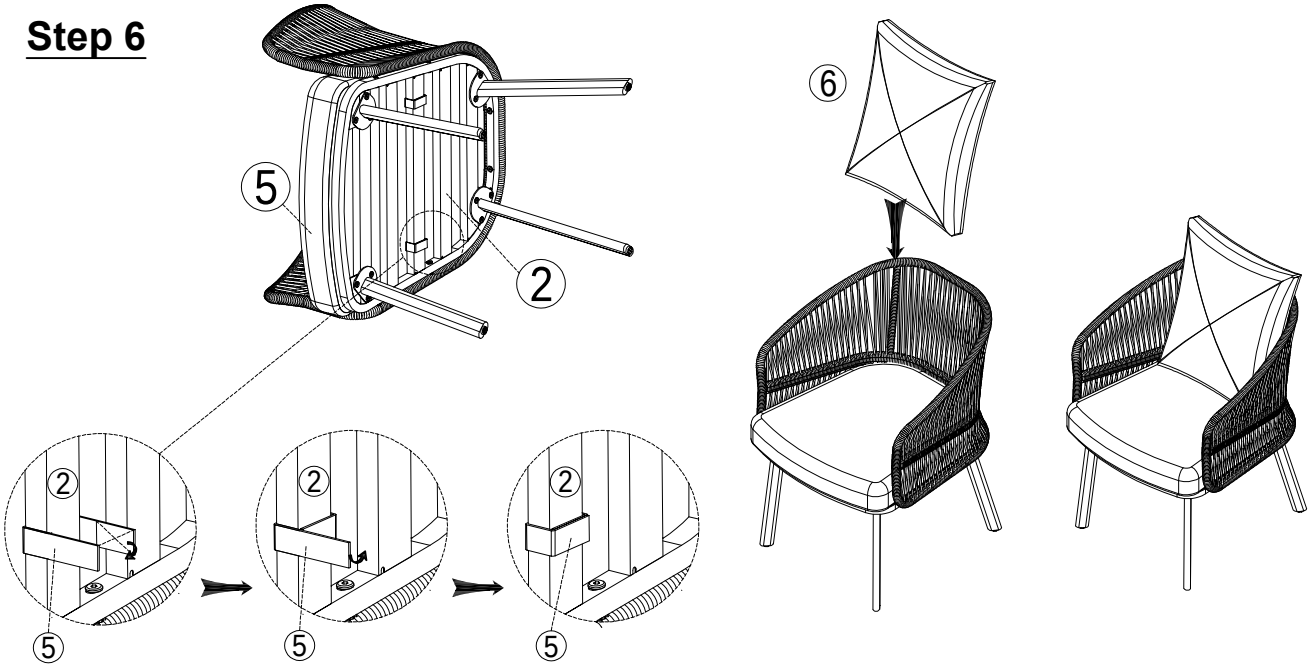

Place the Seat Cushion(⑤) onto the Dining Chair, then tie the magic tape of the Seat Cushion (⑤) to the Dining Chair as shown in the above picture.
Turn the Dining Chair right side up, place the Back Cushion (⑥) on the Backrest as shown in the above picture.
Your Dining Chair is ready for use.
This Dining Chair can only be use on flat, level surface.