CHIC OLOGY

CORDLESS 2 INCH
FAUX WOOD BLINDS

Check Components

Faux Wood Blinds **Components**	Blinds Width (inches) 12-36	37-48	49-72	73-84
Mounting Bracket	x 2			
Center Support Bracket	x 0	x 1	x 2	x 3
Screws	x 4	x 6	x 8	x 10
Valance	x 2			
Valance Clips	x 2	x 3	x 4	x 5
Side Returns (2 choices)	x 2			
Side Returns Clip	x 2			
Wand	x 1			
Hold Down Bracket	x 2			

Prepare necessary tools

1/8" drill bit

STEP 1: DETERMINE INSIDE OR OUTSIDE MOUNT

a. Inside/Ceiling or Inside/Wall Mount

(A minimum ***1 3/4 in.*** depth is required or ***3 3/4 in.*** depth for flush mounts.)

1) Place the mounting brackets on each end of the blind's headrail.
2) Mark the position of the mounting brackets with a pencil
3) Align with pencil marks with the brackets then drill into the window frame using the screws provided. Use a ***1/8 inch drill bit*** to make a hole.

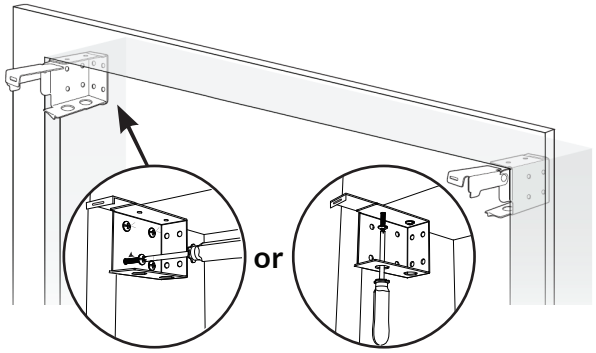

b. Wall or Outside Mount

(A minimum ***1 3/4 in.*** flat wall space is necessary)

1) Place the mounting brackets on each end of the blind's headrail against the wall(on the window frame or above the window frame).
2) Mark the position of the mounting brackets with a pencil.
3) Align with pencil marks with the brackets then drill into the window frame using the screws provided. Use a ***1/8 inch drill bit*** to make a hole.

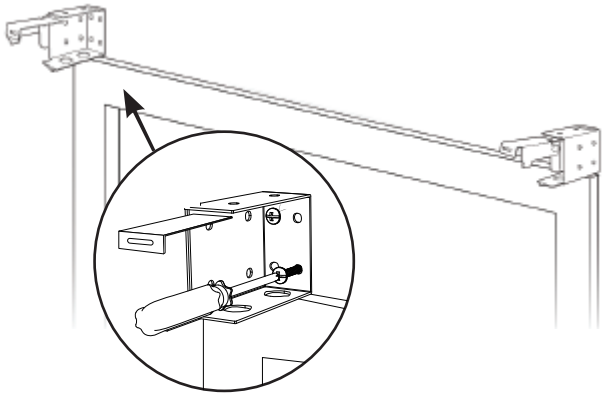

Note:

If your product includes a center bracket: Installing at the center of the blinds will provide additional support to blinds. Center support bracket are included for blinds ranging from 37" - 84"

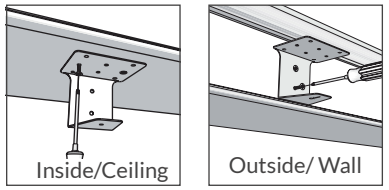

STEP 2: ATTACH VALANCE CLIPS

Insert the valance clips.

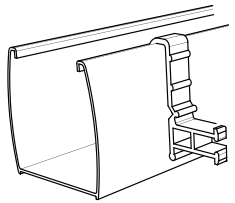

STEP 3: ATTACH WAND

Insert the wand hook gently into the tilter as shown below.

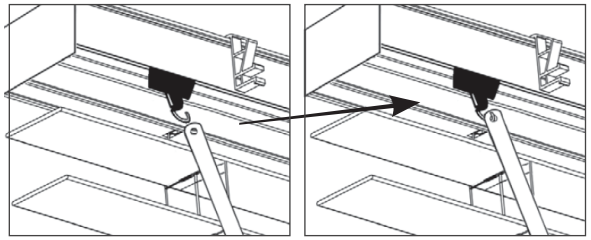

STEP 4: MOUNT THE HEADRAIL

Mount your blind by inserting the headrail into the open mounting brackets. Snap the bracket until you hear a "click"

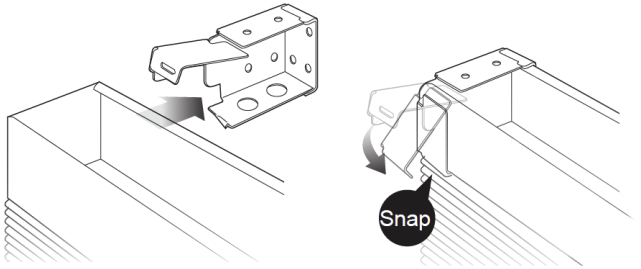

STEP 5: ATTACH VALANCE

Inside/Ceiling: attach the valance.

Outside/Wall: attach the valance, choose ***Full*** or ***Partial*** side returns and attach it to the front piece of the valance using the side return clips.

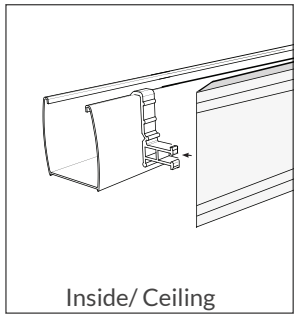
Inside/ Ceiling

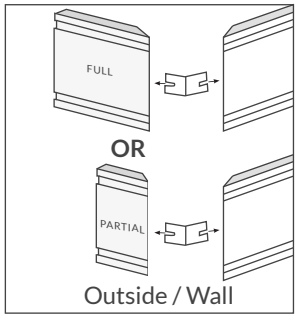

Outside / Wall

STEP 6: HOW TO OPERATE YOUR BLINDS

a) Use both hands to Lift the bottom rail up
b) Turn the wand to adjust the slats for desired privacy

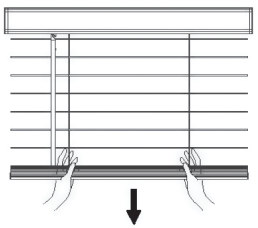

Note:

If your blind hangs unevenly, put your blind all the way down, ensuring you are lifting or lowering from two sides evenly.

STEP 8: INSTALL THE HOLD DOWN BRACKETS

Optional: 'Hold down brackets' are used to keep your blinds steady. Install the hold down brackets next to the blinds aligning the bottom rail.

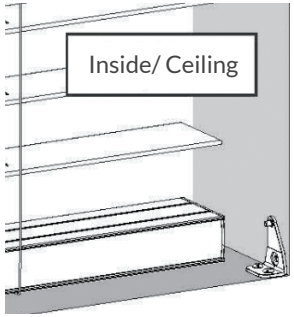

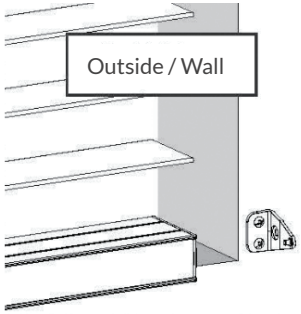

Chicology Custom-Made Blinds Warranty

Limited Three Year Warranty from the Date of Purchase

Defective Product:

If you believe your shade has a manufacturing defect, please email and call us.

What is Covered:

All shades and blinds are warranted against manufacturer defects in materials or workmanship, provided:

- You are the original purchaser of the products.
- The product was properly installed according to instructions.
- The product was made or assembled exclusively from Chicology's materials and components.

Components and brackets:

- Repair and/or replacements will be made with similar or like parts.

What is Not Covered:

- Chicology does not cover consumer damages caused by accidents, alterations, misuse, and abuse of the products, or damages from pets or insects.
- Damages resulted from removal and reinstallation in the same or any other window applications.
- Damages caused during measurement, installation, cleaning, and/or maintenance of your blinds and shades.
- Any yellowing or cracking of plastic parts due to normal wear and tear.
- All fabrics can lose their original intensity due to prolonged exposure to these elements: direct sunlight, wind, water/moisture, salt air, high humidity.
- Some natural fabrics have variations in color, grain and texture. These variations should in no way be considered flaws or defects, as they are part of the natural beauty of the f abric. Fraying is considered normal wear and tear, is not covered by the warranty.
- High humidity may cause wood slats to warp.
- Colors may vary from lot to lot and replacements may not mat ch exactly to previous shades.
- All cords will eventually wear out.

To Report Shipping Damages:

If damage occurred during shipping, we are required to collect photo documentation of damaged packaging and merchandise for all claims. Please email and call us immediately and report within **14 calendar days** or else you may be denied for your damaged product.

To Obligations to the consumer:

The obligations of Chicology are limited to the repair or replacements of parts or products found to be defective. Chicology will determine if the product is defective or not and may replace the product. Any defective customized products can be exchanged but are non-refundable if still under warranty. Chicology is not responsible for shipping or labor costs(such as measuring, installing, reinstalling, and taking down the above stated products).

Chicology shall have no liability whatsoever for incidental or consequential damages:

Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

Need Further Assistance?

We stand by our products and we're here to help.
Call or email us, and expect a reply within
1 business day.

Visit our website for how-to videos and FAQS.

Website : **www.chicology.com/help**
Email: **support@chicology.com**
Phone: **1 (866) 999-6188**
Hours: **Mon-Fri 8AM to 5PM (PST)**

Chicology Home Chicology Home
Chicology Home Chicology Home