
OUTDOOR KITCHEN







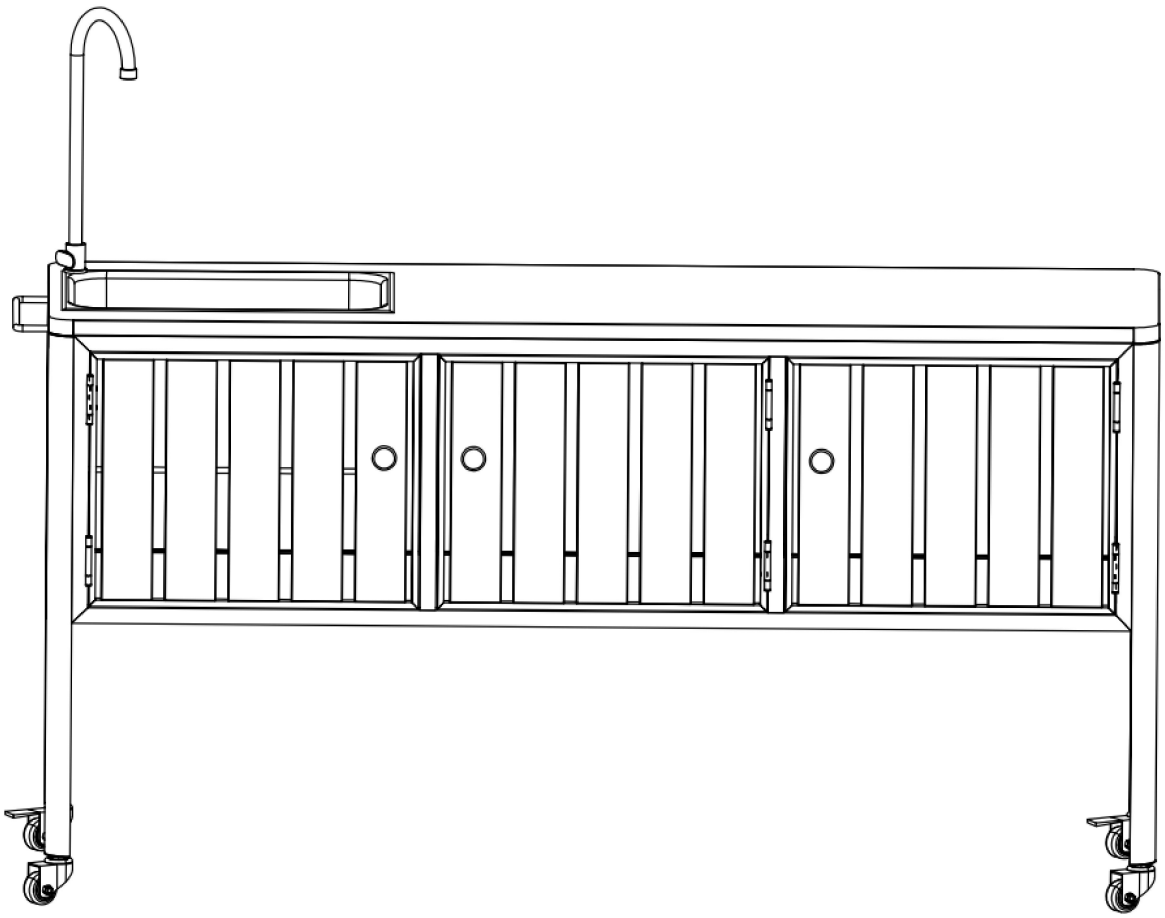



Before You Start


Please read the instructions carefully to familiarize yourself with every detail and step involved. Keep this manual for future reference. Find a suitable space to assemble.

Important Notes


Small parts are included; we advise you to keep them away from children and pets.

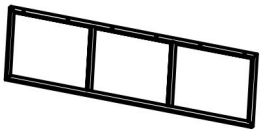NO.	PARTS	DESCRIPTION	QTY
A		Front Door Panel	1
B		Back Panel	1
C		Side Panel	2
D		Top Panel	1
E		Bottom Panel	1
F		Door Handle	3
G		Sink with Faucet	1
H	 M4x8MM	Installation Screw For Door Handle	3
I	 M6x10MM	Installation Screw	34
J		Allen Wrench	2
K		Casters	4
L		Towel Rack	1
M	 M4x30MM	Installation Screw For Towel Rack	2

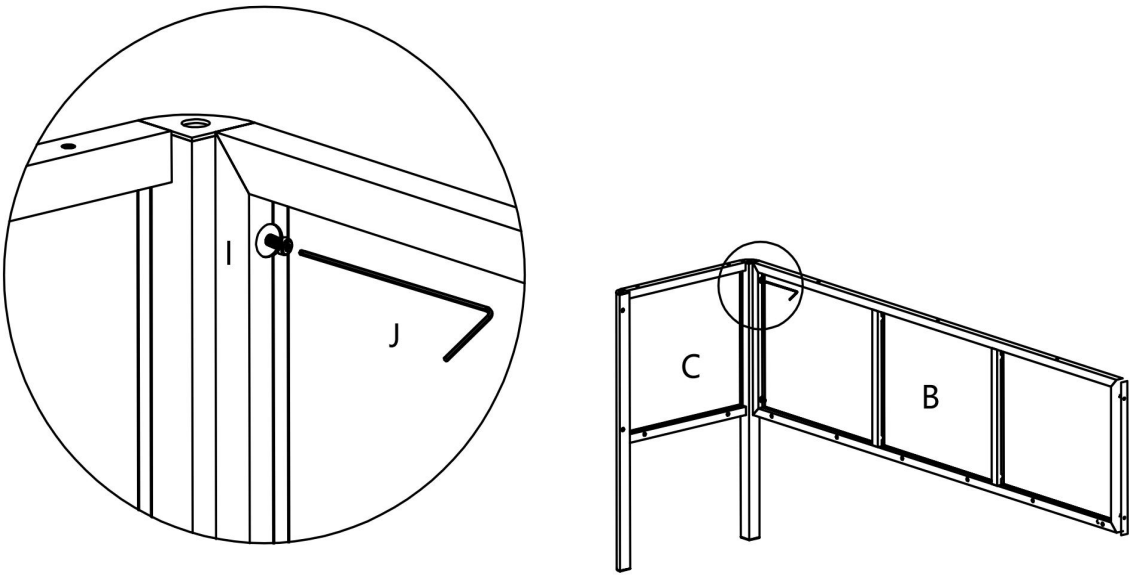


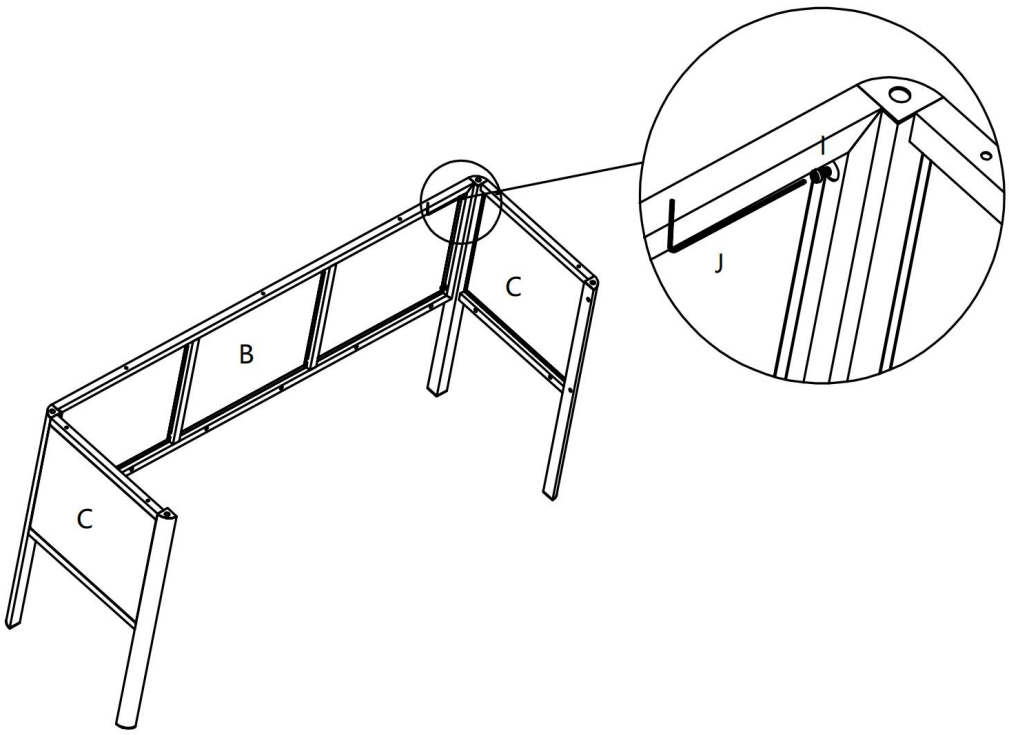


Attach the two Side Panels (C) to the Back Panel (B) using the Installation Screws (I). Tighten the screws securely with the provided Allen Wrench (J).

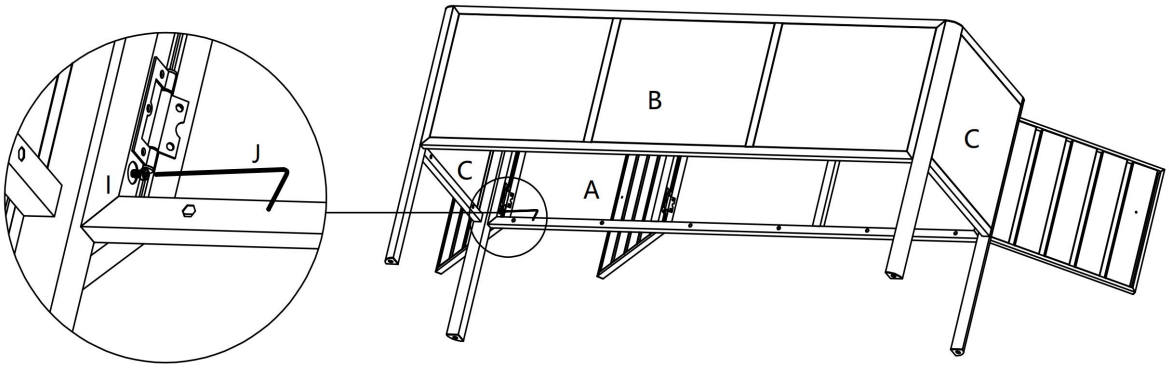


Align the Front Door Panel (A) with the assembled side panels (C).

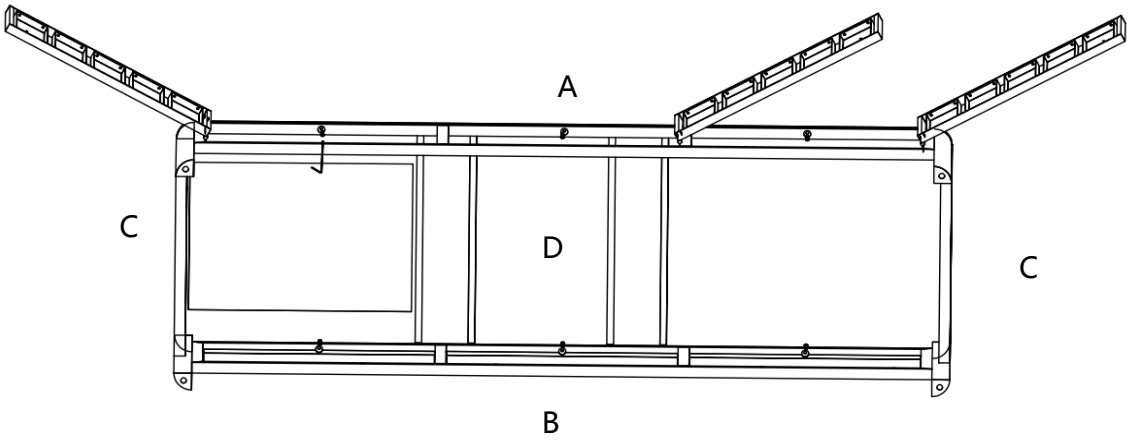


Place the Top Panel (D) at the top of the cabinet frame and using the Installation Screws.

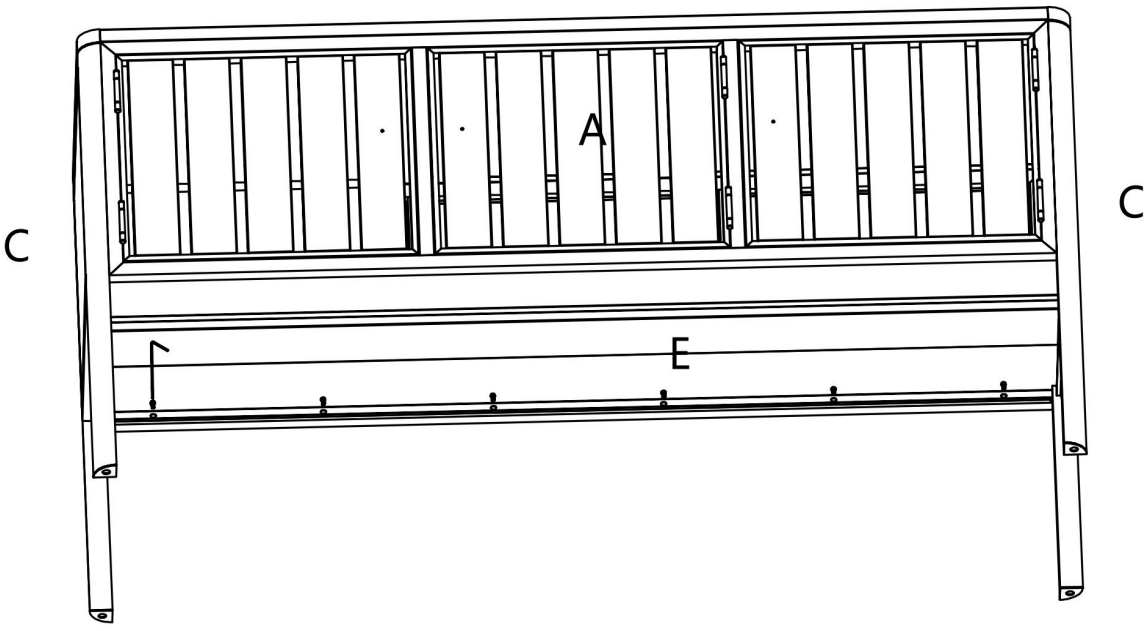


Place the Bottom Panel (E) at the base of the cabinet frame and secure it to the side panels and front/back panels

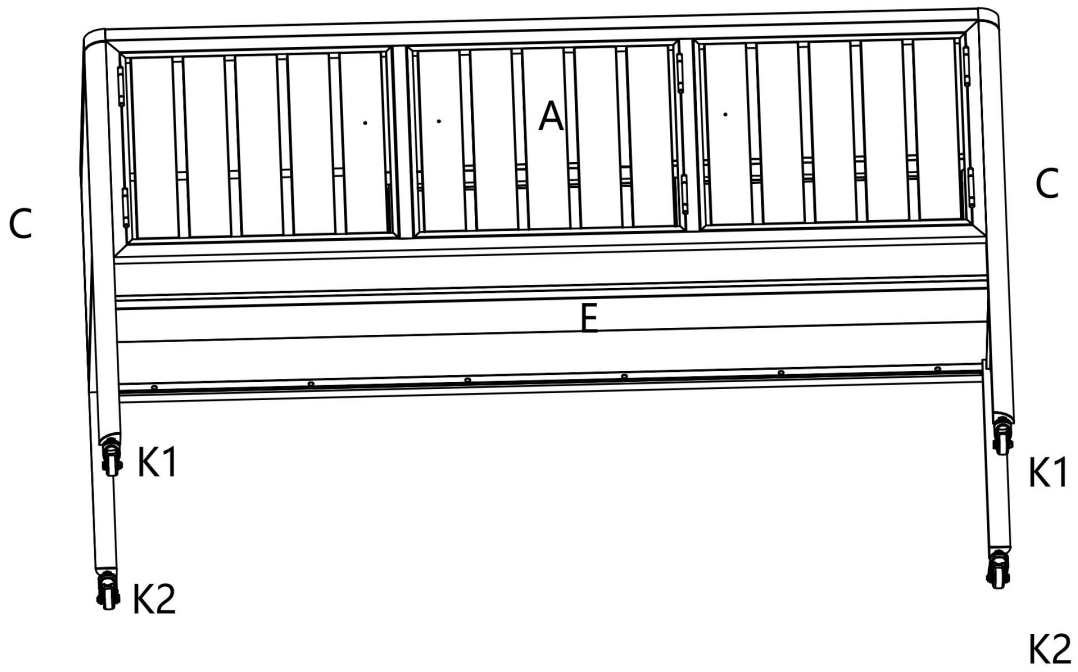

Carefully tilt or turn the cart upside down. Insert the Casters (K1 and K2) into the bottom of the Side Panel legs.

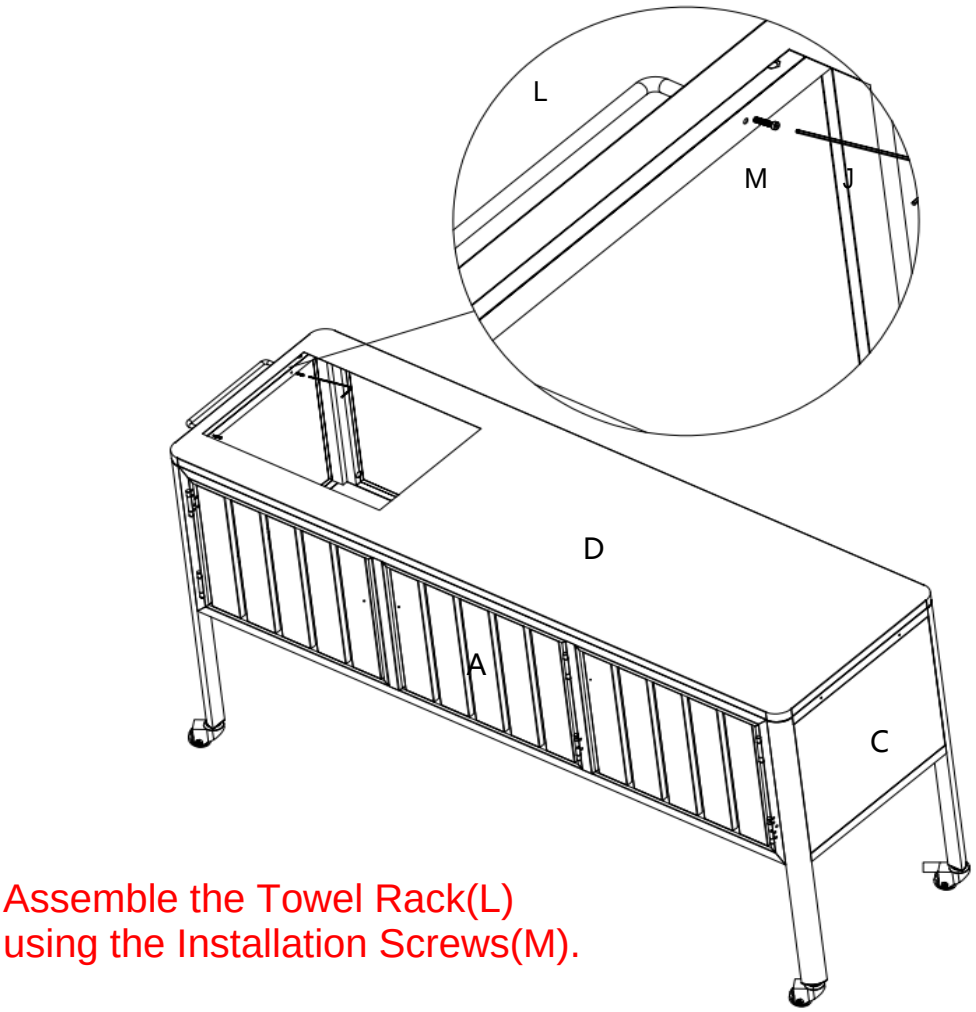

Assemble the Towel Rack(L) using the Installation Screws(M).

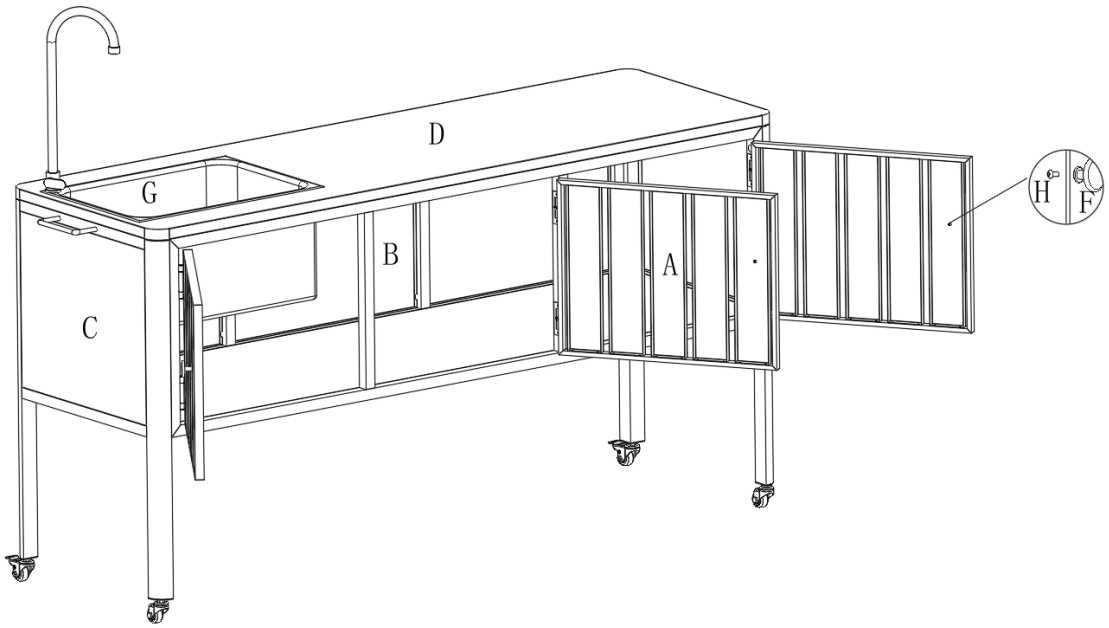

Place the Top Panel and Sink
Attach the three Door Handles (F) to the Front Door Panel (A) using the Door Handle Installation Screws (H).

