
TV Stand

Assembly Instruction - Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

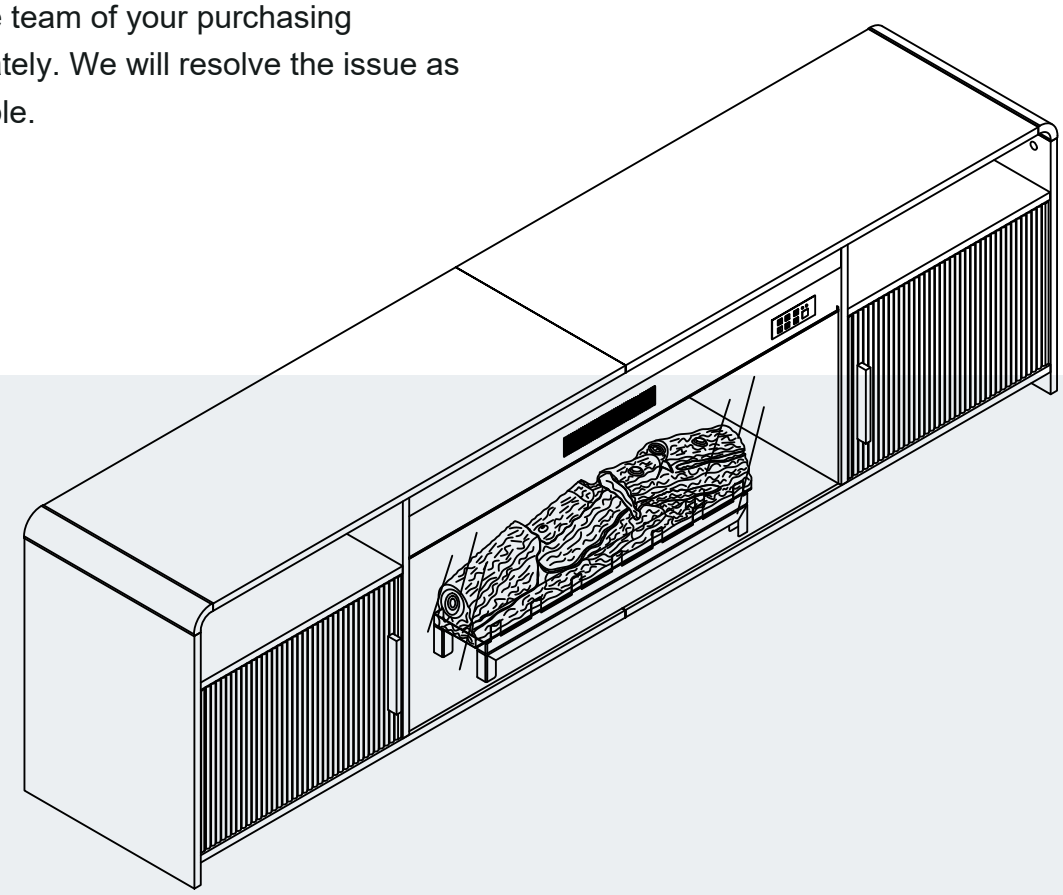

CONTACT US

- **Email: service@grandtunnel.com**

In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

EN

Before Assembly

Thank you for choosing our product!
To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.
Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.


Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice

Important :
Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

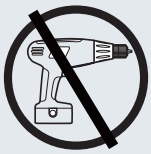

•To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Email : service@grandtunnel.com

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

EN

Customer Service Guide

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the "Parts List" in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., "Missing 5 pieces of M6×30mm screws."

Contact Us:

By Email:

Send an email to **service@grandtunnel.com**, with the subject line "Missing Parts Issue." Include the following in the email:

. A description of the missing parts and a photo of the parts list.

. Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line "Product Damage Issue."

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

Email : service@grandtunnel.com

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

Customer Service Email: **service@grandtunnel.com**

Helpful Tips

To process your issue efficiently, please prepare the following information:

. Order details (order number, purchase platform, purchase date).

. Clear photos or videos.


. We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support!
We hope you enjoy using our product!


EN

Parts List - Panels


Please check you have all the panels listed below.

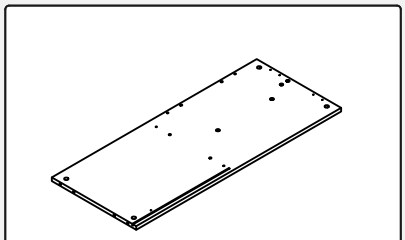


1 971X400X15mm x1

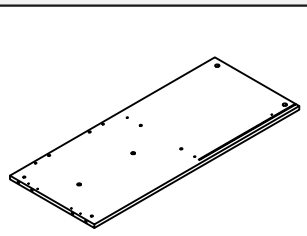


2 971X400X15mm x1

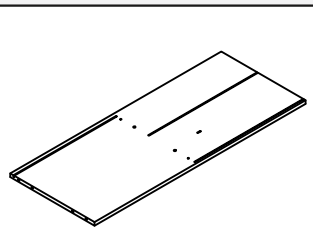


3 1000X399.5X15mm x1

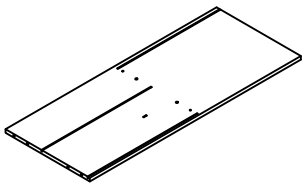


4 1000X399.5X15mm x1

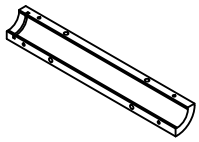


5 400X63.6X26.2mm x2

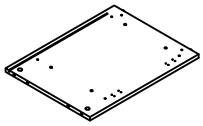


6 515X400X15mm x1

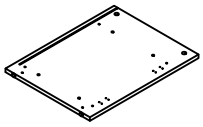


7 515X400X15mm x1

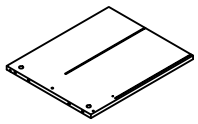


8 484X399X15mm x1

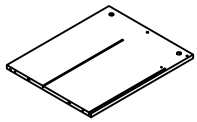


10 484X399X15mm x1

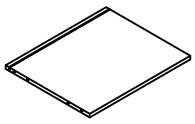

11 476.5X398.5X15mm x1

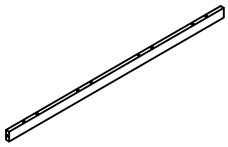

12 1017X40X15mm x1

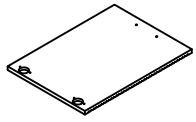


13 330X470.5X15mm x2

Email : service@grandtunnel.com


Parts List - Panels

EN


Please check you have all the panels listed below.

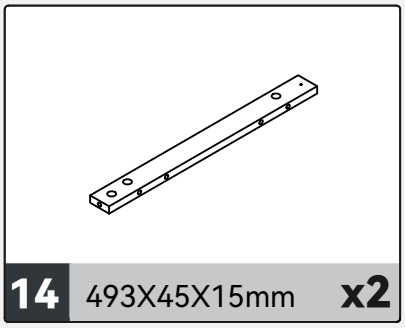


14 493X45X15mm **x2**

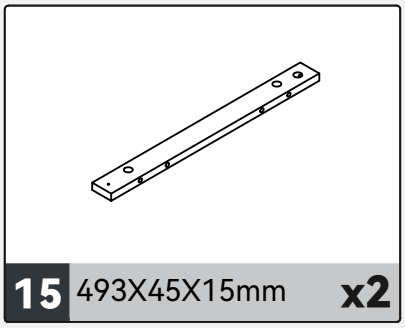


15 493X45X15mm **x2**

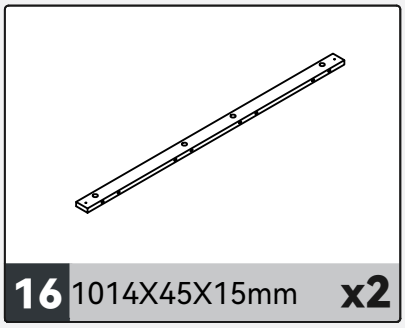


16 1014X45X15mm **x2**

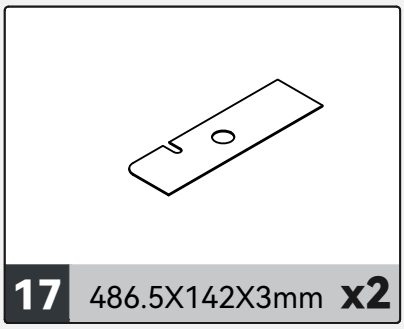


17 486.5X142X3mm **x2**

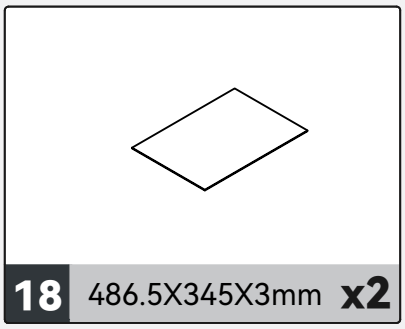


18 486.5X345X3mm **x2**

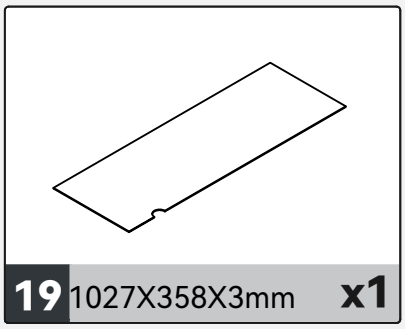

19 1027X358X3mm **x1**

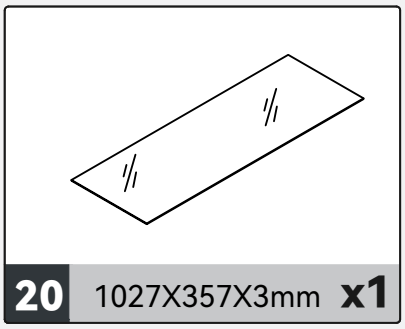

20 1027X357X3mm **x1**

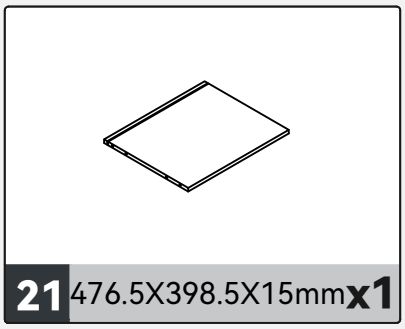


21 476.5X398.5X15mm **x1**

EN


Parts List - Fittings

Please check you have all the fittings listed below.


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

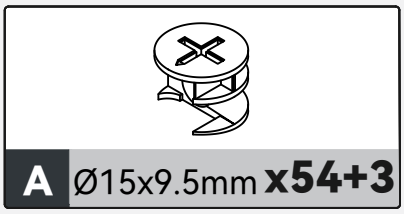


A Ø15x9.5mm **x54+3**

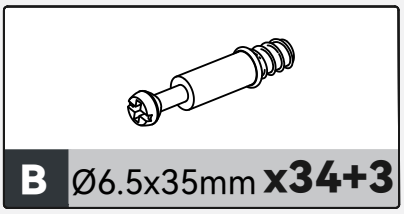


B Ø6.5x35mm **x34+3**

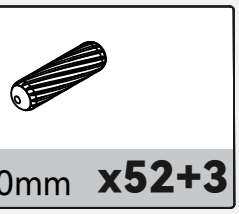


C Ø8X30mm **x52+3**

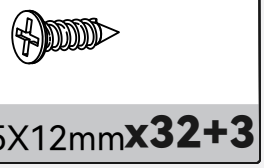


D Ø3.5X12mm **x32+3**

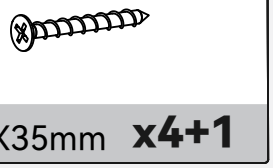


E Ø4X35mm **x4+1**

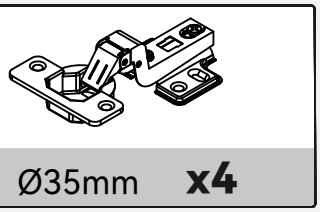


F Ø35mm **x4**

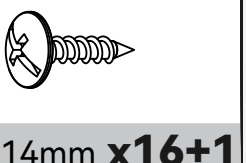

G Ø4X14mm **x16+1**

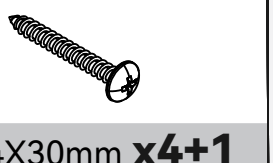


H Ø4X30mm **x4+1**

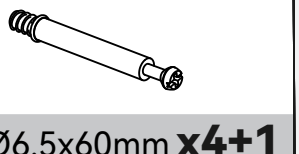

I Ø6.5x60mm **x4+1**




J Ø9.5X10mm **x4+1**




K 60X38X1.3mm **x4**



L 45x12x1mm **x4**



M 70X30X5mm **x1**



N 103X40X15mm **x1**




O M4X9mm **x4+1**



P 150X20X11mm **x2**



Q **x16+1Set**



R M6X35mm **x6+1**


Email : service@grandtunnel.com

Parts List - Fittings


EN

Please check you have all the fittings listed below.


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

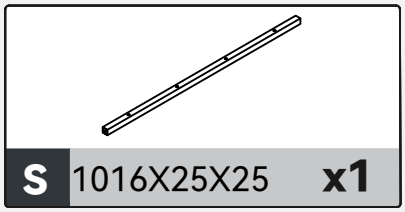


S 1016X25X25 **x1**

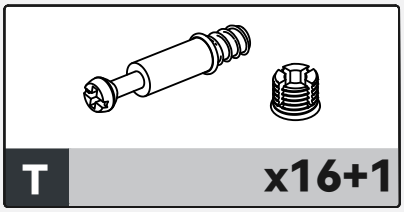


T **x16+1**

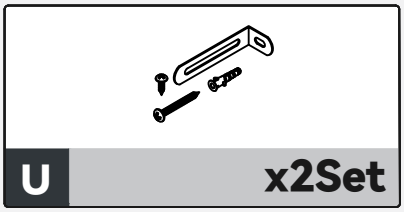

U **x2Set**

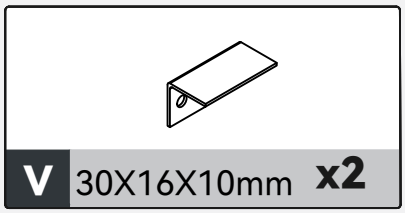


V 30X16X10mm **x2**

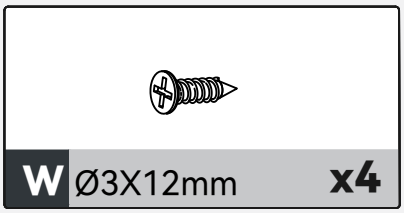



W Ø3X12mm **x4**


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

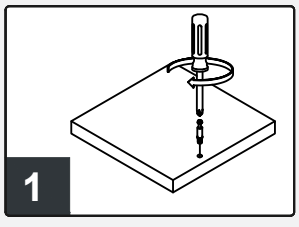

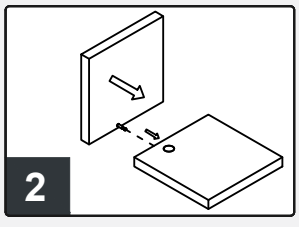


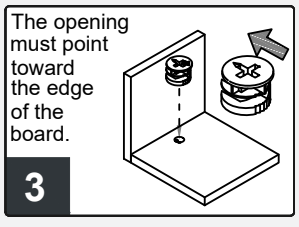

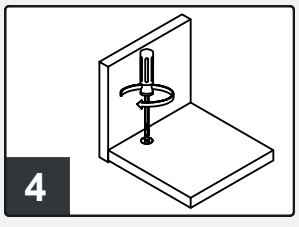


EN


Parts List - Fireplace

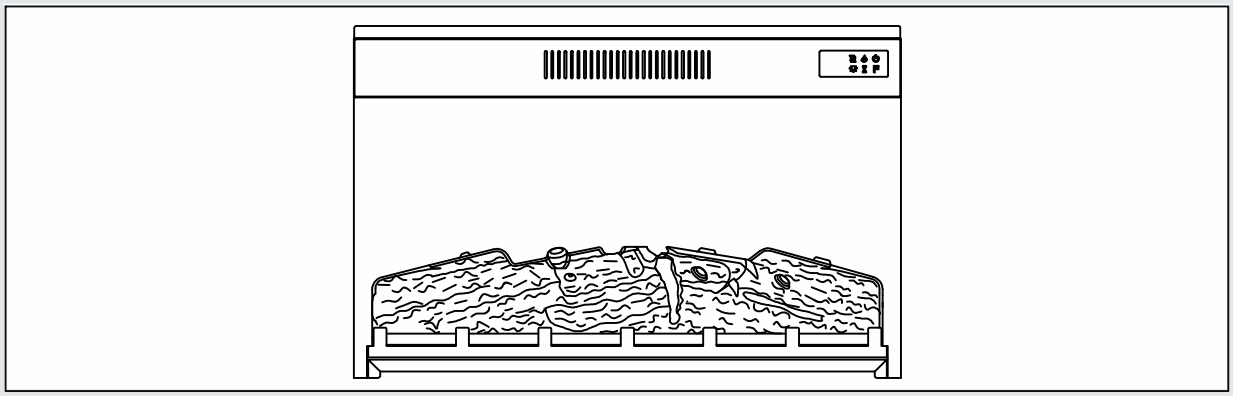


BOX1

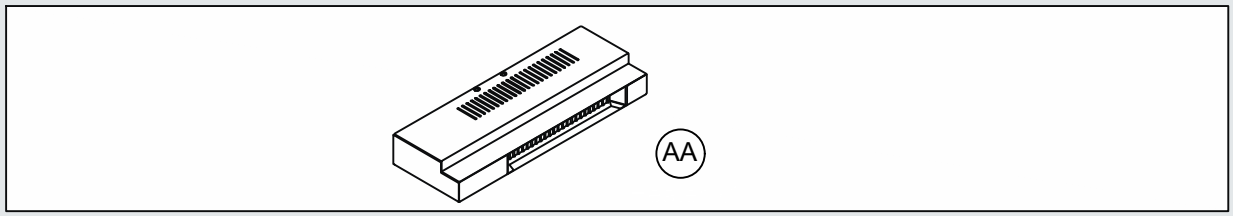


BOX2

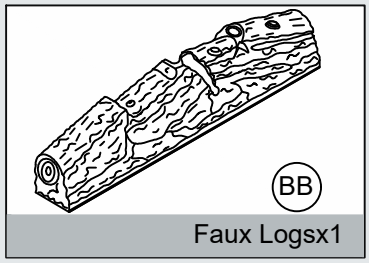


Faux Logsx1

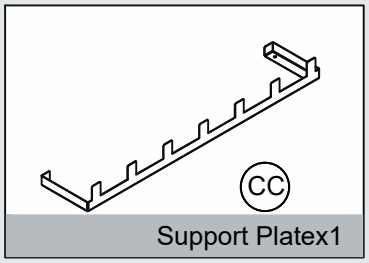


Support Platex1

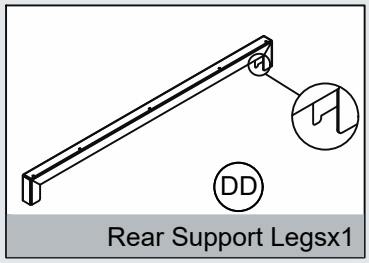


Rear Support Legsx1

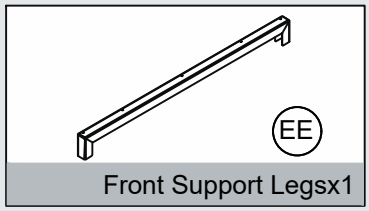

Front Support Legsx1

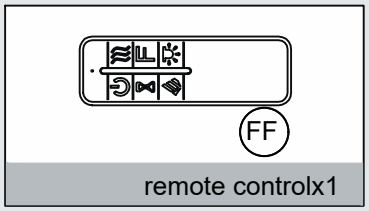


remote controlx1

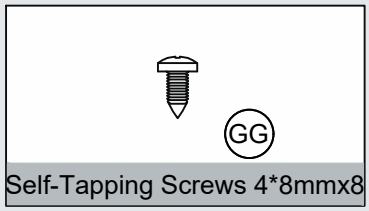


Self-Tapping Screws 4*8mmx8

BOX3

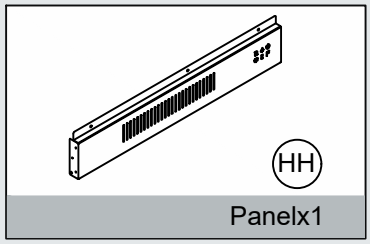

Panelx1

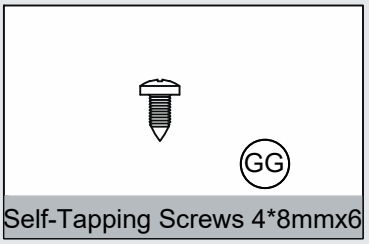

Self-Tapping Screws 4*8mmx6

CAUTION

Do not attempt to install from the front of the cabinet, as this will prevent proper installation.


Email : service@grandtunnel.com

Using Camlocks

EN


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

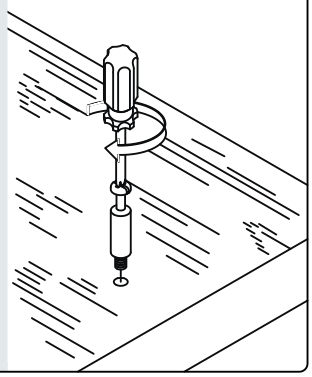

Step 2


Push the male camlock into the entry hole.

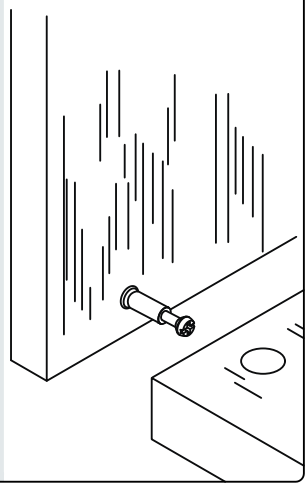

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

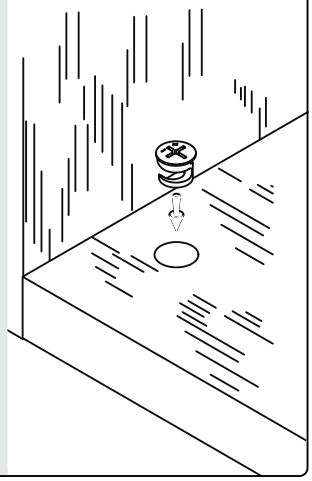


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

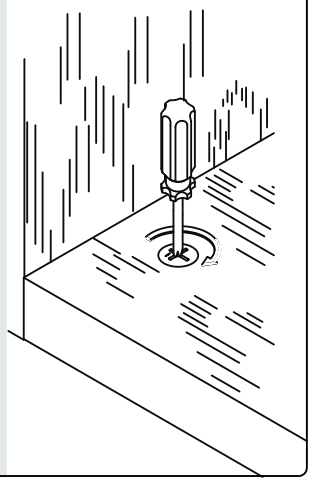


Assembly Instructions

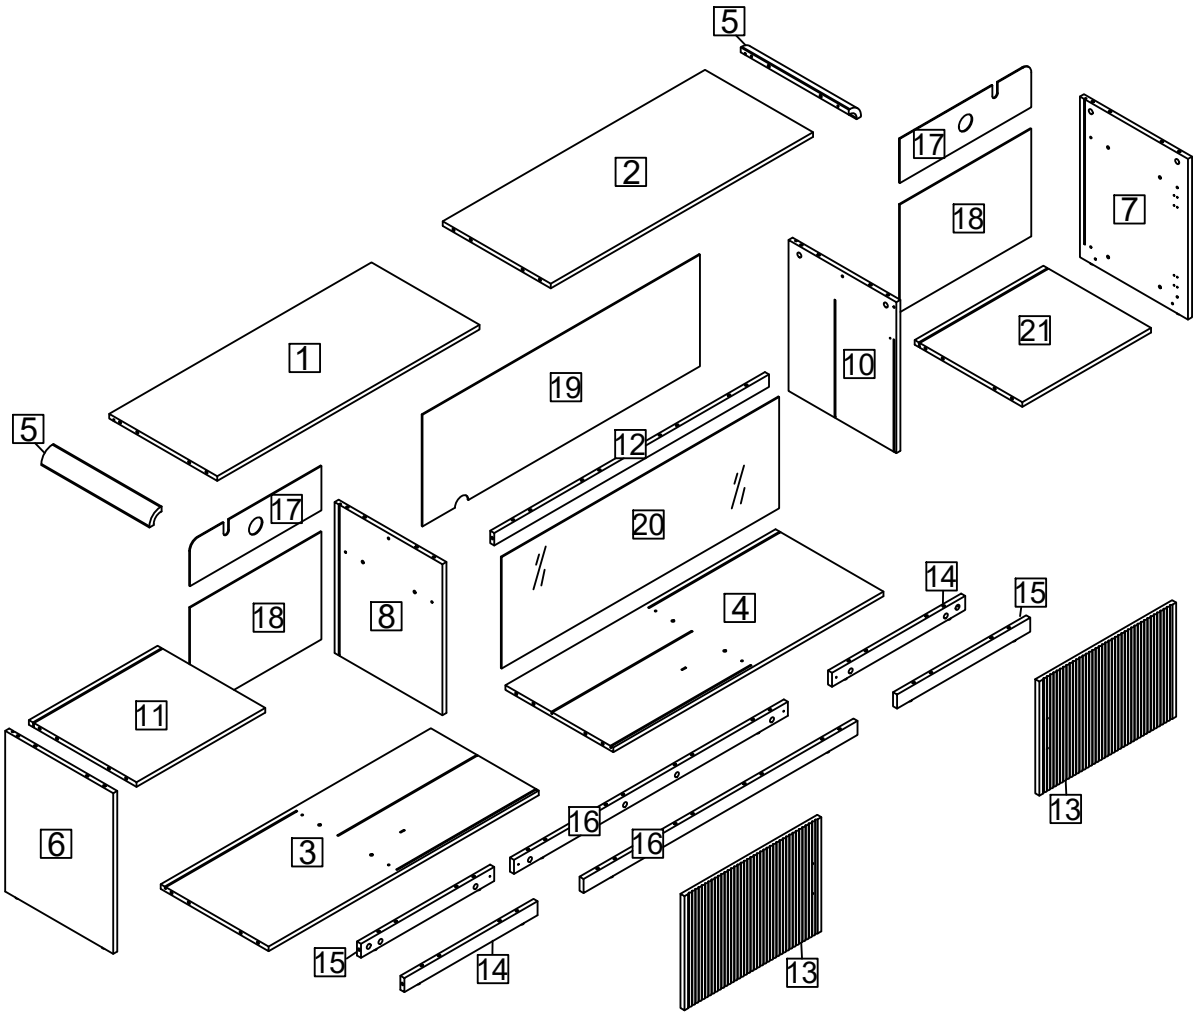


Email : service@grandtunnel.com

Step 1

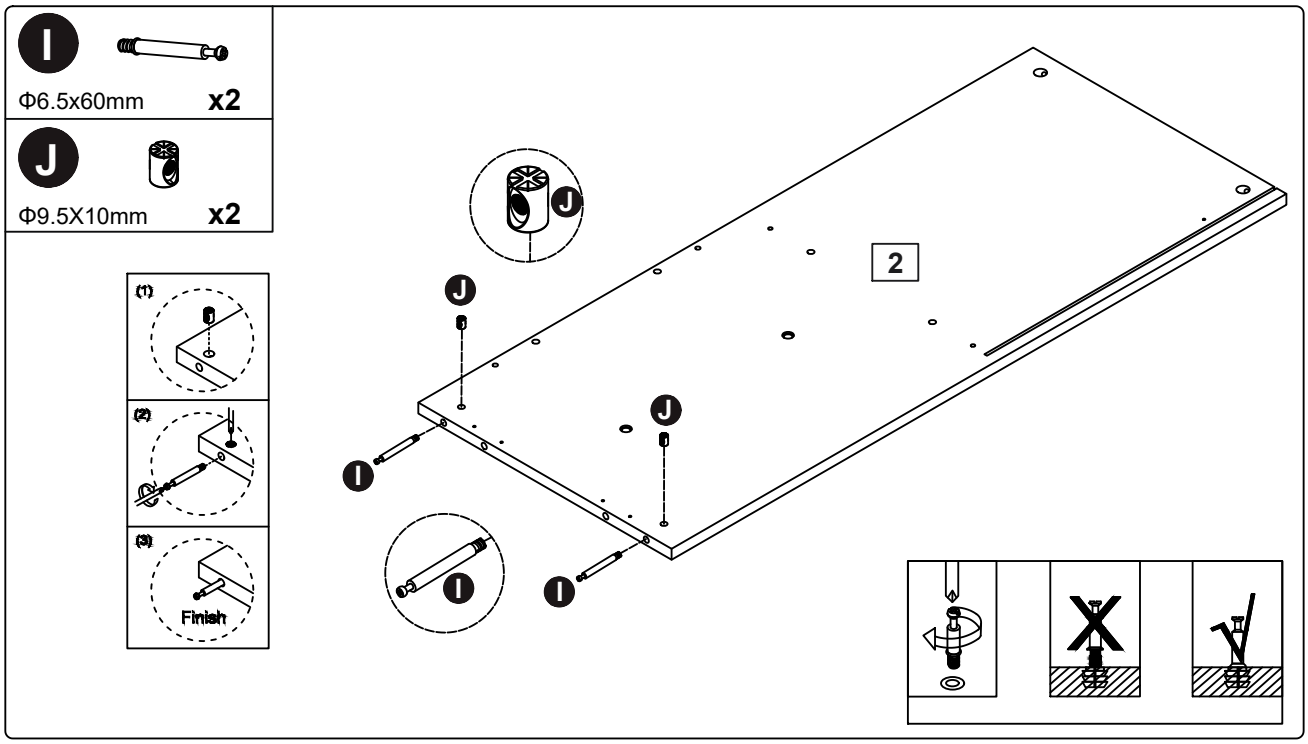


Install accessory J onto board (2), then connect accessory I to it.

Step 2

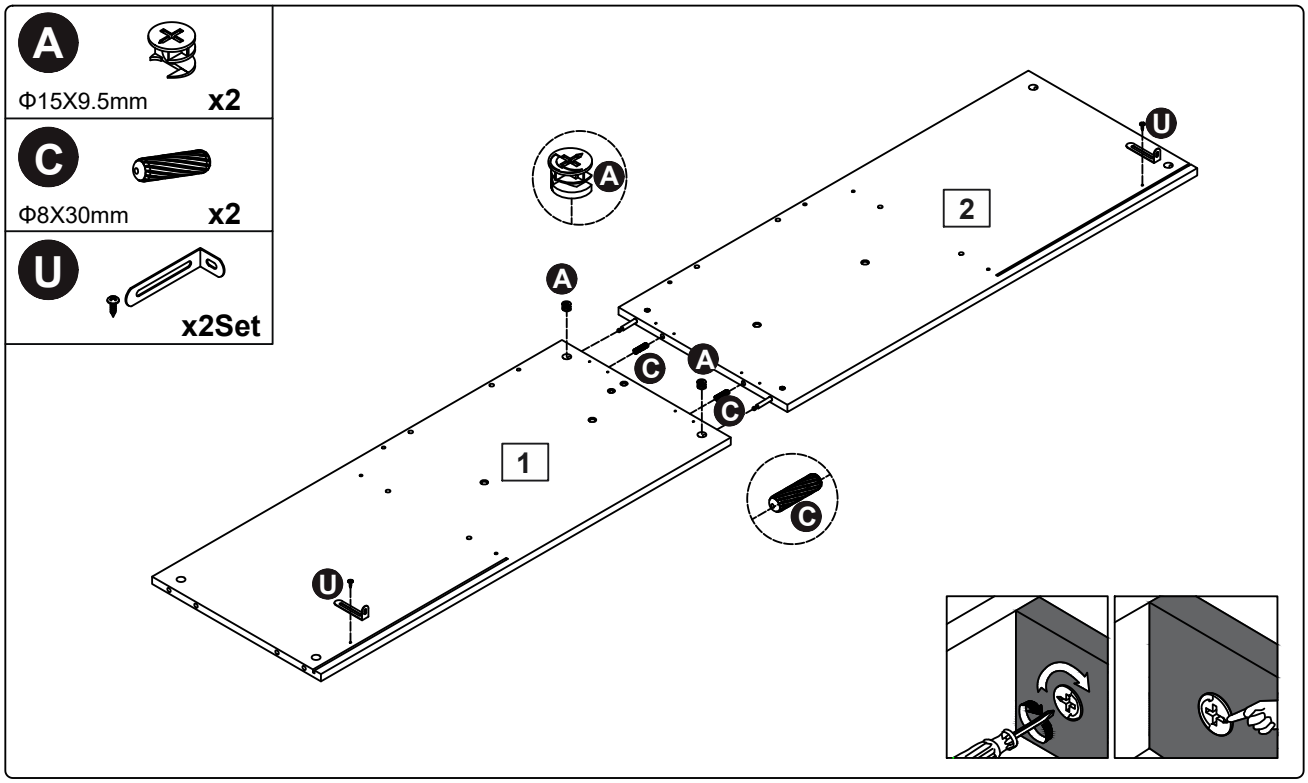


First connect board (1) and board (2) using accessories A and C, then mount accessory U onto board (1) and board (2).

Step 3

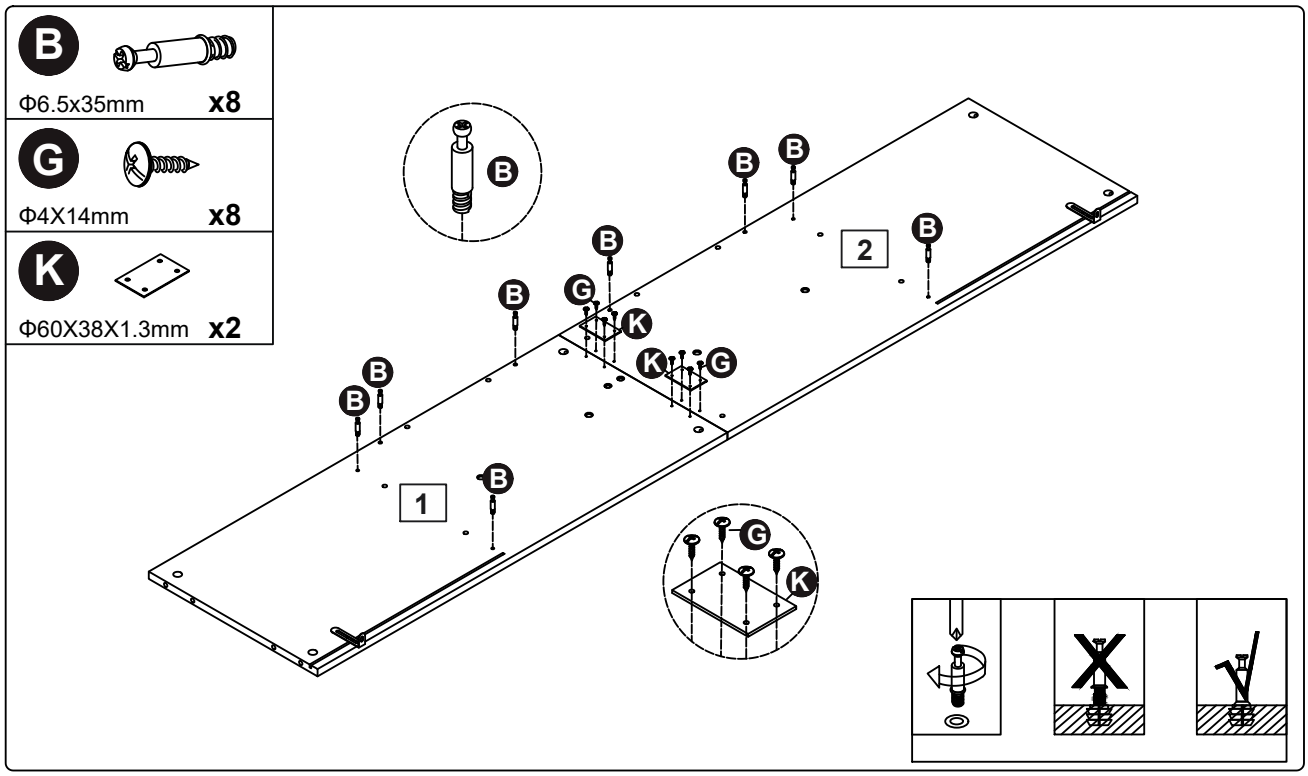

First mount accessory B onto board (1) and board (2), then fix accessory K to board (1) and board (2) with accessory G.


Step 4

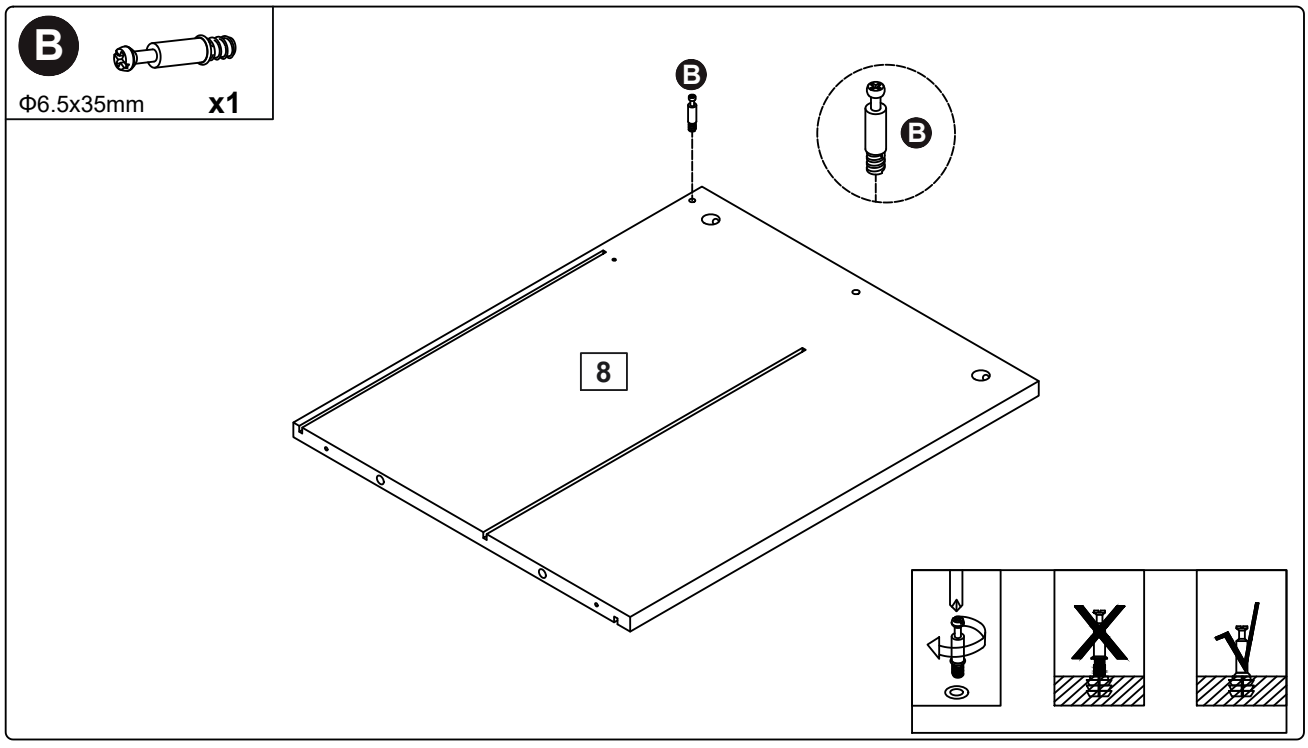

Mount accessory B onto board (8).


Email : service@grandtunnel.com

Step 5

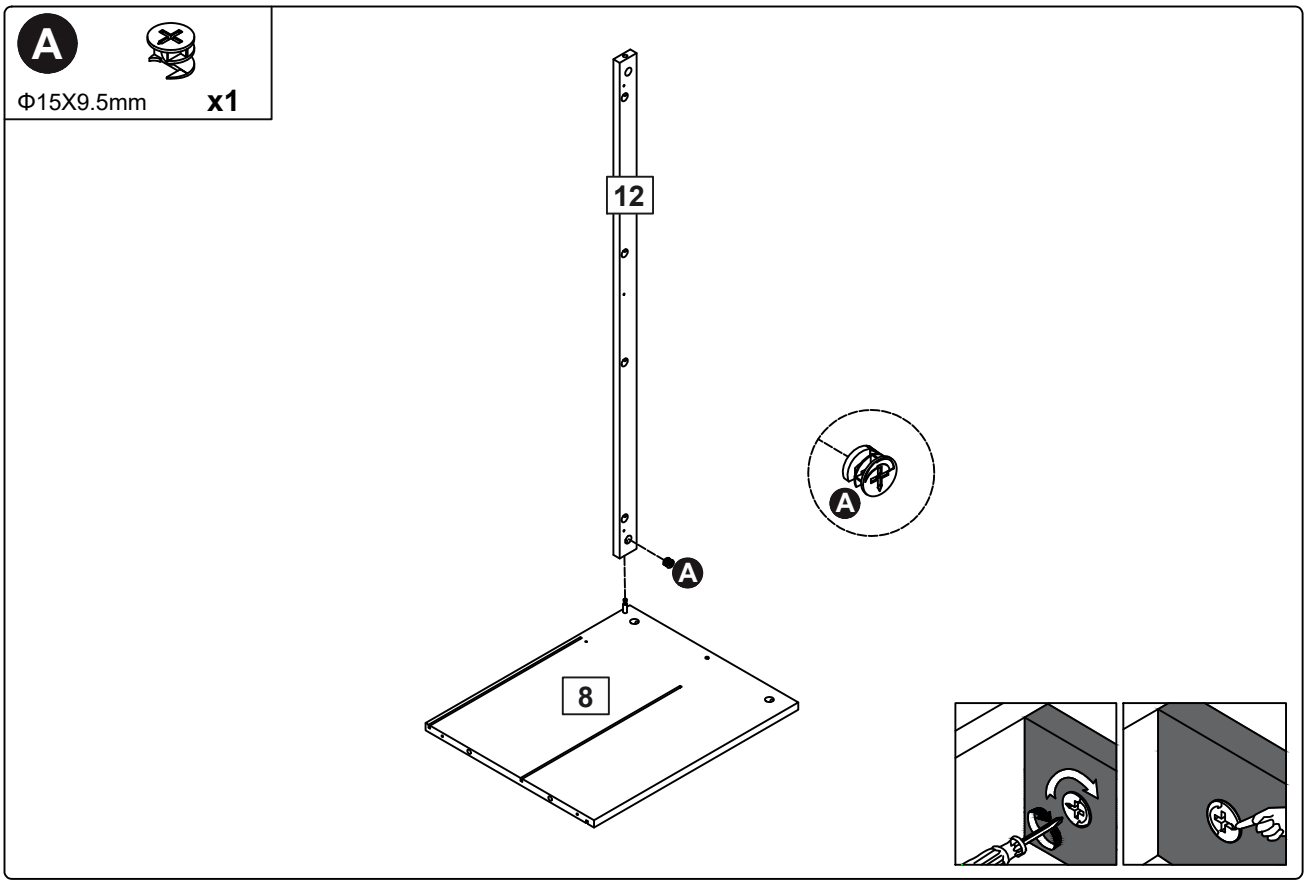


Attach board (12) to board (8) using accessory A.

Step 6

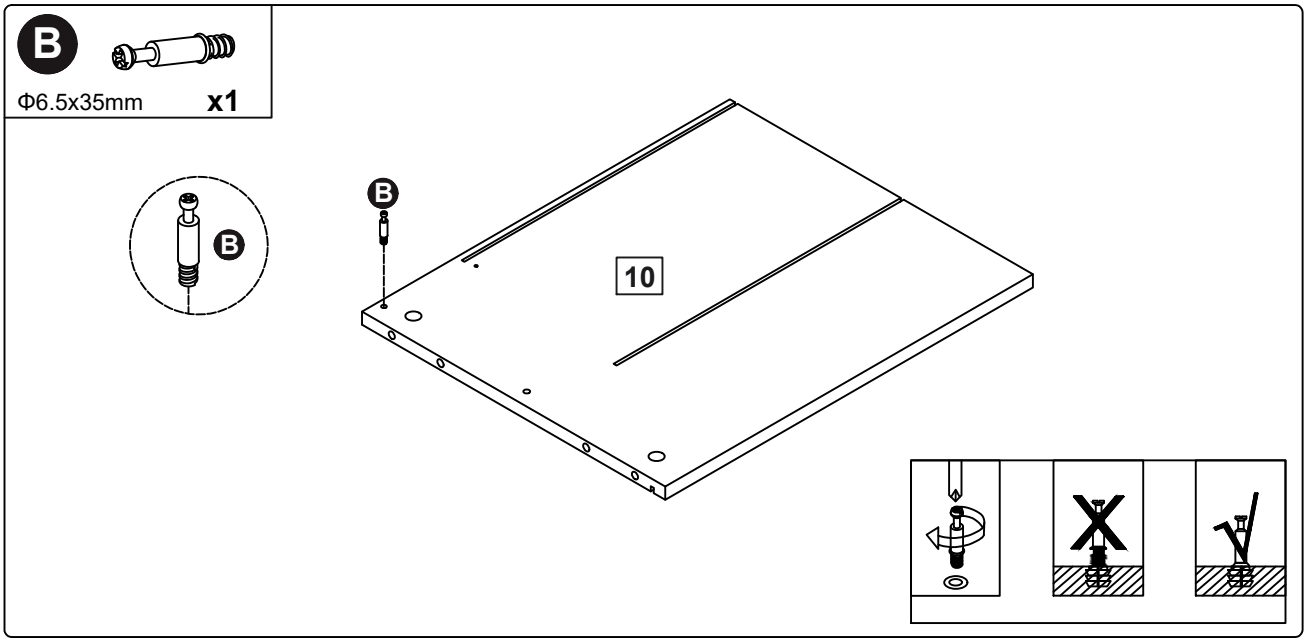


Mount accessory B onto board (10).

Step 7

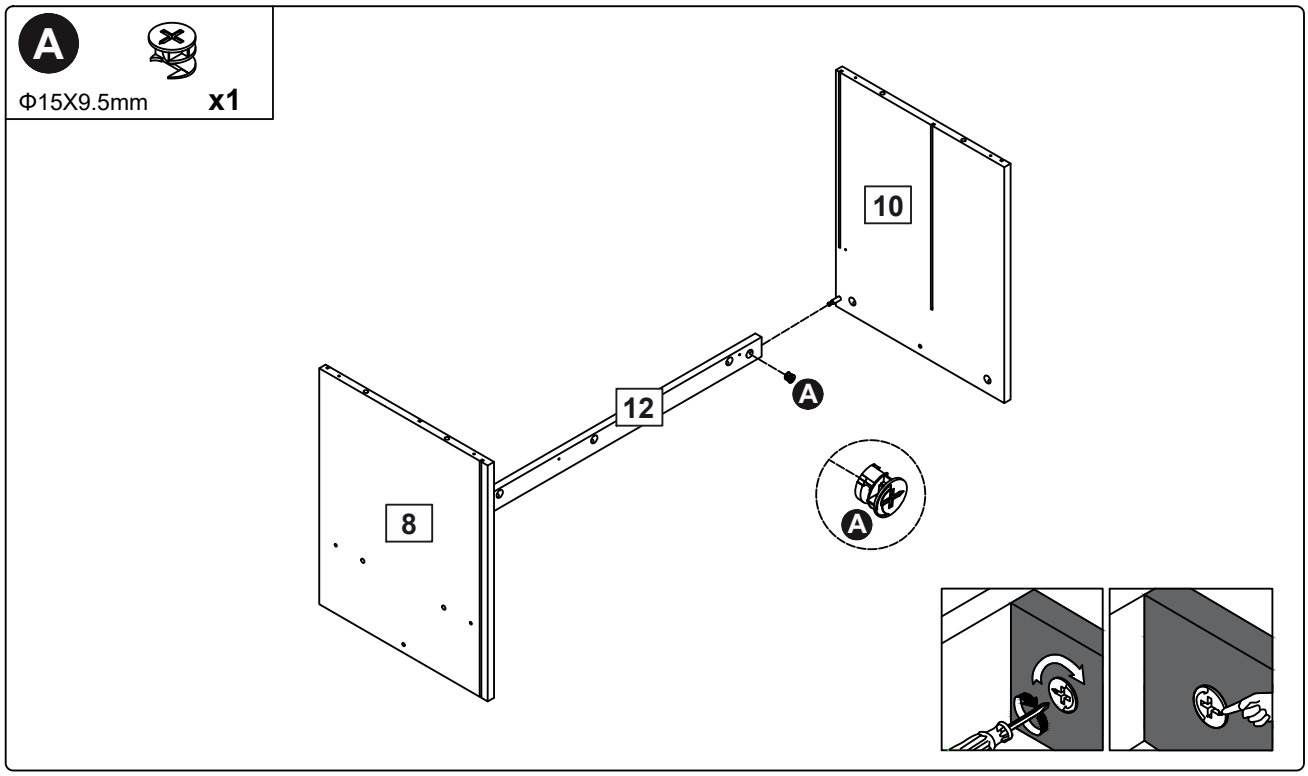

Attach board (10) to board (12) using accessory A.


Step 8

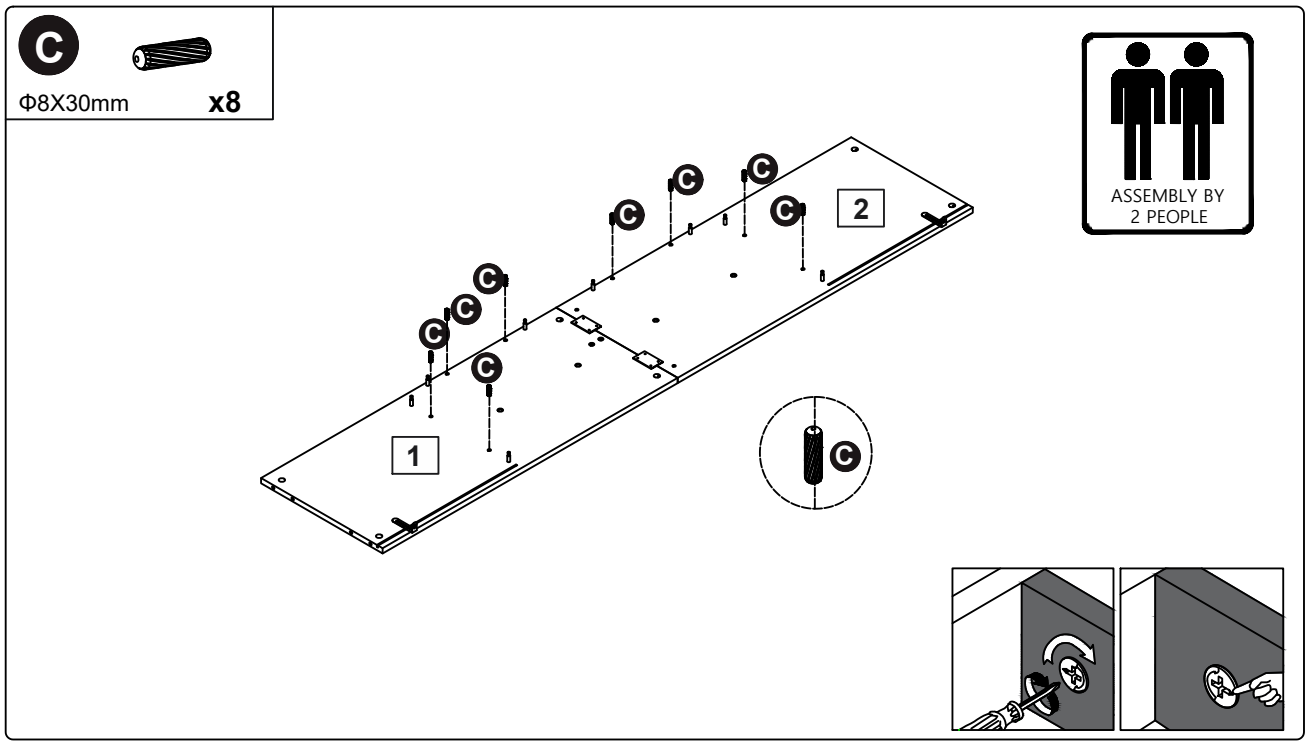

Install accessory C onto board (1) and board (2).


Email : service@grandtunnel.com

Step 9

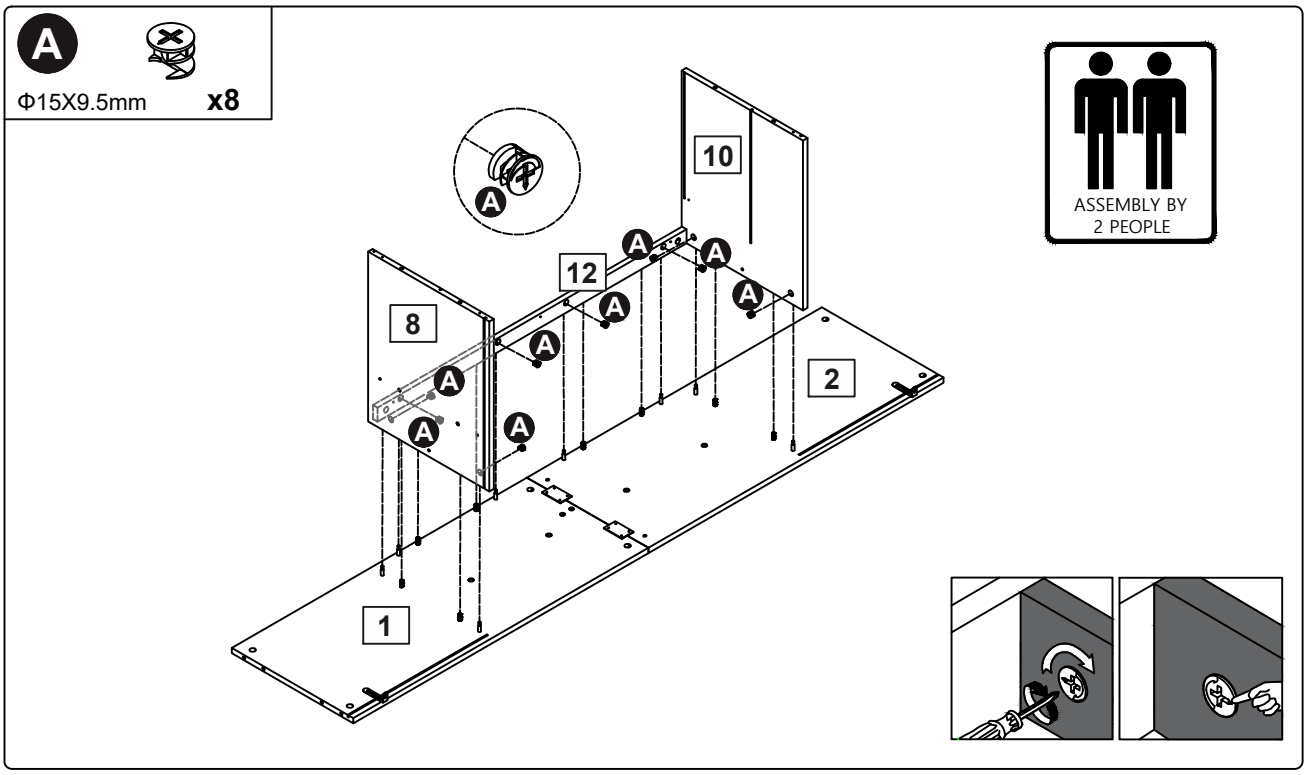

Join boards (8), (10) and (12) to boards (1) and (2) with accessory A.


Step 10

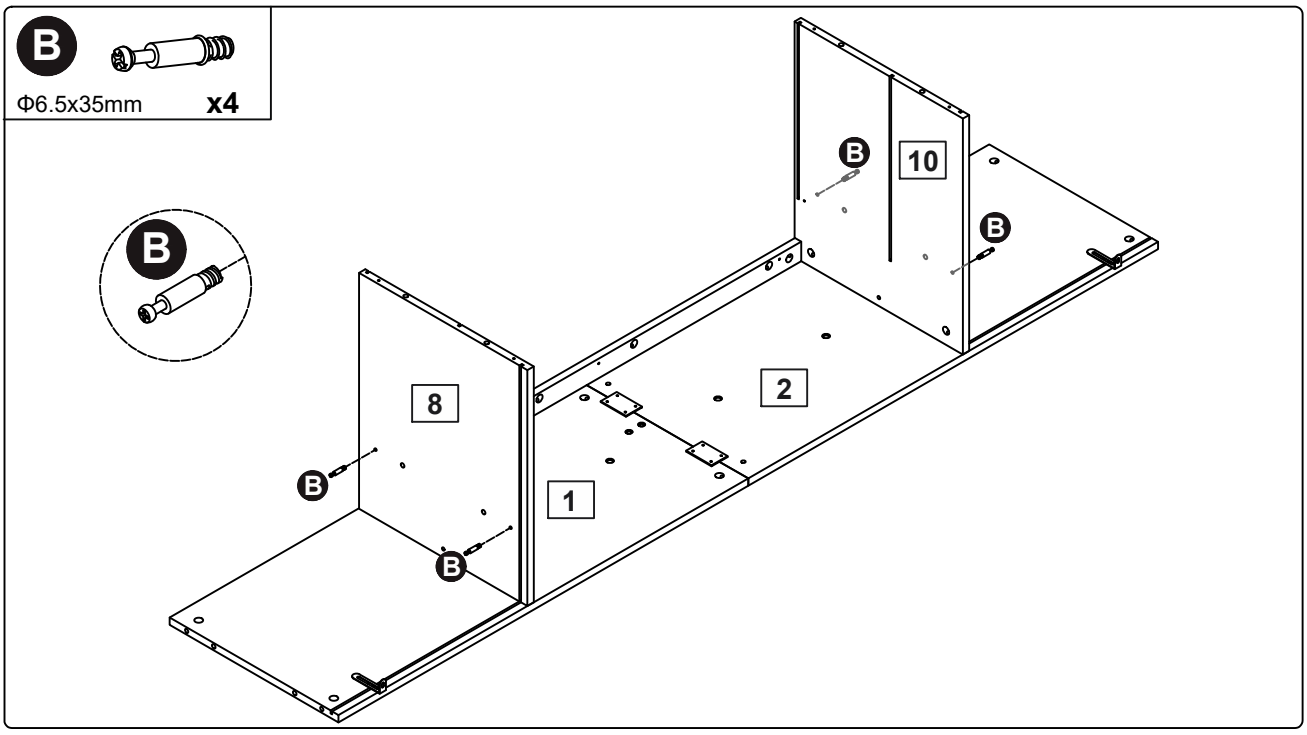

Mount accessory B onto each of boards (8) and (10).


EN

Step 11

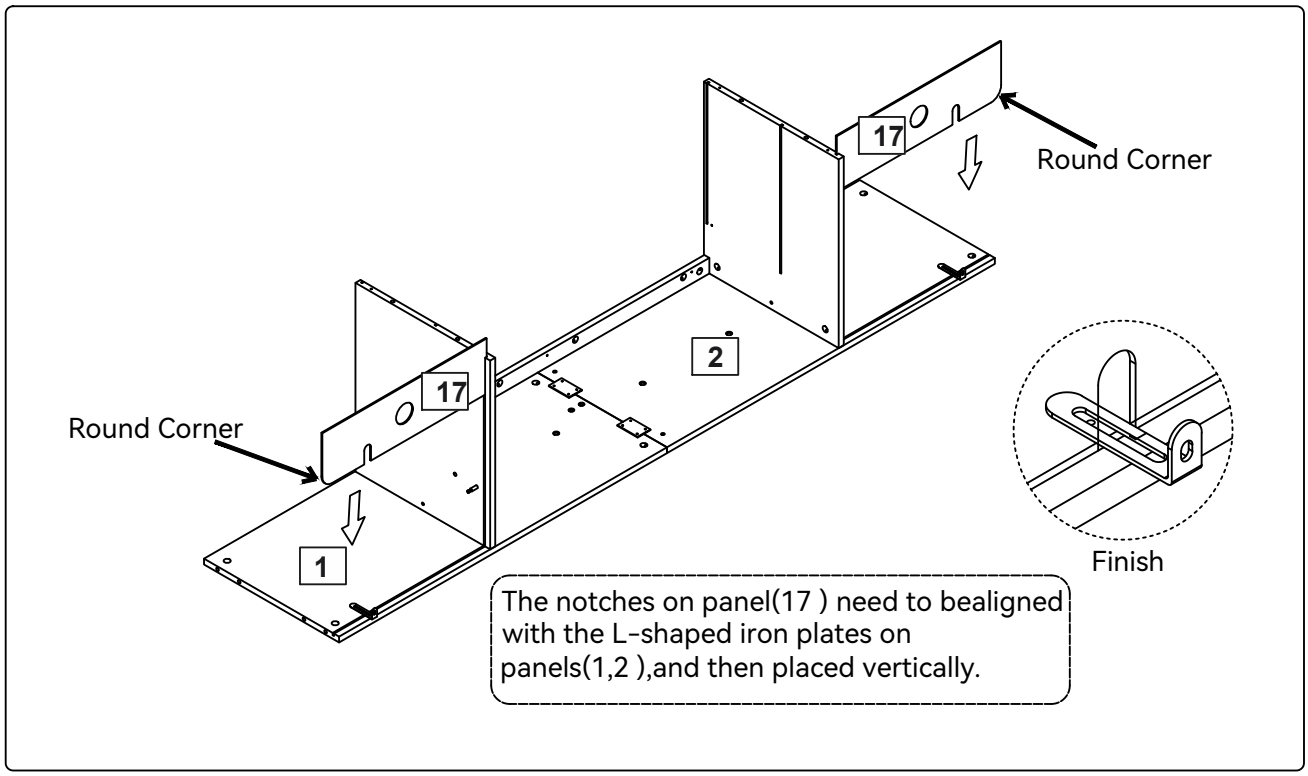

Insert board (17) into the groove, pay close attention to the orientation here.


Step 12

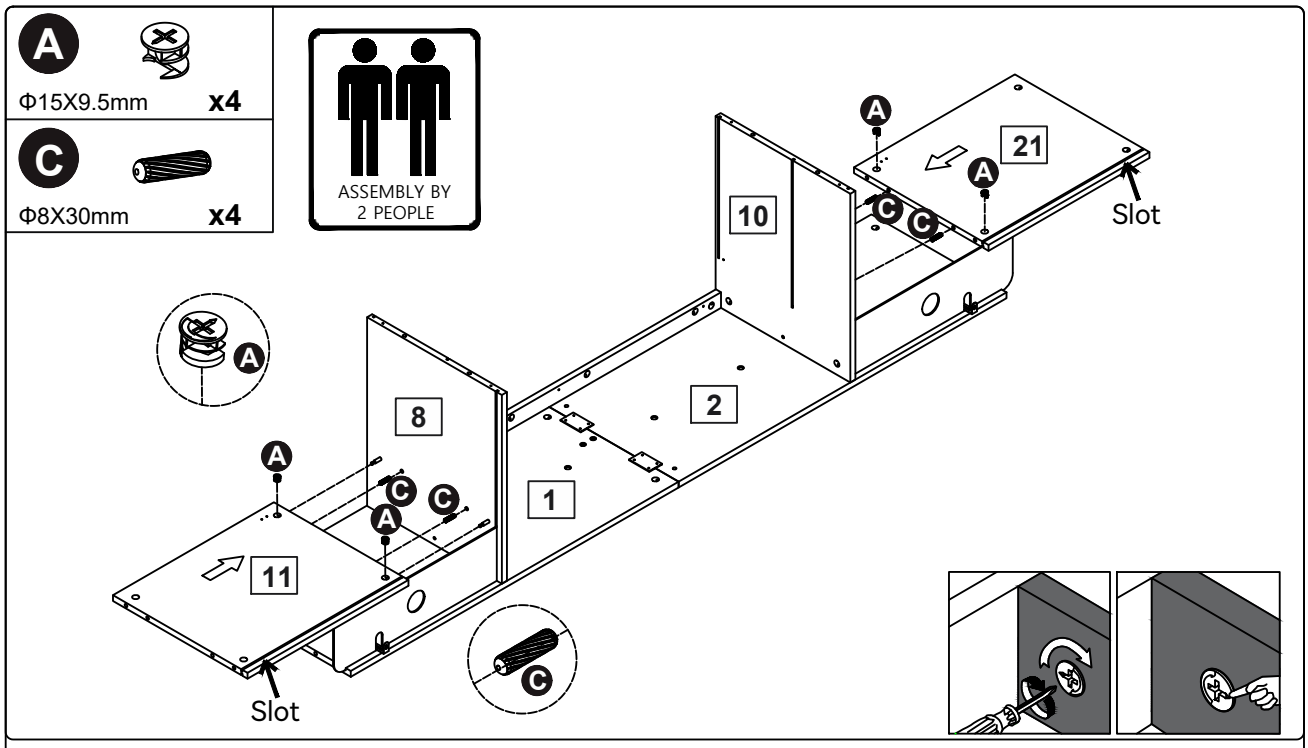

Mount board (11) and board (21) onto board (8) and board (10) respectively using accessories A and C.


Email : service@grandtunnel.com

Step 13

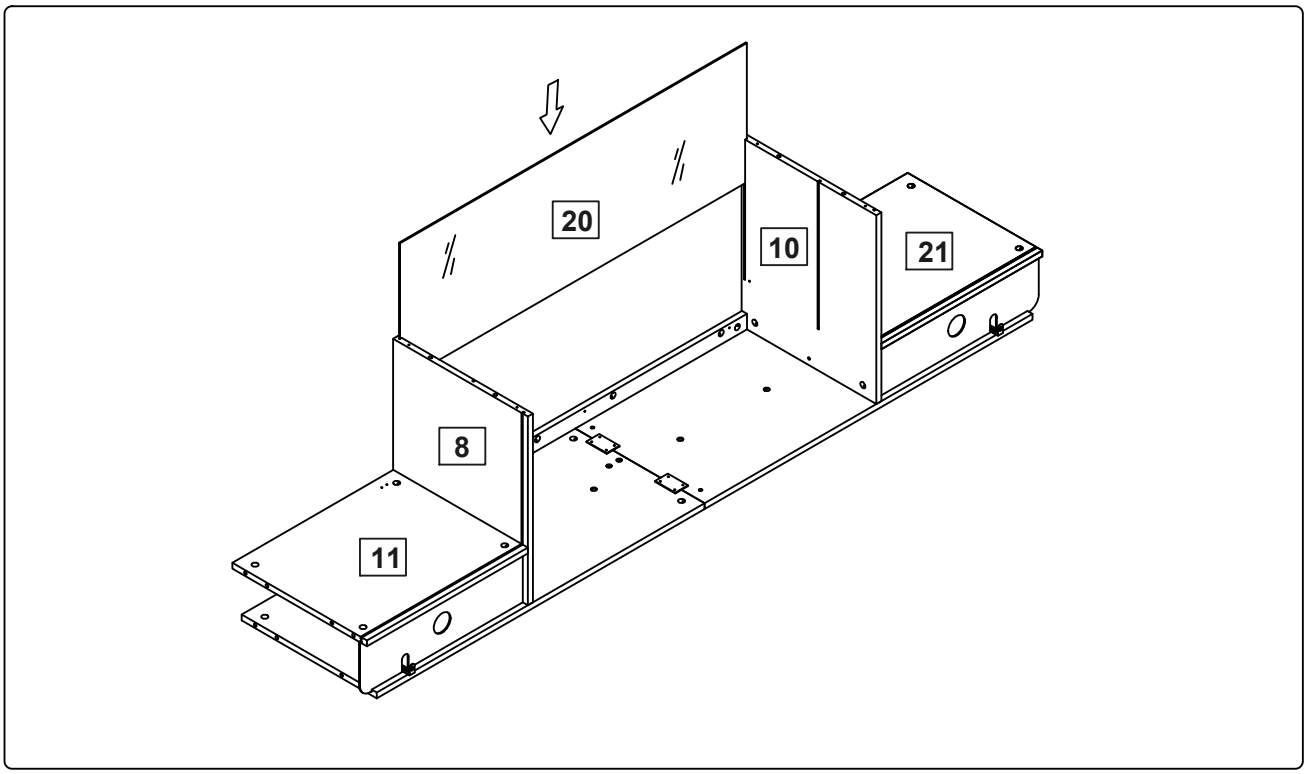


Insert glass piece (20) into the grooves along the edges of board (8) and board (10).

Step 14

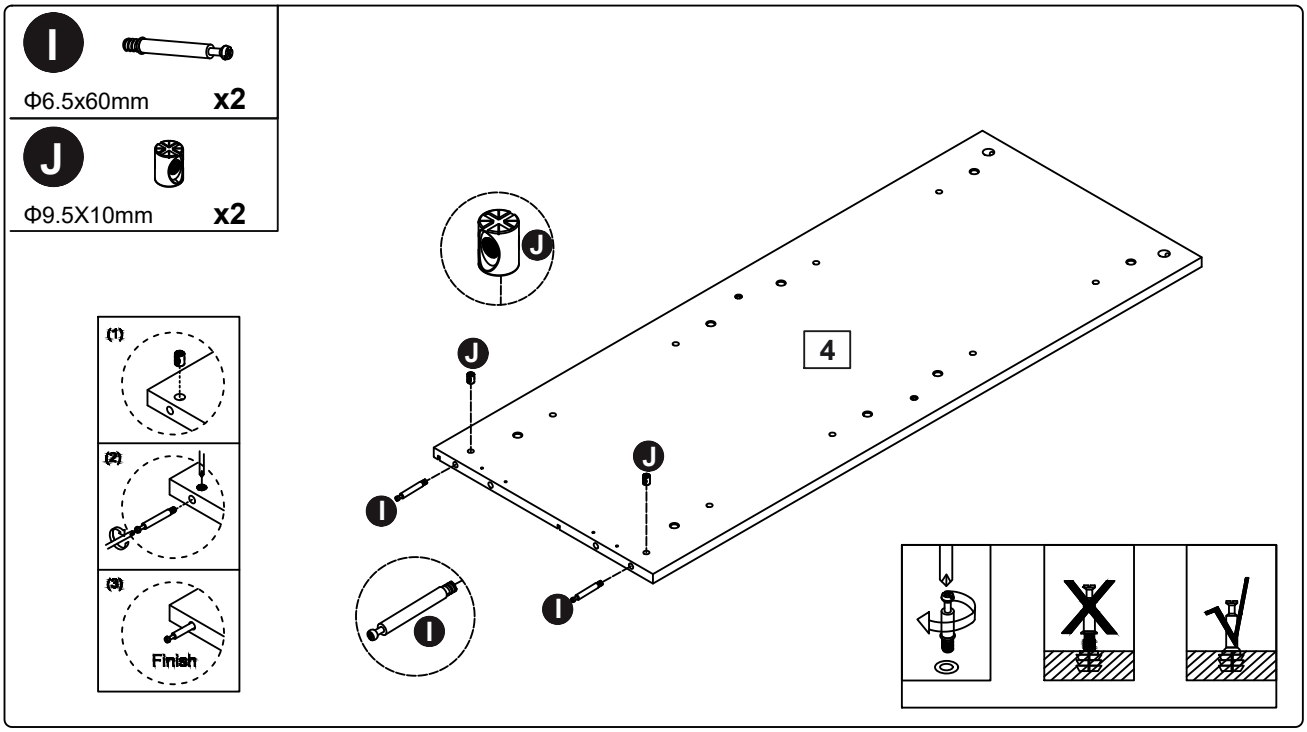


Install accessory J onto board (4), then connect accessory I to it.

Step 15

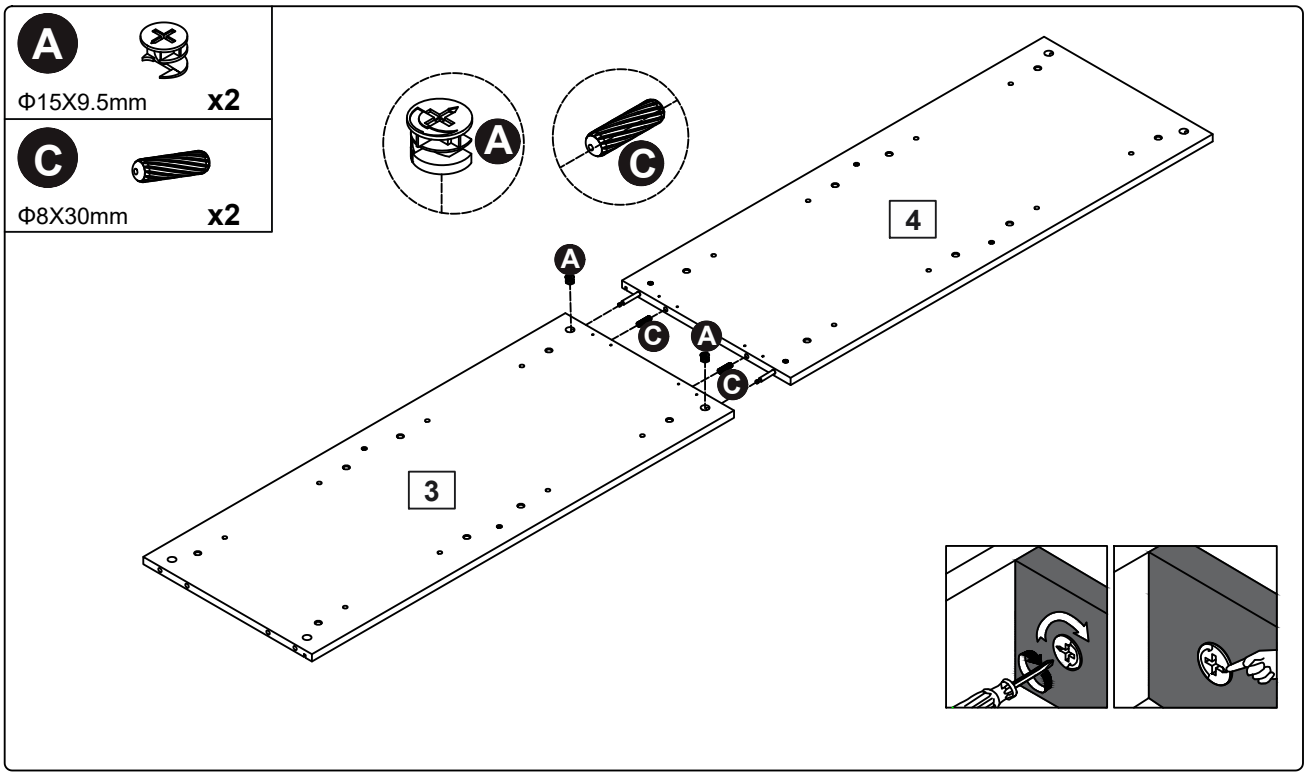

Connect board (3) and board (4) using accessories A and C.


Step 16

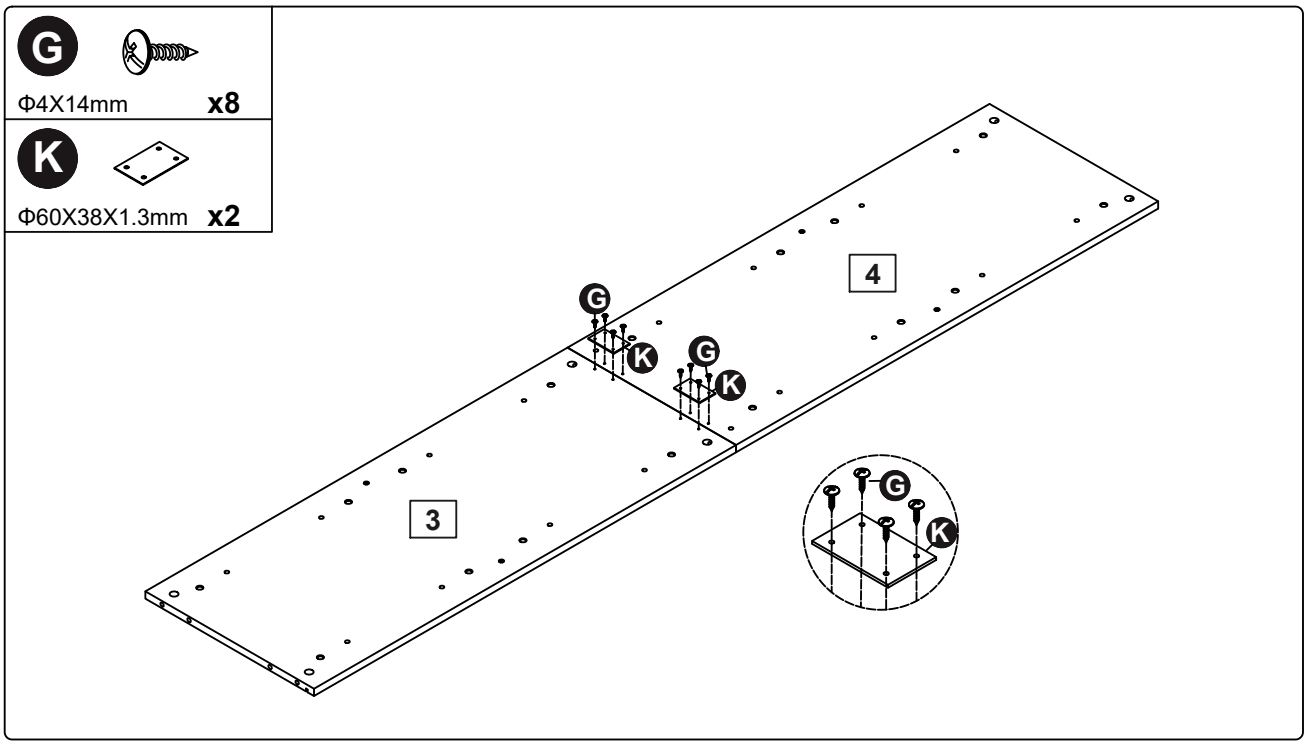

Fix accessory K to board (3) and board (4) with accessory G.


Email : service@grandtunnel.com

Step 17

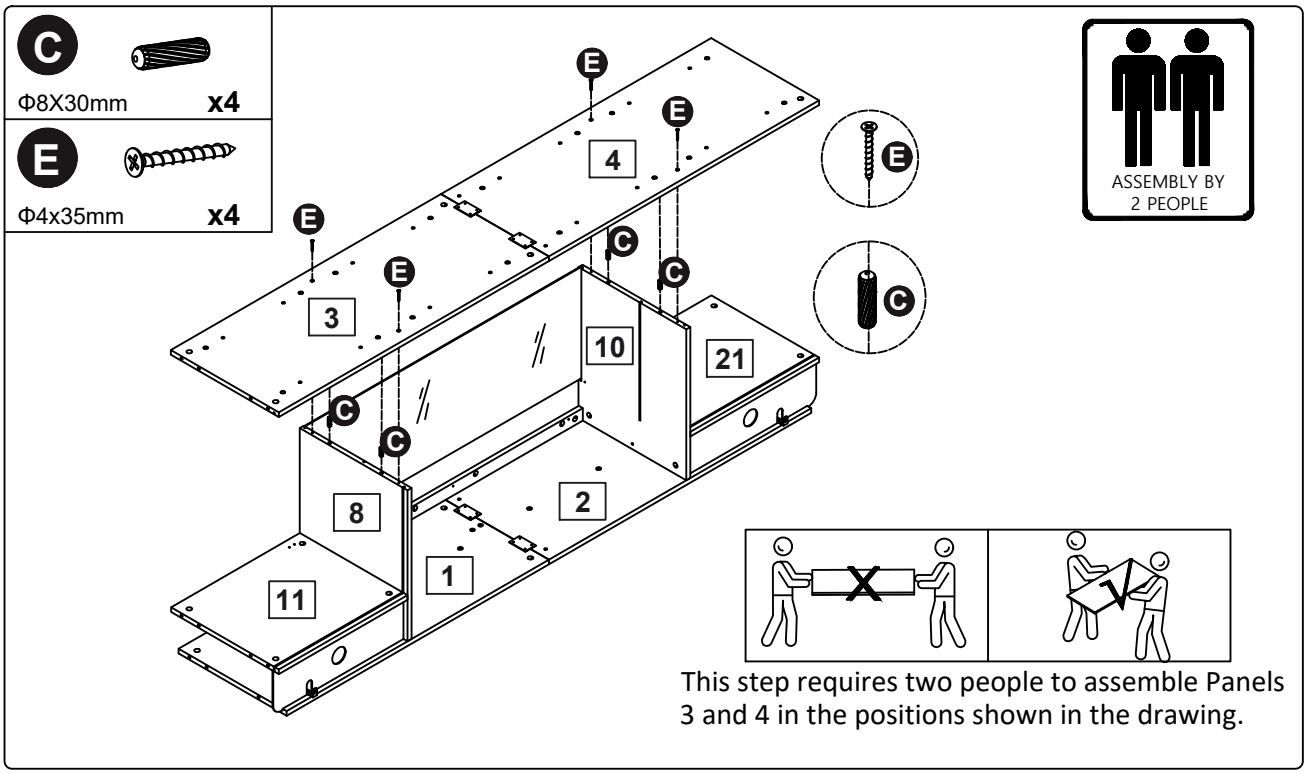


Join boards (3), (4) to boards (8), (10) using accessories C and E.

Step 18

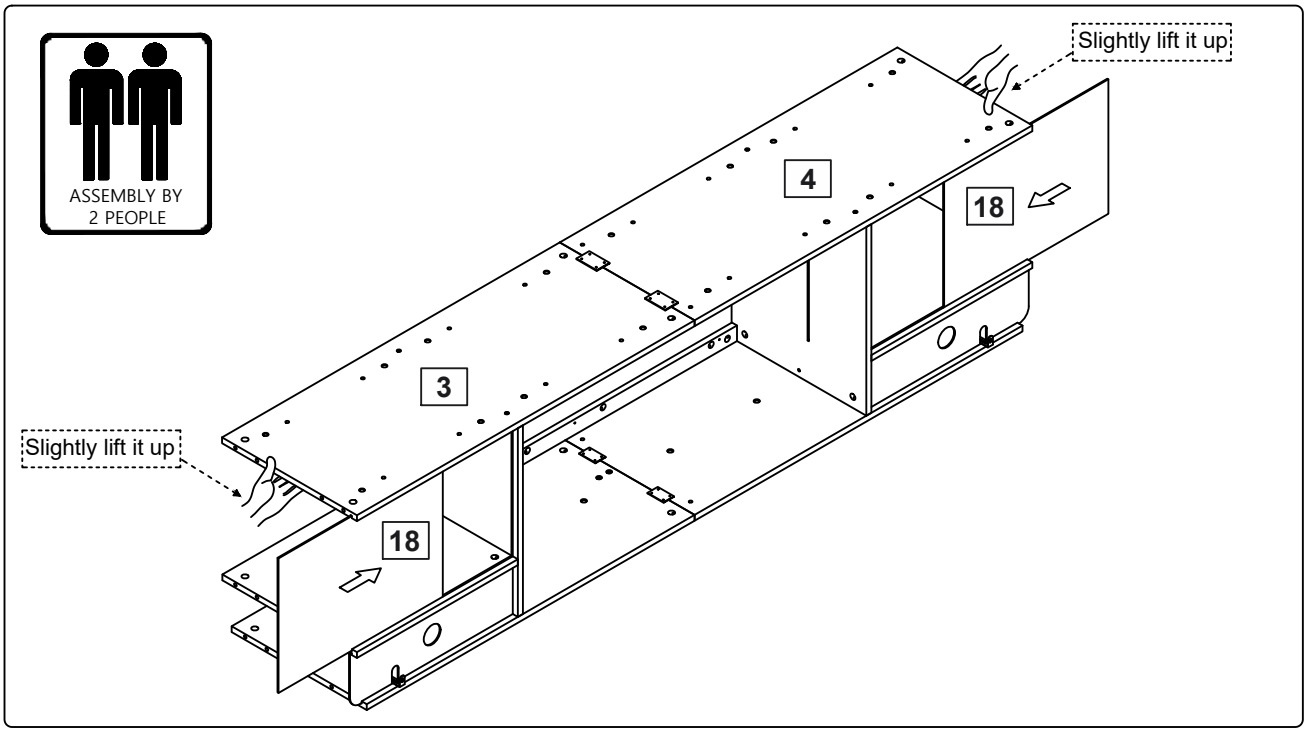


Insert board (18) into the groove.

Step 19

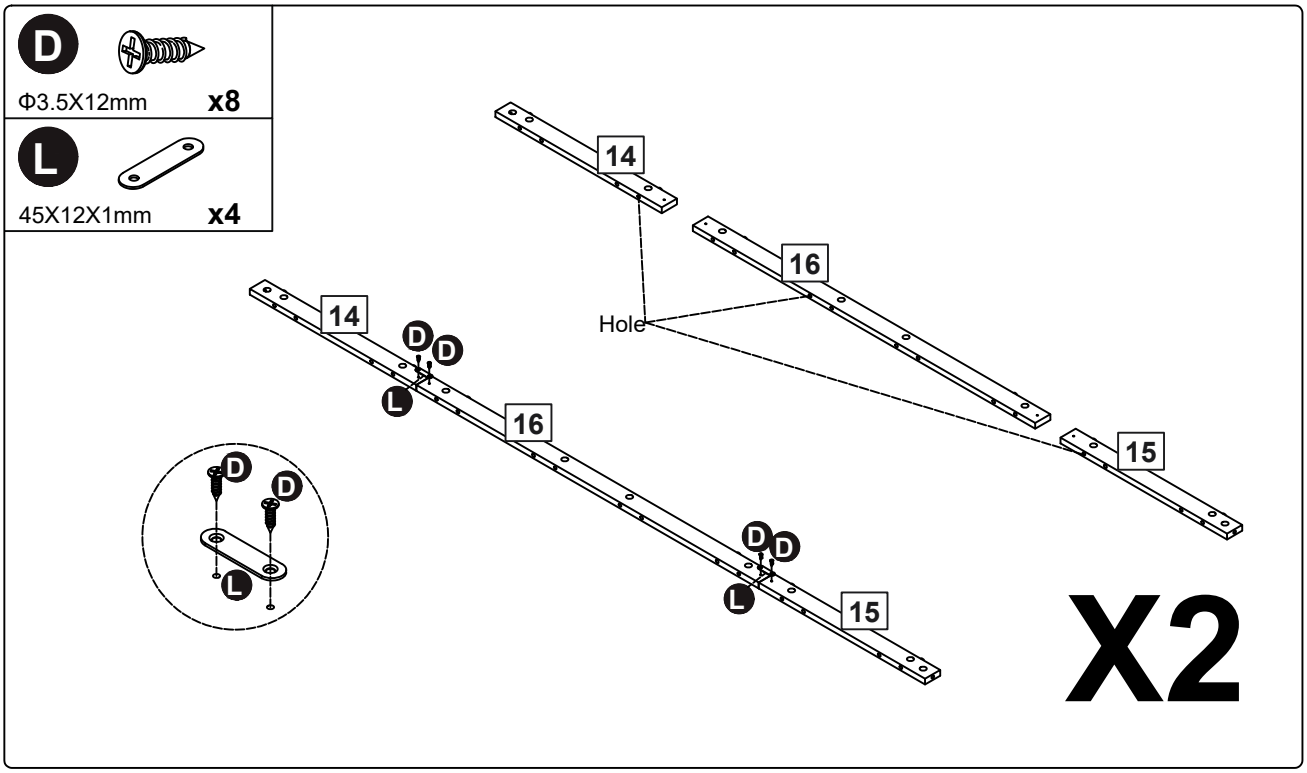

Connect boards (14), (15) and (16) together using accessories D and L.


Step 20

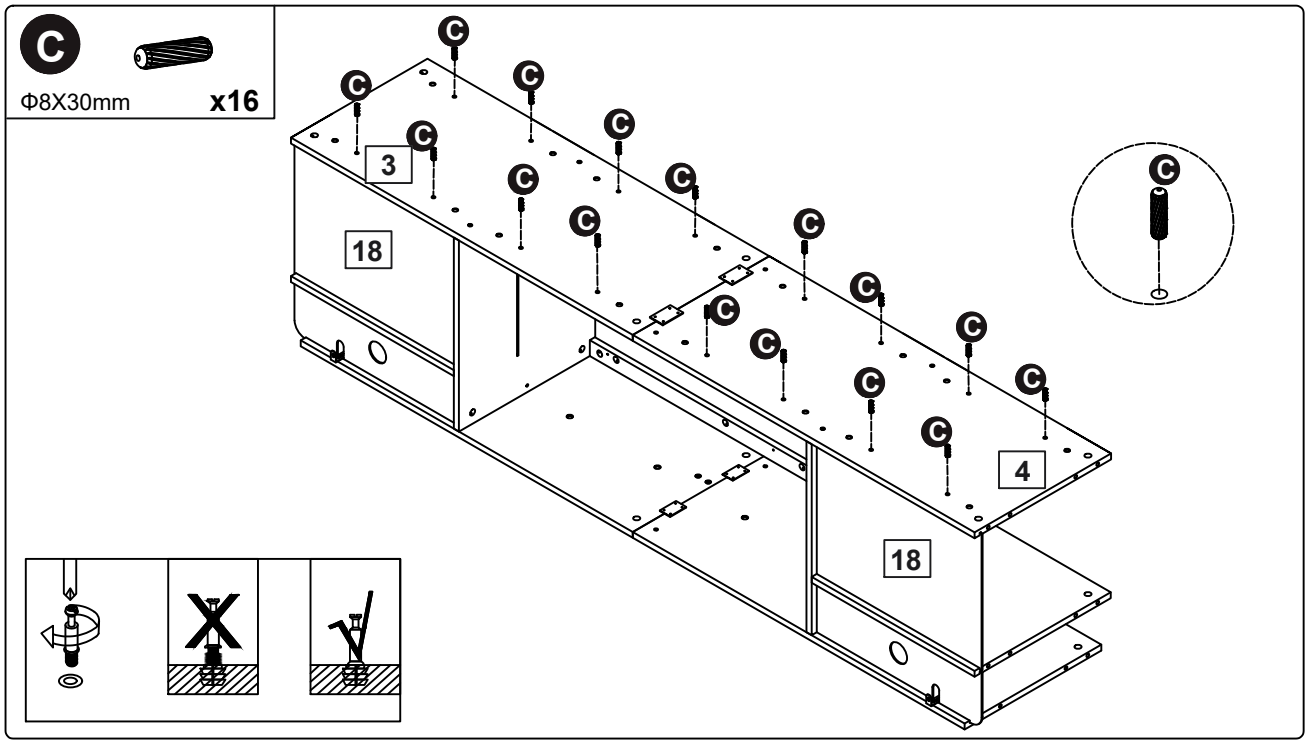

Install accessory C onto board (3) and board (4).


Email : service@grandtunnel.com

Step 21

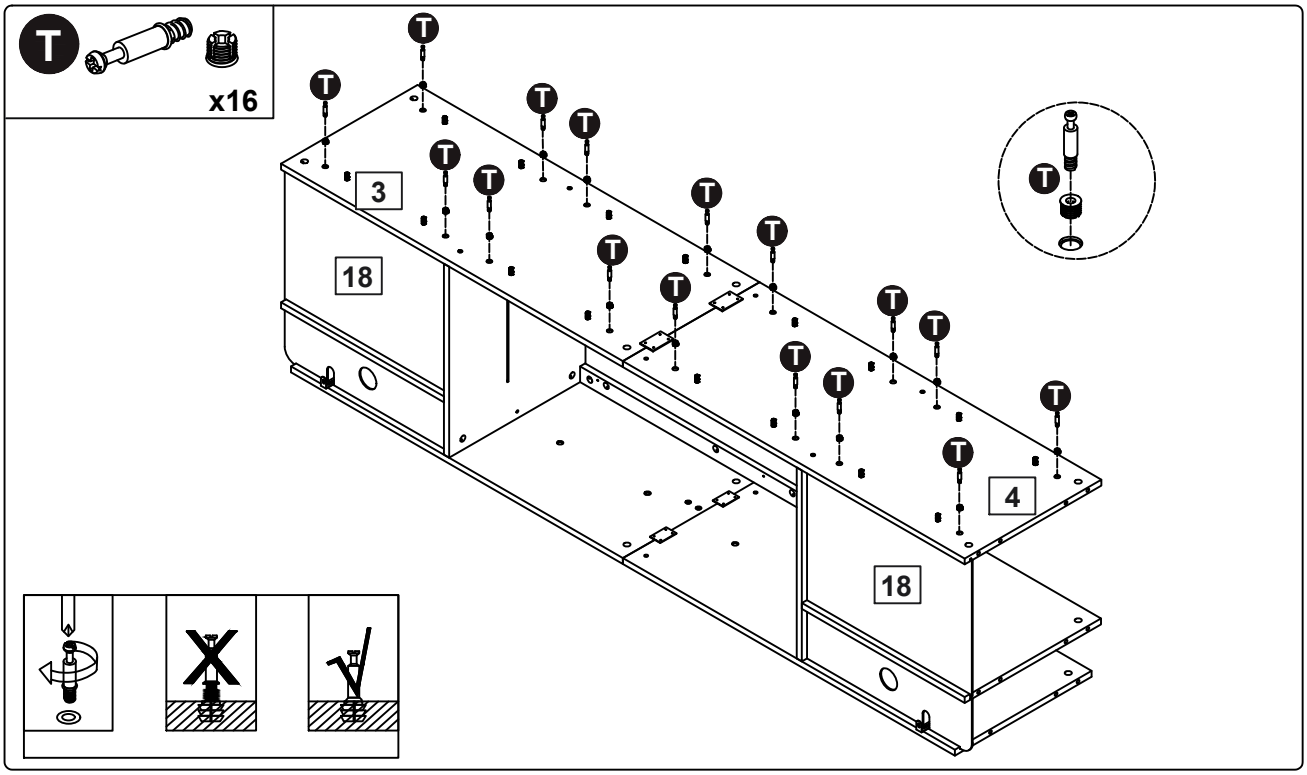

Mount accessory T onto board (3) and board (4).

Step 22

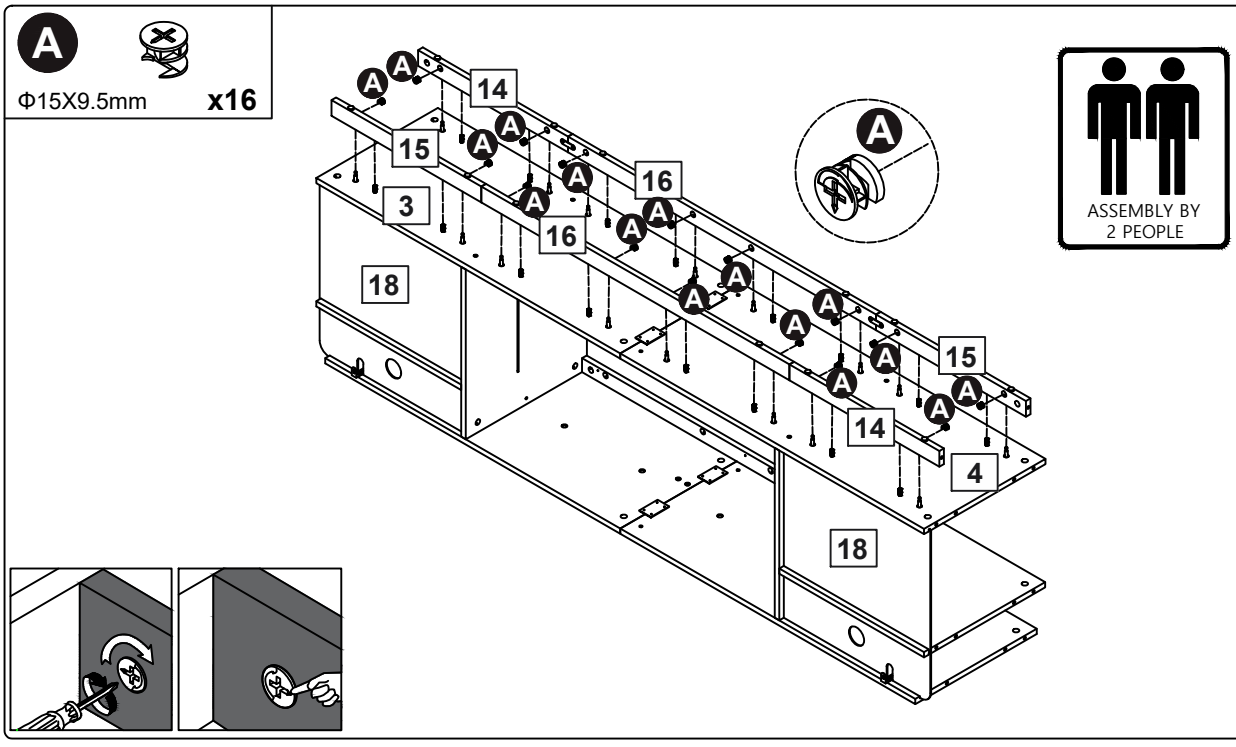


Attach boards (14), (15) and (16) to boards (3) and (4) using accessory A.


EN

Step 23


B



Φ6.5x35mm x8

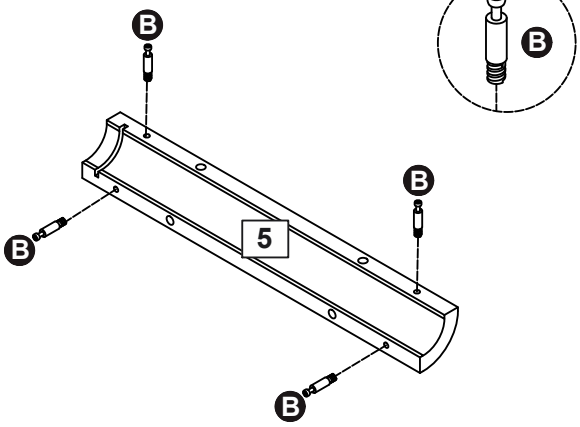

X2

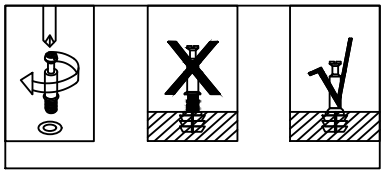

Mount accessory B onto board (5).

Step 24

A




Φ15X9.5mm x4

C




Φ8X30mm x4

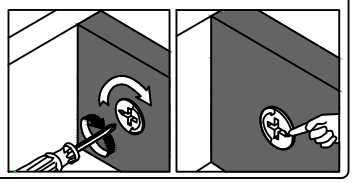

Connect board (5) with board (6), and board (5) with board (7) separately using accessories A and C.


Email : service@grandtunnel.com

Step 25

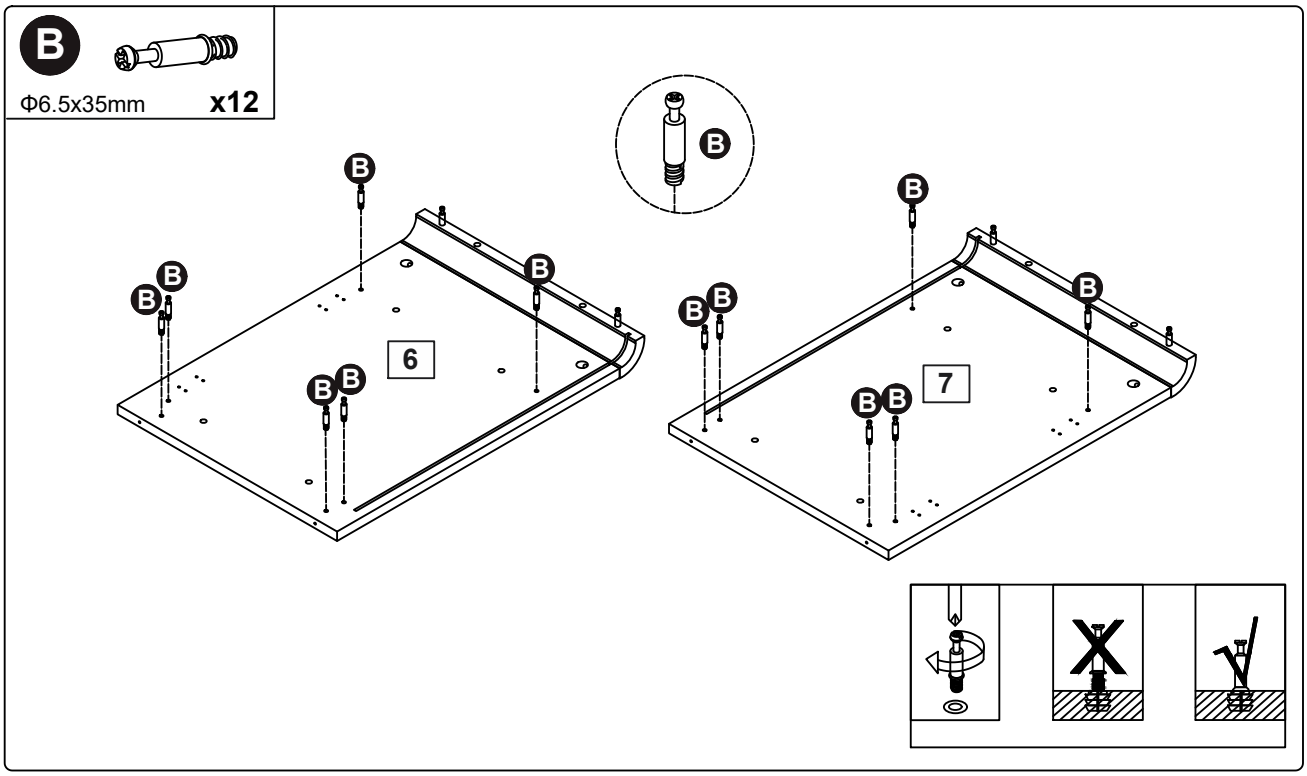

Mount accessory B onto board (6) and board (7).

Step 26

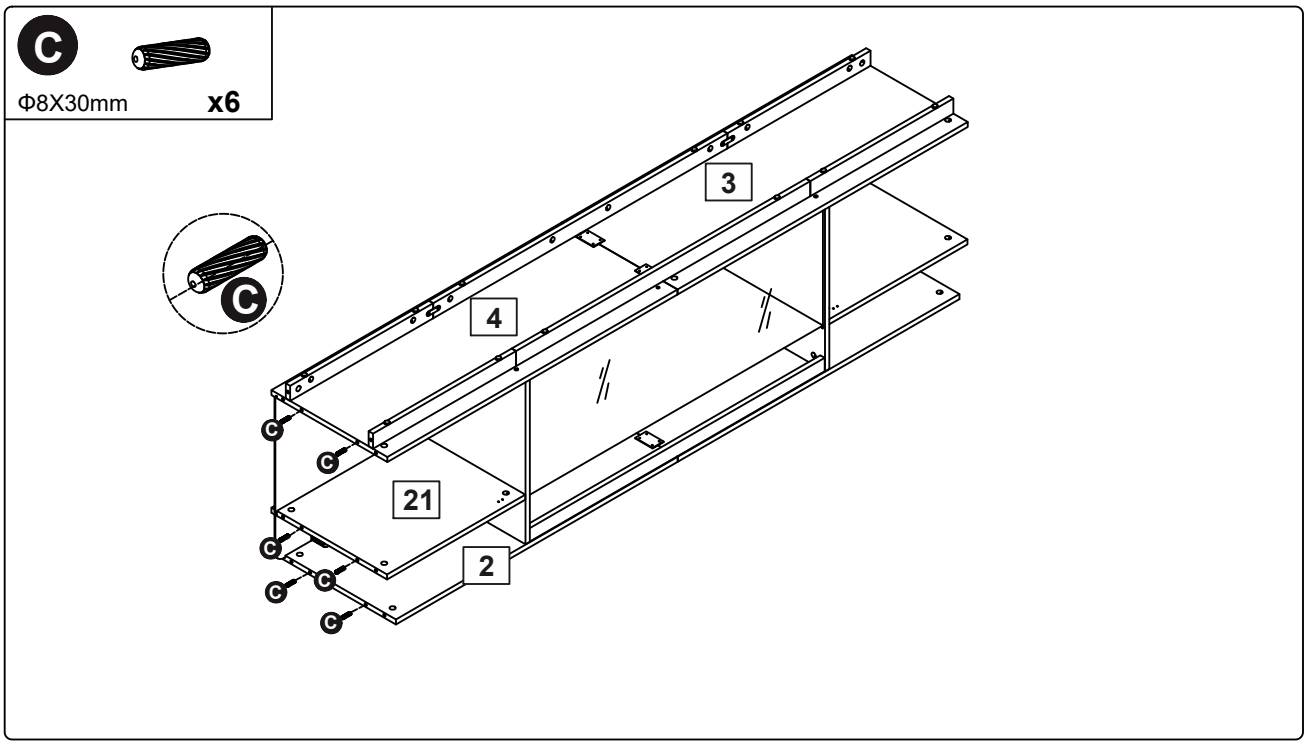


Install accessory C onto boards (4), (21) and (2).


EN

Step 27



Φ15X9.5mm **x6**

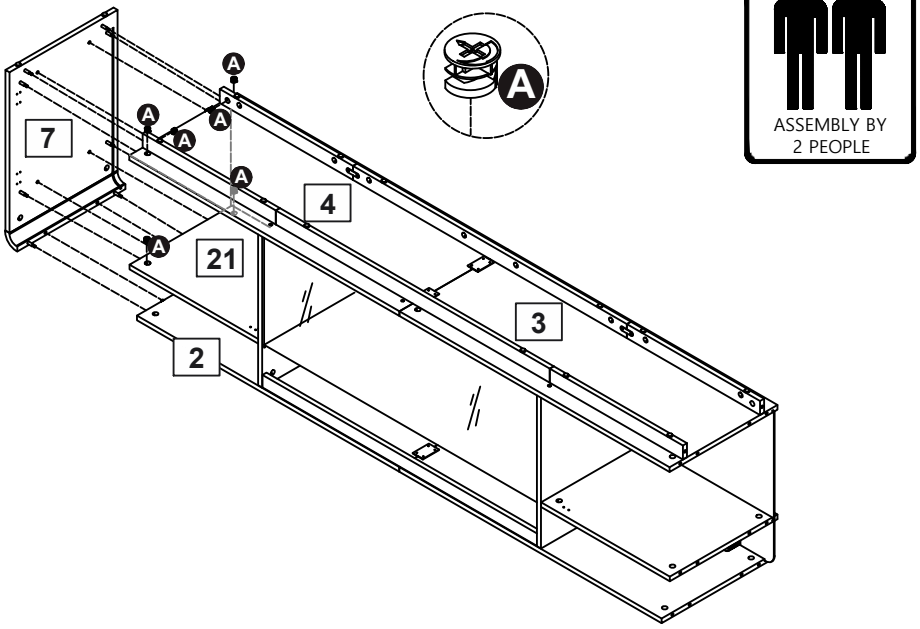

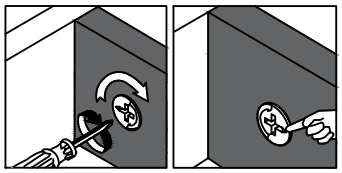


Attach board (7) to boards (4), (21) and (2) using accessory A.

Step 28




Φ8X30mm **x6**

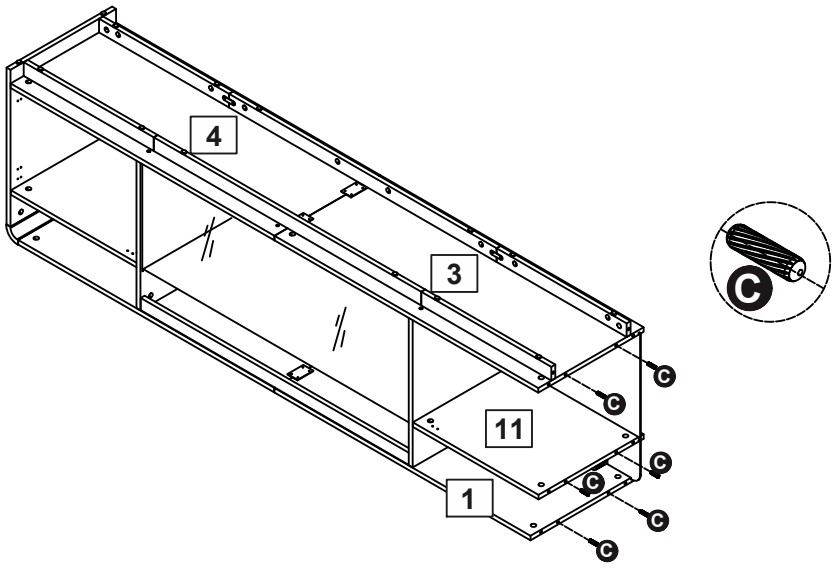

Install accessory C onto boards (3), (11) and (1).


Email : service@grandtunnel.com

Step 29

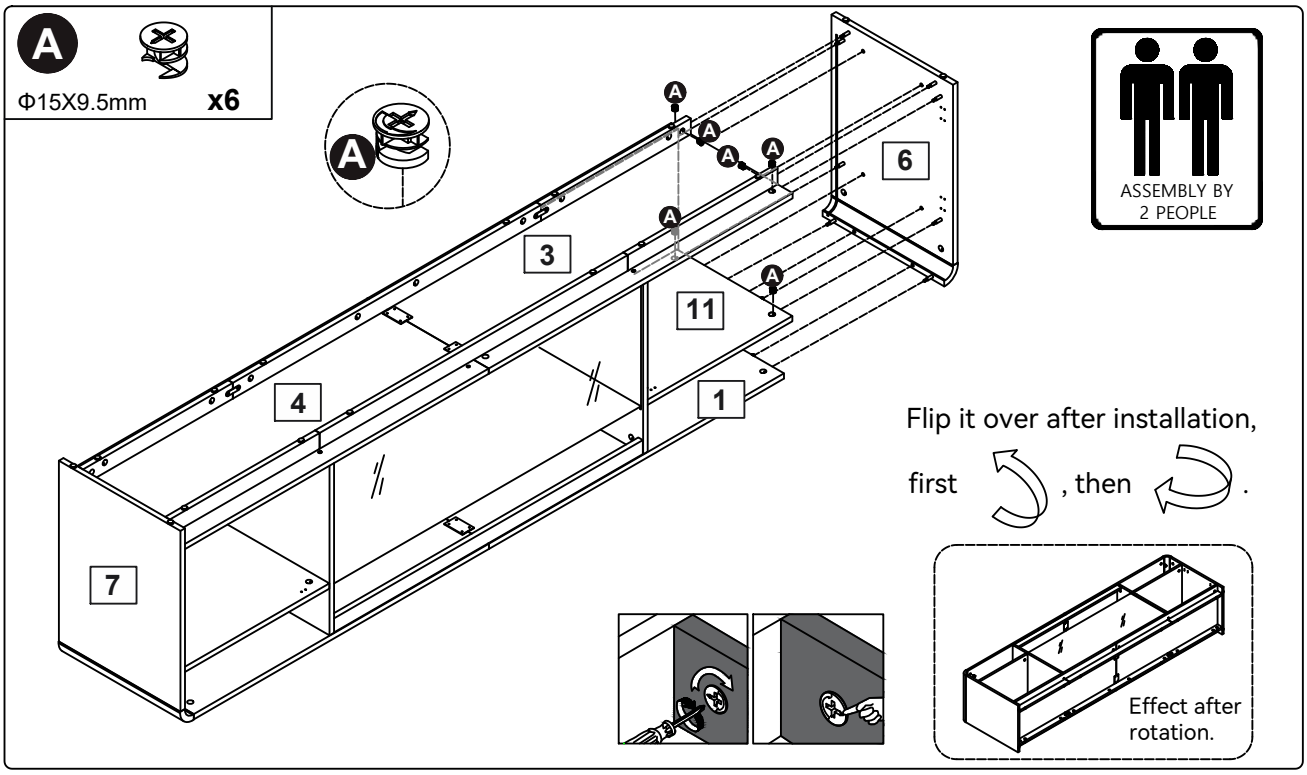


Attach board (6) to boards (3), (11) and (1) using accessory A.

Step 30

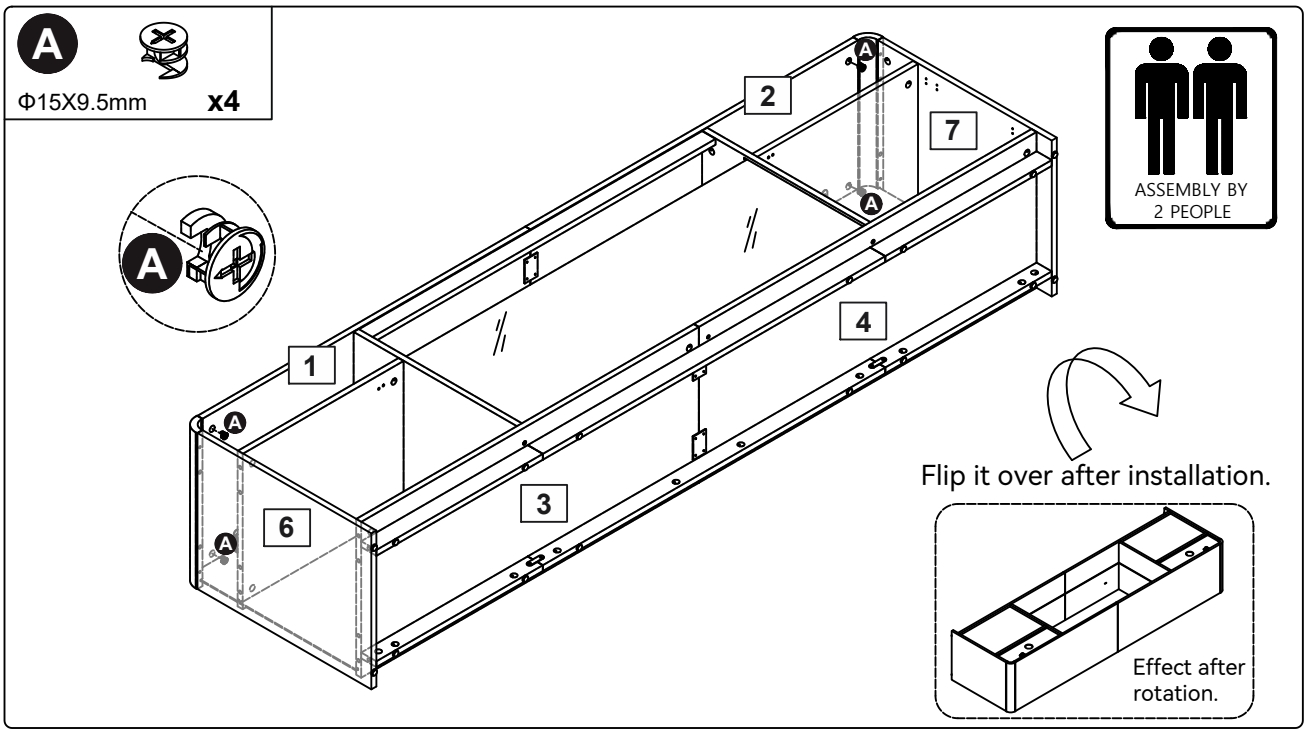


Install accessory A on the corresponding positions of board (1) and board (2).

Step 31

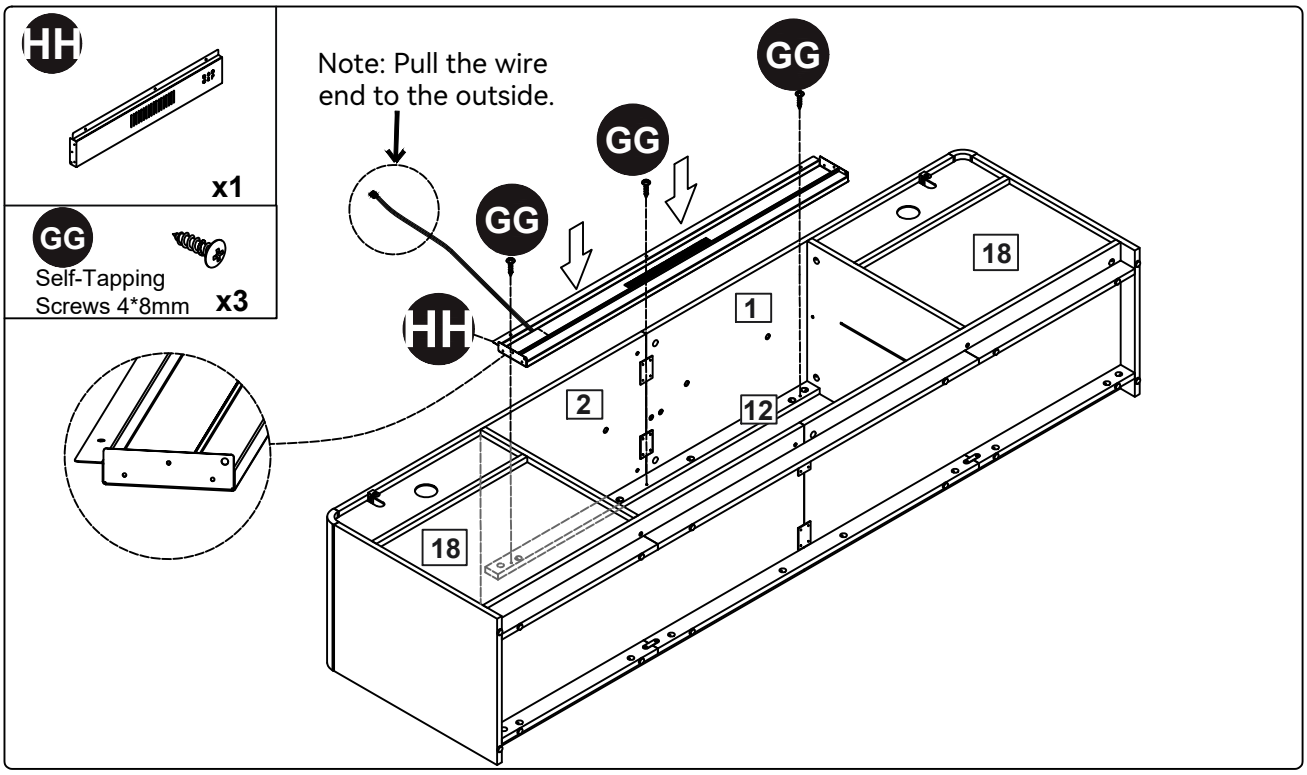

Connect fireplace accessory HH to board (12) with fireplace accessory GG.


Step 32

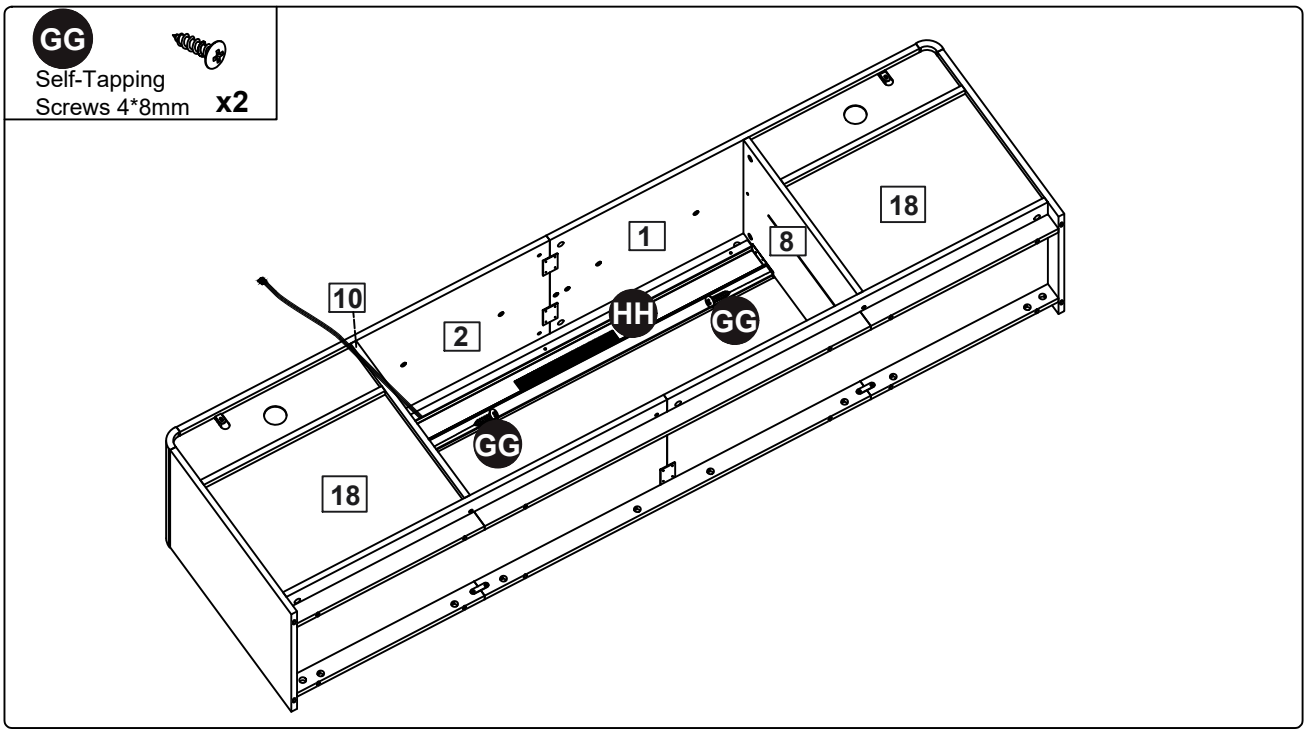

Connect fireplace accessory HH to board (8) and board (10) with fireplace accessory GG.


Email : service@grandtunnel.com

Step 33

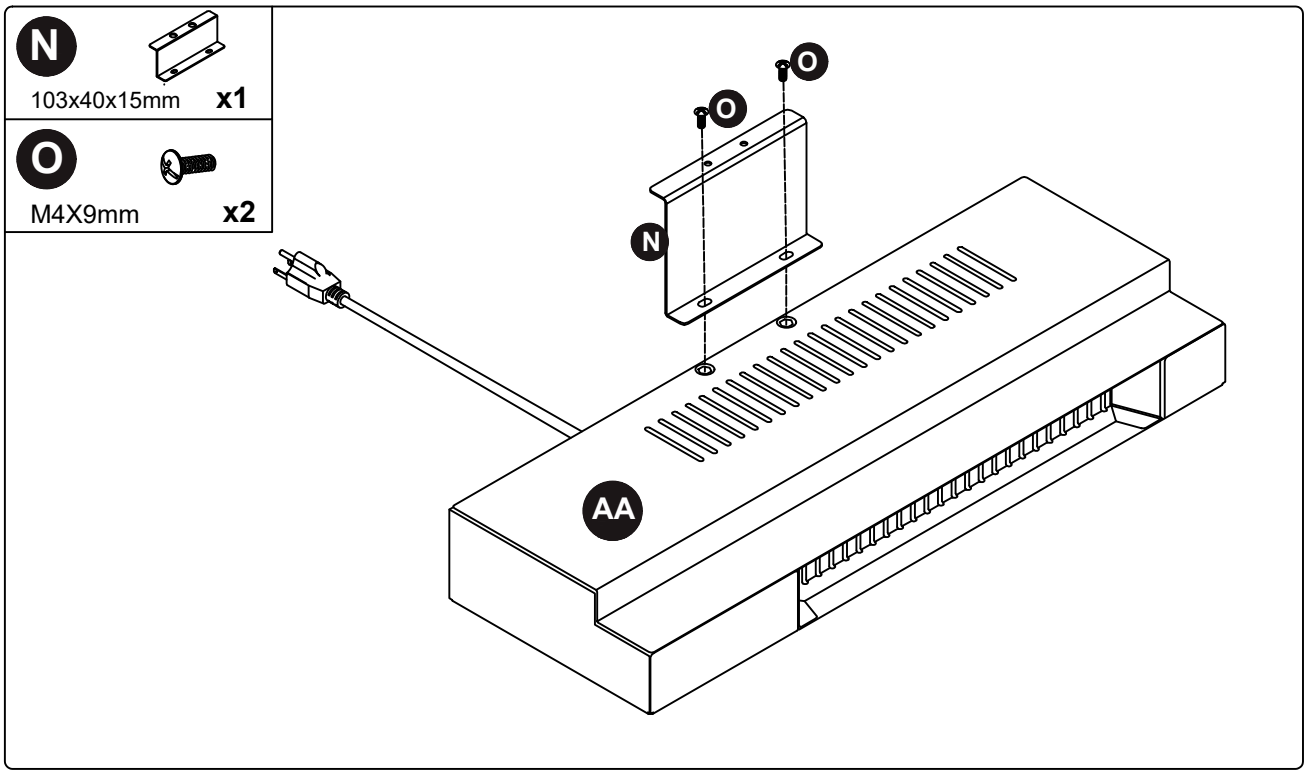


Fasten accessory N to fireplace accessory AA using accessory O.

Step 34

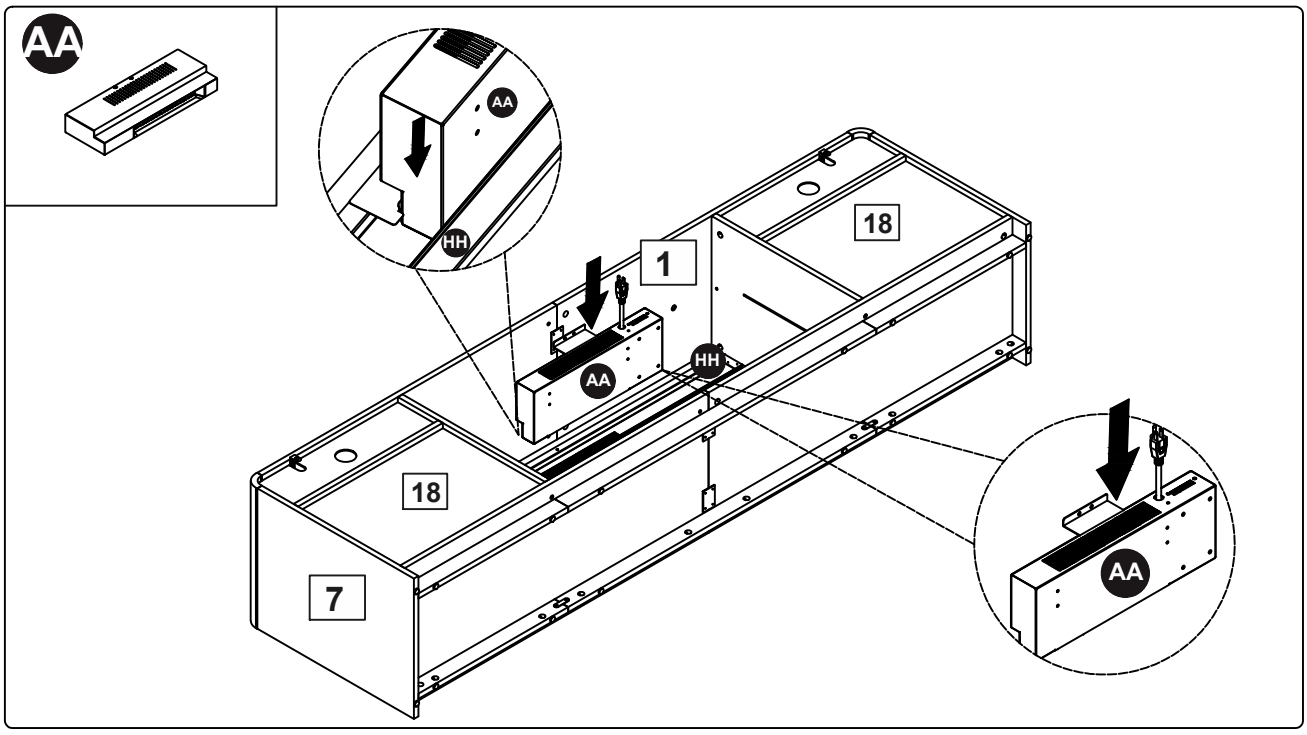


Insert fireplace accessory AA into the slot of fireplace accessory HH.

Step 35

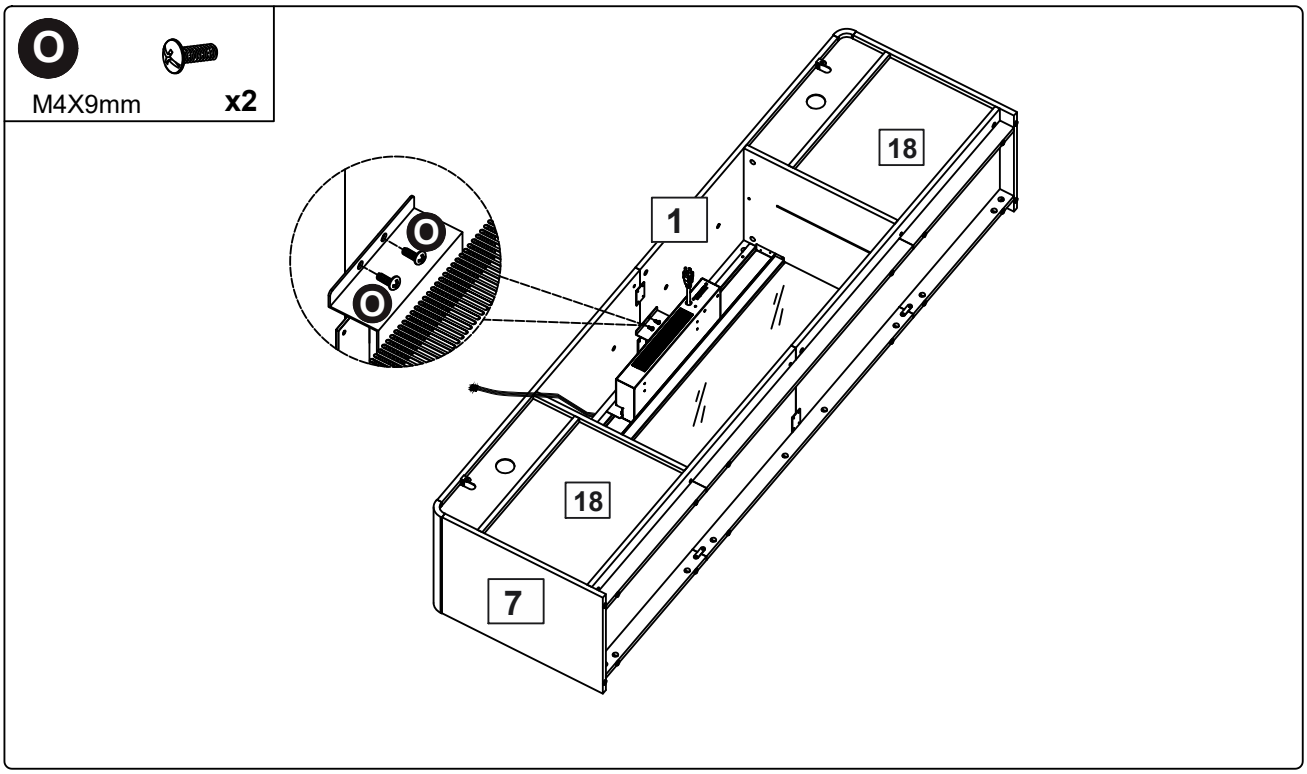

Fasten accessory N to board (1) using accessory O.


Step 36

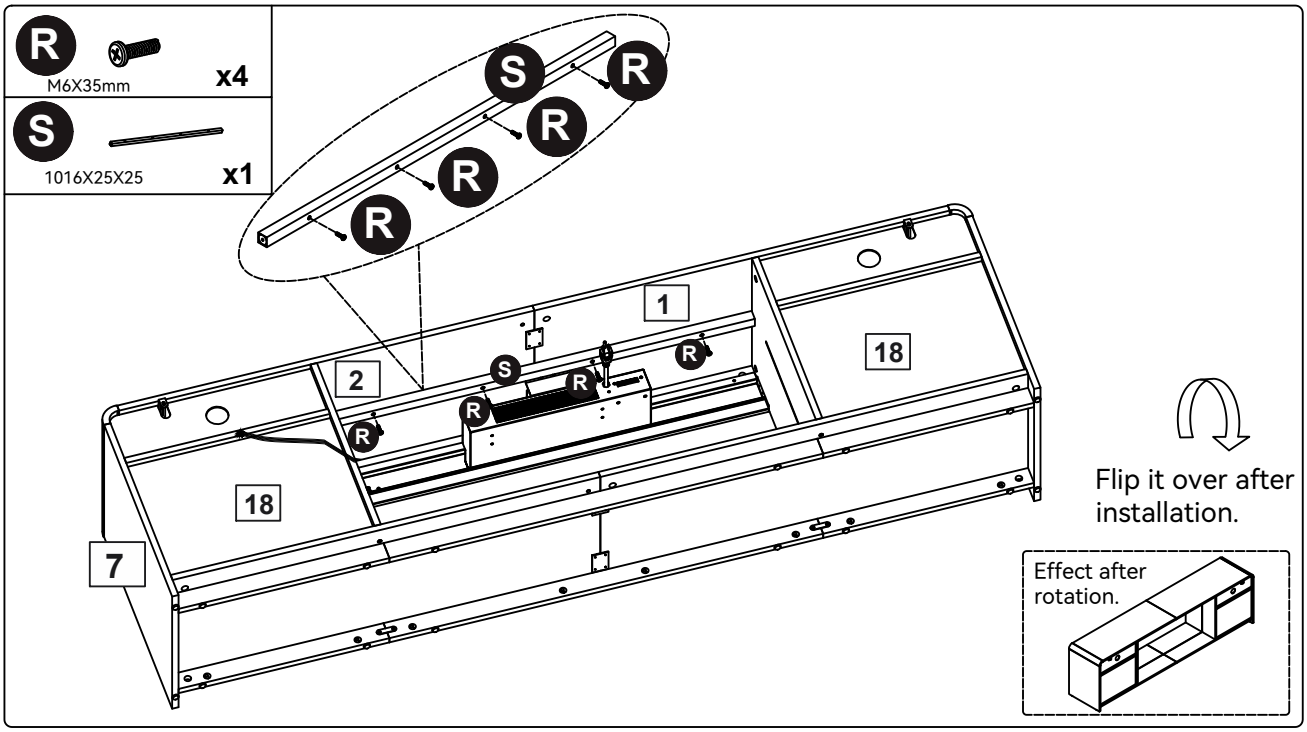

Mount accessory S onto board (1) and board (2) with accessory R.


Email : service@grandtunnel.com

Step 37

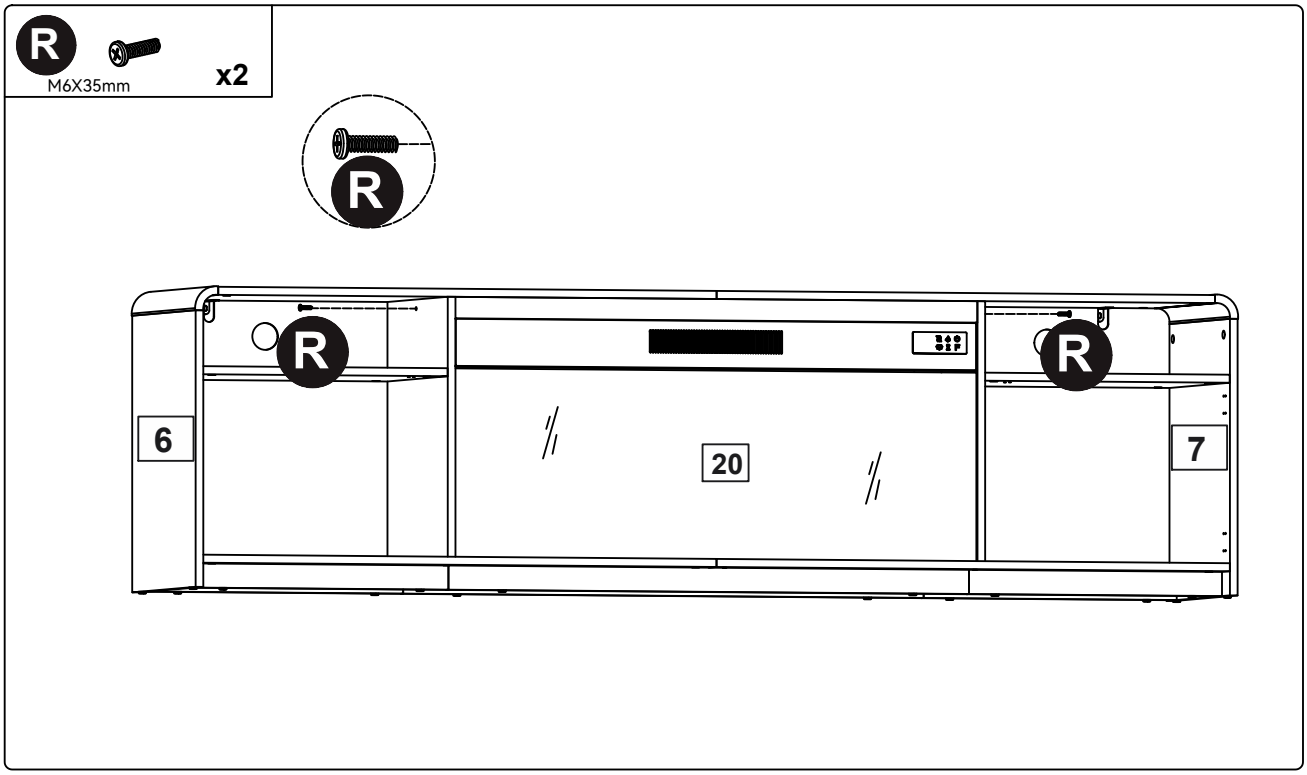


Tighten the side faces of accessory R and accessory S at the front side of the cabinet.

Step 38

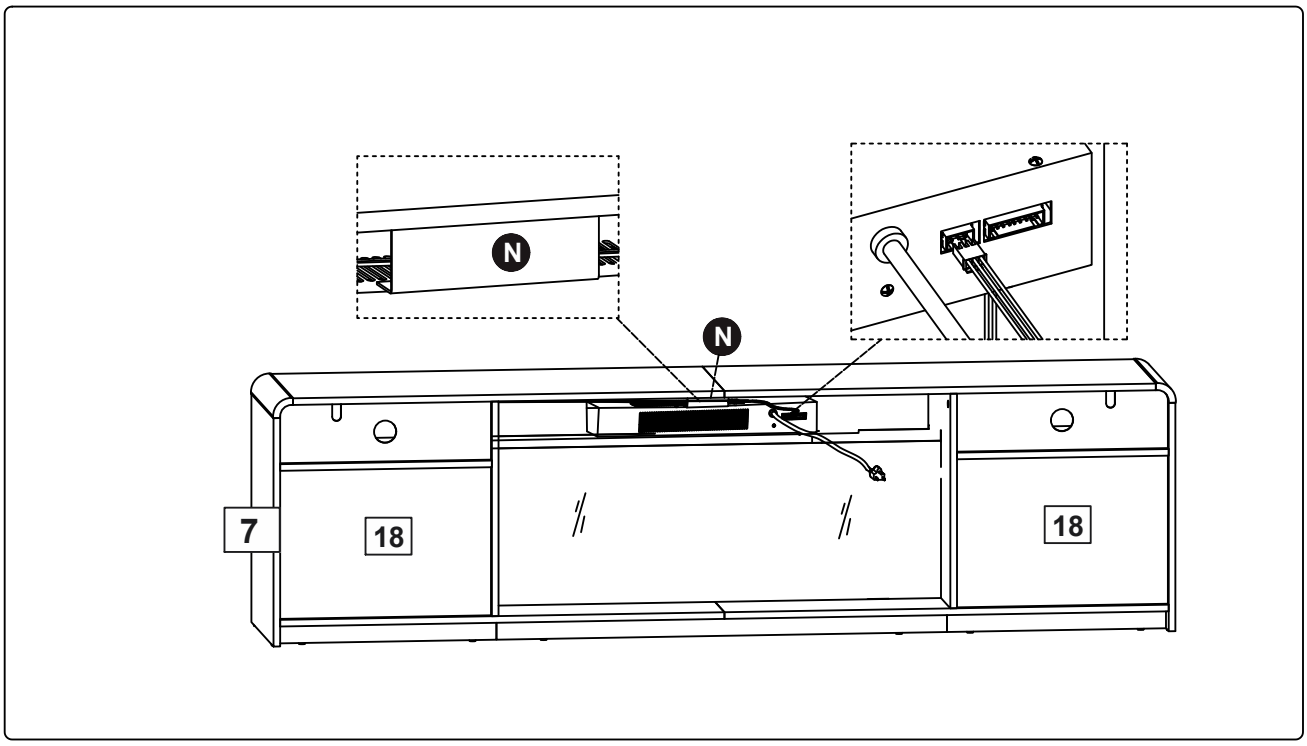


Plug the connector of fireplace accessory AA into the corresponding port of the heater.

Step 39

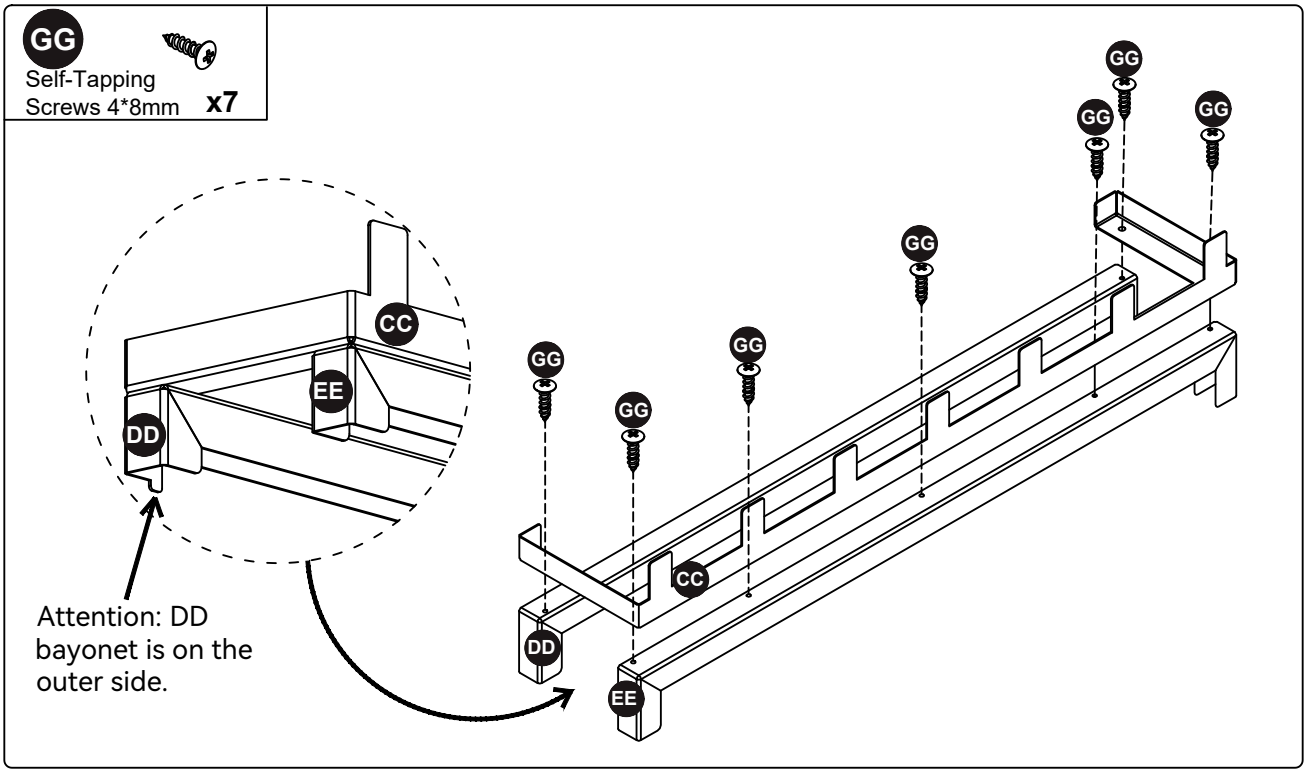

Link fireplace accessory CC with DD and EE via fireplace accessory GG. Note that the bayonet of DD must face outward.


Step 40

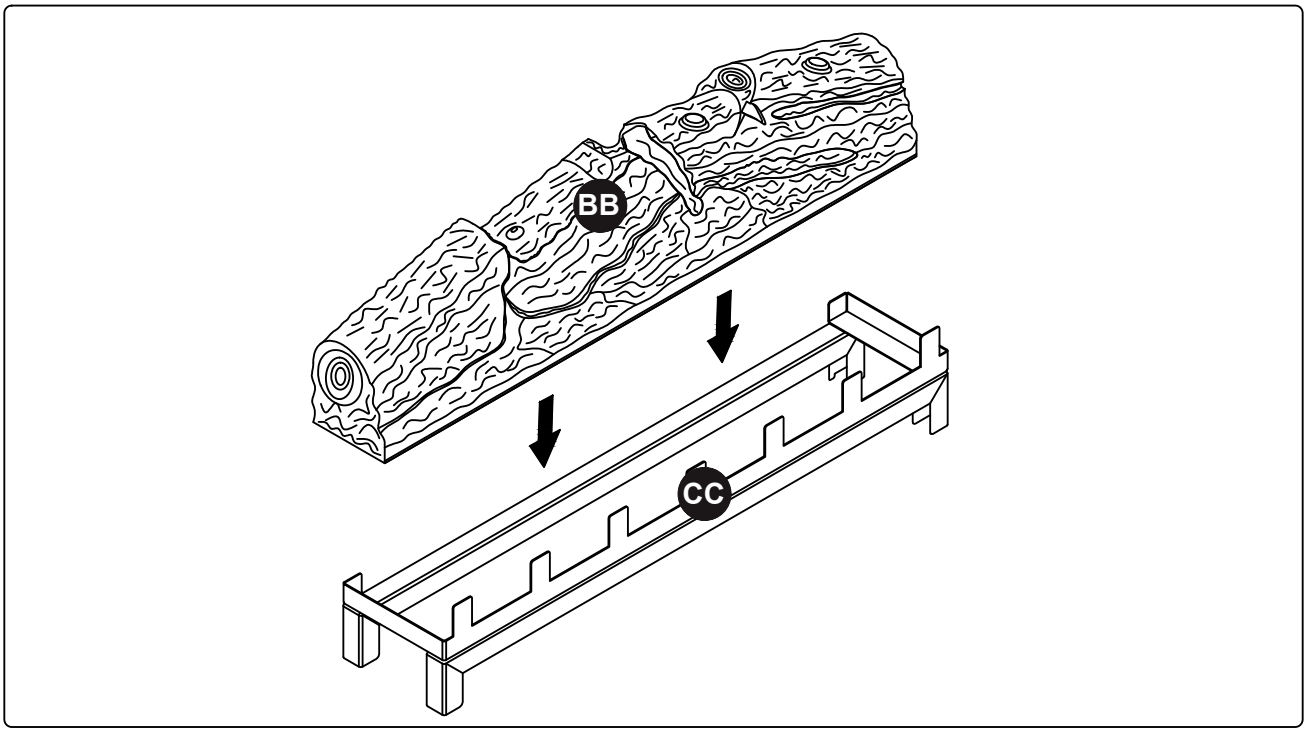

Place fireplace accessory BB onto the fireplace base, pay attention to the orientation.


Email : service@grandtunnel.com

Step 41

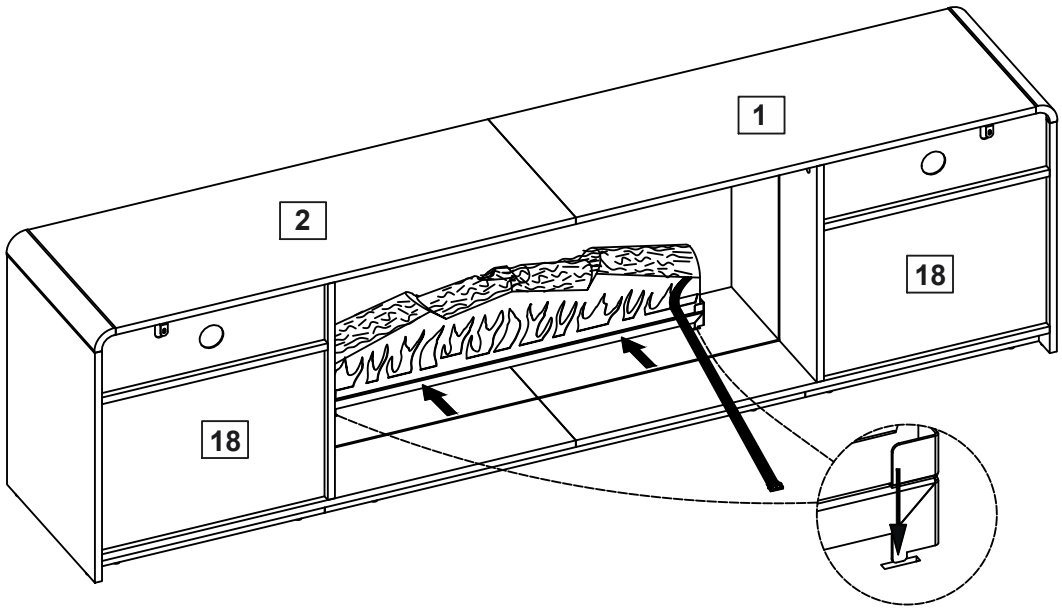

Put the complete fireplace assembly inside the cabinet, and insert the fireplace bayonets into the matching slots of the cabinet.

Step 42

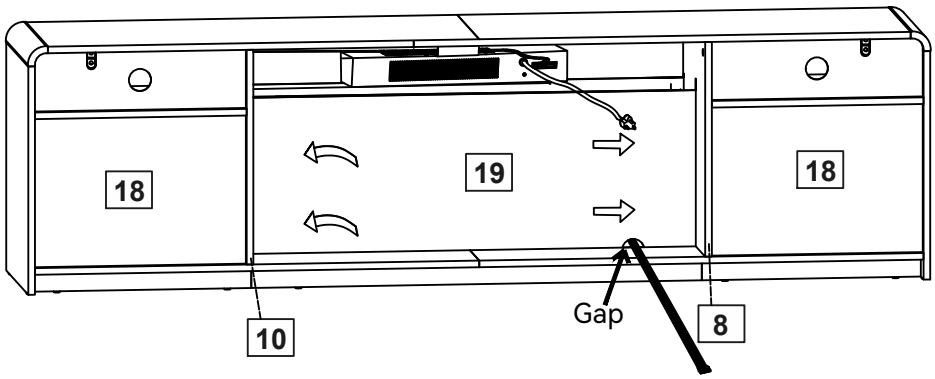


Panel(19) is to be bent slightly and inserted into slot of panel (10)

Bend board (19) slightly, insert it into the grooves of board (10) and board (8), then insert it into the lower groove afterward.


EN


Step 43

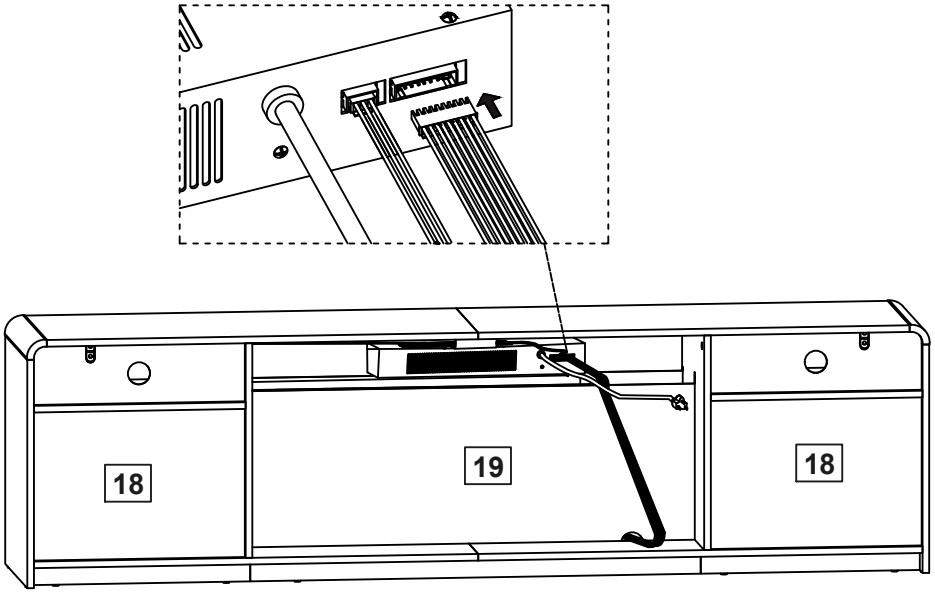


Pass the plug of fireplace accessory BB through the semicircular cutout on board (19), then plug it into the corresponding heater port.

Step 44

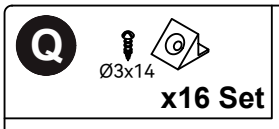

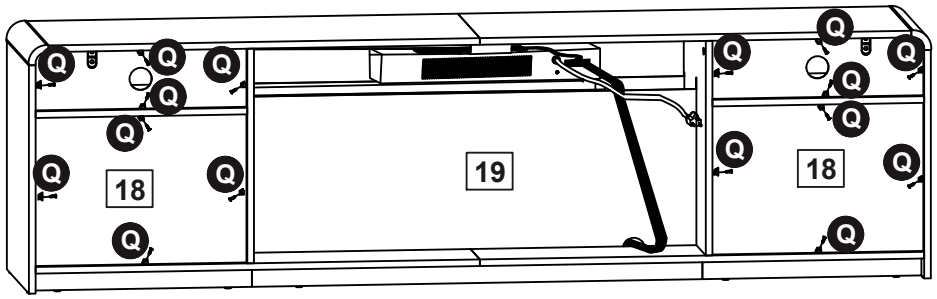

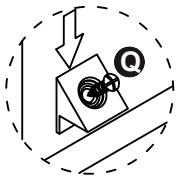




Flip it over after installation.

Insert the plastic fastener into the back panel channel, thread through the hole on the plastic fastener and lock it into place.

Email : service@grandtunnel.com

Step 45

D	Ø3.5X12mm	x8
F	Ø35mm	x4
H	Ø4X30mm	x4
P	150X20X11mm	x2

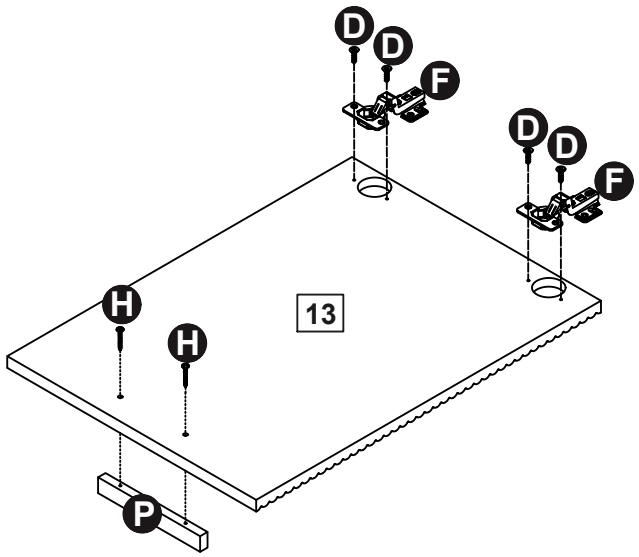


x2

First install accessory F onto board (13) using accessory D, then mount accessory P onto board (13) with accessory H.

Step 46

D	Ø3.5X12mm	x8
V	30X16X10mm	x1
W	Ø3X12mm	x2

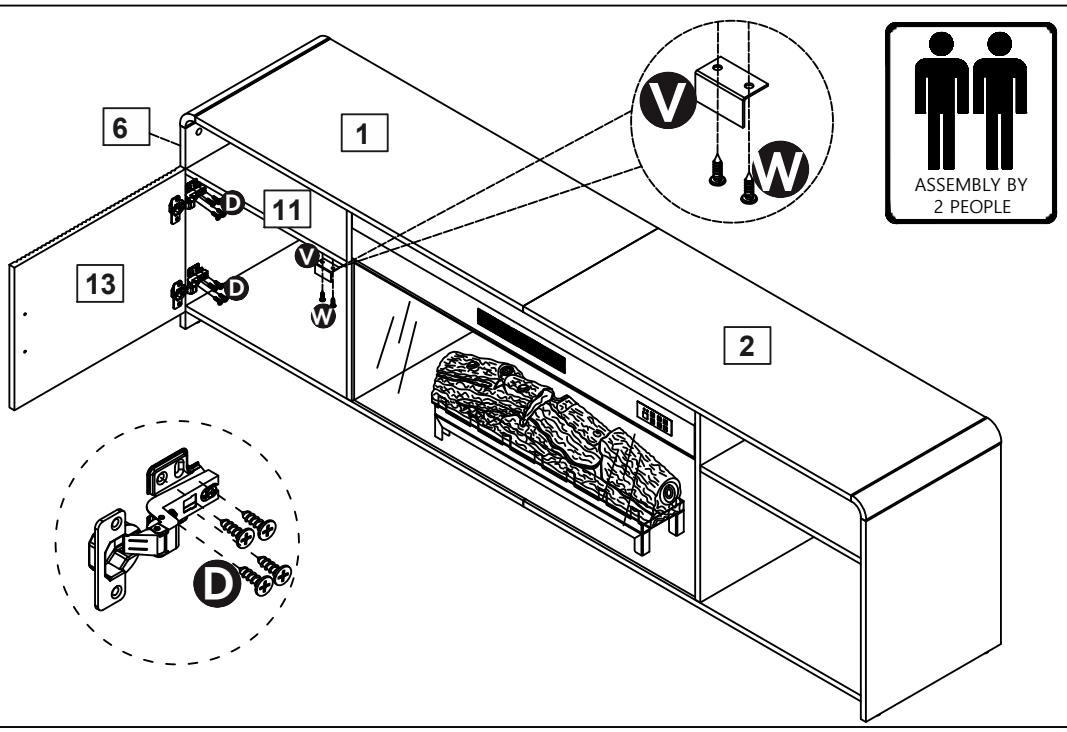


First fix board (13) onto board (6) using accessory D, then mount accessory V onto board (11) with accessory W.

Step 47

D Ø3.5X12mm	x8
V 30X16X10mm	x1
W Ø3X12mm	x2


ASSEMBLY BY 2 PEOPLE

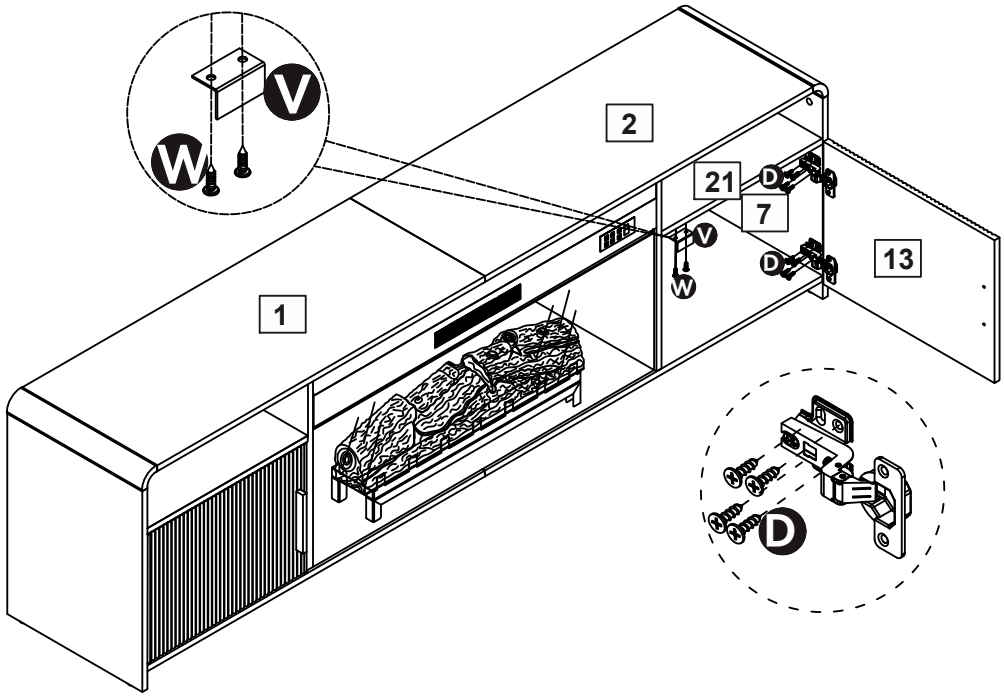

First fix board (13) onto board (7) using accessory D, then mount accessory V onto board (21) with accessory W.


Email : service@grandtunnel.com


Step 48

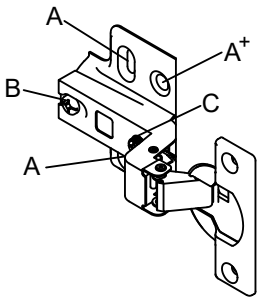

NOTE: If you encounter a gap or difficulty closing the door after installation, please adjust the hinge according to the following operation.


The method is as follows:

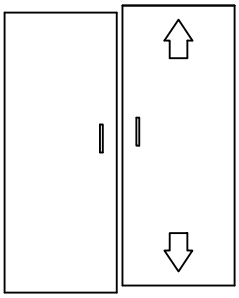


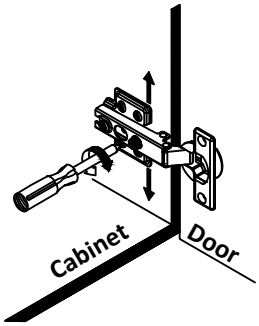

[How to adjust vertical height of the door]


- First remove the 2 screws "A+" on the hinge.
- Then loosen the 2 screws "A" on the hinge so that it can be adjusted up or down a few millimeters.
- Then tighten "A" and reinstall "A+".

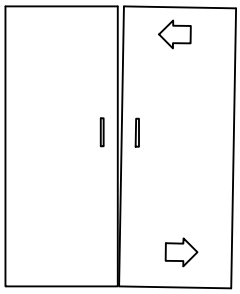


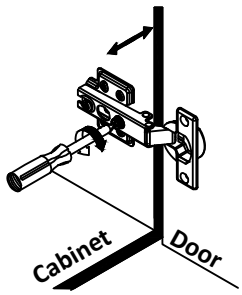

[How to adjust the level of the door]

- Turn screw "C" on hinge to adjust the level of the door.

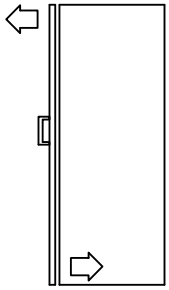

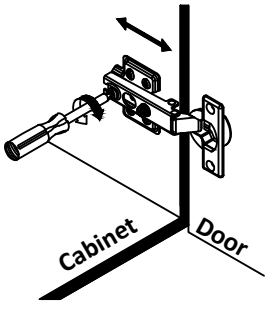


[How to adjust depth of the door]

- Loosen screw "B" and adjust the depth of the door.
- If screw "B" is loose, the depth of the door still cannot be adjusted. Simply loosen the screw "C" slightly to adjust the position of the door forward and backward.
- After adjusting the position, tighten screw "B" last.


EN

Step 49




NOTE:The tipping restraint hardware included is forwooden stud wall construction. It must be attached to awall stud.
Depending upon your wall construction differentanchor hardware maybe required. Please contact your localhardware store for assistance.
Young children can beseriously injured by tipping furniture. You must install thetipping restraint hardware with the unit to prevent the unitfrom tipping, causing any accidents or damage.
The tippingrestraints are intended only as a deterrent and are not asubstitute for proper adult supervision.
The tippingrestraints are not earthquake restraints.
If you wish to addthe extra security of earthquake restraints, they must bepurchased and installed separately.


Install the tipping restraint hard ware

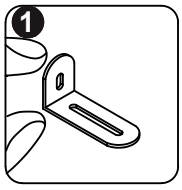


1.make mark on the wall

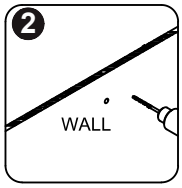

2.drill two Ø6mm holes on the wall

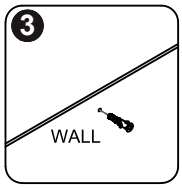


3.put two anchors in the holes

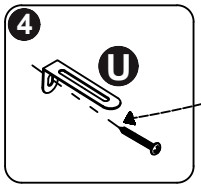

4.fix the device on the wall by the long screws




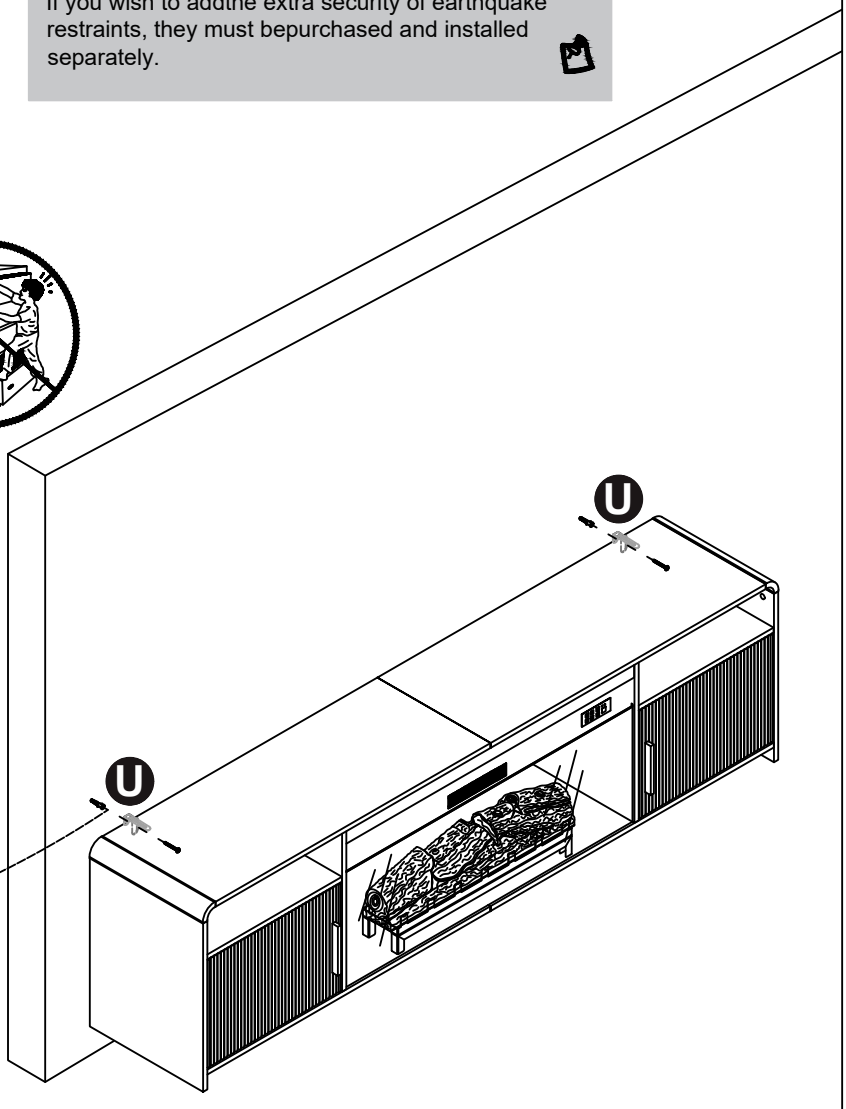

Email : service@grandtunnel.com

EN

User Manual
Electric Fireplace
Model SDF-33A10K SDF-40A10K

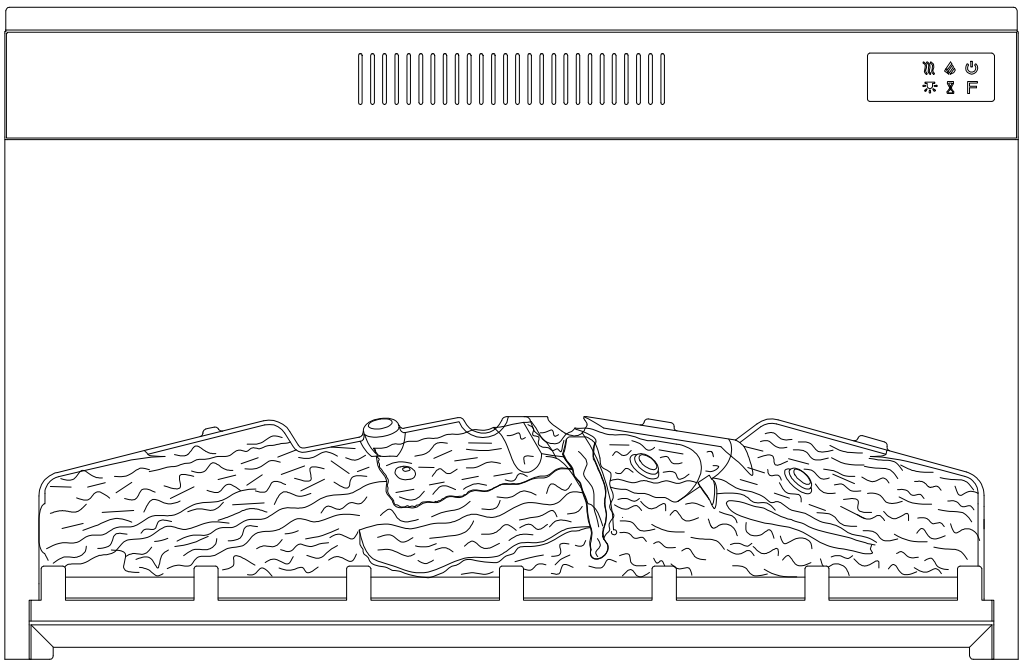

This manual contains important safety information.
Please read it carefully and keep it for future reference.

Email : service@grandtunnel.com

Safety Information



Important Safety Information

Please read all information in this operation manual, including all safety, operating, and maintenance instructions. To reduce the risk of fire, electric shock, or personal injury, follow all instructions and warnings provided in this manual.

Read all instructions before using this heater.

Do not use this heater outdoors.

This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Do not place the heater where it may fall into a bathtub or any other container filled with water.

Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or similar coverings.

Keep the power cord away from traffic areas and places where it may pose a tripping hazard.

To disconnect the heater, turn the controls off first, then unplug the power cord from the outlet.

Connect the heater only to a properly grounded outlet. Always plug the heater directly into a wall outlet. Do not use an extension cord or relocatable power tap (power strip).

To prevent a possible fire, do not block the air intake or exhaust openings of the firebox in any manner. Do not operate the fireplace on soft surfaces, such as a bed, where the openings may become blocked.

This heater contains a thermal limiter. If the unit overheats or experiences abnormal heating, the thermal safety device will shut off power to prevent damage to the fireplace and reduce the risk of fire.

Use this heater only as described in this manual. Any use not recommended by the manufacturer may result in fire, electric shock, or personal injury.

Email : service@grandtunnel.com

SAVE THESE INSTRUCTIONS

⚠ WARNING	There are no user-serviceable parts inside the fireplace/heater. If the unit appears to be malfunctioning, turn it off immediately, unplug it from the wall outlet, and contact customer service.
⚠ WARNING	The heater becomes hot during operation. To avoid burns, do not let bare skin come into contact with hot surfaces. Always use the handle when moving the heater. Keep combustible materials—such as furniture, pillows, bedding, papers, clothing, and curtains—at least 3 feet (0.9 m) away from the front of the heater, and keep them away from the sides and rear as well.
⚠ WARNING	Extreme caution is required whenever the heater is used by or near children, individuals with reduced mobility, or whenever the heater is operating and left unattended.
⚠ WARNING	Always unplug the heater when it is not in use.
⚠ WARNING	Do not operate the heater if the power cord or plug is damaged, or if the heater has malfunctioned, been dropped, or otherwise damaged. Have the heater inspected, adjusted, or repaired by an authorized service facility.
⚠ WARNING	Do not insert or allow any foreign objects to enter the ventilation or exhaust openings, as this may cause electric shock, fire, or damage to the heater.
⚠ WARNING	This heater contains parts that may produce high temperatures, arcs, or sparks. Do not use it in areas where gasoline, paint, or other flammable liquids are used or stored.
⚠ WARNING	The top center area of the fireplace may become hot during heater operation and can cause serious injury or burns. Always supervise young children around the fireplace/heater. Do not place any fabric, decorations, or other items above the heater outlet of the fireplace, and do not block the heater outlet in any way, as this may cause a fire and result in serious injury.


SAFETY INFORMATION
GROUNDING INSTRUCTIONS

DANGER

Improper connection of the equipment-grounding conductor may result in a risk of electric shock. If you are unsure whether the product is properly grounded, consult a qualified electrician or service technician. Do not modify the plug provided with the product. If the plug does not fit the outlet, have a qualified electrician install the proper outlet.

- This product must be grounded. In the event of a malfunction, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a power cord containing an equipment-grounding conductor and a grounding plug. The plug must be connected to an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

- This heater is intended for use on a 120-volt circuit and is equipped with a grounding plug. An adapter for connecting a three-prong grounding plug to a two-slot outlet can be purchased from local electronics retailers or online suppliers. The green grounding tab or wire extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box. If a properly grounded three-slot outlet is available, the adapter should not be used.

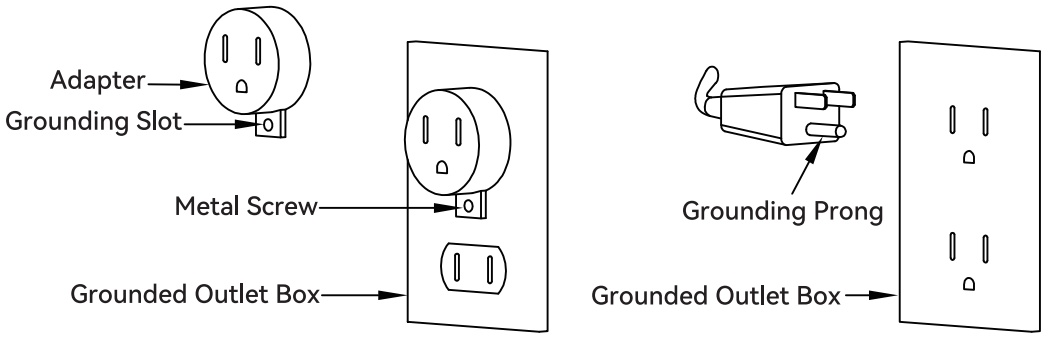

TECHNICAL SPECIFICATION

Power Rating	1400W
Voltage	120V
Frequency	60Hz

Email : service@grandtunnel.com

Operation Instructions

EN


Identifying the Control Panel

The control panel is located at the top right corner of the fireplace or heater.

The control panel includes the following buttons and indicators:Power On/Off Button (①),Flame Control (②),Heater Control (③),Brightness Adjustment (④),Timer Function (⑤),Temperature Setting (⑥),Display Area (⑦),Indicator Light (⑧)


The Display Area (⑦) shows the heating level, flame level, brightness level, timer settings, and temperature.

The Indicator Light (⑧): The red light stays on when the power is connected, indicating the unit is powered on. The blue light remains on when the unit is operating.
The Temperature Setting (⑥): Press and hold to switch between Celsius and Fahrenheit.

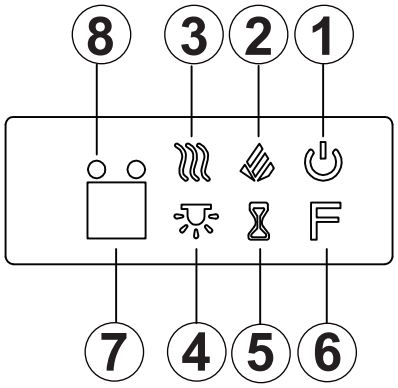

Using the Power On/Off Function

Press the Power On/Off button (①). The indicator light will turn blue, indicating the fireplace is on. Press the button again, and the indicator light will turn red, indicating the fireplace is off.

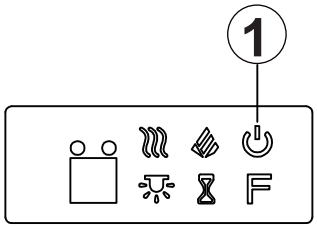


Using the Flame Control Function

Press the Flame Control button (②) to manually adjust the flame color. The available flame color settings are:


Gradient,Mixed Color,Orange,Green,Blue,Orange + Green,Orange + Blue,Green + Blue

Button Press Count	Display Area Values	flame color
1	C1	Gradient
2	C2	Mixed Color
3	C3	Orange
4	C4	Green
5	C5	Blue
6	C6	Orange+Green
7	C7	Orange + Blue
8	C8	Green+Blue

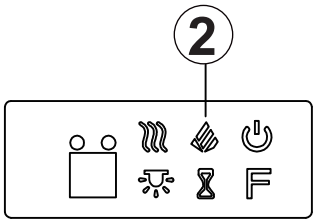

Operation Instructions

Using the Heating Function

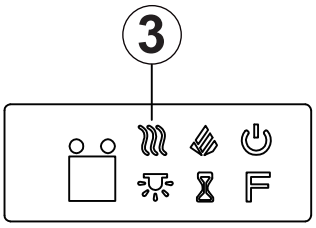


After powering on, the heater will default to its set temperature, which is 62°F. The heater will only start operating if the room temperature is below 62°F. If the heating function (③) is manually turned on, the heater will no longer recognize the set temperature and will continue to operate until manually turned off.

Using the Brightness Adjustment Function

The brightness adjustment function cannot be used when the flame setting is on C1.

Press the Brightness Adjustment button (④) to adjust the flame brightness. The default flame brightness is set to L5.


Button Press Count	Display Area Values	Flame Brightness
1	L5	100%
2	L4	80%
3	L3	60%
4	L2	40%
5	L1	20%

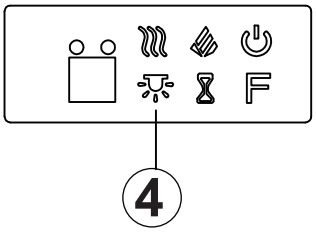

Using the Timer Function

Press the Timer button (⑤) to set the fireplace's runtime. The minimum time is 1 hour, and the maximum is 8 hours. Once the set time is reached, both the heater and the flame will stop, and the fireplace will turn off. If the heater is not on, the flame will stop, and the fireplace will turn off once the set time is reached.

Button Press Count	Display Area Values
1	0H
2	1H
3	2H
4	3H
5	4H
6	5H
7	6H
8	7H
9	8H

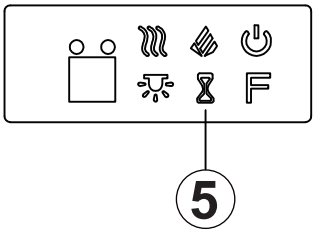


Email : service@grandtunnel.com

Using the Temperature Setting Function


Press the Temperature Setting button (⑥) to set the temperature in Fahrenheit. Press and hold the button to switch to Celsius.

Button Press Count	Fahrenheit Temperature	Button Press Count	Celsius Temperature
1	62	1	18
2	64	2	19
3	66	3	20
4	68	4	21
5	70	5	22
6	72	6	23
7	74	7	24
8	76	8	25
9	78	9	26
10	80	10	27
11	82	11	28

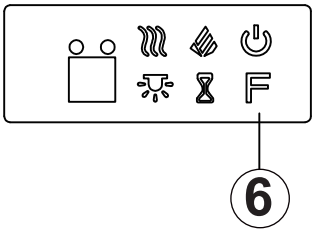

Using the Remote Control


The functions on the remote control are the same as those on the control panel

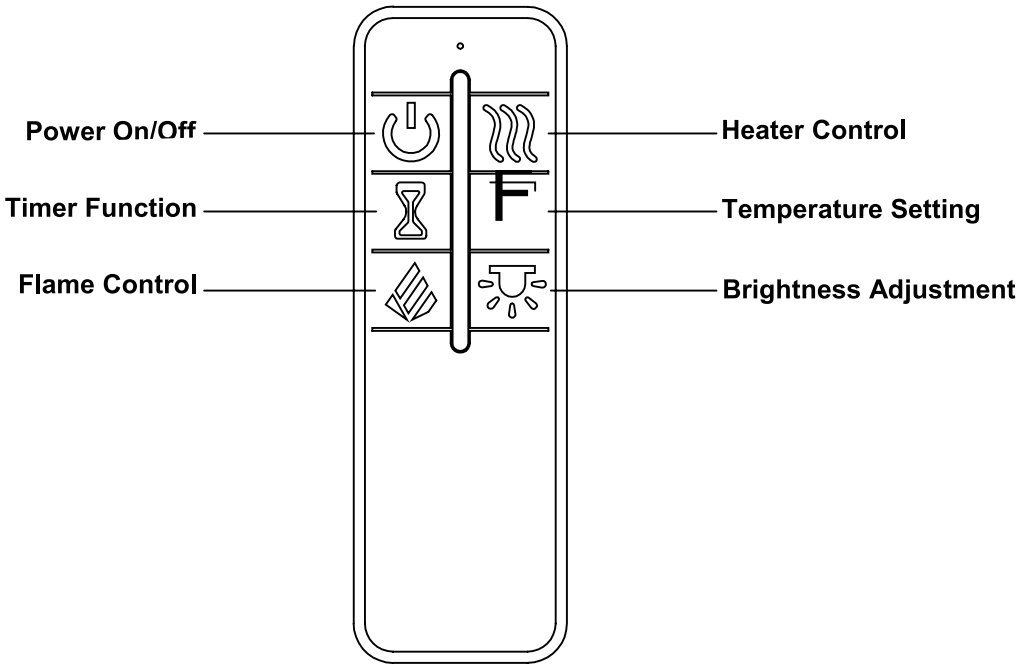

Battery Replacement

The battery compartment is located at the back of the remote control.
1. Press and slide the battery cover to open it.
2. Insert two 1.5V (AAA) batteries, ensuring they are installed correctly with the proper polarity (+ and -) as indicated inside the battery compartment.

Note: If the product is not going to be used for an extended period, remove the batteries.

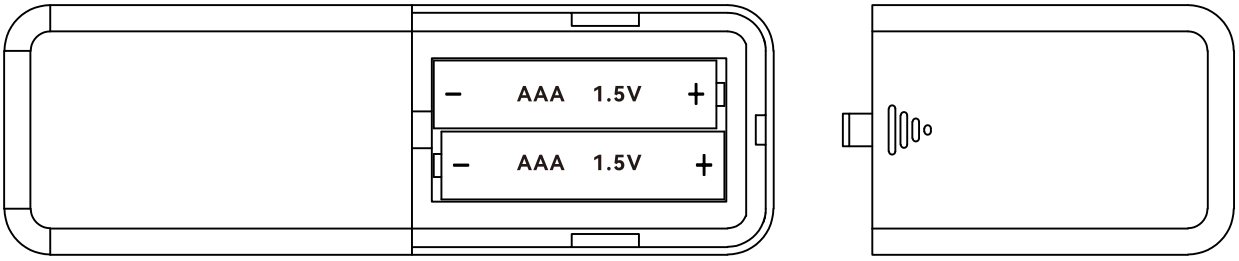

Do not mix new and old batteries.
Do not use rechargeable silver oxide batteries with the remote control.

Batteries
Improper handling of batteries may result in leakage or explosion.

Important Safety Instructions
When using this appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including:

- This heater is intended for use with AC power only, and the voltage marked on the heater must match the power supply voltage.
- Do not turn on the device until it has been properly installed according to the instructions in this manual.
- Do not leave the device unattended while in use.
- Do not leave the device unattended when it is connected to the power supply.
- Place the device out of reach of children, and do not allow children to operate it.
- Periodically check the power cord for damage. If the cord is damaged in any way, do not use the device.
- Do not operate the device if the plug or power cord is damaged, or if the device is malfunctioning.

Email : service@grandtunnel.com

FCC Statement

EN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference.(2)This device must accept any interference received, including interference that may cause undesired operation.
This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try one or more of the following measures to correct the interference:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Repairs to the appliance should only be performed by a qualified electrician.
Improper repairs may expose the user to serious danger.

- Do not run the power cord under carpets or rugs.
- Do not allow the power cord to hang over sharp edges or come into contact with hot surfaces.
- Warning: To prevent overheating, do not cover or block the heater's air vents.
- Accidental covering may cause overheating.
- Never immerse this product in water or any other liquids.

Replacing the LED Bulbs
Note: The flame effect of this electric fireplace is produced by LED bulbs.
These LED bulbs are designed to last up to 100,000 hours. It is not recommended that users replace the LED bulbs themselves. If the bulbs do not function properly for any reason, please contact a qualified technician.


Cleaning:

- Before performing any cleaning or maintenance, turn off the heater and unplug it from the power outlet. Wait at least 10 minutes for all parts to cool down properly.
- Use a vacuum cleaner or dusting tool to keep the heater and ventilation areas clean, preventing dust and dirt buildup.
- Clean the exterior of the fireplace with a damp cloth or wipe. Do not use abrasive cleaners or liquid sprays.

Warning: To prevent electric shock, do not open the back panel of the fireplace unless the power is turned off and the plug is unplugged. Only qualified technicians should perform repairs.
Warning: Any repair work on wiring should only be done by professional technicians and must comply with local building codes.
Warning: Stop using this electric fireplace immediately if any of the following occur: any part of the unit comes into contact with water, the fireplace is damaged or dented, the power cord is damaged or frayed, the power cord becomes hot to the touch, or the device emits smoke or smells like smoke.
Note: When using the heating function for the first time, a slight odor may occur. This is normal unless the heater has not been used for an extended period and has dust or debris covering it.

●This appliance is equipped with a safety cutoff device that will activate if the fireplace overheats (e.g., due to a blocked vent). For safety reasons, the fireplace will not automatically restart. You must wait at least 15 minutes before unplugging and plugging the power cord back in.

Meaning of the Strikethrough Wheelie Bin:
Do not dispose of the appliance as unsorted waste; it must be disposed of using separate collection facilities. Contact your local government for information regarding the collection system.
If the appliance is discarded in a landfill or waste site, harmful substances can seep into the groundwater, enter the food chain, and harm your health and well-being.
When replacing old appliances with new ones, retailers are legally obligated to take back your old appliance for disposal, at least free of charge.

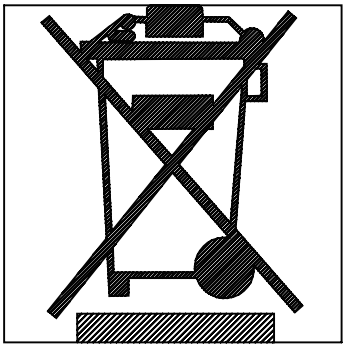

Email: service@grandtunnel.com

Troubleshooting

EN

Problem	Solution
Device Won't Start	Check if the outlet is supplying power and ensure the plug is fully inserted into a 120V outlet.
Heater Not Working	Check the set temperature and ensure it is higher than the room temperature.
No Flame Effect	Contact a qualified technician for inspection.
Remote Control Not Working	Use the remote control close to the device or replace the batteries.

TV Stand

SKU
D002605010
D002605020
D002605030

V1.0