

Instruction Manual

CRYSTAL FLUSHMOUNT

Questions?

E-mail our customer service department

IMPORTANT SAFETY INSTRUCTIONS:

This fixture must be installed by a qualified electrician!
Disconnect the power at the main electrical panel before installation.

This fixture is for indoor use only. The fixture should not be used near water. Never cover the lamp with any object, including cloth or paper as this is a fire hazard. Do not handle the bulb immediately after the light is turned off as it will be hot. This is not a toy. It is recommended that you wear gloves during assembly.

ASSEMBLY INSTRUCTIONS:

1. TURN THE MAIN POWER SUPPLY OFF
2. THREAD THE 2 LONG SCREWS "A" INTO MOUNTING PLATE "B" AND ATTACH THE MOUNTING PLATE TO OUTLET BOX "C" WITH SCREWS "D".
3. MAKE THE WIRE CONNECTIONS. CONNECT BLACK TO BLACK WIRE AND WHITE TO WHITE WIRE. IF THE WIRES ARE NOT BLACK AND WHITE, CONNECT THE BLACK WIRE IN THE OUTLET BOX TO THE PLAIN OR ROUNDED SIDE OF THE FIXTURE WIRE. CONNECT THE WHITE WIRE IN OUTLET BOX TO THE RIBBED WIRE OF THE FIXTURE WIRE. ATTACH GROUNDING WIRE "E" TO MOUNTING PLATE GROUNDING SCREW "F".
4. ALIGN THE HOLES IN CANOPY "G" WITH THE 2 LONG SCREWS IN THE MOUNTING PLATE, AND PLACE THE CANOPY ONTO THE SCREWS. SECURE THE FIXTURE IN PLACE WITH KNOBS "H".
5. THREAD PIPE "I" INTO PIPE CONNECTOR "J" AND TIGHTEN WITH HEX NUT "K".
6. SECURE SHADE "L" TO THE CANOPY WITH WASHER "M" AND HEX NUT "N".
7. ATTACH CAP "O" AND FINIAL "P" TO THREADED PIPE "I".

CLEANING & MAINTENANCE:

BULB REPLACEMENT


Disconnect the power before replacing bulb.

TROUBLESHOOTING

1. If lamp does not light, check the bulb for a broken filament. Replace bulb if necessary.
2. If the external flexible cable or cord of this fixture is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

MAINTENANCE

1. To clean, use a soft cloth only.
2. Do not use any chemical or abrasive cleaners.

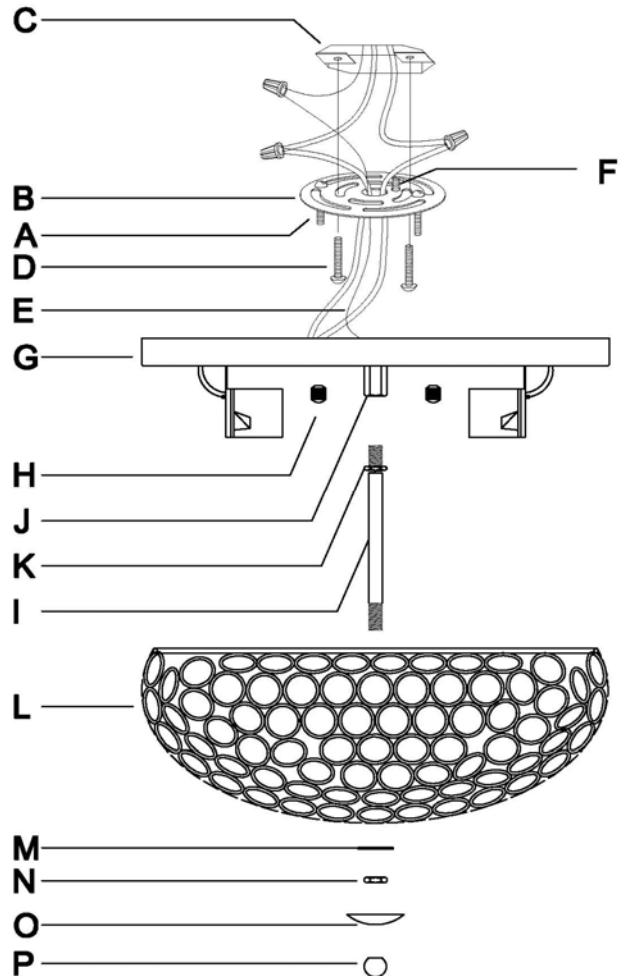

REQUIRES:
2- 60W MAX MEDIUM BASE
TYPE B BULBS (NOT INCLUDED)

REGLES DE SECURITE RELATIVES AUX RISQUES D'INCENDIE, DE CHOC ELECTRIQUE ET DE BLESSURES

AVERTISSEMENT : L'ampoule et l'abat-jour deviennent CHAUDS lorsque l'ampoule est allumée! Ne pas toucher lorsque l'ampoule est allumée.

AVERTISSEMENT IMPORTANTES : CETTE FIXTURE DOIT ETRE INSTALLEE PAR UN ELECTRICIEN QUALIFIE! COUPEZ LE COURANT AU PANNEAU ELECTRICIEN QUALIFIE!

ATTENTION : Placer la lampe à bonne distance des rideaux, de la literie et de tout autre matériau inflammable.

Ne jamais regarder directement l'ampoule allumée.

Eteindre et laisser refroidir la lampe avant de remplacer l'ampoule, de la nettoyer ou de faire tout autre type d'entretien. Ne pas utiliser dans des endroits mouillés.

Ne pas toucher à la prise électrique avec les mains mouillées.

INSTRUCTIONS D'ASSEMBLAGE

1. COUPER LE COURANT.

2. INSERER LES 2 VIS LONGUES "A" DANS LA PLAQUETTE DE MONTAGE "B" ET JOINDRE LA PLAQUETTE DE MONTAGE A LA BOITE A ELECTRIQUE "C" AVEC LES

VIS "D".

3. RACCORDER LES FILS, LE NOIR AU NOIR ET LE BLANC AU BLANC. SI LES FILS NE SONT PAS NOIR ET BLANC, RACCORDER LE FIL NOIR DE LA BOITE


ELECTRIQUE AU FIL UNI OU ARRONDI DE LA FIXTURE ET LE FIL BLANC DE LA BOITE ELECTRIQUE AU FIL RUDE. ATTACHER LE FIL DE MISE-A-TERRER "E" A LA VIS DE MISE-A-TERRER "F" DE LA PLAQUETTE DE MONTAGE.

4. ALIGNER LES TROUS SUR LE CANAPE "G" AVEC LES VIS LONGUES DANS LA PLAQUETTE DE MONTAGE, ET PLACER LE CANAPE SUR LES VIS. SECURISER LA

5. INSERER LE TUYAU "I" AU RACCORD DE TUYAU "J" ET SERRER L'ECROU "K"

6. SECURISER L'ABAT-JOUR "L" AU CANAPE AVEC LA

RONDELLE "M" ET L'ECROU "N". M, 7. SECURISER LE CAPUCHON "O" ET LE FLEURON "P" AU TUYAU FILETE "I".

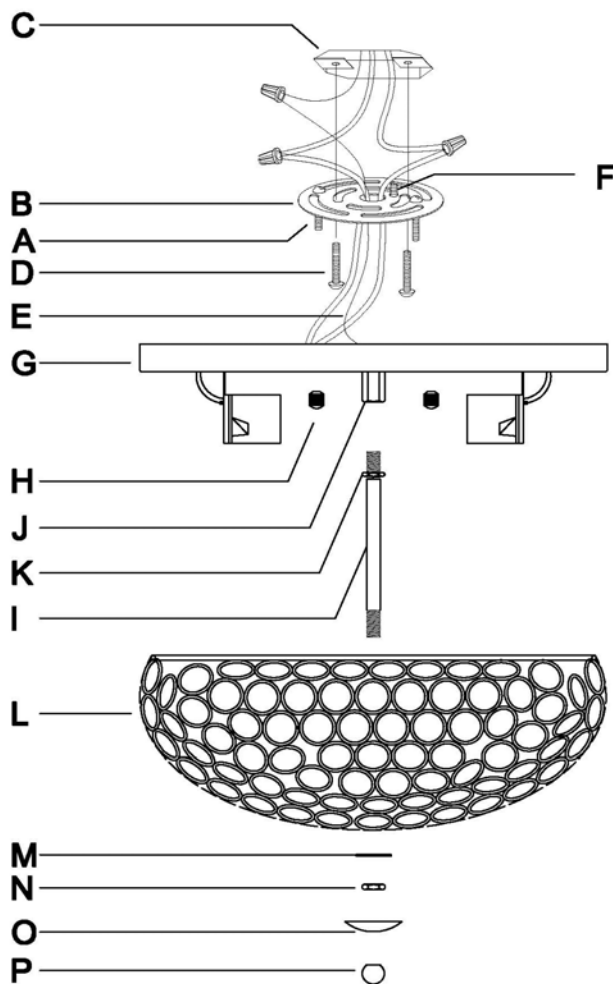

REMPACEMENT DE L'AMPOULE

Debranchez l'alimentation électrique avant de remplacer l'ampoule.

DEPANNAGE

1. Si la lampe ne s'allume pas, regardez l'ampoule pour vérifier si l'un de ses filaments ne serait pas brisé. Remplacez l'ampoule au besoin.

2. Si le câble plat extérieur ou le fil électrique de cette fixture est endommagé, il doit absolument être remplacé par un électricien qualifié afin d'éviter tout danger.

ENTRETIEN

1. N'utilisez qu'un chiffon doux pour le nettoyage.

2. Ne jamais utiliser de détergent chimique ou abrasif.