Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

	●Not for commercial use. For residential use only.
	●Do not put hot items directly on furniture surface.
	●Do not clean furniture with harsh cleansers or polish.
	●Do not place furniture under direct sunlight.
	●Do not place furniture near heating or cooling vents.
	●Do not write on furniture without a padded barrier to protect the surface.
	●Do not place furniture outside . For indoor use only.
	●Stains may be removed with mild soap solution and damp cloth.
	●Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in Bottom carton for hardware packs and Legs.

Assembly Instructions

Please look in the Bottom Box for Hardware packs and Legs

NIGHTSTAND

Item No: N758P522966

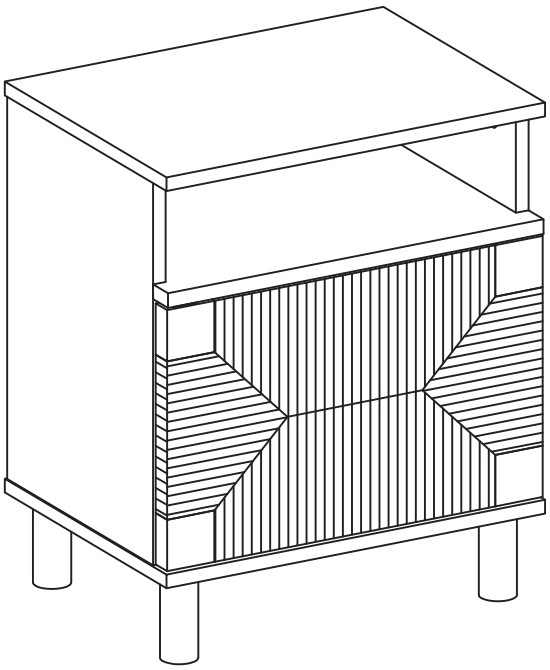







WARNING

CSU






This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Caution: This Nightstand is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Nightstand and to prevent damage to the Nightstand, two adults may be needed to execute these actions.

Parts List

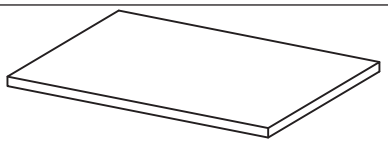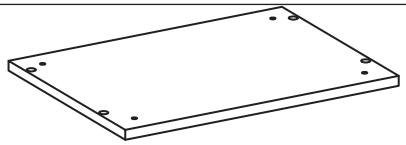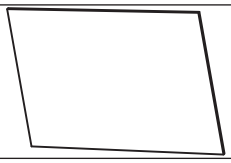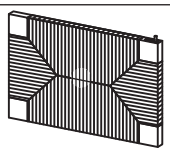
Label	Picture	Description	QTY
A		Left Side Panel	1
B		Right Side Panel	1
C		Top Panel	1
D		Bottom Panel	1
E		Back Panel	1
F		Fixed shelf panel	1
G		Shelf Panel	1
H		Legs	4
I		Door	1


Hardware


Label	Picture	Description	QTY
1		Magnetic Push Latch	1
2		8*30mm Wooden Dowel	9
3		Cam Bolt ∅6*28	5
4		Cam Lock ∅15*12	5
5		Long Bolt ¼*38mm	5
6		Short Bolt ¼*25mm	5
7		M3*15mm Screw	9
8		Flat Washer ∅12/6*1.5	9
9		Spring Washer ∅12/6*2	9
10		Plastic Washer ∅16/6*3	3
11		T Nuts ∅10 x 10	5
12		Shelf Pin	5
13		Allen Wrench K4 x 90	2
14		Plastic Back Panel Clip	5

Assembly Preparation

Before Beginning Assembly:

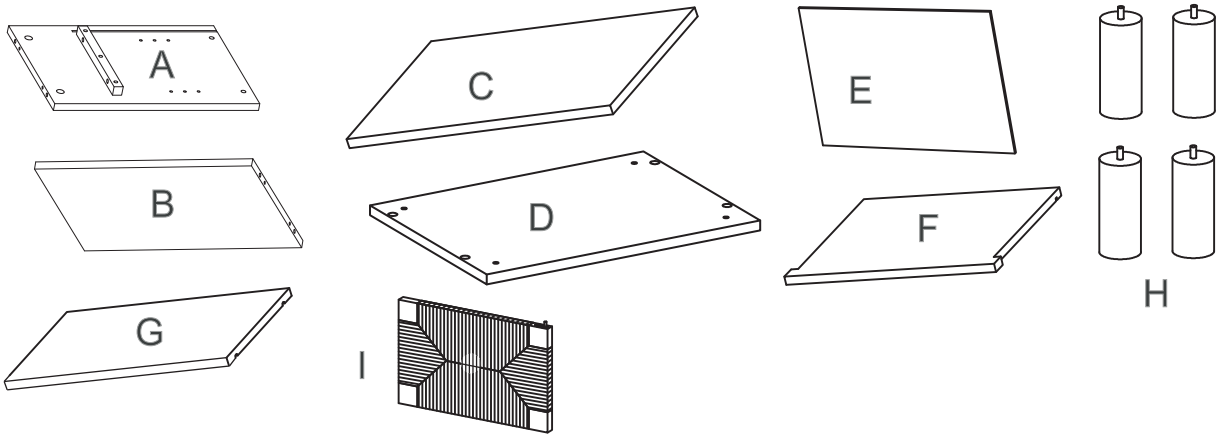

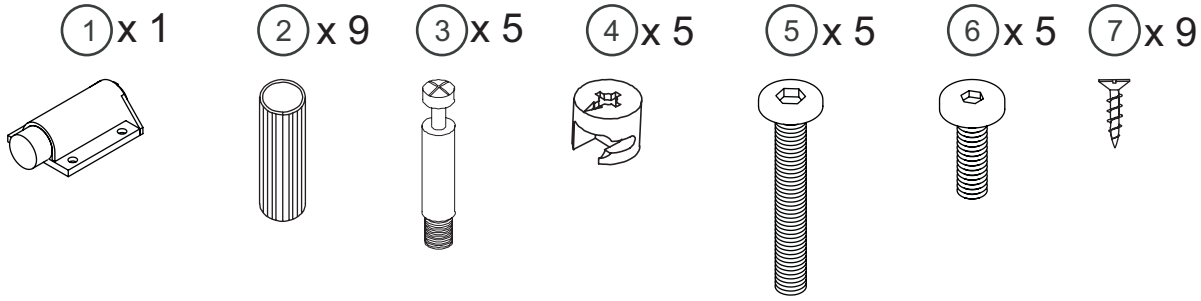

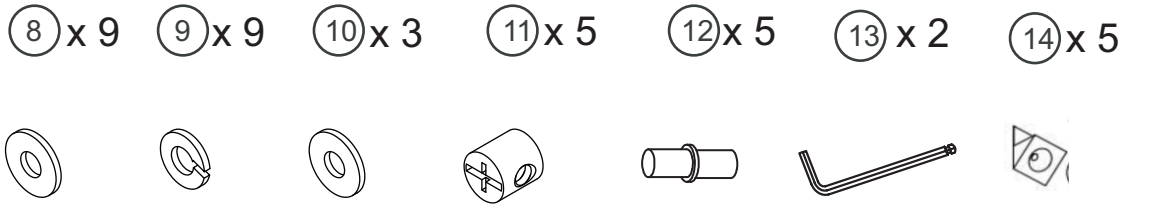





Screwdriver
(Not included)

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps

Overview

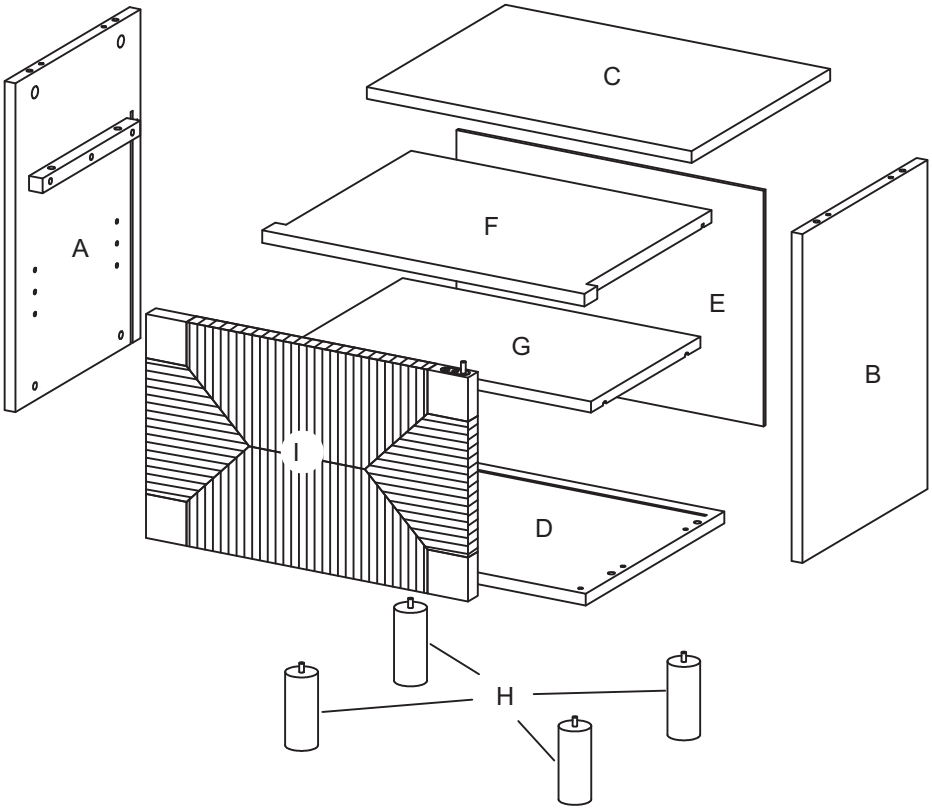

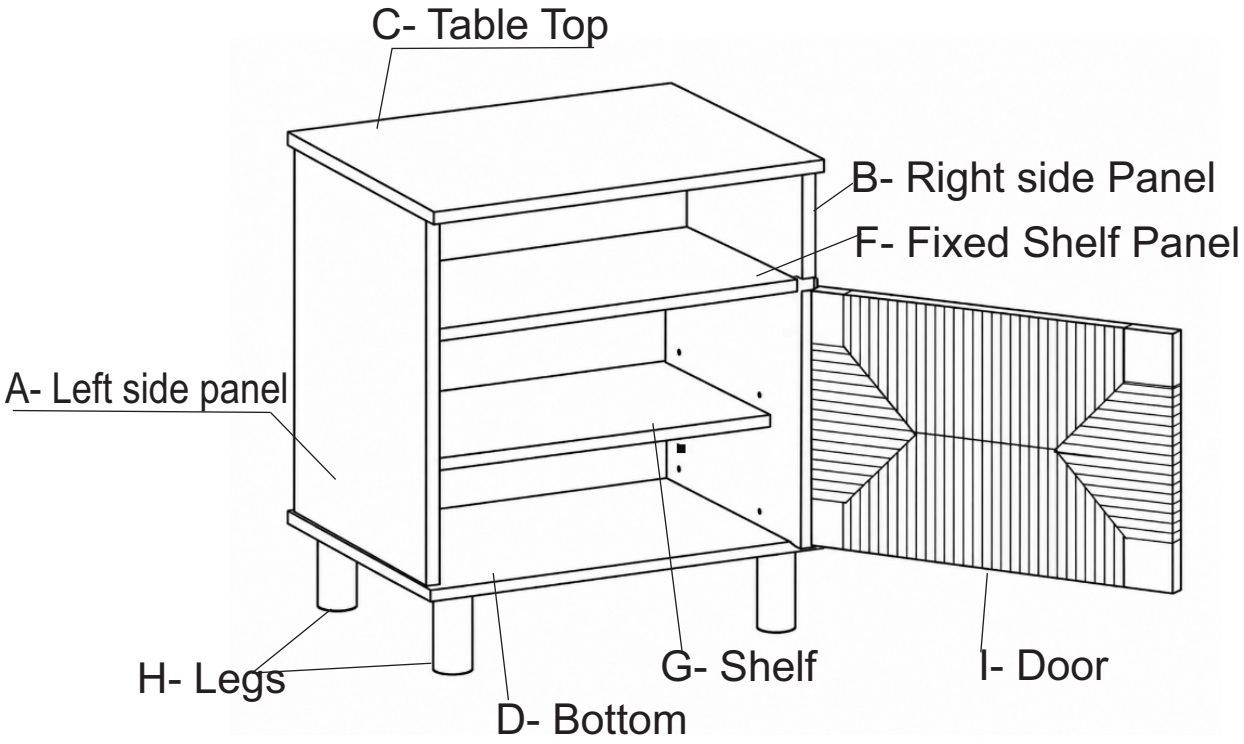

FRONT FACING

This Nightstand has multiple parts and may require up to some 40 minutes to assemble. To give you an overview of the Nightstand parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


How to use cam locks

Did you know?

Cam locks are used to join two panels together, usually the edge of one to the flat side of another.


First, your cam bolt (or cam pin) will need to be properly inserted into the flat side of the board.

Important Note: Only tighten the cam bolt until it is secure. Do not over-tighten.

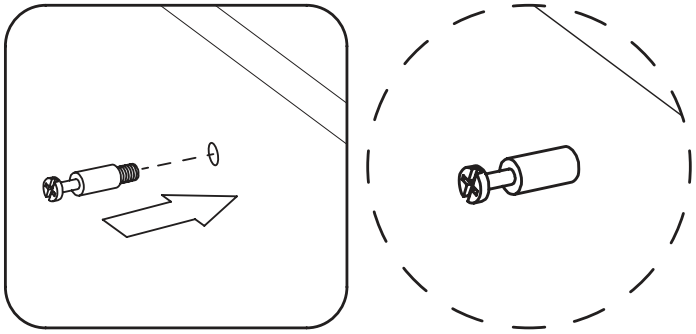


Next, you will fit the proper hole on the edge of the associated joining panel over the cam bolt.

Important Note: When installed properly, the head of the cam bolt will be visible through the larger hole on the side of the joining panel.

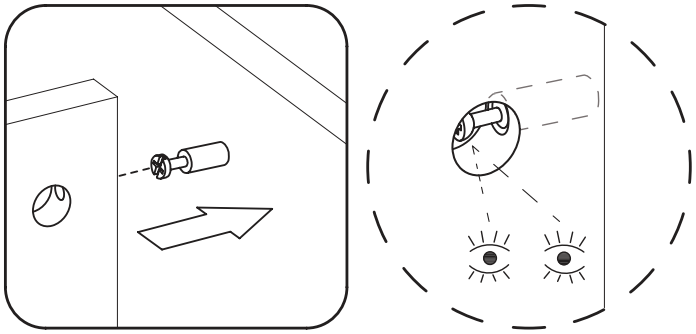


Next, you will notice the cam lock has a “C” shaped back. Commonly, an arrow on the front of the cam lock points in the same direction as the open section on back.

Using these as your cue, insert the cam lock into the large hole so the opening of the “C” fits over the head of the cam bolt.

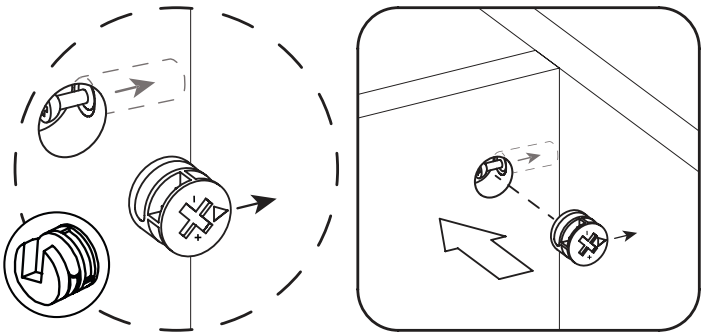

Using a screwdriver, you will turn the cam lock until it stops, usually at 90º or 180º. You will feel the panels pulling closer until they are secured.

Important Note: Only turn the cam lock until the panels are fully engaged & feel secure. Turning too far may lead to hardware failure.

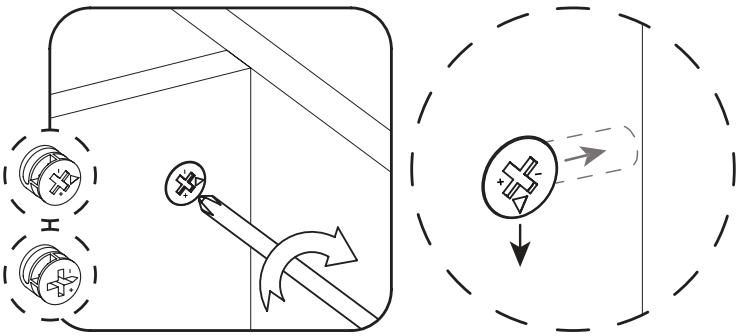


Still having issues?


If a cam lock seems to be spinning in place or is not “catching” or pulling the panels together as expected first remove the cam lock & try again while making sure that everything is properly positioned & oriented.

If you are still having issues getting things working as expected, first remove the cam lock then unscrew the cam bolt slightly (less than 1 complete turn) to see if that helps with the alignment of the cam lock & bolt.

ASSEMBLY INSTRUCTION
ITEM NO. N758P522966

Step 1


① x 1	
⑦ x 4	

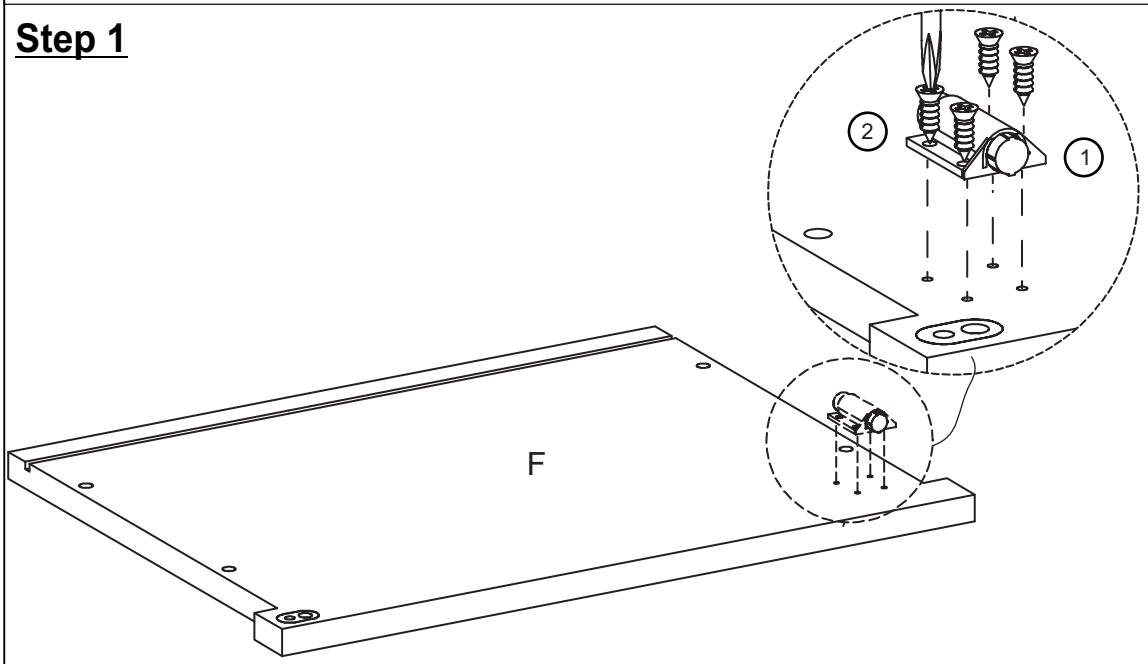


Place all Parts on a clean, non -marring surface


Attach the Magnetic Push Latch① to the underside of Fixed Shelf Panel F. Using the Screw ⑦ M3 x 15 + Screwdriver (Not included) to tighten.


Step 2

② x 8	
③ x 4	

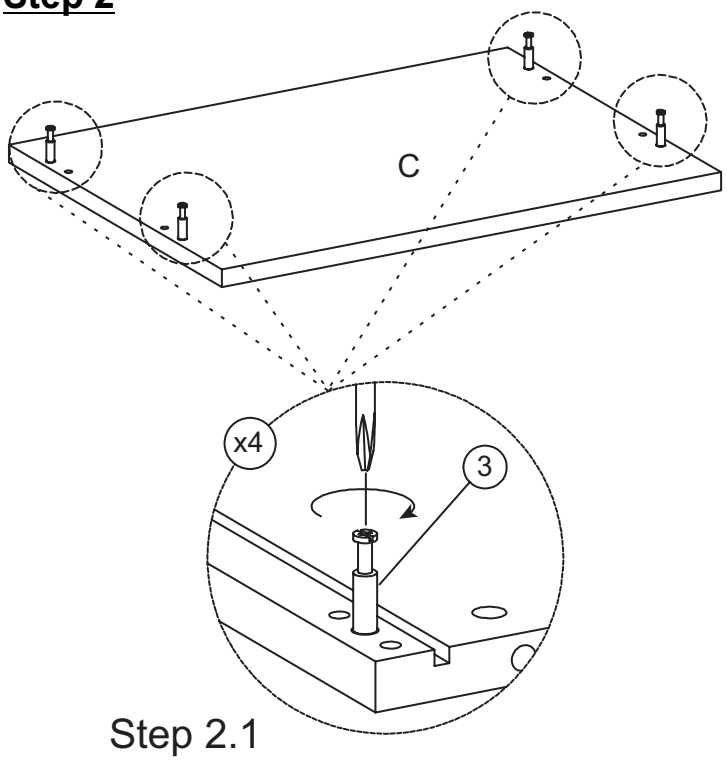


Step 2.1

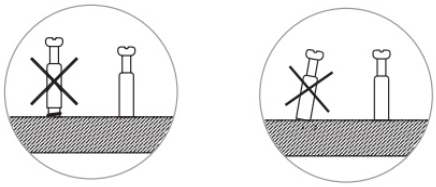

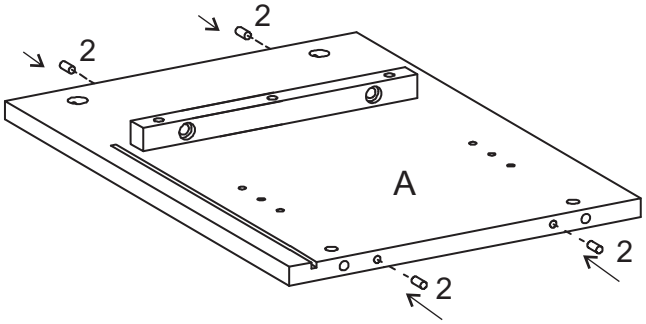

Step 2.2

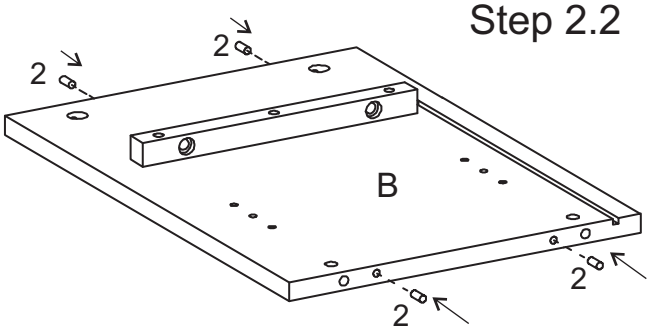



Screwdriver
(Not included)


2.1 - Attach the Cam Bolts③ into the Top Panel C Using the Screwdriver (Not included) to tighten.

2.2 - Attach the Wooden Dowel ② in the Left side Panel A and Right side Panel B

ASSEMBLY INSTRUCTION

ITEM NO. N758P522966


Step 3

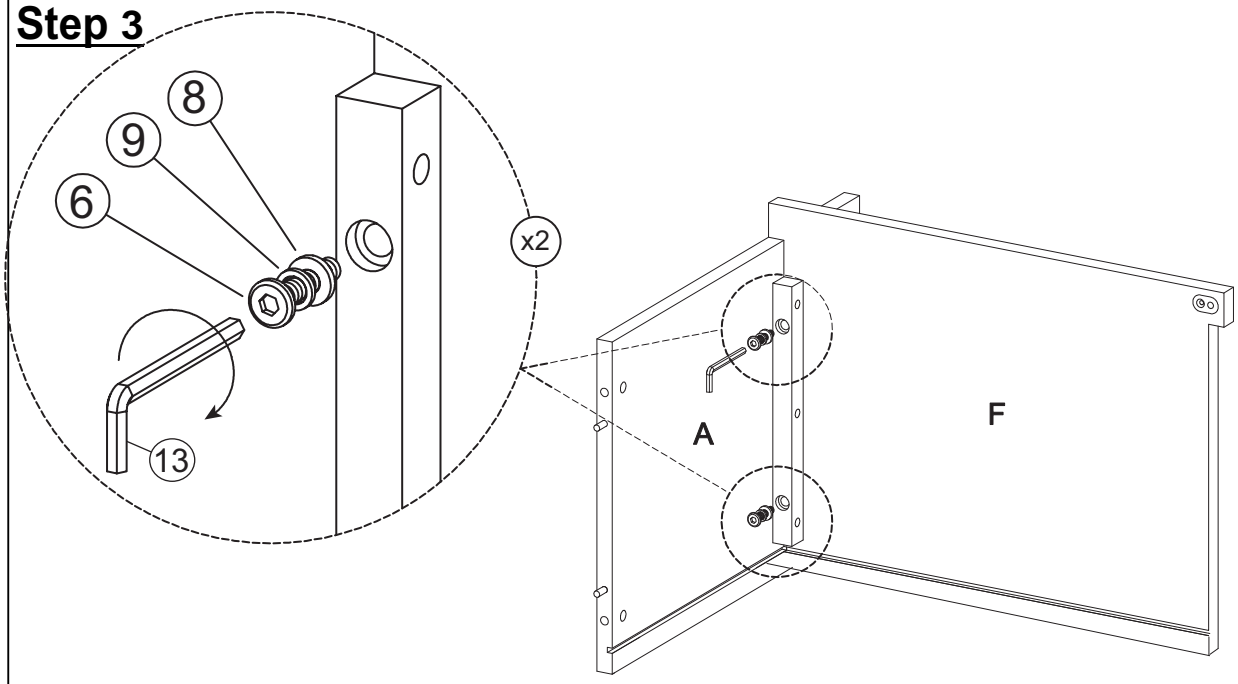

⑥ x 2	
⑧ x 2	
⑨ x 2	
⑬ x 1	

Attach the Fixed Shelf Panel F to the Left Side Panel A . Using the Short Bolts ⑥ + Flat washer ⑧+ Spring washer⑨+ Allen Wrench⑬to tighten 100%.

Step 4

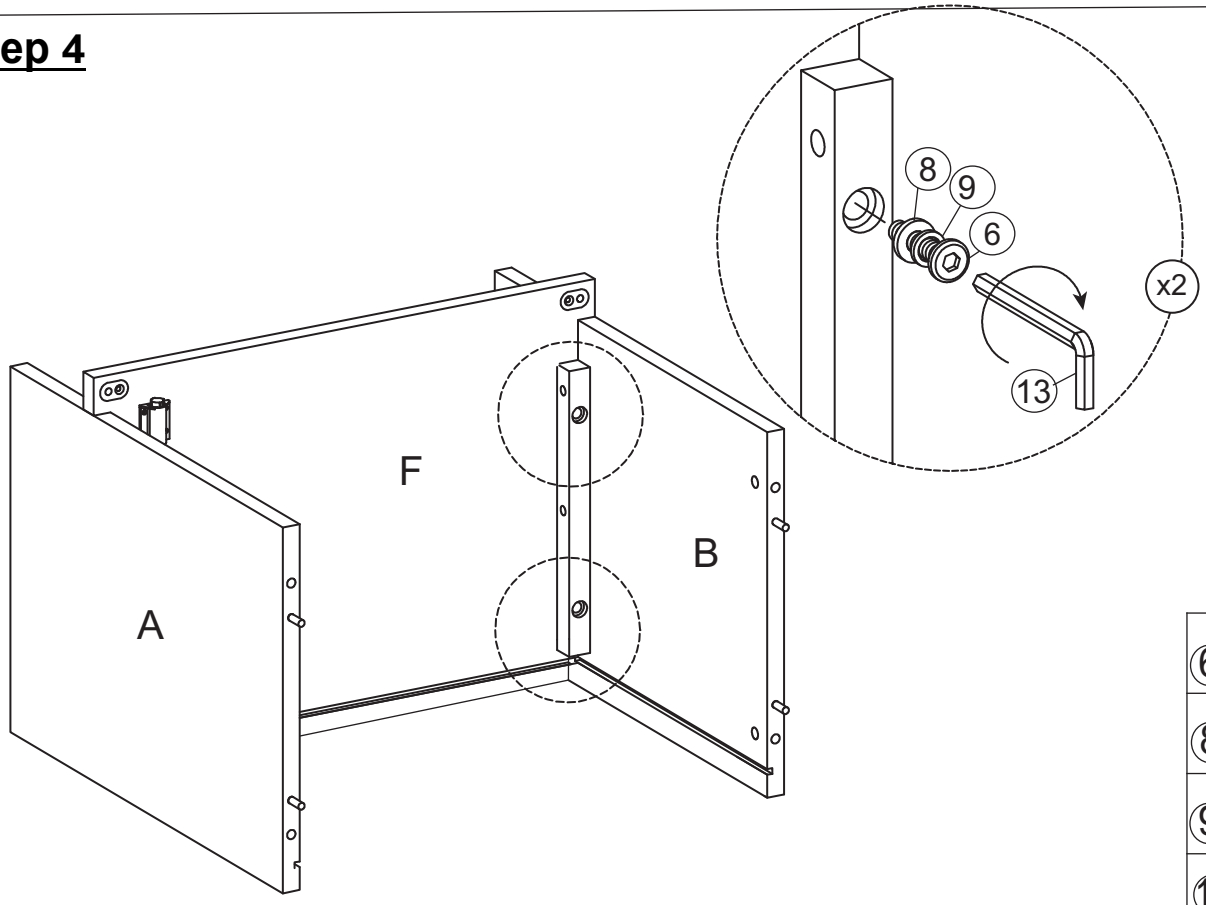


⑥ x 2	
⑧ x 2	
⑨ x 2	
⑬ x 1	

Attach the Right Side Panel B to the Fixed Shelf Panel F. Using the Short Bolts ⑥ + Flat washer ⑧+ Spring washer ⑨ + Allen Wrench⑬to tighten 100%.

ASSEMBLY INSTRUCTION
ITEM NO N758P522966


Step 5

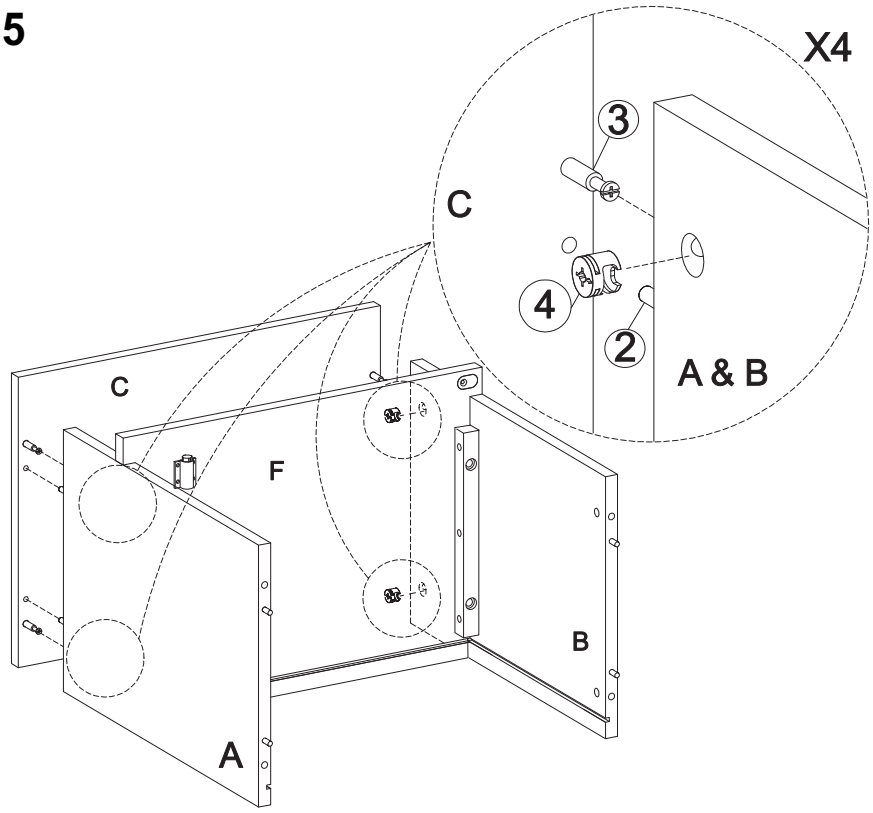

④ x 4	
⑬ x 1	

Attach the Top Panel C to the Left Side Panel A and Right Side Panel B . Align them by Wooden dowel② and Cam Bolts③assembled in Step 2. Using the Cam Lock ④+ Allen Wrench ⑬ to tighten 100%.


Step 6

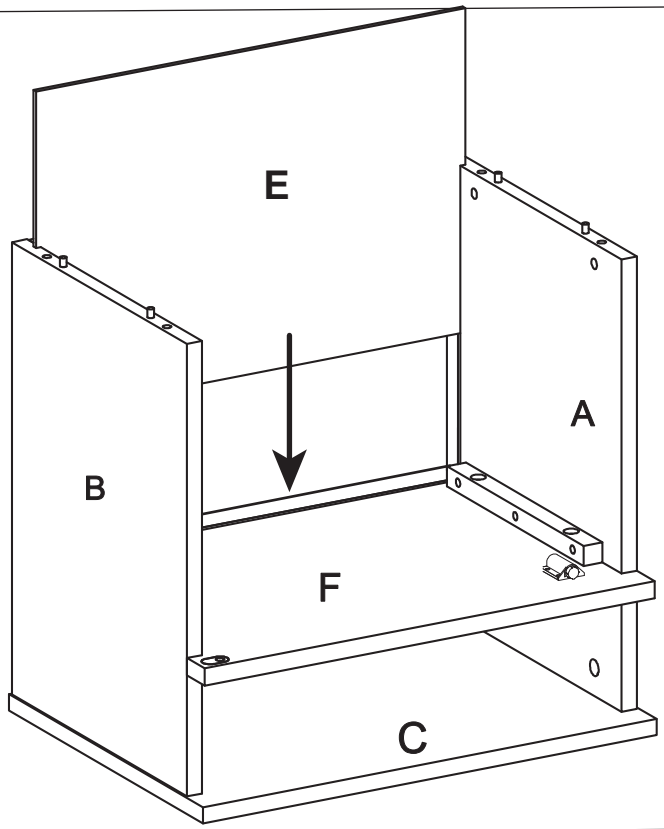

Bottoms up! Carefully flip the side table upside down. Attach the Back Panel E in Nightstand.
Ensure the Back panel E slides into the grooves of both side panels A & B and is fully seated in the groove of the Fixed Shelf Panel F.

ASSEMBLY INSTRUCTION
ITEM NO. N758P522966

Step 7

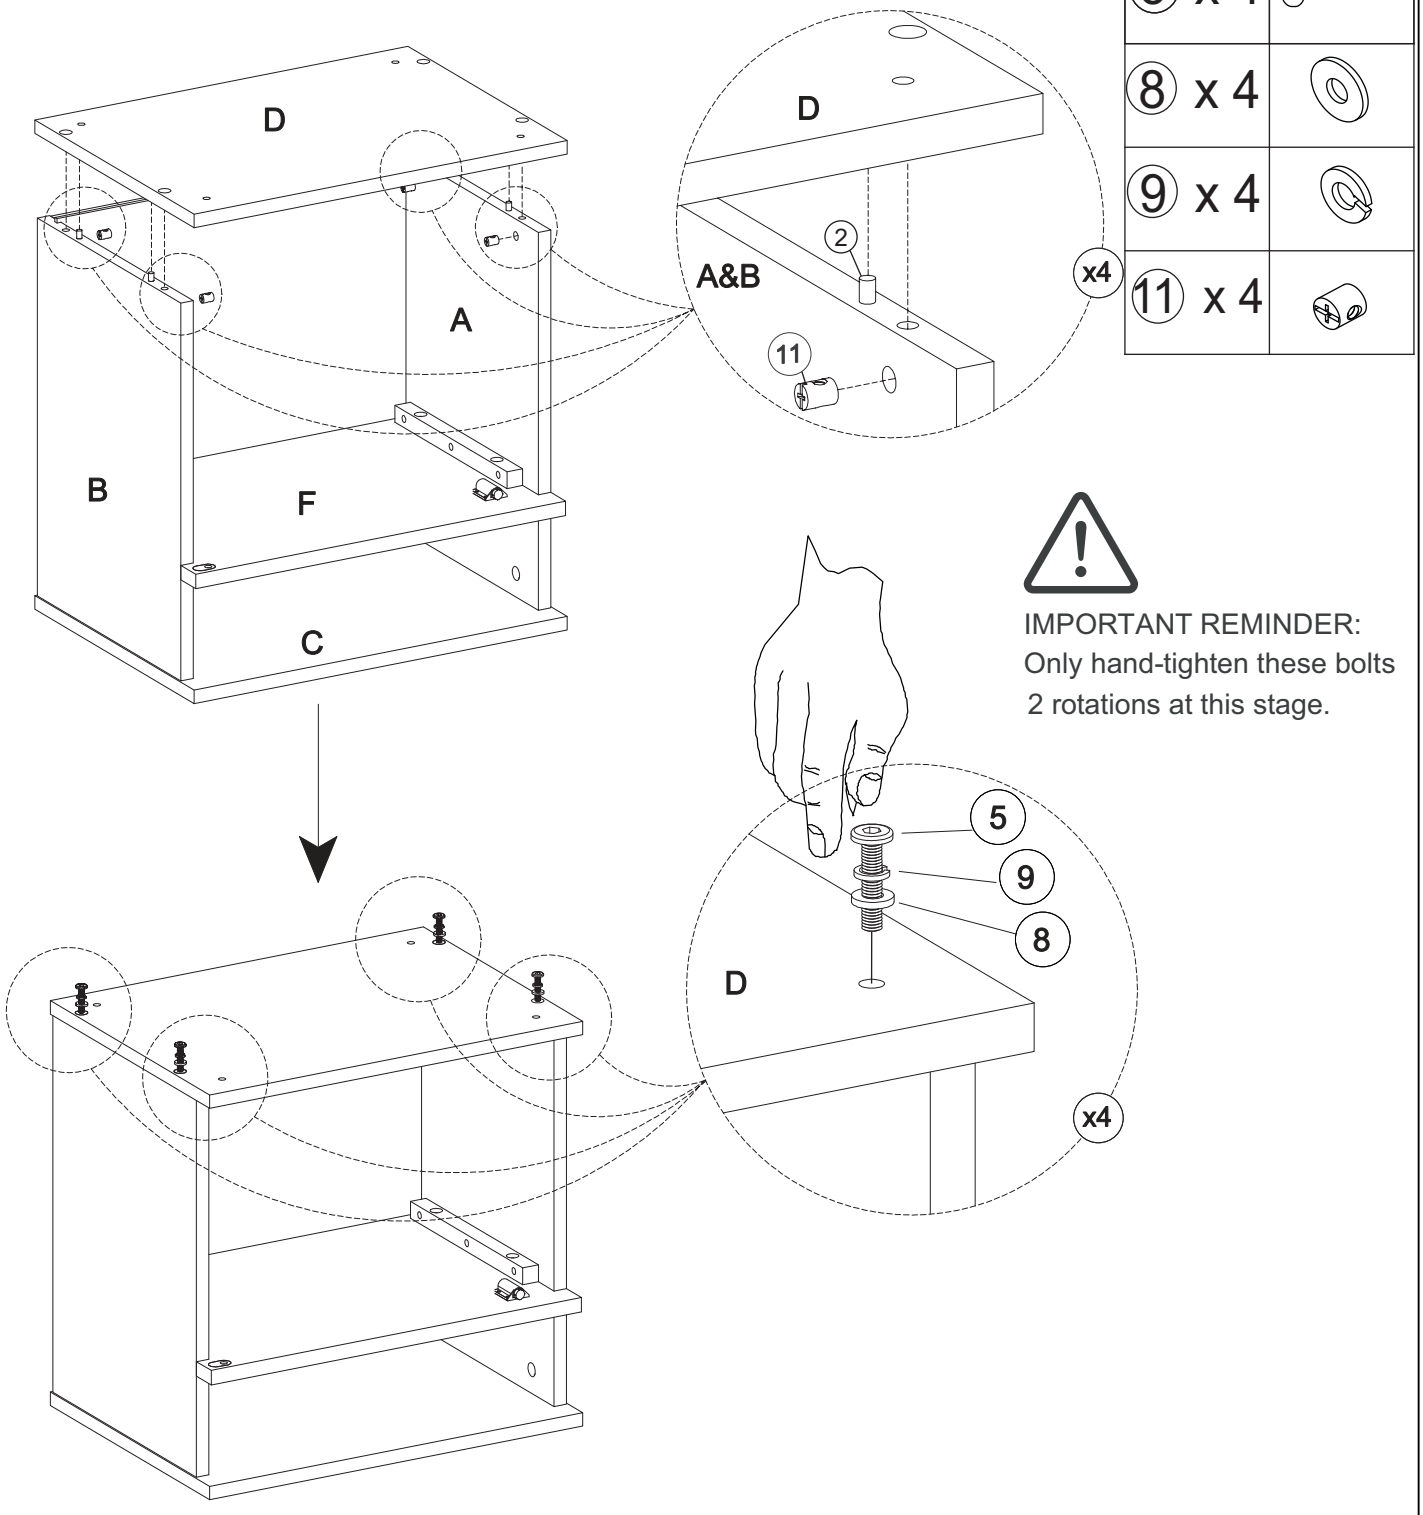

⑤ x 4	
⑧ x 4	
⑨ x 4	
⑪ x 4	

IMPORTANT REMINDER:
Only hand-tighten these bolts
2 rotations at this stage.

Attach the Bottom Panel D in Side Panels A&B by Align the wooden Dowel②on Both side Panel A&B with mounting position on Bottom Panel D. Ensure the Back Panel E is under the Bottom Panel D.


Insert the T Nuts ⑪ into the Both Side Panels A&B, Then fix the Bottom Panel D using the Long Bolts ⑤ + Spring Washer⑨+ Flat Washer⑧by hand rotation.

Don't fully tighten the bolt fully.


ASSEMBLY INSTRUCTION
ITEM NO N758P522966

Step 8

10 x 2	
13 x 1	

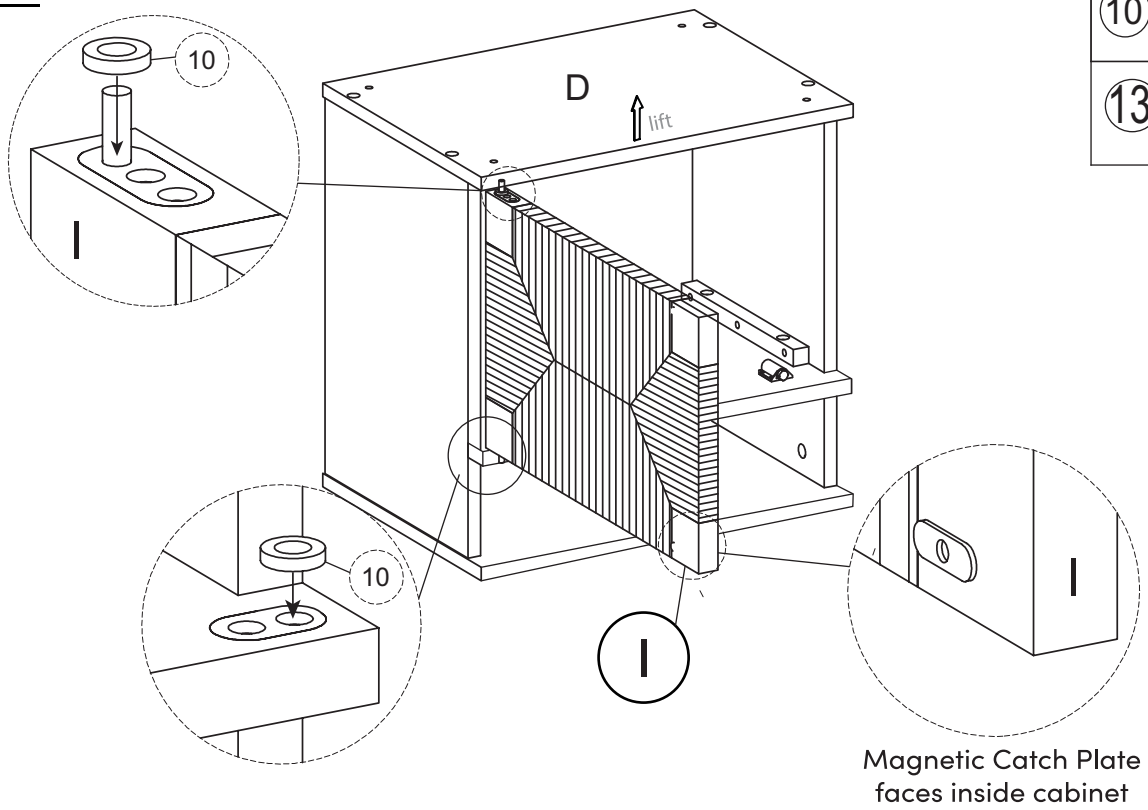

Magnetic Catch Plate
faces inside cabinet

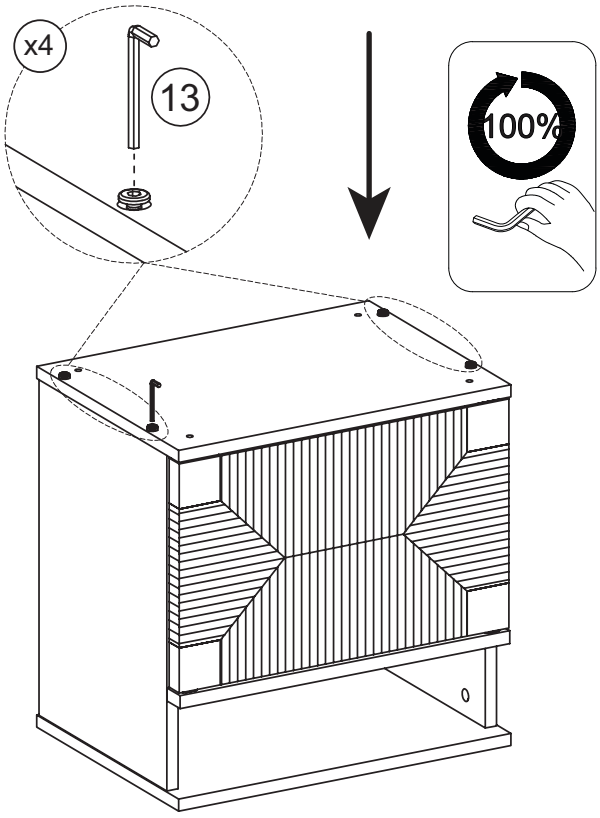


Attach the Door I to the Nightstand. Insert a Plastic Washer ⑩ onto the Doors latches before assembling. Slightly lift the Bottom Panel D to allow the Doors latch to slide into the mounting position on the Fixed Shelf Panel F and Bottom Panel D. Then release and tighten Bolts of the Bottom Panel D to 100% with Allen Wrench ⑬.

Fully tighten the Bolts at this time.


ASSEMBLY INSTRUCTION
ITEM NO. N758P522966

Step 9

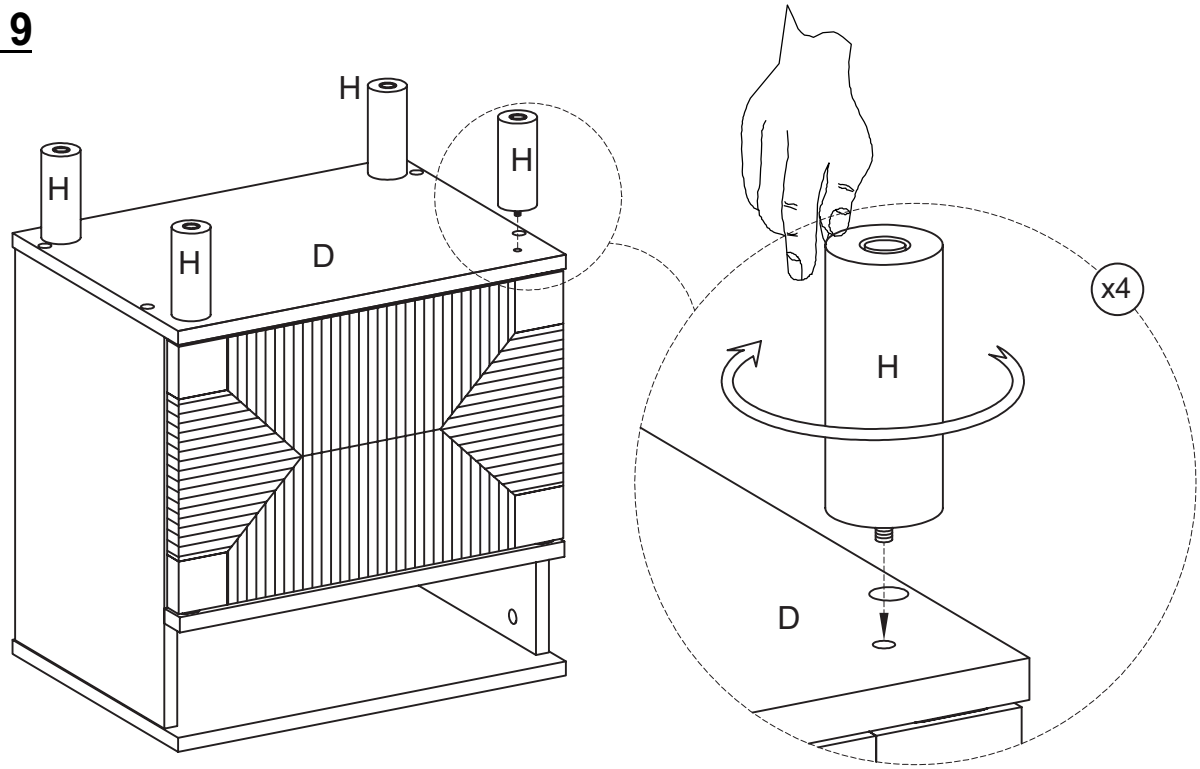

Attach the Legs H to Bottom Panel D. Tighten them securely by hand.

Step 10

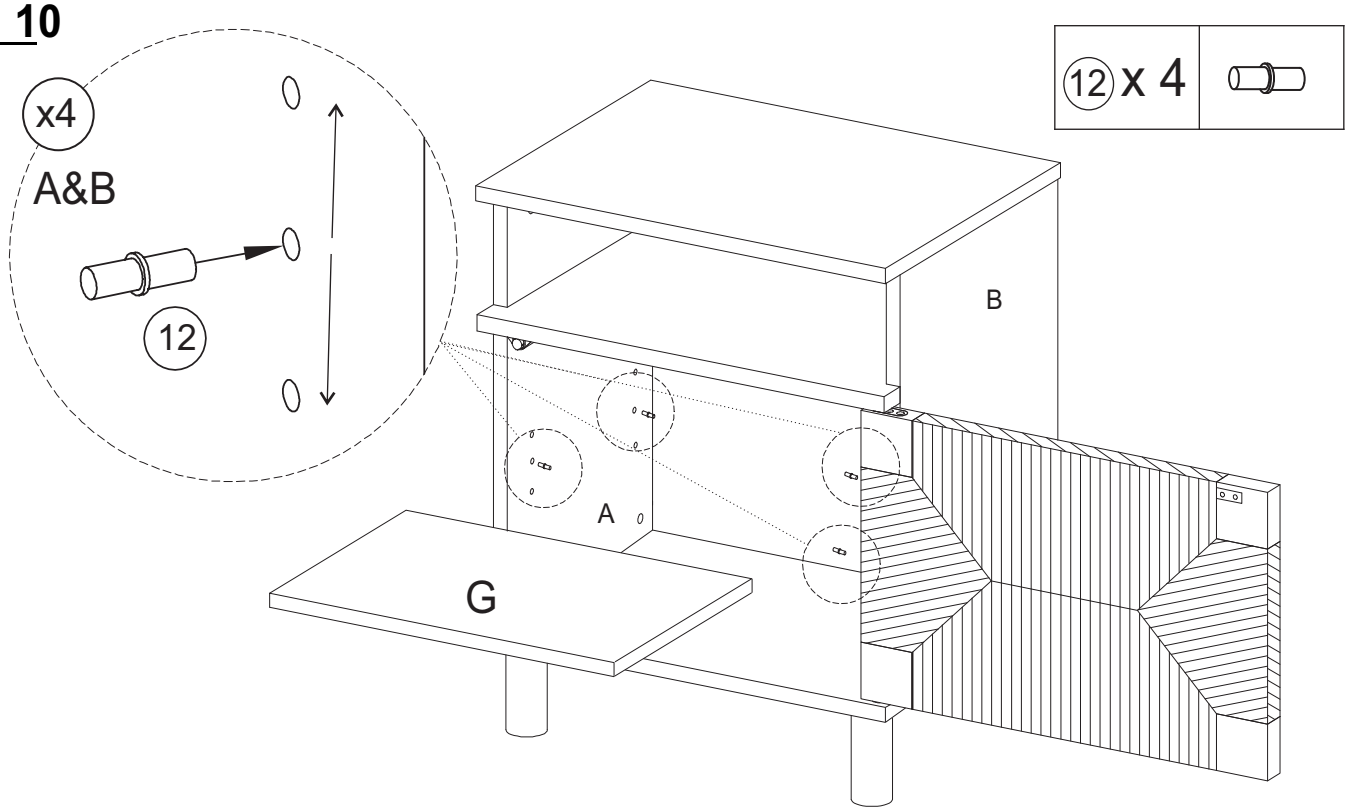

Turn the Nightstand on its side up with assistant from a second adult. Insert the Shelf Support Tabs (12) onto the Both Side Panel A & B . Then slide the Shelf Panel G into the Cabinet.


Shelf Panel G can be adjusted up or down by changing the position of the Shelf Support Tabs (12)

When adjusting the shelf height, make sure all 4 Shelf Support Tabs (12) are installed at the same level.

ASSEMBLY INSTRUCTION
ITEM NO. N758P522966


Step 11

⑦ x 4	
⑭ x 4	

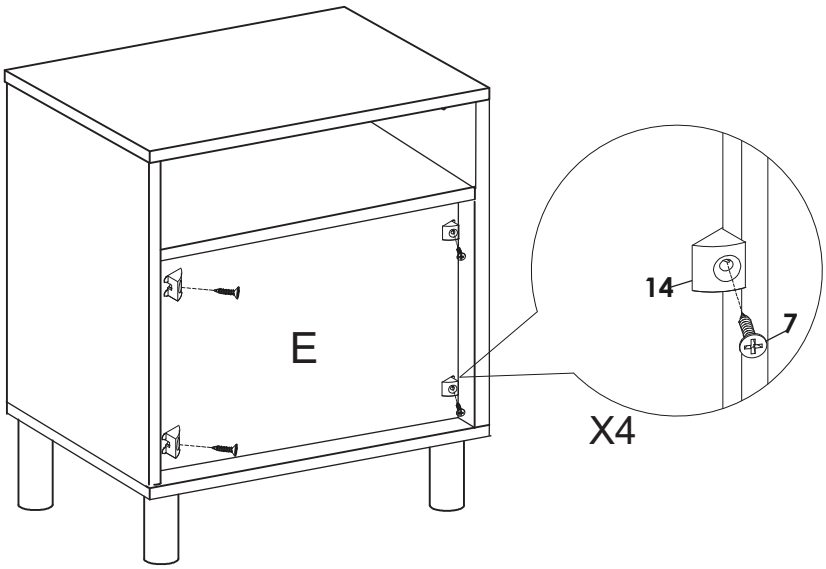

Attach the Back panel clips ⑭ To Back panel E by using the screws ⑦ with screwriver (not provided) to secure the back panel and improve the Nightstand stability..

Step 12

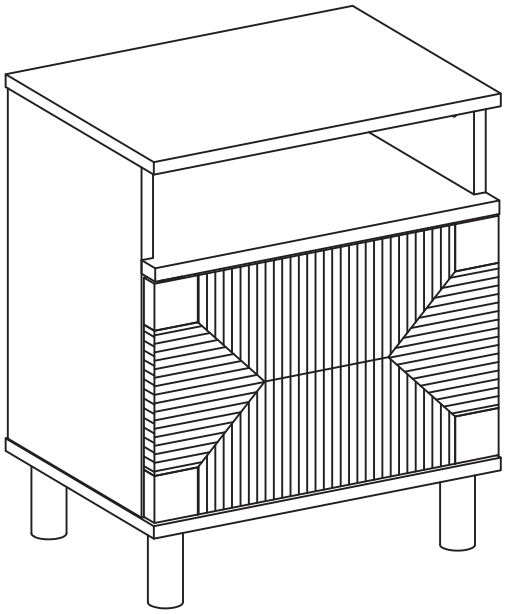

Place the Nightstand on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Don't push too hard, shake on the Nightstand.
This would help to align all the parts at all the joint areas.
CAUTION: When tightening these screws, tighten sequentially.
DO NOT tighten any screws/bolts fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process.

WARNING!! IF TABLE IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.

Your Nightstand is ready for use.

This Nightstand can only be used on the flat, level surface.