

PAPROOS

Model: FDYWC013

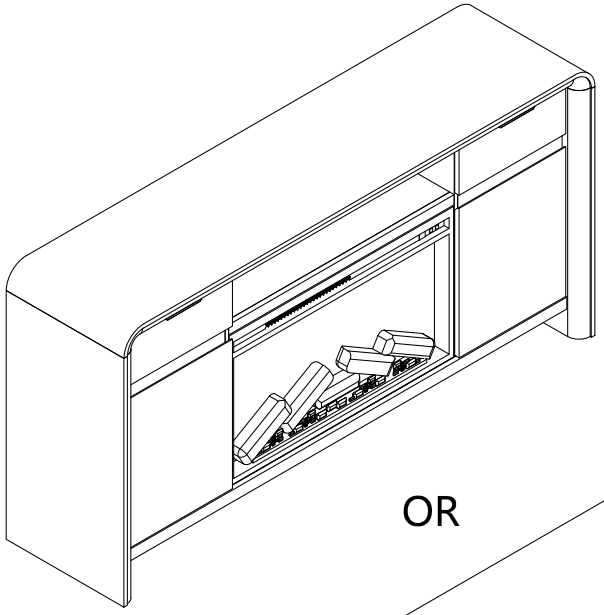


OR

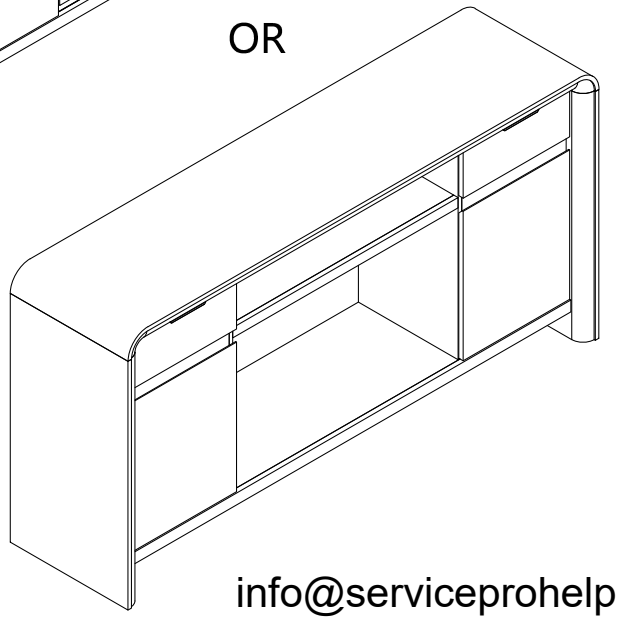

info@serviceprohelp.com

PLEASE READ CAREFULLY

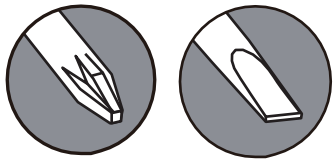

TOOLS REQUIRED

Two people are required for assembly.


Move this piece of furniture gently with two people.



Read this assembly manual carefully, and verify that you have all the parts listed before you begin.
Keep your assembly manual for future reference.



Do not place very hot/cold objects on top of any surface.
Always use a coaster or mat. Never leave liquids on the surface.
Clean immediately with a mild soap and a damp cloth.
Never use scouring powder based cleanser.

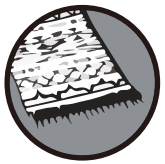

Protect finishes by placing furniture pieces on a soft carpeted surface during assembly.

SAFE INFORMATION

WARNING: To prevent serious injury or death from furniture tip-overs.

- **NEVER** allow children to climb, stand, or play on any furniture.
- **ALWAYS** supervise children around furniture.
- **KEEP** remote controls, toys, and other attractive items out of reach from the tops of furniture.

WARNING: ALWAYS anchor furniture to the wall.


- Anchoring is **ESSENTIAL** to prevent tip-overs.
- Anchor **DIRECTLY** to wall studs or masonry using appropriate hardware.
- **CONSULT** a qualified professional if you are uncertain about your wall construction or how to install anchors properly.
- **REFER** to your television and furniture owner’ s manuals for model-specific instructions.
- **NEVER** remove wall anchors without first emptying all items from the furniture.


CAUTION: Use only furniture designed for TVs.

- Placing a TV on furniture **NOT** designed for it (e.g., dressers, bookcases) creates a top-heavy, unstable hazard.
- **USE ONLY** furniture specifically designed and rated to support the weight and size of your television.
- **FOLLOW** all manufacturer instructions for installation and weight limits.


➡ For more details, visit https://www.anchorit.gov/

EXPLODED VIEW

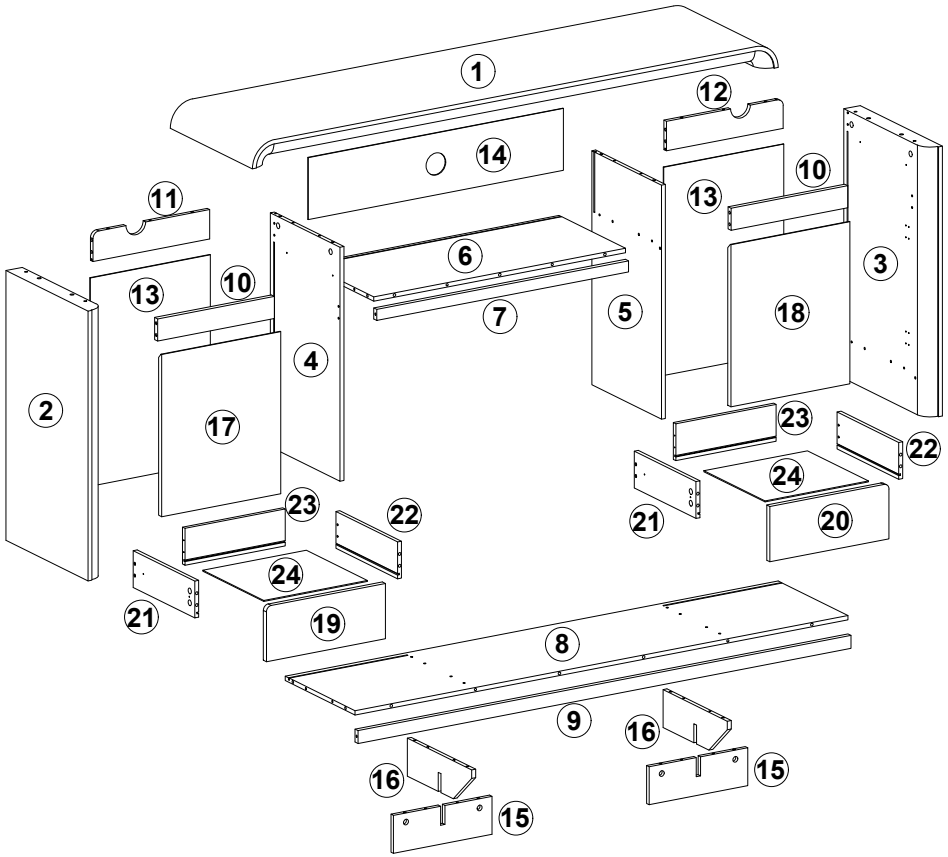


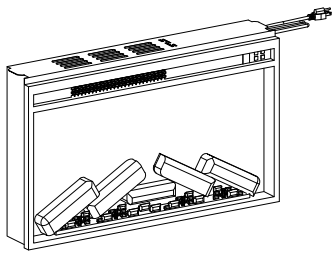



PARTS

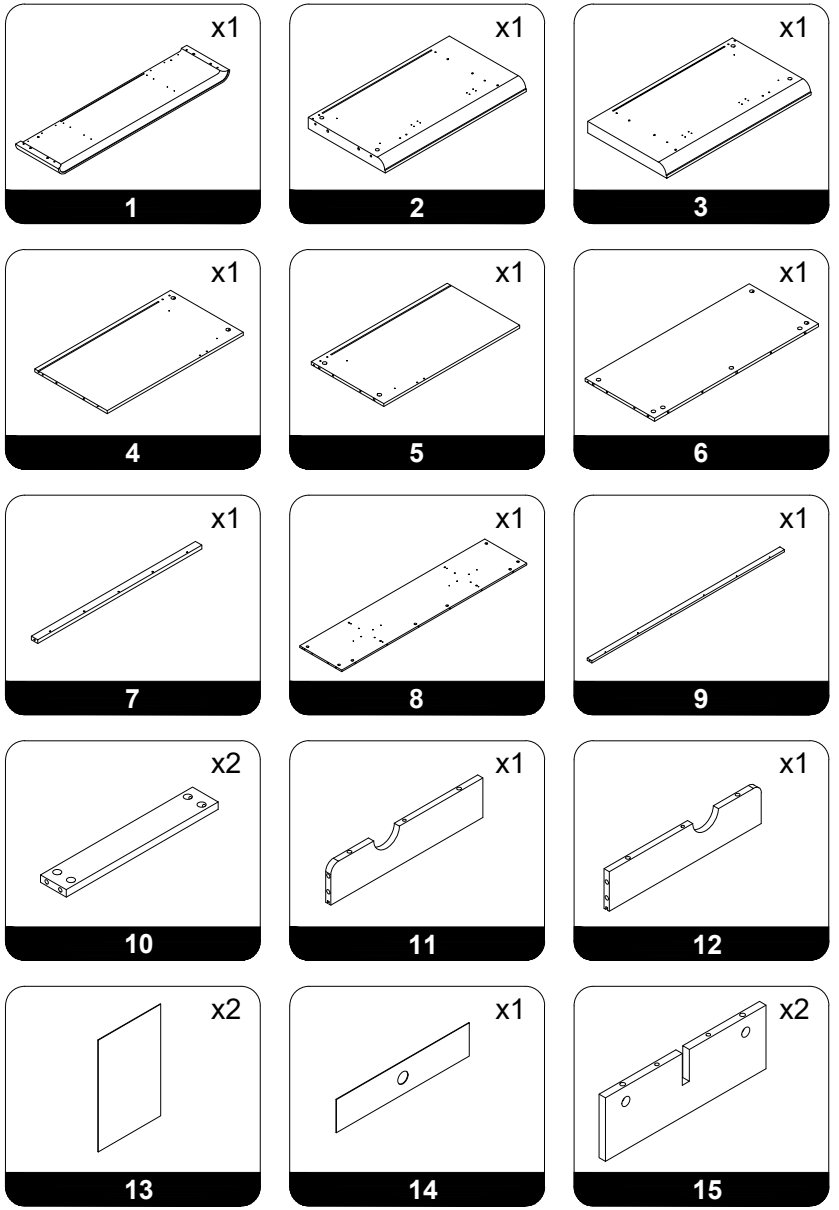



PARTS

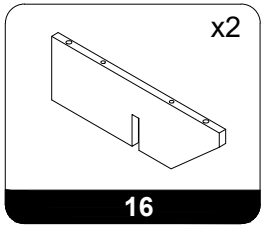


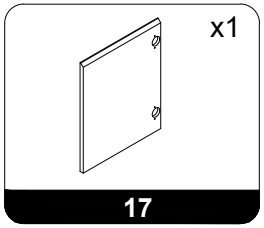


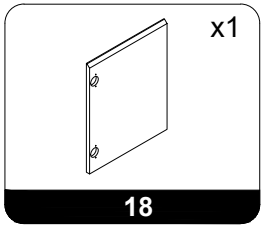


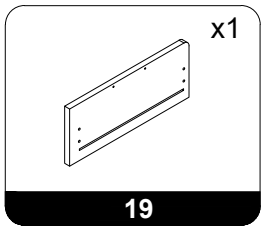


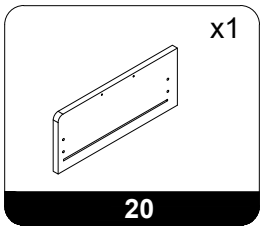

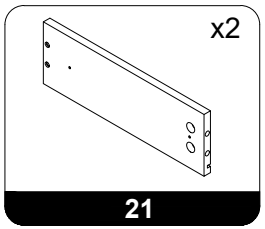


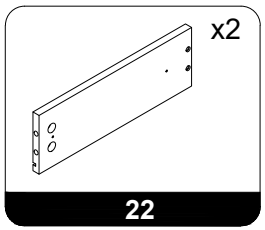


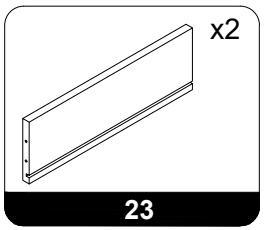


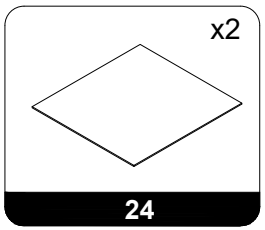



HARDWARE

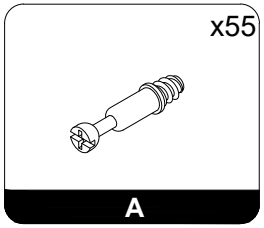


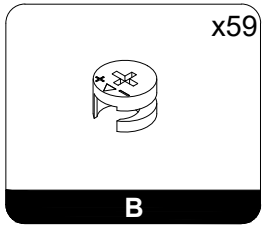


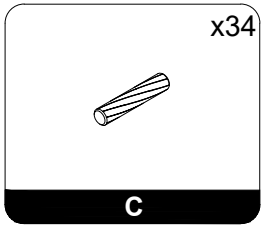


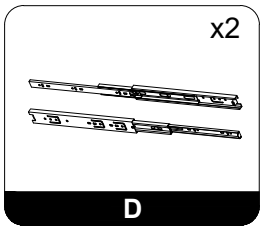


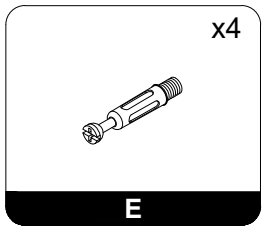


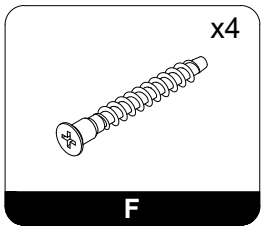


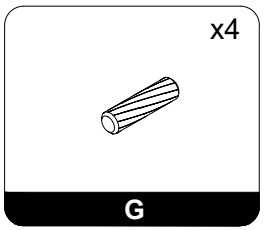


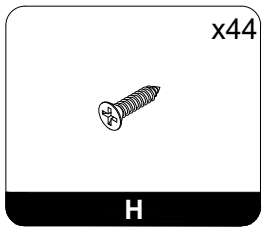


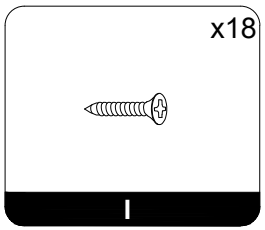


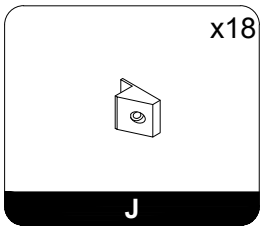


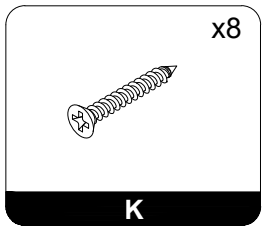

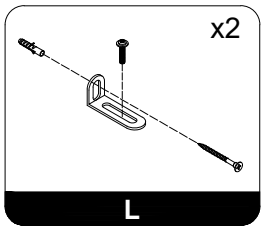

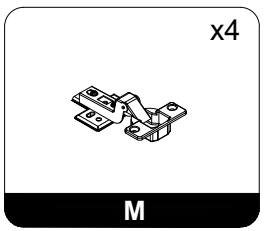

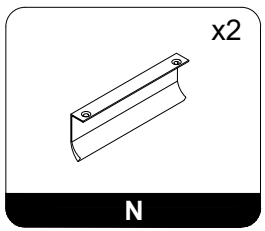


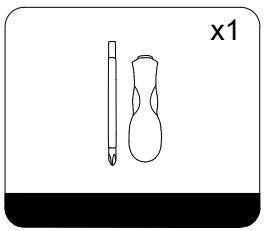


ASSEMBLY INSTRUCTIONS

Do not tighten the screws until all of them are fastened into the holes.

STEP 1

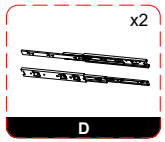



Attention:
Take care when installing the slide rails as they have been pre-lubricated

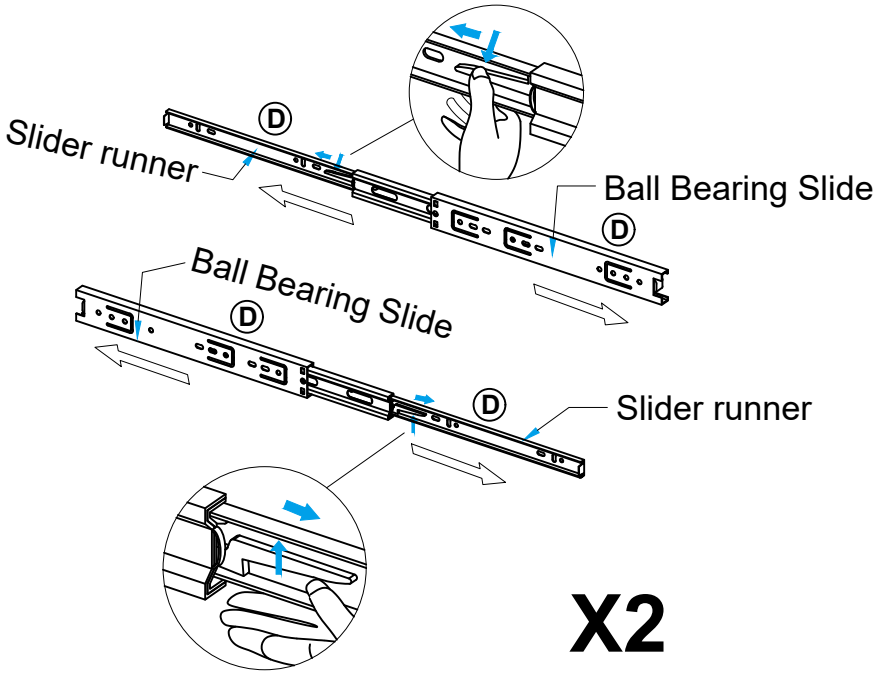


X2


STEP 2

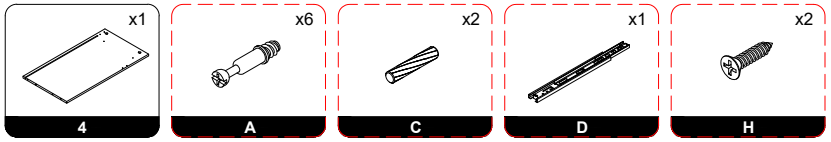


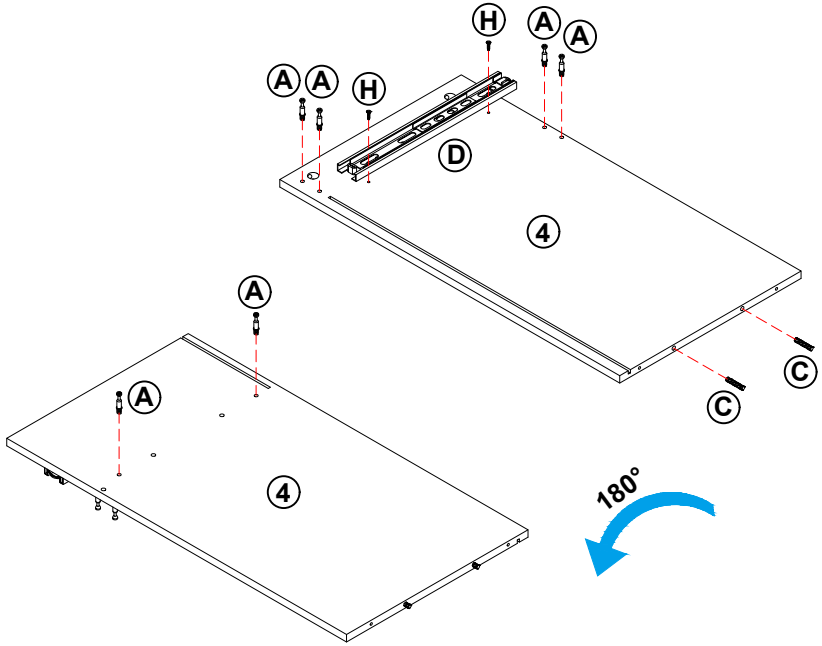


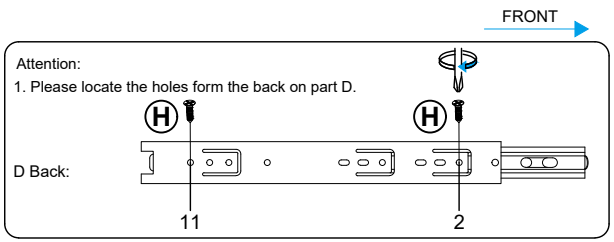


STEP 3

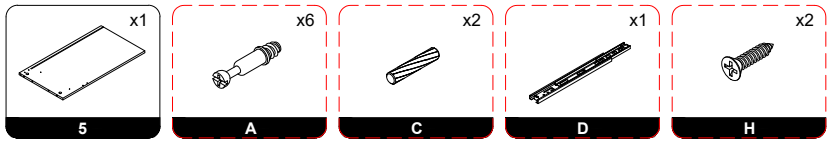

x1
5
x6
A
x2
C
x1
D
x2
H

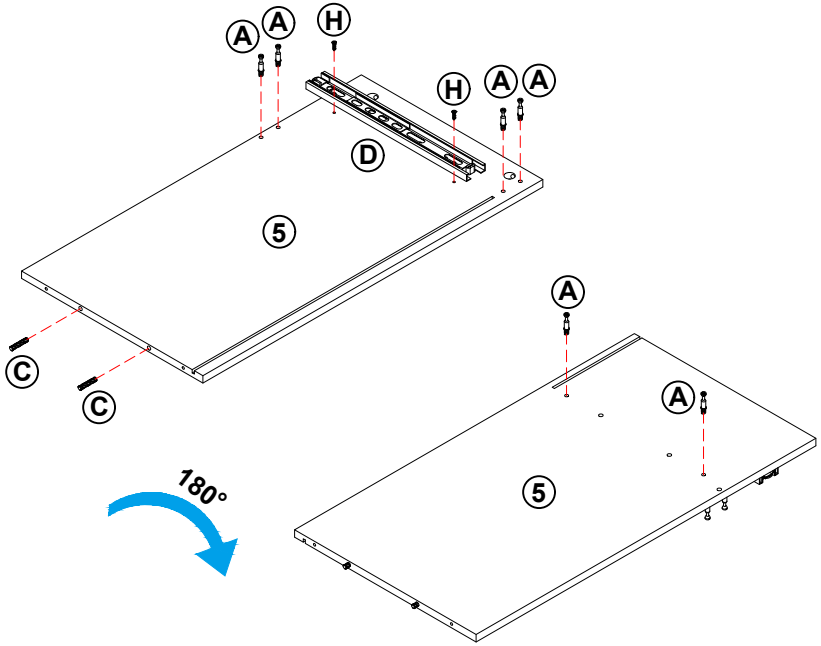

A
A
H
H
A
A
D
5
C
C
180°
A
A
5

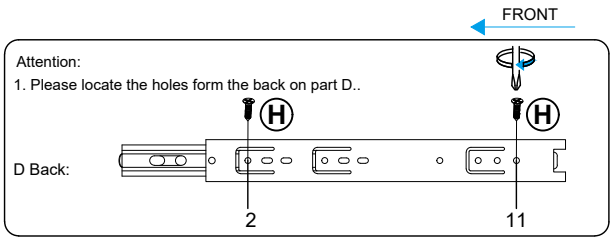
FRONT
Attention:
1. Please locate the holes form the back on part D..
D Back:
H
H
2
11


STEP 4

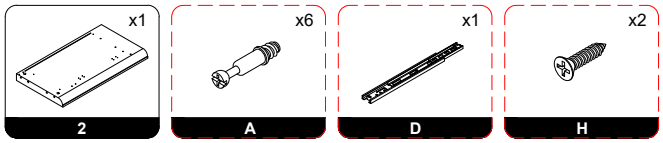

x1
2
x6
A
x1
D
x2
H

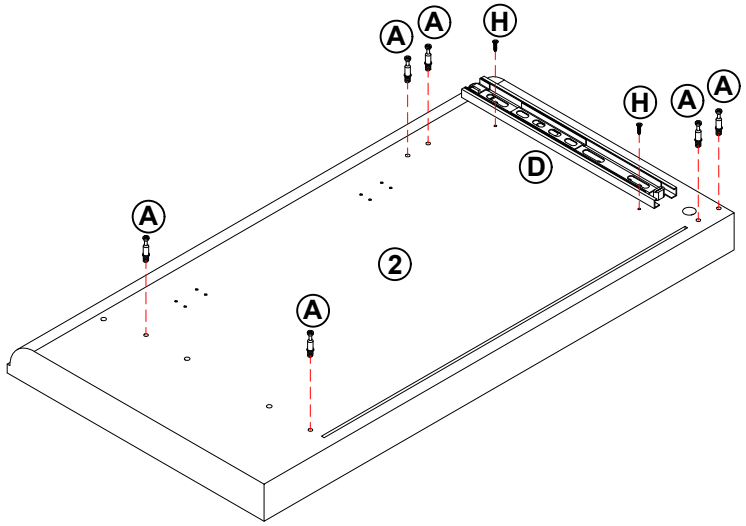

A
A
H
H
A
A
D
A
2
A

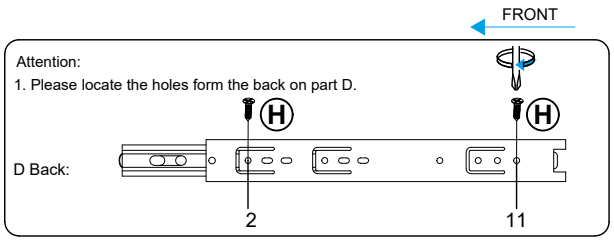
FRONT
Attention:
1. Please locate the holes form the back on part D.
D Back:
H
H
2
11


STEP 5

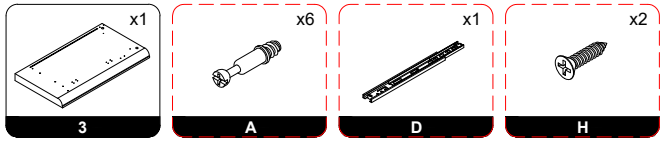

x1
3
x6
A
x1
D
x2
H

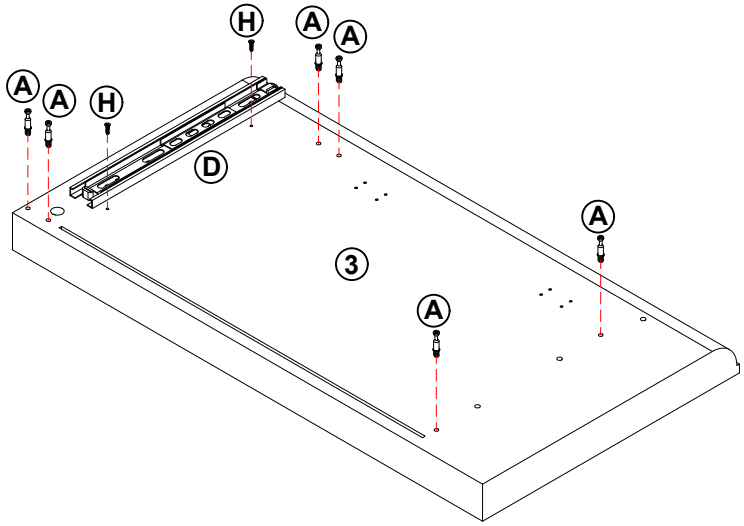

H
A
A
A
A
H
D
3
A
A

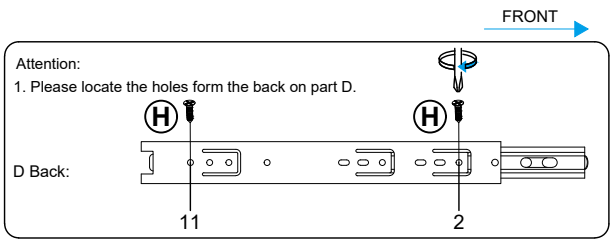
FRONT
Attention:
1. Please locate the holes form the back on part D.
H
H
D Back:
11
2


STEP 6

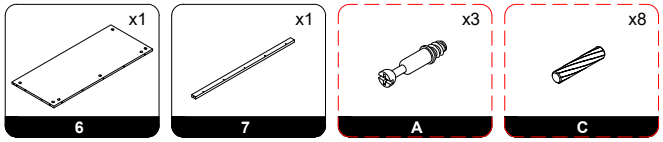

x1
6
x1
7
x3
A
x8
C

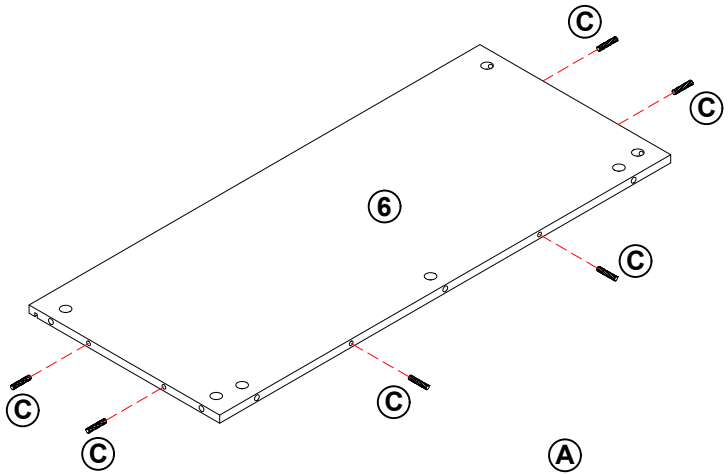
C
C
6
C
C
C

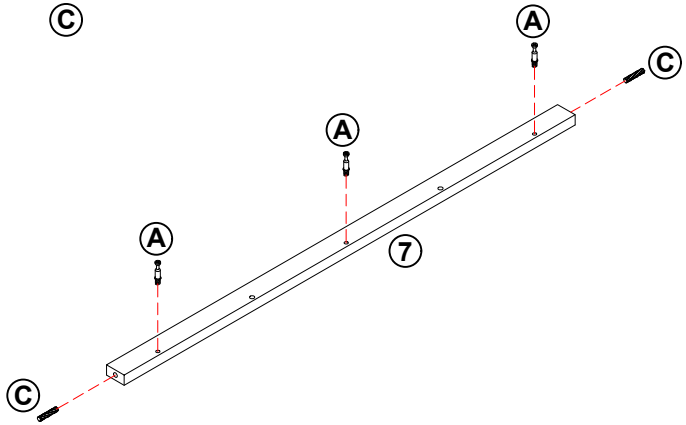

A
C
A
A
7
C


STEP 7

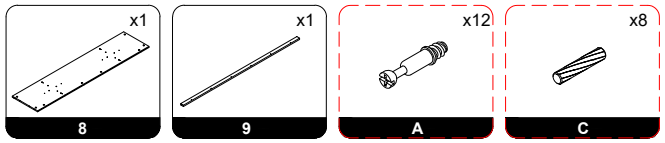


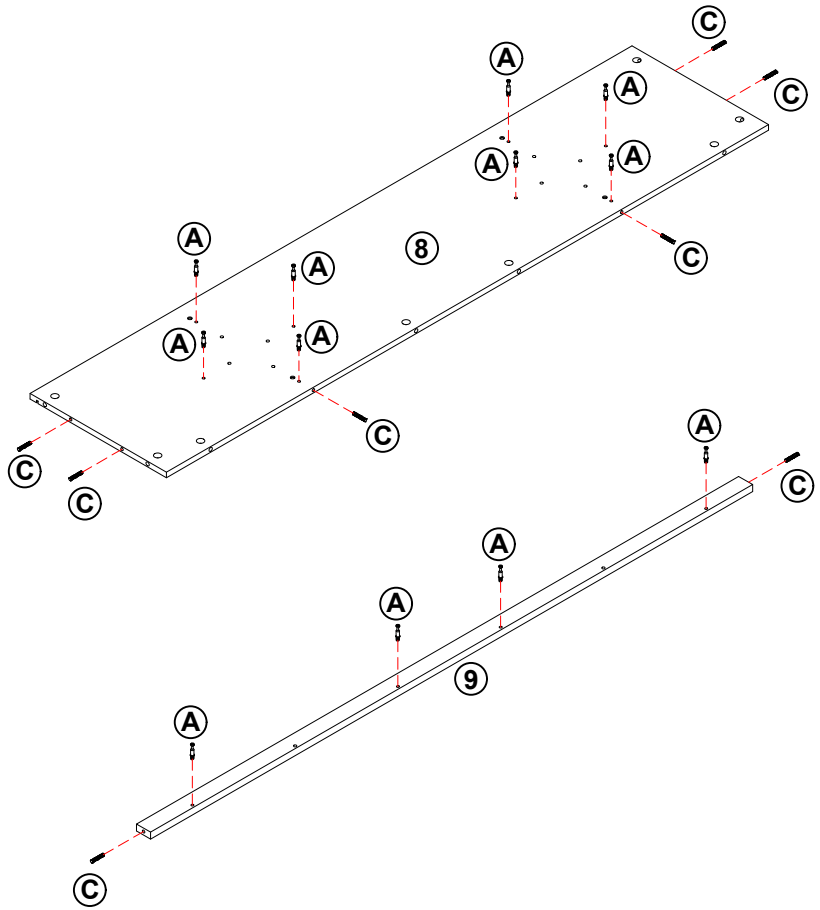

STEP 8

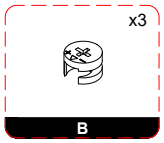


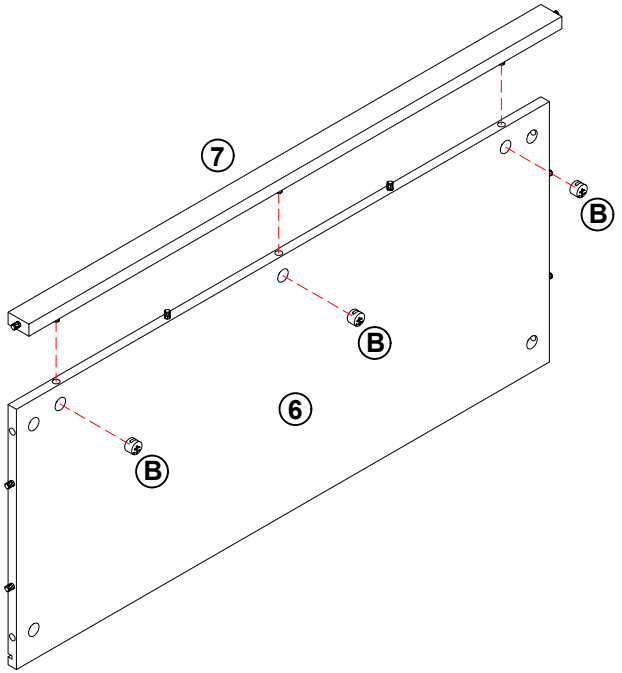





Note: Observe the arrow direction.

STEP 9

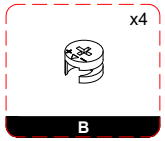


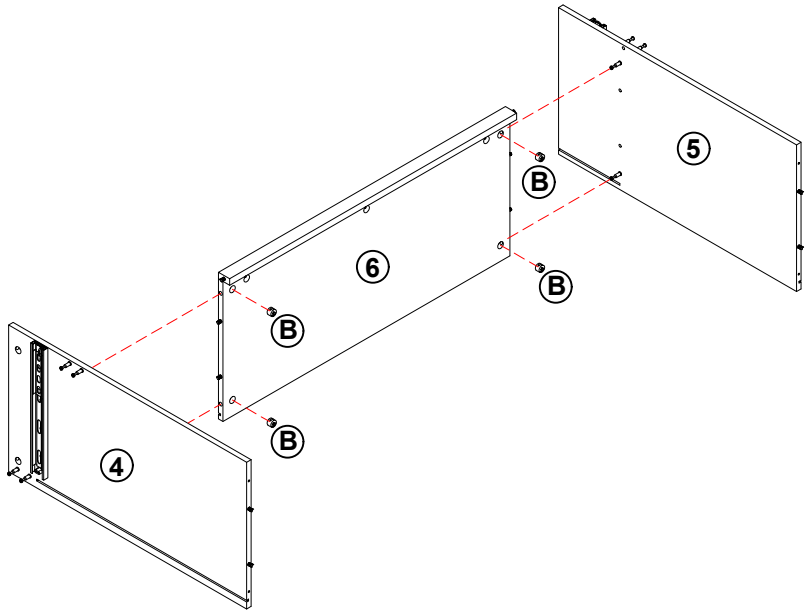





Note: Observe the arrow direction.


STEP 10

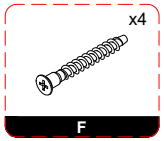

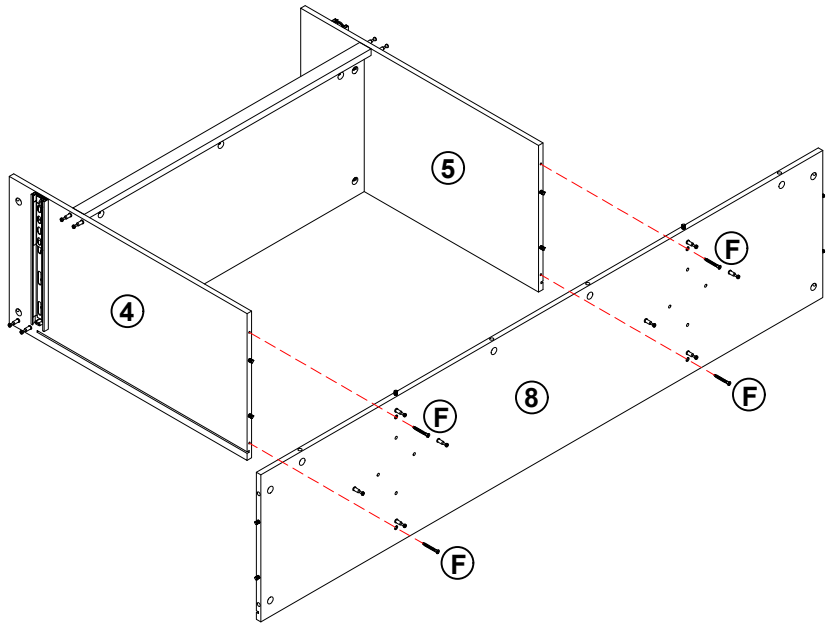


STEP 11

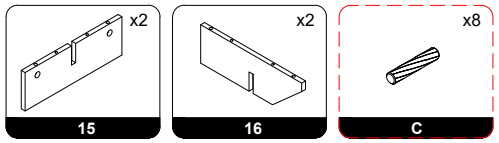


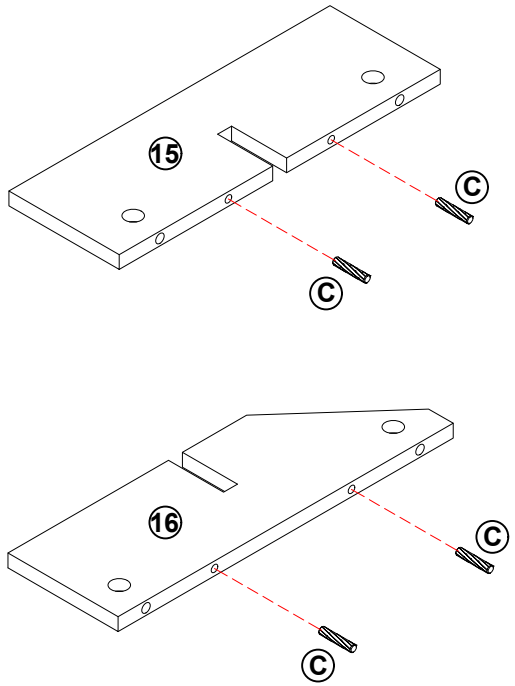


X2

STEP 12

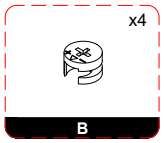


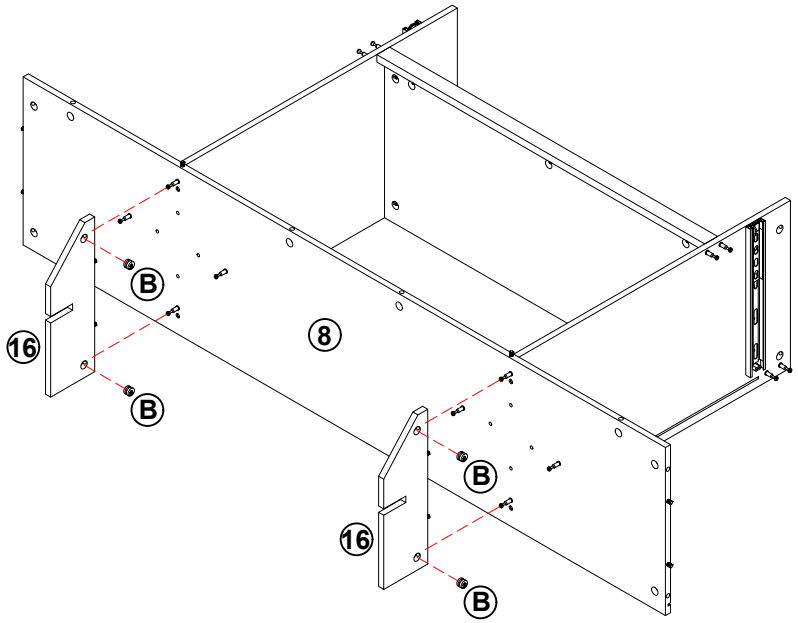





Note: Observe the arrow direction.

STEP 13

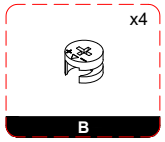


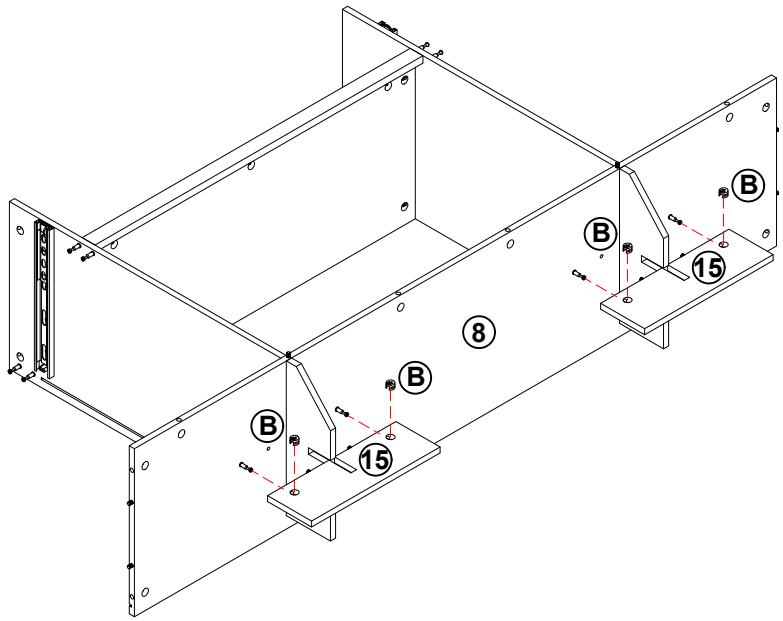





Note: Observe the arrow direction.

STEP 14

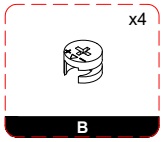


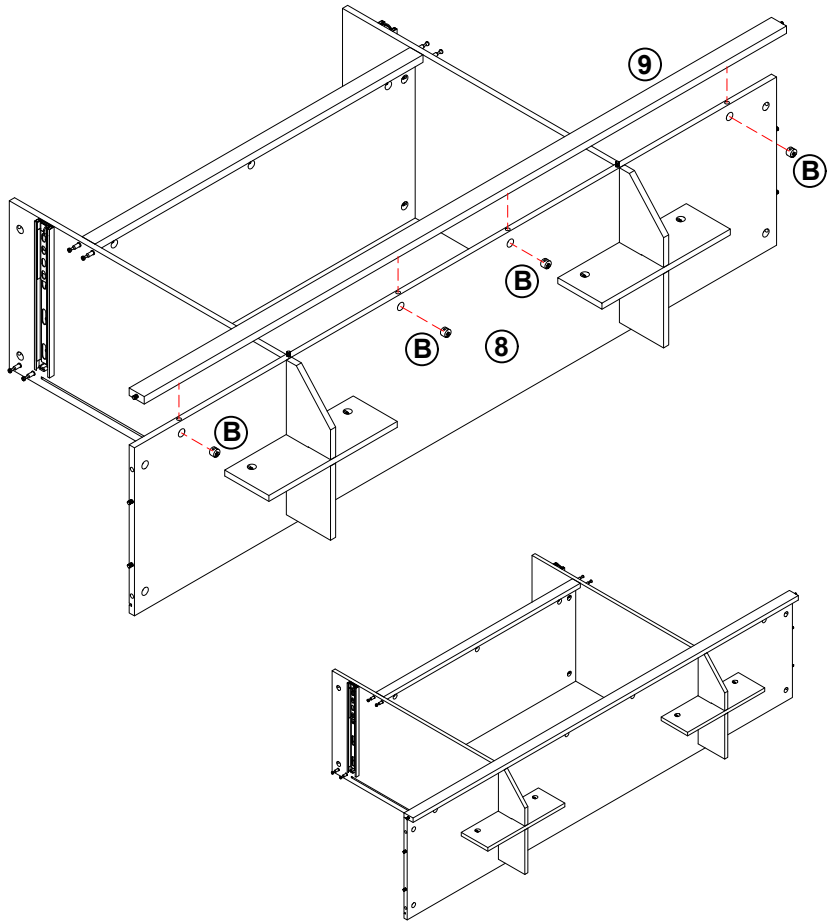





Note: Observe the arrow direction.

STEP 15

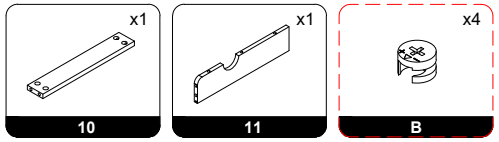


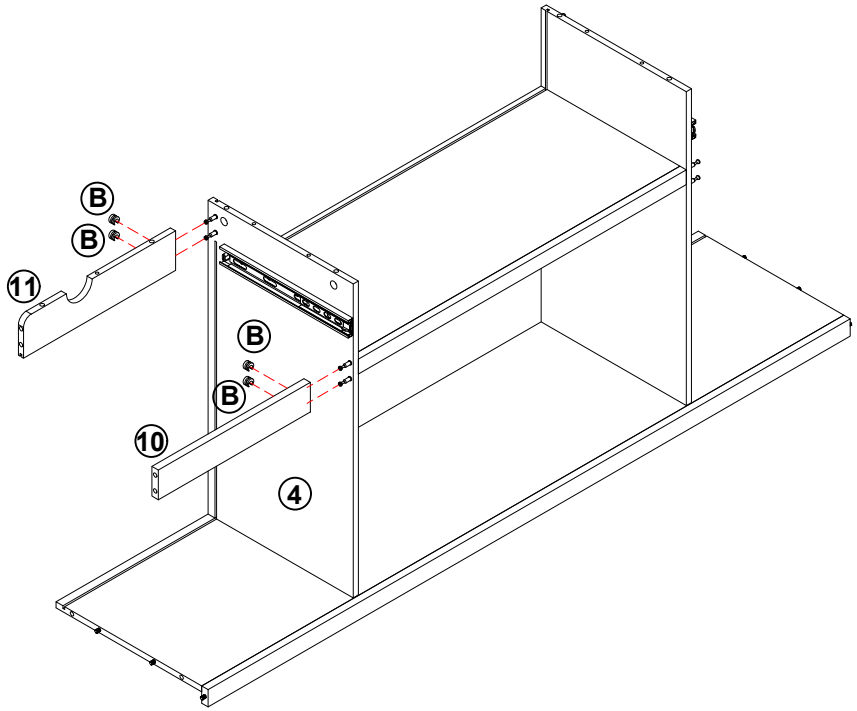





Note: Observe the arrow direction.


STEP 16

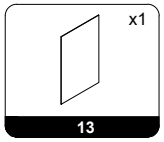


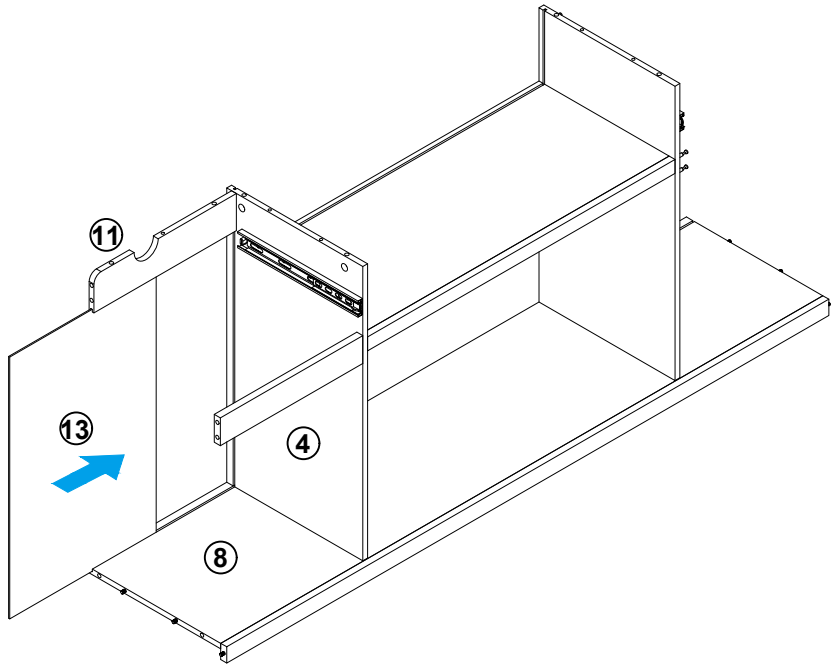

STEP 17

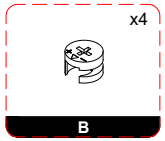


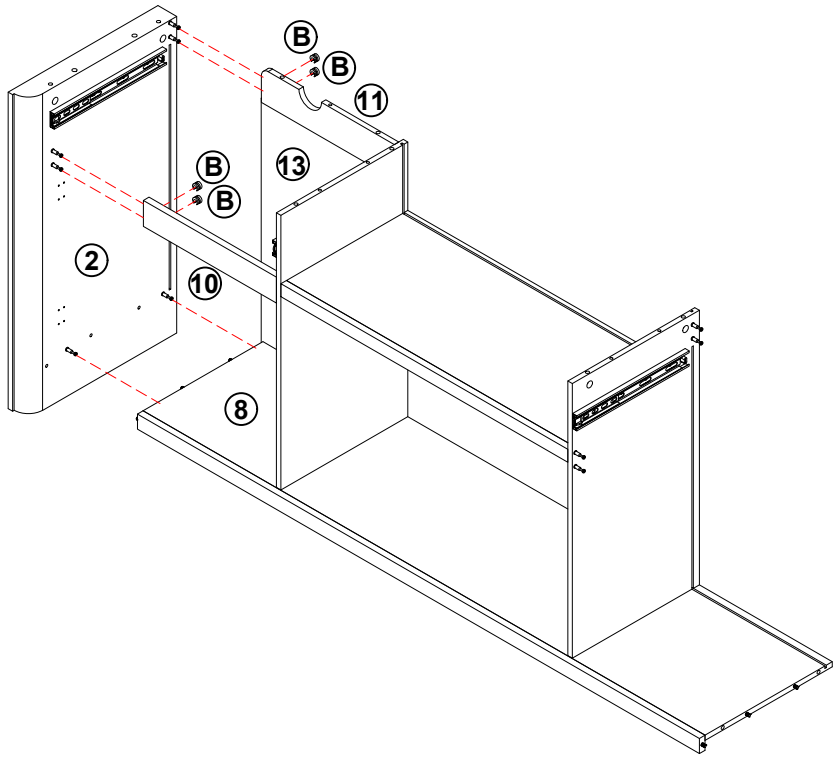





Note: Observe the arrow direction.

STEP 18

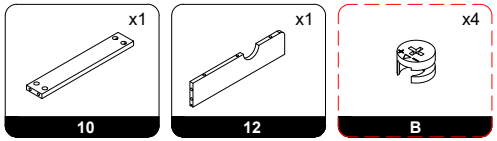


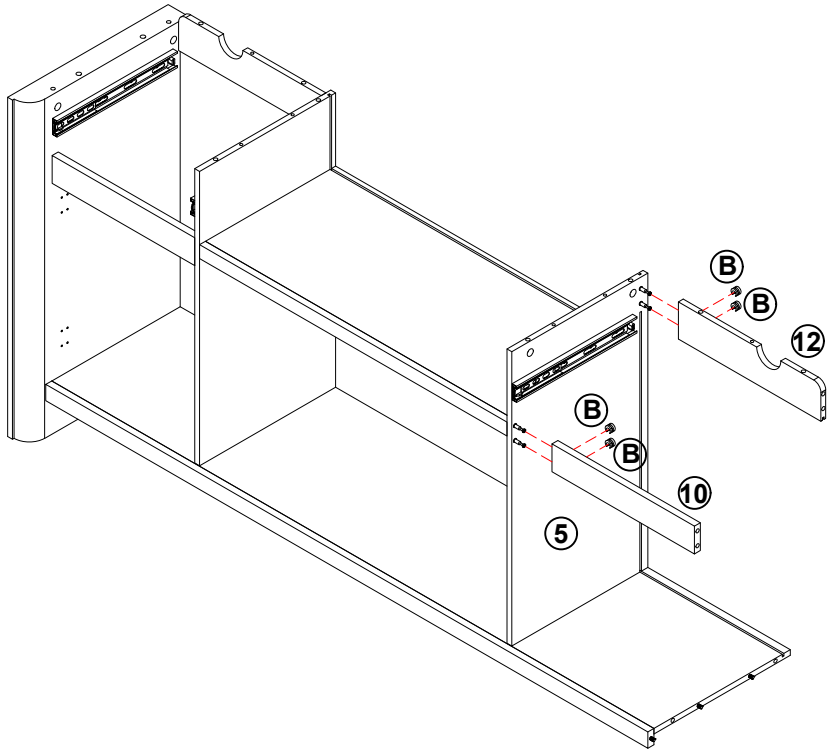





Note: Observe the arrow direction.


STEP 19

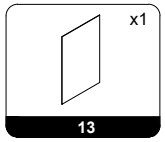


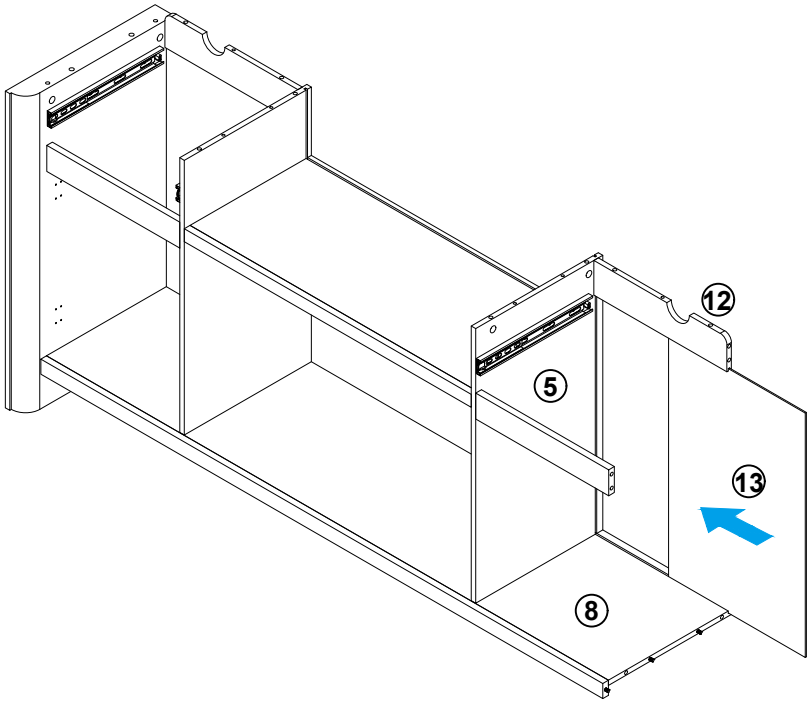


STEP 20

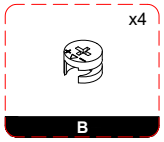

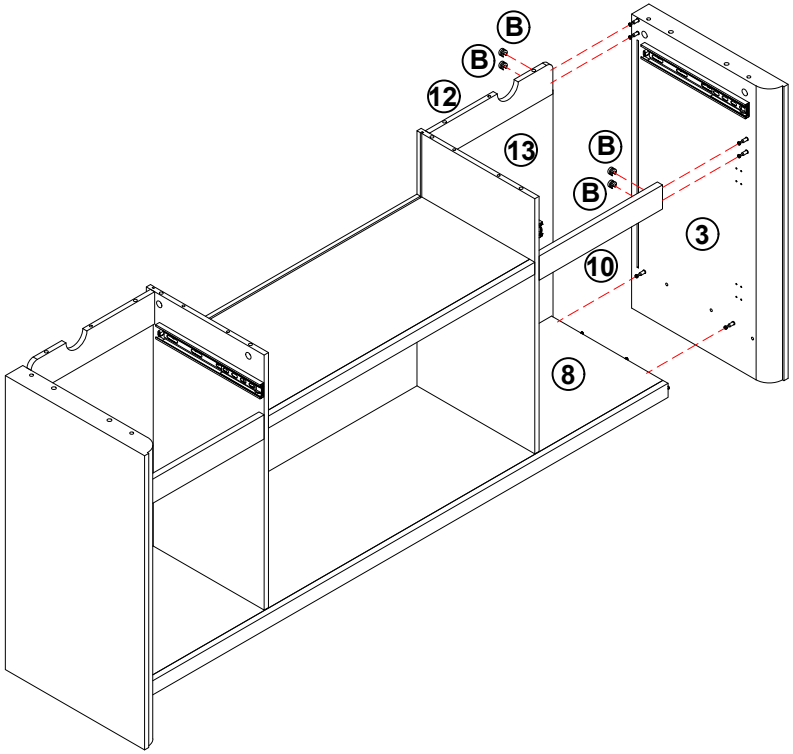











Note: Observe the arrow direction.

STEP 21

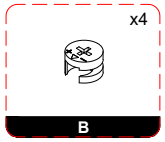

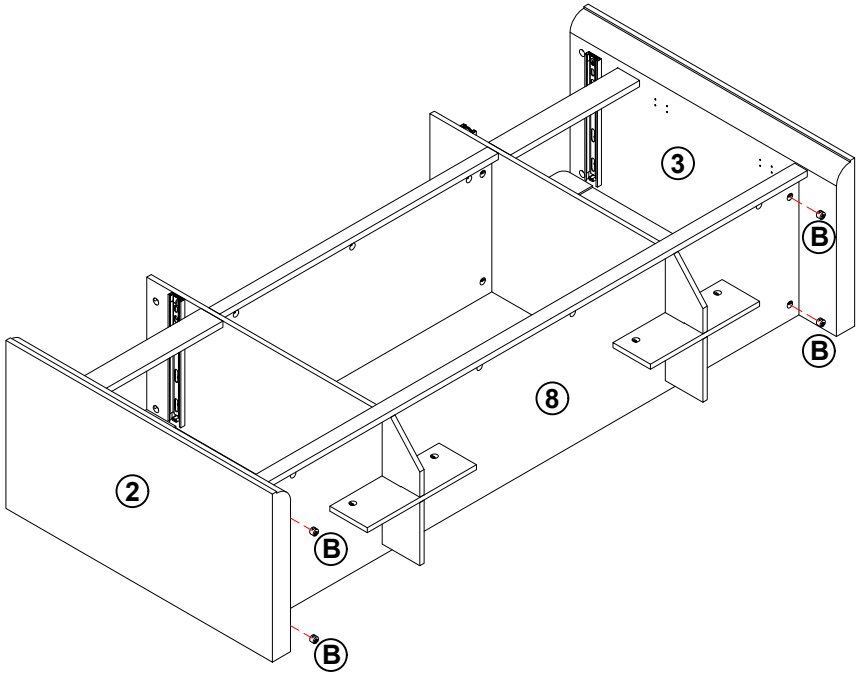








Note: Observe the arrow direction.


STEP 22

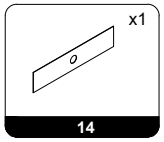

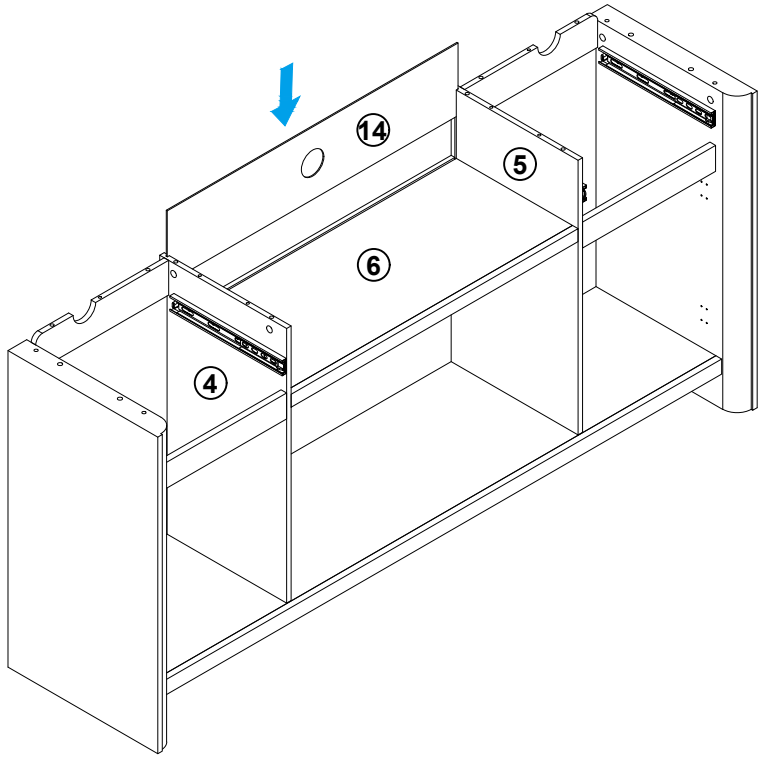



STEP 23

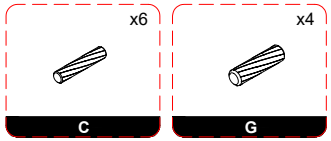

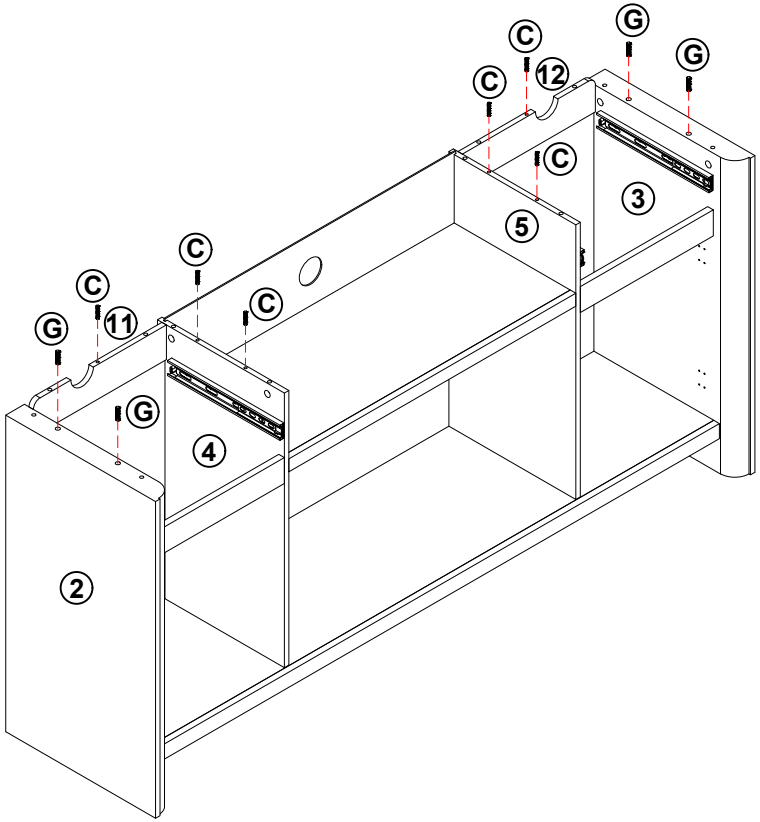



STEP 24

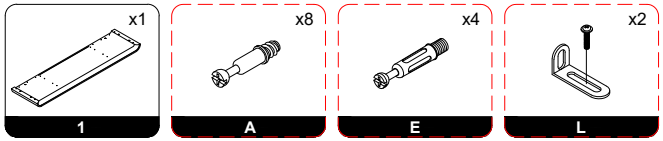


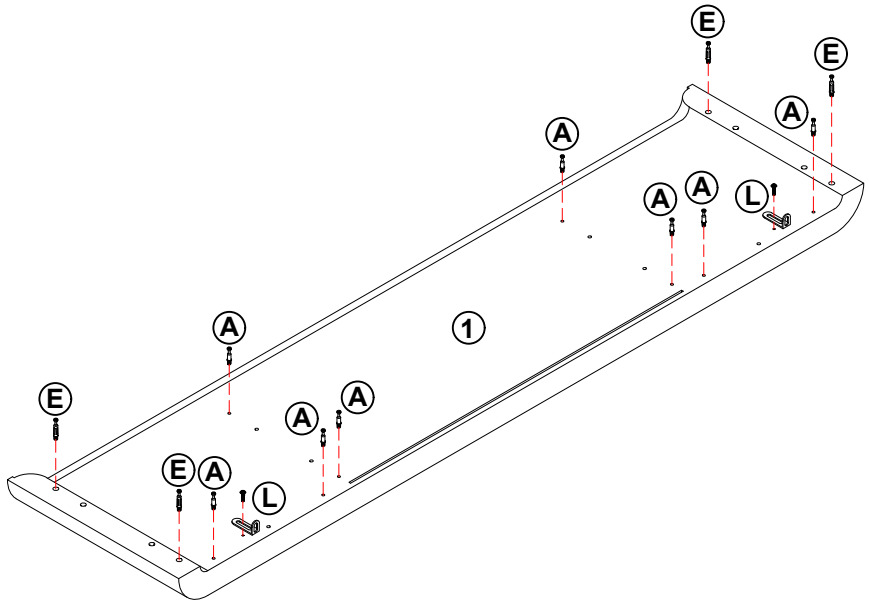

STEP 25

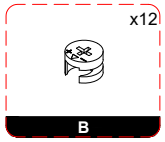


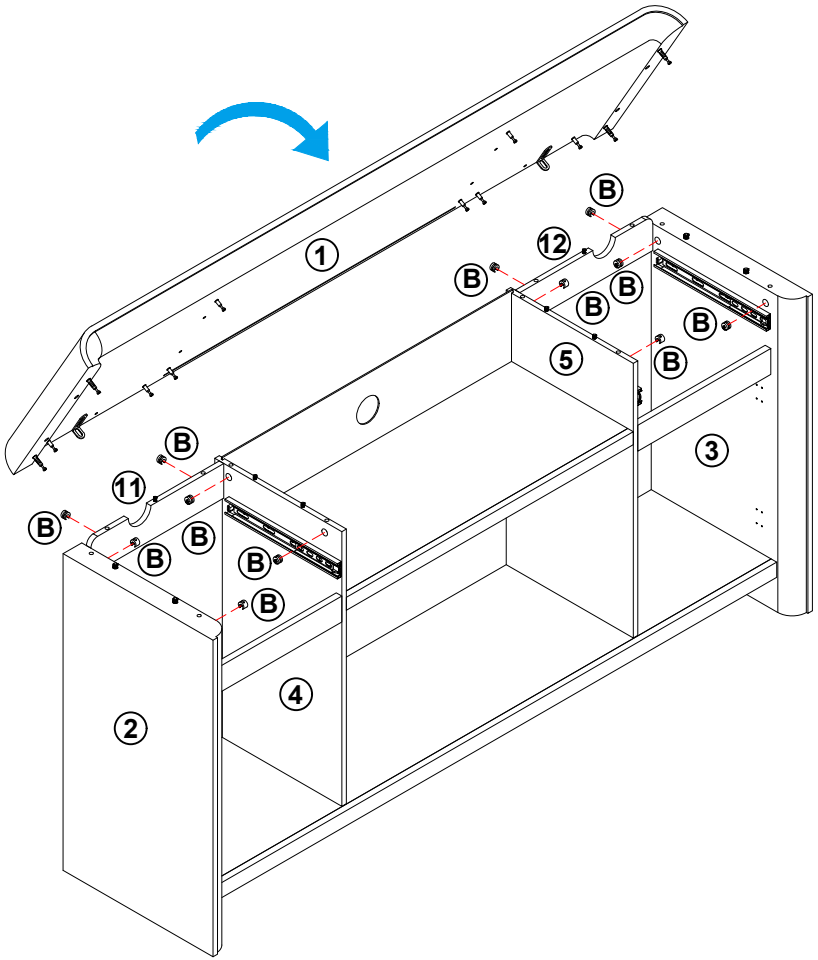





Note: Observe the arrow direction.


STEP 26

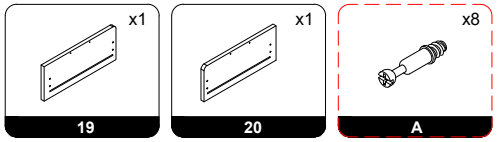

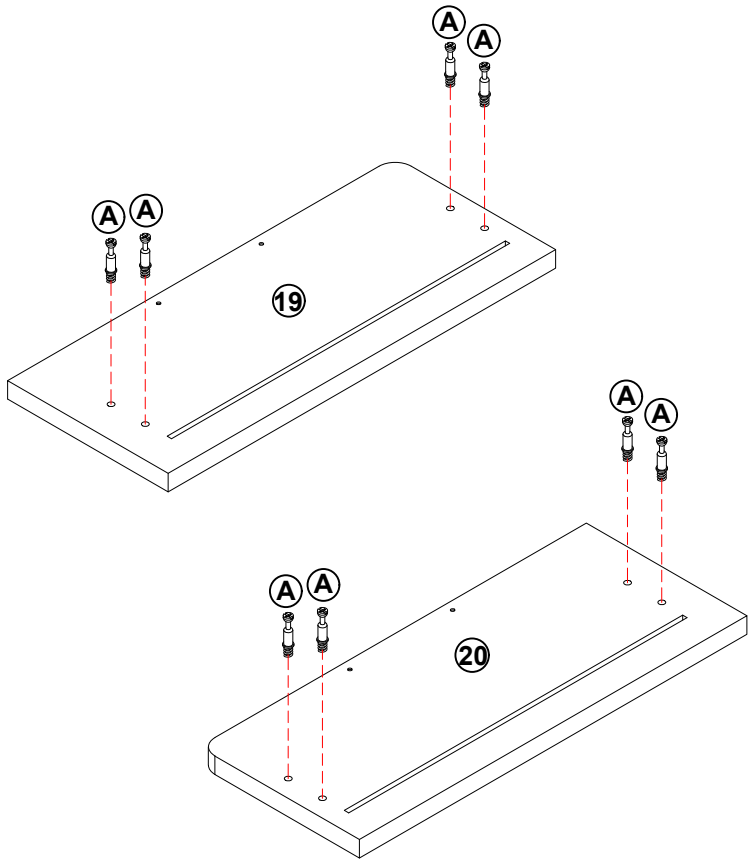


STEP 27

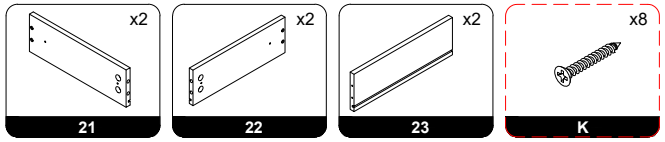


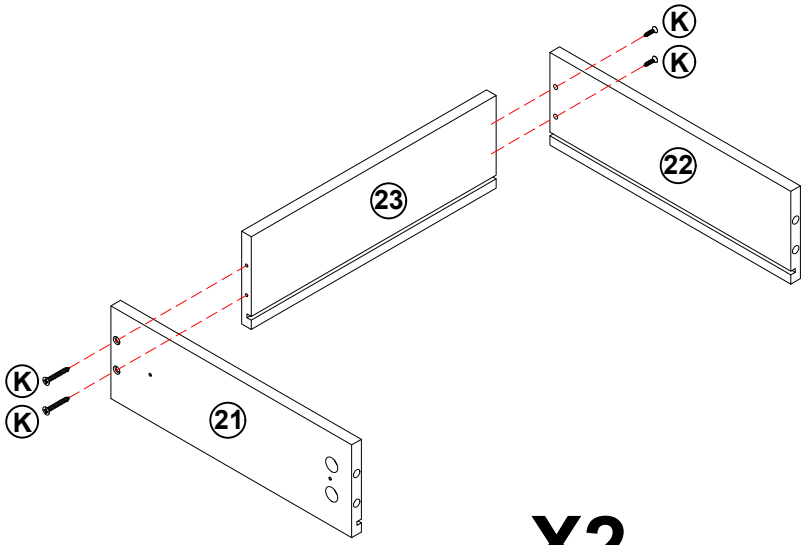

X2


STEP 28

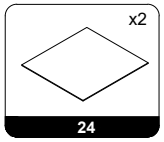


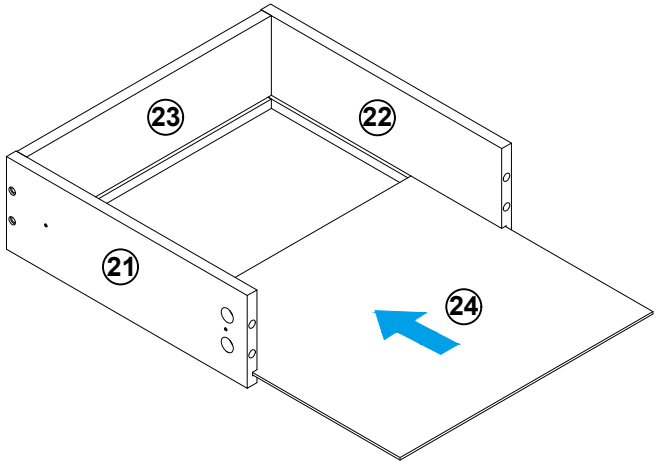


X2

STEP 29

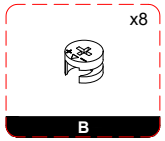


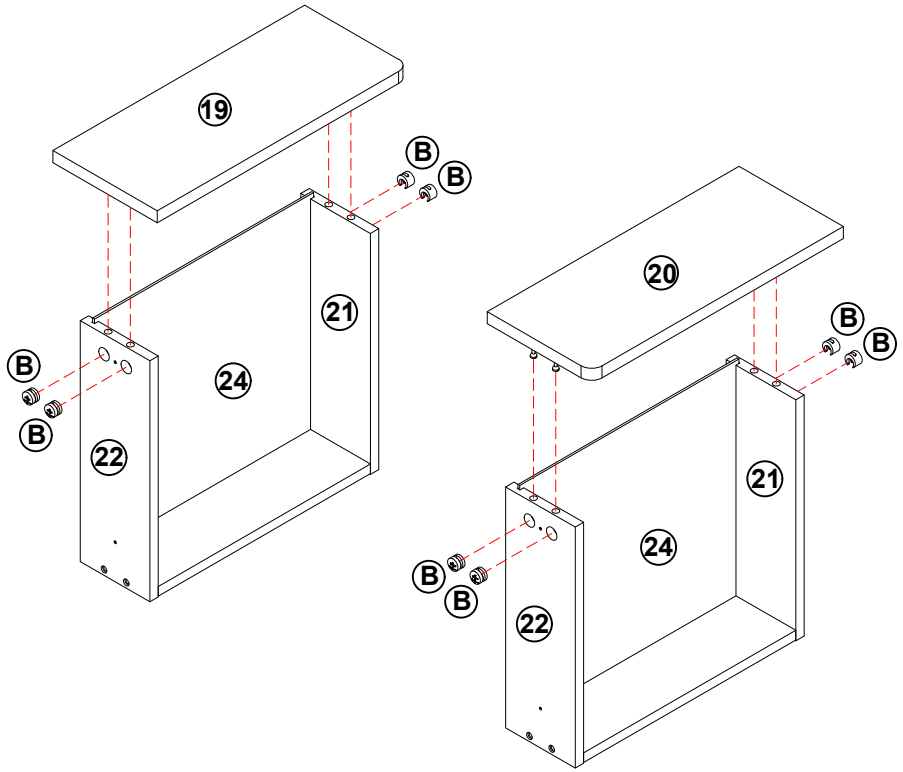





Note: Observe the arrow direction.

STEP 30

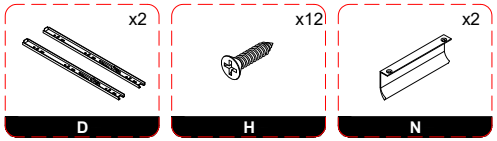


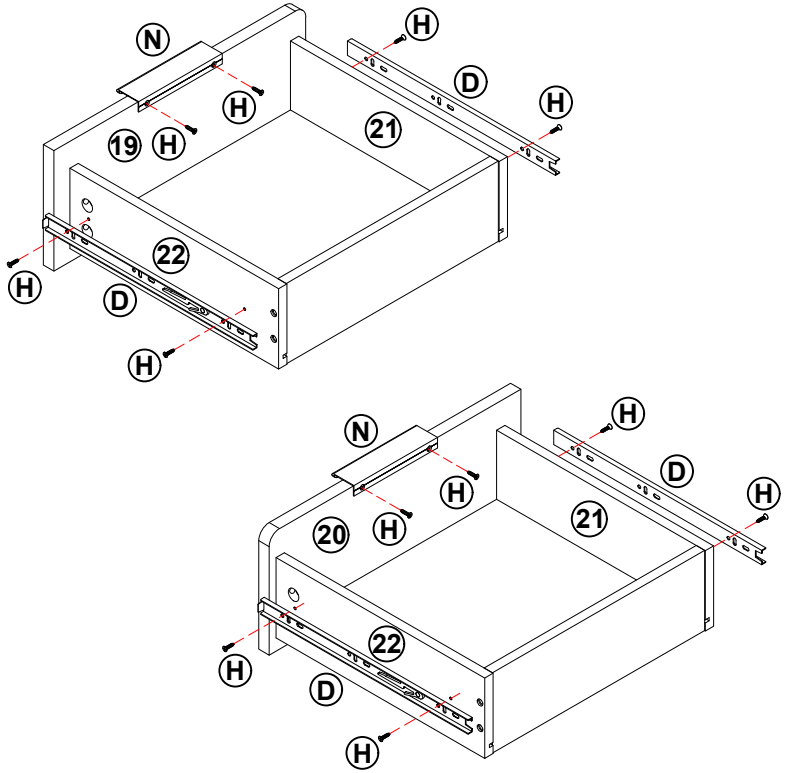

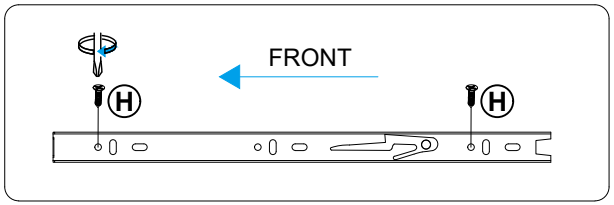



Important Notice
Refer to the matching assembly steps for your unit :
1. Fireplace TV Stand Assembly: Steps 31 through 37
2. Standard TV Stand Assembly: Steps 38 through 43


STEP 31

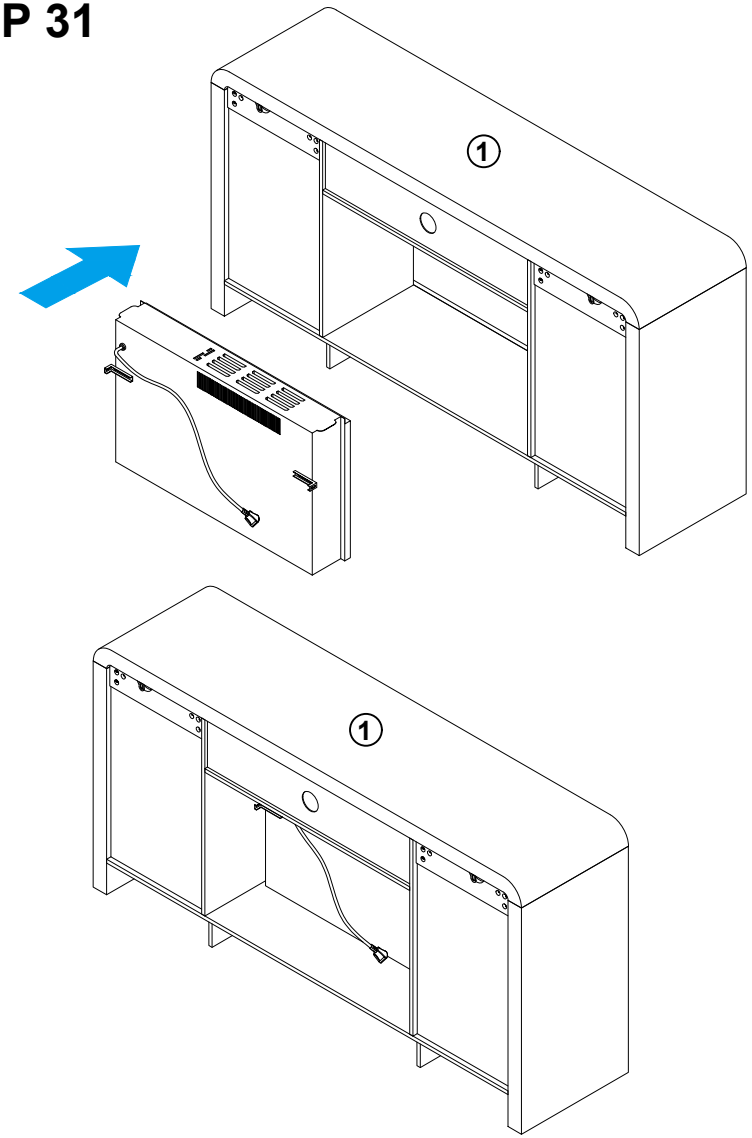


STEP 32

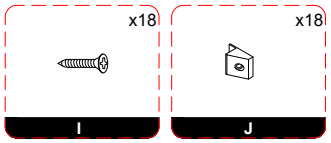

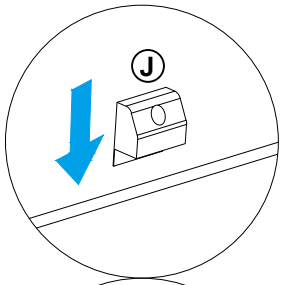

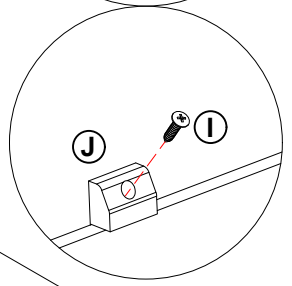

STEP 33

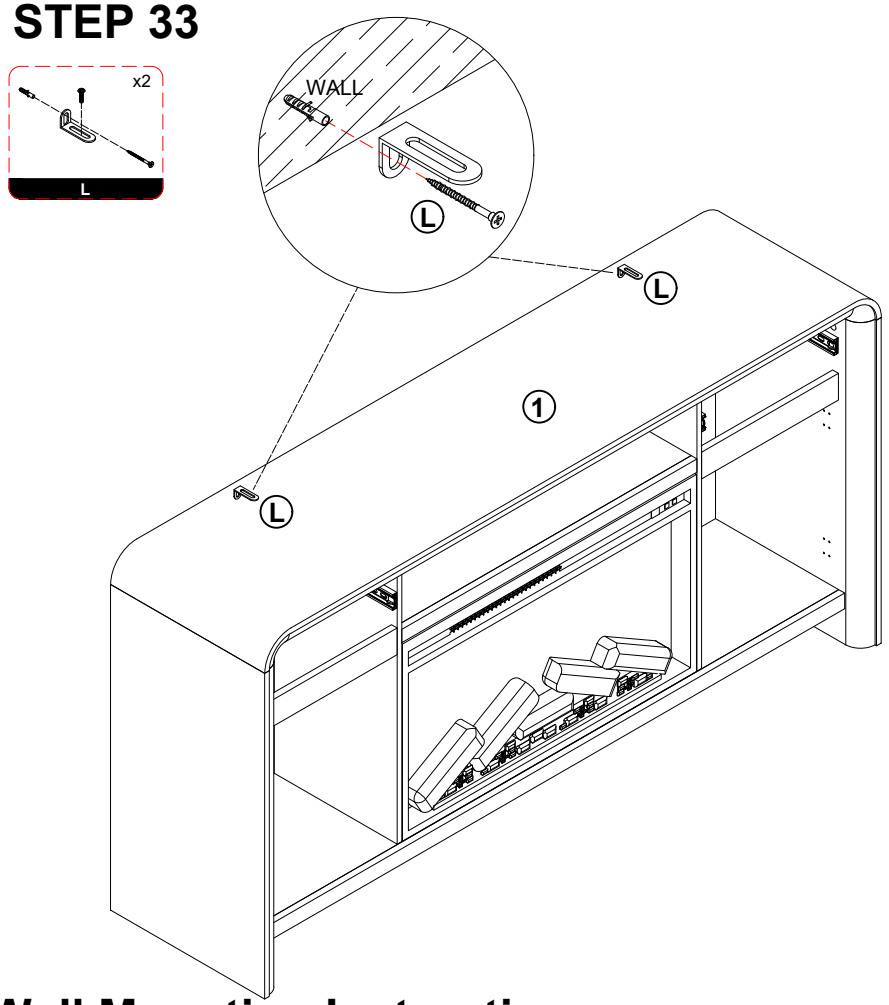

Wall Mounting Instructions


CAUTION — Risk of Furniture Tip-Over. Always anchor this furniture securely to the wall.

- Using the screws provided and a screwdriver, secure the mounting plate(s) to the back of the product .
- Noting the location of the product's mounting plate(s), mark the corresponding positions on the wall for the wall-mounted plate(s). Drill pilot holes at the marked locations into a wall stud.


NOTE: If wall studs are not available, drill holes slightly smaller than the drywall anchors. Insert each anchor until its flange is flush with the wall.


- Using a screwdriver, secure the mounting bracket(s) to the wall stud or to the drywall anchors using the screws provided.
- Place the product in its final position. Secure one end of the "L"-shaped anti-tip hardware to the wall mounting hole and the product mounting plate, adjusting to remove any slack. Do not overtighten.

STEP 34

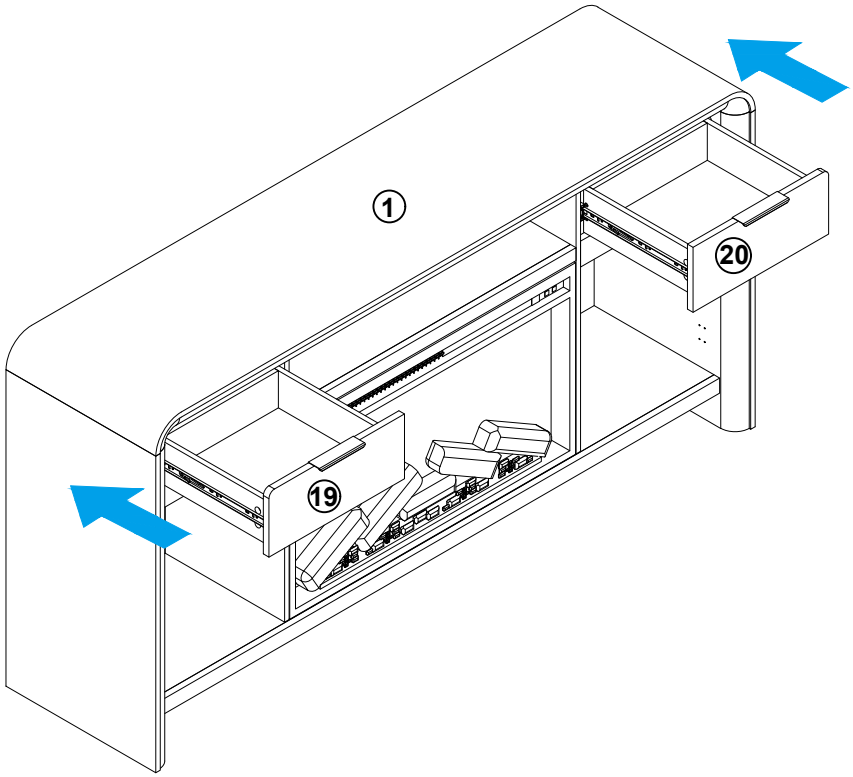



STEP 35

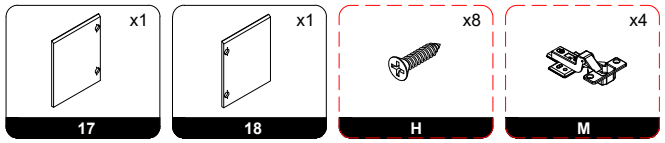

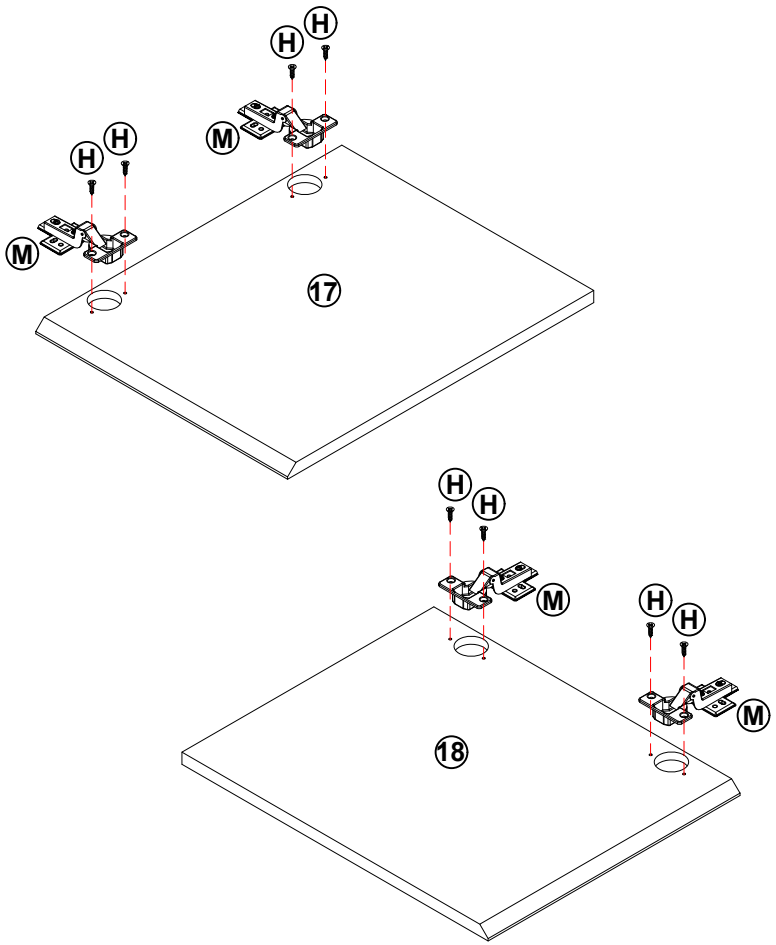



STEP 36

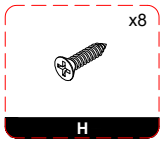

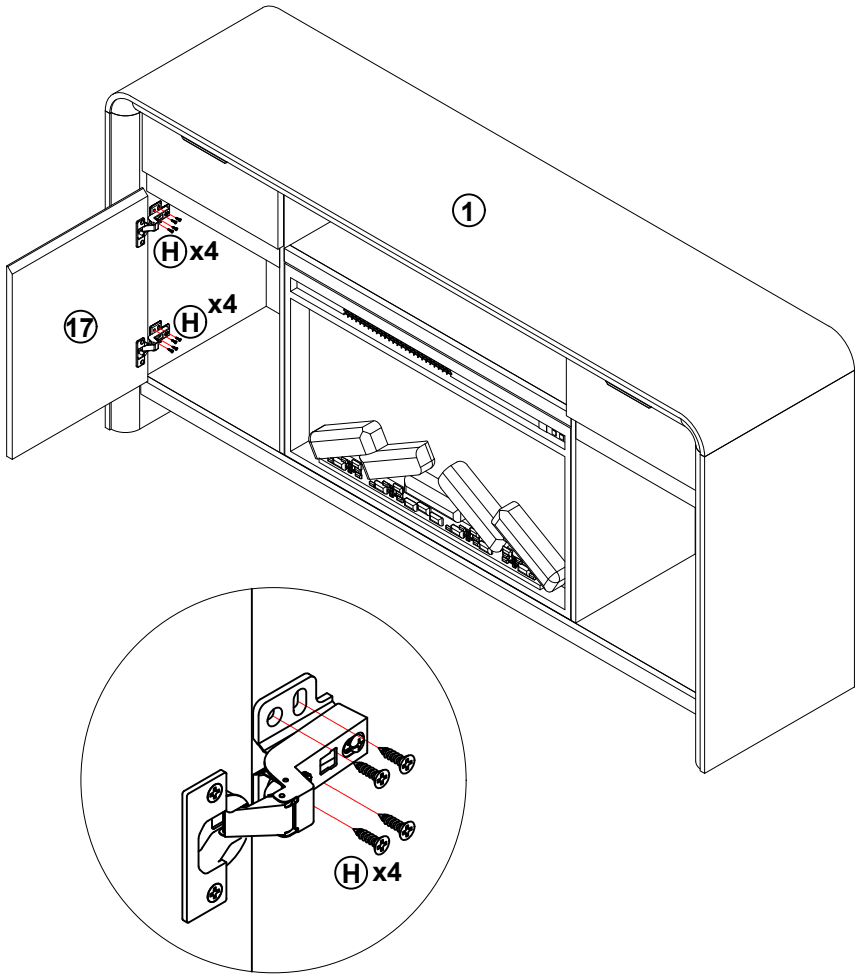


STEP 37

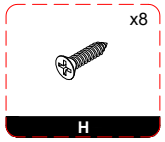


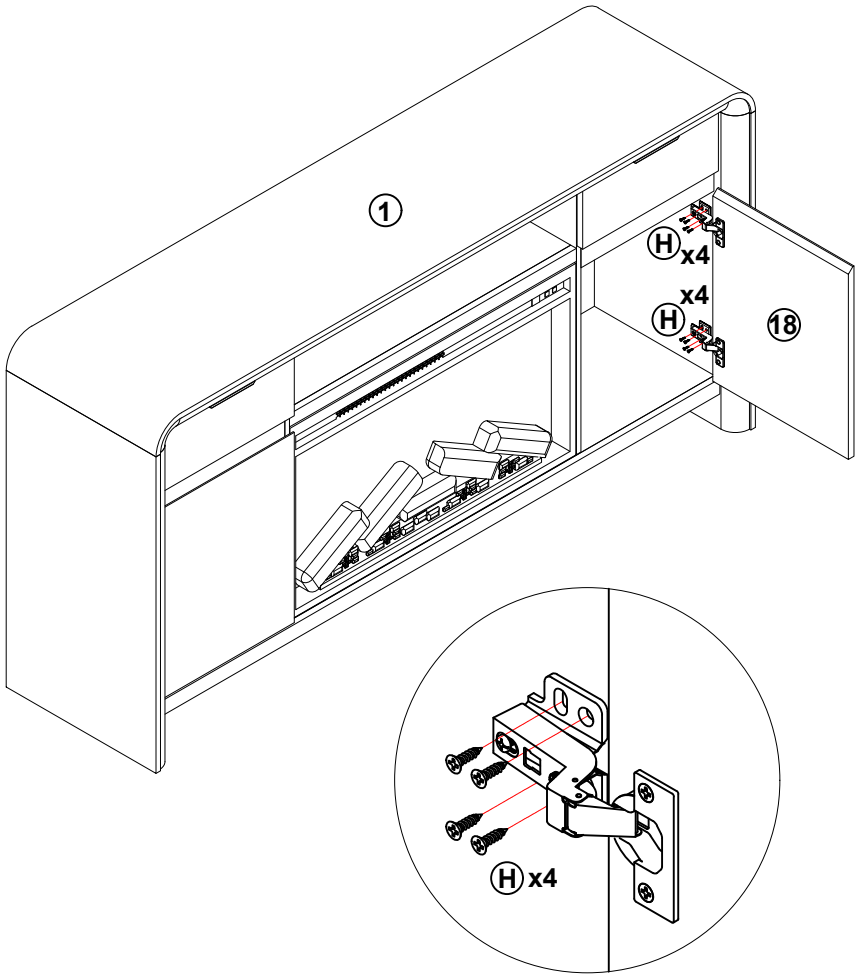


STEP 38

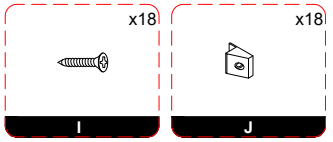

STEP 39

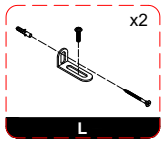

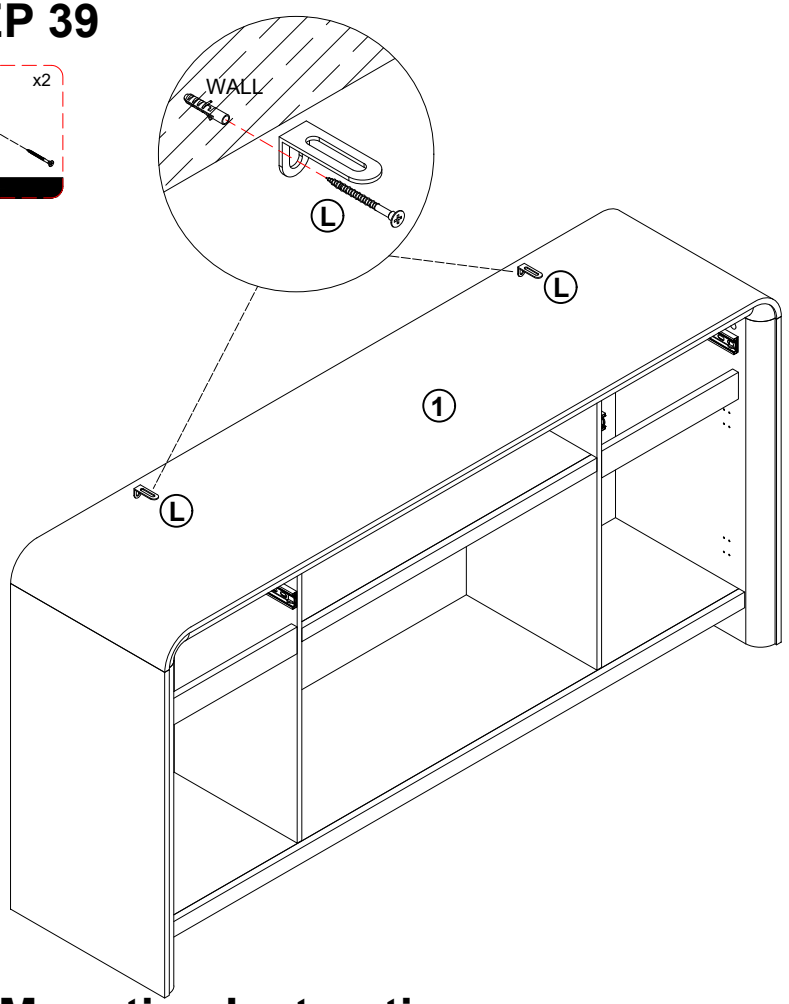

Wall Mounting Instructions


CAUTION — Risk of Furniture Tip-Over. Always anchor this furniture securely to the wall.

- Using the screws provided and a screwdriver, secure the mounting plate(s) to the back of the product .
- Noting the location of the product's mounting plate(s), mark the corresponding positions on the wall for the wall-mounted plate(s). Drill pilot holes at the marked locations into a wall stud.


NOTE: If wall studs are not available, drill holes slightly smaller than the drywall anchors. Insert each anchor until its flange is flush with the wall.


- Using a screwdriver, secure the mounting bracket(s) to the wall stud or to the drywall anchors using the screws provided.
- Place the product in its final position. Secure one end of the "L"-shaped anti-tip hardware to the wall mounting hole and the product mounting plate, adjusting to remove any slack. Do not overtighten.

STEP 40

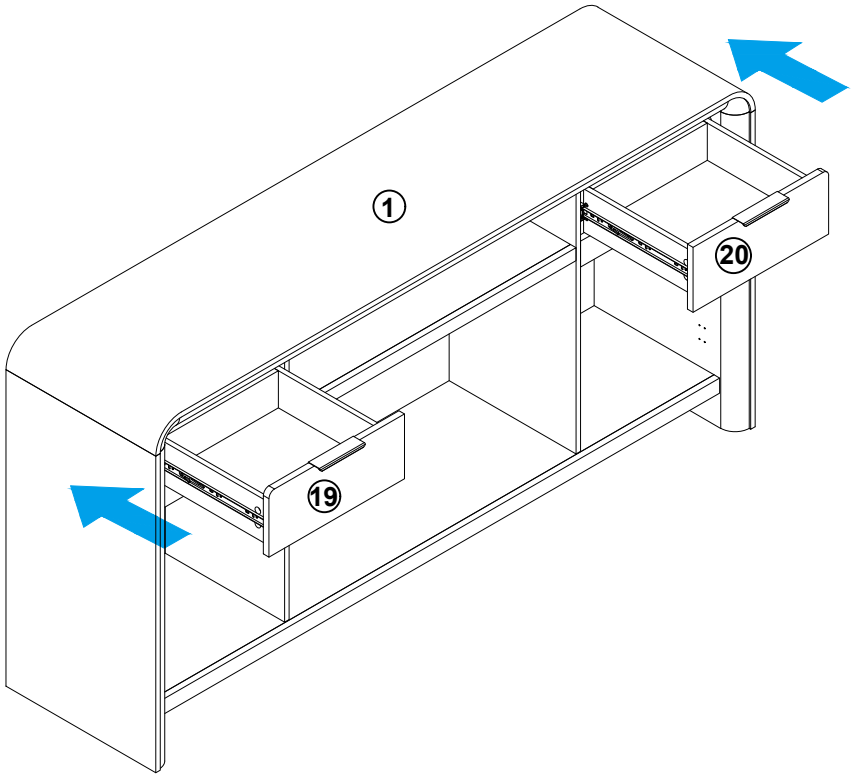



STEP 41

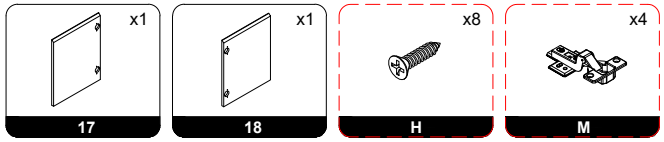

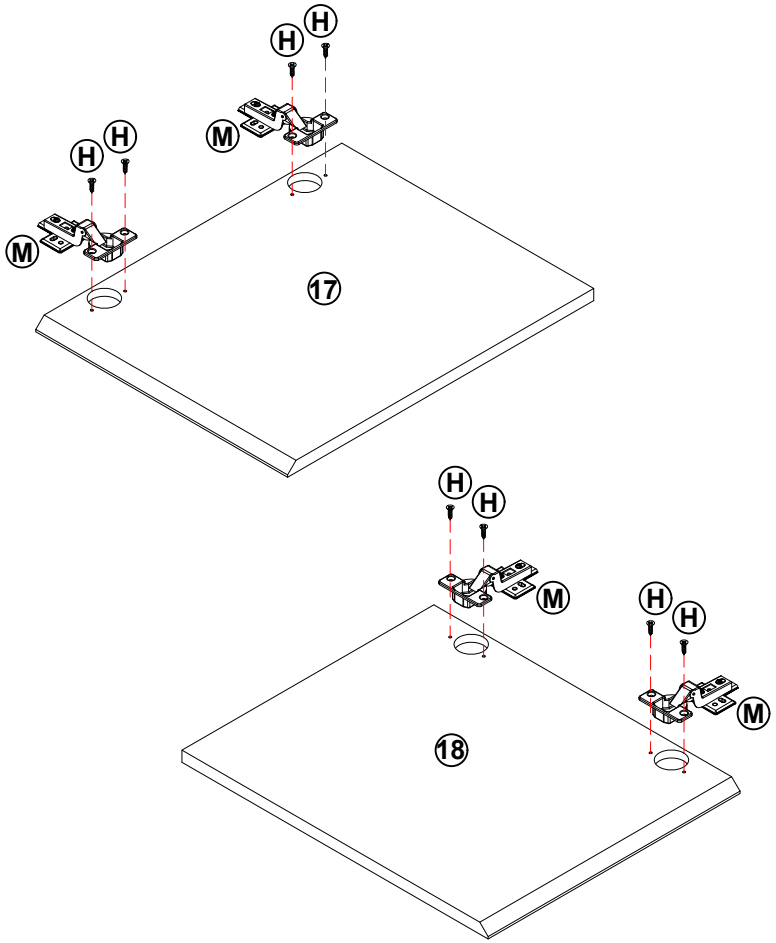



STEP 42

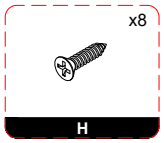

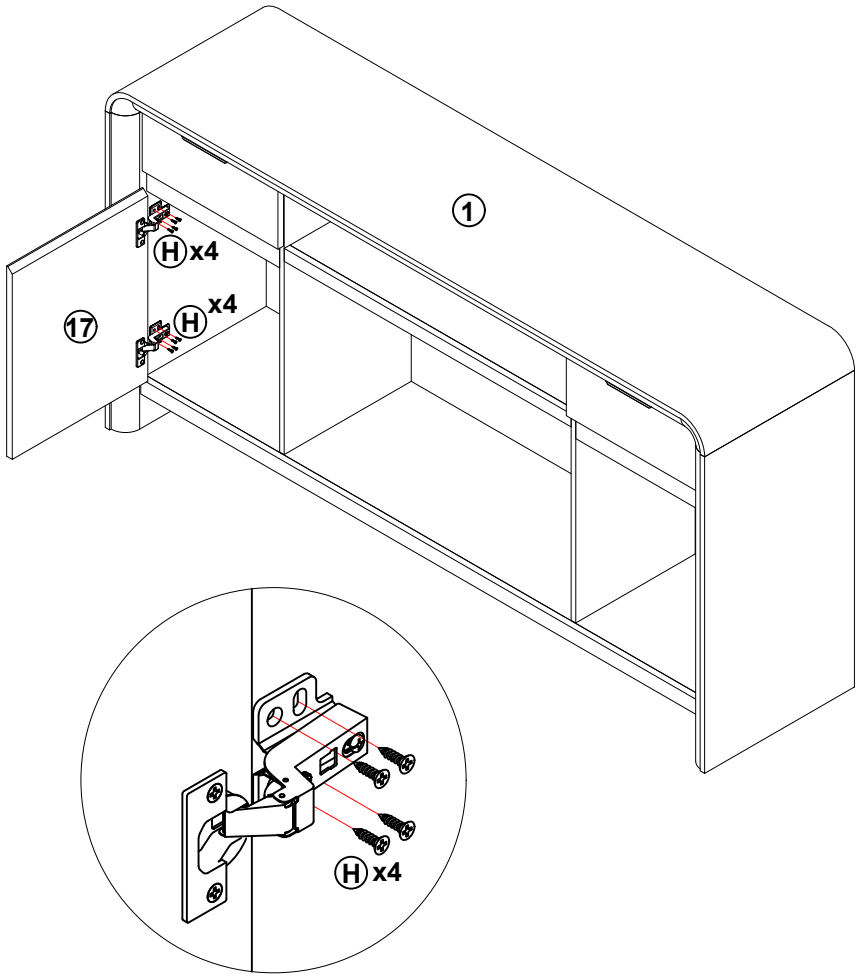


STEP 43

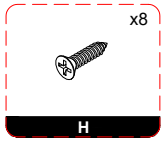

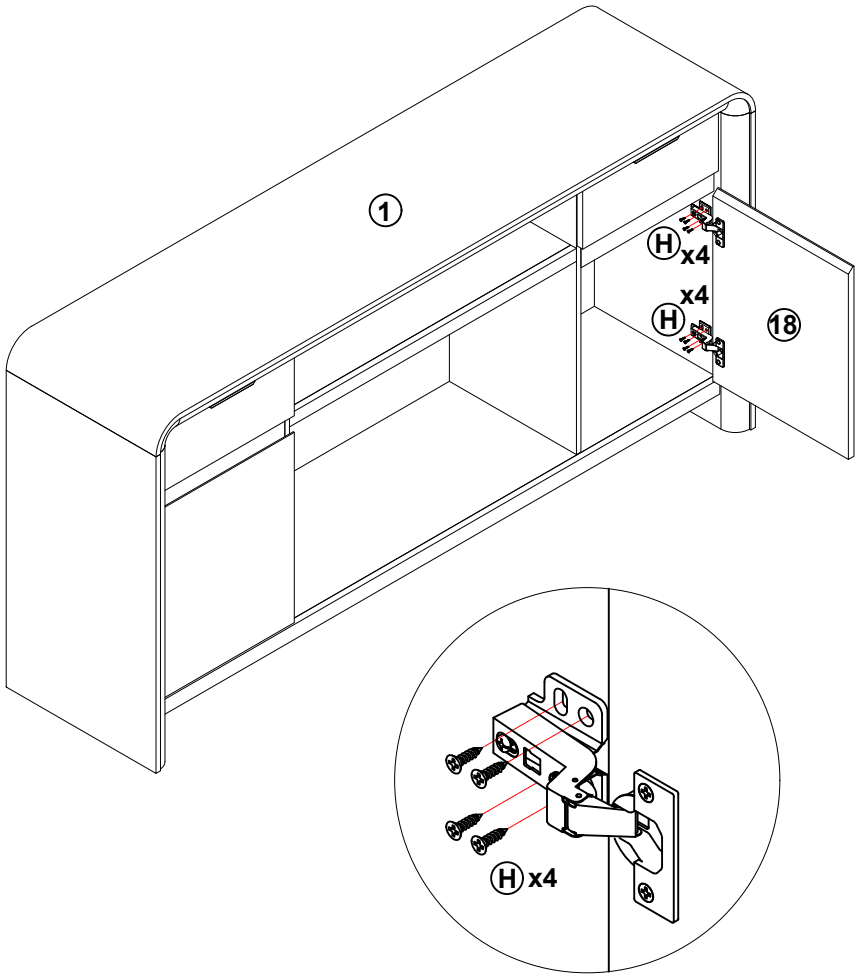


STEP 44


Note:
Loosen hinge screws slightly. Adjust door up/down, front/back, left/ rightfor proper alignment, then retighten screws.

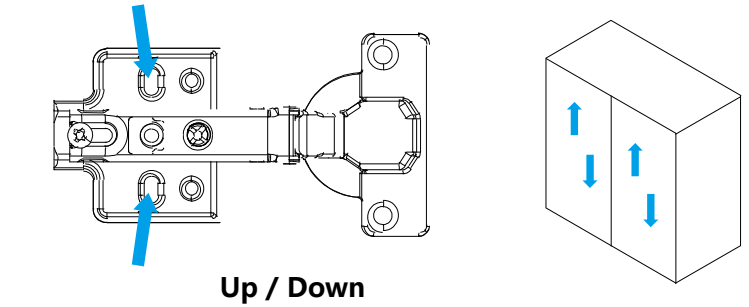

Up / Down

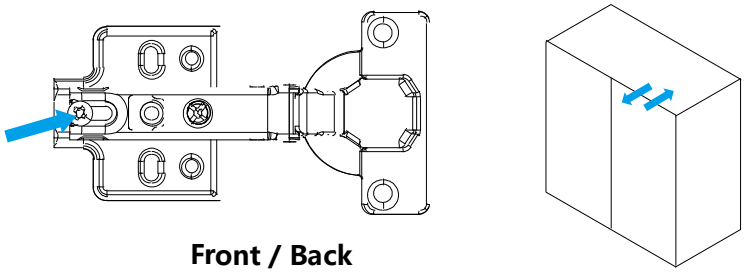

Front / Back

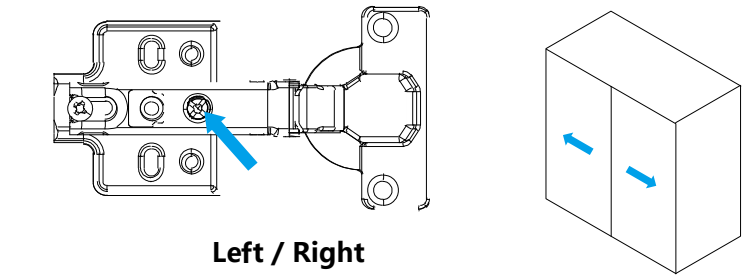

Left / Right

MAINTENANCE

- Wipe the surface with a soft, damp cloth and dry immediately.
- Avoid using chemical cleaners, solvents, or abrasive pads that could damage the finish.
- Do not place hot, wet, or heavy items directly on the surface.
- Keep the furniture away from direct sunlight and excessive humidity to prevent warping or discoloration.
- Check and tighten all screws periodically to maintain stability.

Warranty & Support

Limited Warranty

This product is backed by a limited warranty that covers manufacturing defects under normal household use.

Customer Service

If you have received a damaged product or are missing parts, please contact us directly for assistance. Do not return the product to the store. When contacting us, please provide the following information:

- Order number or proof of purchase
- Clear photos showing the issue or damaged parts
- Product model number (as listed in this manual)

✉️ Email: info@serviceprohelp.com

We will respond promptly with instructions for replacement parts or other solutions.

Thank you for choosing our product. Enjoy your new furniture!