

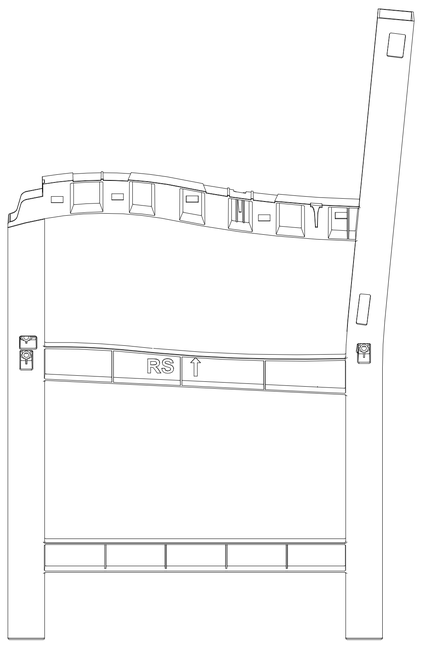




RS(X1)

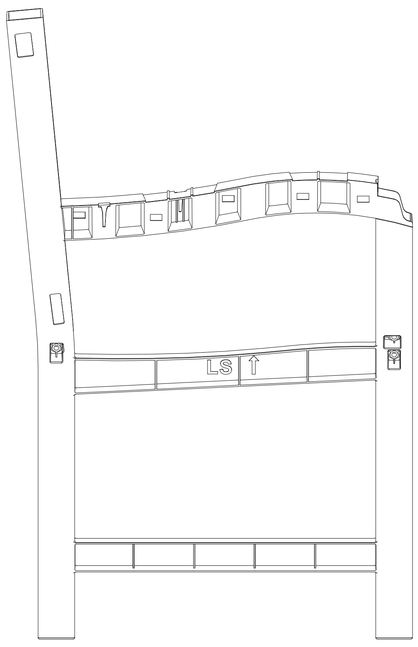



LS(X1)

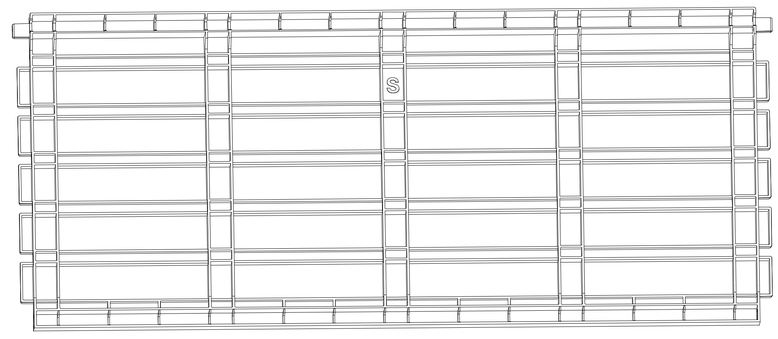



S(X1)

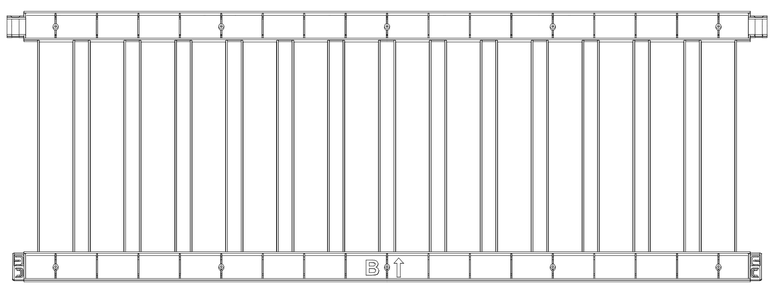



B(X1)

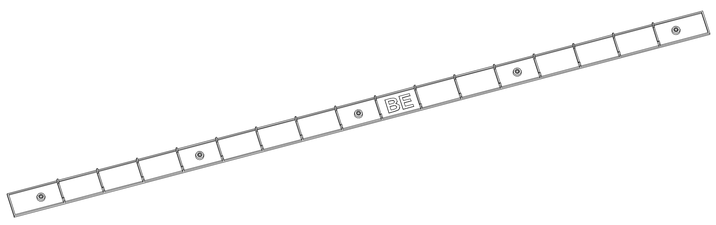



BE(X2)

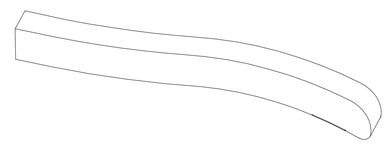


L(X1)

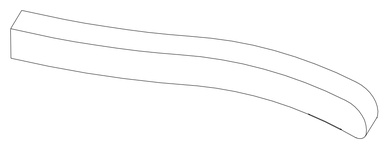


R(X1)

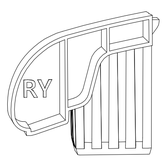

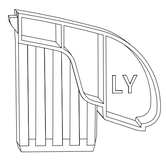




RY(X1) LY(X1)

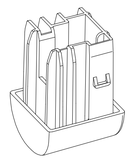

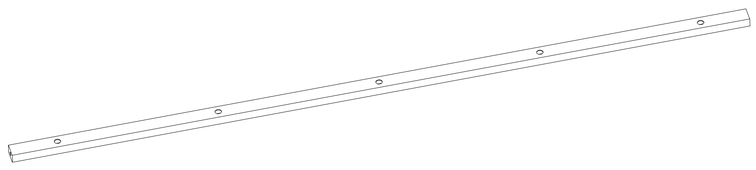


RP(X1) LP(X1)




1170x25x15(mm)

(X1)

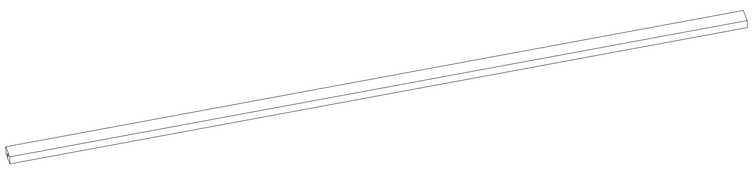


1170x25x15(mm)

(X2)




M6x40mm

(X6)



(X2)




M4x13mm

(X10)


Installation instructions for double chair

**Please note: After assembly, it cannot be disassembled. Please confirm that the goods are satisfactory before assembling. After assembly, it cannot be returned**

1

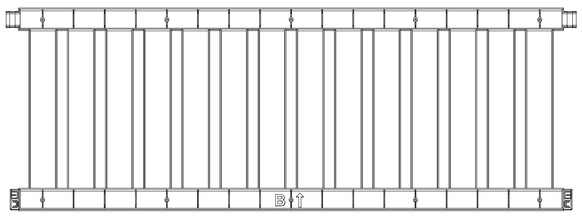



B(X1)

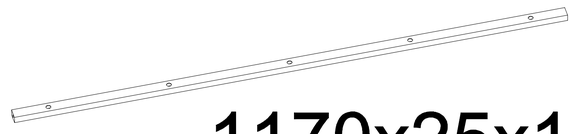


(X1)


1170x25x15(mm)

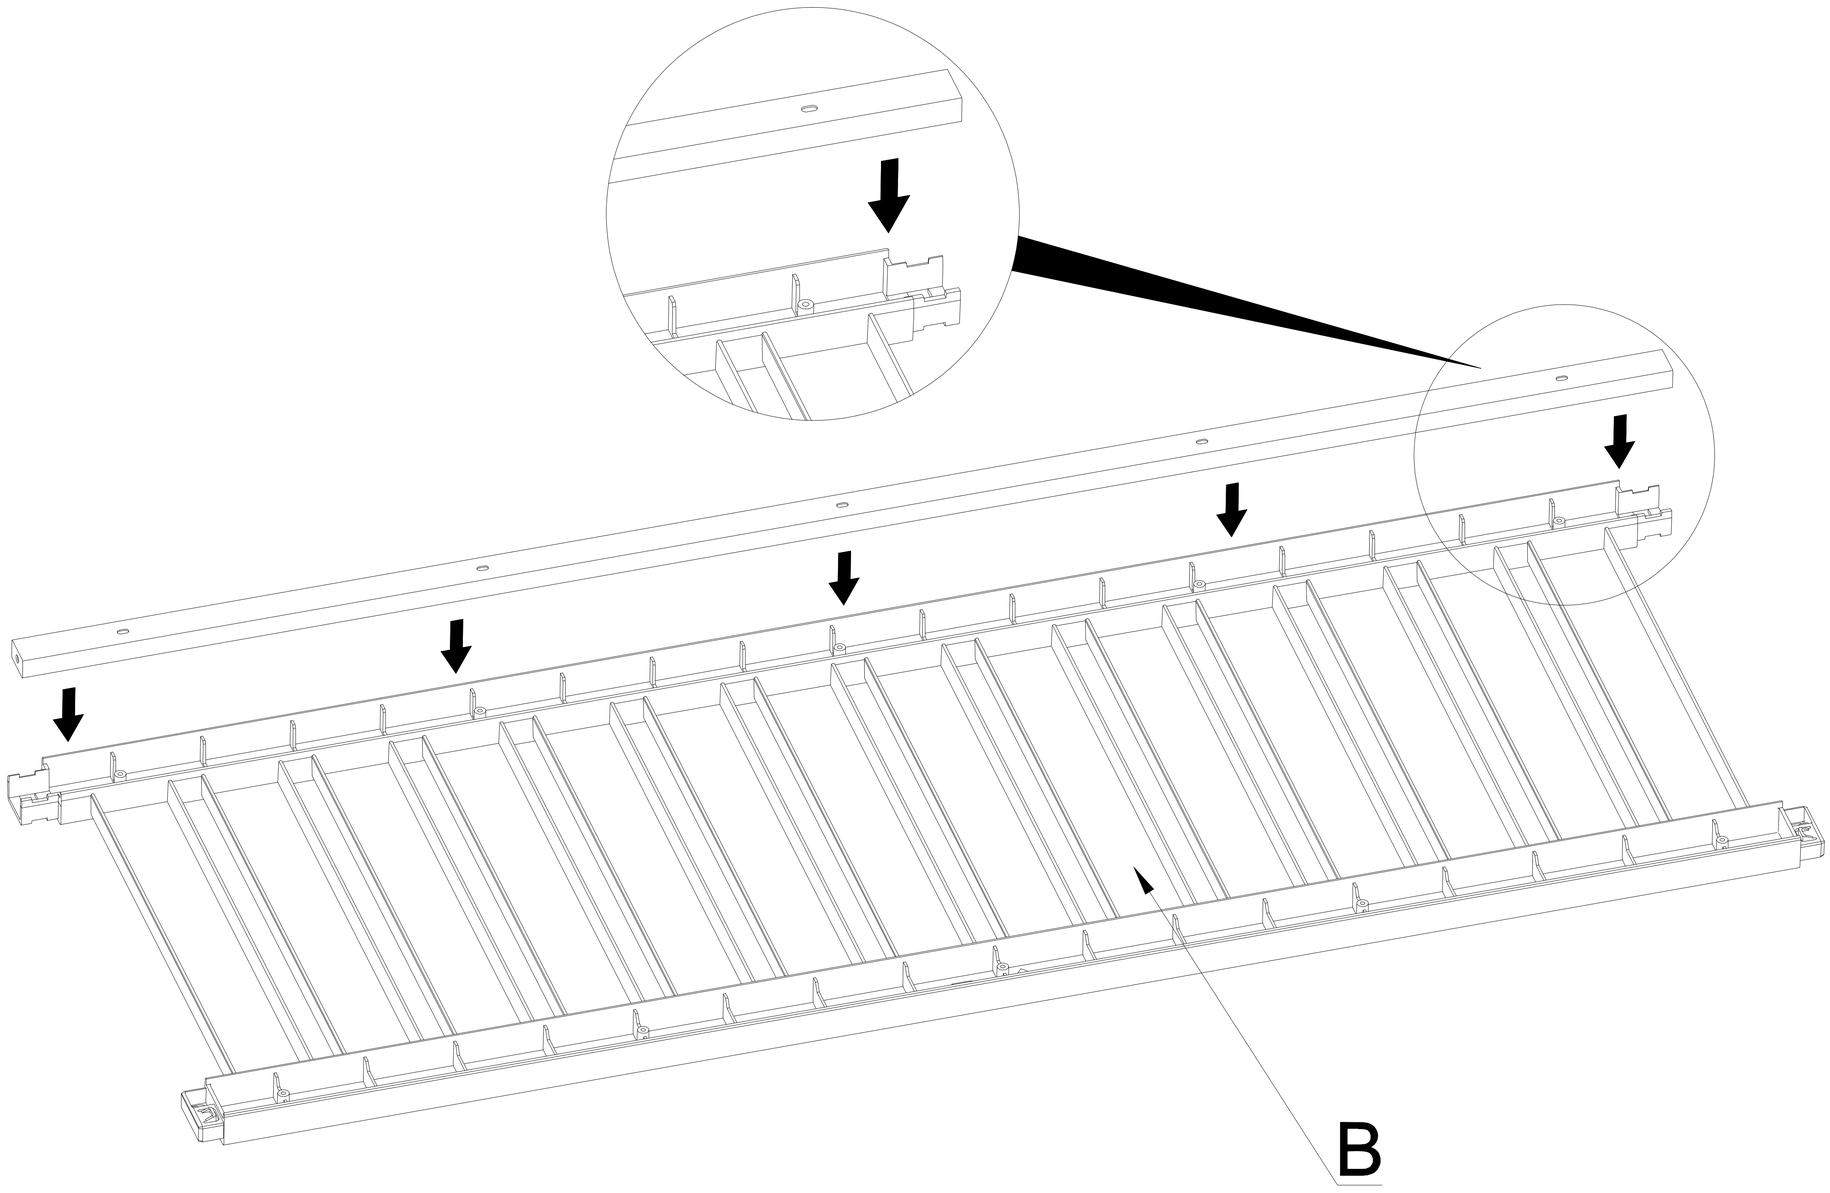


2

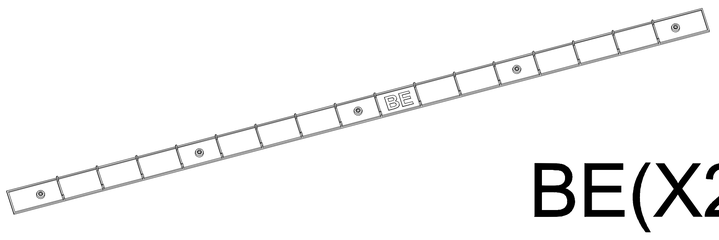



BE(X2)




M4x13mm


(X10)

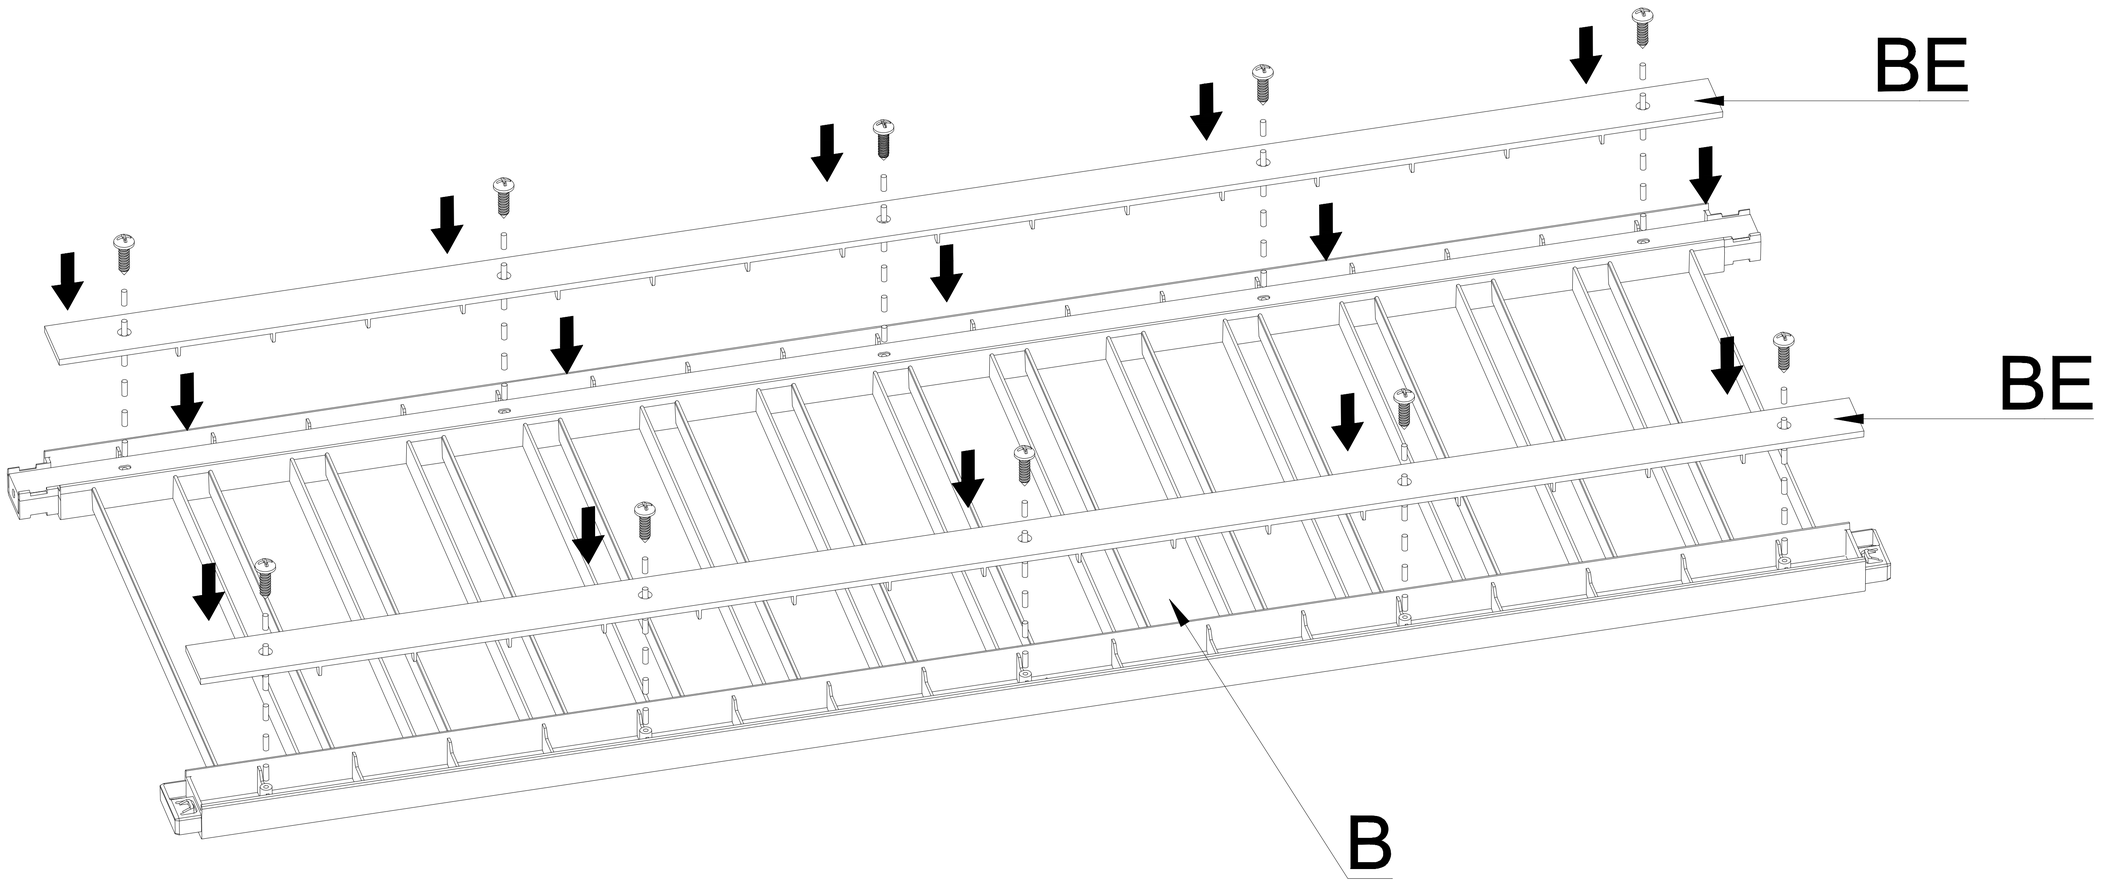

3

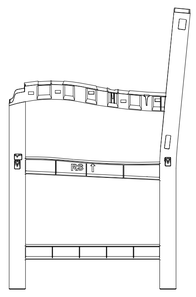


RS(X1)

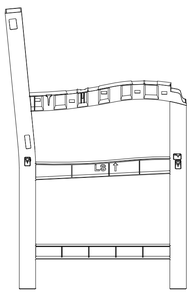



LS(X1)





RY(X1)





LY(X1)

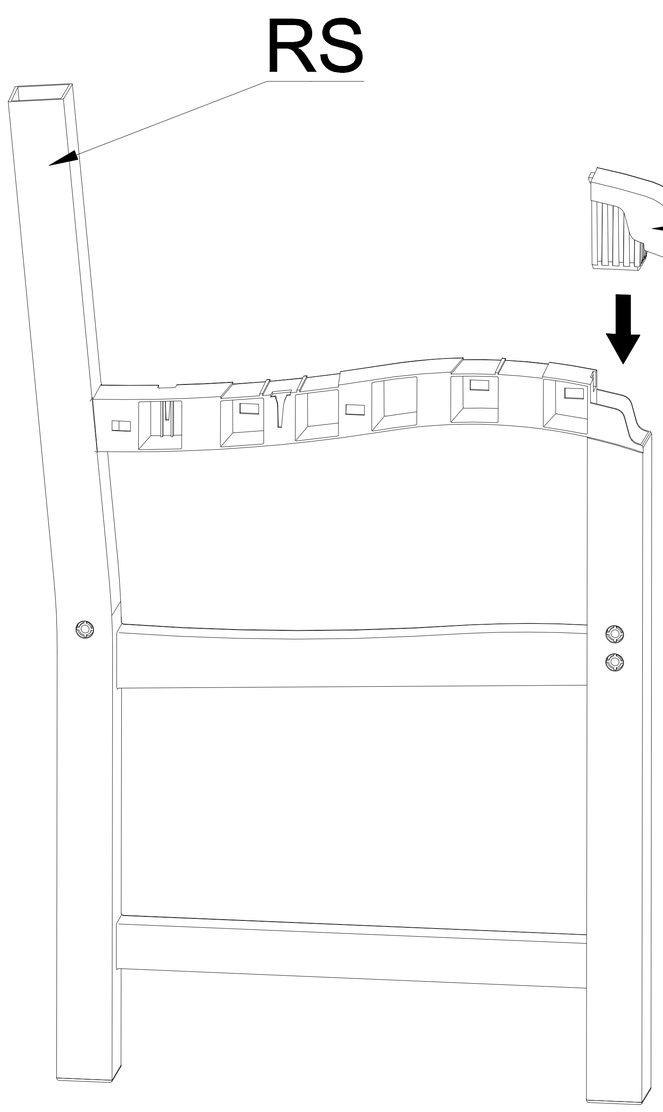


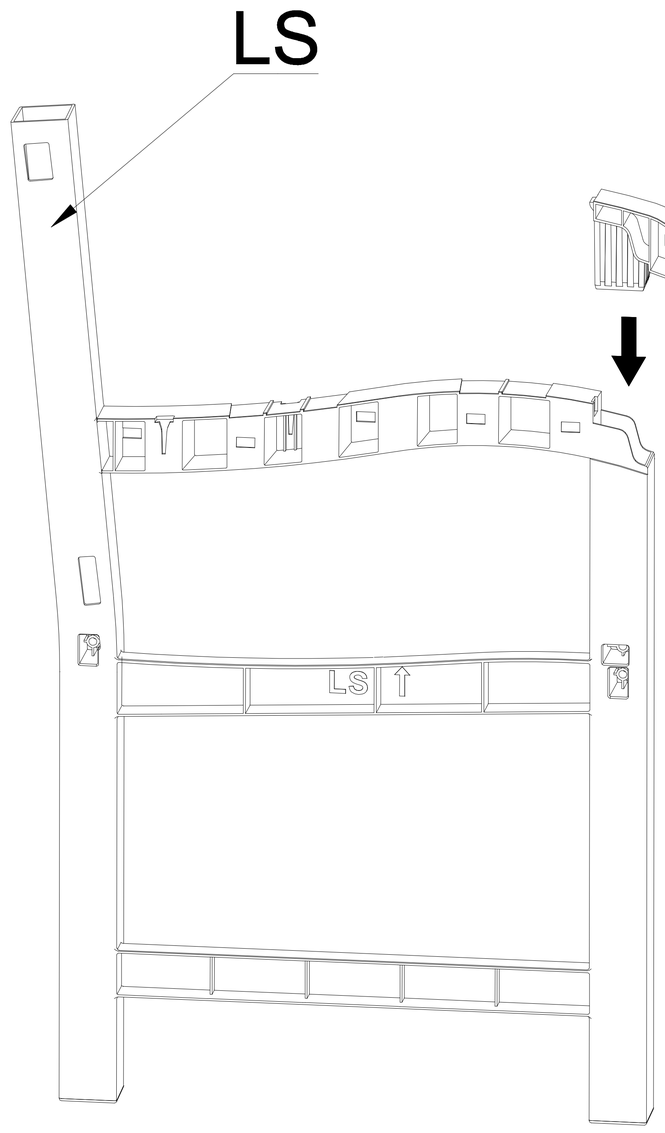

4

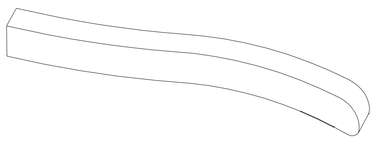


L(X1)

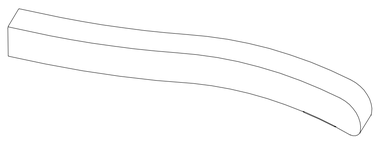


R(X1)

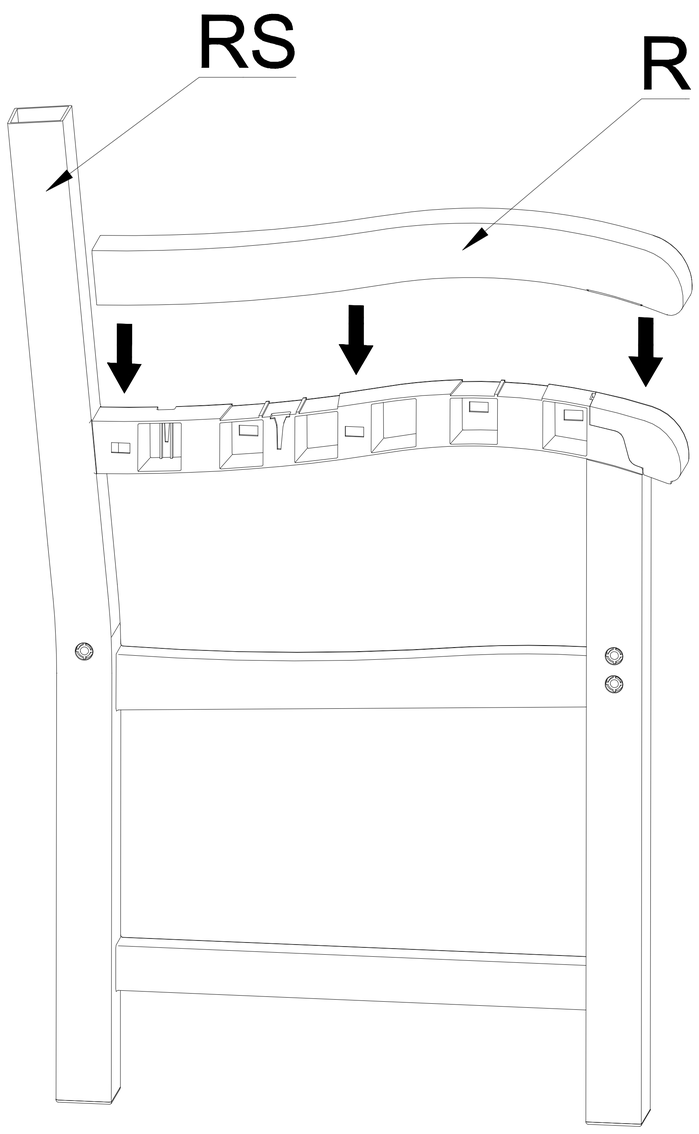


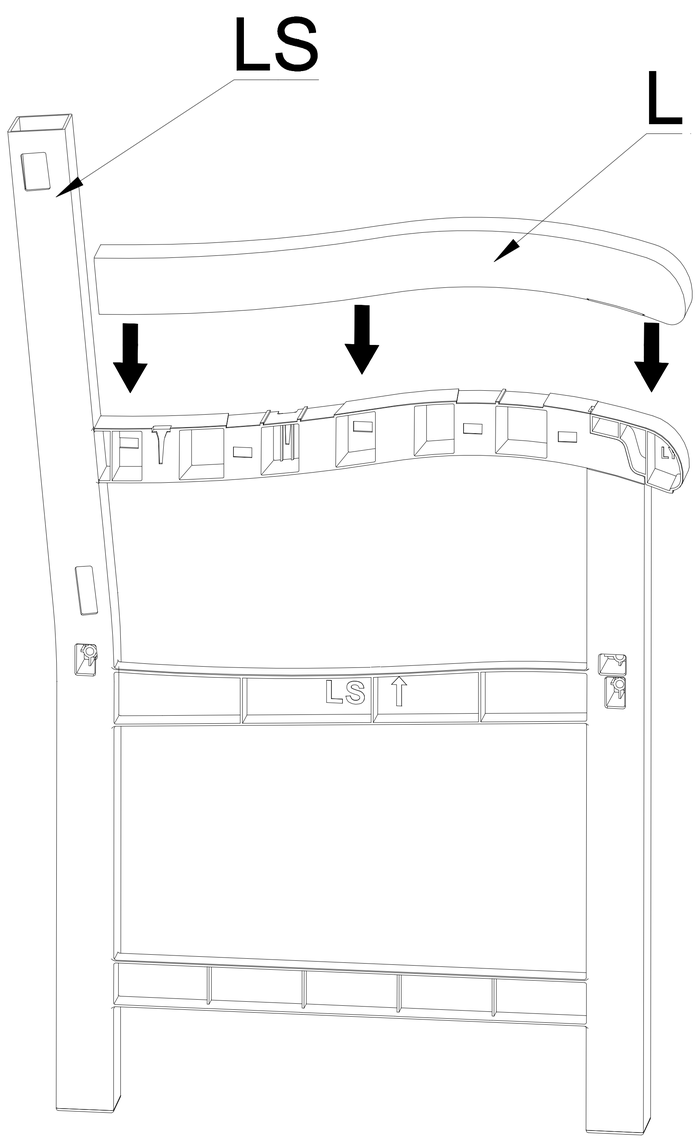
5

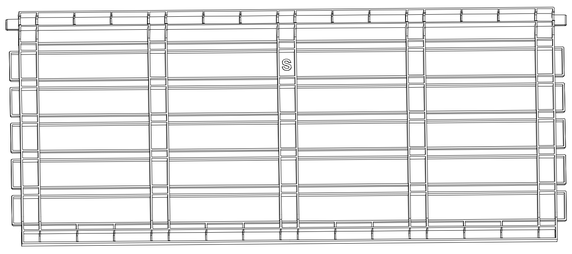


S(X1)




(X2)

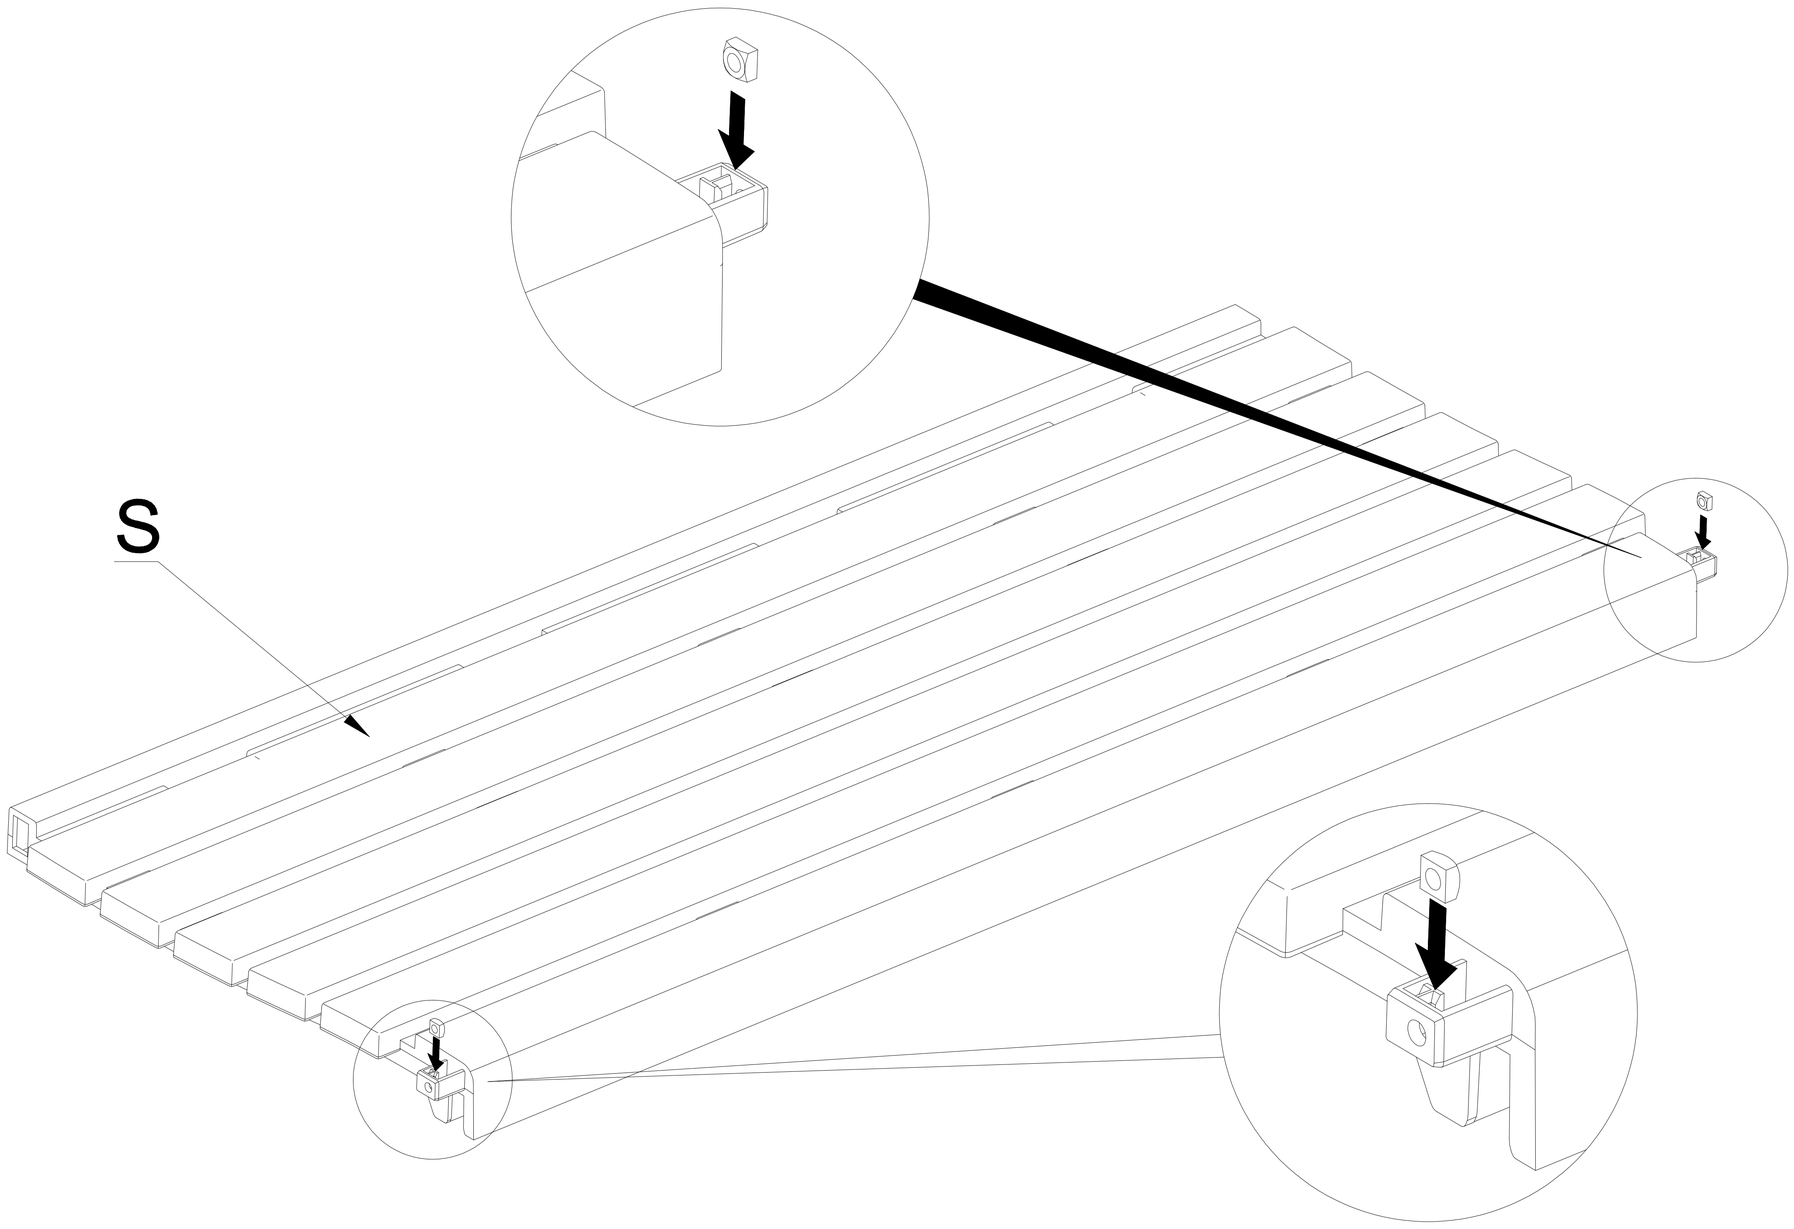


6

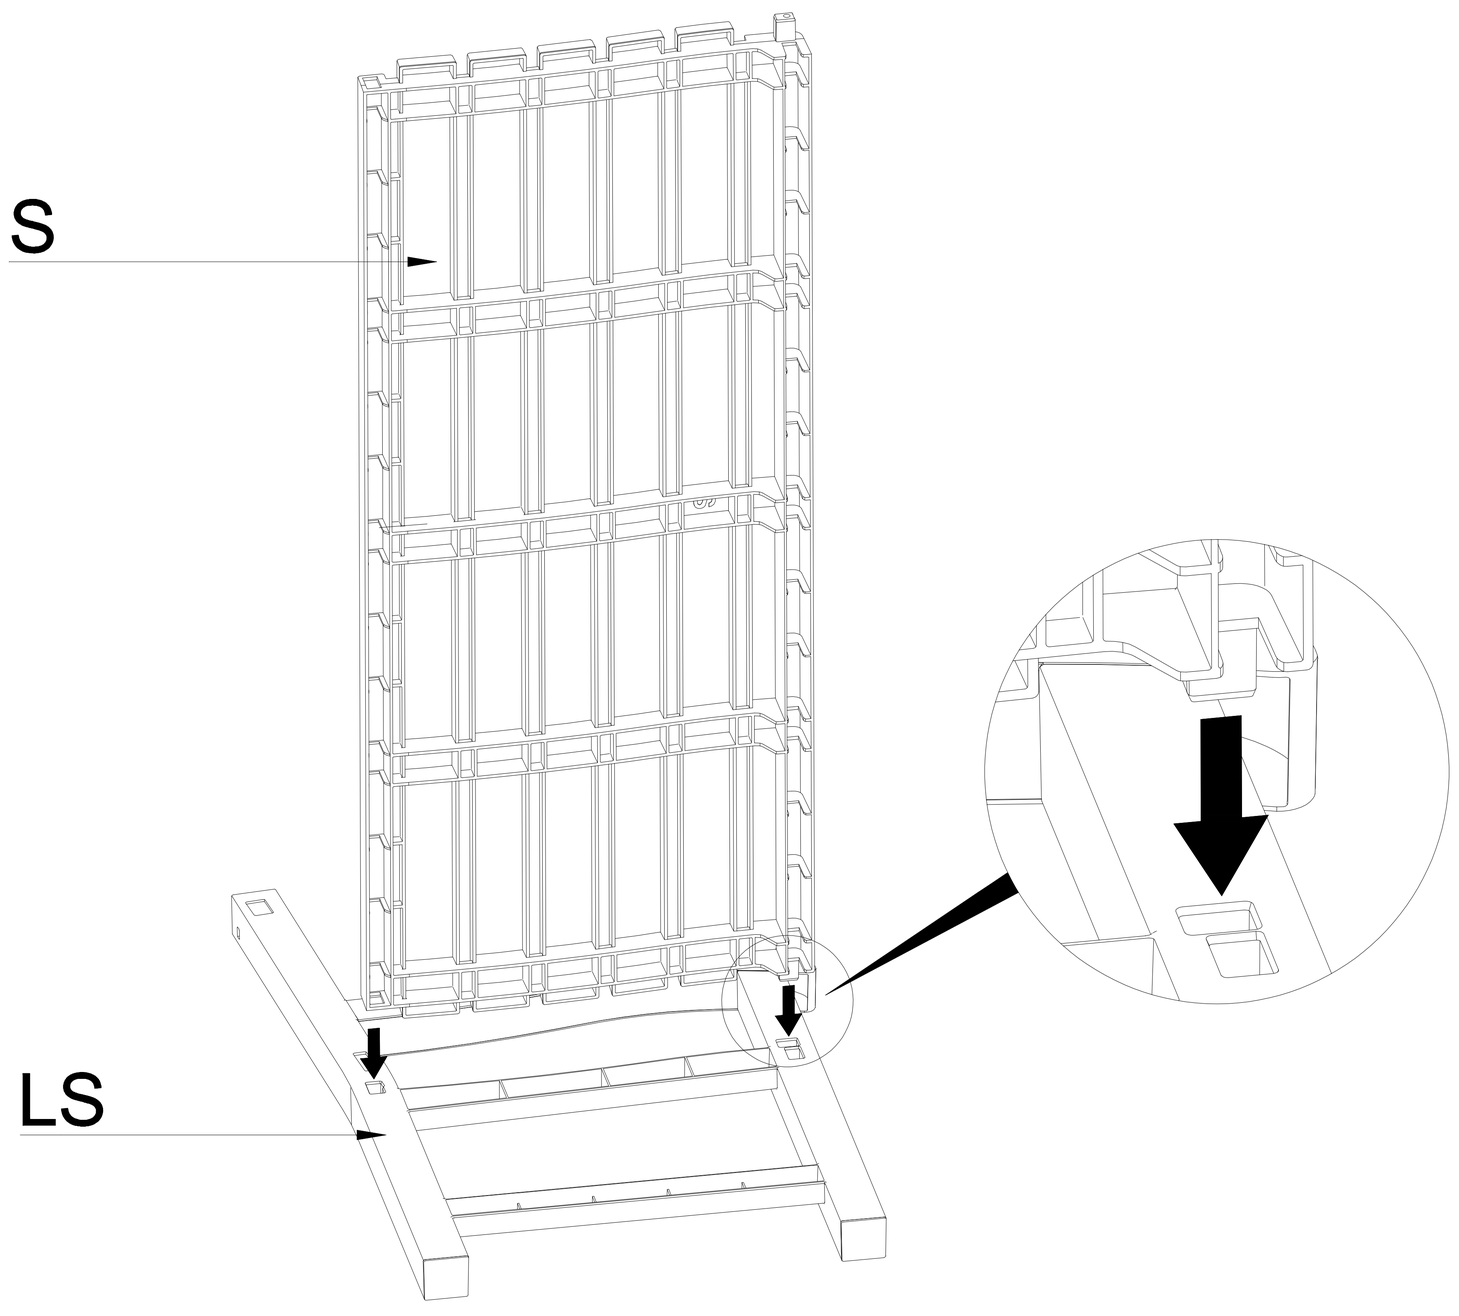


7

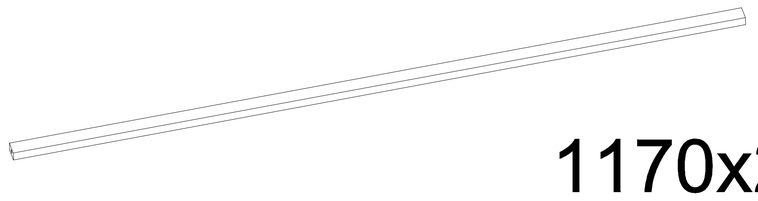


(X2)


1170x25x15(mm)

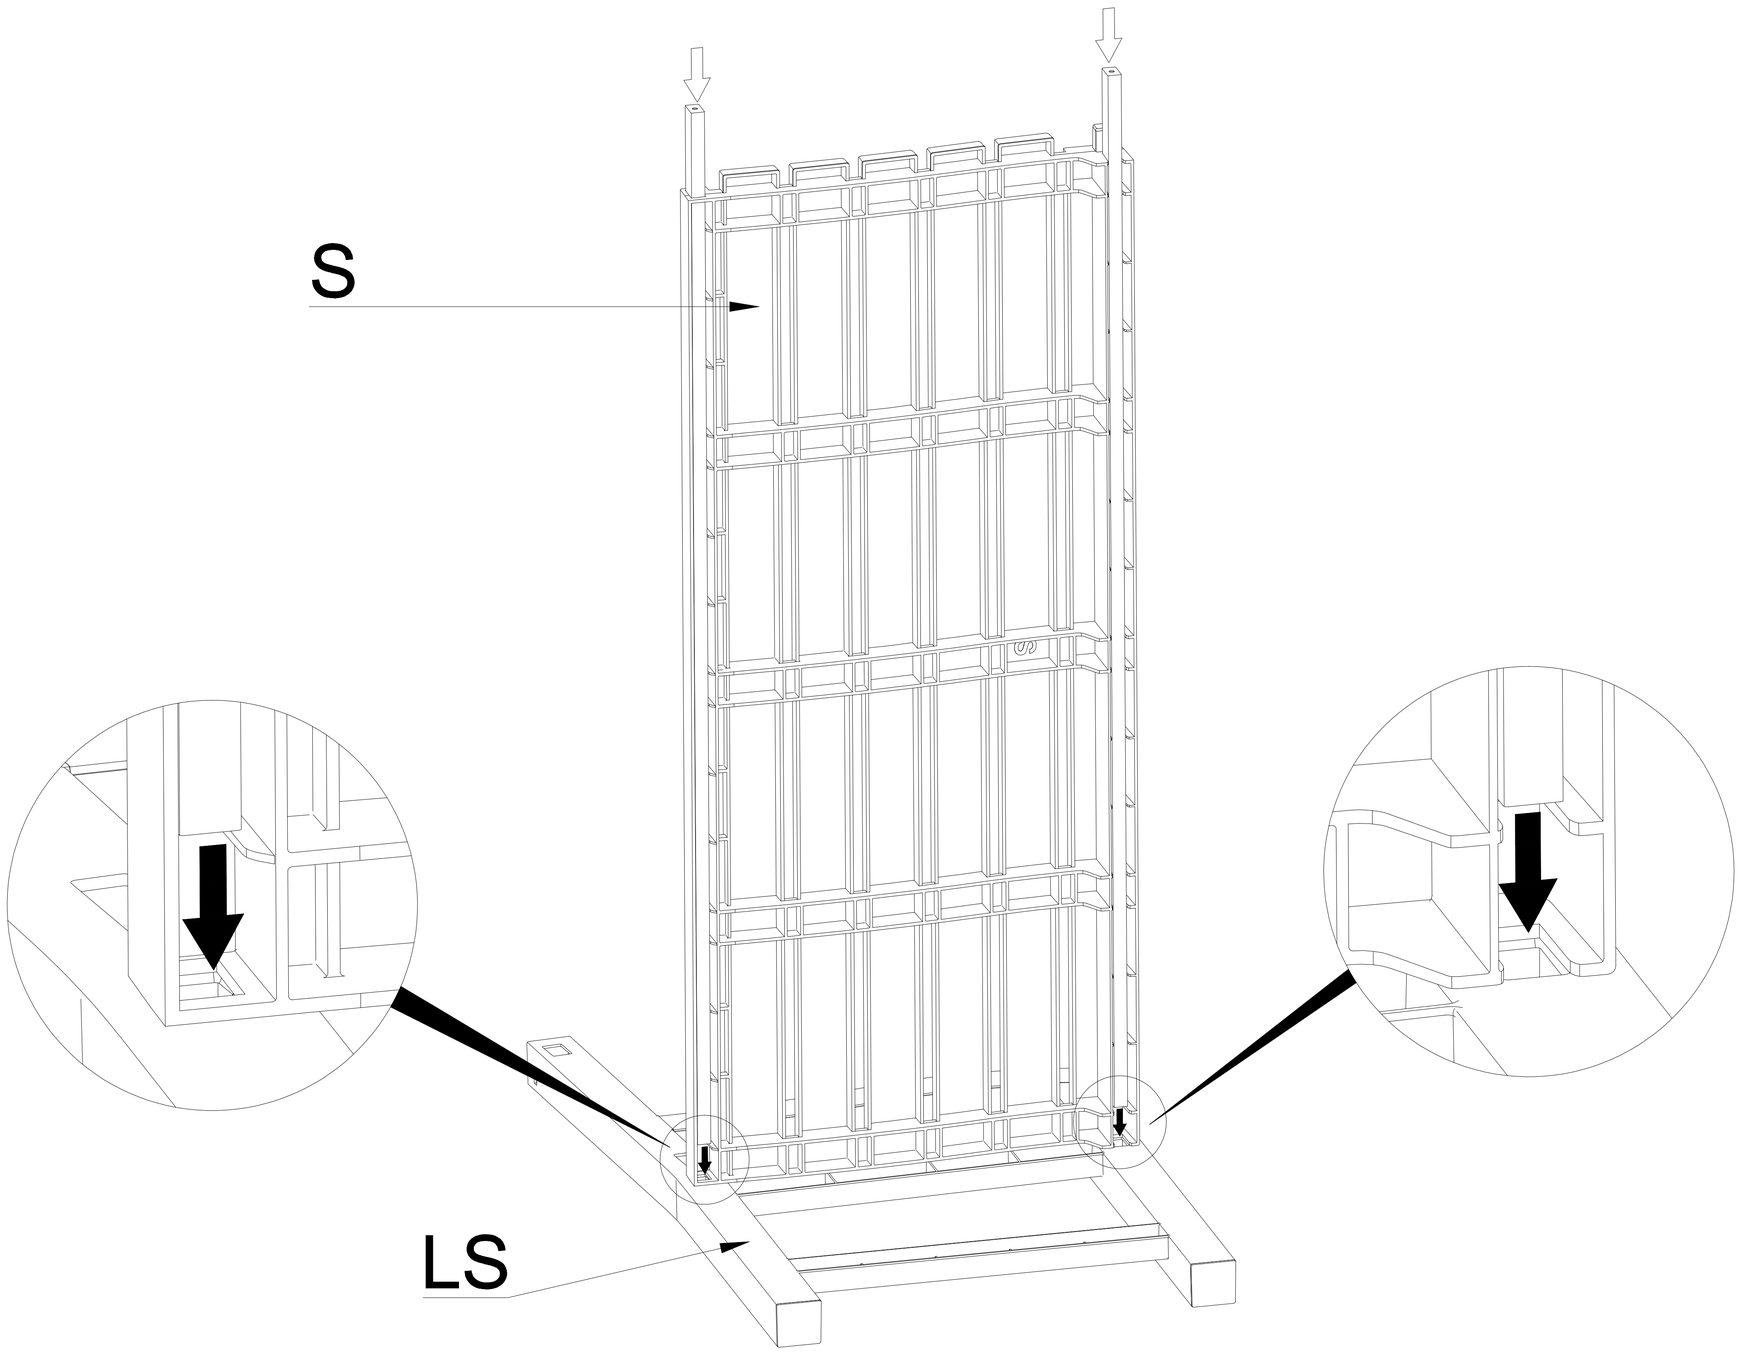



8

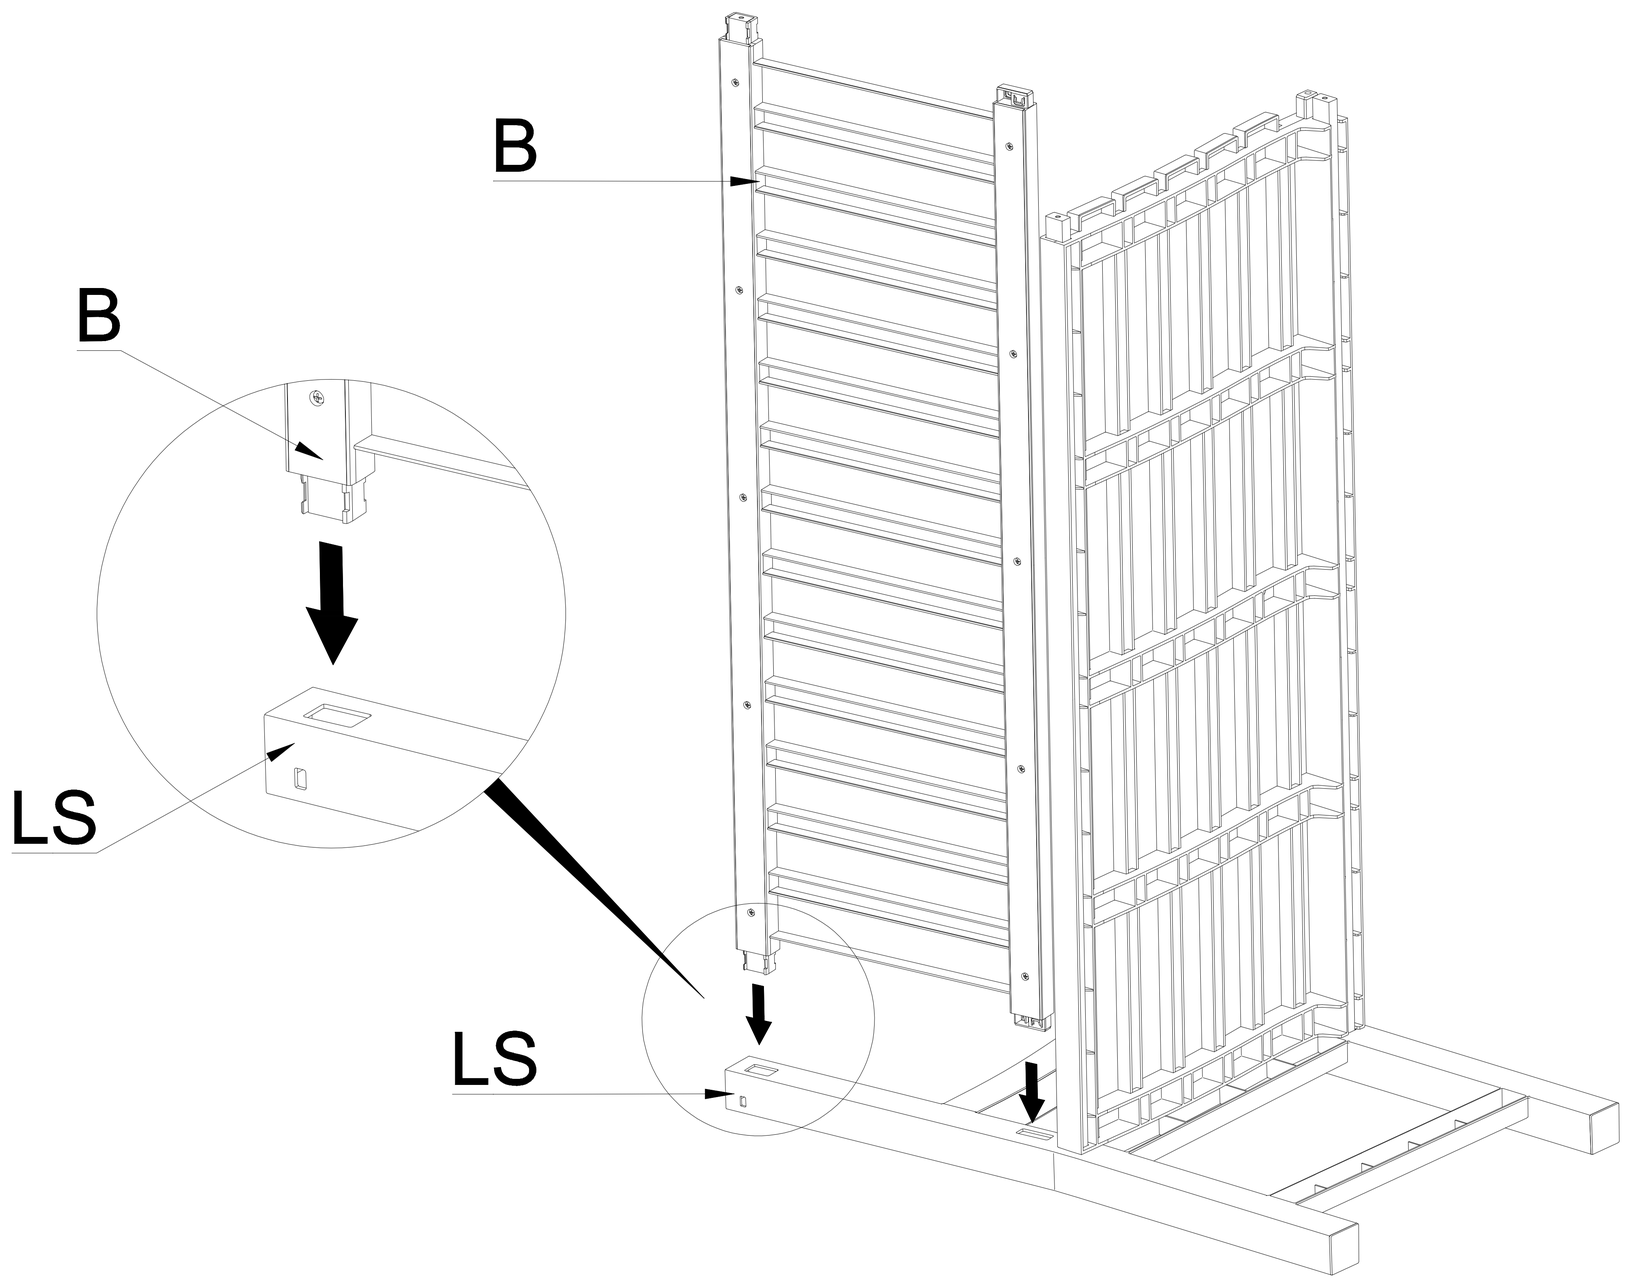

9

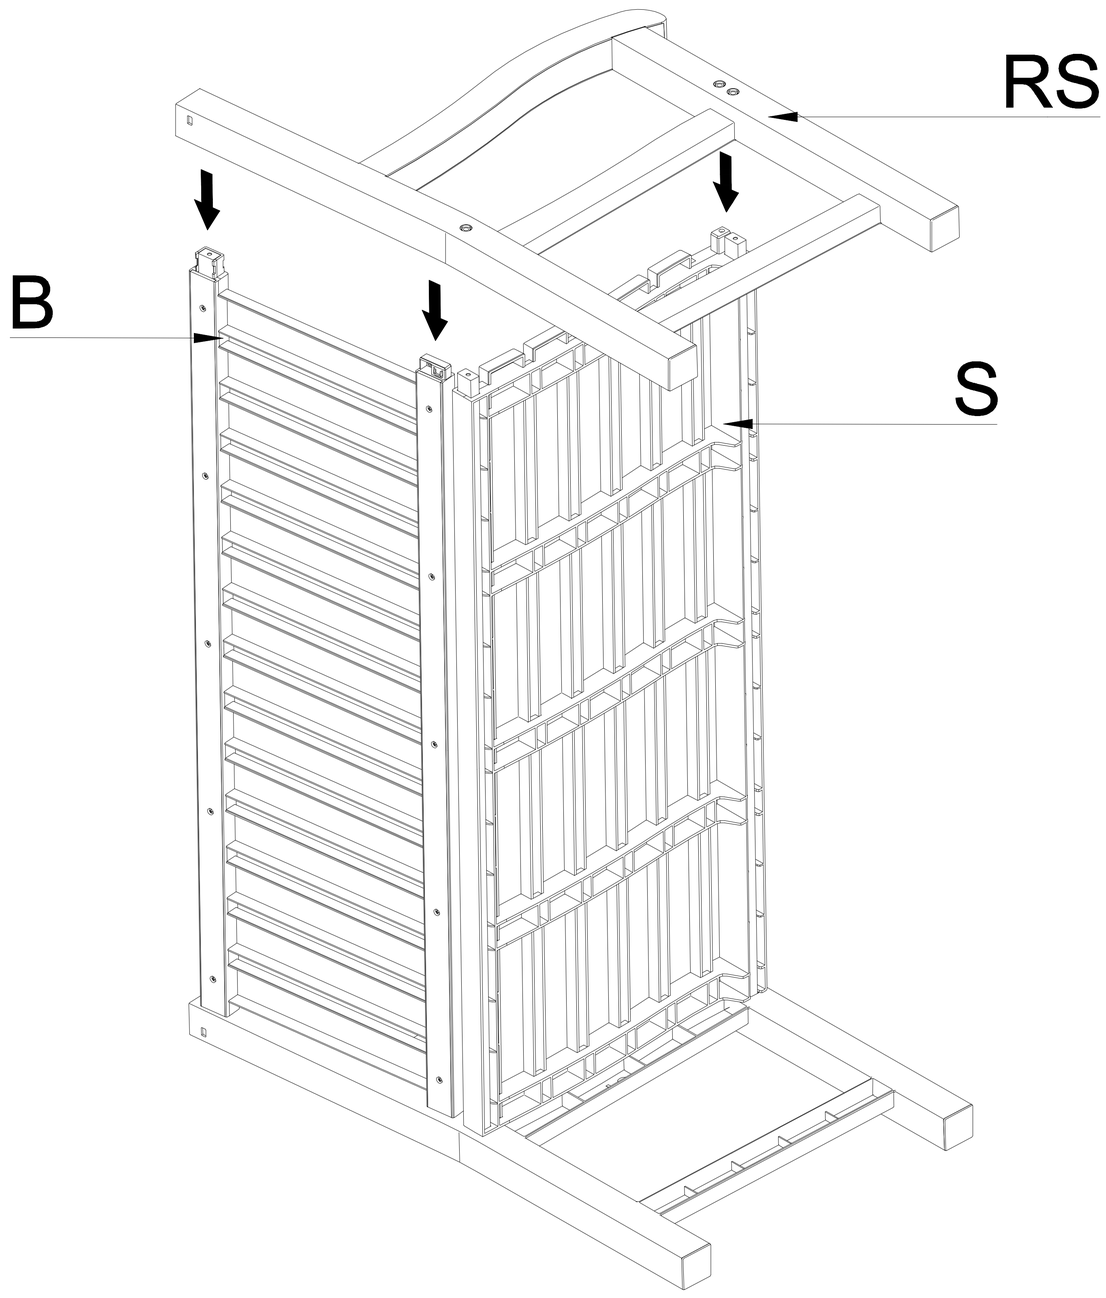



10




M6x40mm

(X3)

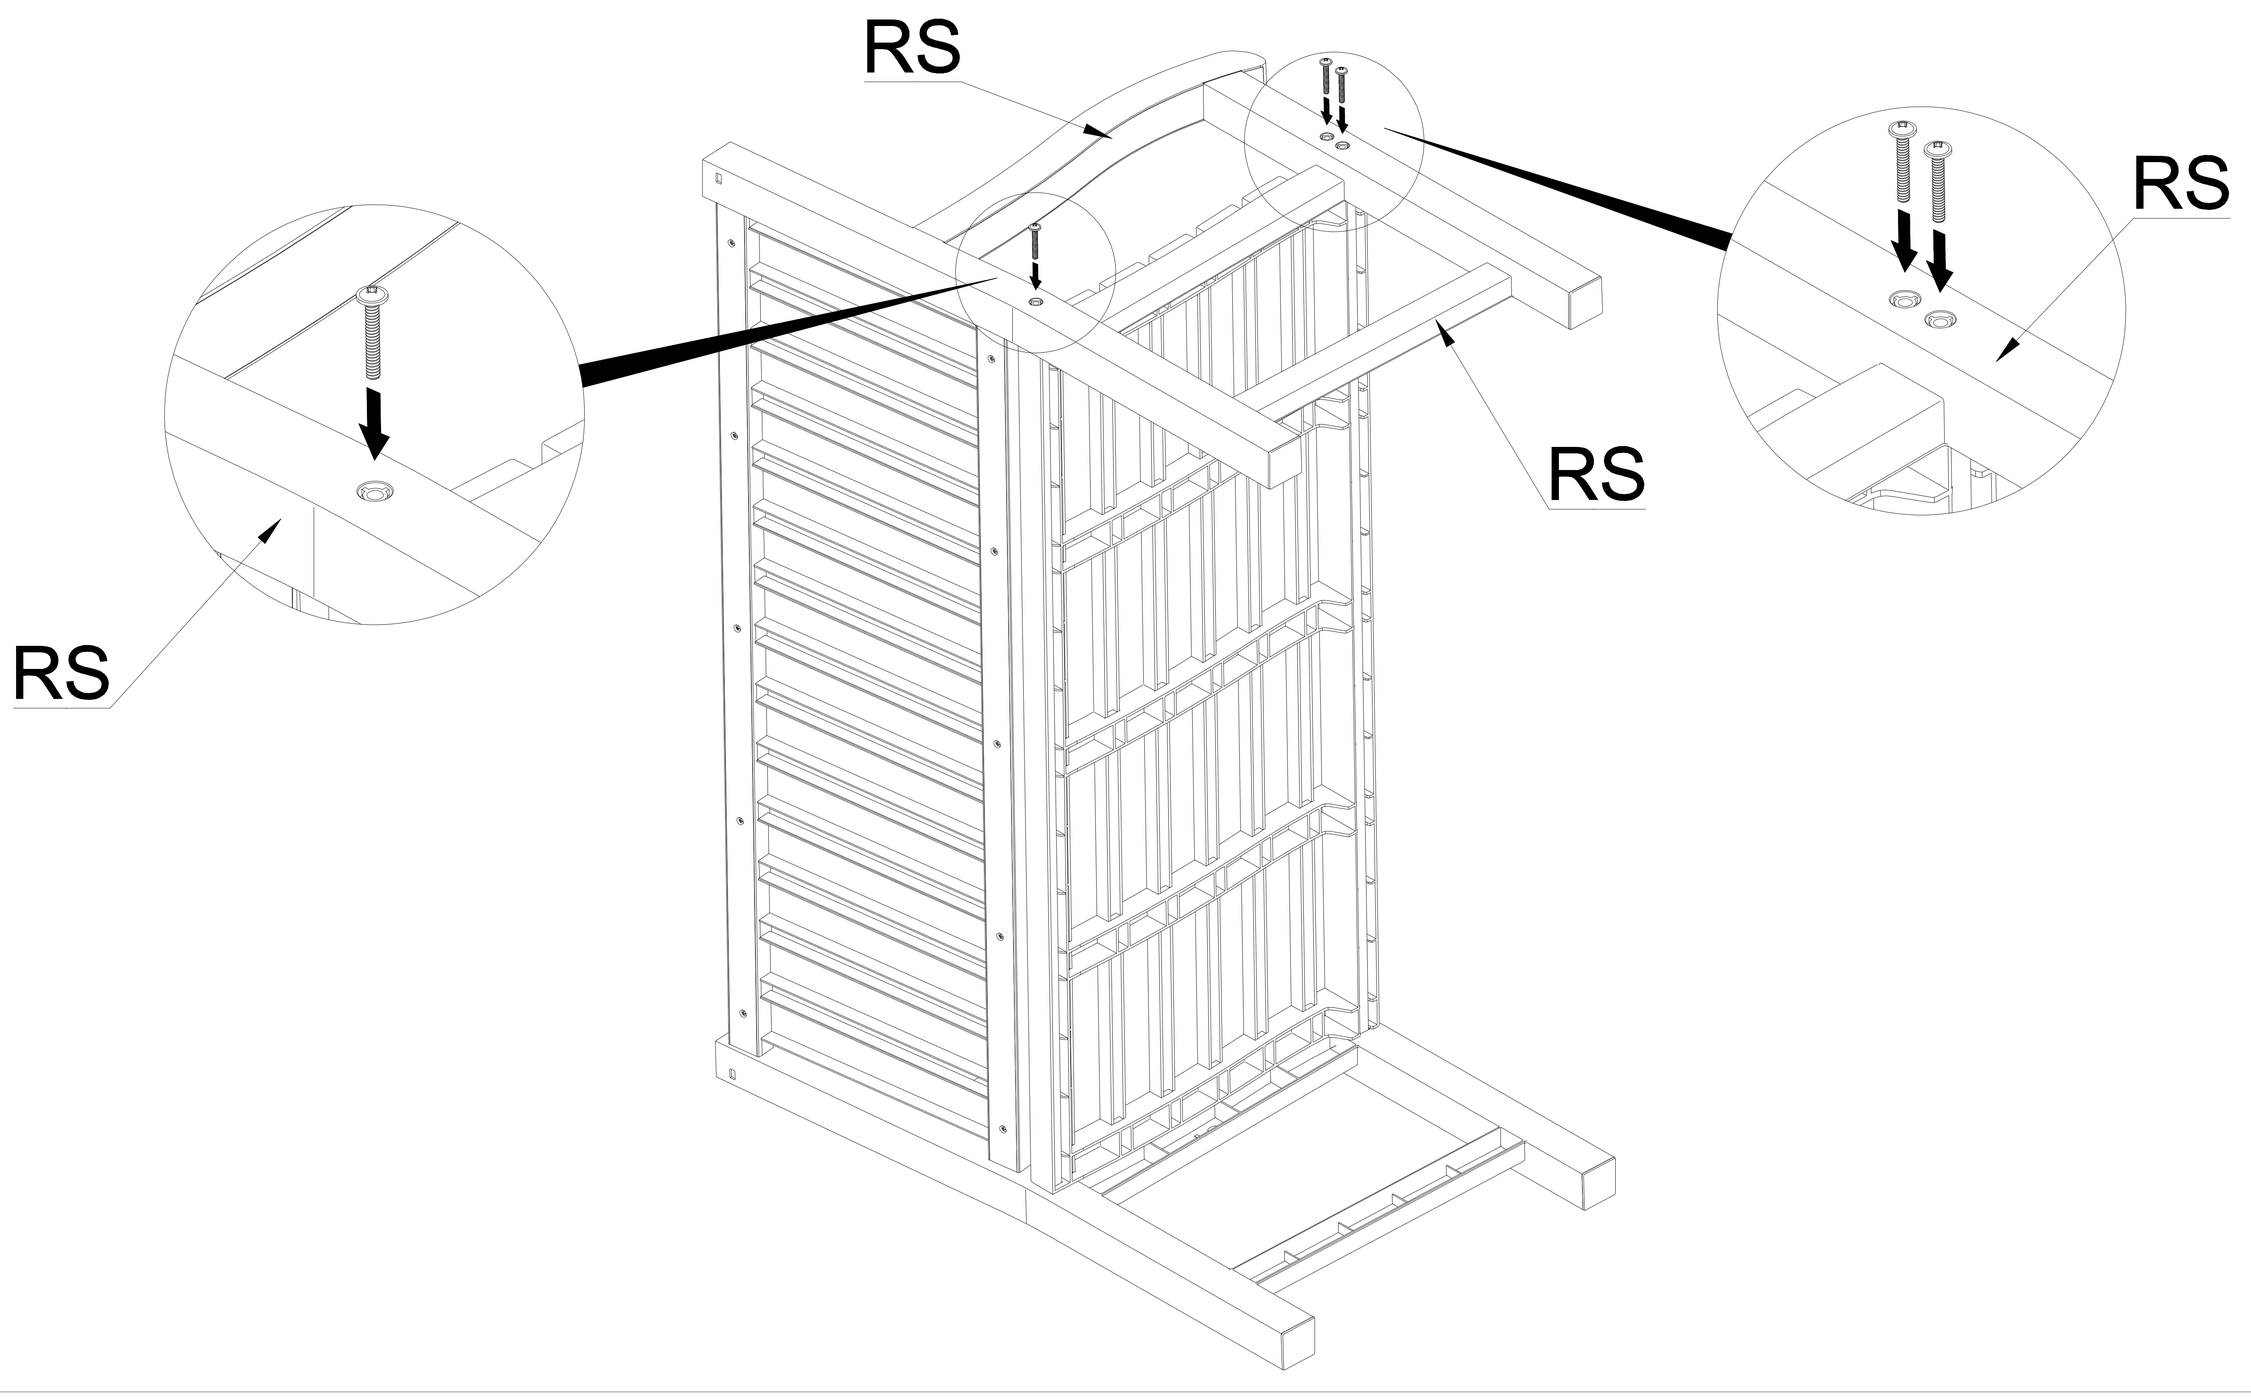


11



M6x40mm


(X3)

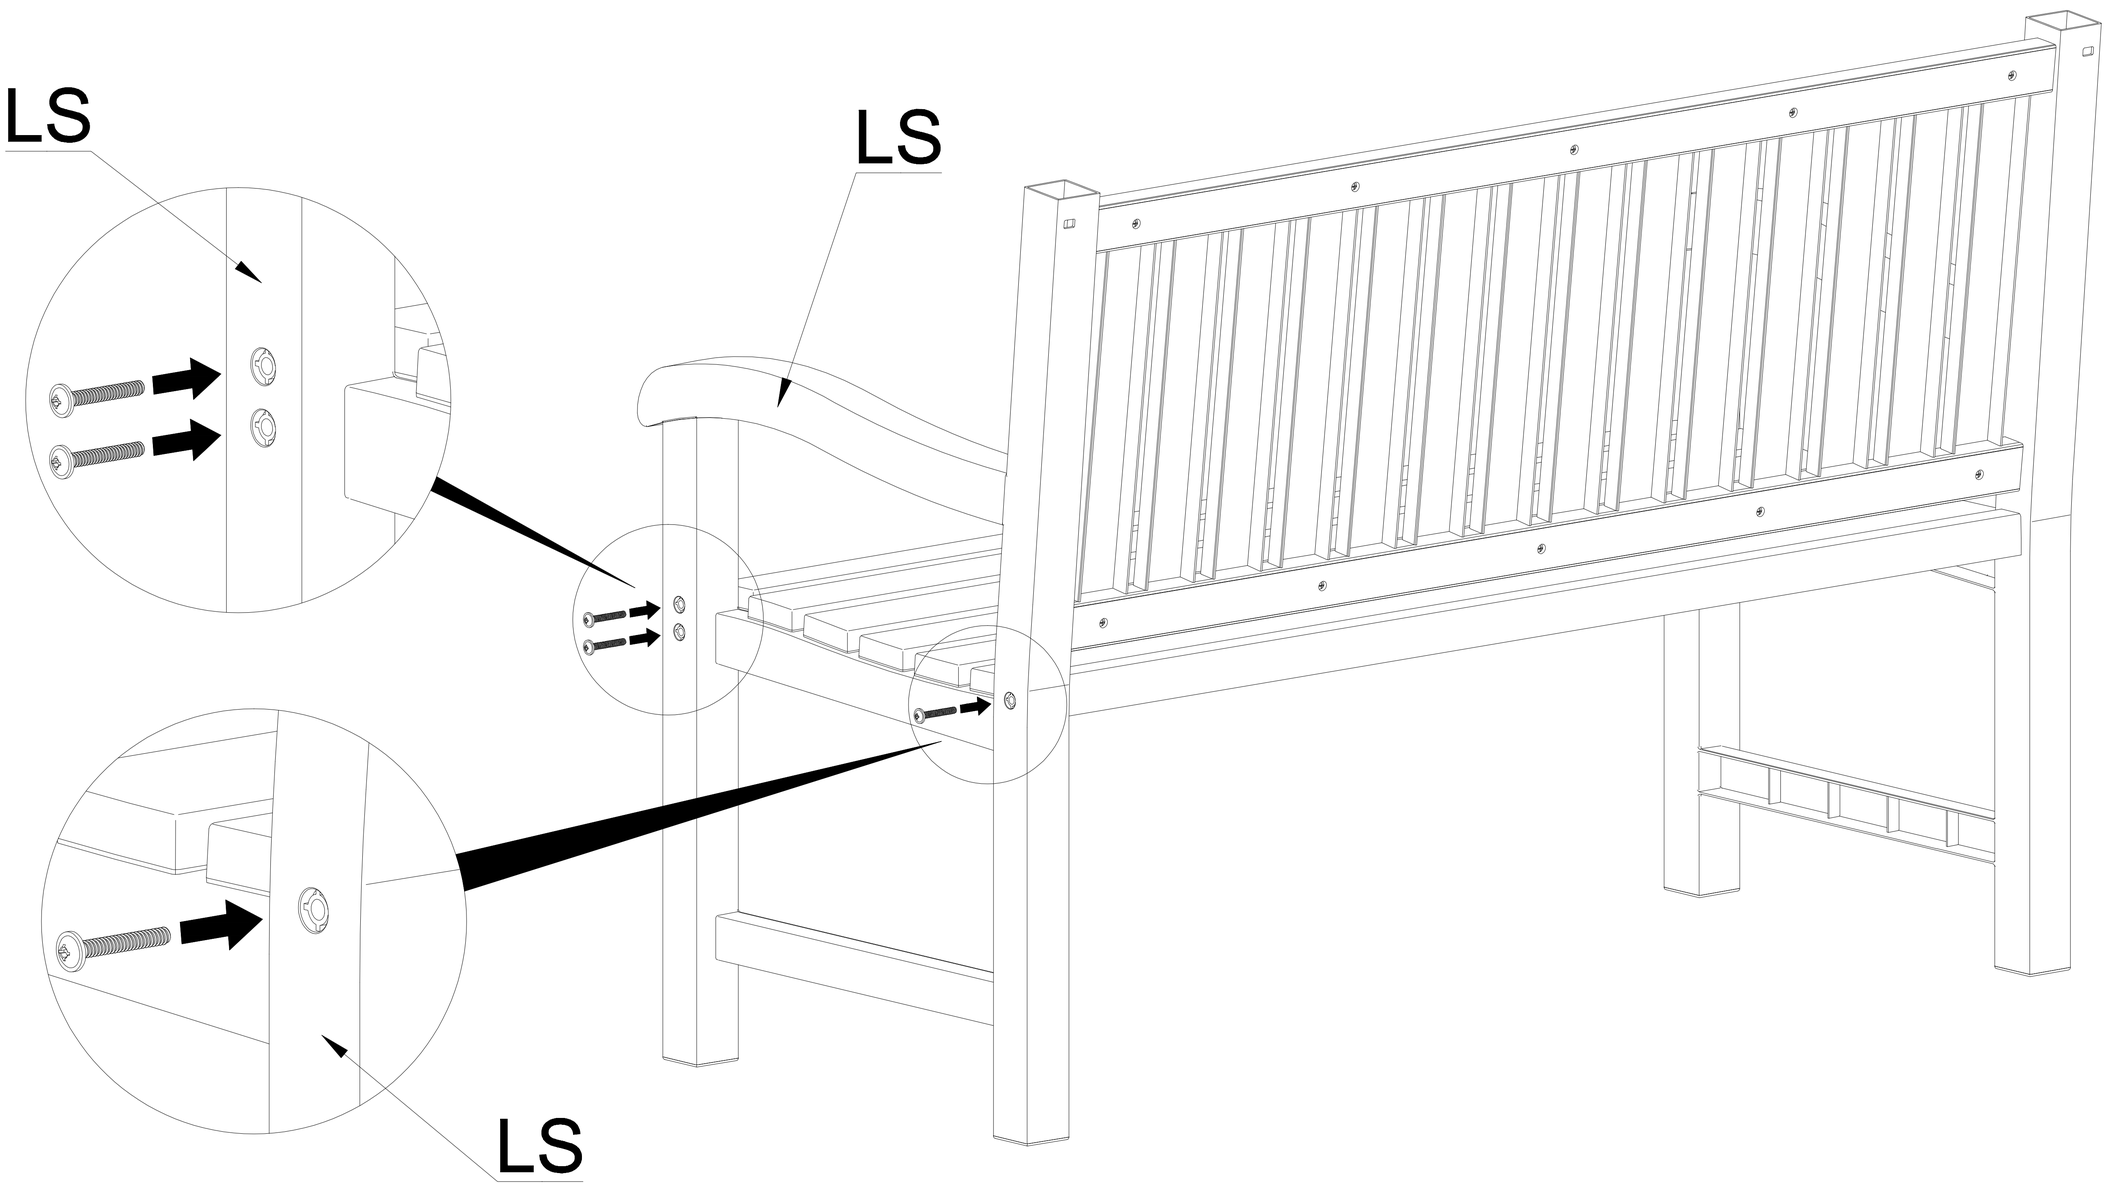



12



RP(X1)

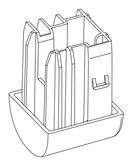

LP(X1)

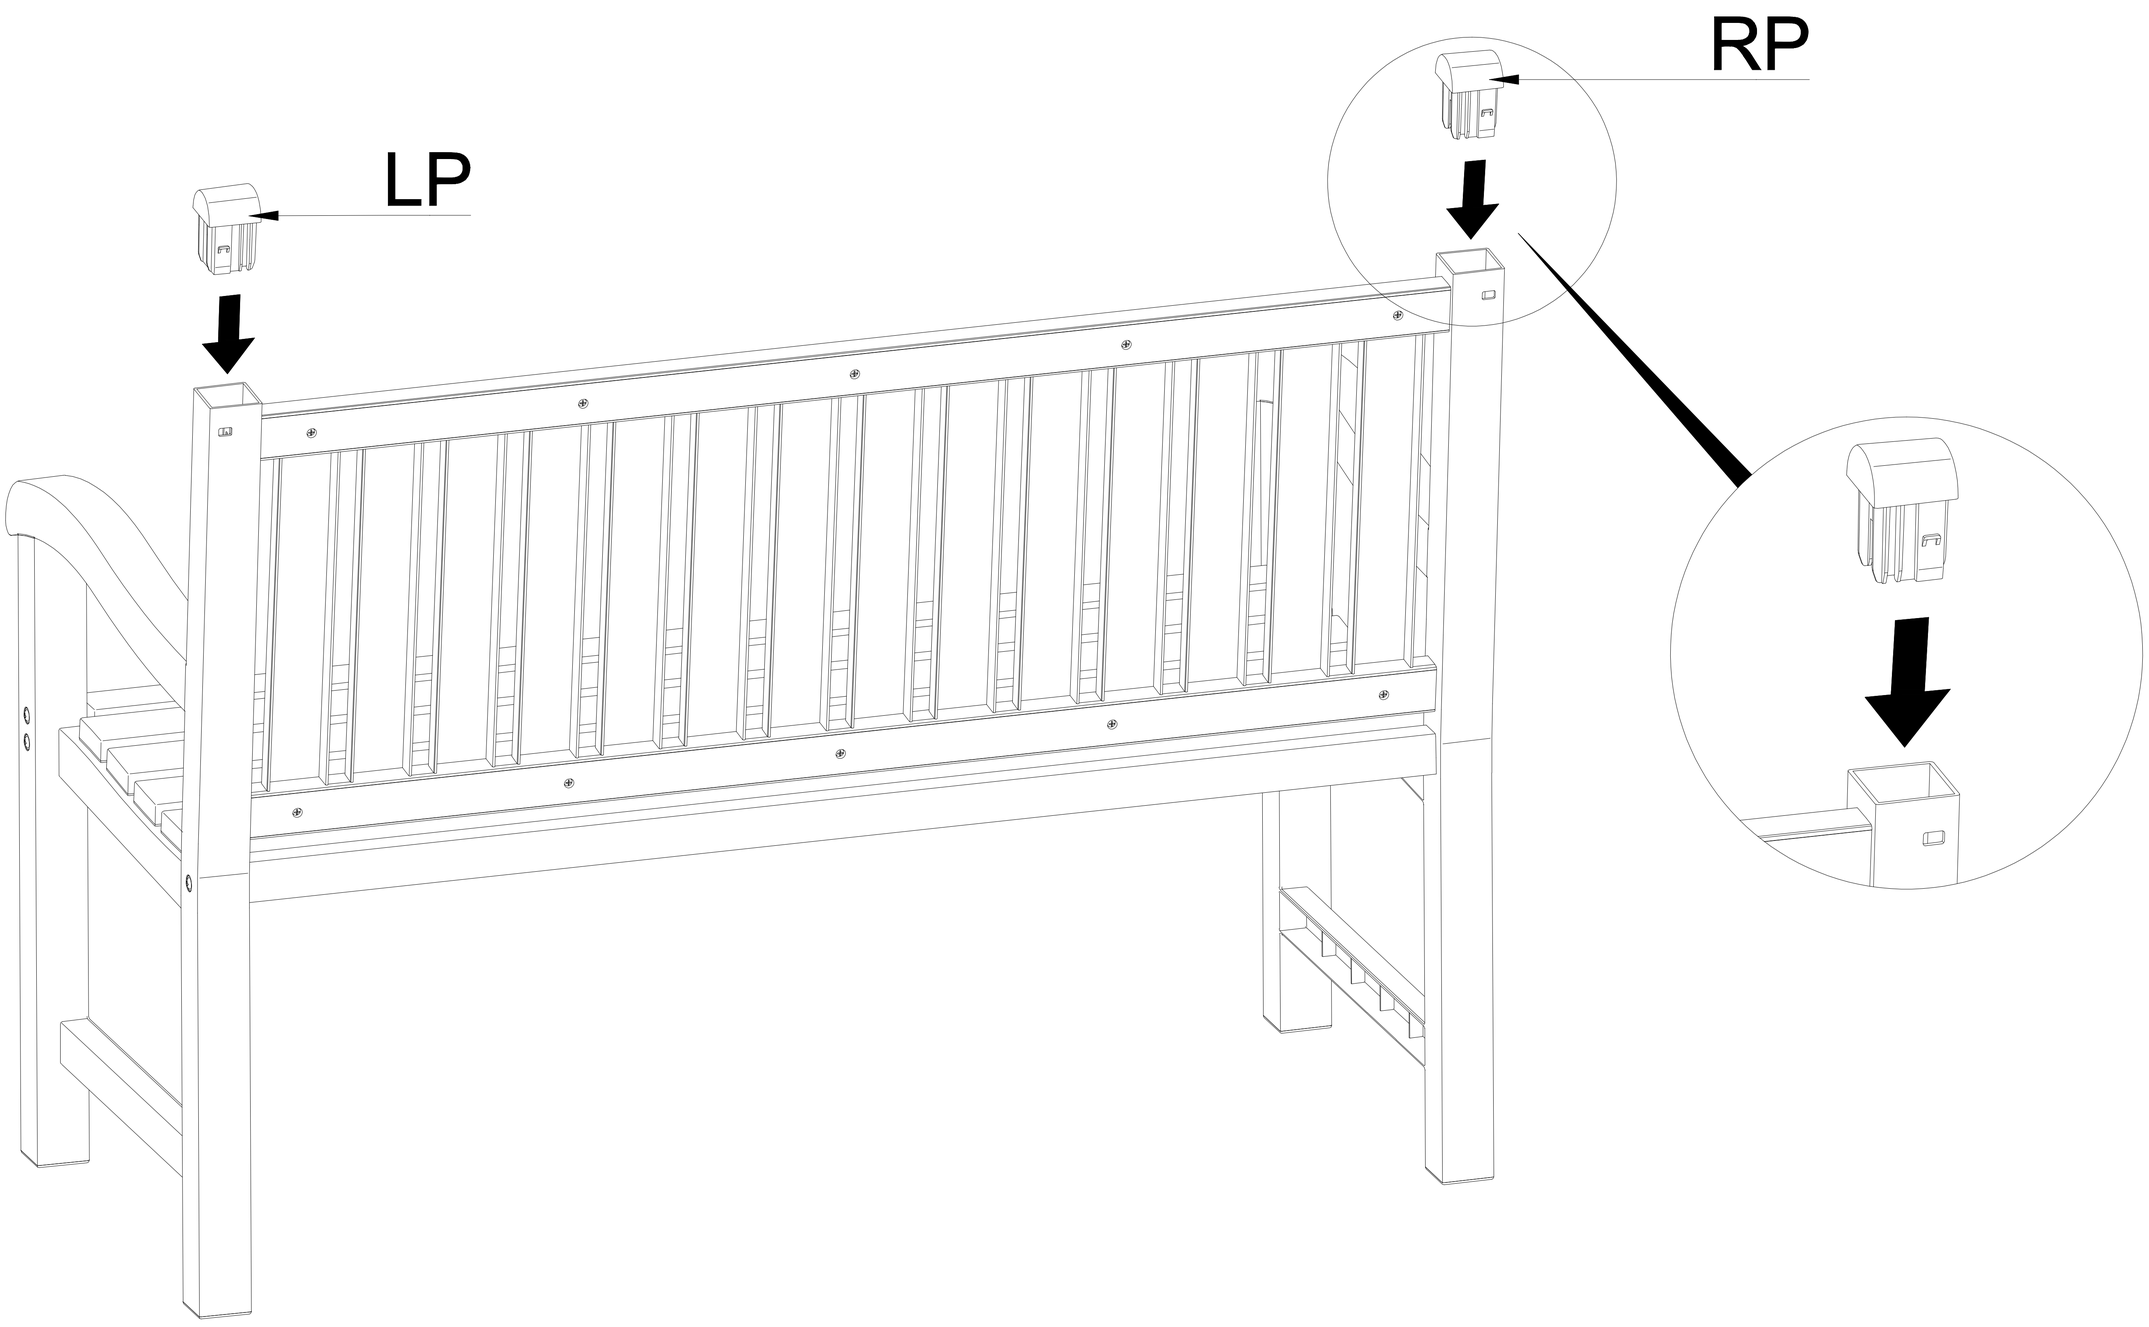

13

