
User Manual

See it - Feel it - Live it


Parts List

A

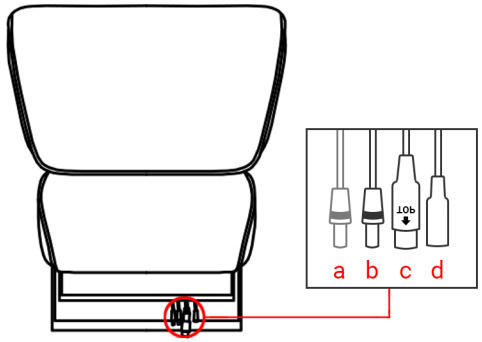


Backrest

B

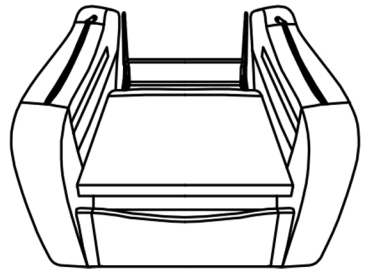


Sofa Chair Body

C

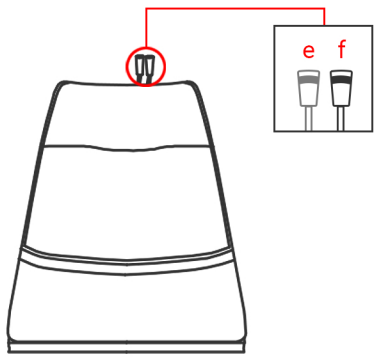


Seat Cushion

D

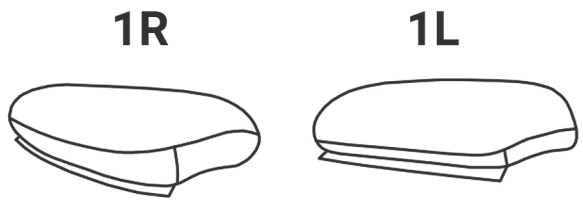

Armrest Pillow

E

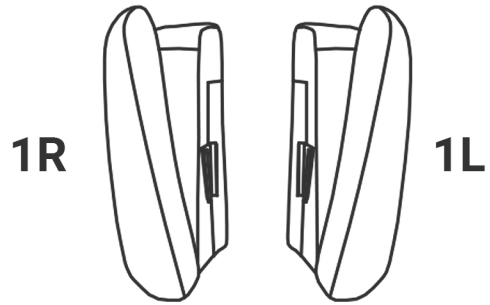

Back Armrests

F




Power Adapter

G



Massage Remote Control


H

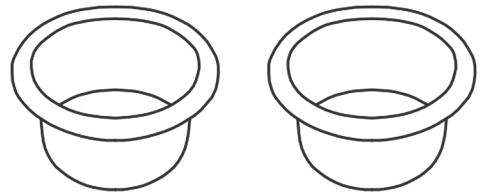


Cup Holders ×2

Assembly Instructions - 1


STEP 1 Take out the armrest pillow

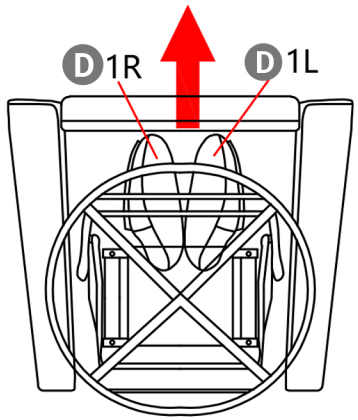

STEP 2 Pull outward the support frames at the four corners of the armrests

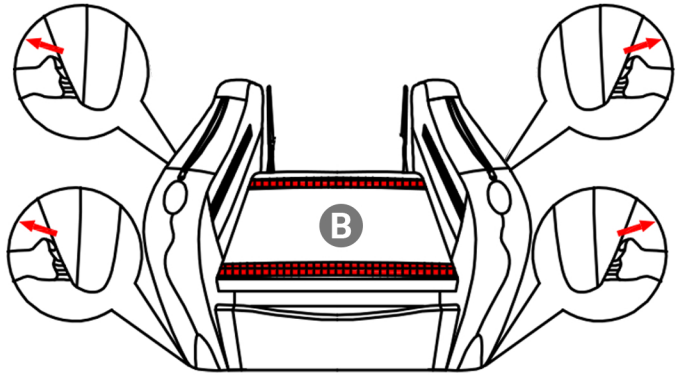


STEP 3 Pull open the zipper on the armrest, press down the armrest's support frame from top to bottom.

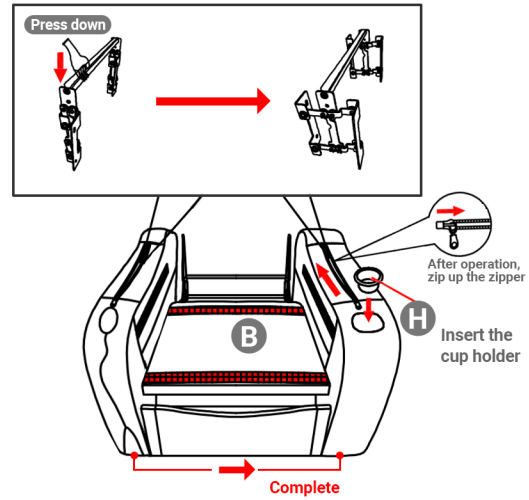


STEP 4 Align the seat cushion with the Velcro on the sofa seat and fix them in sequence

1

Open the footrest

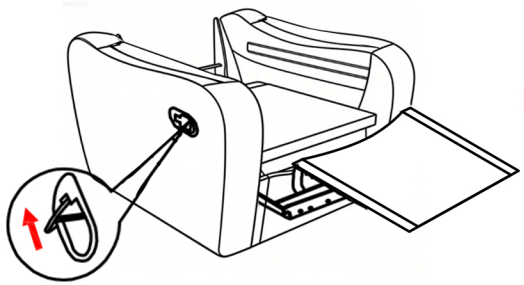


2

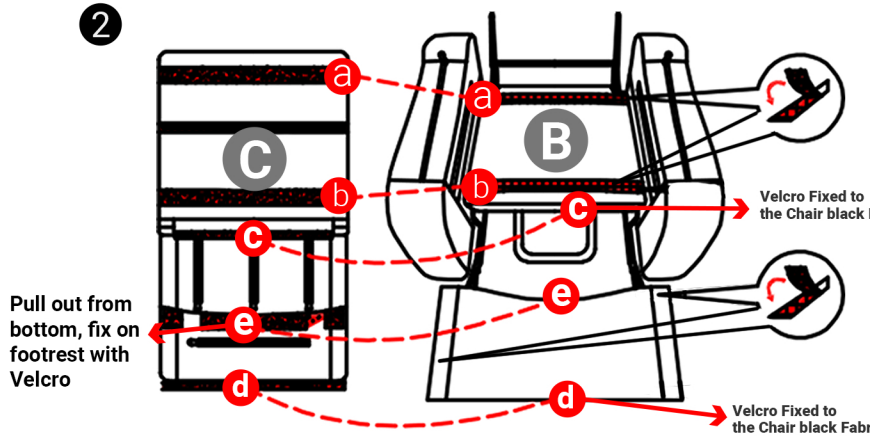

3


Installation Completed

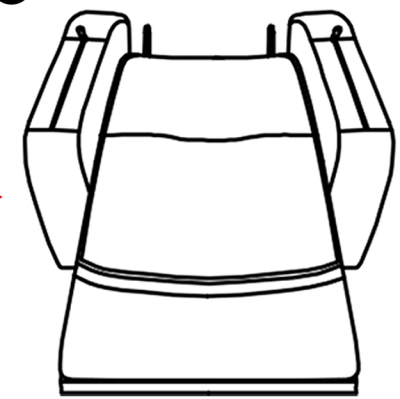

Assembly Instructions - 2


STEP 5

The inner side of the armrest pillow is fixed to the Velcro, and the outer side is fastened to the armrest with a zipper

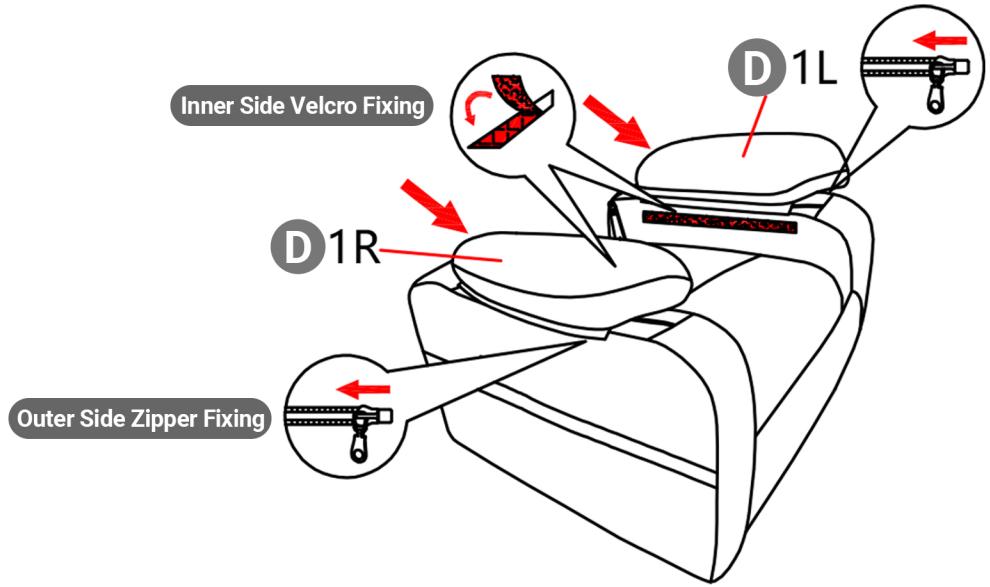


STEP 6

Secure the backrest to the buckles behind the seat cushion

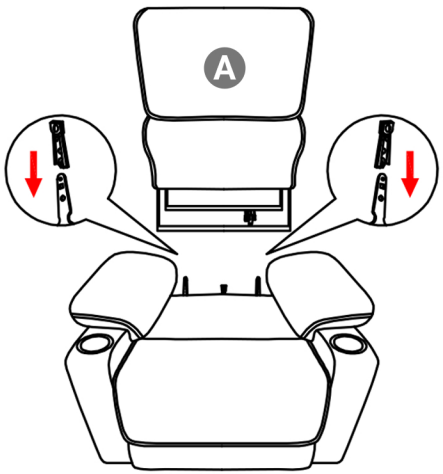


STEP 7


Fasten the backrest sides to the clips on both sides of the backrest

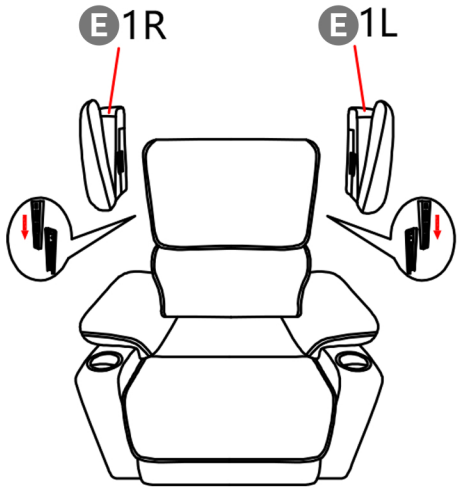

STEP 8

Connect wires as per the diagram

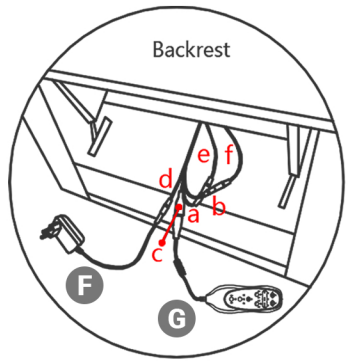

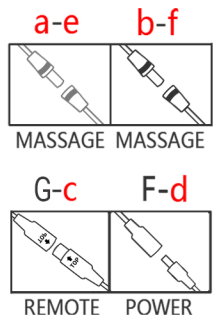

VOLTAGE PARAMETERS:	
Voltage	AC110-240V DC 12V
Current	1.2A
Power	14.4W
Voltage Grade	Class III
Frequency	50-60Hz

PRODUCT FEATURES:

1.Heating massage and temperature three-gear **Adjustment:**L1-L2-L3


2. Eight vibration motors

3. Three massage modes

4. Three massage intensities

5. Four massage zones, each zone can be operated individually

6. The default timing is 15, 30 and 60 minutes

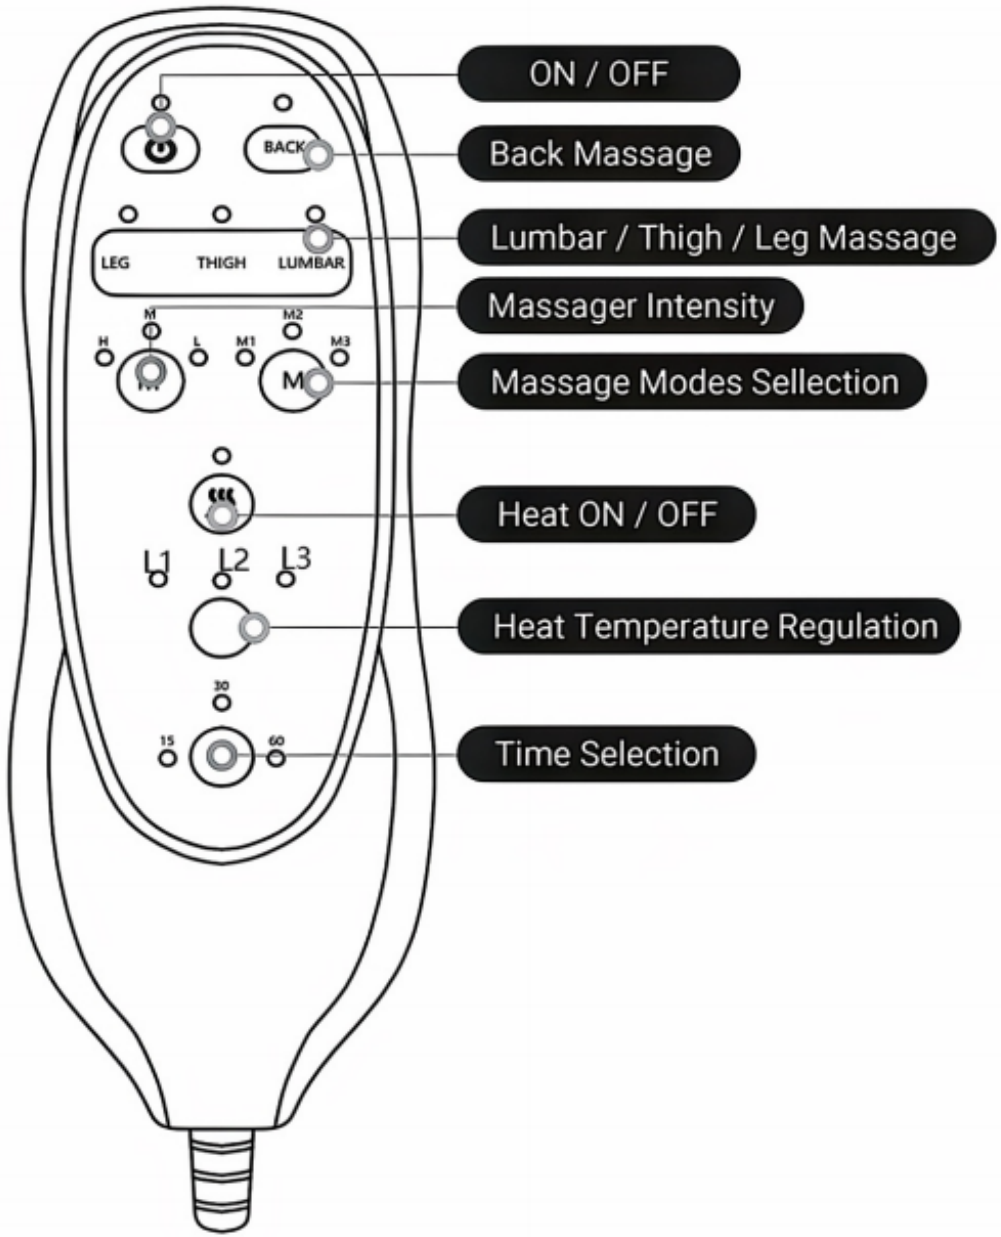

Warning - Critical Safety Precautions

1.Before use, inspect the power cord and plug for damage. If the power cord is damaged, discontinue use immediately to avoid hazards and contact Culect.

2.Do not connect to power until the product is fully installed. Disconnect power before moving the product.


3.Avoid the risk of electric shock by never plugging or unplugging the power cord with wet hands.

Cleaning Instructions

As the fabric cover is non-removable, gently wipe any soiled areas with a damp, soft cloth.

Special Notes

This product contains electrical cords/adapters/plugs. Avoid direct sunlight and prolonged use in high-humidity environments.

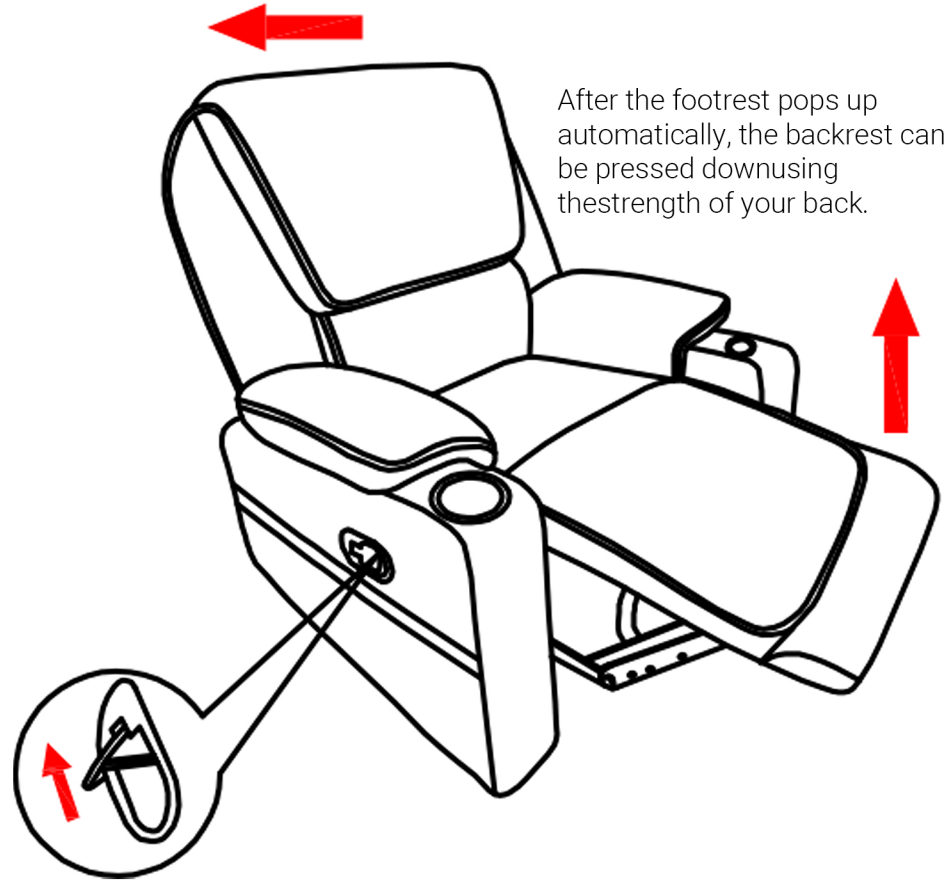

Product User Manual

Our professional team is available
around the clock to provideyou with the highest quality service.