Instruction Manual

Please save this manual for future reference.

Product Name:	4Ft Potted Artificial Christmas Tree

Thank you for purchasing this product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from inside the carton to ensure they are not missing or damaged. Do not attempt to assemble or use the product if any parts are missing or damaged.

CARTON CONTENTS:

Description	Quantity
Tree Top (A)	1
Tree Bottom (B)	1
Pot	1
UL 120V Plug	1

Before You Start

1. Please read the assembly and Instruction procedure carefully. Retain the instructions for future use and save the carton for storing your tree.
2. Decide on an appropriate location for your product.
   Note: This tree may utilize light sets that are marked for indoor and outdoor use, but the artificial tree is for indoor display only.

Assembly and Instruction Procedure (no tools required for assembly):


If your artificial tree has snow-flocking, we suggest unpacking the tree on a large cloth. Some of the flocking may come off during unpacking and fluffing of branches.


1. Assemble the Tree:
   Carefully insert the bottom of the tree section (B) into the tree pot. Make sure the tree pole is firmly inserted into the pot. Insert the top section (A) into the bottom section (B).
   Now that the tree is fully assembled, connect the light plugs as shown in the image below. Attach the plug to the string lights located in the bottom section of the tree and plug into an electrical outlet. If the lights do not come on, skip to the section for troubleshooting tips.

Instruction Manual

Please save this manual for future reference.

Product Name:	4Ft Potted Artificial Christmas Tree

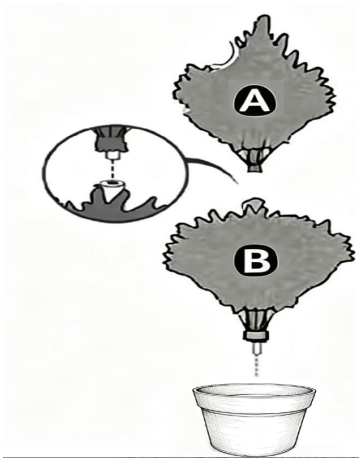

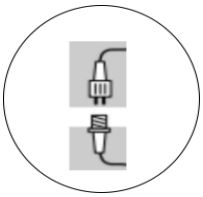

2. Shape the Tree:
   Begin to shape the branches from the bottom of the tree to the top. Start with the tree tips farthest away from the center pole.
   After shaping the tree, step back to look for any gaps. Reshape branches as needed. You can upsweep the branch tips for a uniform look. Once you have the tree the way you want it, you can start decorating!


Fig.1


Fig.2


Fig.3

Warnings:

1. Risk of Fire and Electric Shock – Read all instructions and warning tags carefully.
2. Do not place near fireplaces, candles, outdoor heaters, or other similar sources of heat. This item is not flame retardant.
3. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
4. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
5. Make sure final assembly stable enough to hold the tree upright.
6. Do not use candles on tree. Use only with the pre-installed string lights included.
7. For festive use only, not intended for consecutive use over 90 days each season.
8. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

Instruction Manual

Please save this manual for future reference.

Product Name:	4Ft Potted Artificial Christmas Tree

Troubleshooting:

1. Some bulbs are not lighting, or lights do not come on at all: Search for any loose plug connections between the tree sections. Search for loose or missing bulbs.
2. Tree is not straight: Try adjusting the trunk in the pot making sure it is centered and secure. It is better if the tree is in the vertical position when adjusting.

Note: If these actions do not resolve the issue with the tree, please do not disassemble the tree yet. Please contact customer service for assistance.

Storage:

1. Remove all decorations (this does NOT include the pre-installed string lights).
2. Starting from the top, carefully disassemble the tree sections. Press the tree tips back up against the pole.
3. Place the branch sections back into the carton, putting the longest one on the bottom.
4. Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35˚C (95˚F).