
TV STAND

USER MANUAL

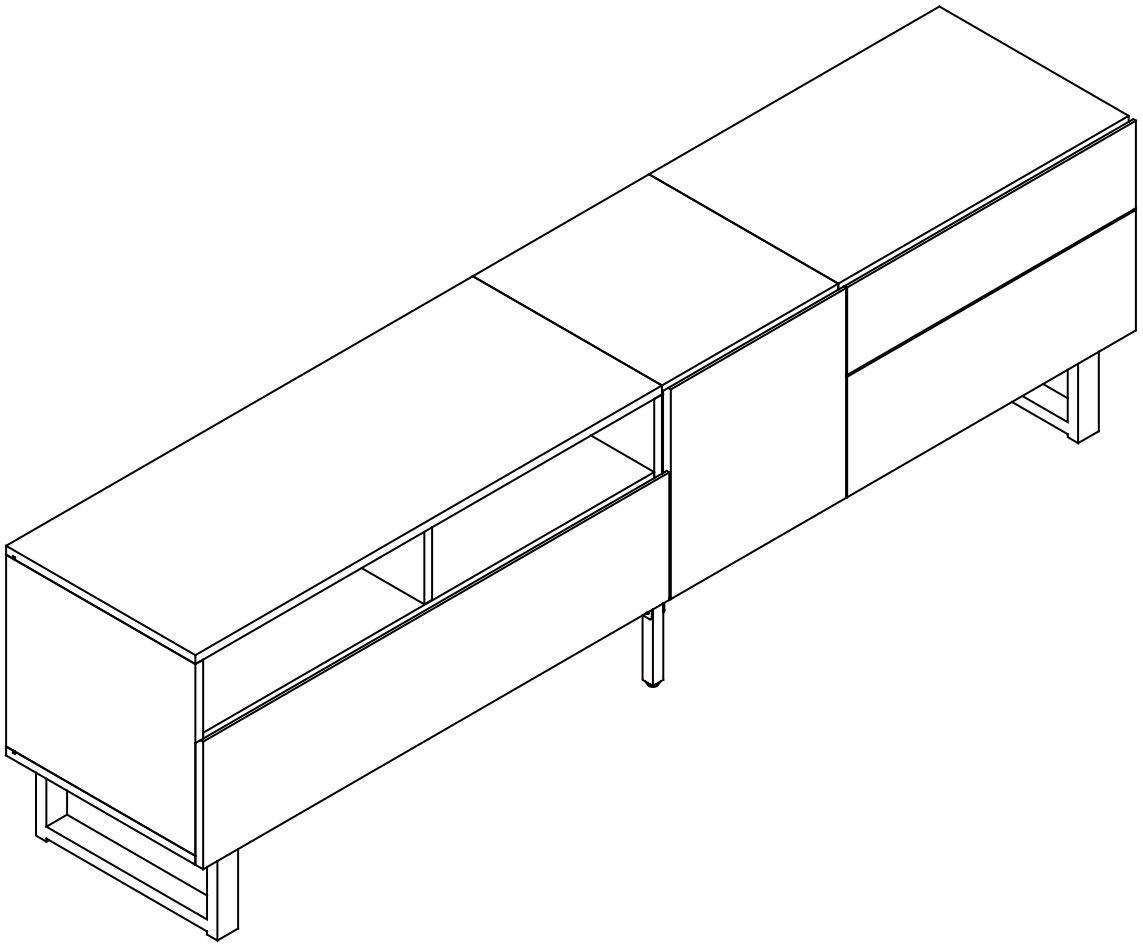

SAVE THESE INSTRUCTIONS FOR FUTURE USE

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions





Diagram A

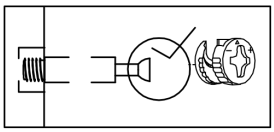

Insert Cam Bolt into hole as shown in diagram A.





Diagram B

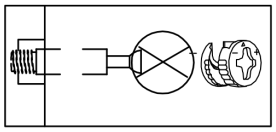

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.







Diagram C

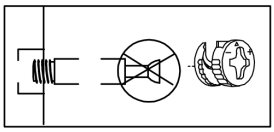


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

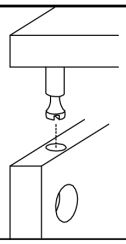


Connect the panels together.

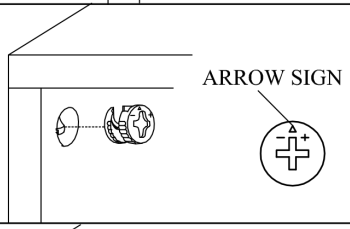

Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

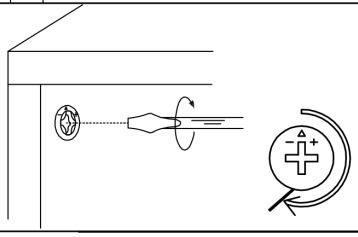

To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

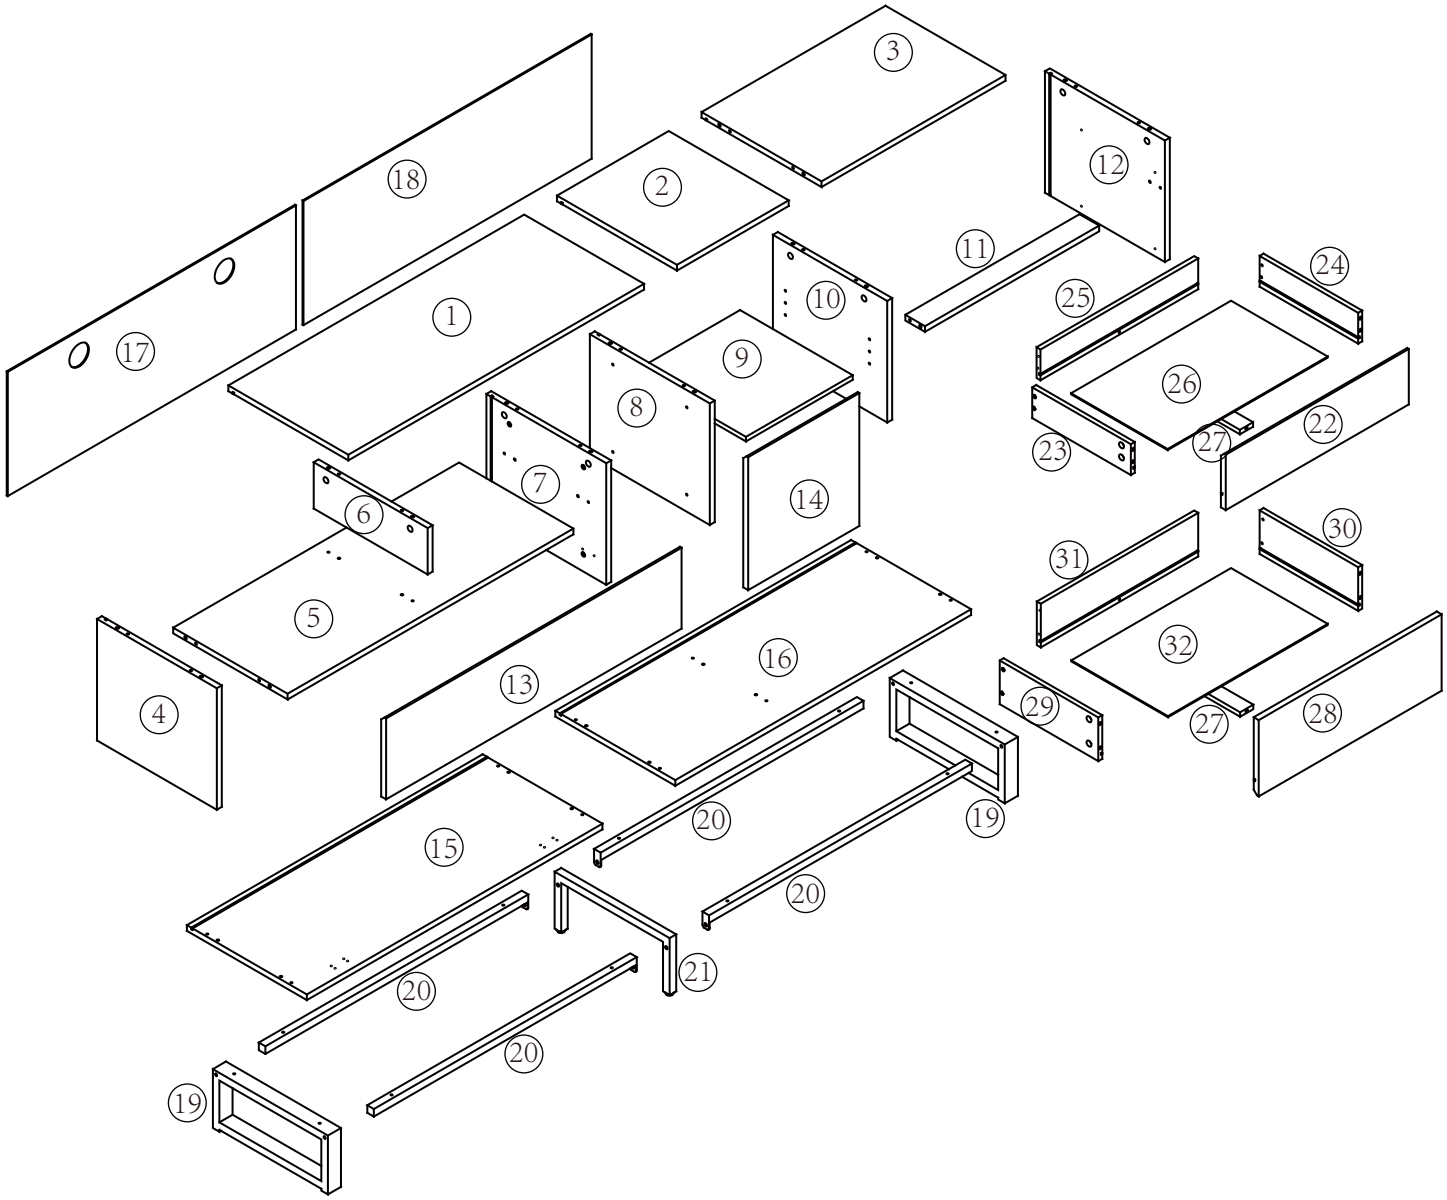

Ax28	Bx32	Cx12 M4x40	Dx32 M6x30	Ex10 M4x30	Fx2
Gx4	Hx1	Ix16 M3x12	Jx4	Kx28 M4x12	Lx4 M6x15
Mx12 M5x35	Nx2 M6x30	Ox4 M6x60	Px2	Qx2	Rx28
Sx8	CRx2 300mm	CLx2 300mm	DRx2 300mm	DLx2 300mm	

STEP 1

Ax18




CRx2



300mm

CLx2




300mm

Ix8




M3x12

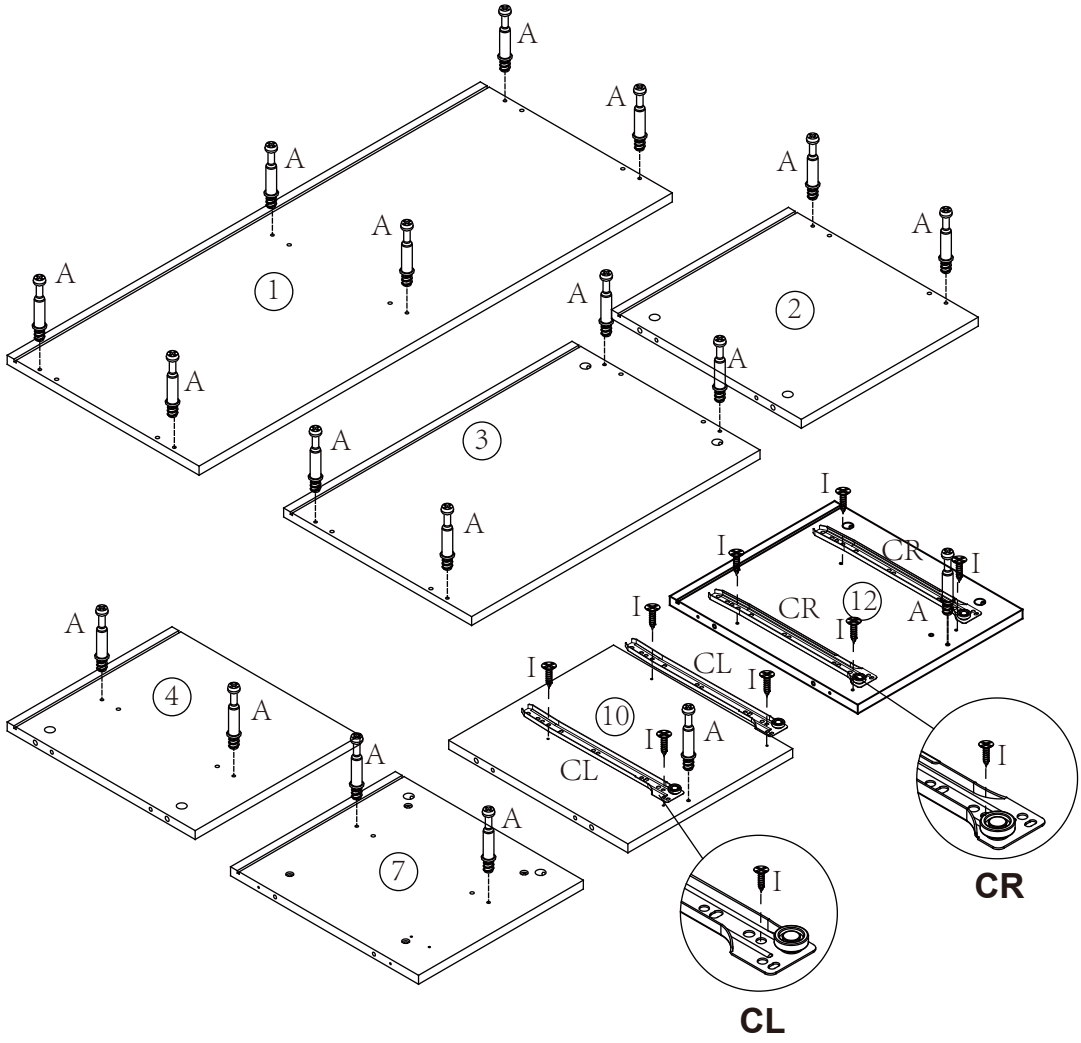

STEP 2

Fx2



Bx4




Dx2




M6x30

Lx4




M6x15

Qx2

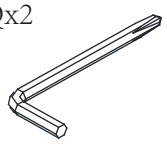

Rx8



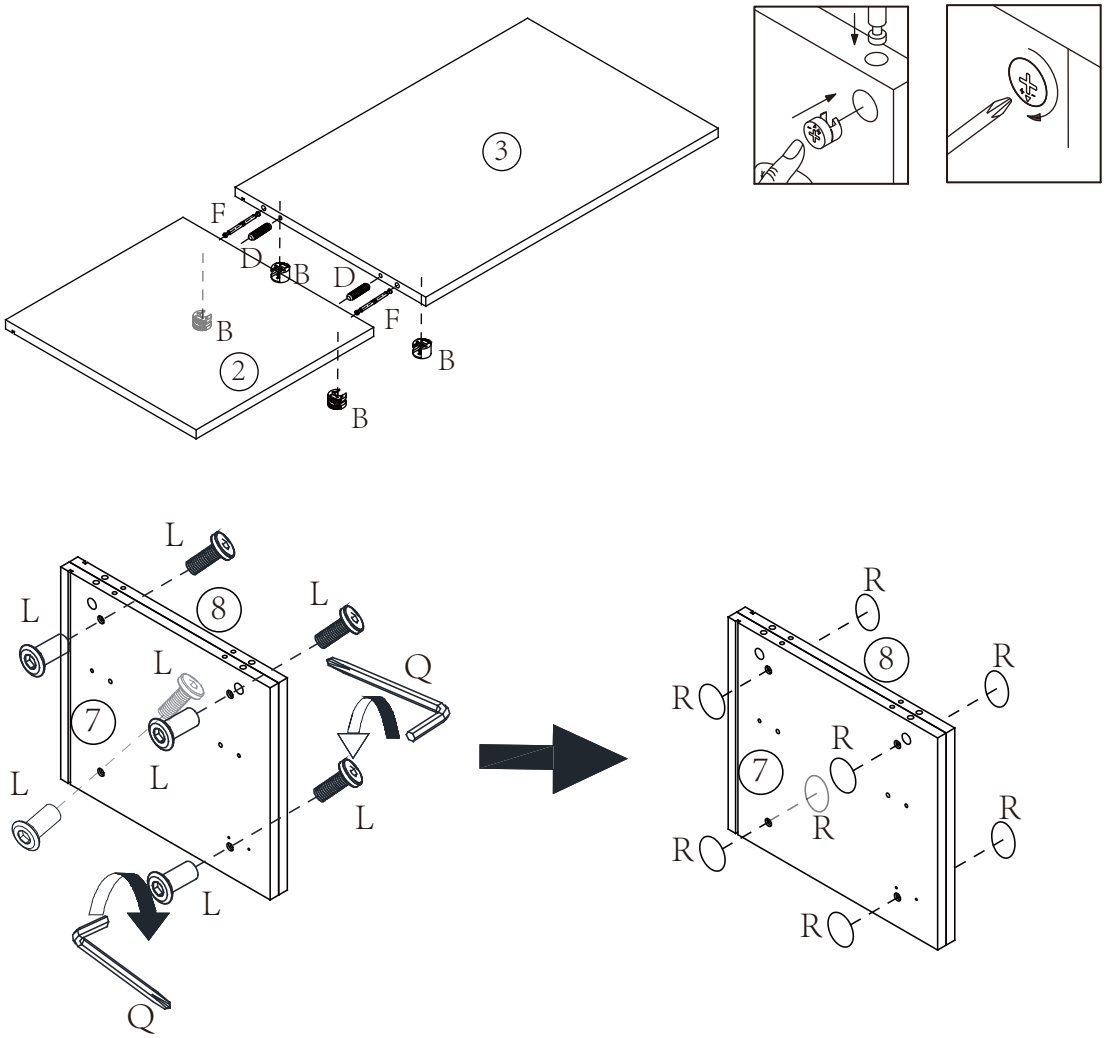

STEP 3

Bx6



Dx8





M6x30

Cx2



M4x40

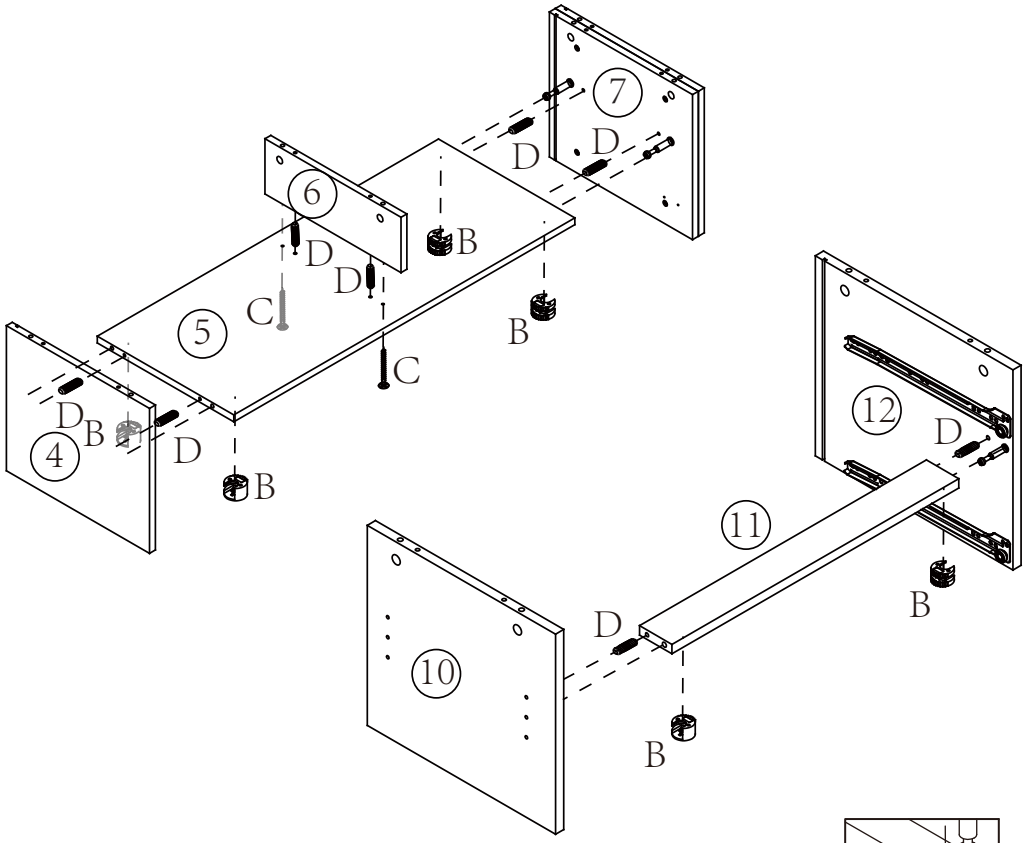

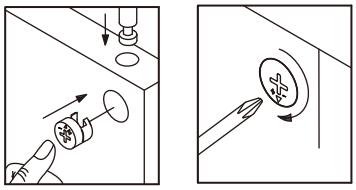

STEP 4

Cx10




M4x40


Dx10



M6x30

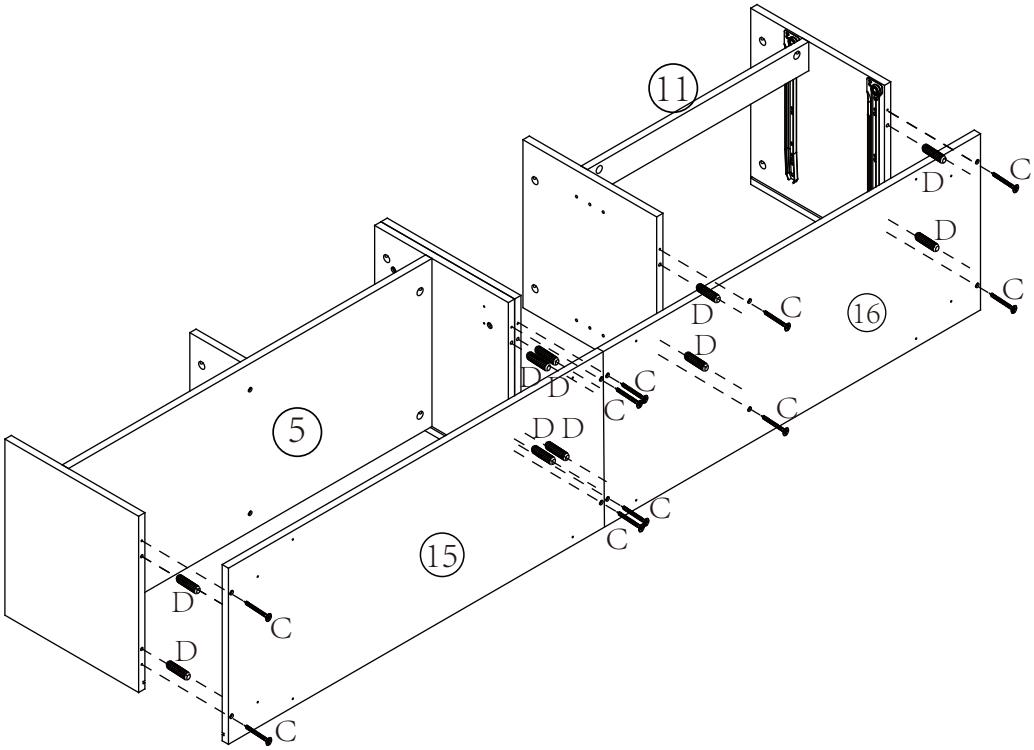

STEP 5

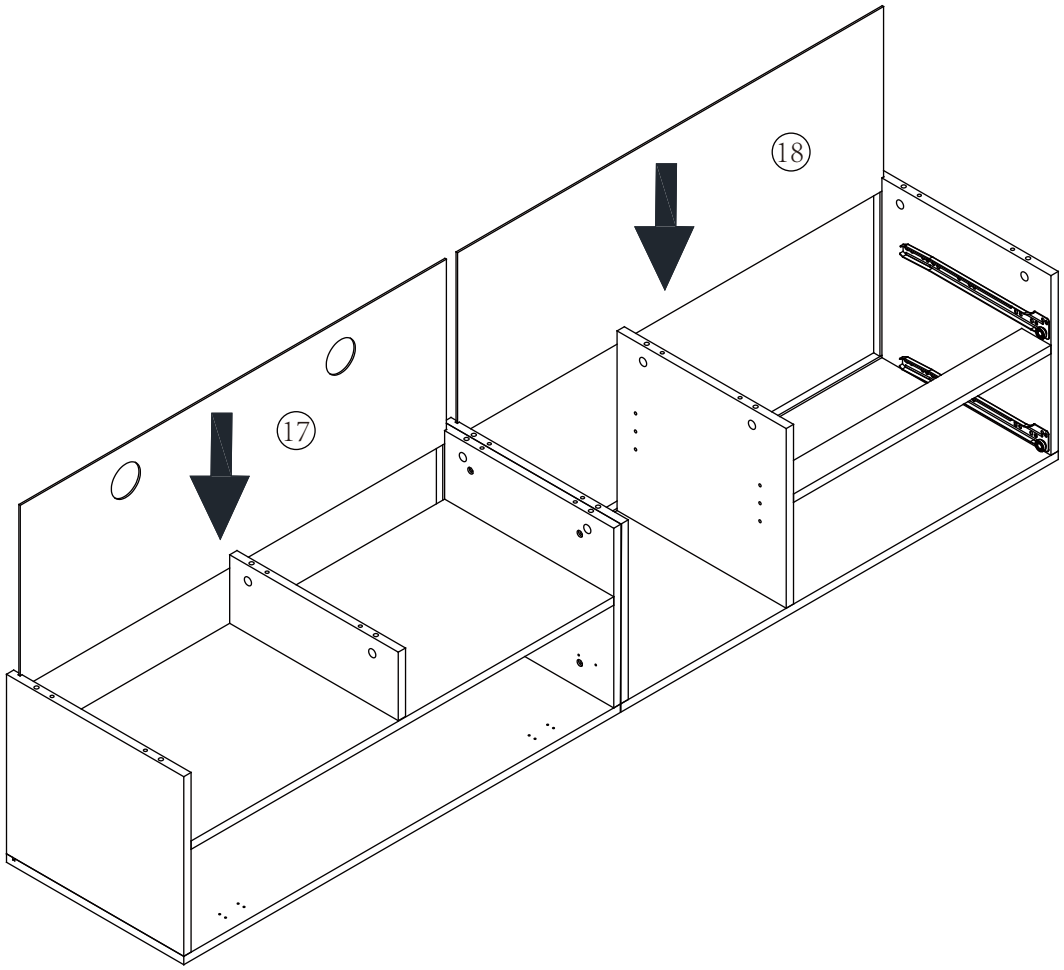

STEP 6

Bx12




Dx12




M6x30

Rx12




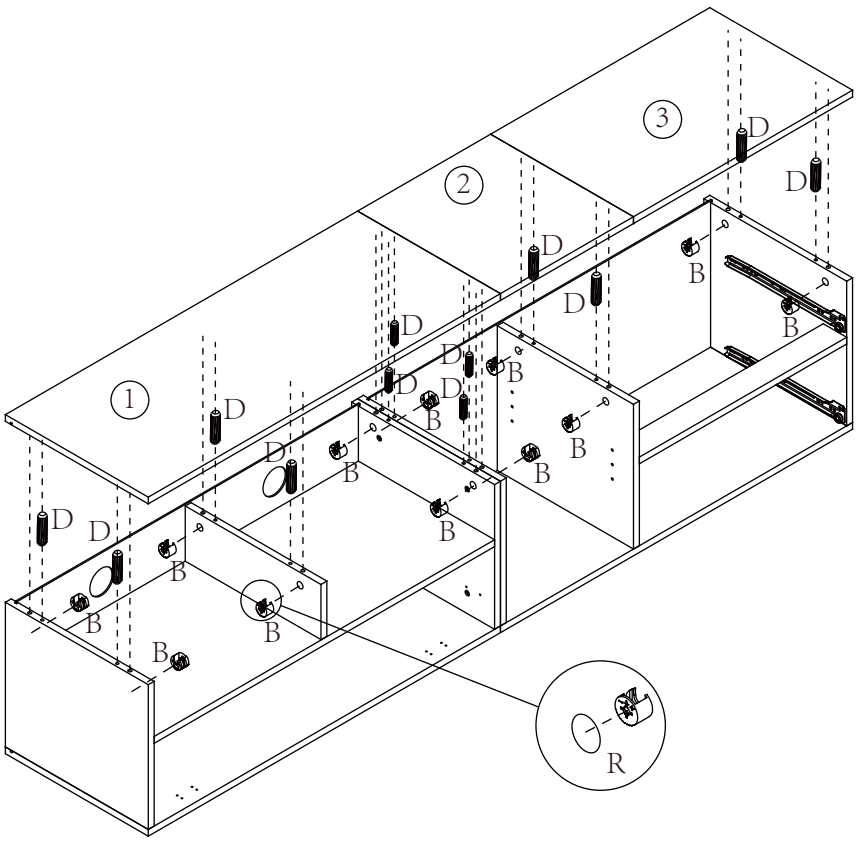

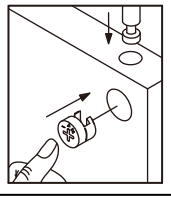


STEP 7

Nx2

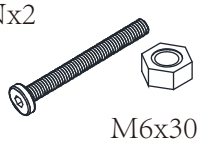


M6x30


Ox4

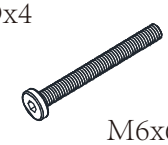

M6x60

Px2



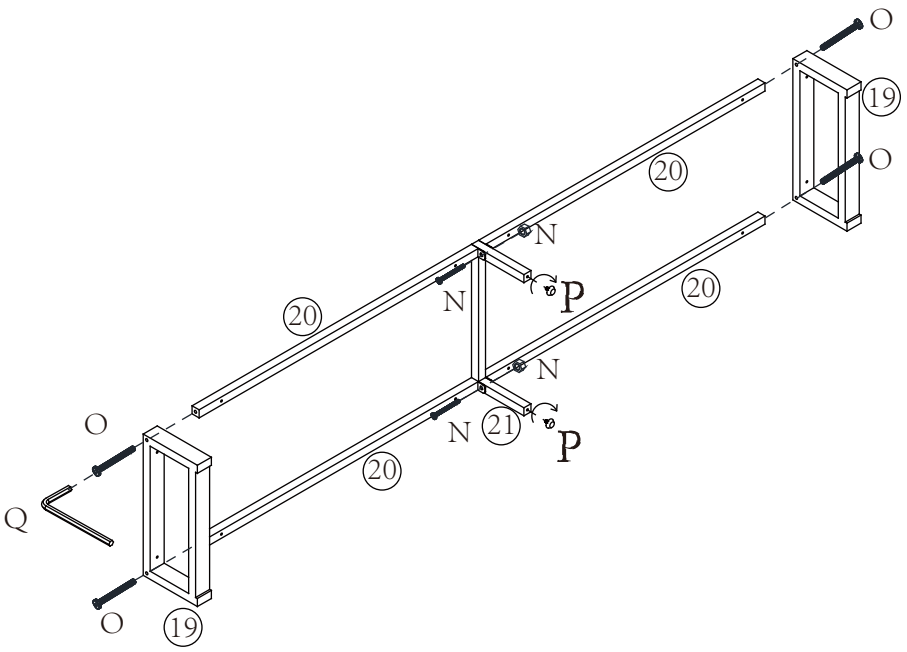

STEP 8

Mx12



M5x35

STEP 9

Gx4




Kx10



M4x12

Hx1



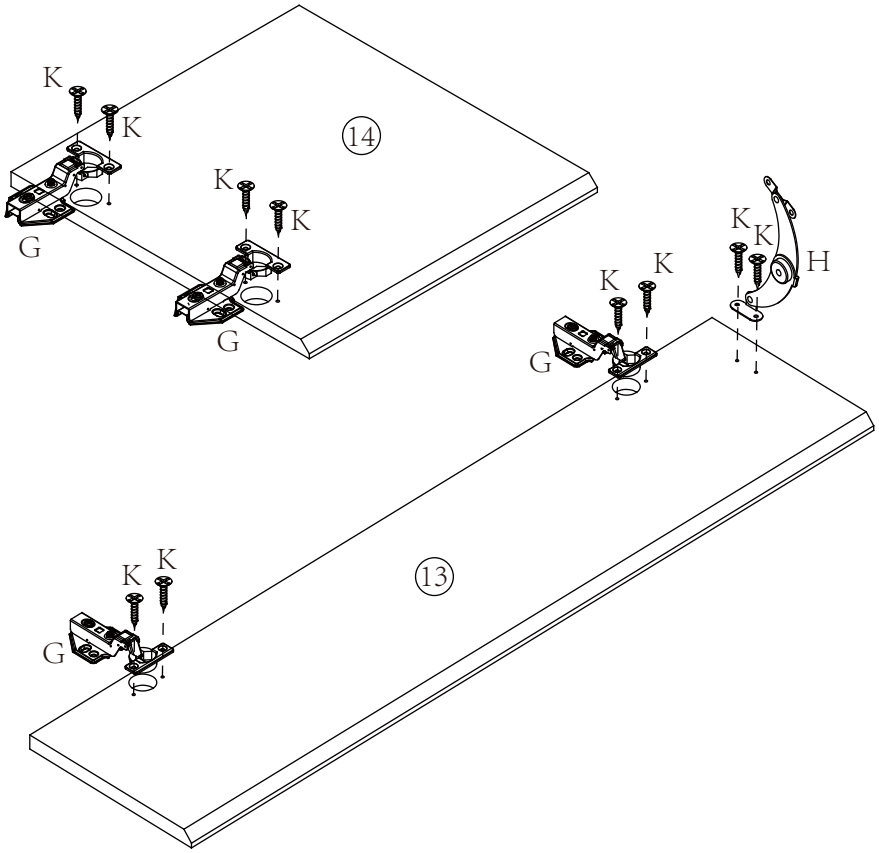

STEP 10

Kx10




M4x12

(For detailed hinge adjustment instructions, please refer to the last page.)

STEP 11


Jx4

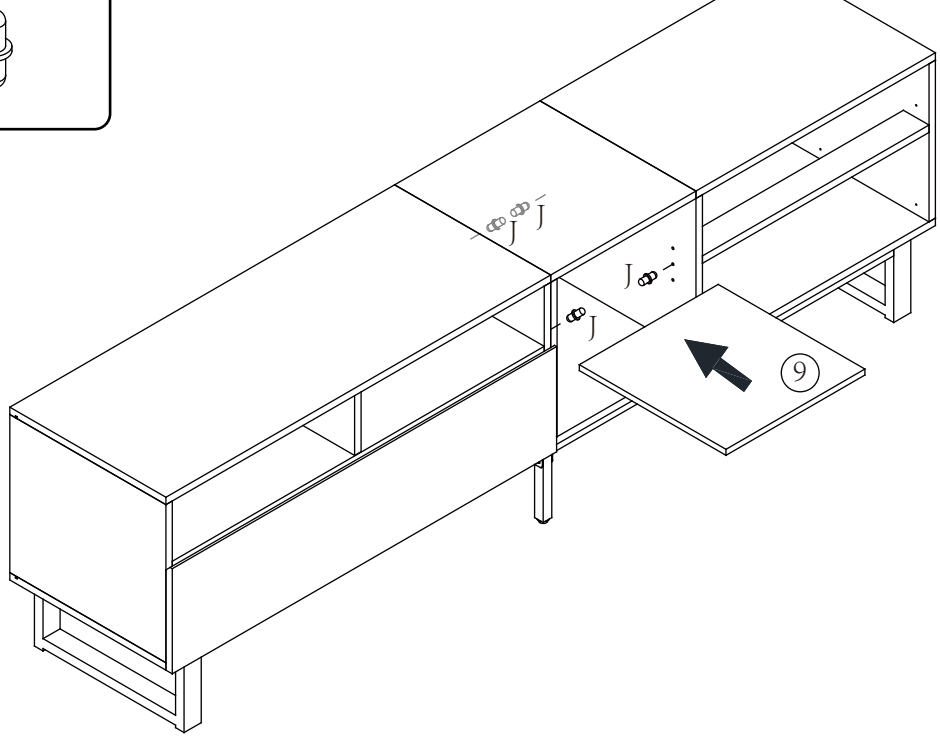


STEP 12

Kx8

M4x12

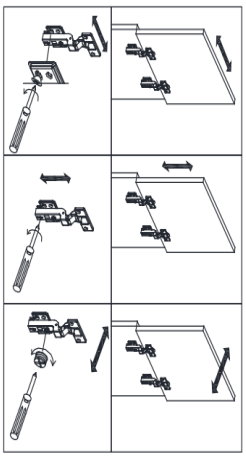

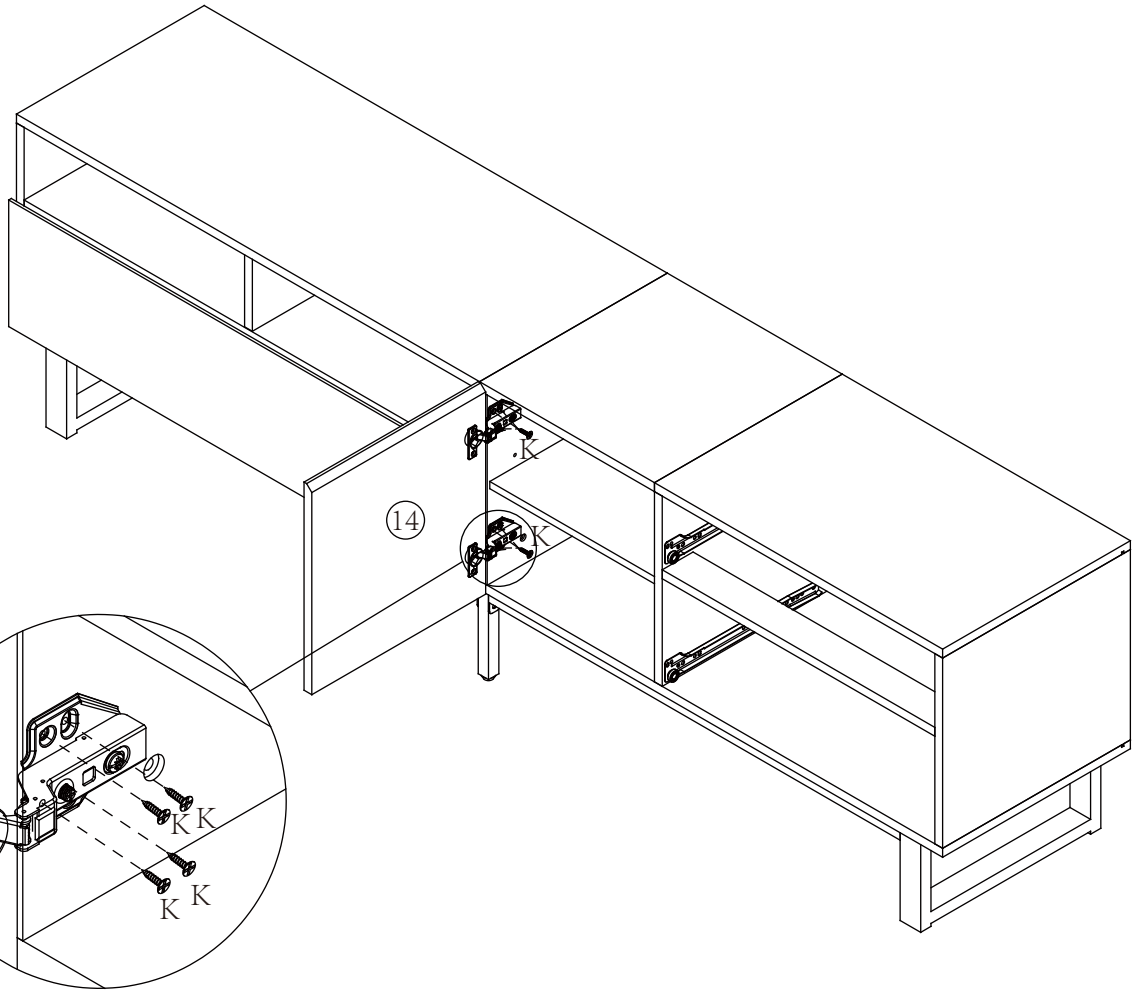


(For detailed hinge adjustment instructions, please refer to the last page.)

STEP 13

Ax10



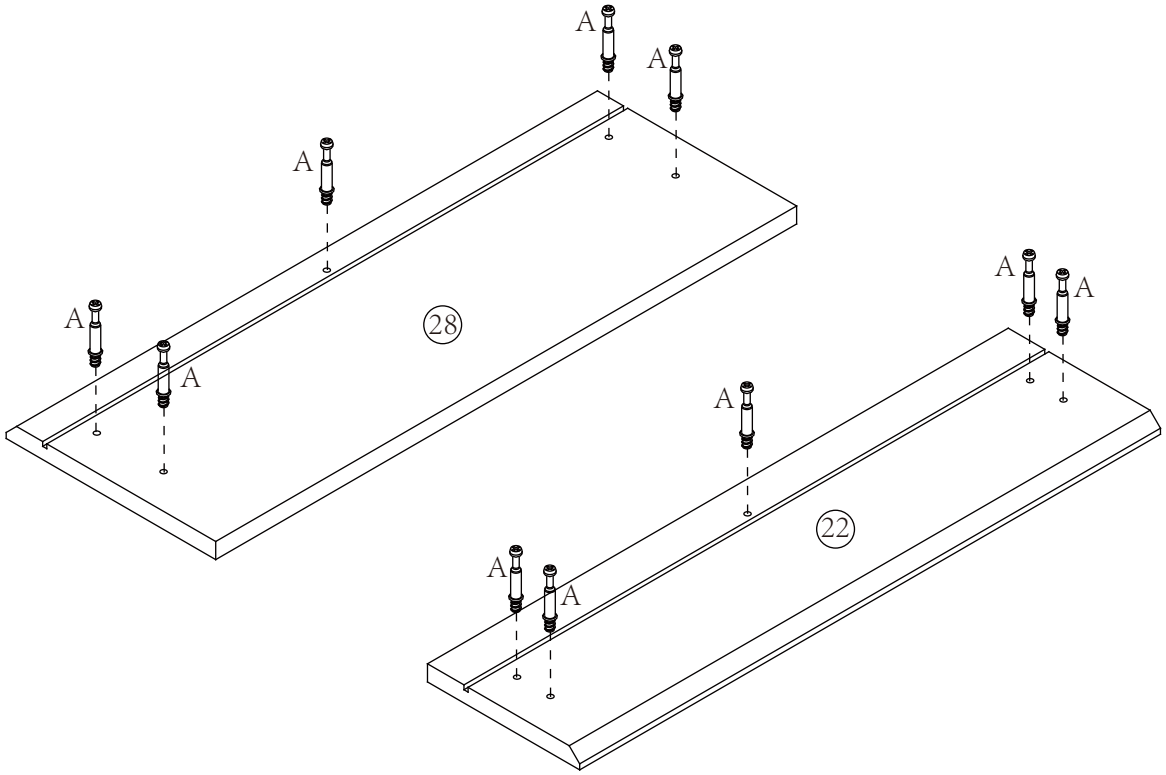



STEP 14

Ex10





M4x30

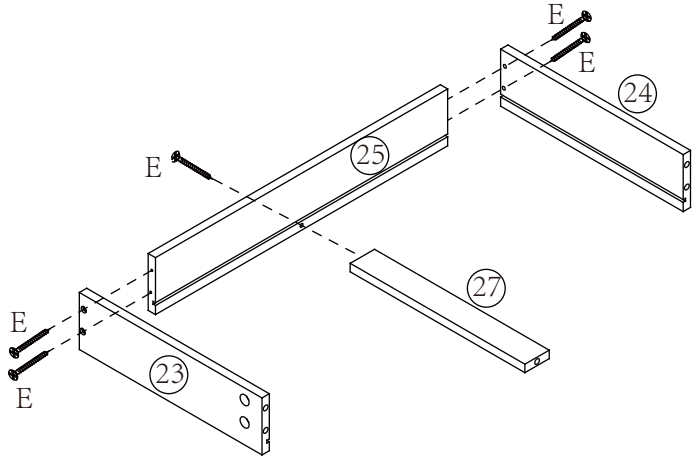

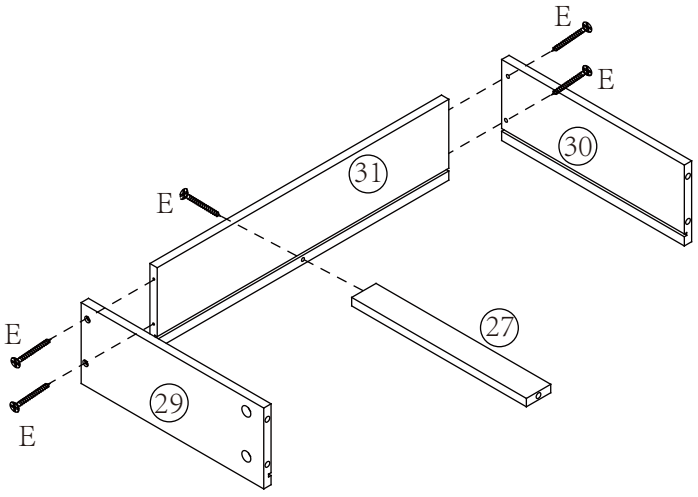



STEP 15

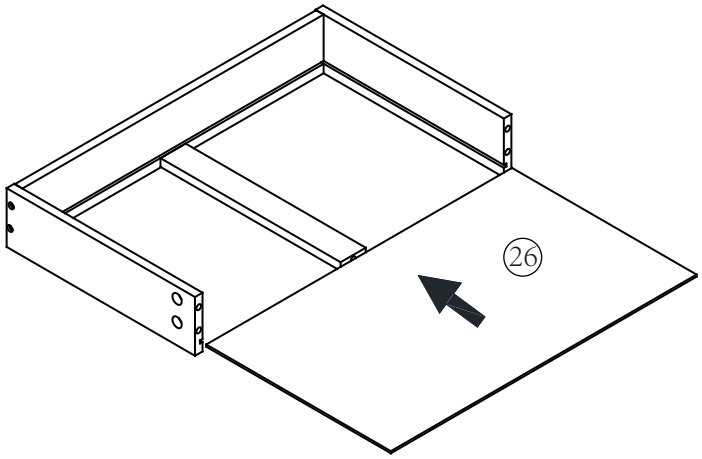


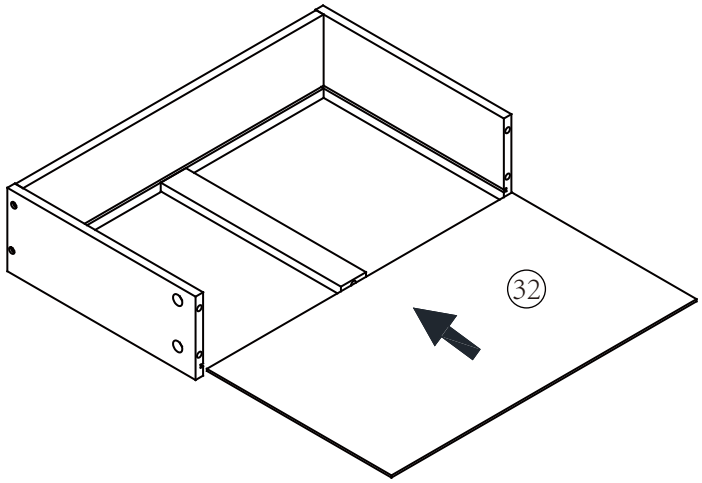

STEP 16

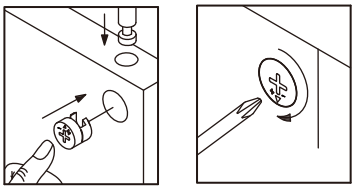

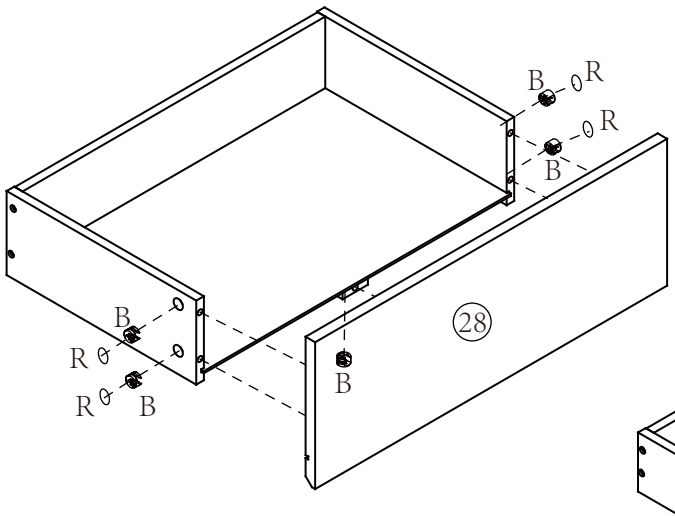

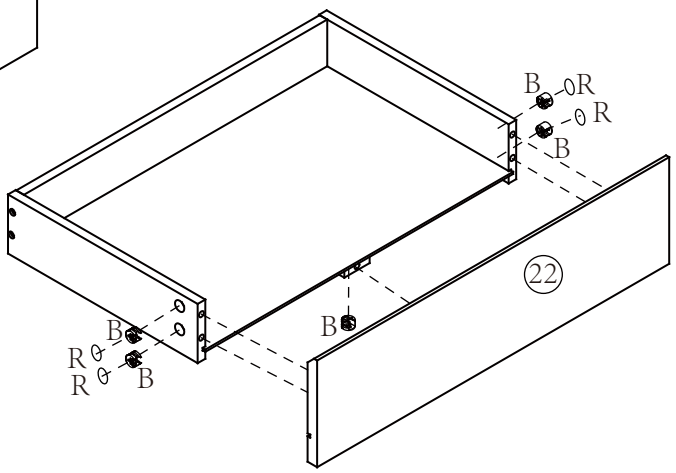

Rx8




Bx10




STEP 17

DRx2

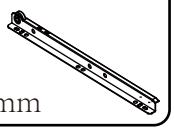

300mm

DLx2

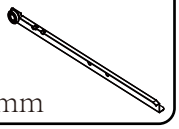


300mm


Ix8




M3x12

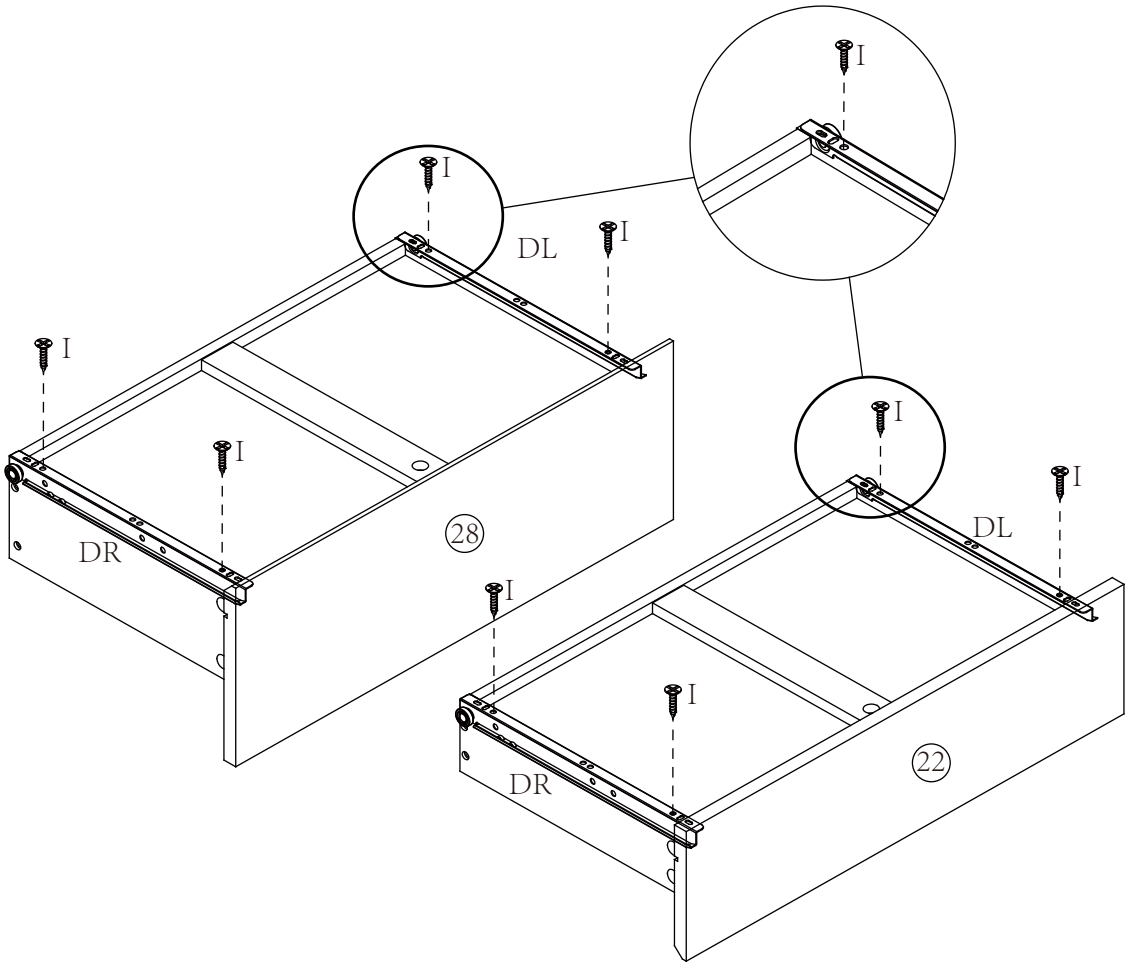


STEP 18

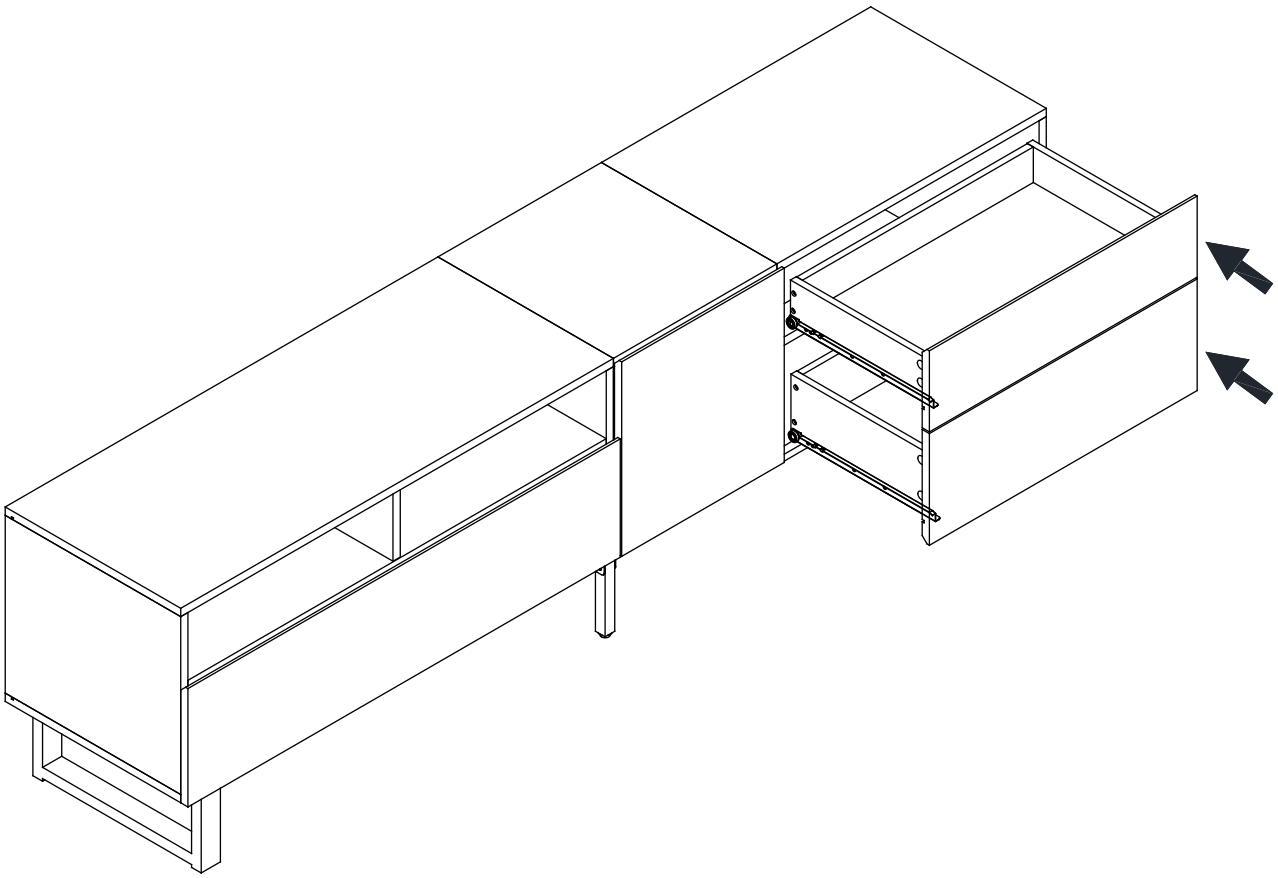


STEP 19

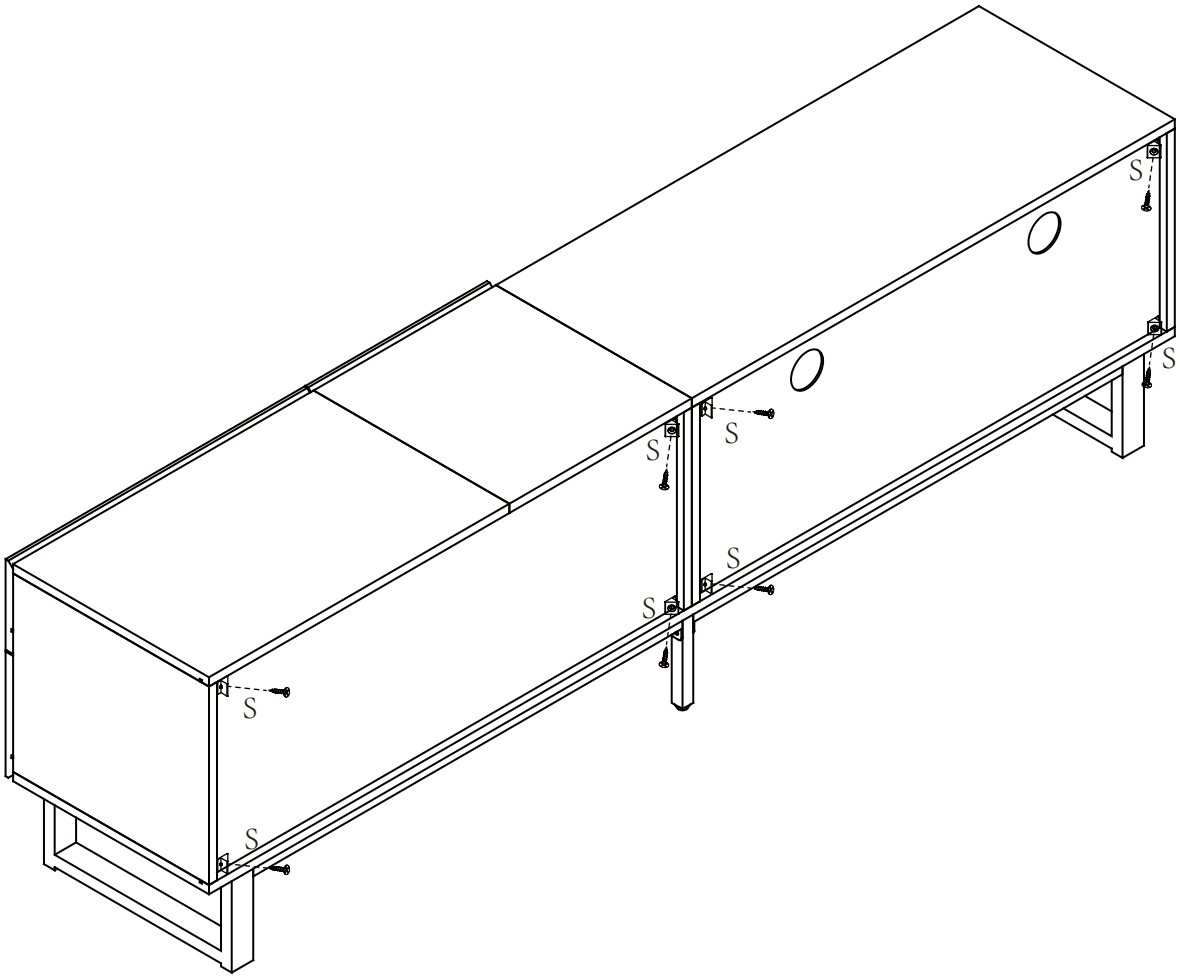

Sx8




HINGE ADJUSTMENTS

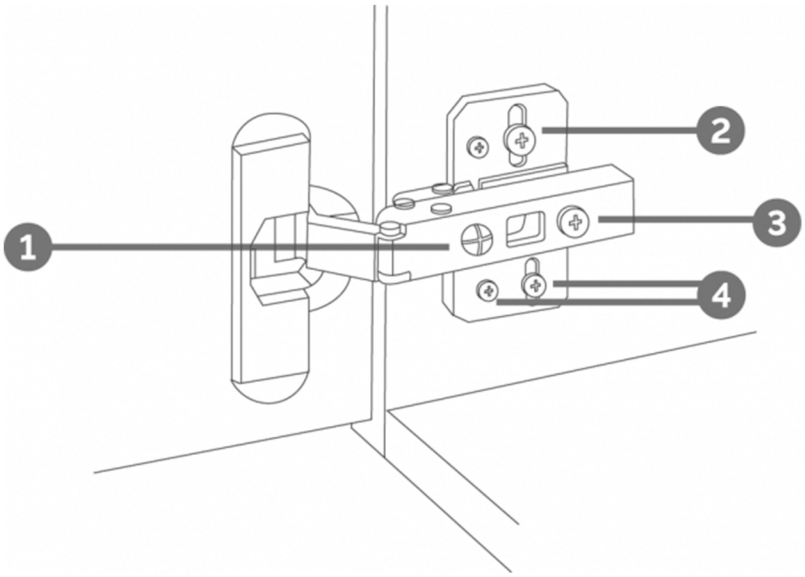


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

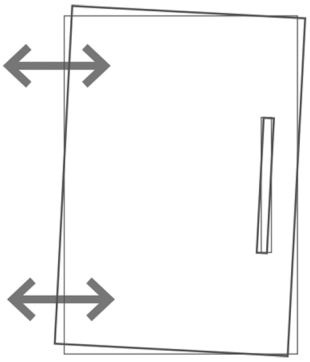

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

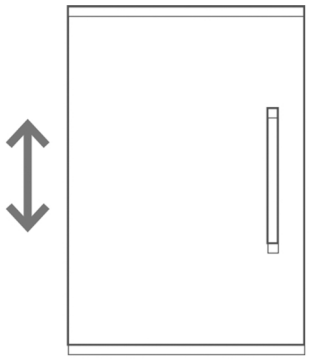

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

