# ASSEMBLY INSTRUCTIONS

## PUSH BACK RECLINING CHAIR

Legs and hardware are stored in the bottom of the seat, please take them out for assembly.

⚠ Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

| PART | DRAWING | DESCRIPTION | QTY |
|---|---|---|---|
| A | 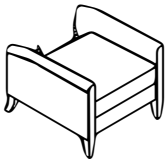 | Seat | 1 PC |
| B |  | Backrest | 1 PC |
| C | | Right Wing | 1 PC |
| D | | Left Wing | 1 PC |

# ASSEMBLY INSTRUCTIONS

## PUSH BACK RECLINING CHAIR

STEP 1:

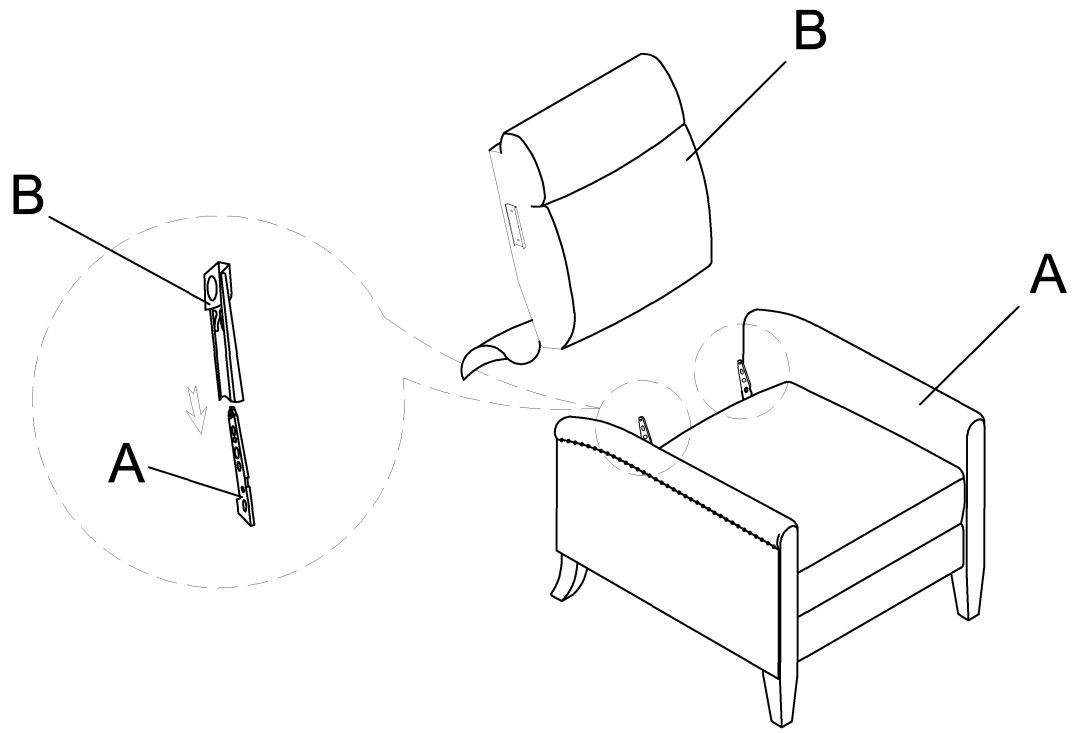


STEP 2:

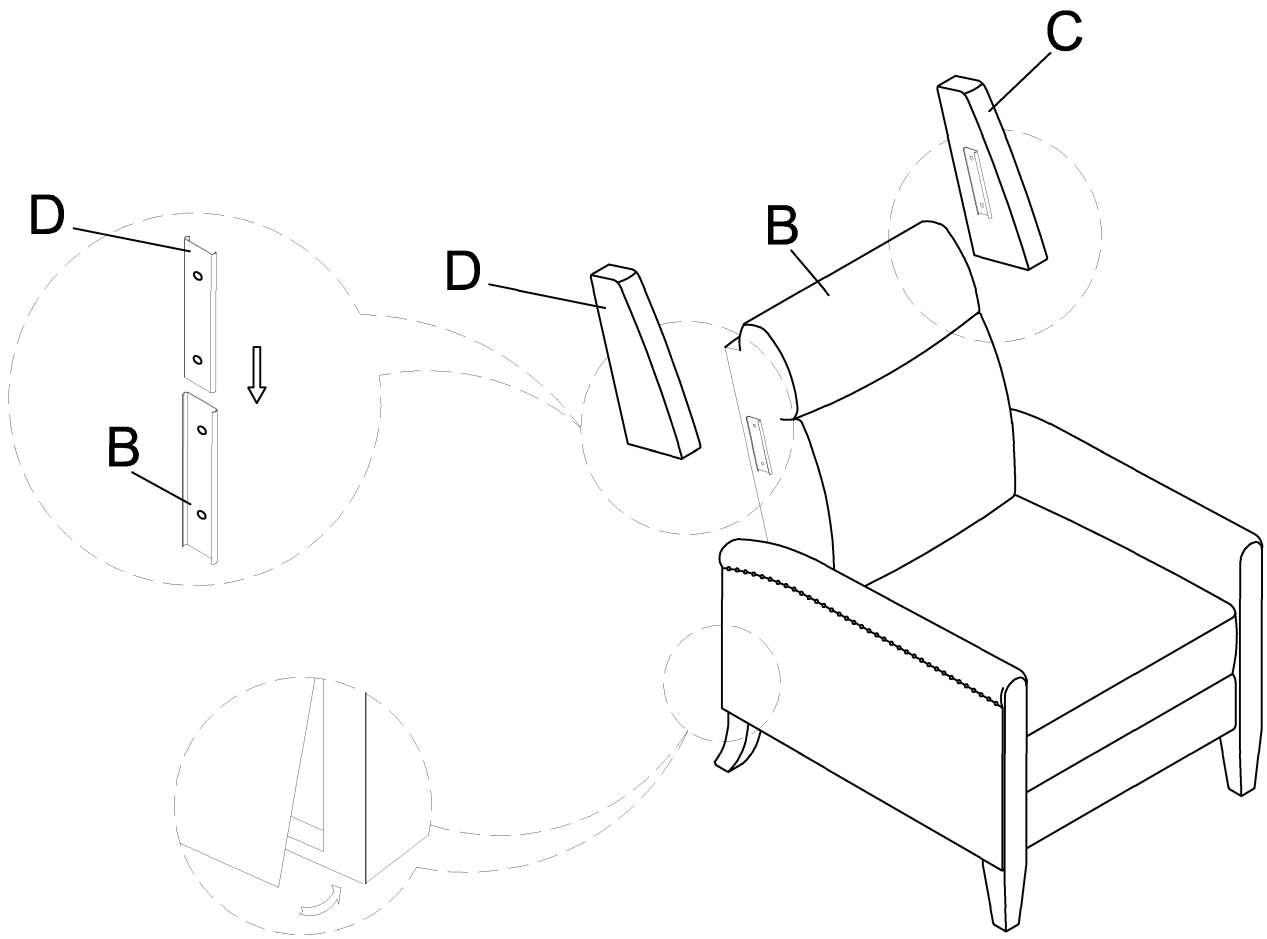

# ASSEMBLY INSTRUCTIONS

## PUSH BACK RECLINING CHAIR

COMPLETED

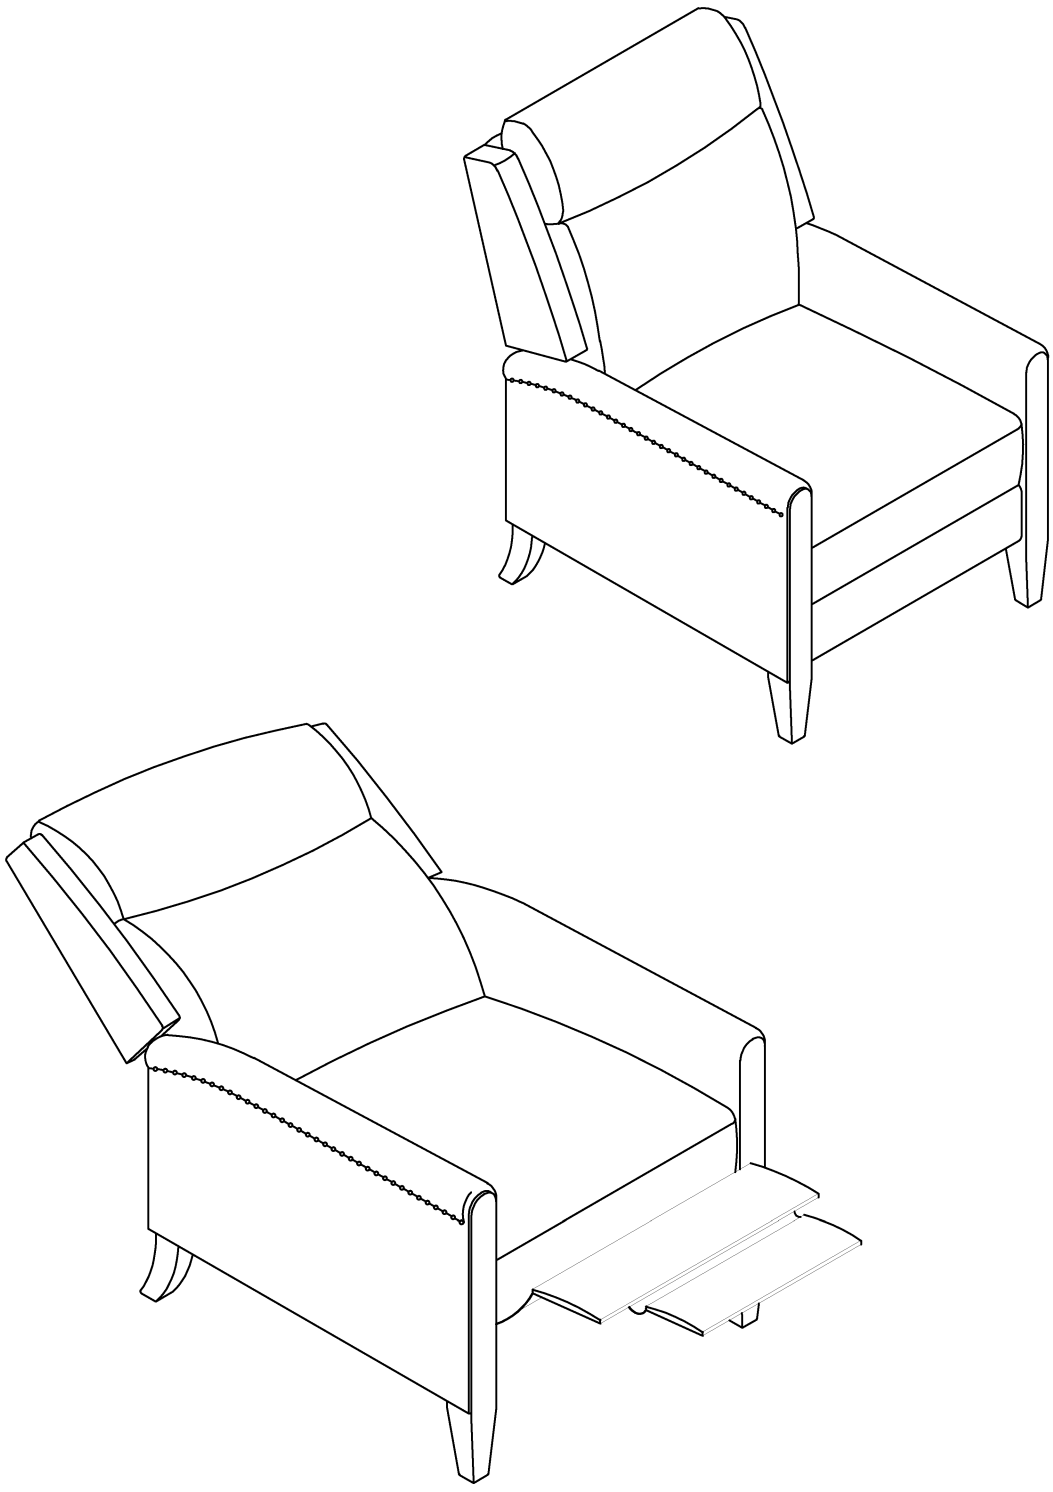

### Care Instruction for Textured Fabric Furniture:

In order to maintain the original appearance of your Textured Fabric furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
  Sunlight and or exposure to heating and air conditioning outlets will fade / damage Textured Fabric.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary

⚠ For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.