
TV Stand

Assembly Instructions - Please keep for future reference

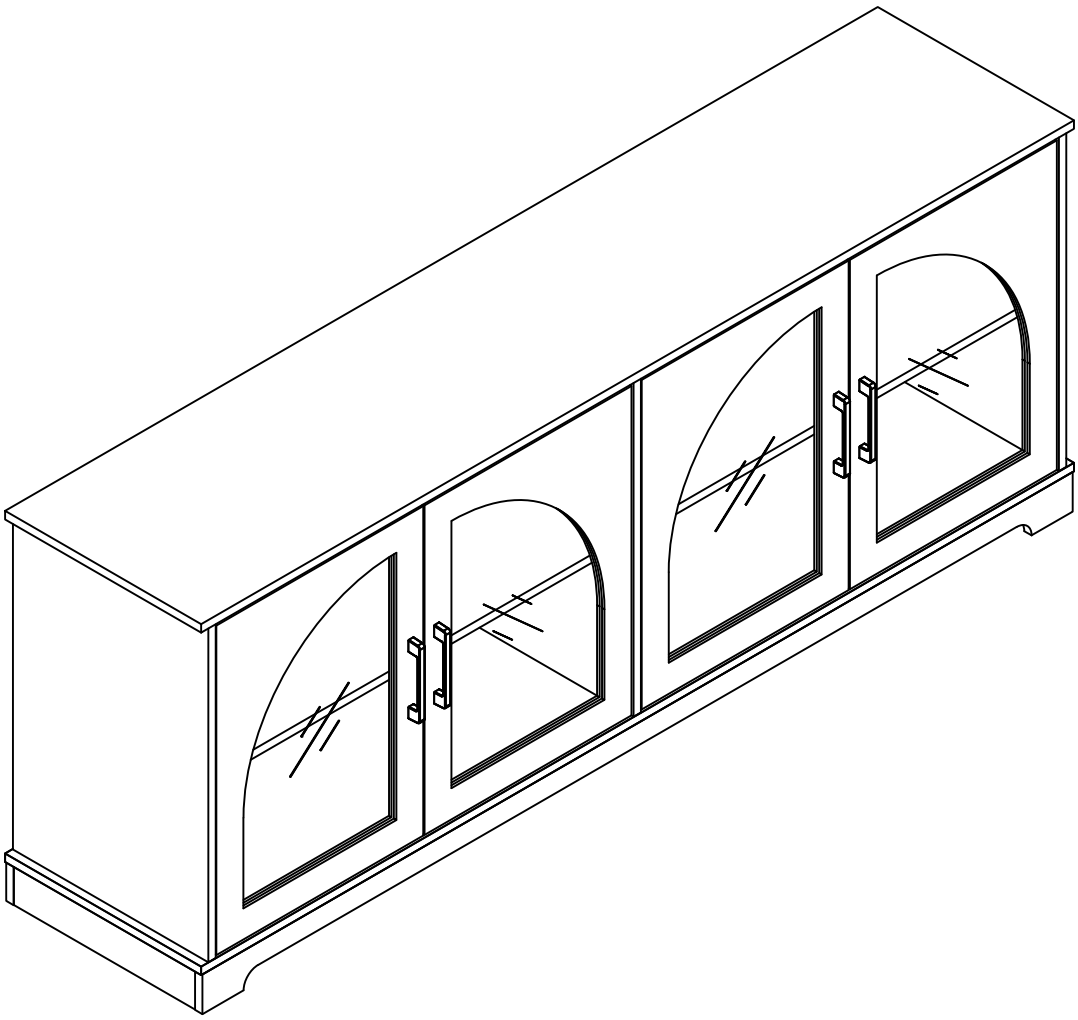

Dimensions

Width-66.929inch

Depth-15.748inch

Height-27.165inch

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully the bolts

• Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions








To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components-Fittings

Please check you have all the panels llsted below

Note:The quantlle below are the correcet amount to complete the assembly. in some cases more fittings may be supplied than are required

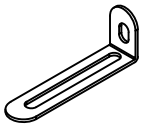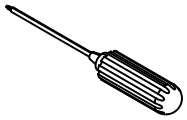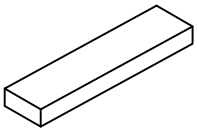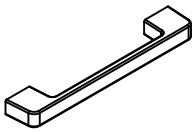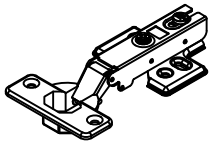Ⓐ  6*35mm Cam Bolt x 36	Ⓑ  15*10mm Cam Lock x 36	Ⓒ  8*30mm Dowel x 12	Ⓓ  4*40mm Screw x 8
Ⓔ  3.5*14mm Screw x 70	Ⓕ  Layer plate support x 8	Ⓖ  Anti-tilt Angle iron x 2	Ⓗ  6*21mm Door stop x 4
Ⓘ  Phillips screwdriver x1	Ⓙ  Back panel buckle x 20	Ⓚ  Plastic expansion bolt x 2	Ⓛ  EVA pad x 9
Ⓜ  Metal handle x 4	Ⓝ  4*18mm Screw x 8	Ⓞ  Hinge x 8	

Tools required




Phillips screwdriver

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

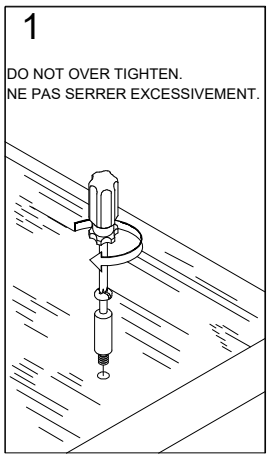

Step 2


Push the male camlock into the entry hole.

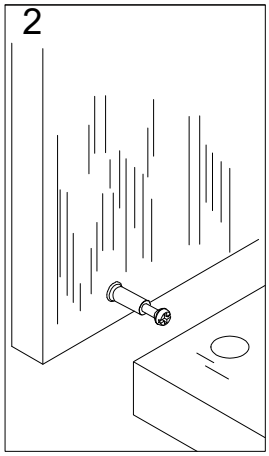

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

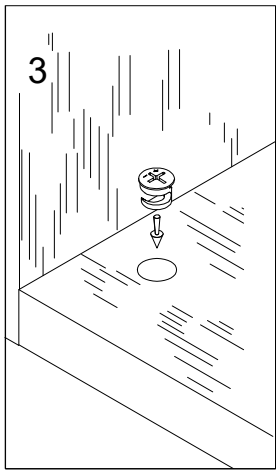


Step 4


Turn the female camlock clockwise with a screwdriver.











You should feel a click when the camlock is locked in place.

The joint is now secure.

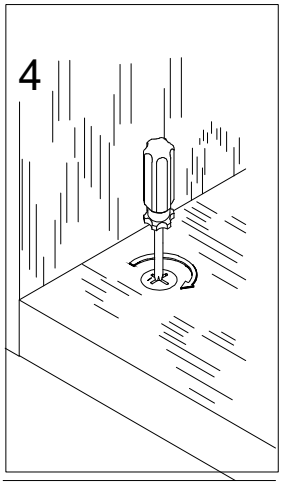


Assembly Instructions

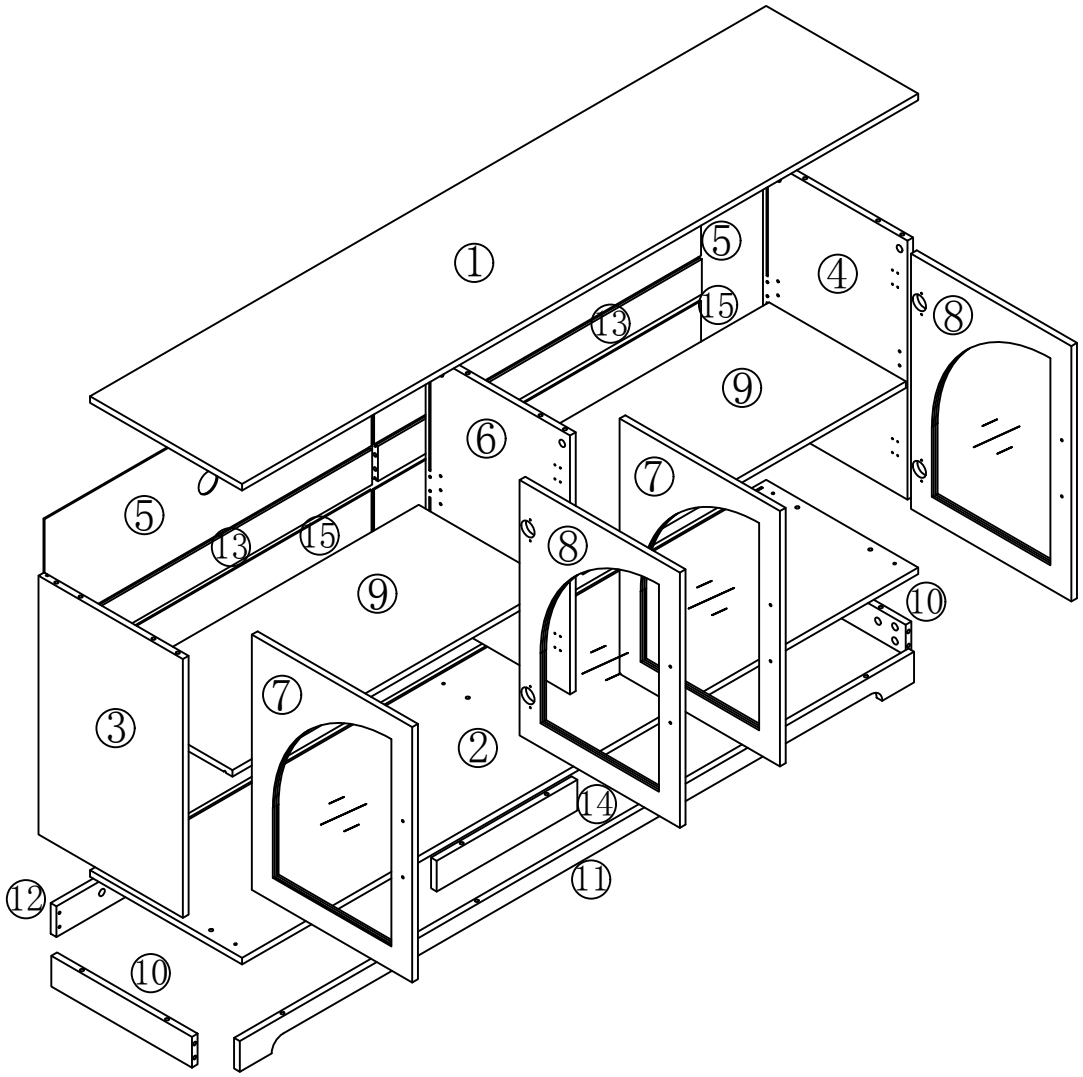

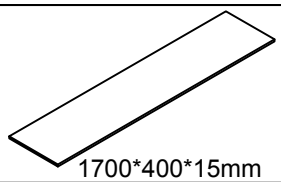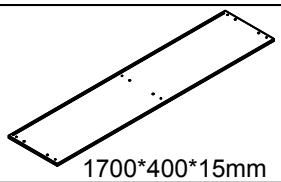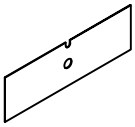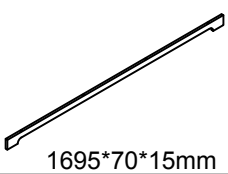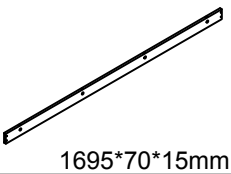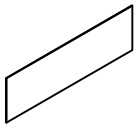
 1700*400*15mm	 1700*400*15mm	 590*399*15mm	 590*399*15mm
①X1	②X1	③X1	④X1
 820*260*3mm	 590*399*15mm	 582*402*15mm	 582*402*15mm
⑤X2	⑥X1	⑦X2	⑧X2
 810*360*15mm	 364*70*15mm	 1695*70*15mm	 1695*70*15mm
⑨X2	⑩ X2	⑪ X1	⑫ X1
 812.5*86*15mm	 364*70*15mm	 820*260*3mm	
⑬ X2	⑭ X1	⑮ X2	

Assembly Instructions

Step 1

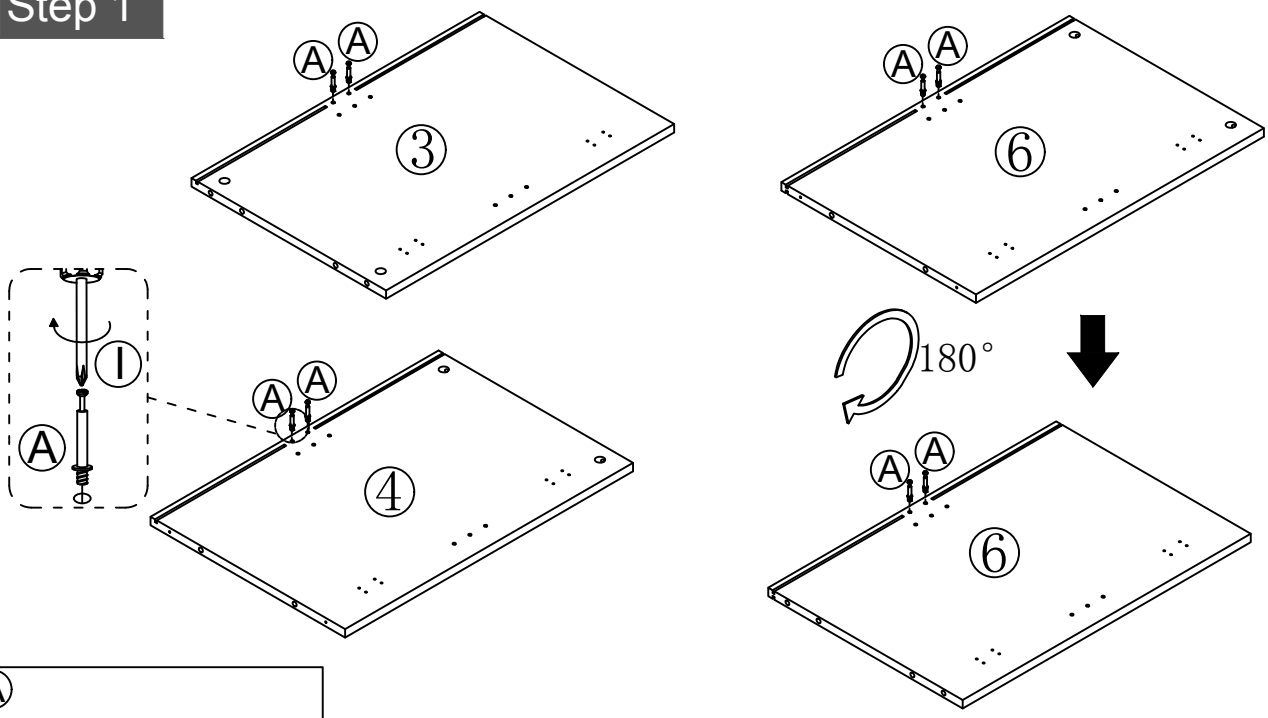



Ⓐ



6*35mm Cam Bolt x 8

Step 2

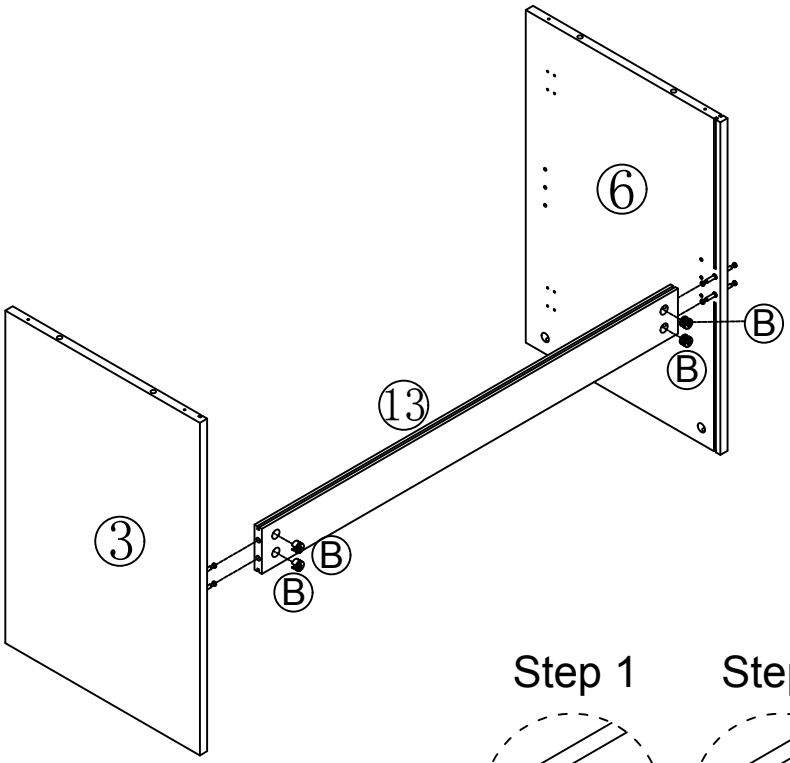

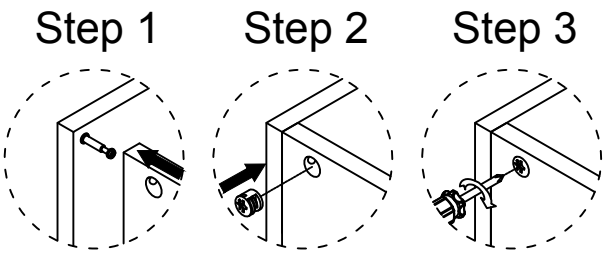


Ⓑ



15*10mm Cam Lock x 4

Assembly Instructions

Step 3

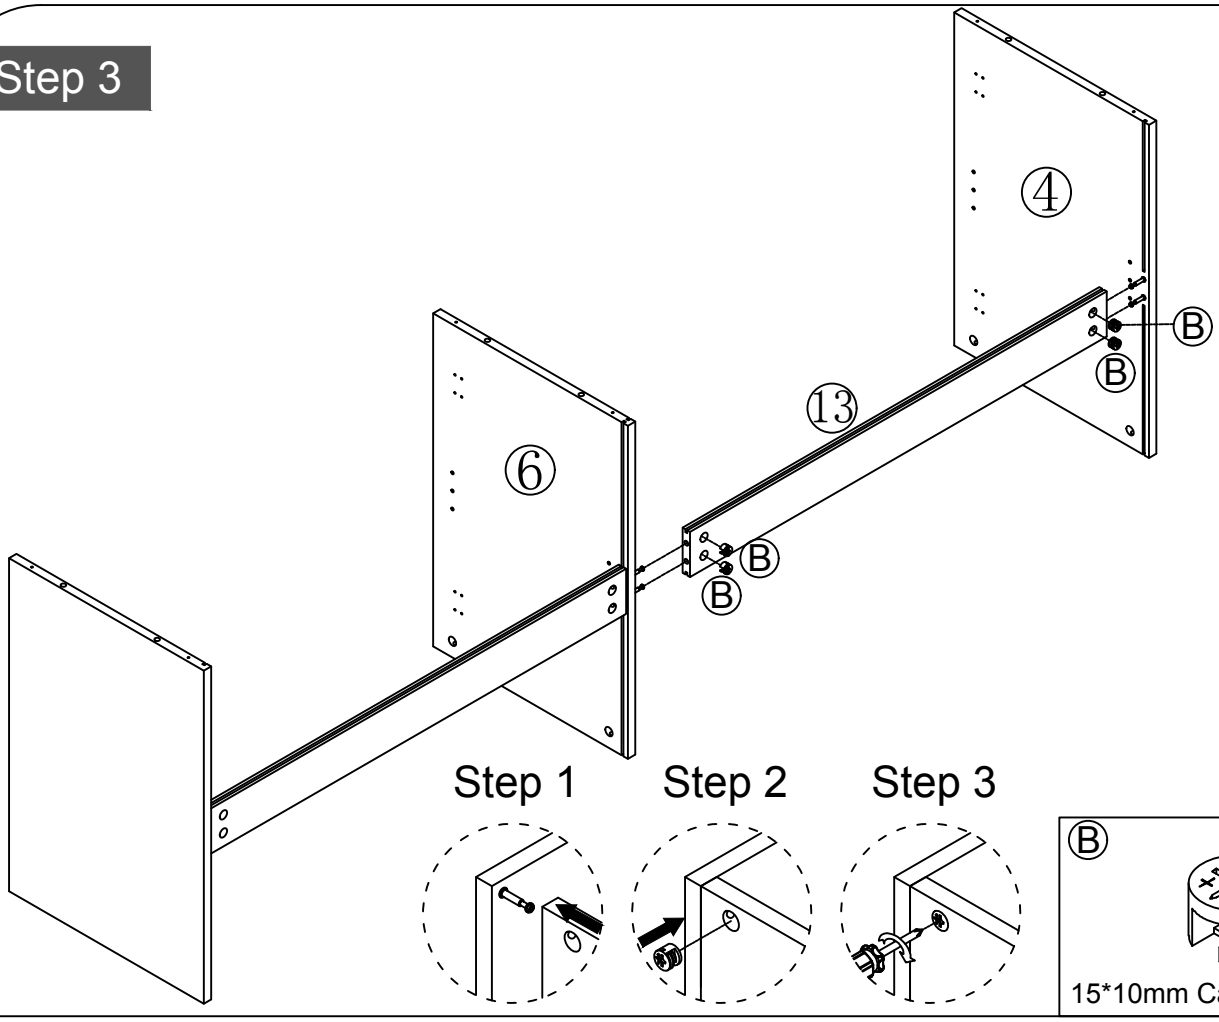


B



15*10mm Cam Lock x 4

Step 4

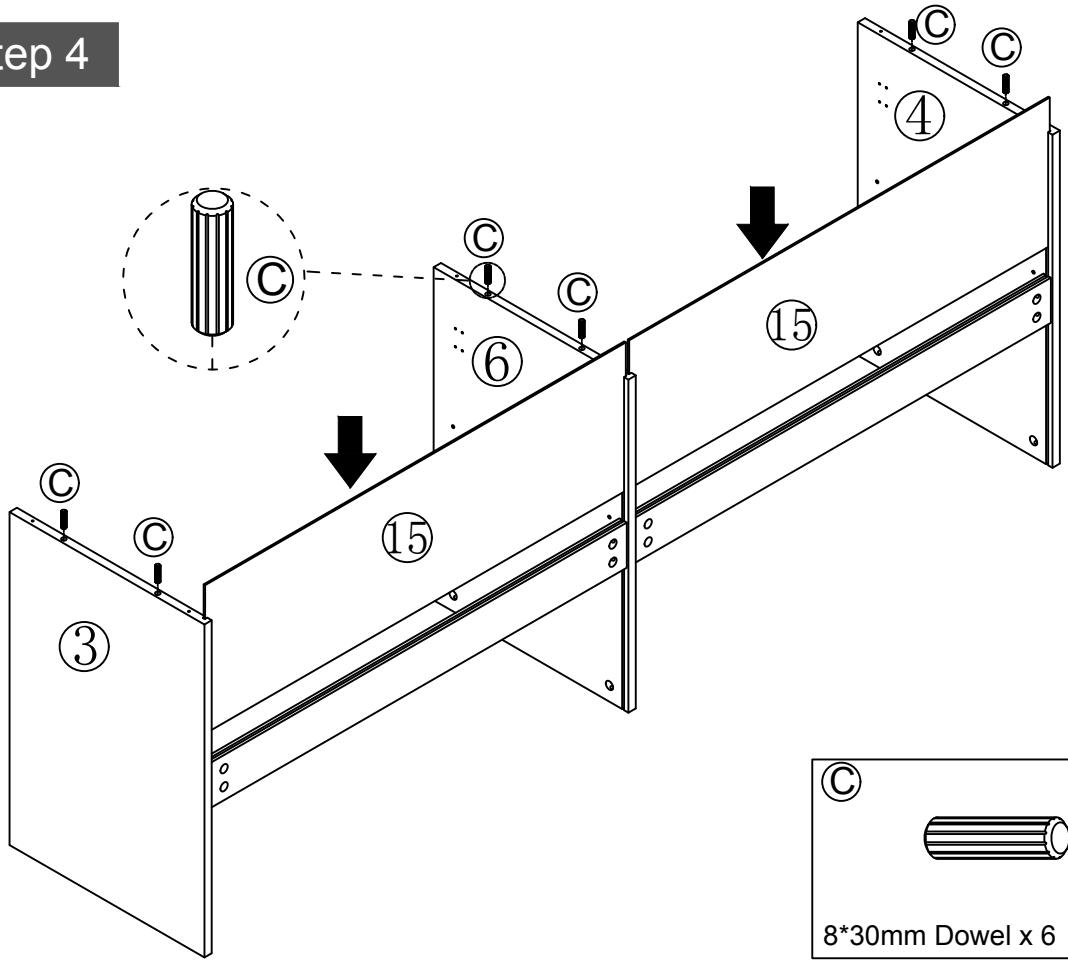


C


8*30mm Dowel x 6

Assembly Instructions

Step 5

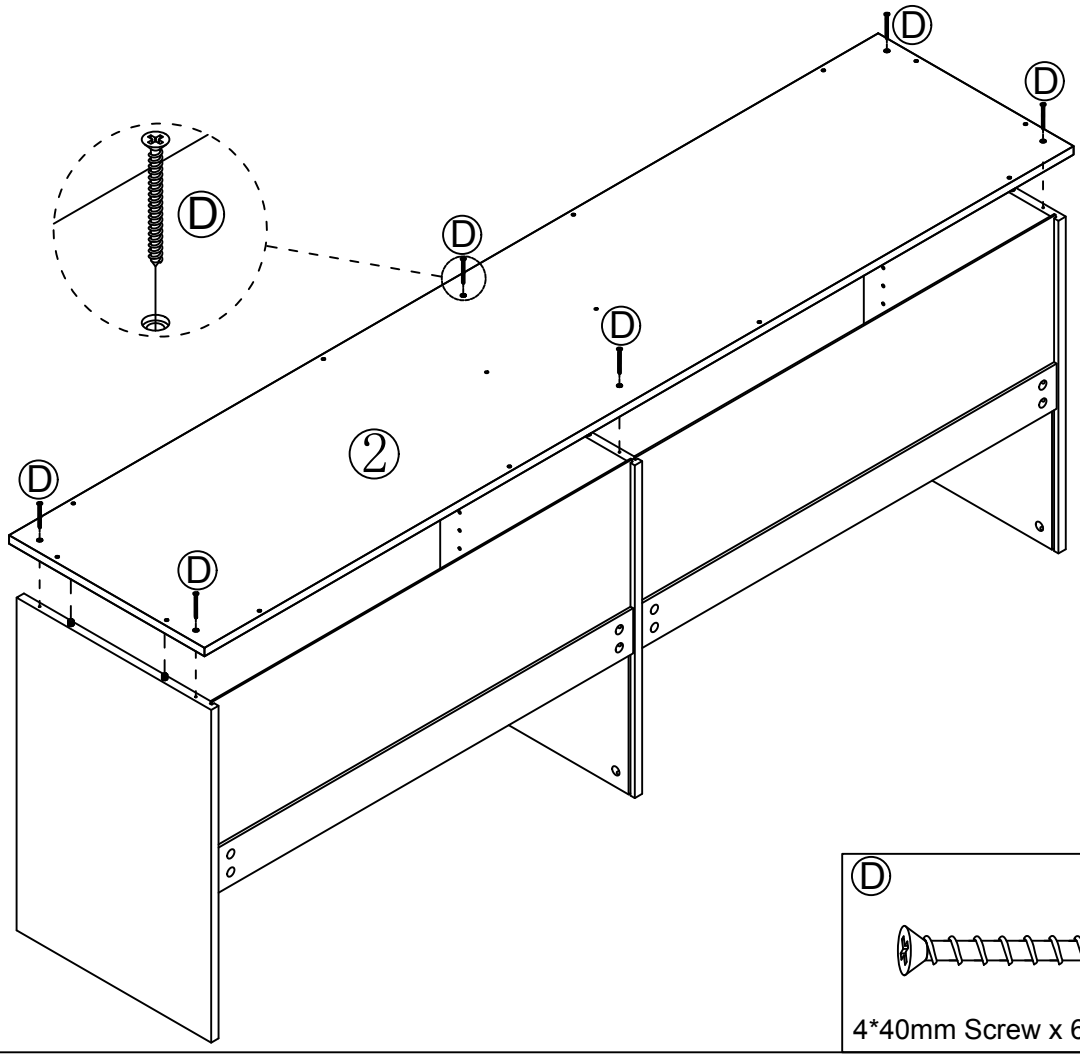


Step 6

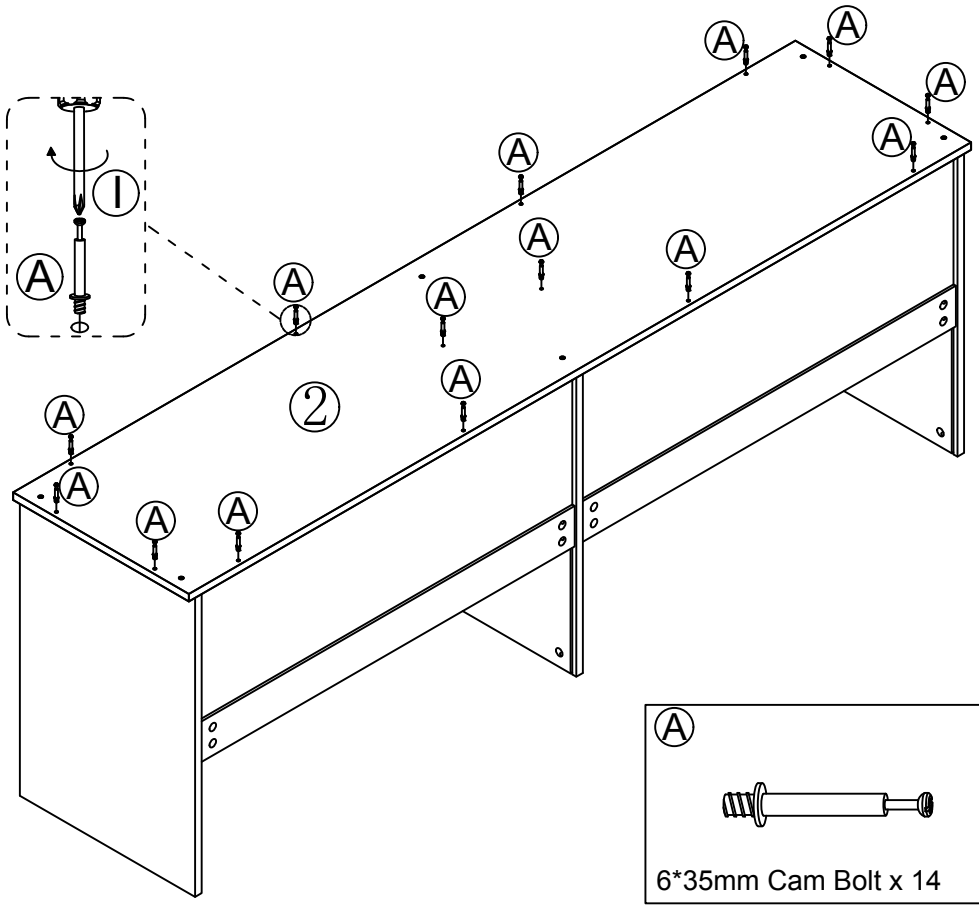

A
A
A

Assembly Instructions

Step 7

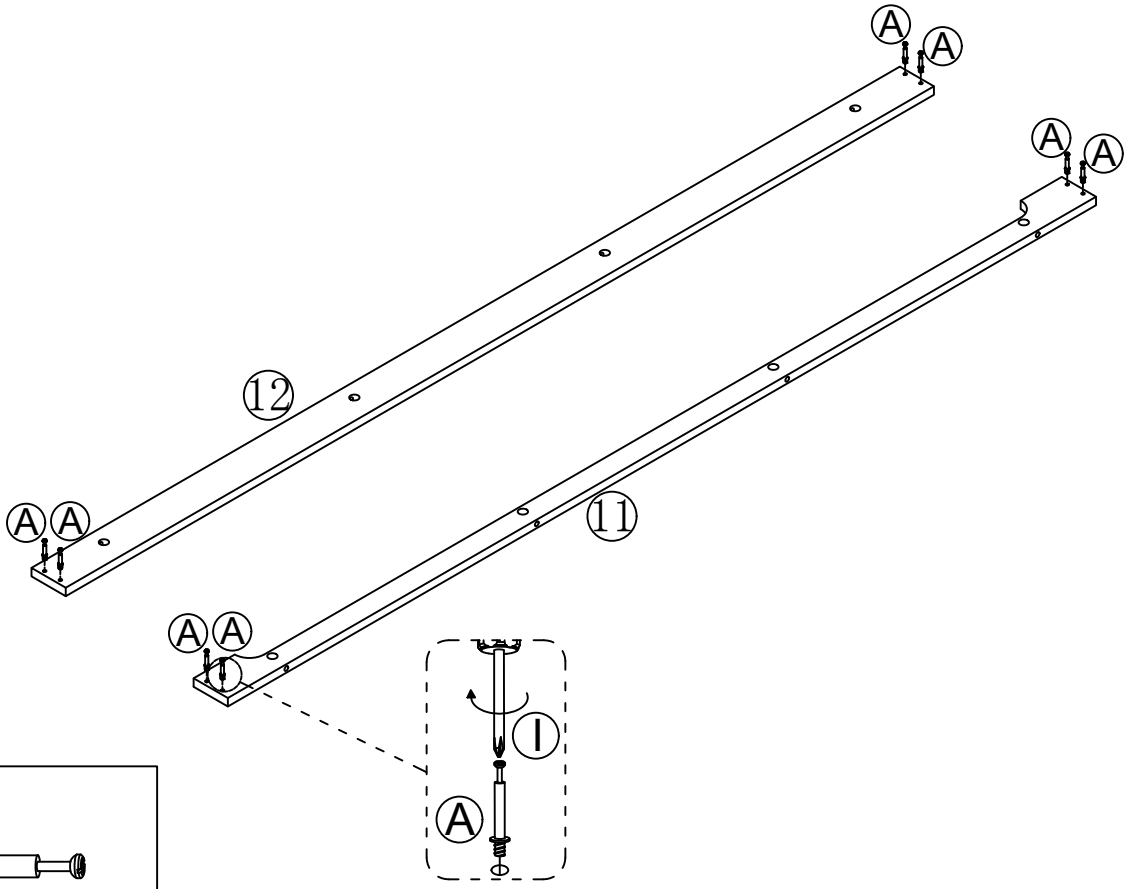


Ⓐ




6*35mm Cam Bolt x 8

Step 8

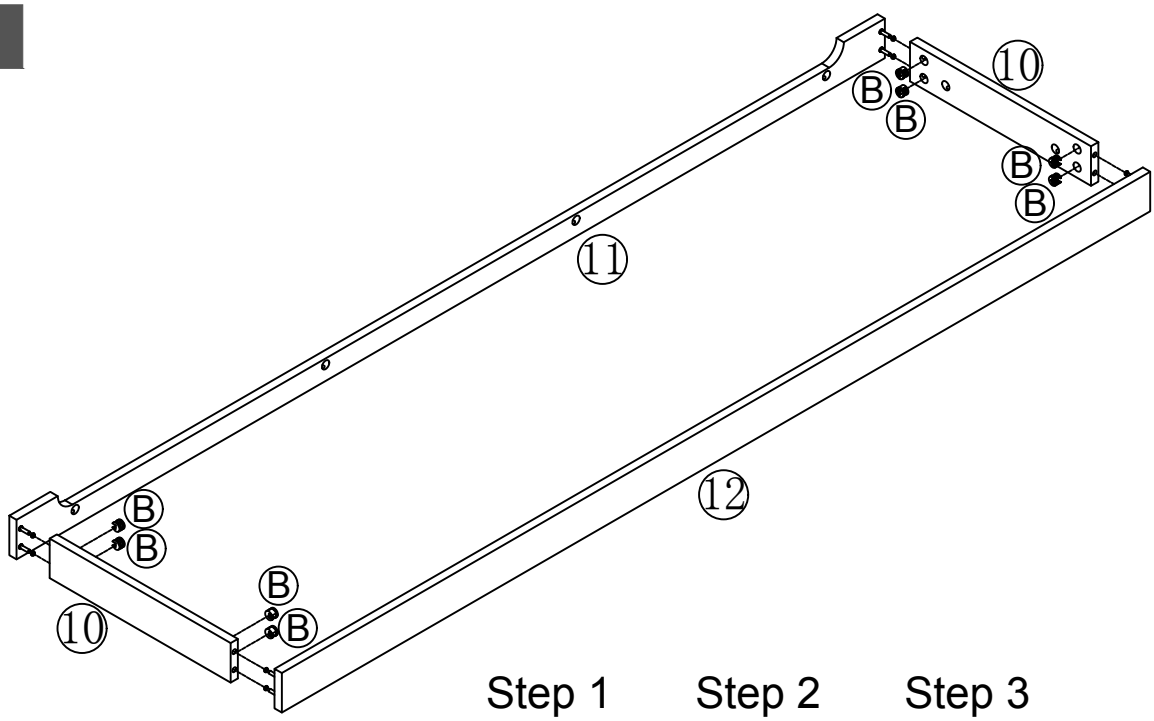

Step 1 Step 2 Step 3

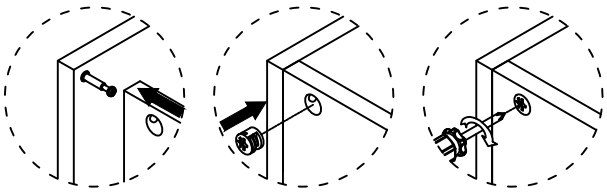

Ⓑ




15*10mm Cam Lock x 8


Assembly Instructions

Step 9


Step 1

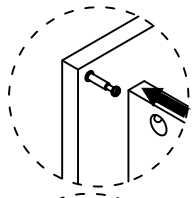


Step 2

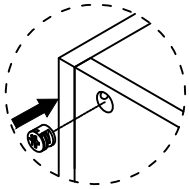

Step 3

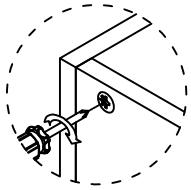

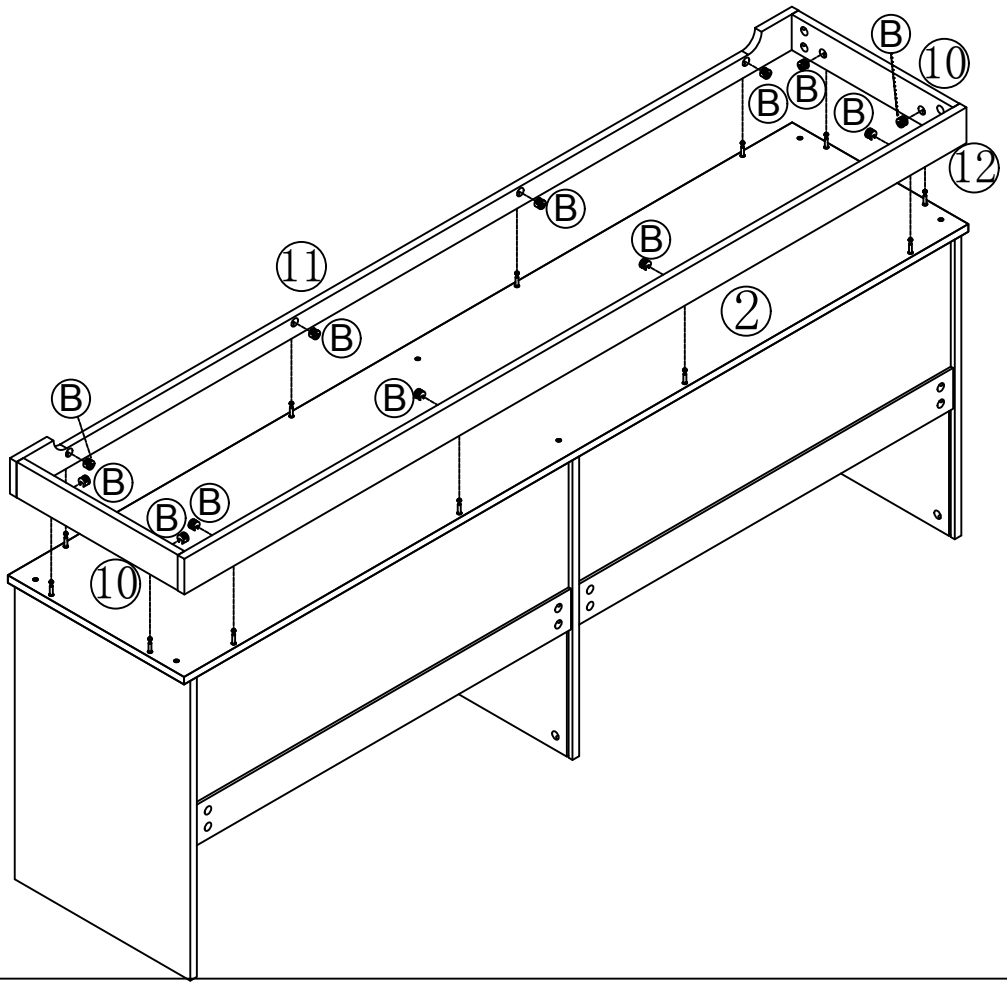


Ⓑ




15*10mm Cam Lock x 12

Step 10


Step 1

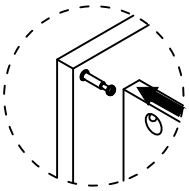


Step 2

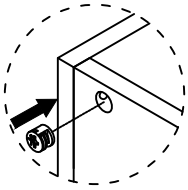

Step 3

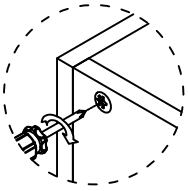

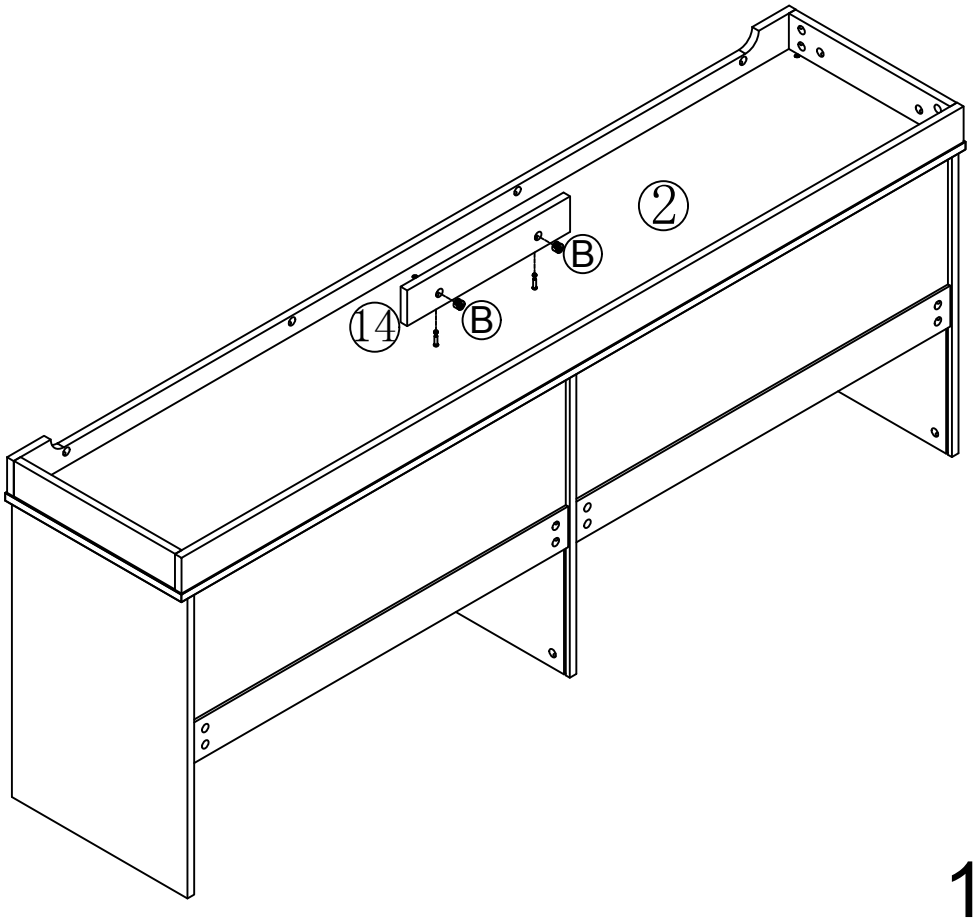


Ⓑ



15*10mm Cam Lock x2

Assembly Instructions

Step 11

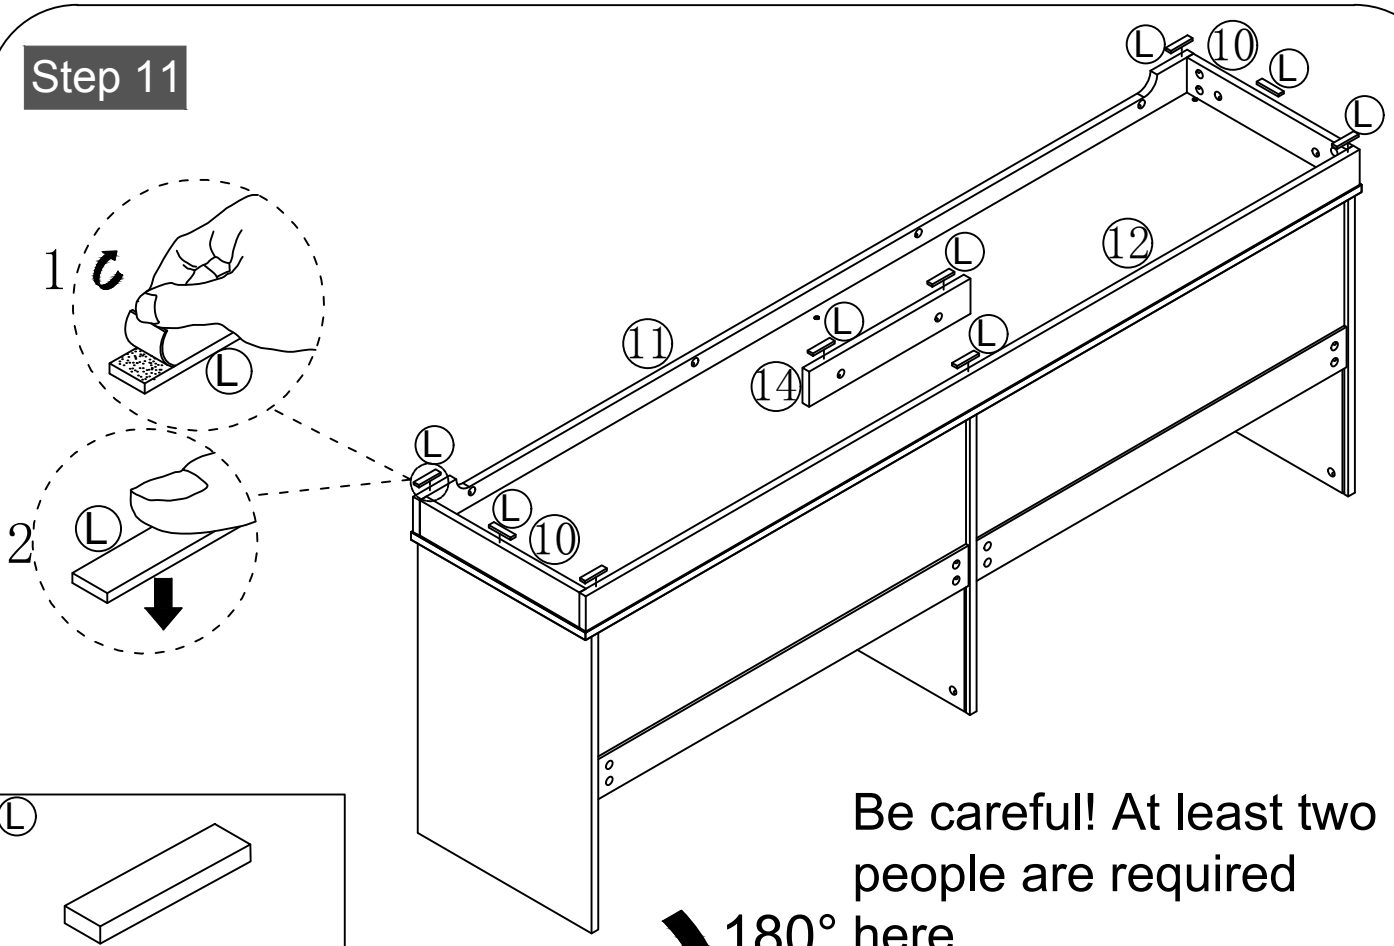


Be careful! At least two people are required here.

180°

L

EVA pad x 9

Step 12

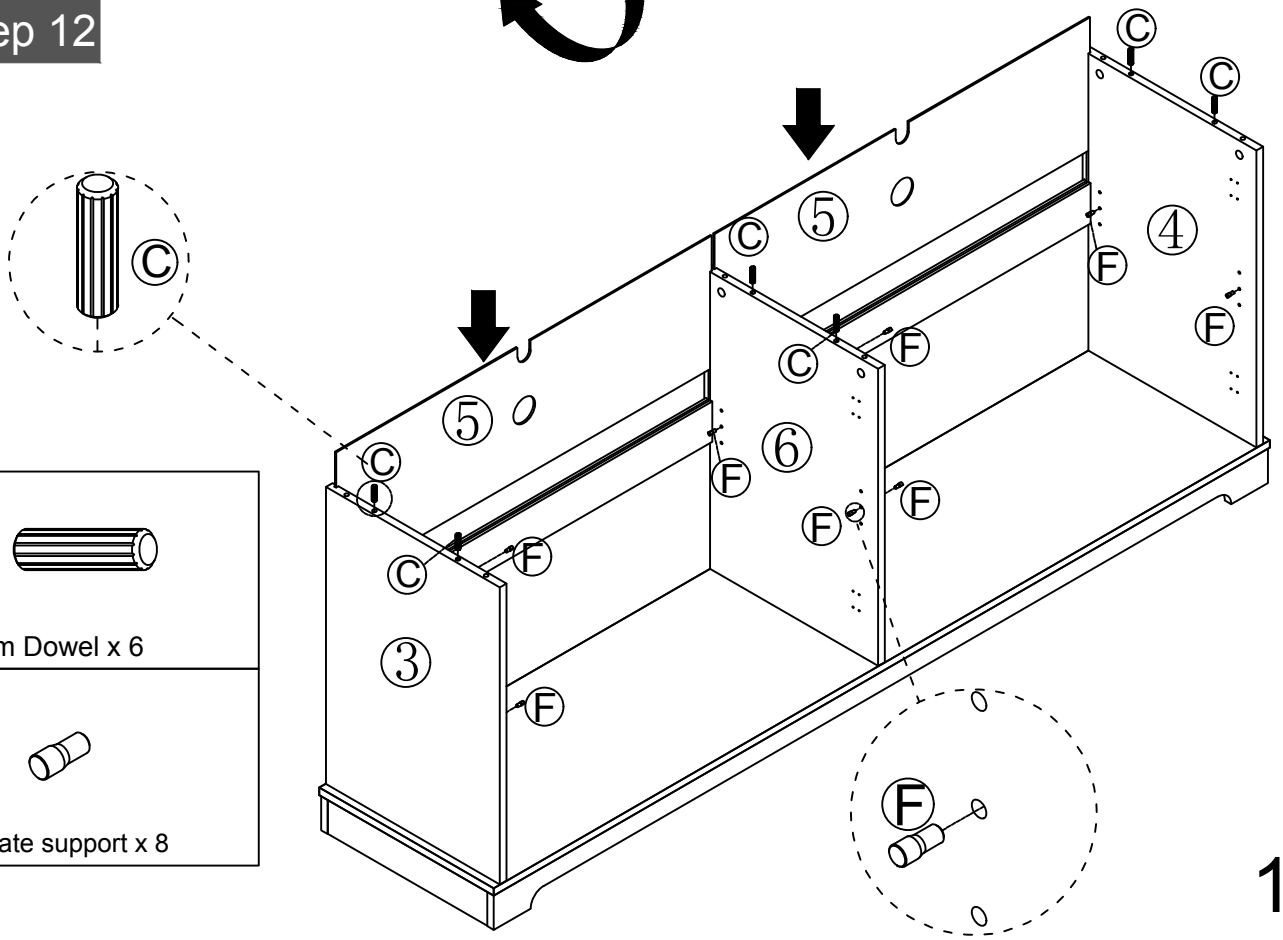

C


8*30mm Dowel x 6

F


Layer plate support x 8

Assembly Instructions

Step 13

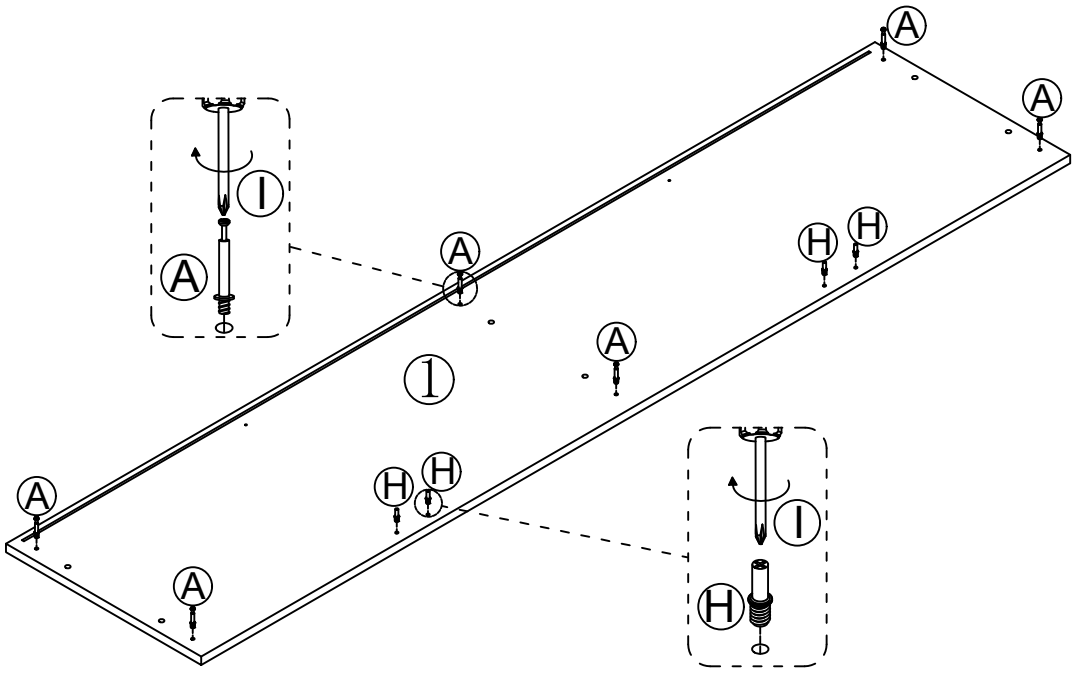

Ⓐ




6*35mm Cam Bolt x 6

Ⓗ




6*21mm Door stop x 4

Step 14

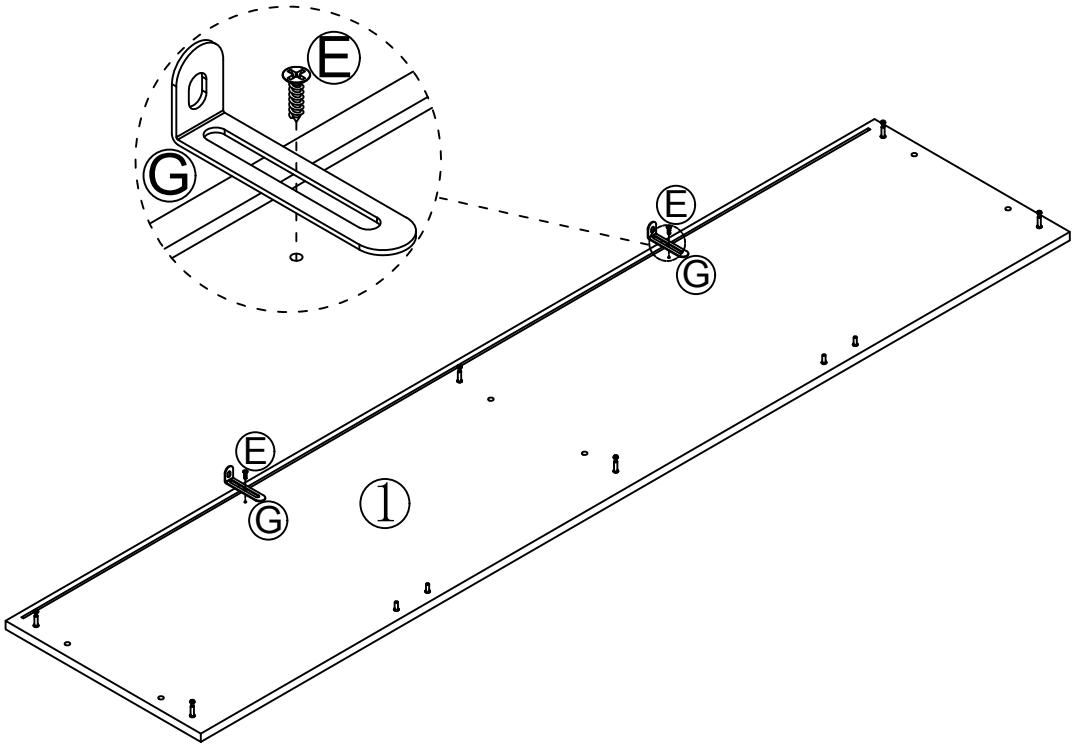

Ⓖ

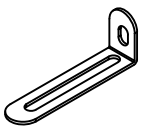

Anti-tilt Angle iron x 2

Ⓔ




3.5*14mm Screw x 2


Assembly Instructions

Step 15


Step 1

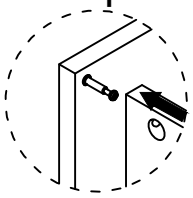


Step 2

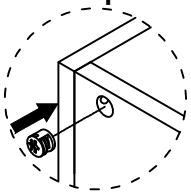

Step 3

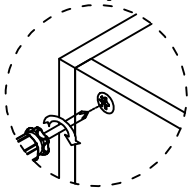

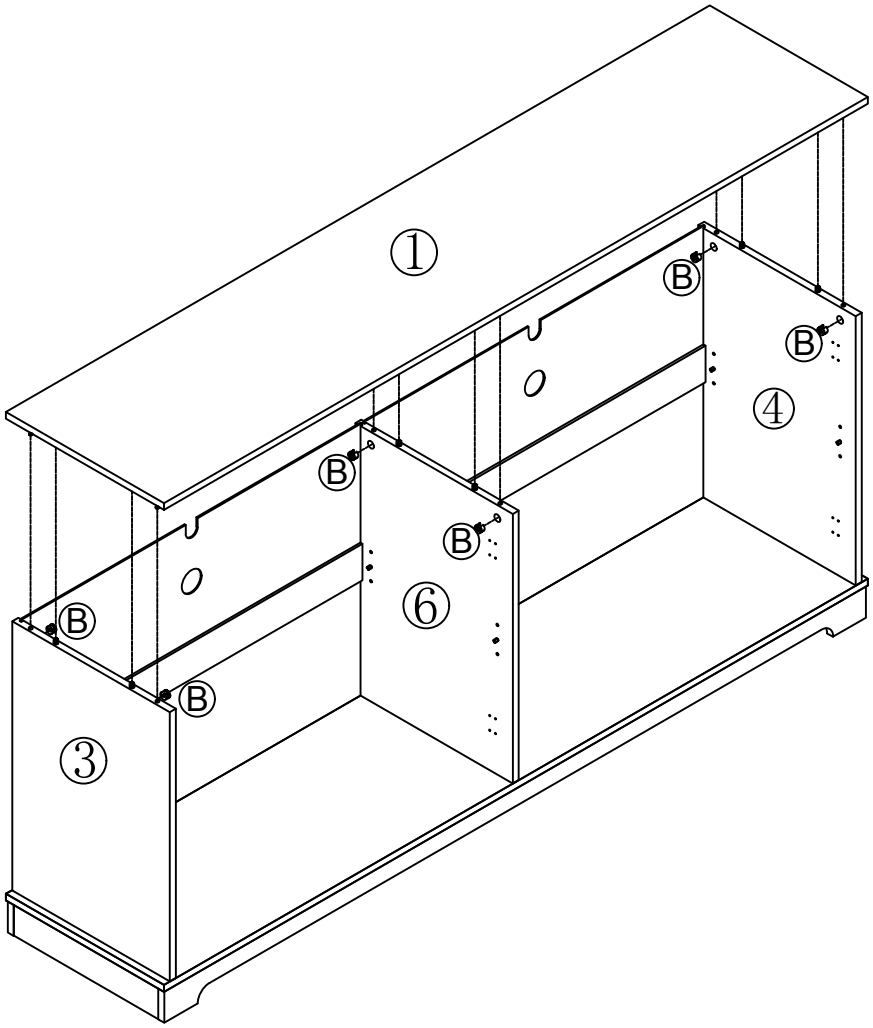


Ⓑ



15*10mm Cam Lock x6

Step 16

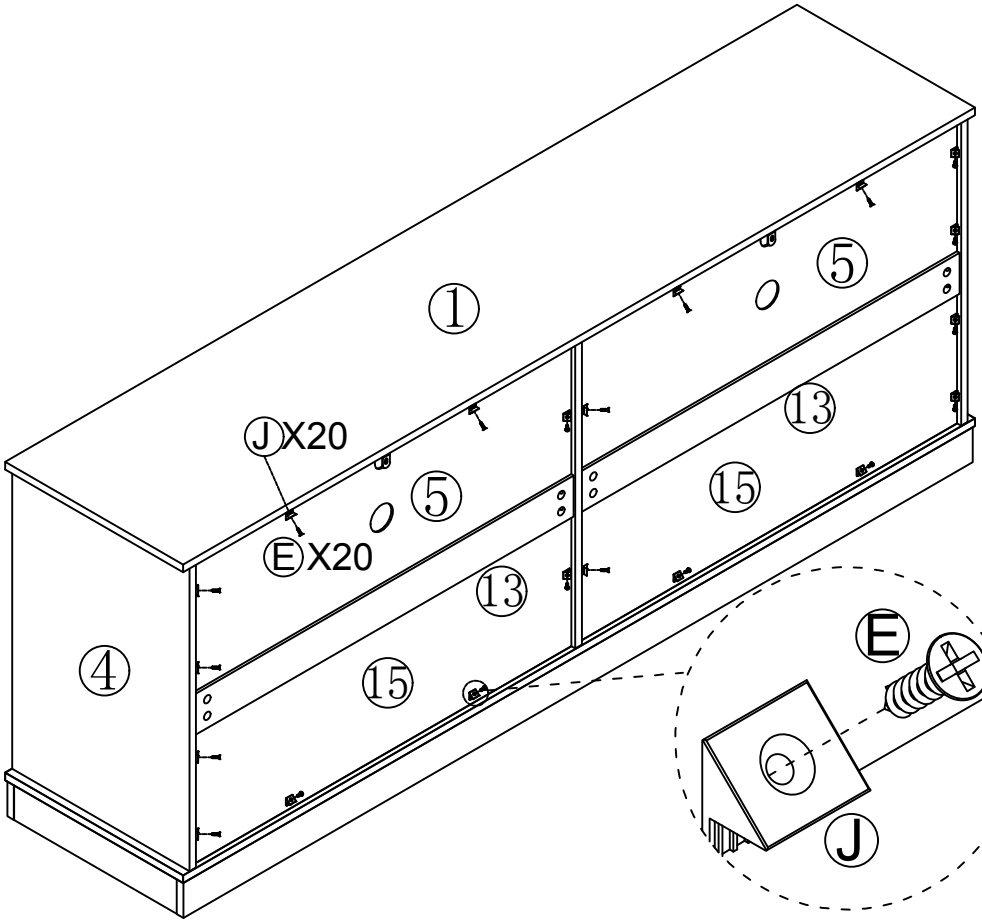

Ⓔ



3.5*14mm Screw x 20


Ⓙ



Back panel buckle x 20

Assembly Instructions

Step 17

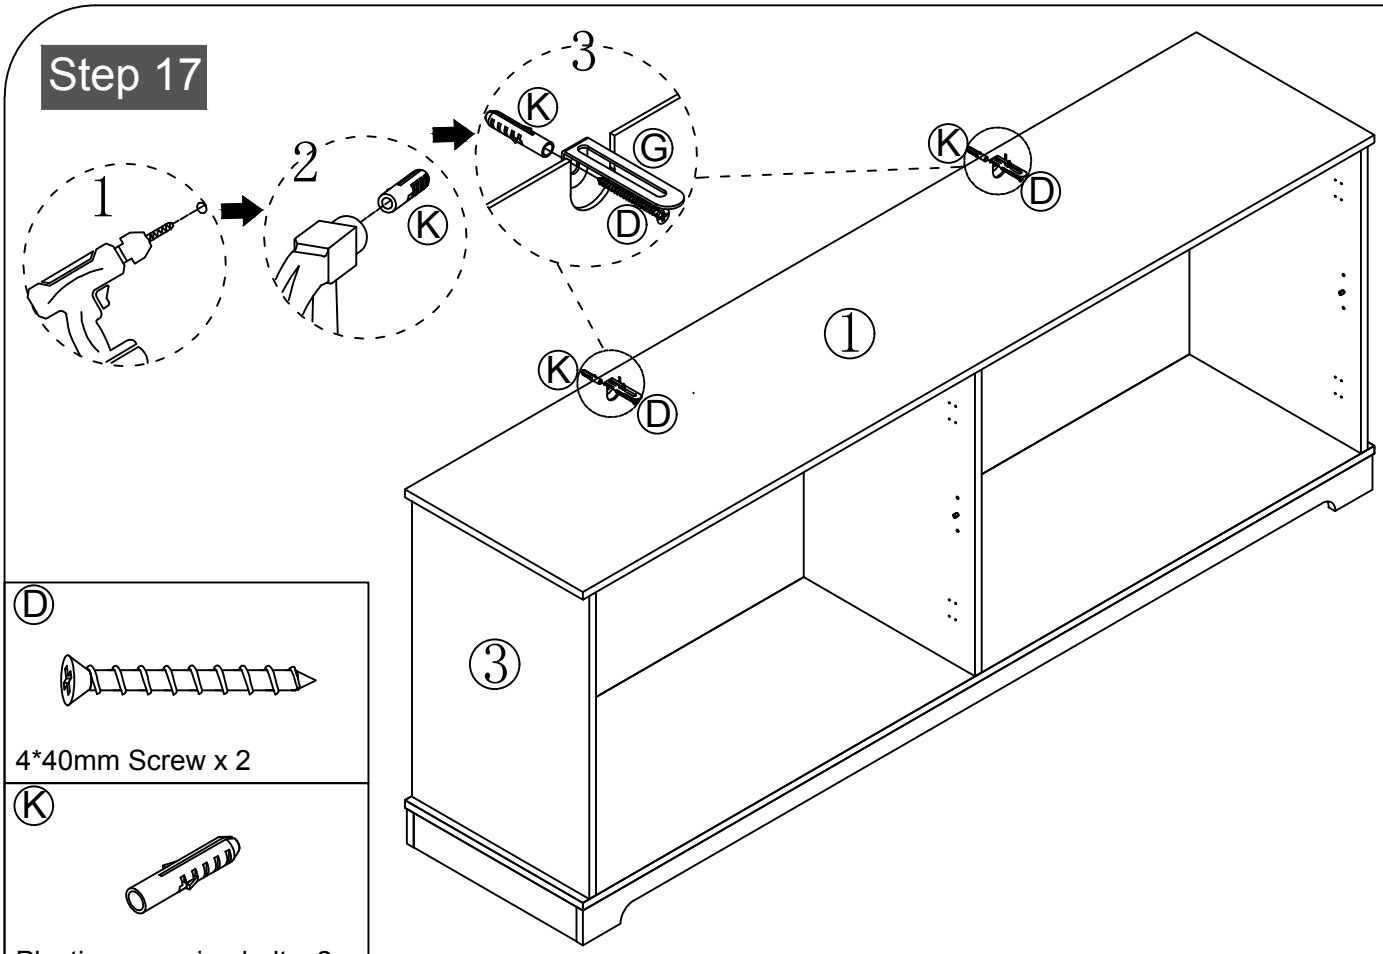


Ⓓ

4*40mm Screw x 2

Ⓚ


Plastic expansion bolt x 2



Step 18

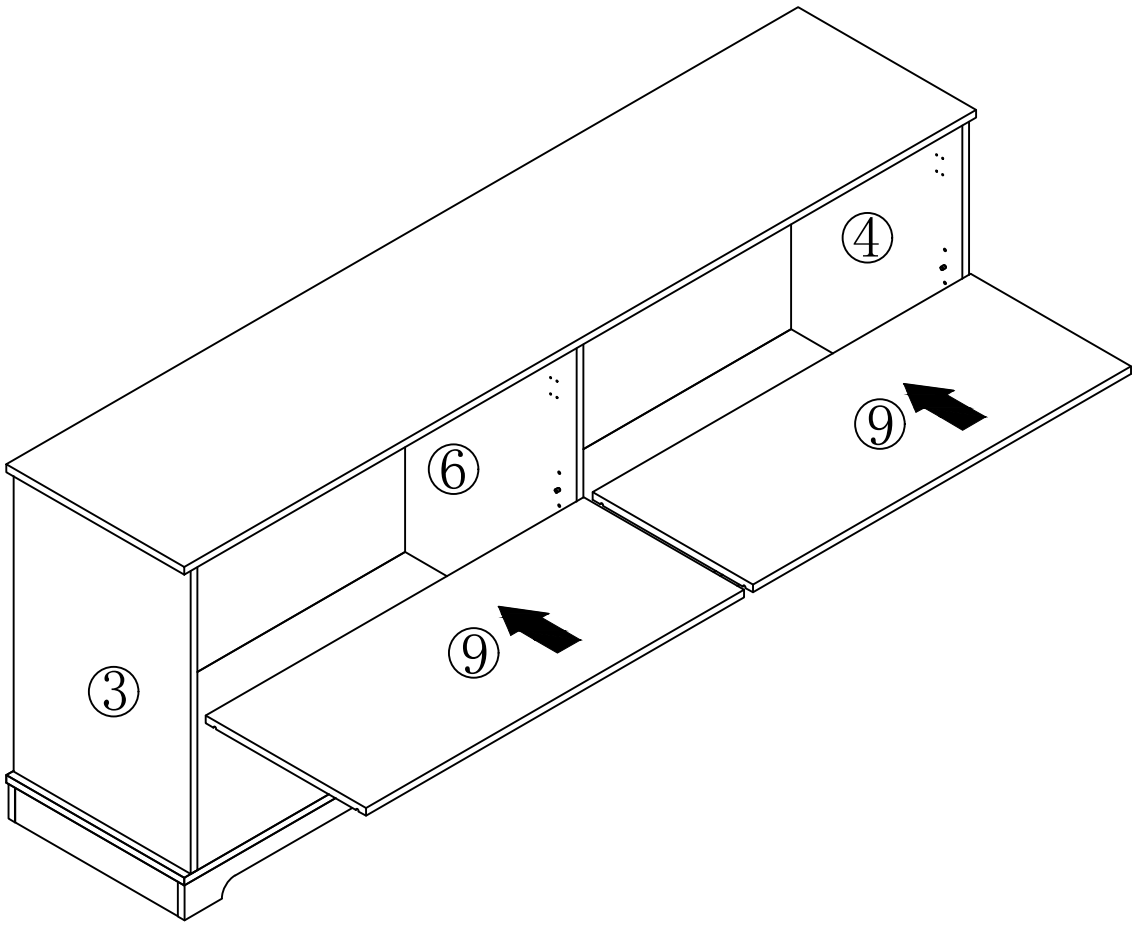


Assembly Instructions


Step 19

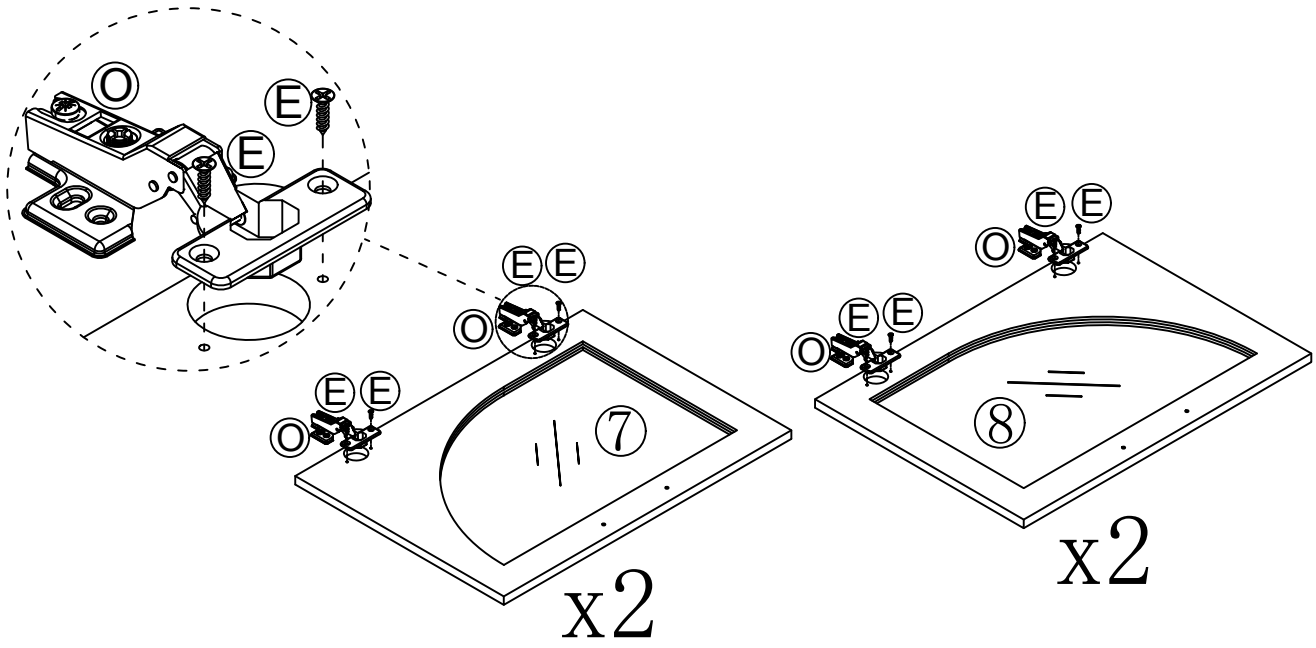

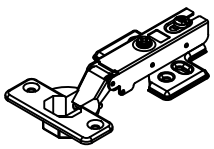E	O
	
3.5*14mm Screw x 16	Hinge x 8


Step 20

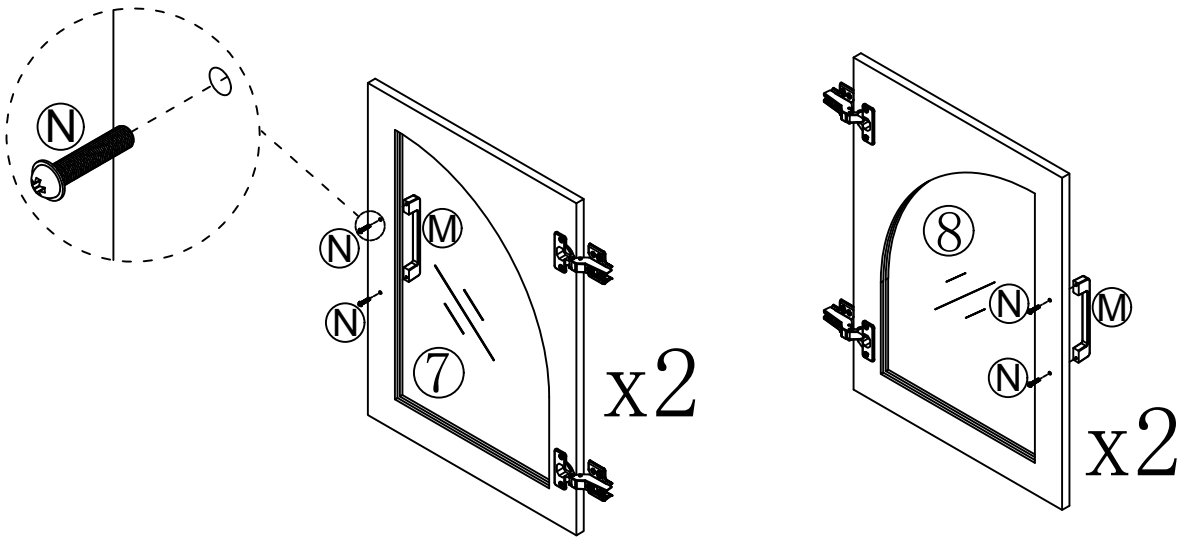

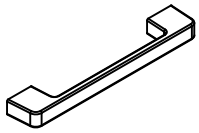
M	N
	
Metal handle x 4	4*18mm Screw x 8

Assembly Instructions


Step 21

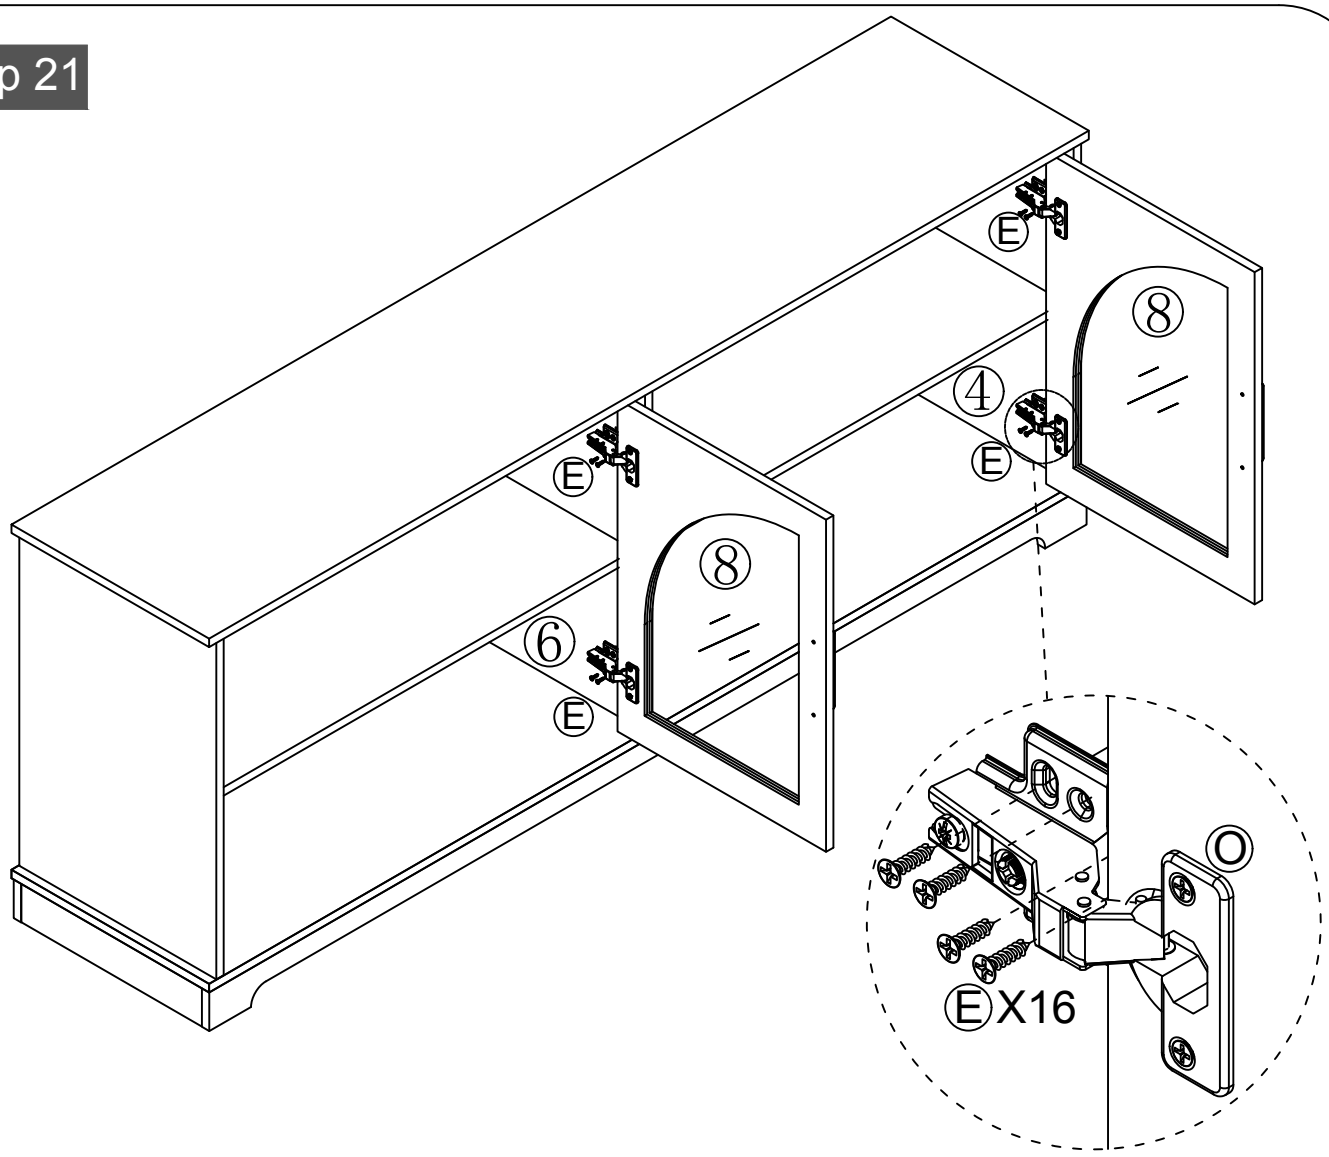

If the door can't close,please adjust the hinges.

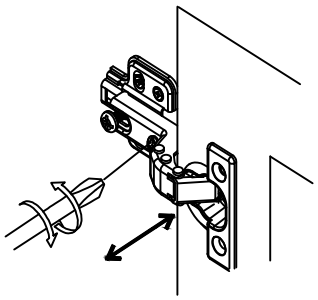

This is used to adjust the door panel in the up and down direction.

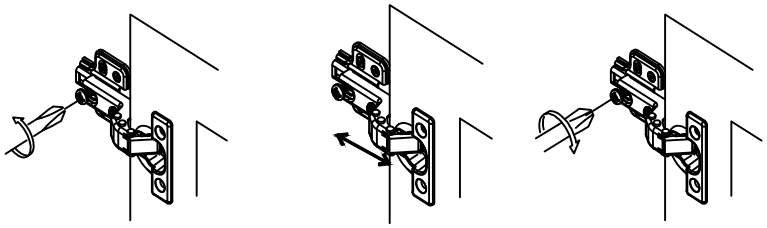

This is used to adjust the door panel in the front and back direction:Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.


Ⓔ



3.5*14mm Screw x 16


Assembly Instructions


Step 22

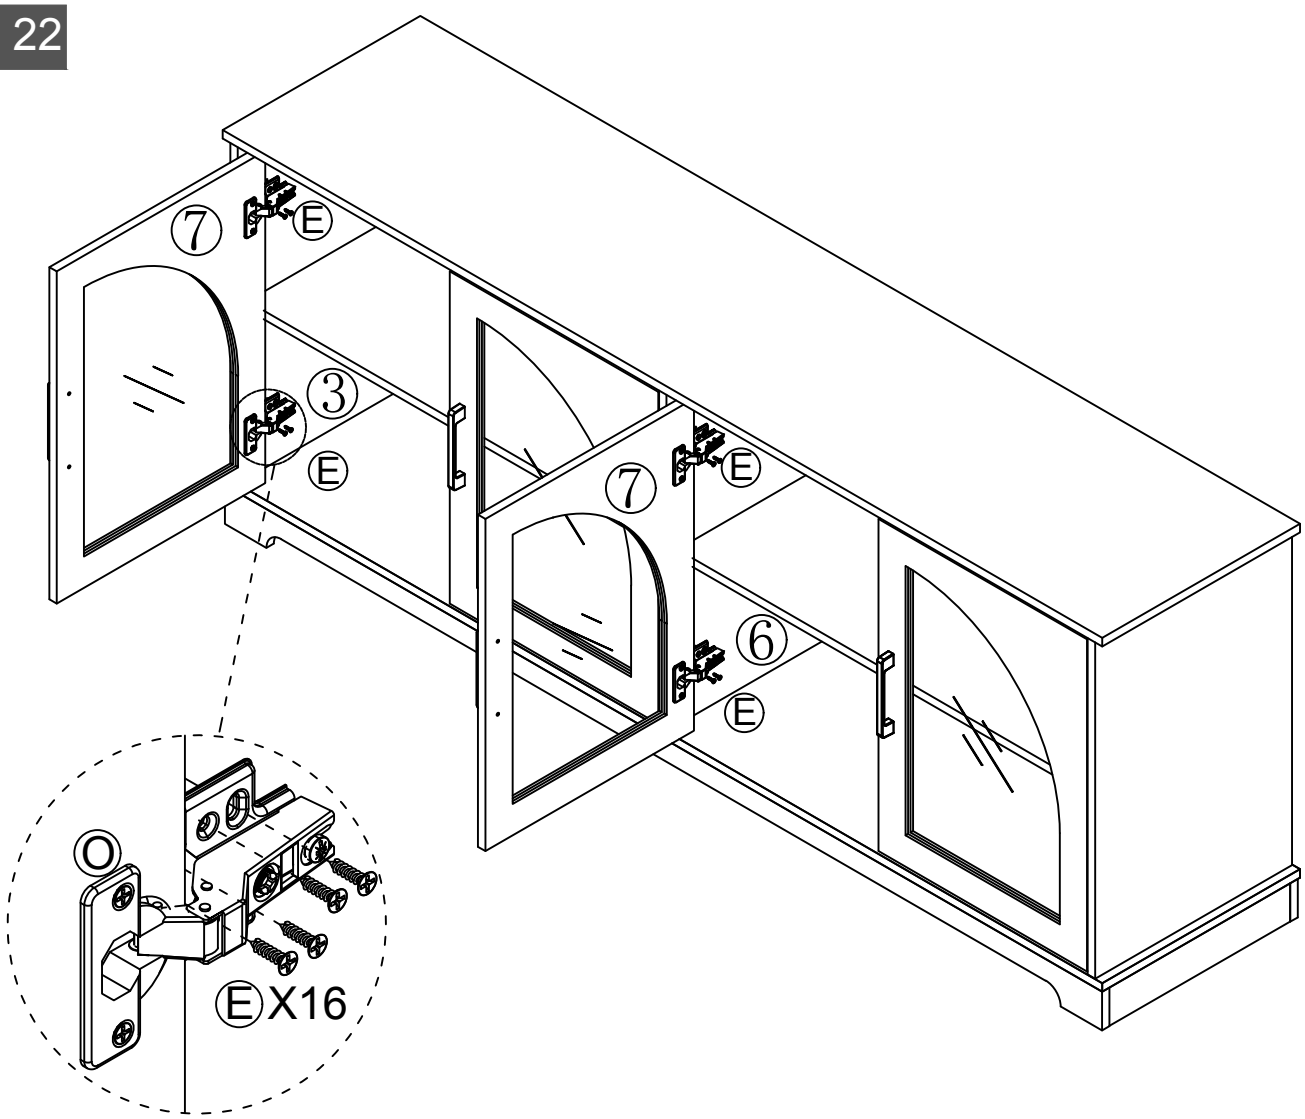

If the door can't close,please adjust the hinges.

This is used to adjust the door panel in the up and down direction.

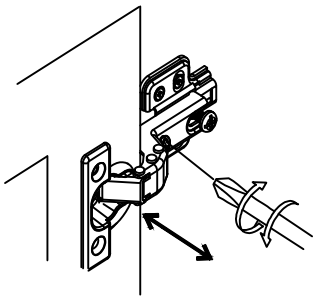

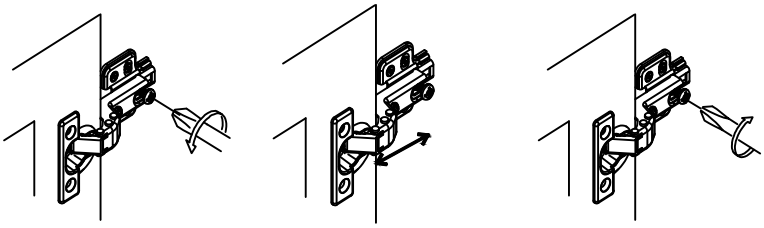

This is used to adjust the door panel in the front and back direction:Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.

Ⓔ



3.5*14mm Screw x 16

Assembly Instructions

Step 23

