


Installation Instruction


Shoe Cabinet

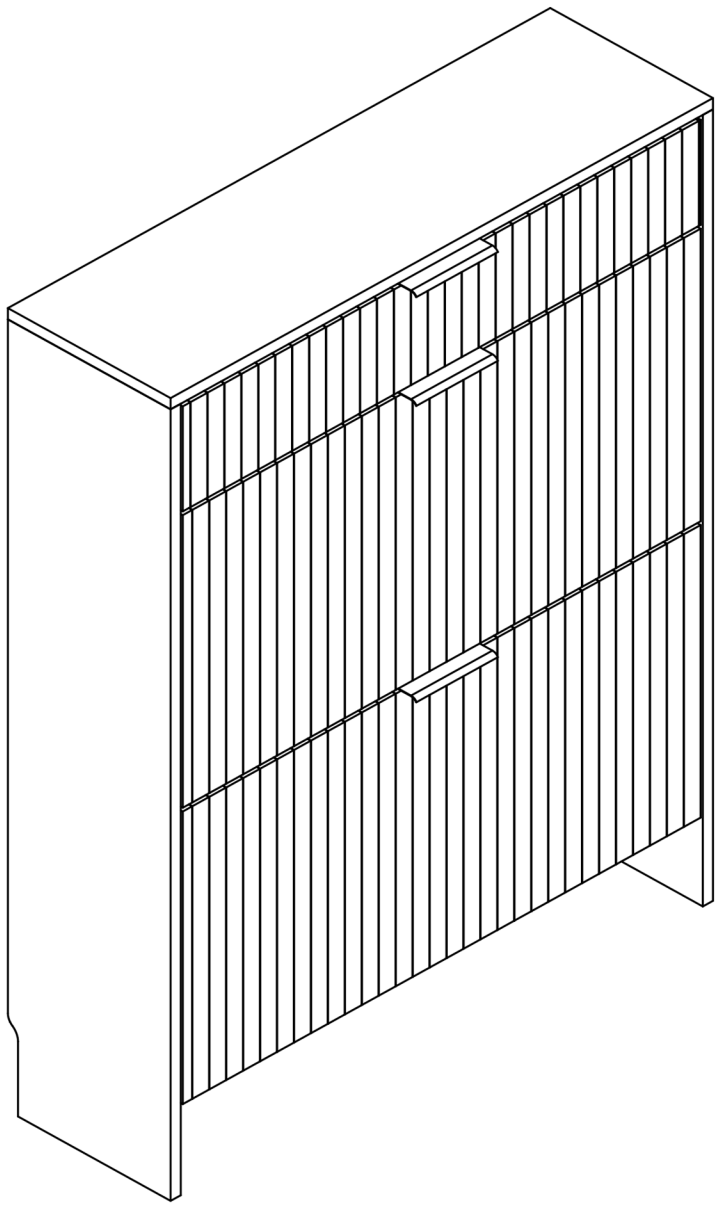

If you have any questions, please contact us.
We will help you with in 24 hours.

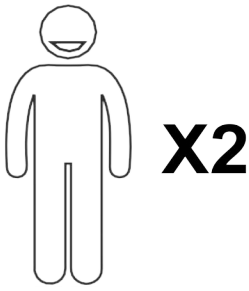




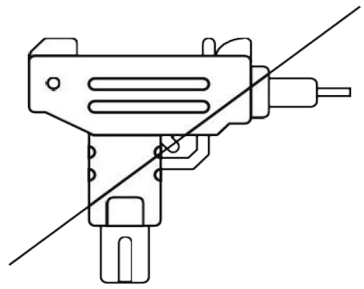


We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

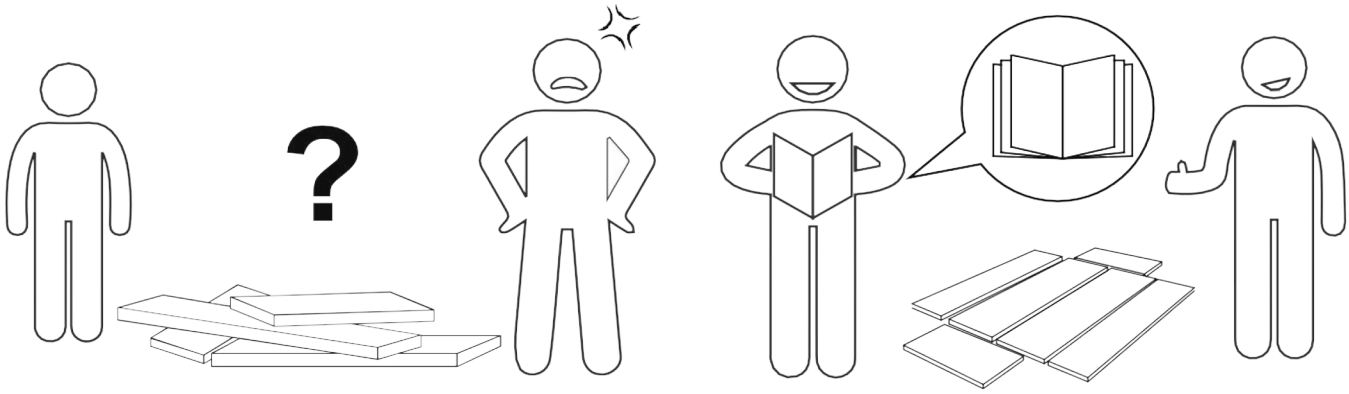


Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

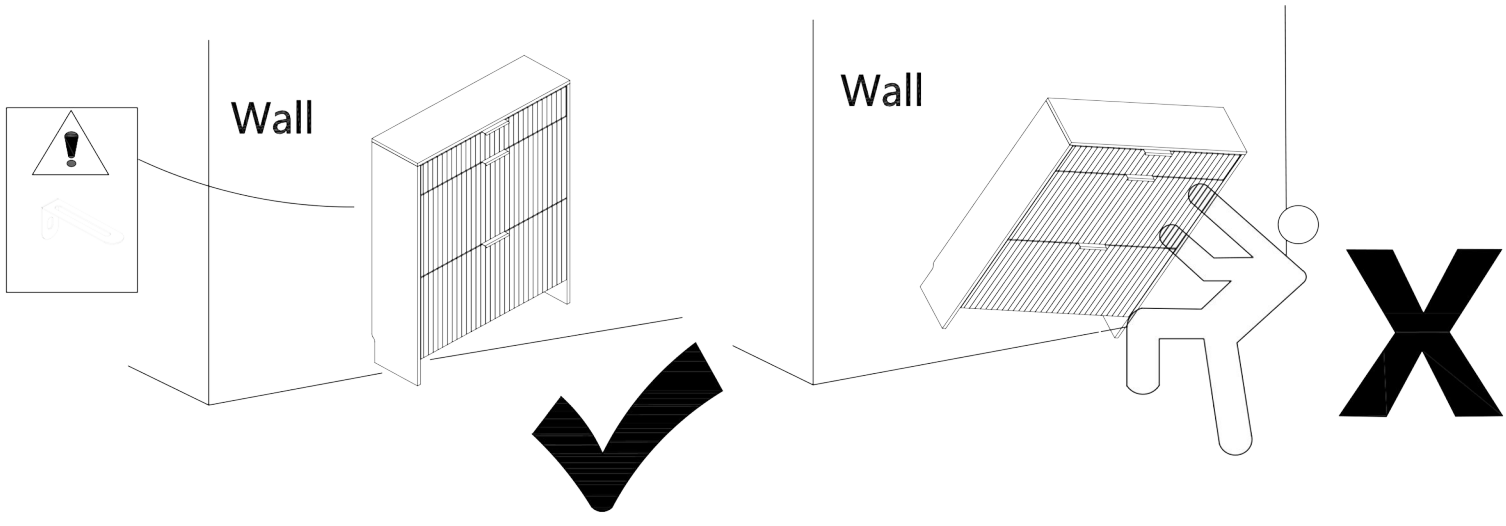

Instructions For Fastening
CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

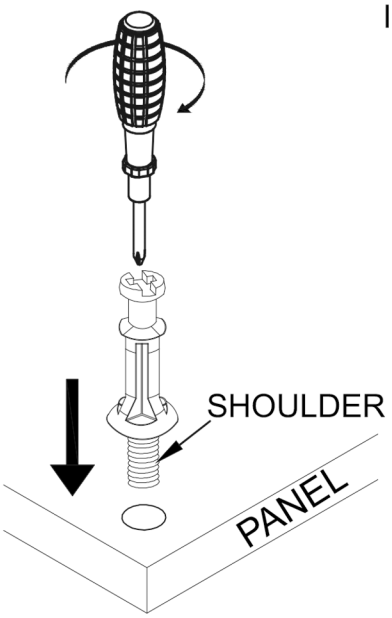

Place Cam-bolt on pre-drilled hole and screw in vertically

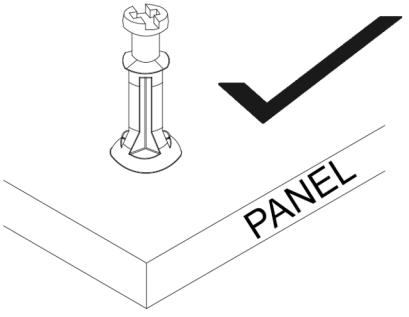


Shoulder is flushed (on the same level) with the panel.

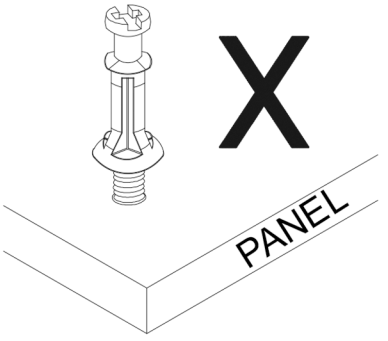

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

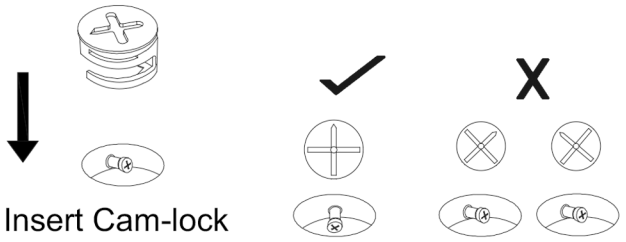


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG

TIGHTENING CAM-LOCK

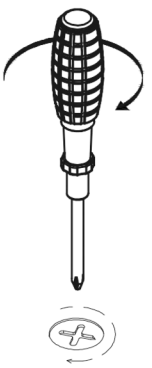


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

The Hardwares


A	x32



B	x32




C	x2




D	x44



E	x3



F	x4

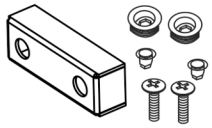

G	x2





H	x2




Notice:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly.Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

















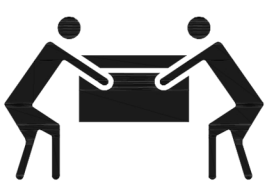


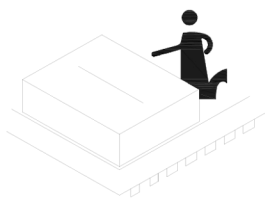

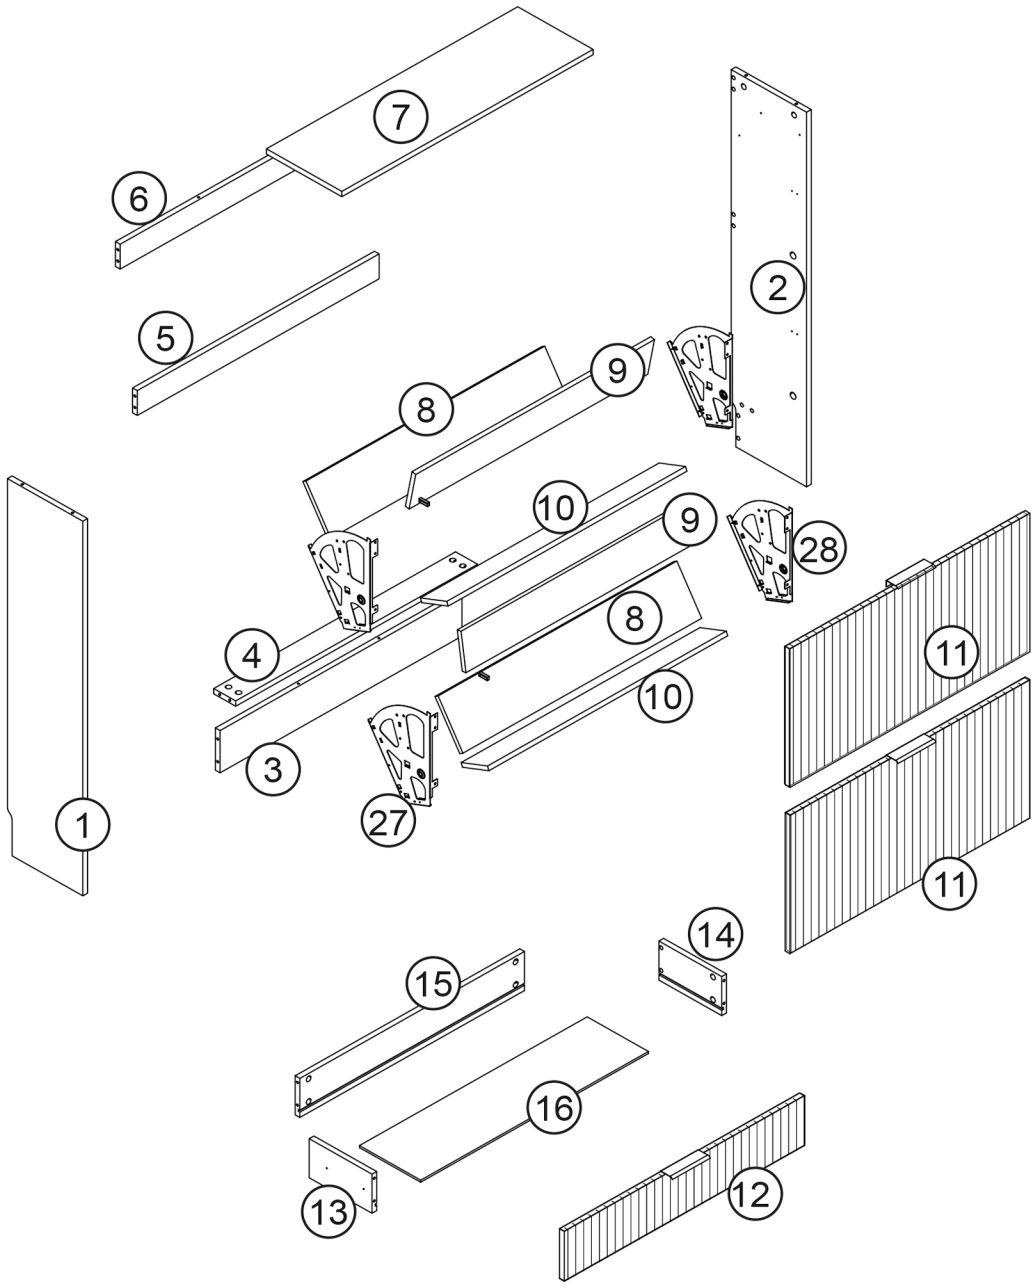


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.

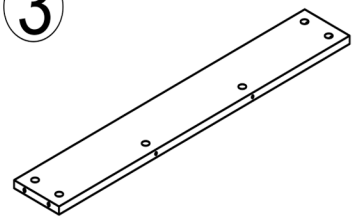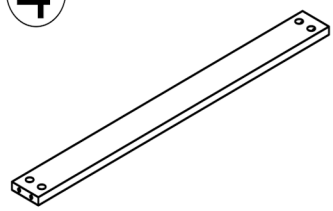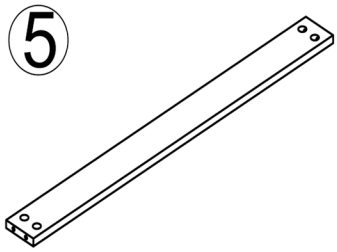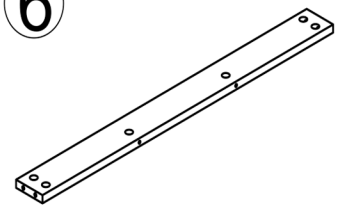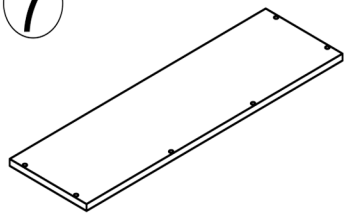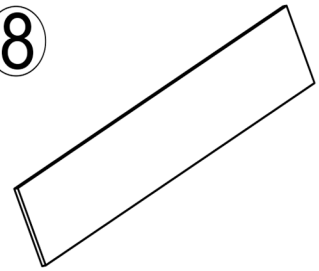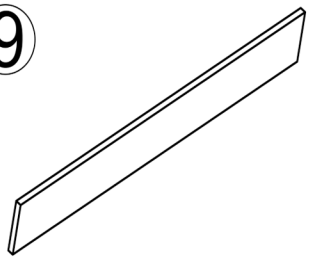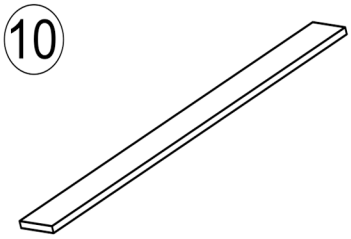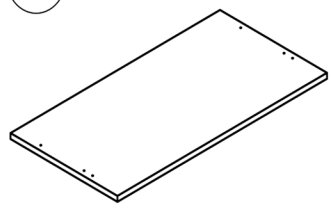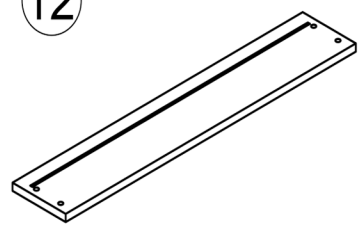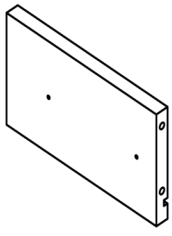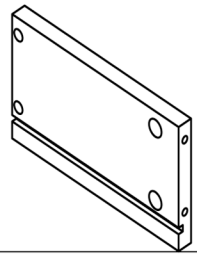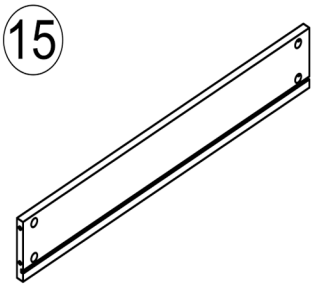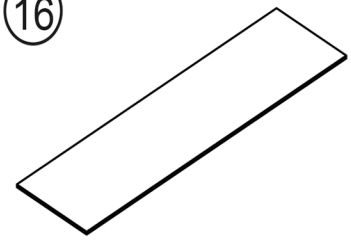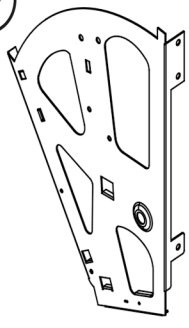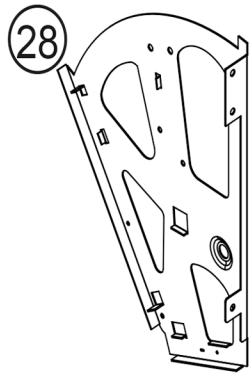
1 	2 	3 	4 
1PC	1PC	1PC	1PC
5 	6 	7 	8 
1PC	1PC	1PC	2PCS
9 	10 	11 	12 
2PCS	2PCS	2PCS	1PC
13 	14 	15 	16 
1PC	1PC	1PC	1PC
27 	28 		
2PCS	2PCS		


1

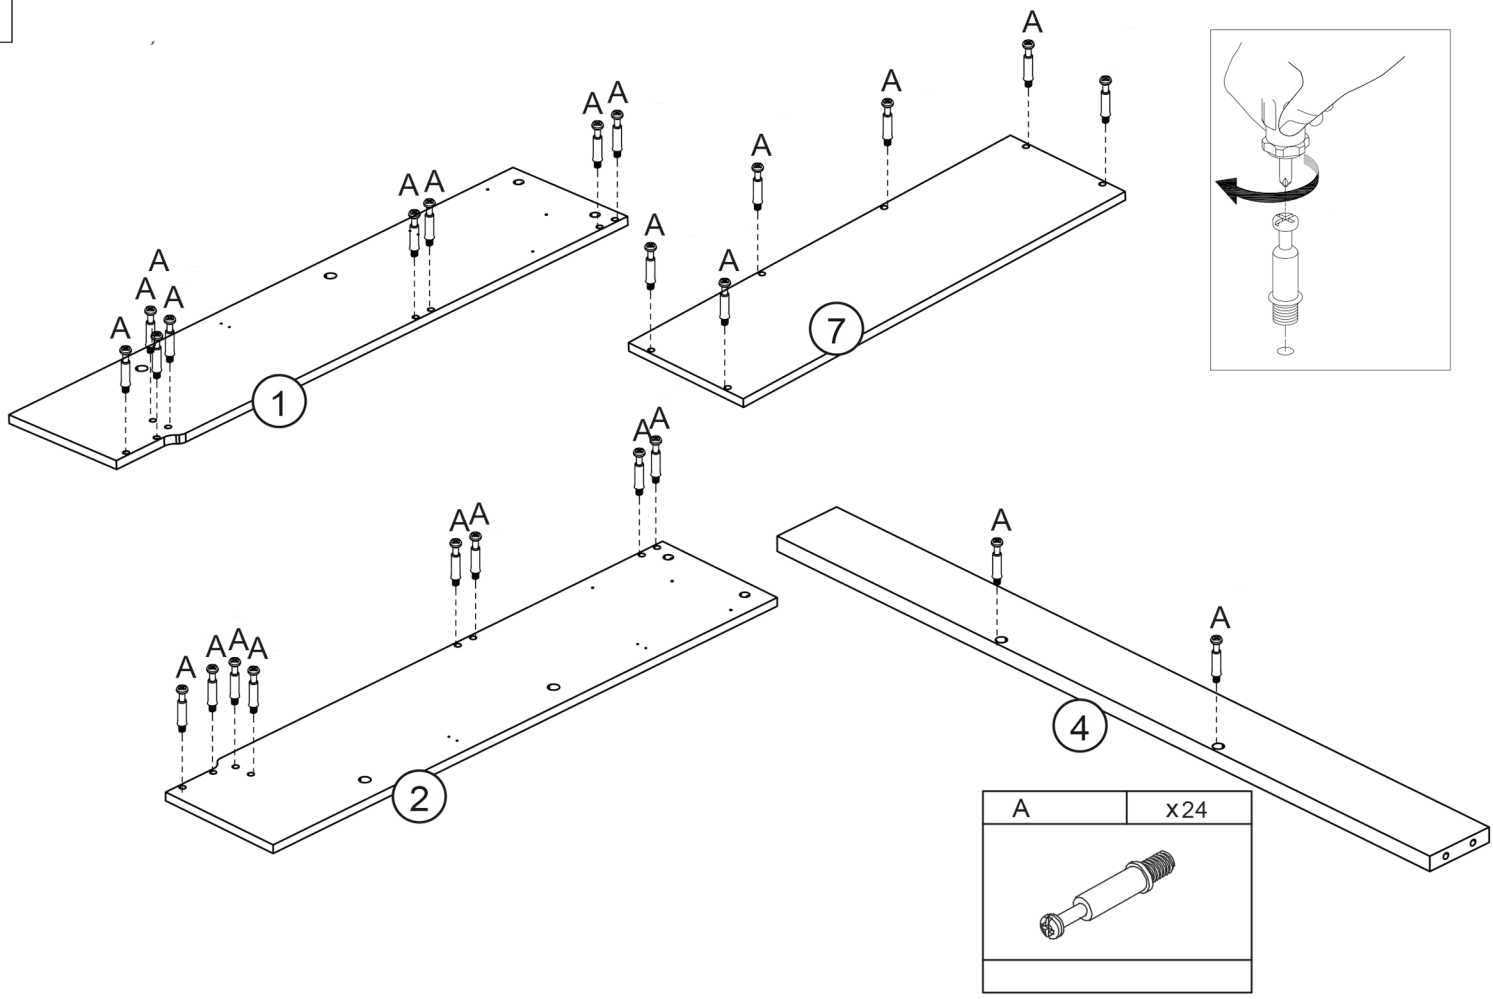



A	x24


2

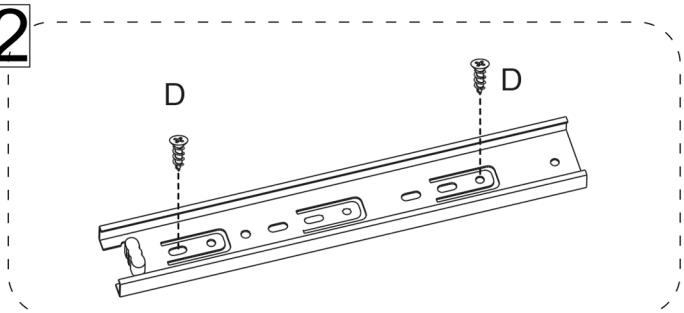


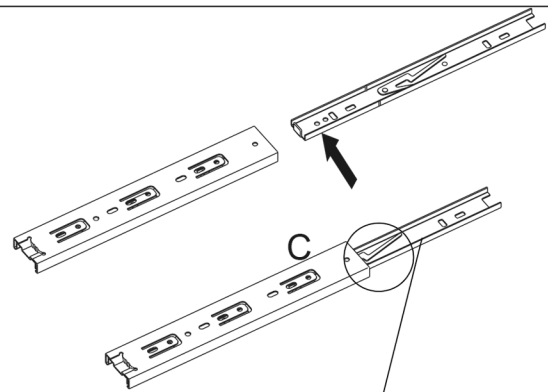

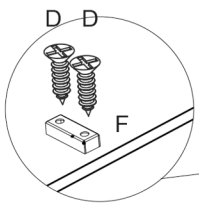


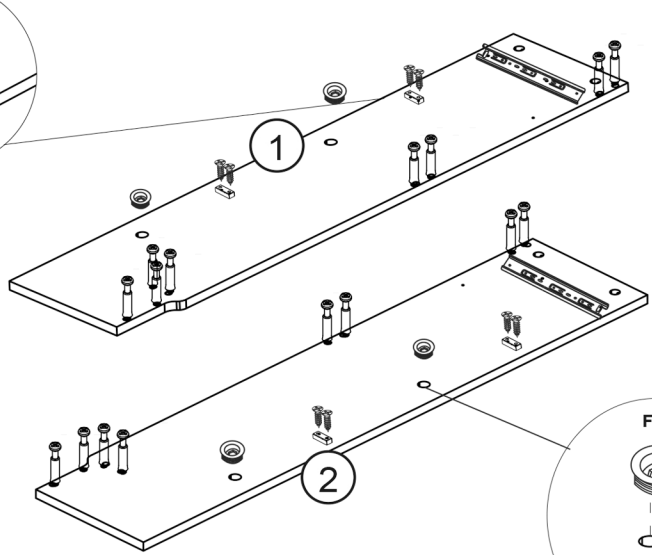

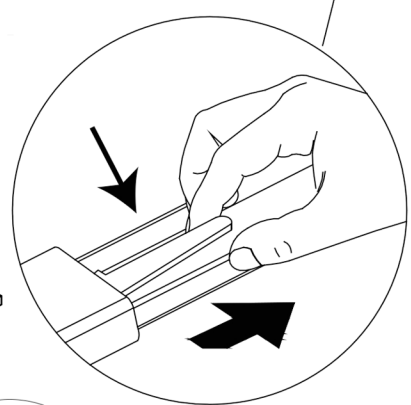


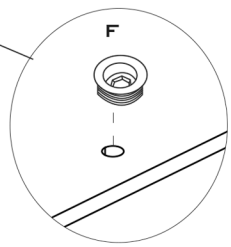


C	x2

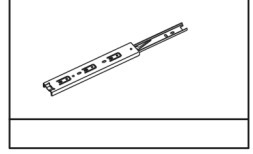

D	x12

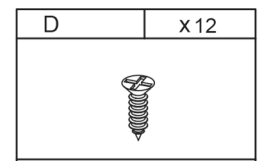


F	X4

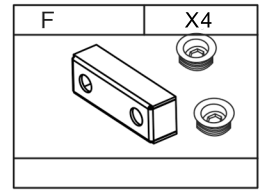


3

B	x2
	

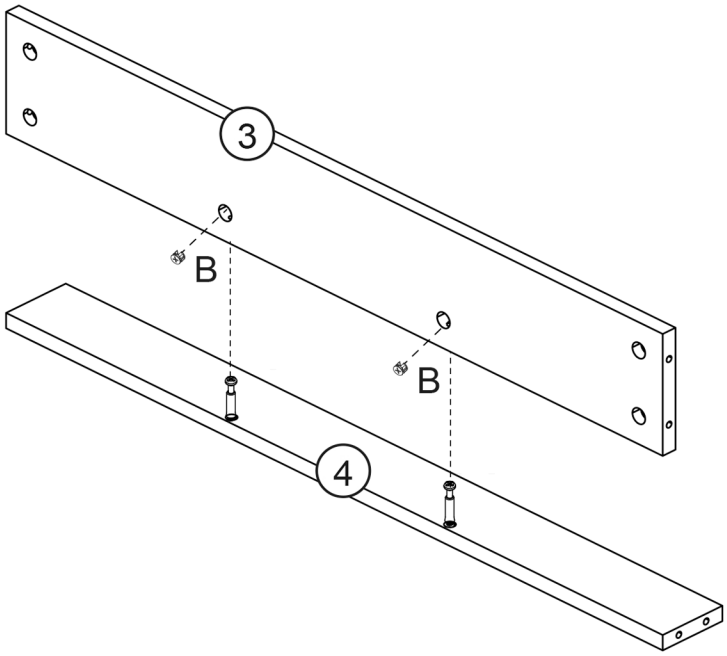


4

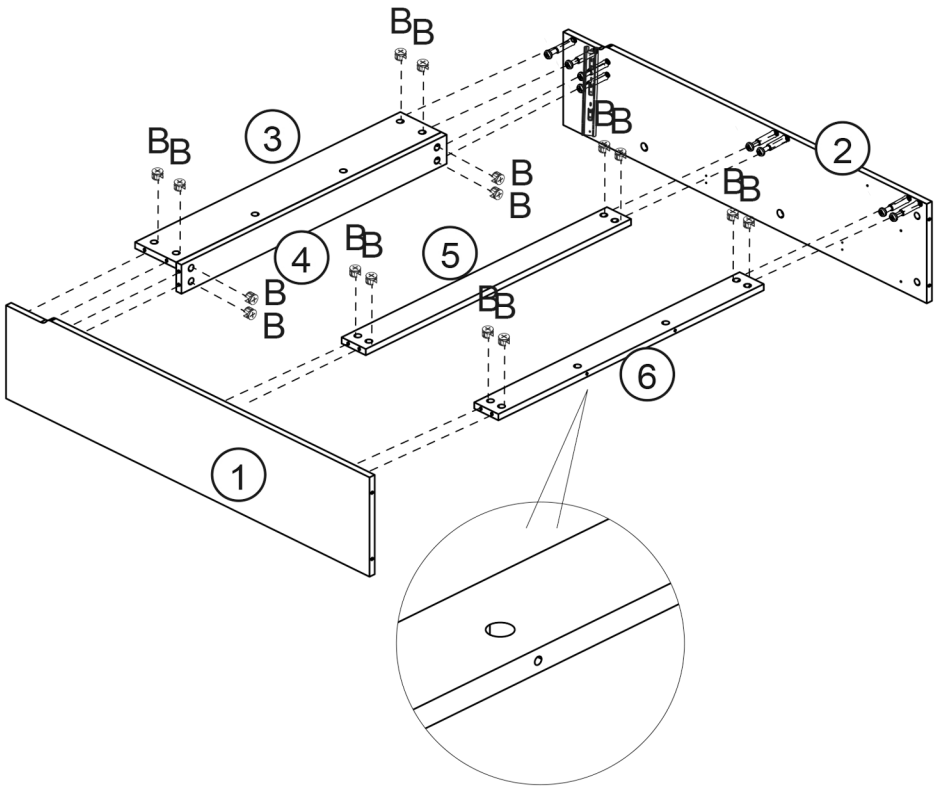

B	x16
	

5

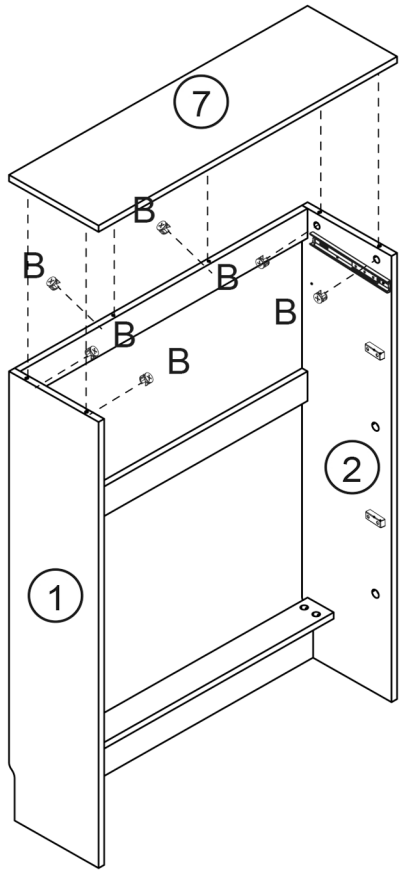


B	x6





6


X2

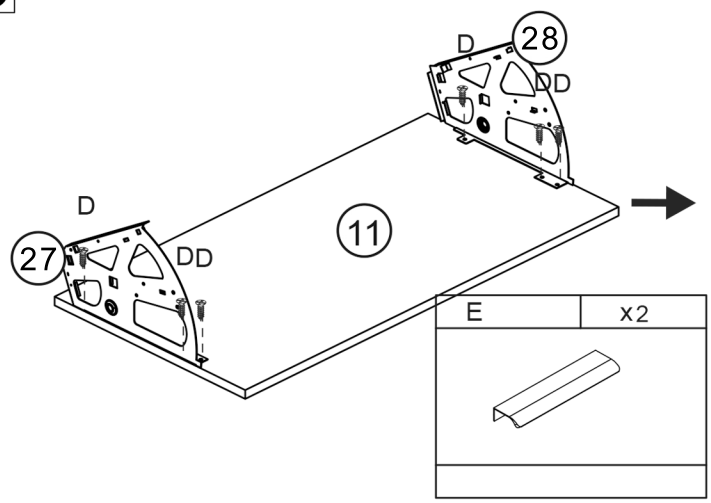

E	x2

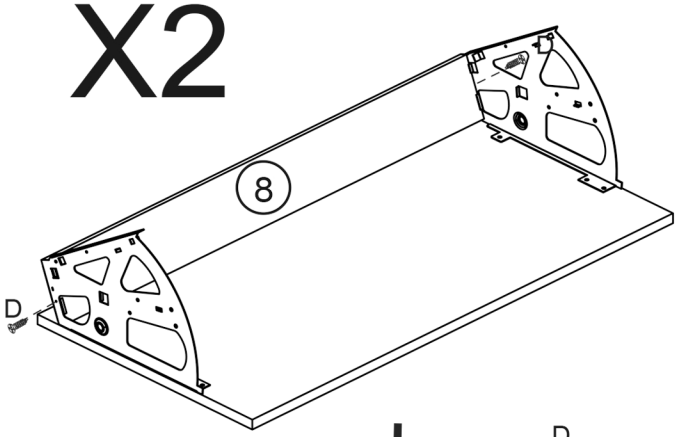

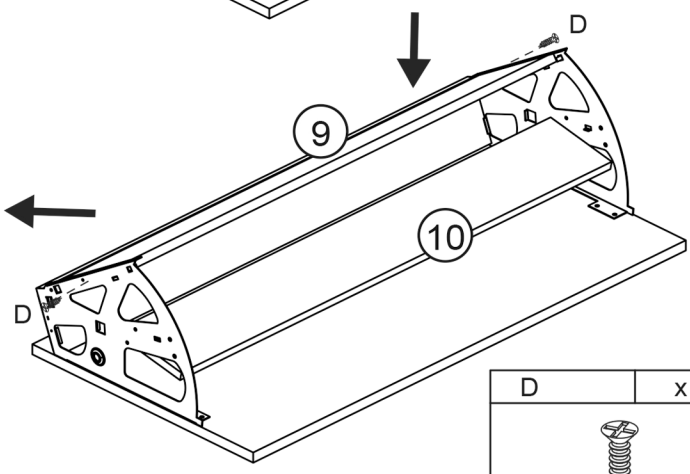

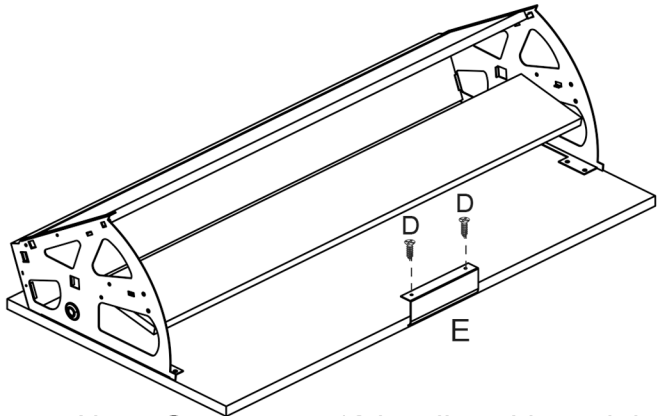

D	x24





Note: Component 10 is adjustable and does not need to be fixed


7

G	x2

H	x2

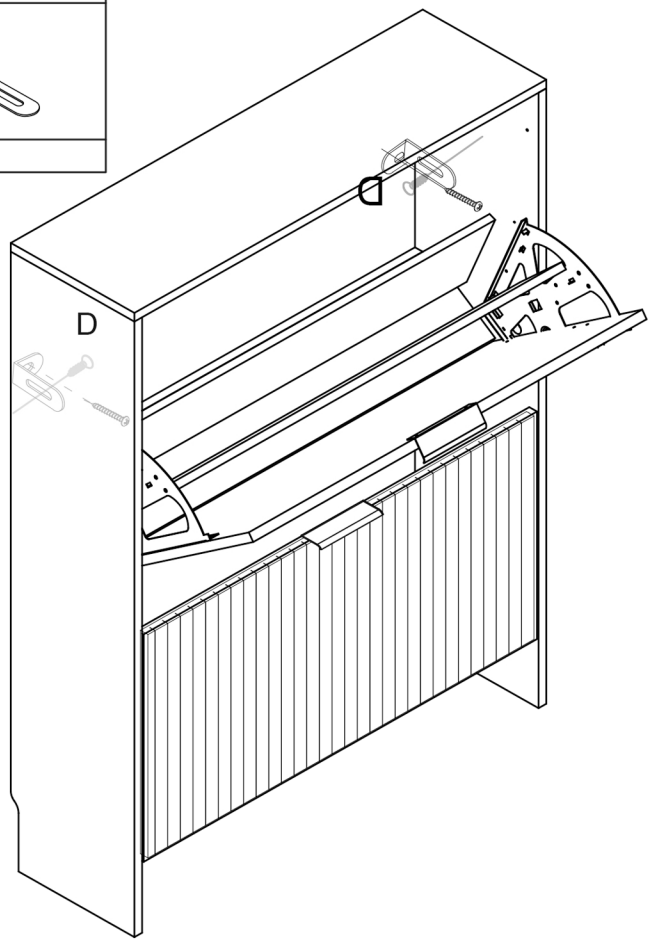

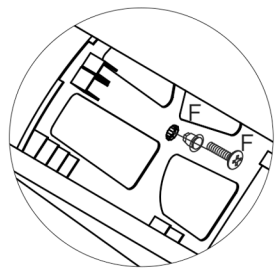


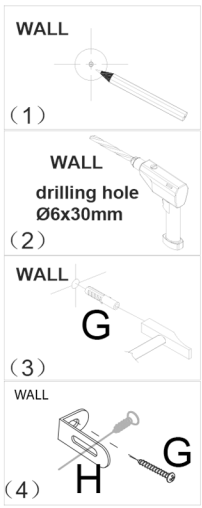



F	x4

D	x2

8

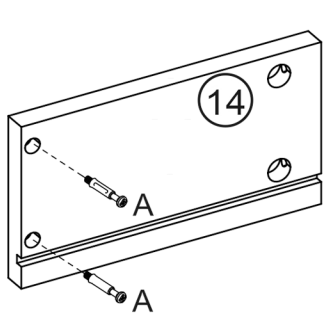


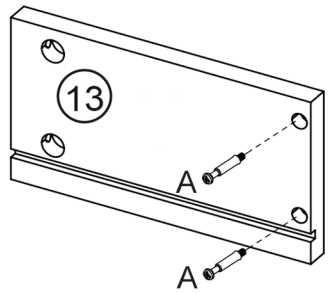

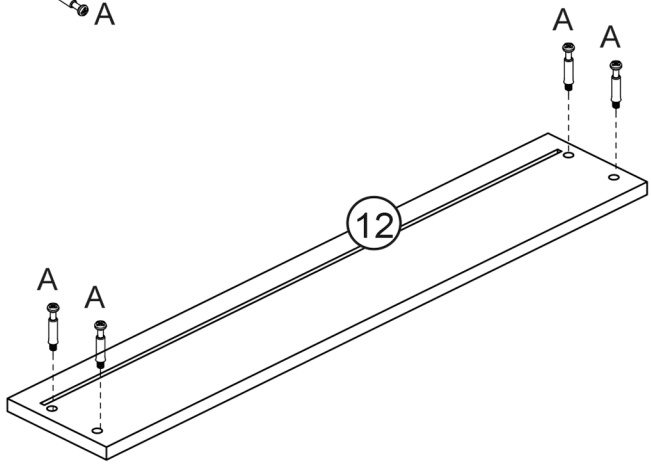


A	x8

9

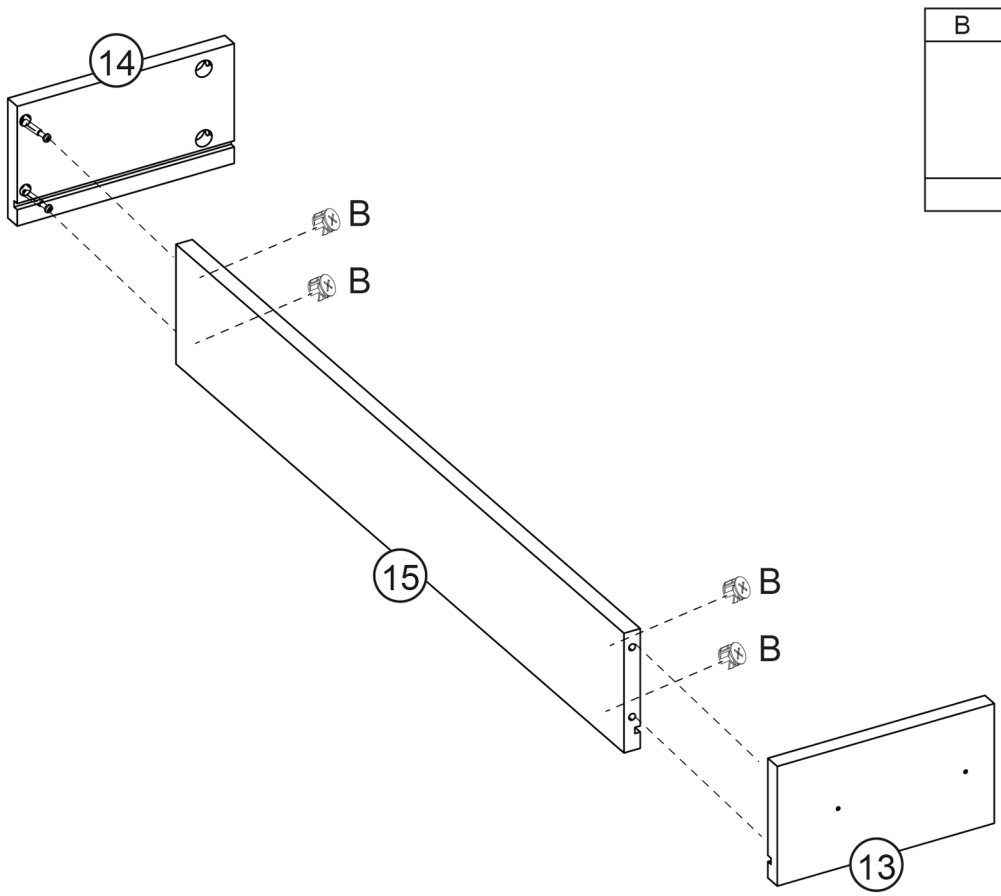


B	x4

10

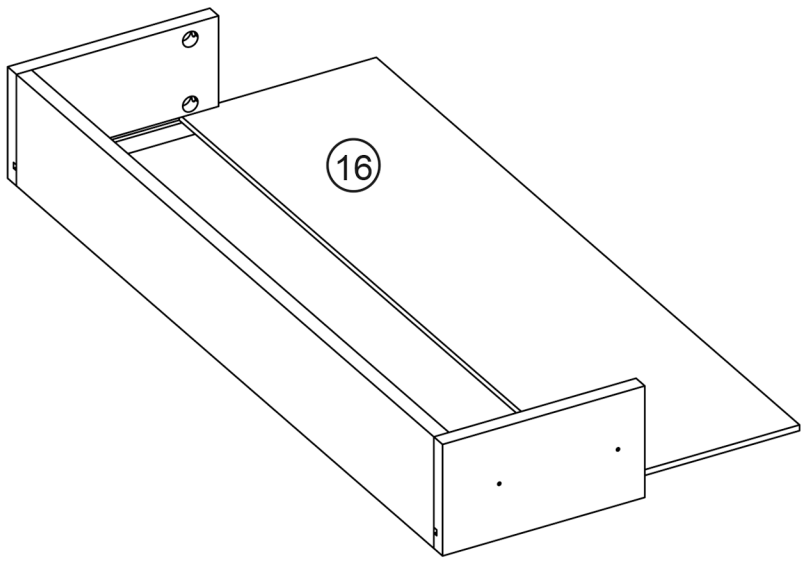



11

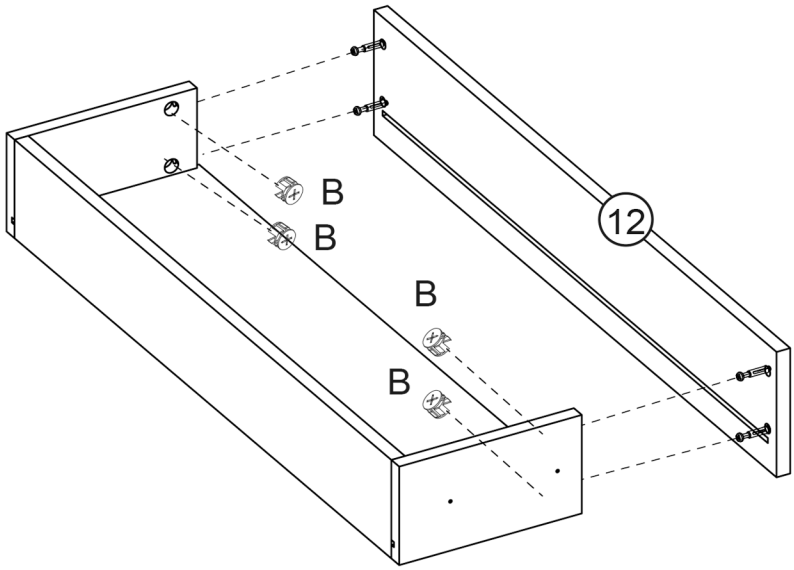


B	x4
	

12

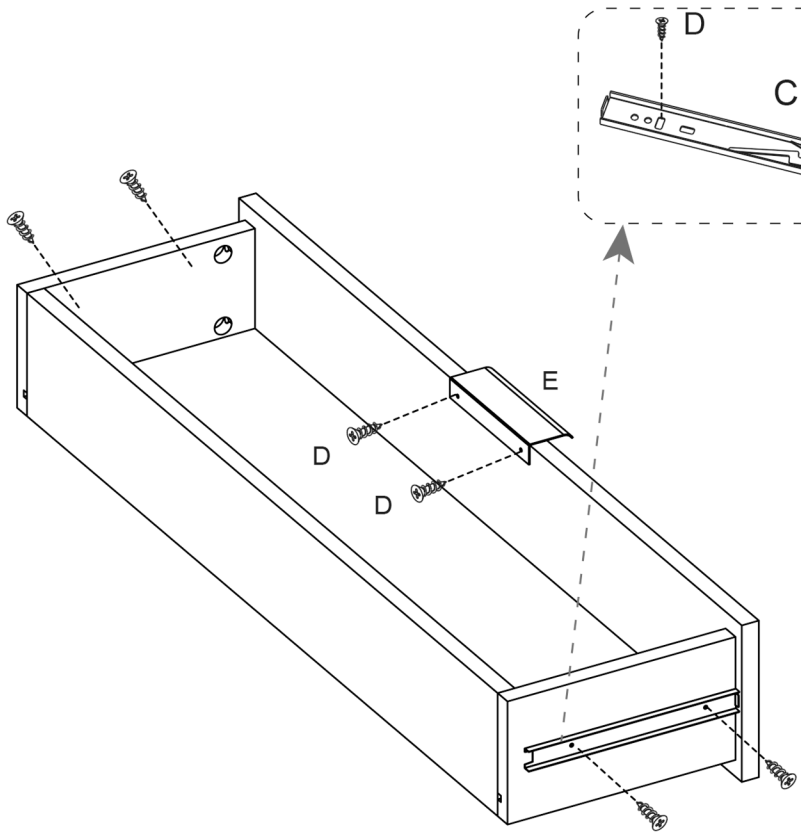

E	x1
	

C	x2
	

D	x6
	

13

