









Assembly Instruction

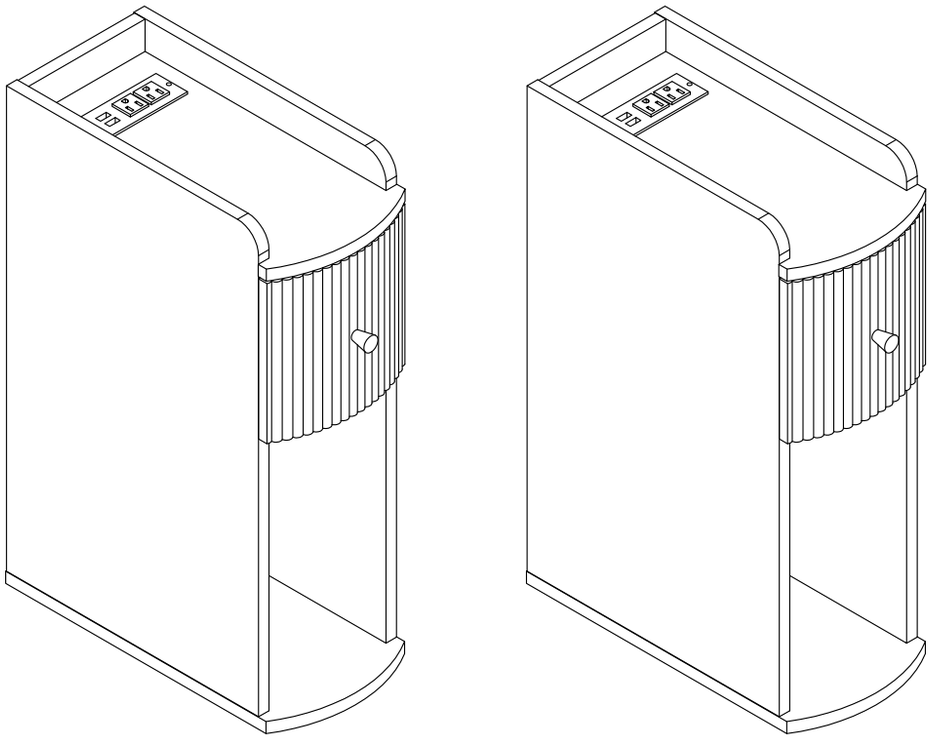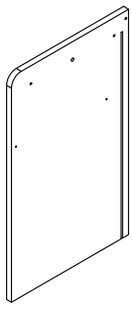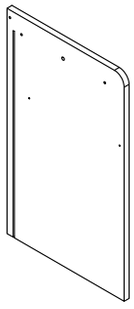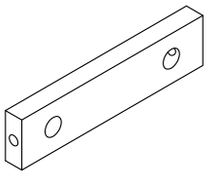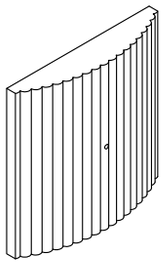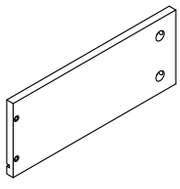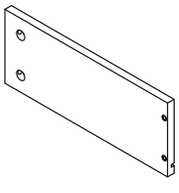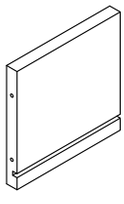


① 	② 	③ 	④ 
2PCS	2PCS	2PCS	2PCS
⑤ 	⑥ 	⑦ 	⑧ 
2PCS	2PCS	2PCS	2PCS
⑨ 	⑩ 	⑪ 	
2PCS	2PCS	2PCS	


A	B	C	D	E	F	G	H	I	J
X20	X20	X24	X8	X1	X10	X8	X2	X2	X10
M6x35mm		M3.5x12mm	M3x16mm	4mm	M5x40mm		M4x25mm		M4x35mm

K	M	N	O	P	Q	S	L	R
X2	X2	X2	X2	X8	X4	X8	X2	X2
		M4x12mm						

Cam Lock Fastening System


Insert the cam bolt into the hole first,then insert the cam lock and lock it.

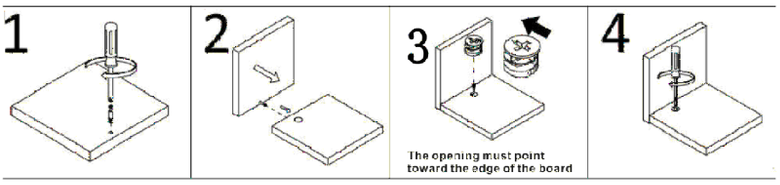

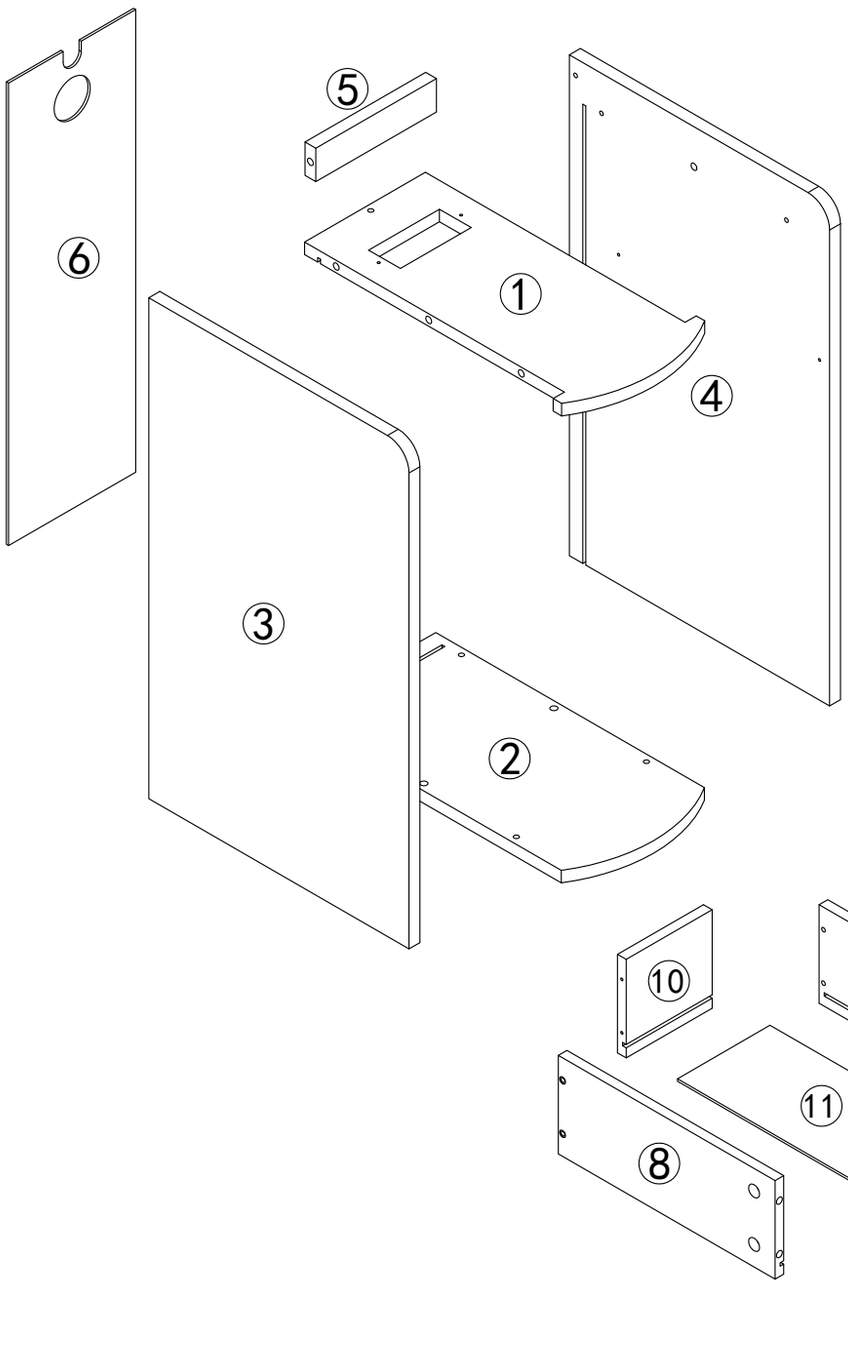

X2


1

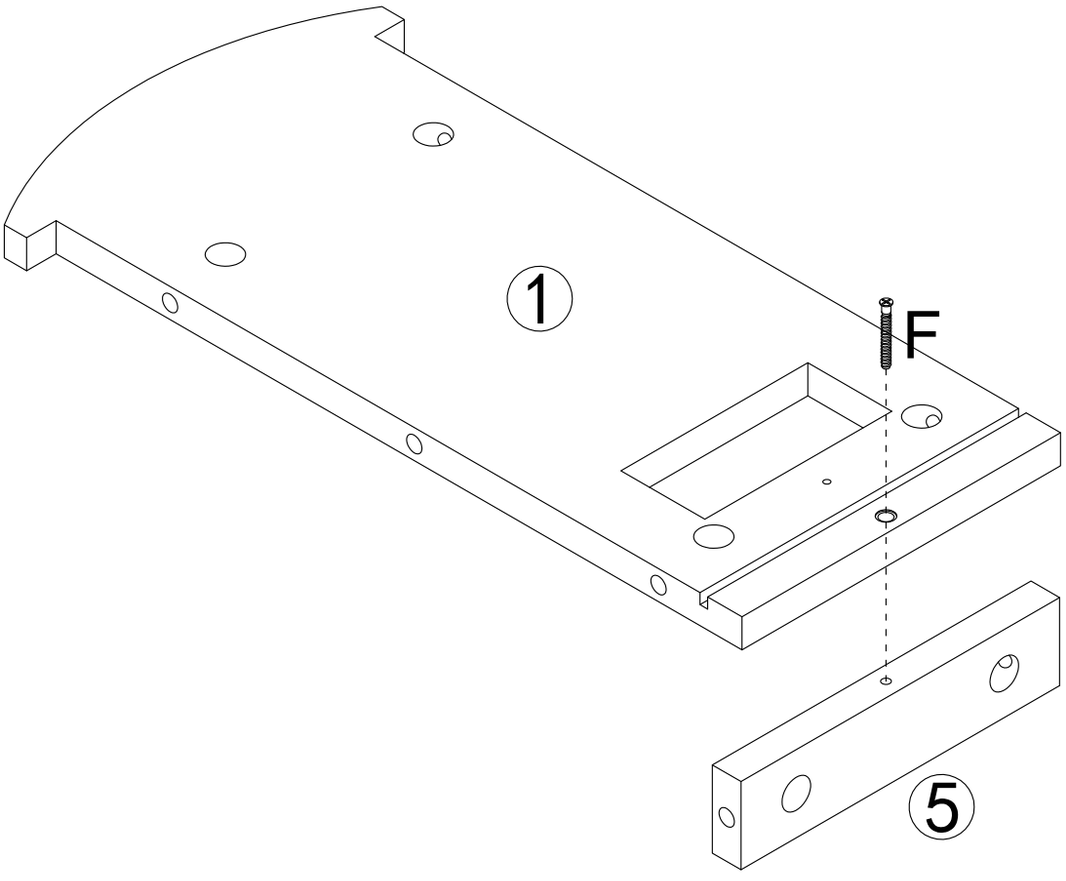

X2

F	X2
	
M5x40mm	

2

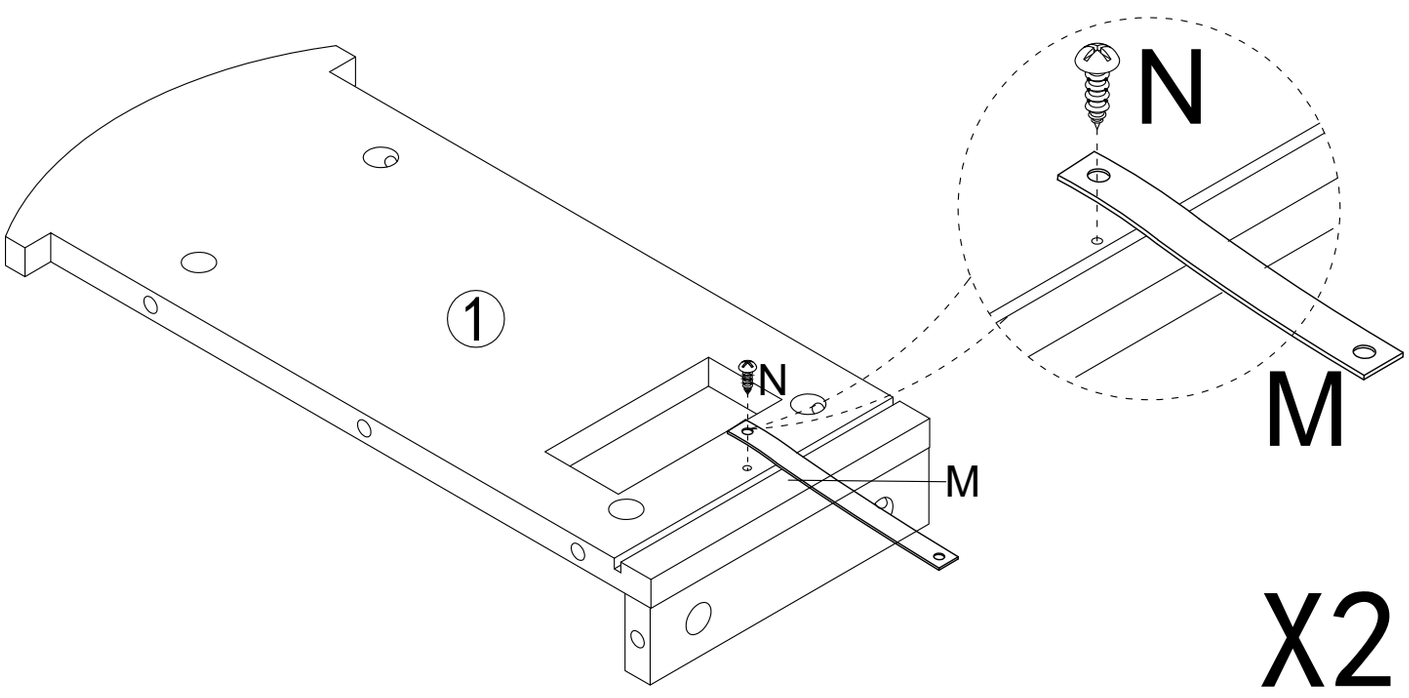


X2

M	X2
	

I	X2
	
M4x12mm	


3

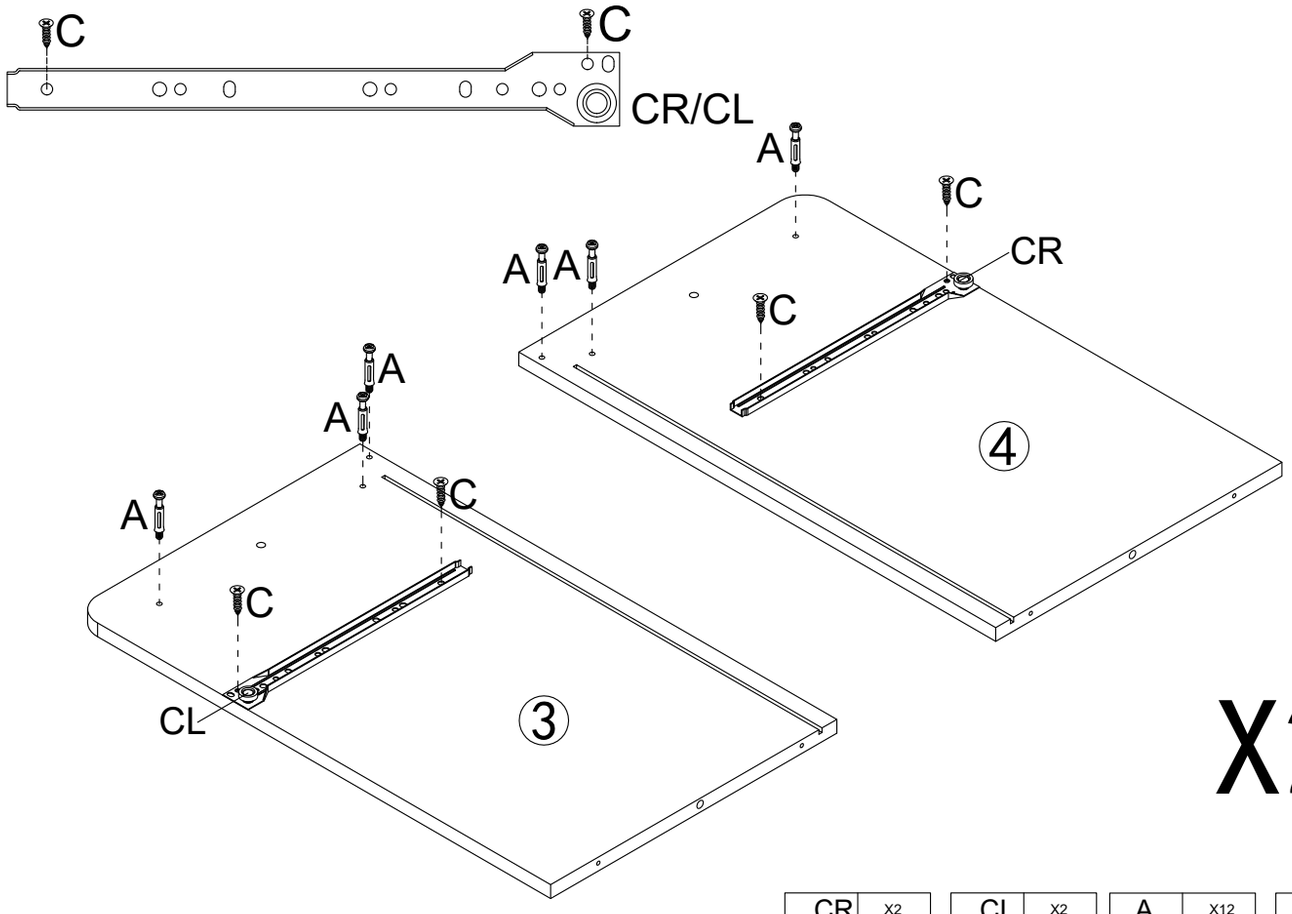

X2

CR X2	CL X2	A X12	C X8
		M6x35mm	M3.5x12mm


4

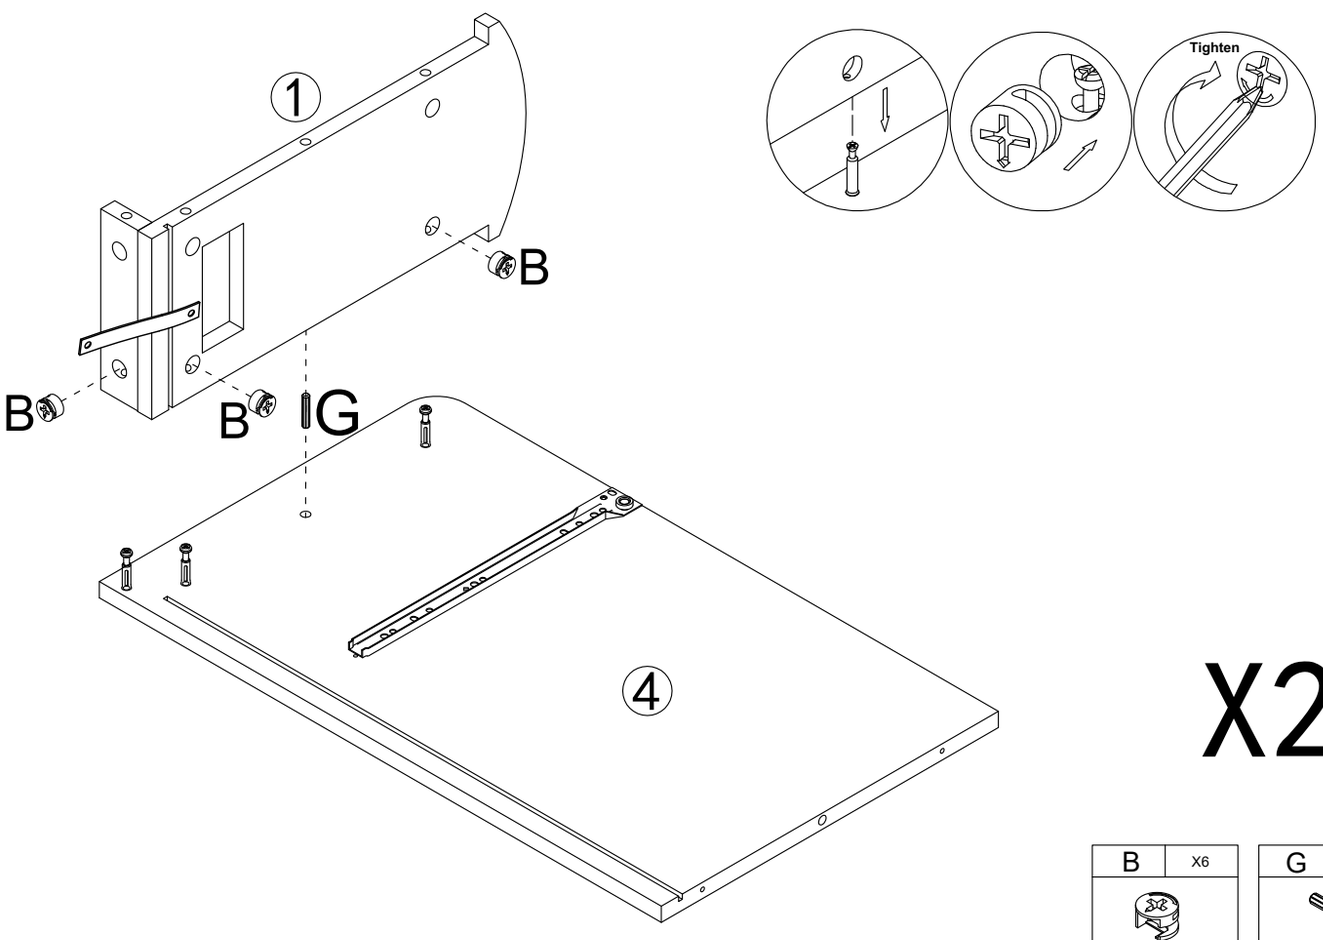


X2

B X6	G X2

5

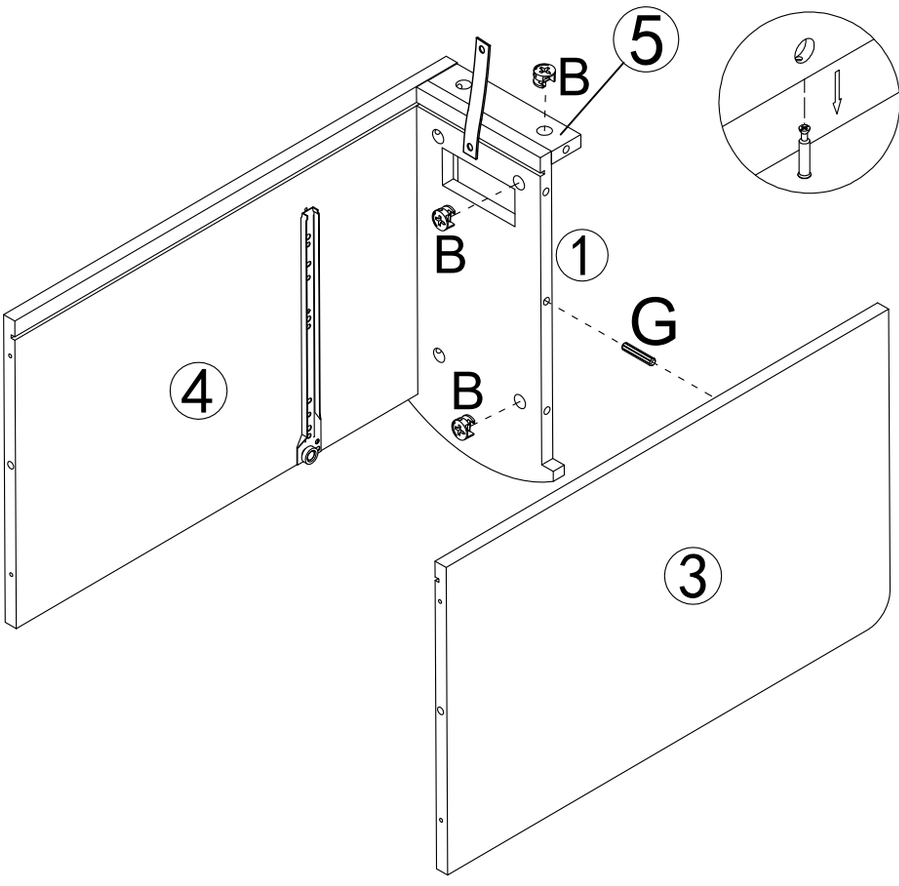

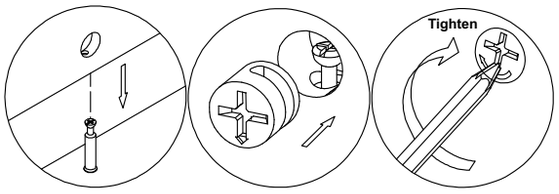


X2

B	X6


G	X2

6

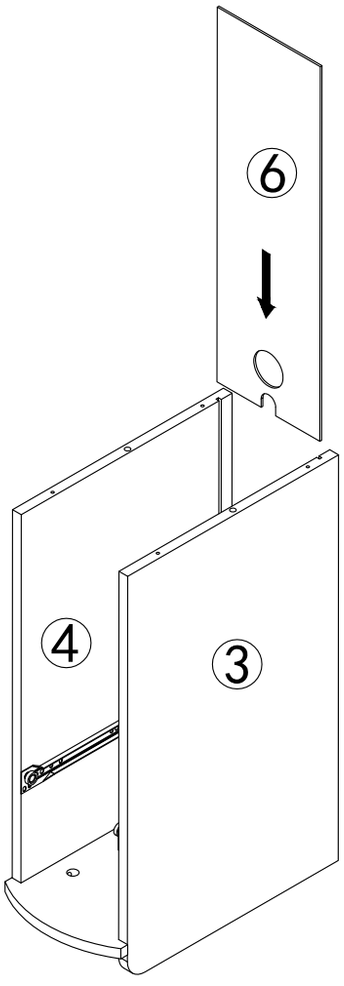

X2

7

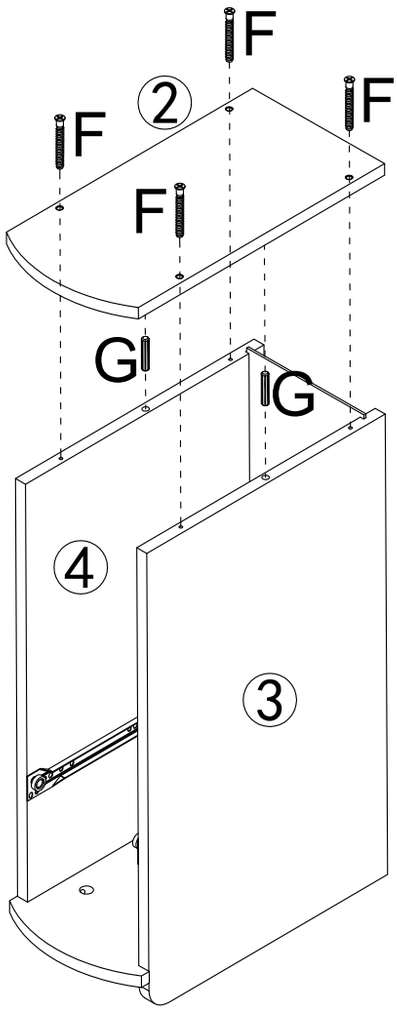


X2

F	X8
	
M5x40mm	

G	X4
	


8

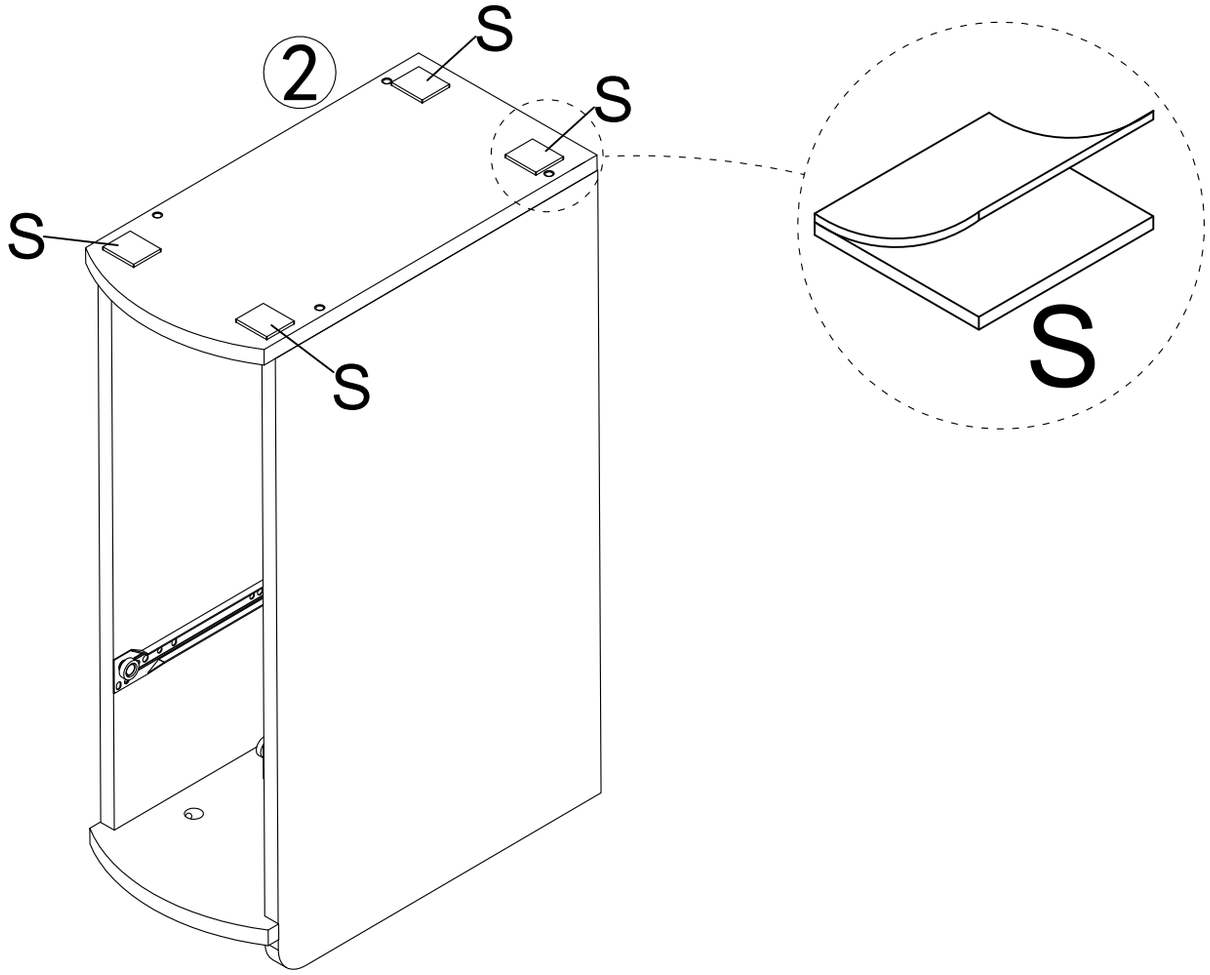

X2

S	X8
	

9

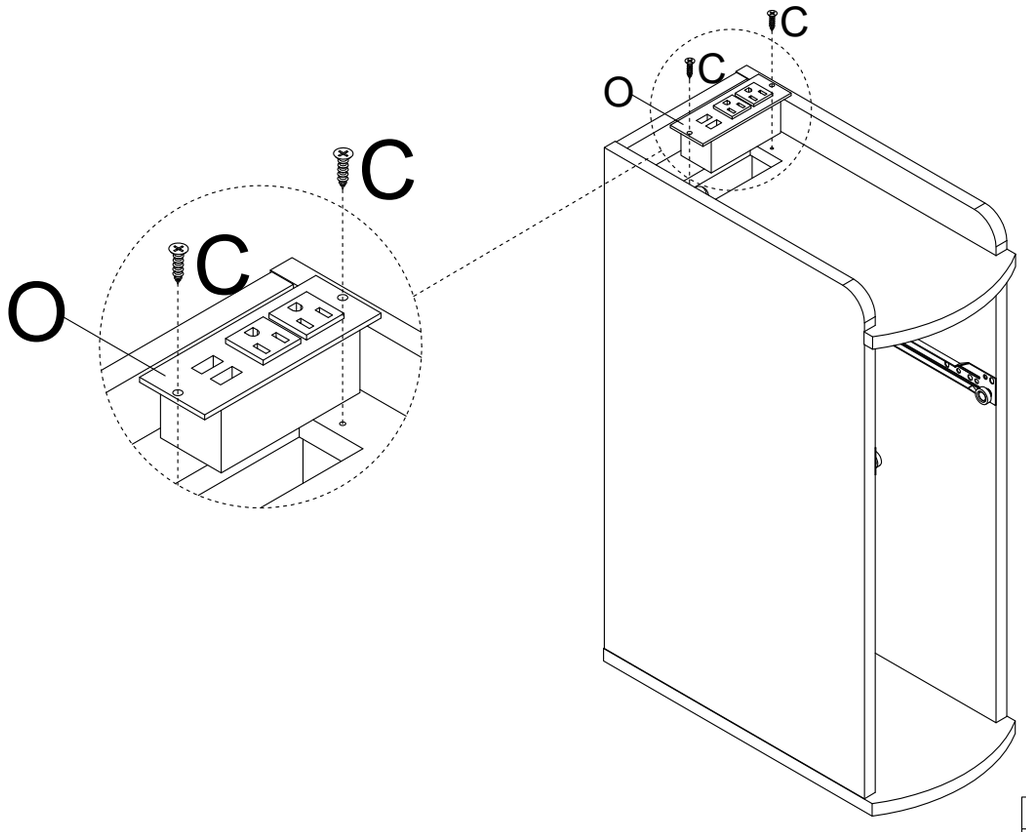


X2

C	X4
M3.5x12mm	

O	X2

10

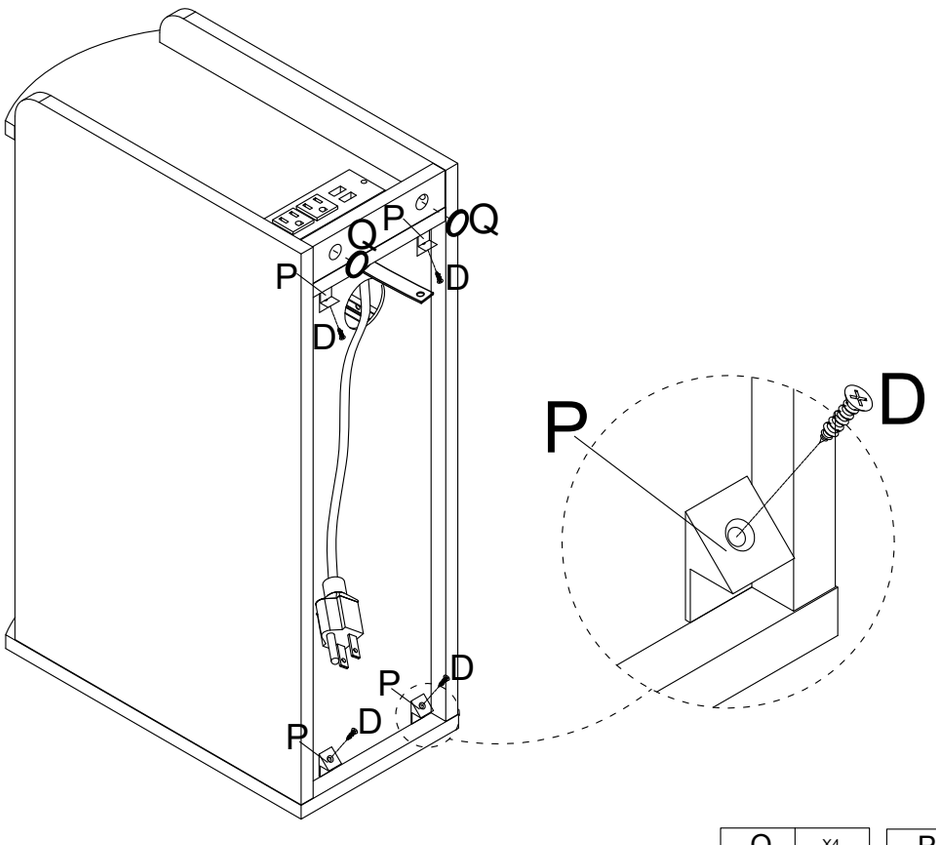


X2

Q	X4

P	X8

D	X8
M3x16mm	

11

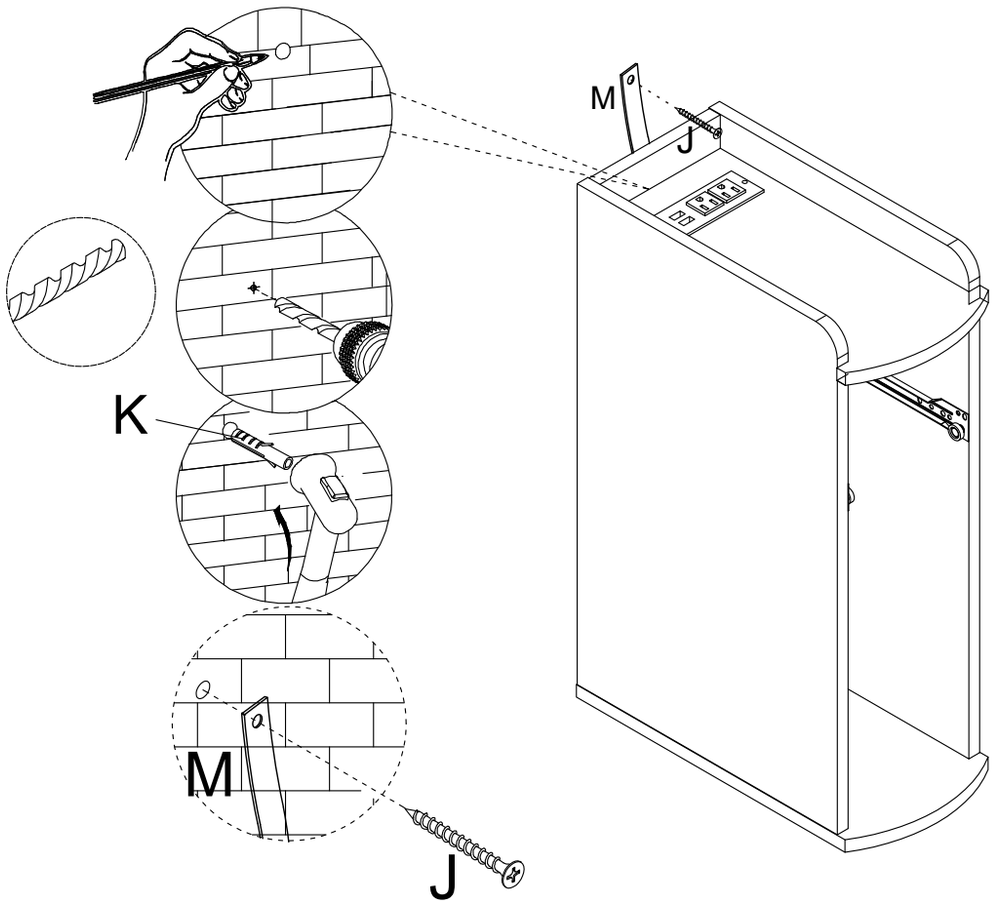


X2

K	X2

J	X2
M4x35mm	


12

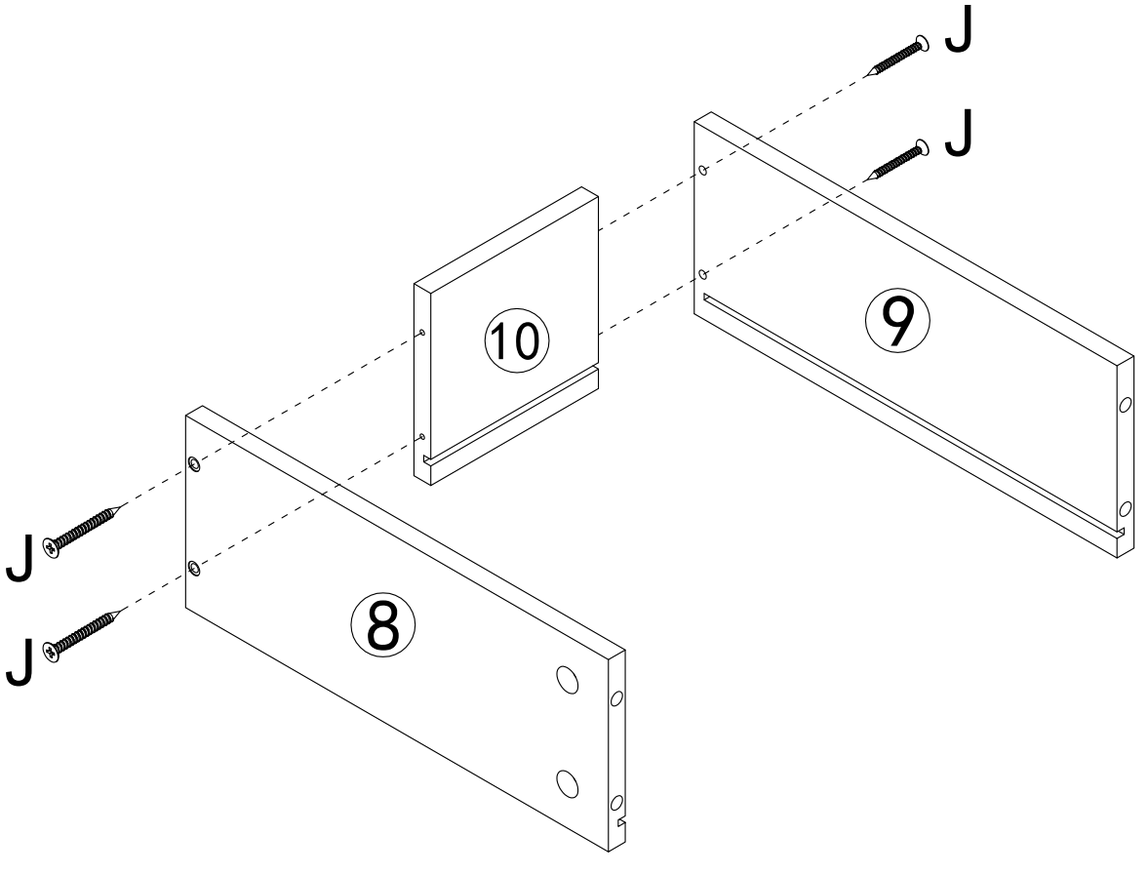

X2


J	X8
M4x35mm	


13

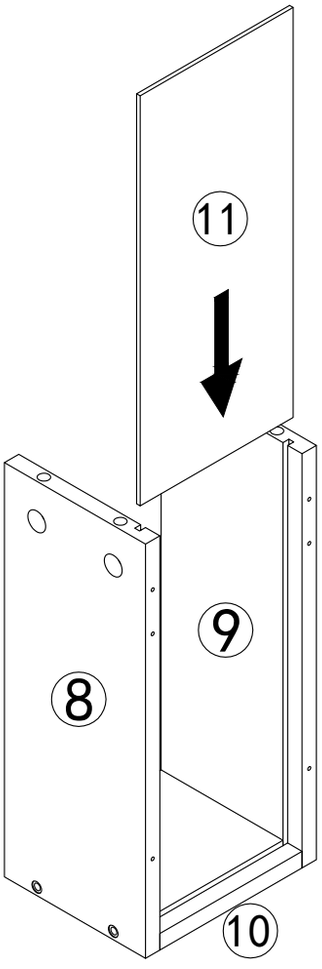


X2

14

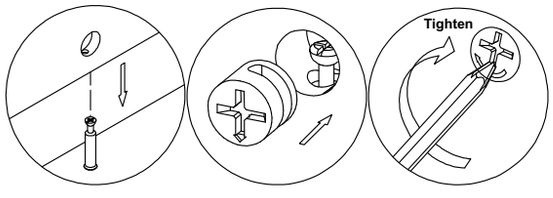

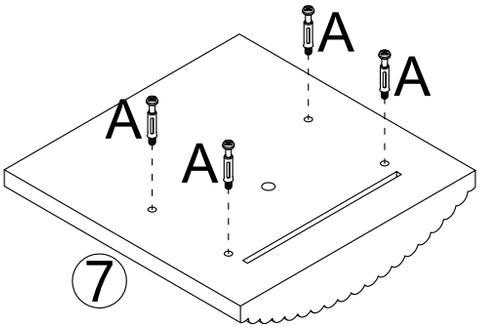

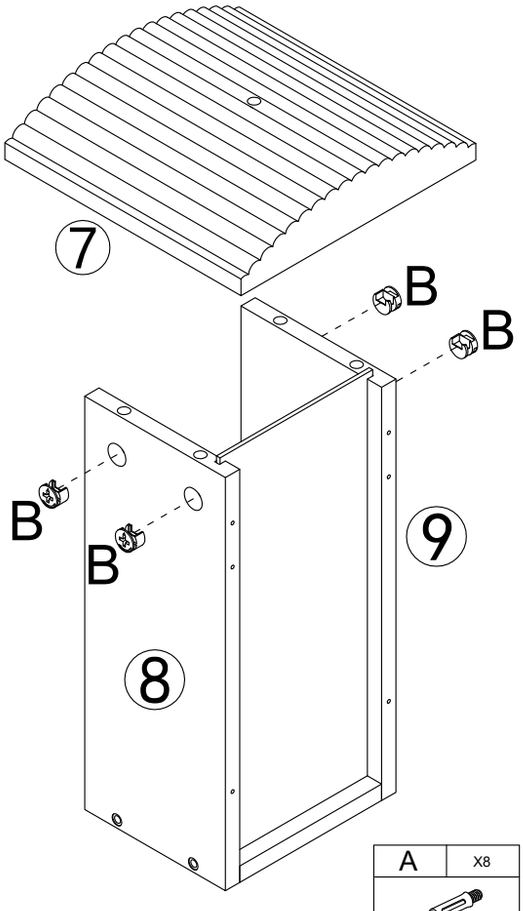


X2

A	X8
M6x35mm	

B	X8

15

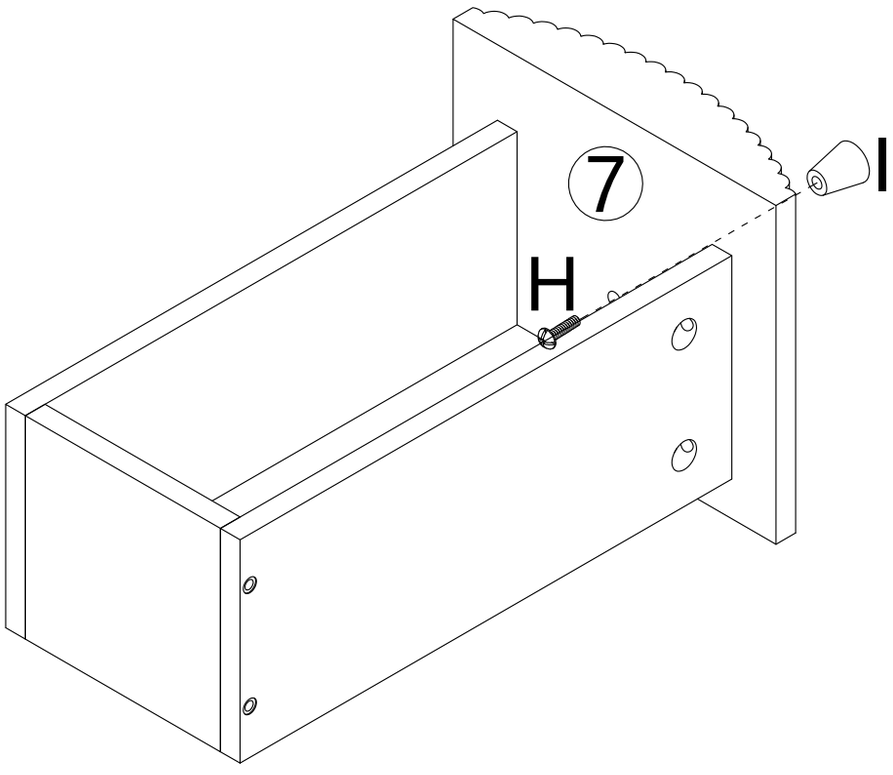


X2


H	X2
	
M4x25mm	

I	X2
	


16

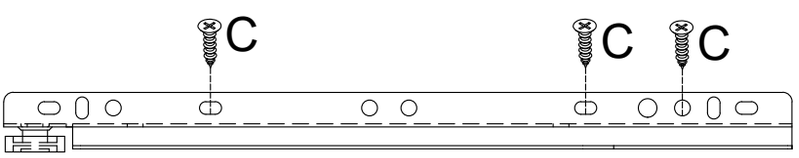


DL/DR

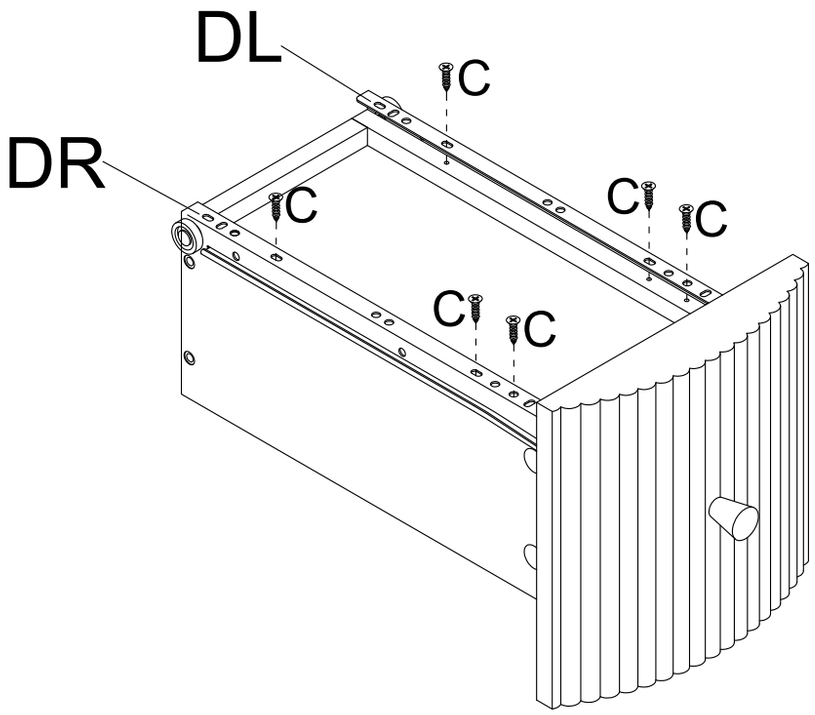


X2

DL	X2
	

DR	X2
	

C	X12
	
M3.5x12mm	

17

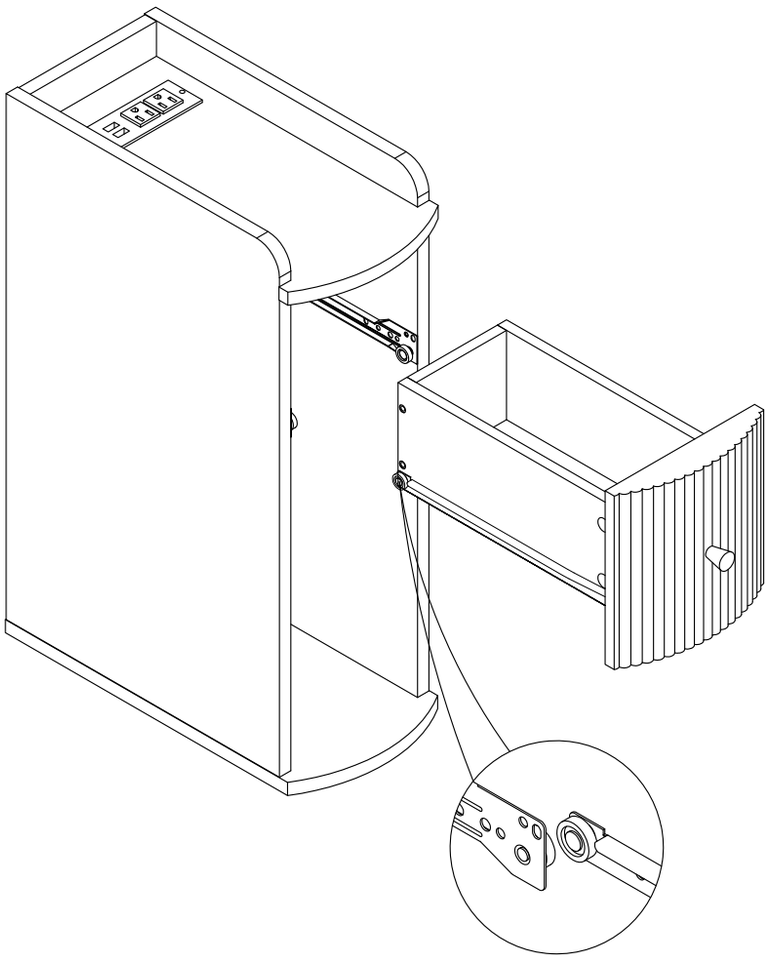

X2

18

