VEVOR

Upgrade · The Home Creator Way


Plate type wine cabinet

MODEL: DX0202-C250498S-01

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

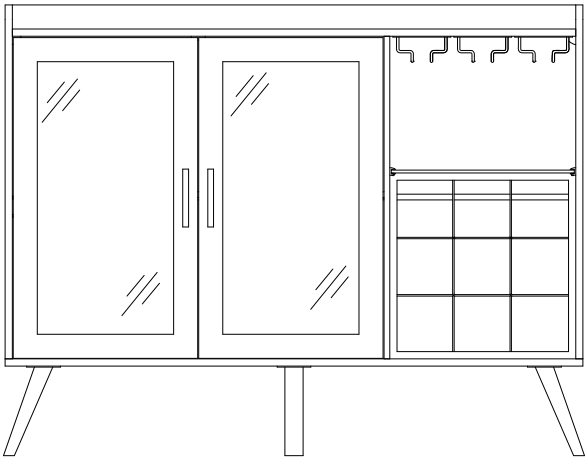

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.


CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

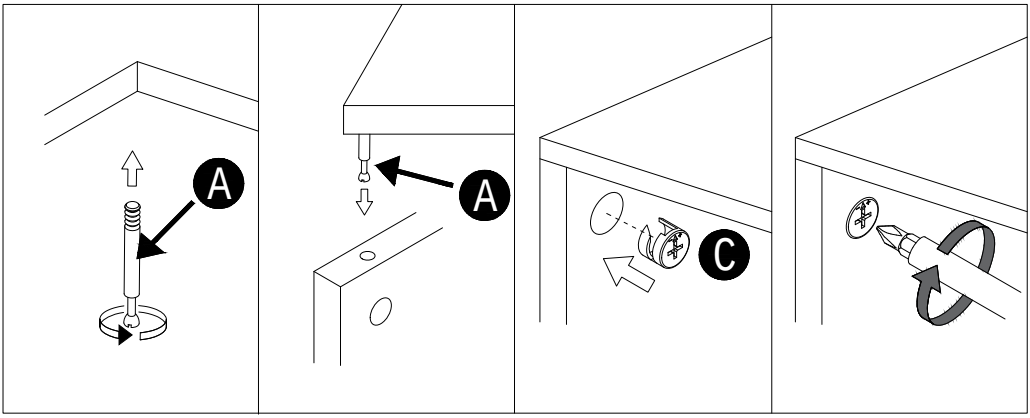


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

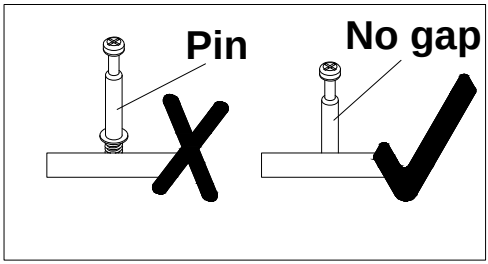


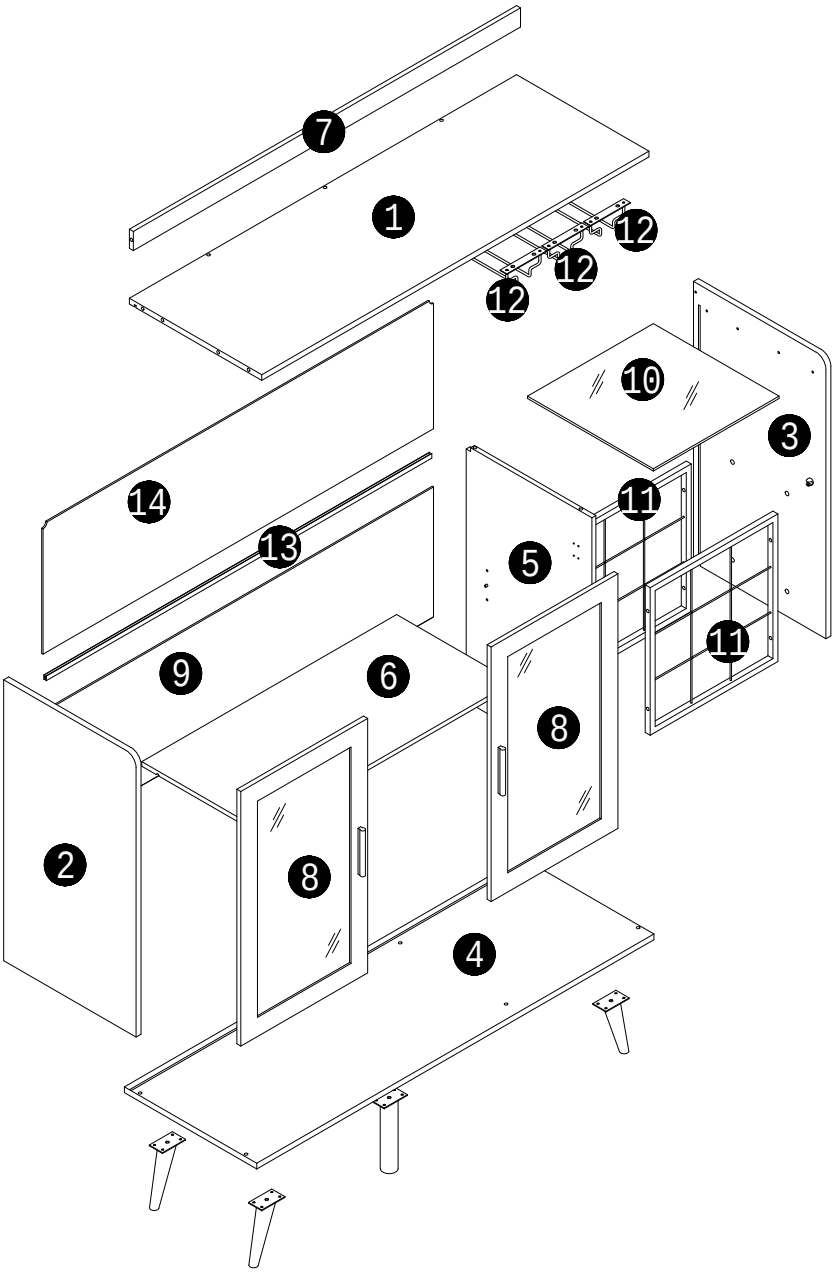
7
1
12
12
12
10
3
14
13
11
5
11
9
6
8
2
8
4


Parts & Hardware List

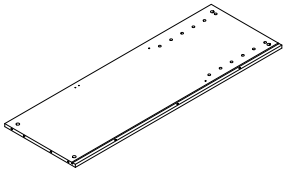


1 1pc




2 1pc




3 1pc

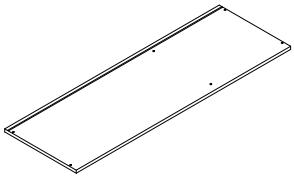


4 1pc




5 1pc

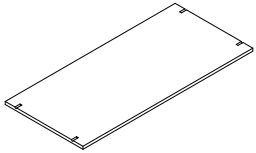


6 1pc

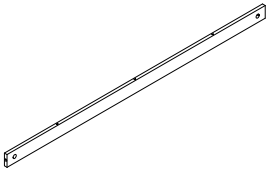


7 1pc




8 2pcs

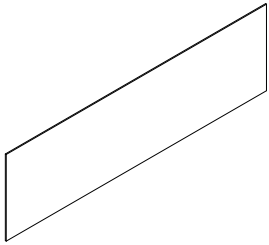


9 1pc



10 1pc





11 2pcs




12 3pcs


Parts & Hardware List

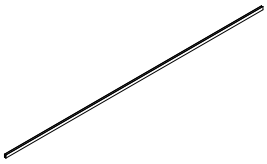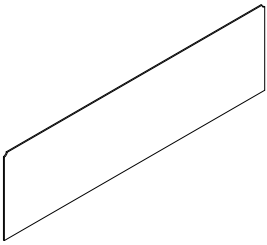
		
⓭ 1pc	⓮ 1pc	

Parts & Hardware List

 A 8pcs+1	 M7X50MM B 9pcs+1	 C 8pcs+1	 M6X23MM E 8pcs+1
 DW K 4pcs+1	 Ø6X30MM L 4pcs+1	 M6X10MM N 12pcs+1	 O 4pcs+1
 ST3.5X12MM P 56pcs+5	 Q 4pcs	 R 2pcs	 S 4pcs+1
 M4X16MM T 4pcs+1	 U 1pc	 V 10pcs+1	 W 1pc
 X 4pcs+1	 Y 1pc	 Z 2pcs	 1pc
			

1

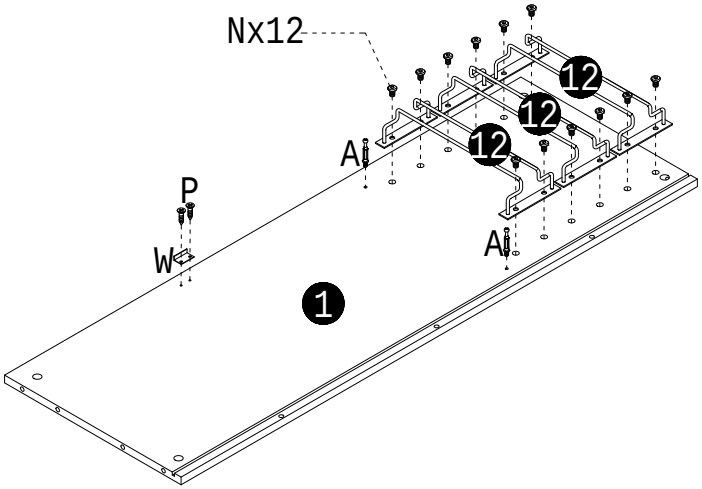



x2



x12




x2




x1


2




x3

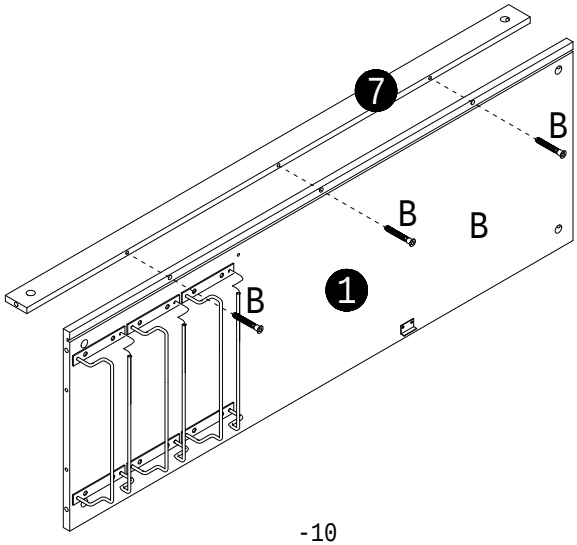


3



x6

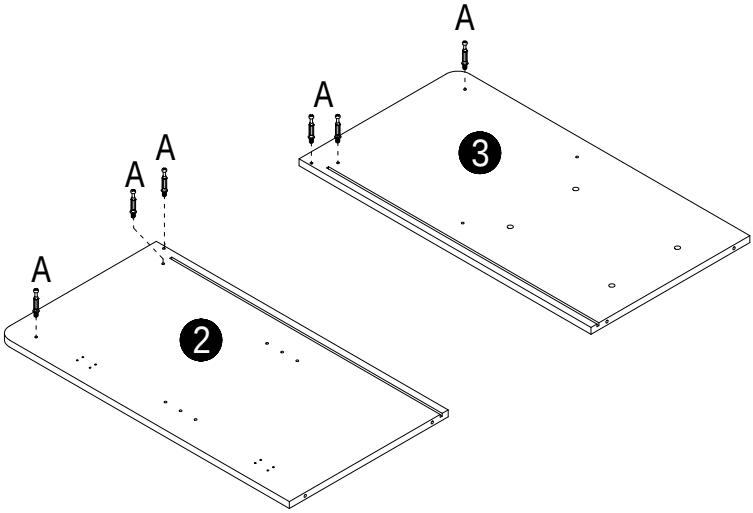

4







x4



x4

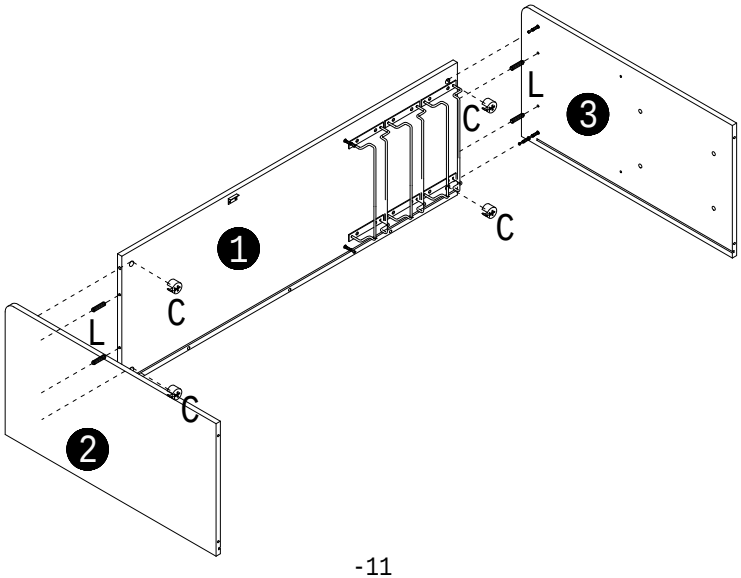


5







x2

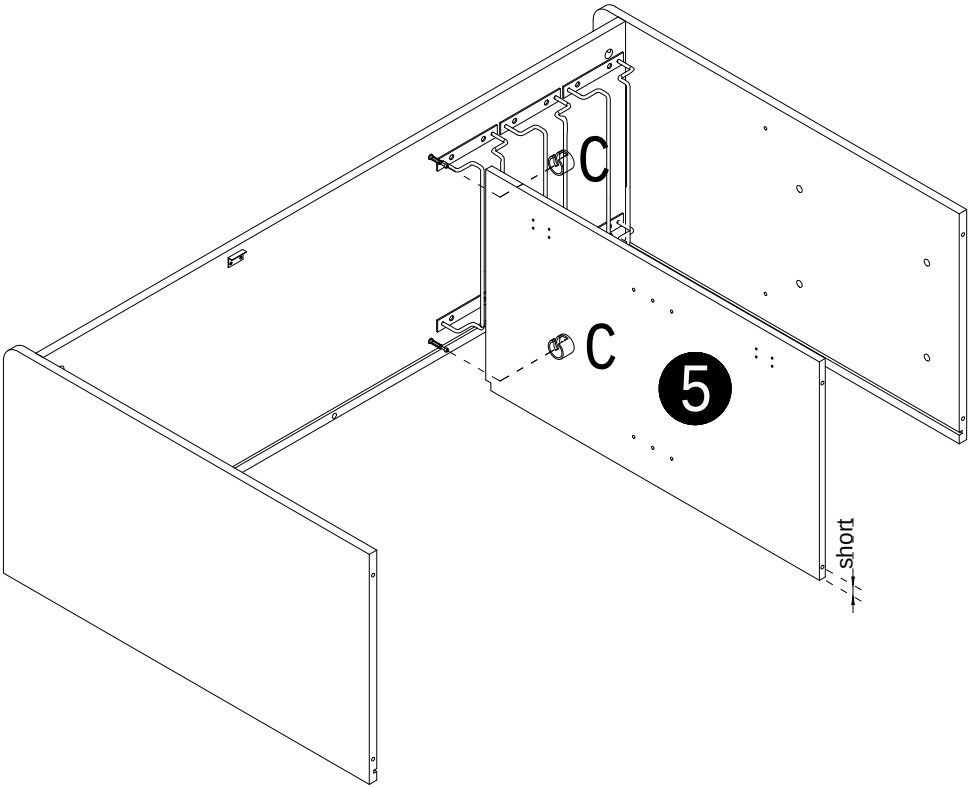


6

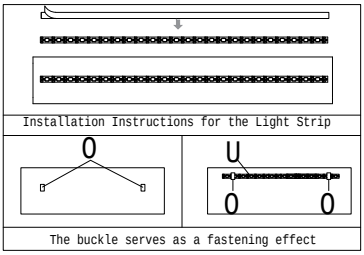




The light strip is installed under the layer board

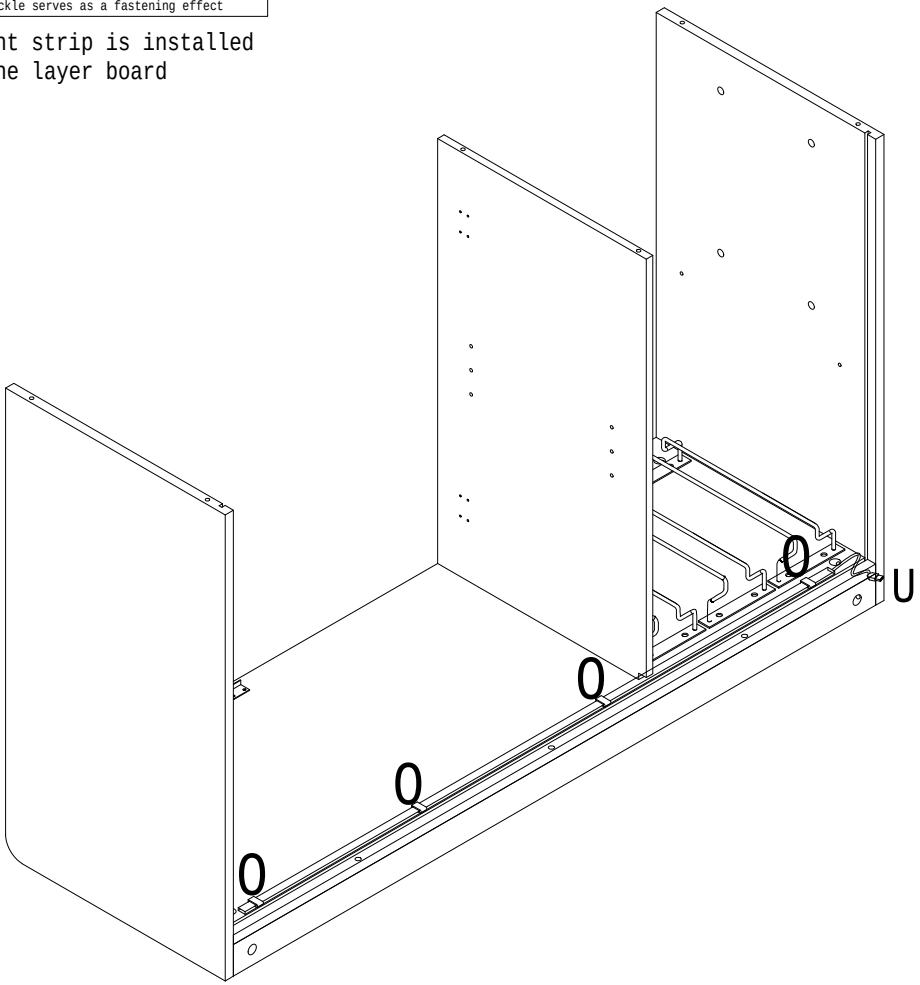


7







x2

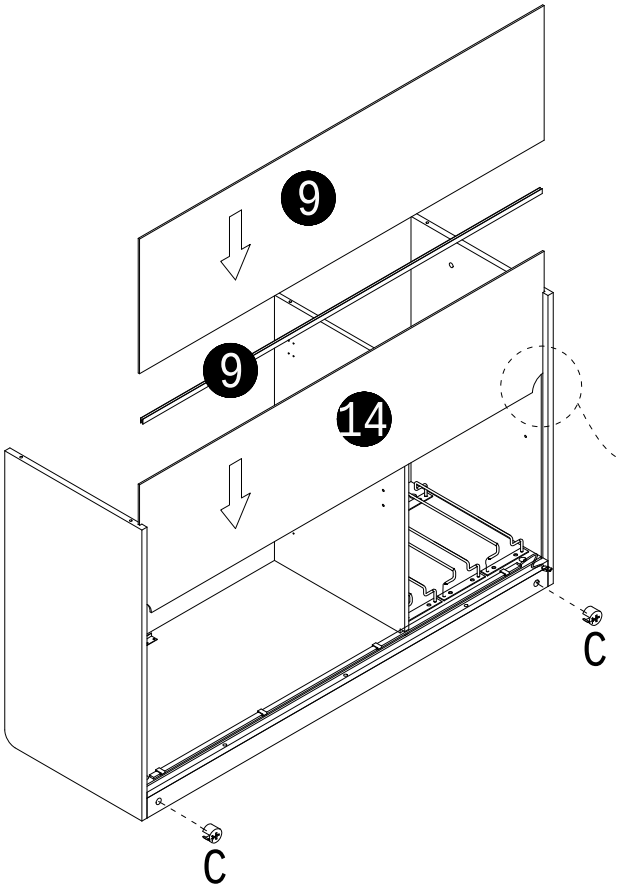


Pay attention to the direction of the holes

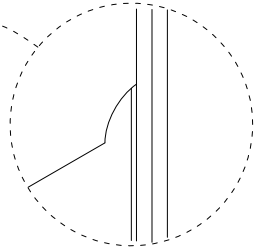


8




Ex8

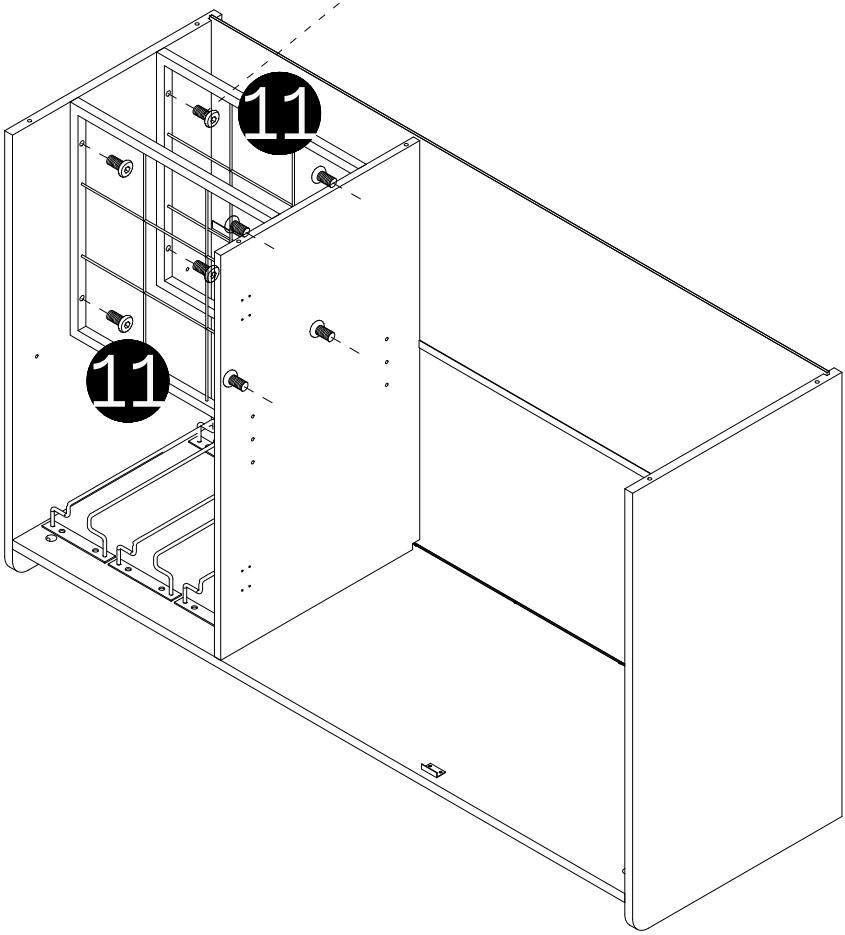



9

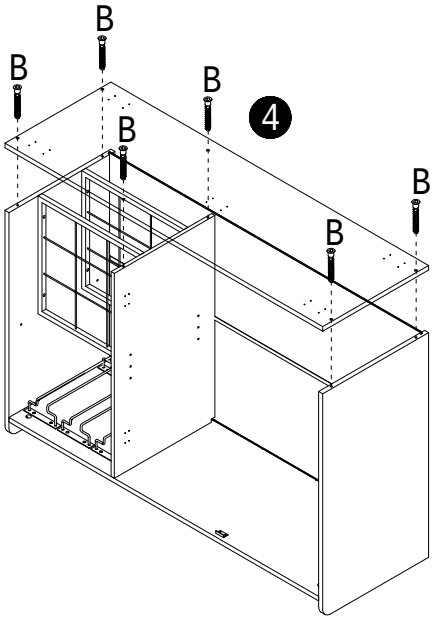




10

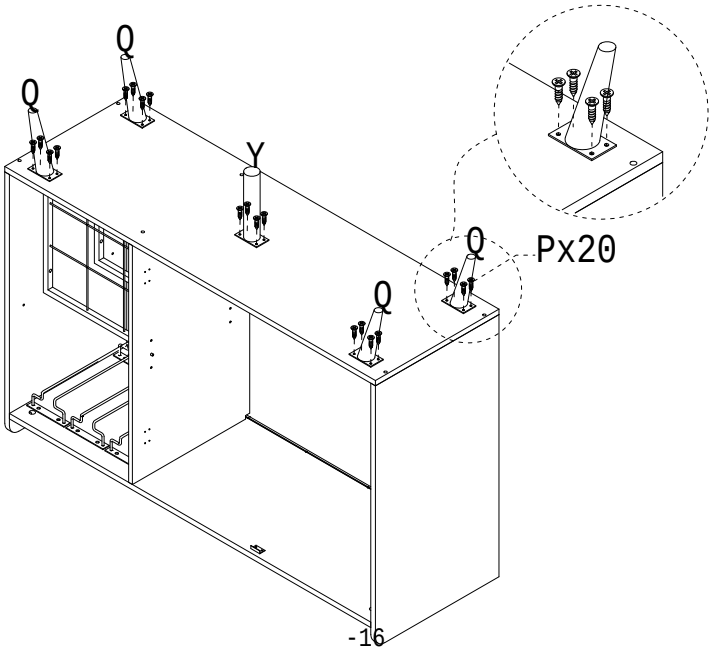


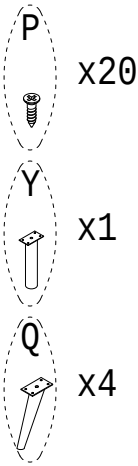


11

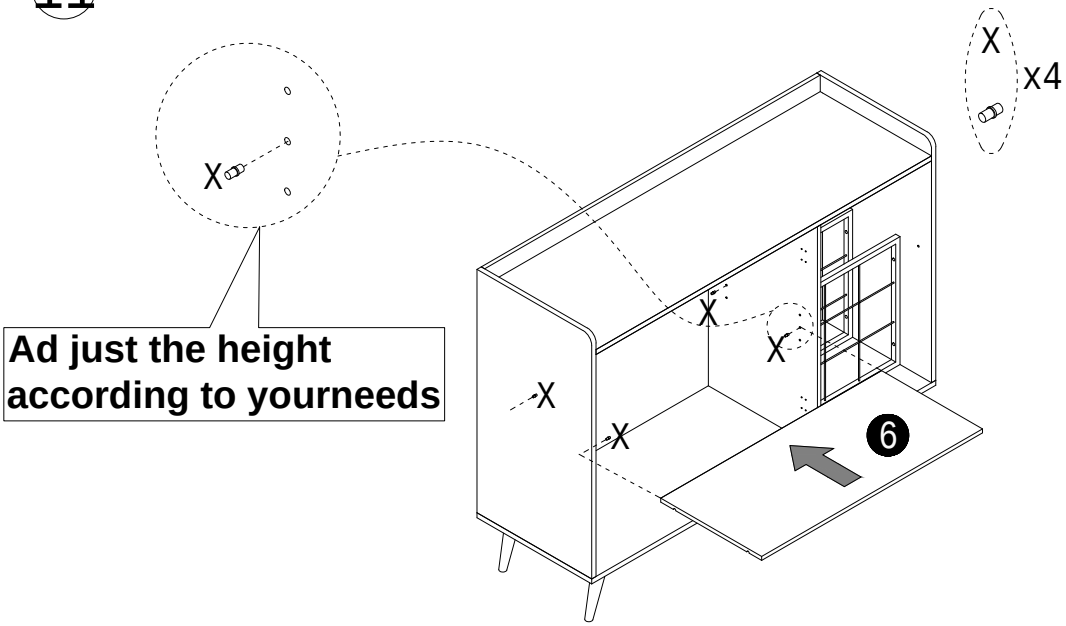
X
x4
X
Ad just the height
according to yourneeds
X
X
X
X
6


12

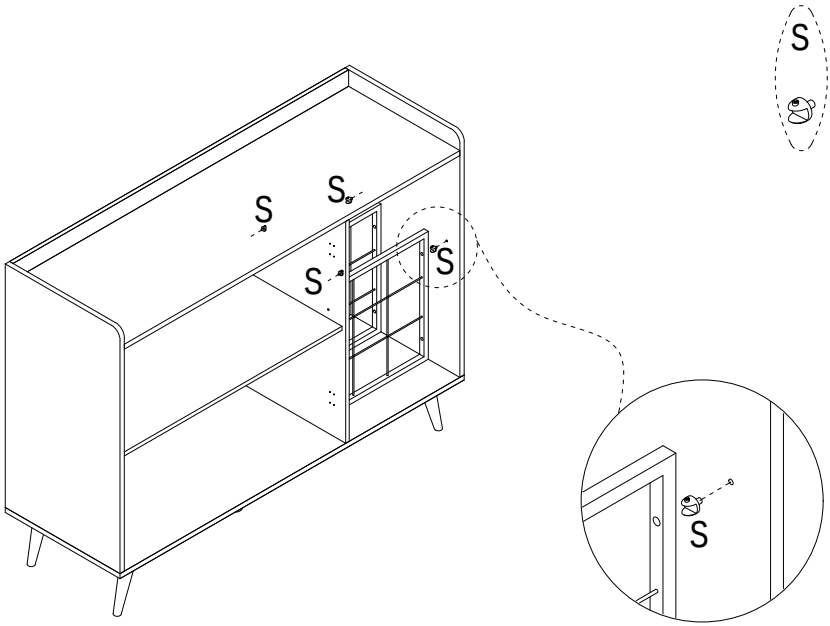
S
x4
S
S
S
S
S


13

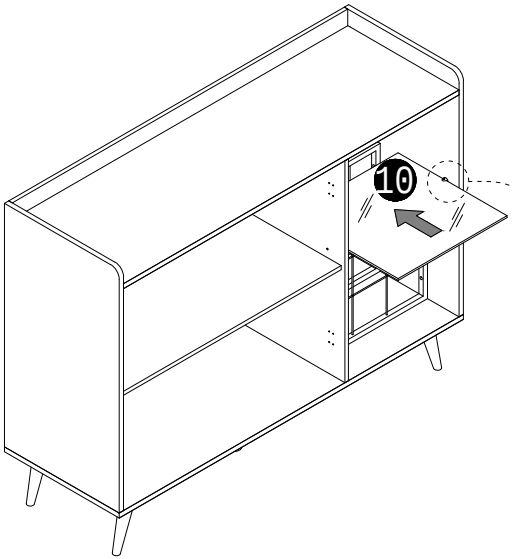


The screws need to be tightened.

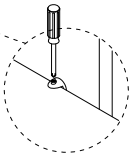


14

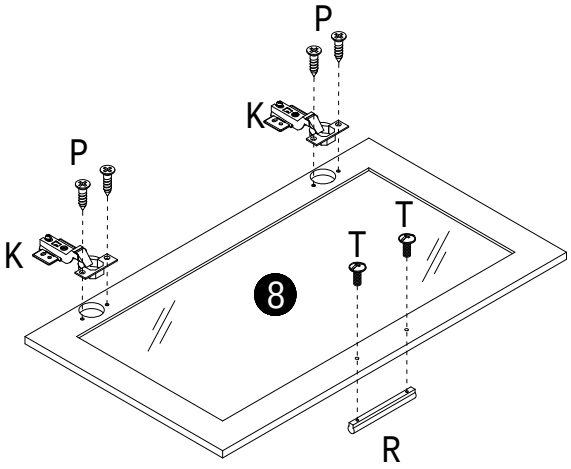


x2





15



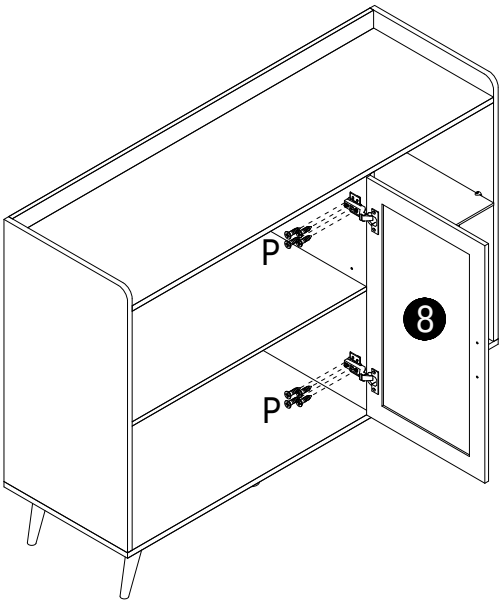

16




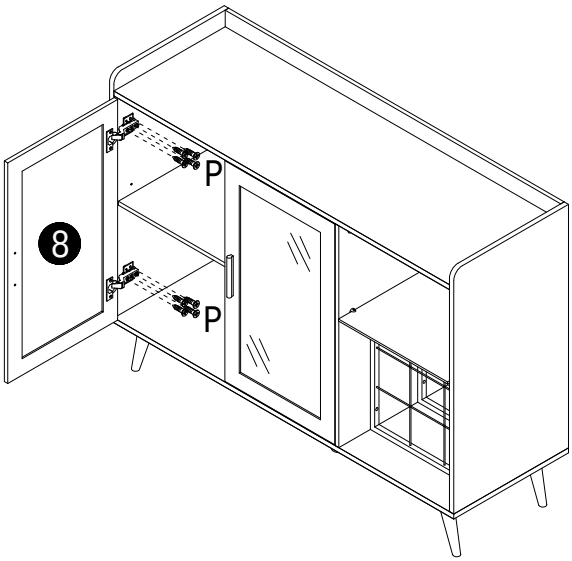

17


V x10


P x10

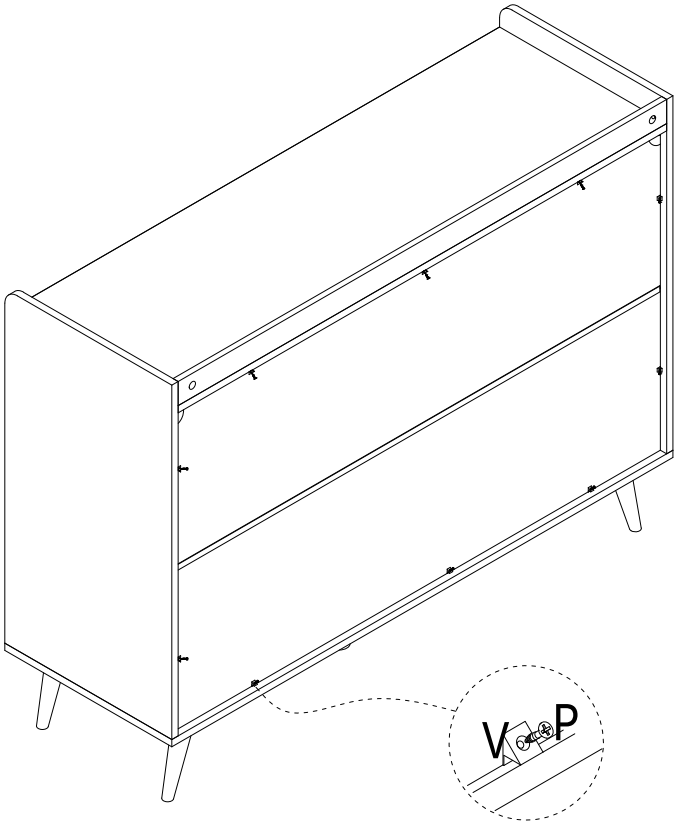

Door hinge adjustment method


Method 1:

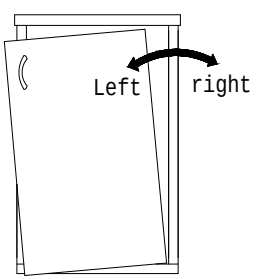


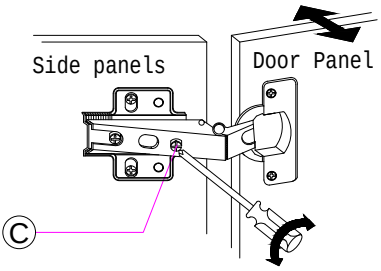

Move the door left or right:
1.Rotate the C screw with a screwdriver clockwise to move the door panel to the left
2.Rotate the C screw counterclockwise with a screwdriver to adjust the door panel to move to the right


Method 2:

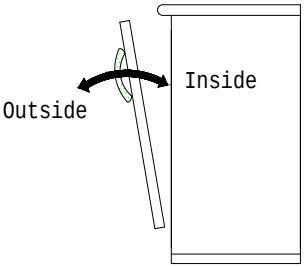


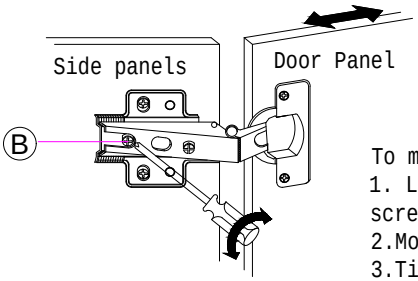

To move the door in or out:
1. Loosen screw B using a screwdriver, as shown in Figure
2.Move door to proper position
3.Tighten the screws again


Method 3:

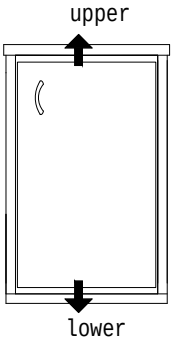

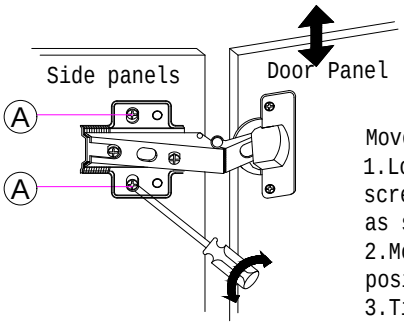



Move the door up and down:
1.Loosen the top and bottom screws A using a screwdriver, as shown in Figure
2.Move the door to the proper position and align the door
3.Tighten the screws again


Install the tipping restraint hard ware

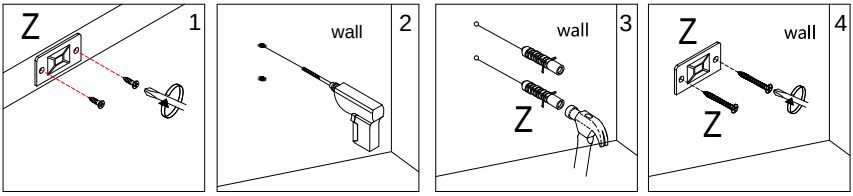



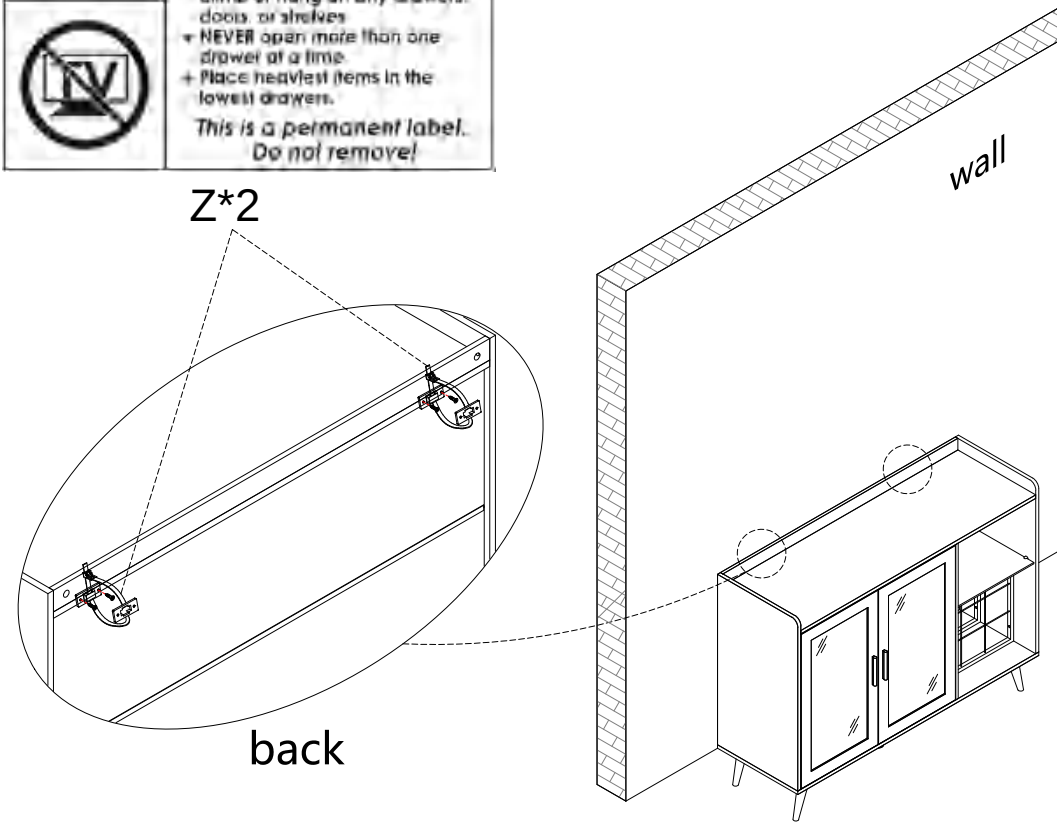

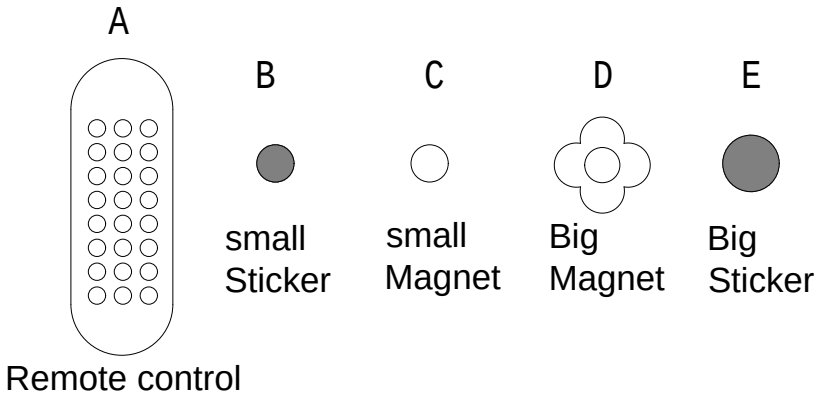
A
B
C
D
E
small
Sticker
small
Magnet
Big
Magnet
Big
Sticker
Remote control

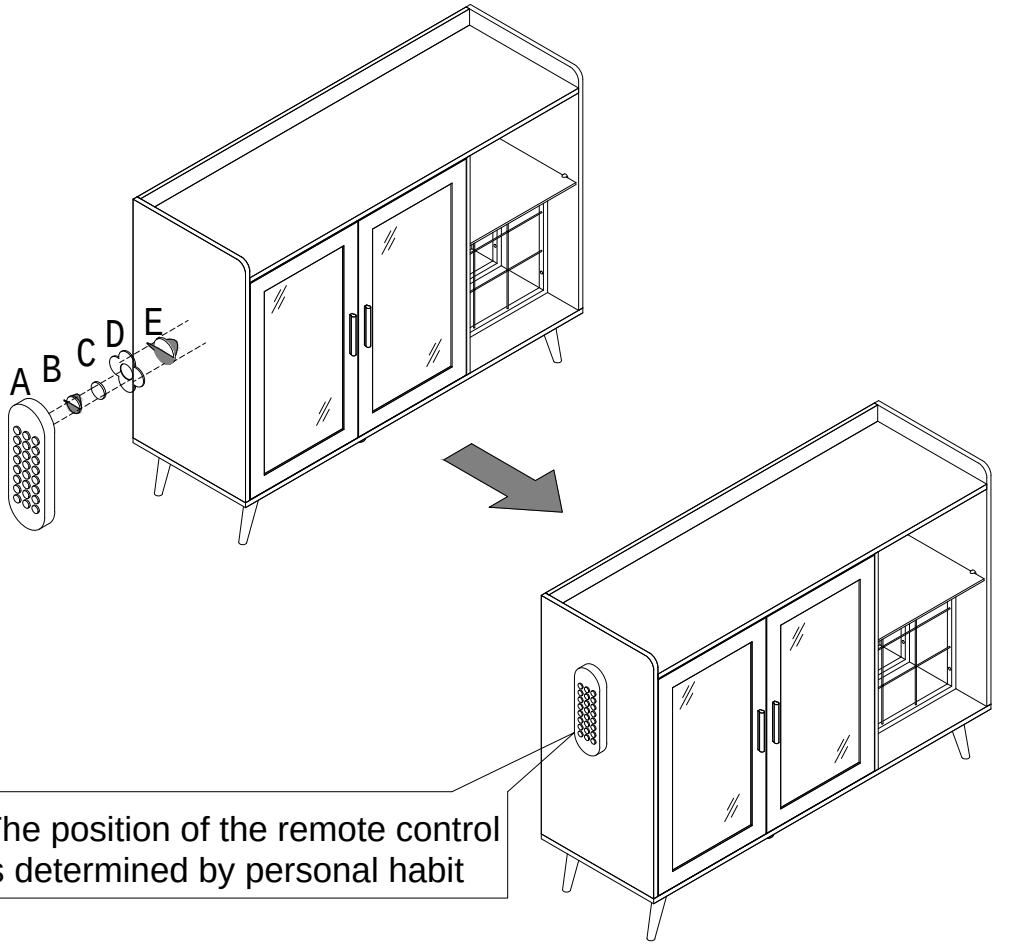
A
B
C
D
E
The position of the remote control
is determined by personal habit



Machine Translated by Google

VEVOR

Upgrade · The Home Creator Way

Plate type wine cabinet


MODEL: DX0202-C250498S-01

Machine Translated by Google

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

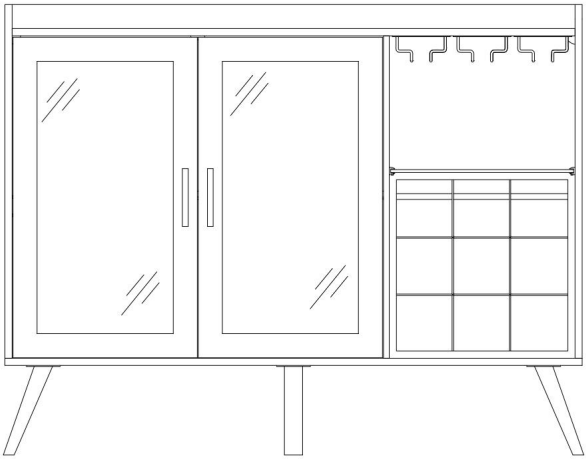

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Machine Translated by Google

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Machine Translated by Google

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

Machine Translated by Google

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Machine Translated by Google

Installation des cames et des goupilles


Vissez la goupille dans le trou. Pour un réglage correct des cames, assurez-vous que la flèche sur la came pointe vers le trou de la goupille qu'elle bloque. Bloquez la came en tournant sa tête avec un tournevis jusqu'à ce qu'elle soit serrée. N'utilisez pas de visseuse électrique pour assembler l'appareil.

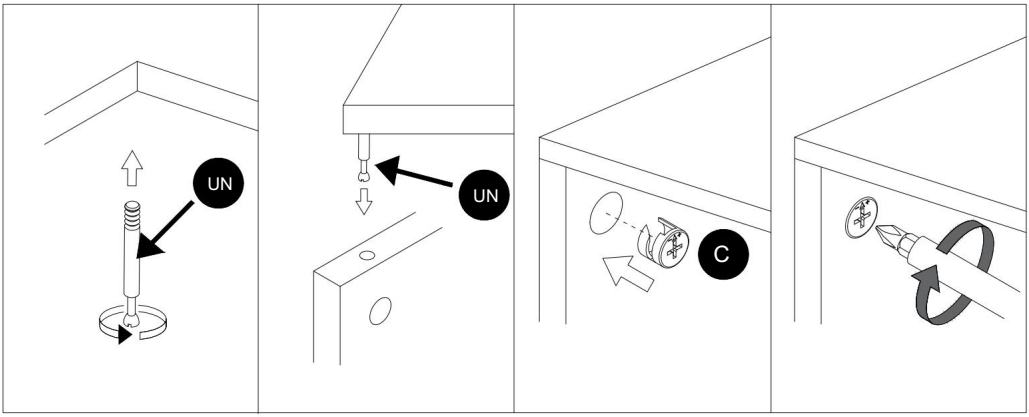

Lisez attentivement chaque étape avant de commencer. Il est très important de suivre les instructions dans l'ordre. Tout manquement à cette séquence entraînera des difficultés de montage.












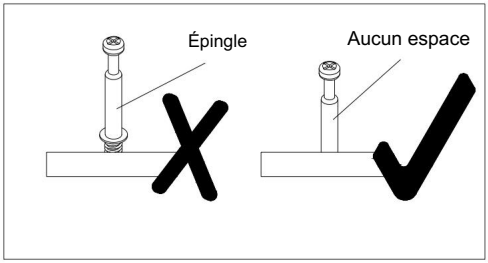


Machine Translated by Google

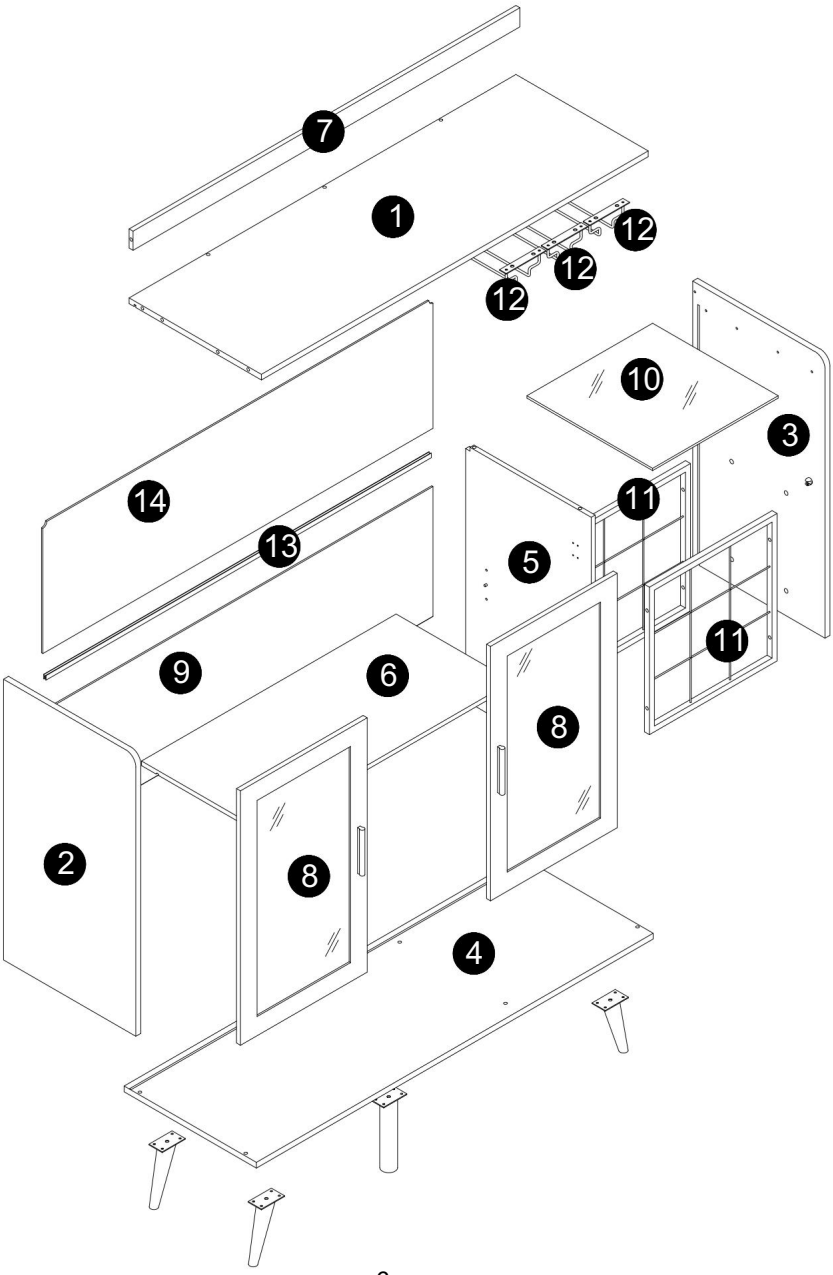


Machine Translated by Google

Liste des pièces et du matériel

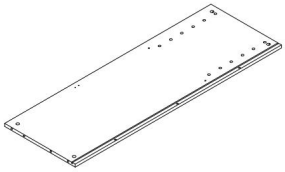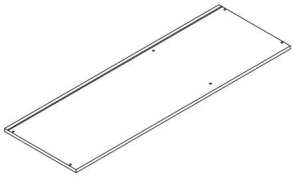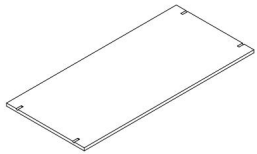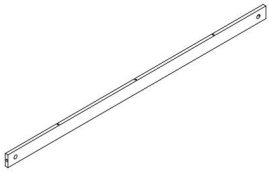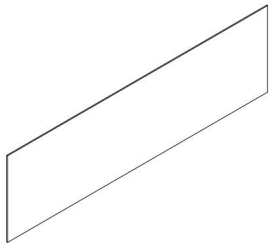
 1 pièce	 2 pièces	 3 pièces
 4 pc	 5 pièce	 6 1 pièce
 7 pièces	 8 2 pièces	 9 pièces
 10 pièce	 11 2 pièces	 12 8 pièces

Machine Translated by Google

Liste des pièces et du matériel

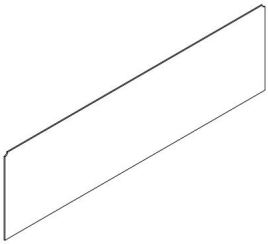
 13 1 pièce	 14 1 pièce	

Liste des pièces et du matériel

 Un lot de 8 pièces + 1	 M7X50MM B 9 pièces + 1	 C 8 pièces + 1	 M6X23MM E 8 pièces + 1
 DW K 4 pièces + 1	 Ø6X30MM L 4 pièces + 1	 M6X10MM N 12 pièces + 1	 O 4 pièces + 1
 ST3,5 x 12 mm P 56 pièces + 5	 Q 4 pièces	 R 2 pièces	 S 4 pièces + 1
 M4 x 16 mm T 4 pièces + 1	 Et 1 pièce	 Dans 10 pièces + 1	 DANS 1 pièce
 X pièces + 1	 Y 1pc	 2 pièces	 1 pièce
			

Machine Translated by Google

1

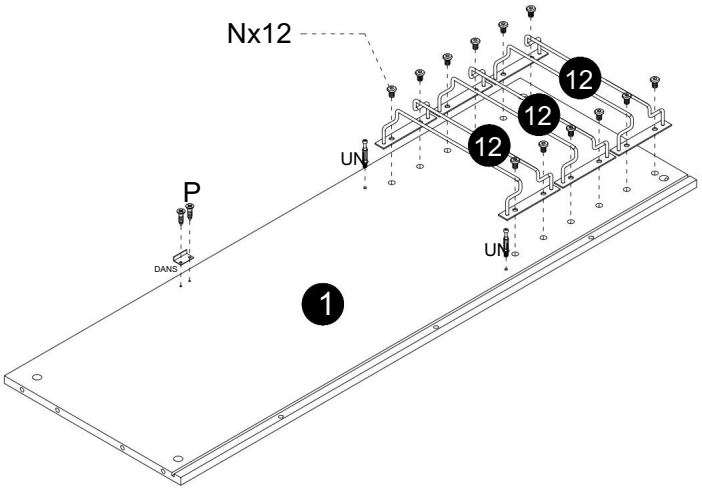



x2



x1




x2




x1

2



x3

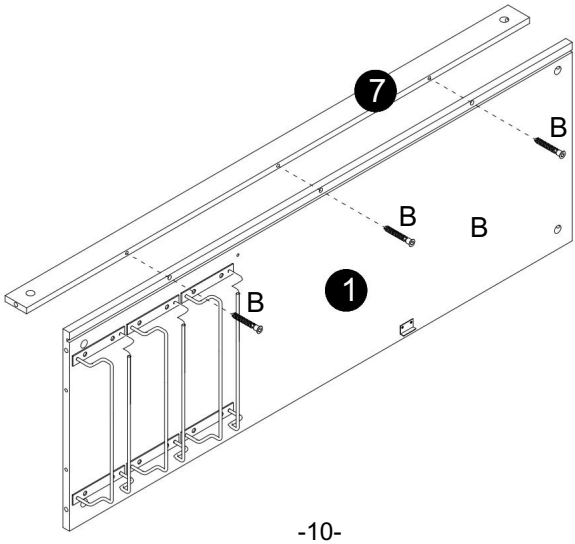


Machine Translated by Google


3



x6

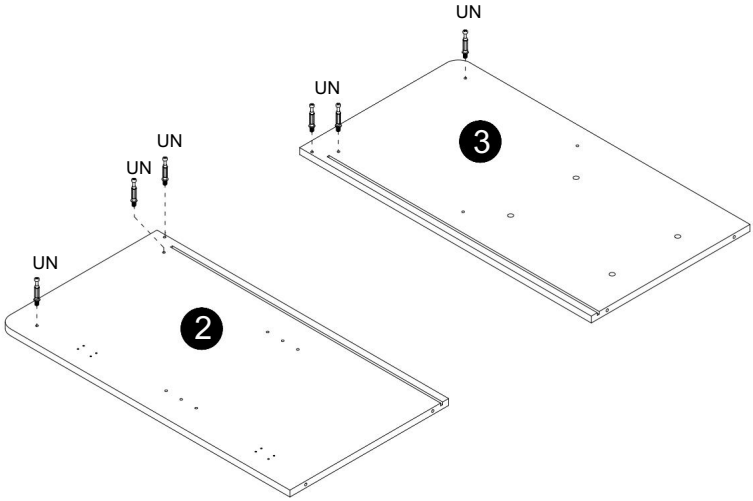

4






x4




x4

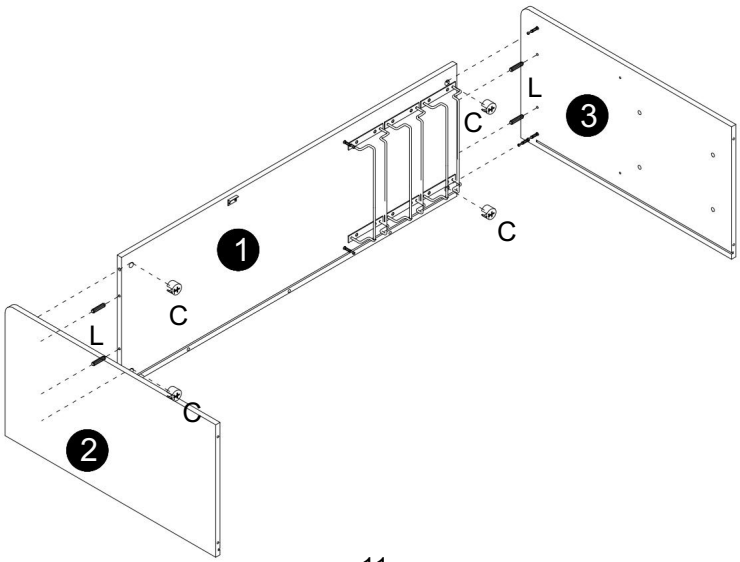


Machine Translated by Google

5







x2

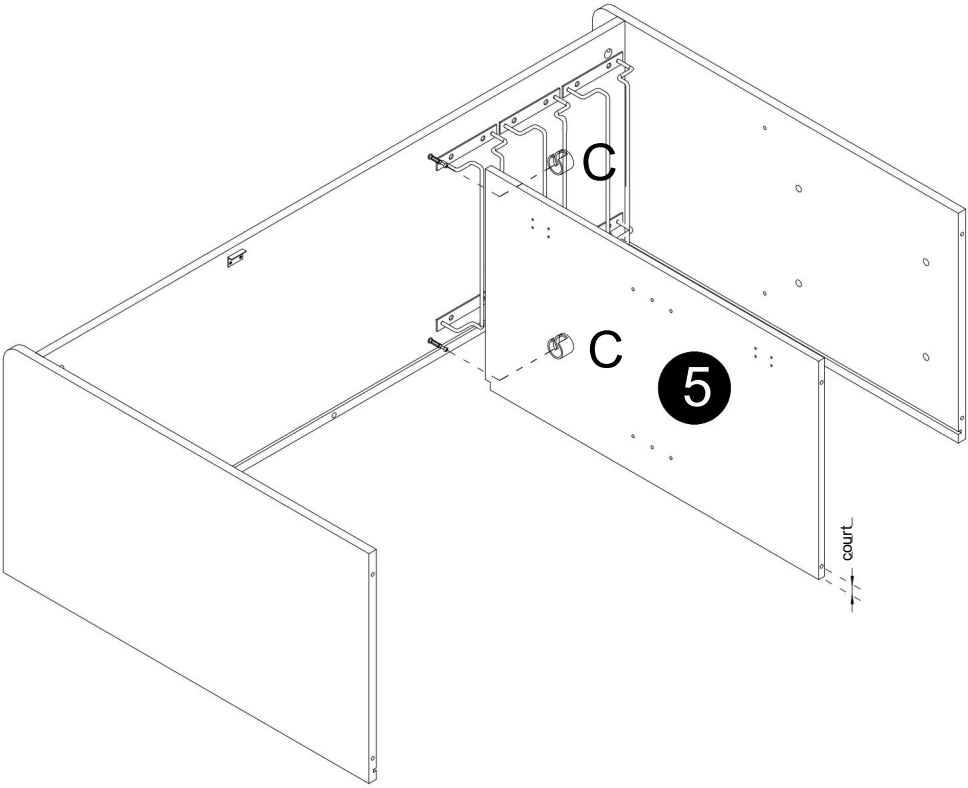


6

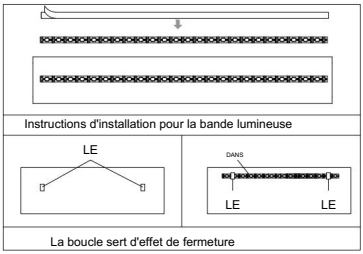




La bande lumineuse est installée sous le panneau de couches.

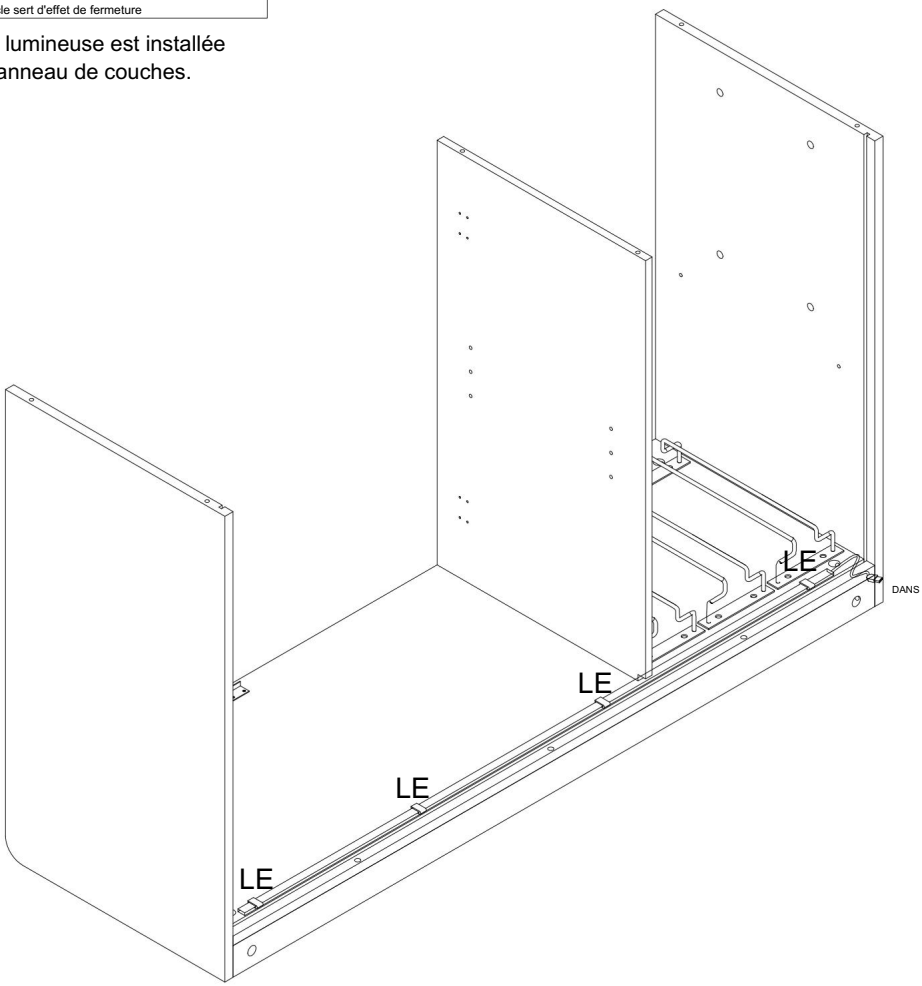


Machine Translated by Google

7






x2

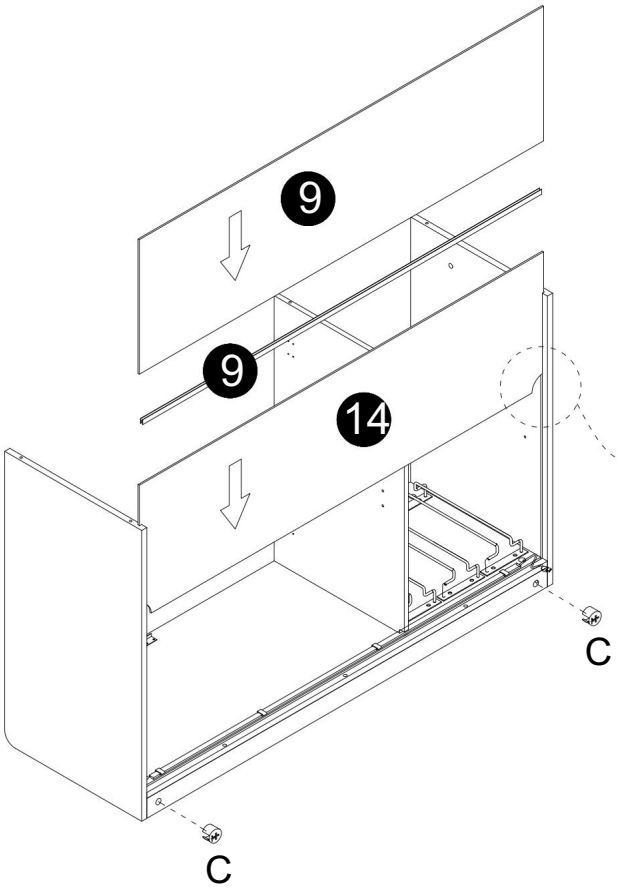



Faites attention à l'orientation des trous.

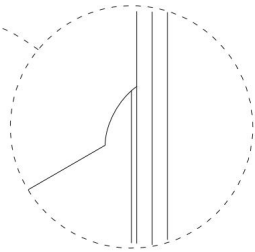

Machine Translated by Google


8




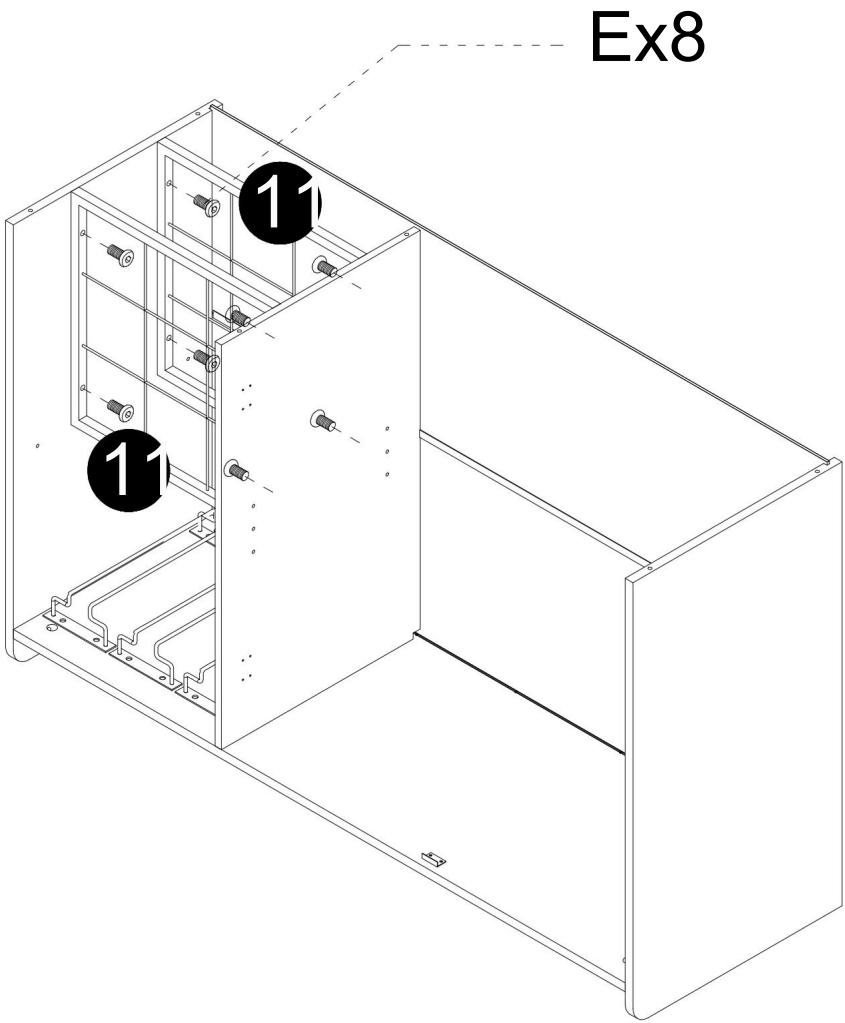


Machine Translated by Google


9

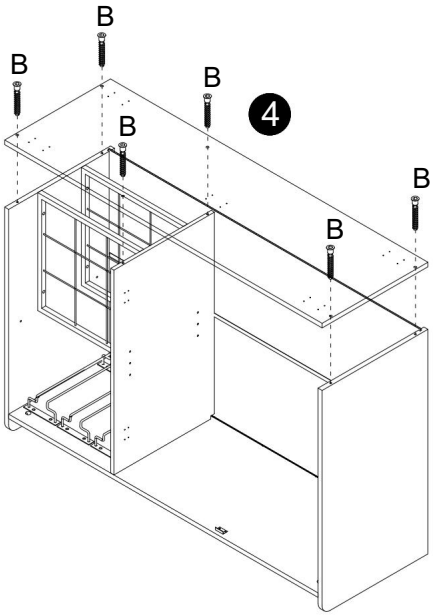




10

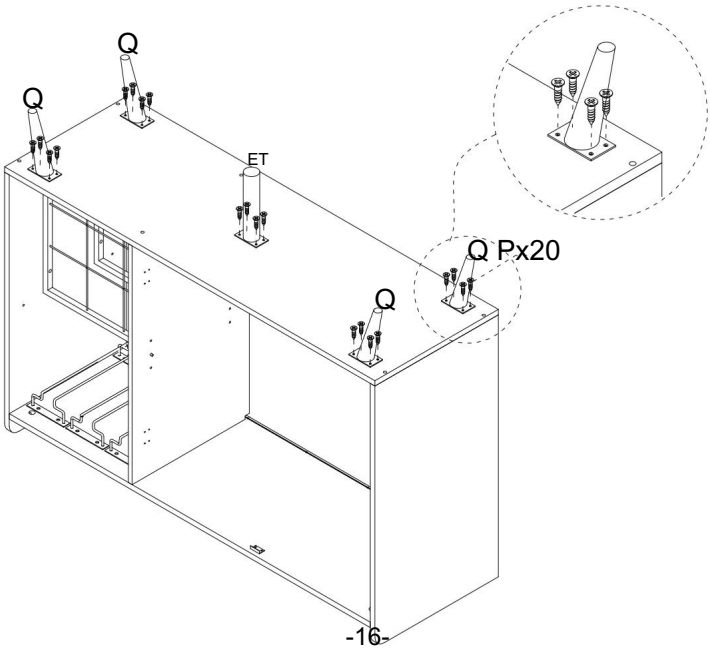

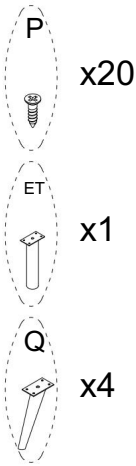


Machine Translated by Google

11

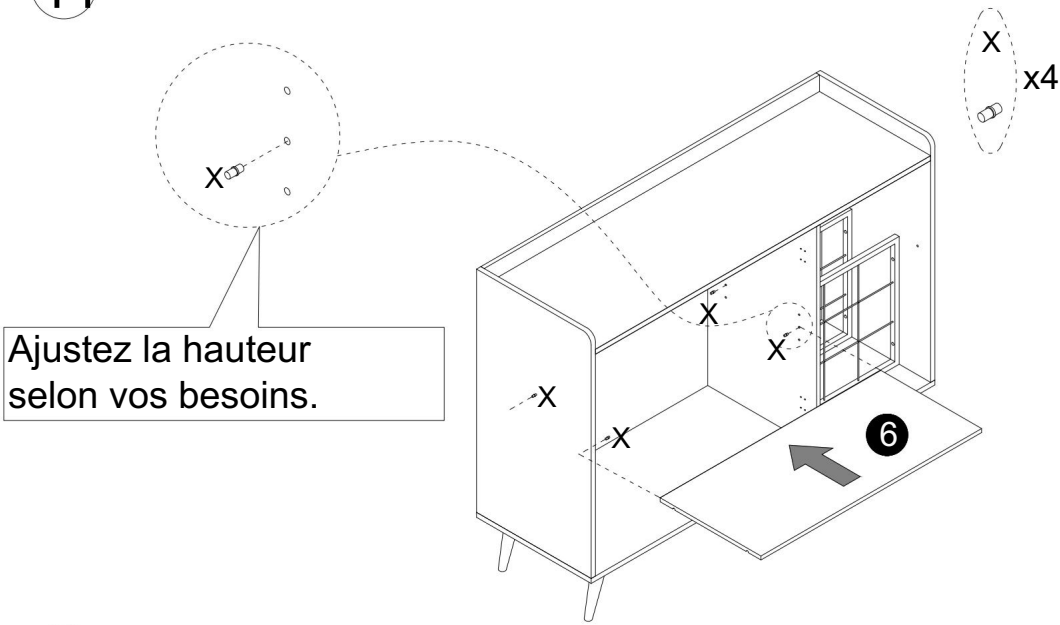



12

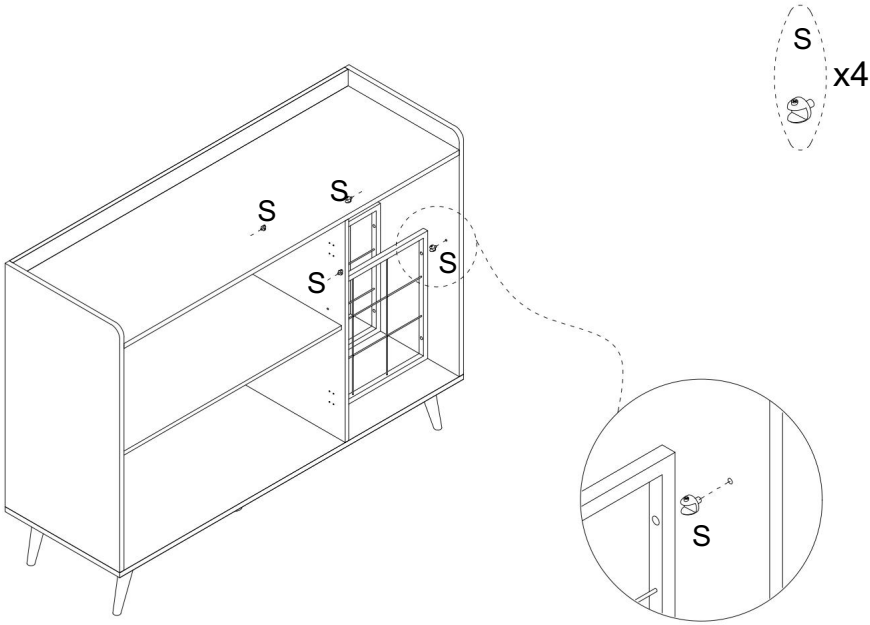

Machine Translated by Google


13

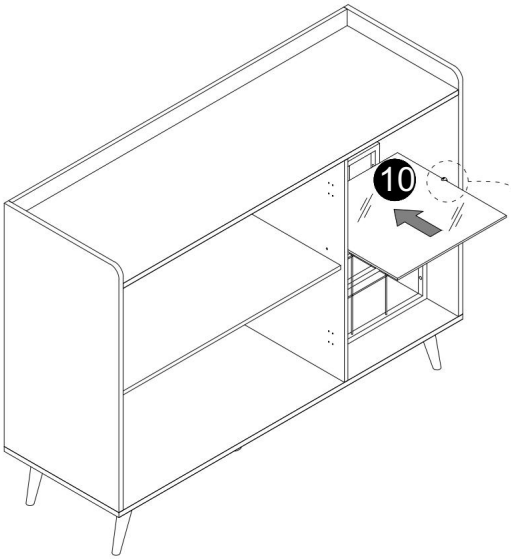

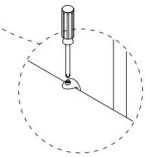


Les vis doivent être resserrées.

14

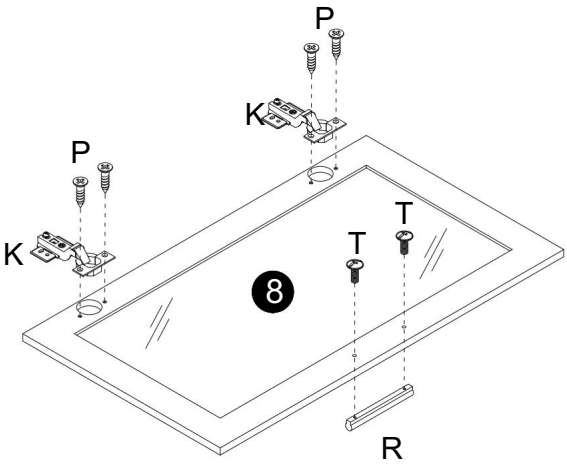



x2




Machine Translated by Google


15



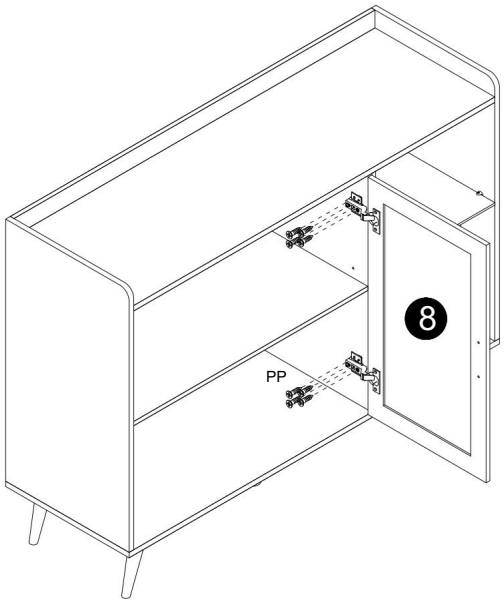


16



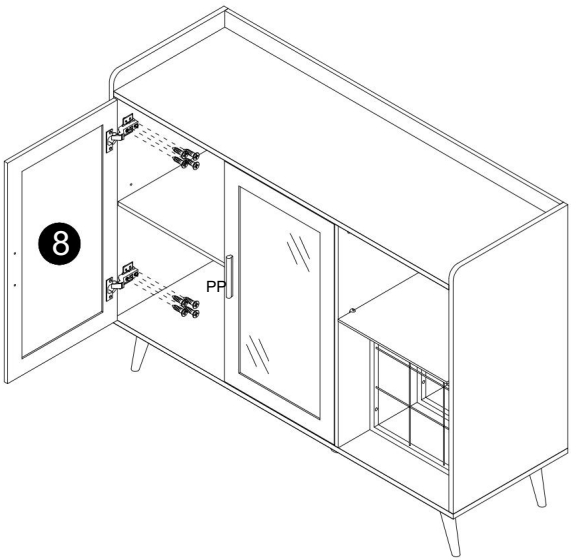

Machine Translated by Google


17



x10




x10

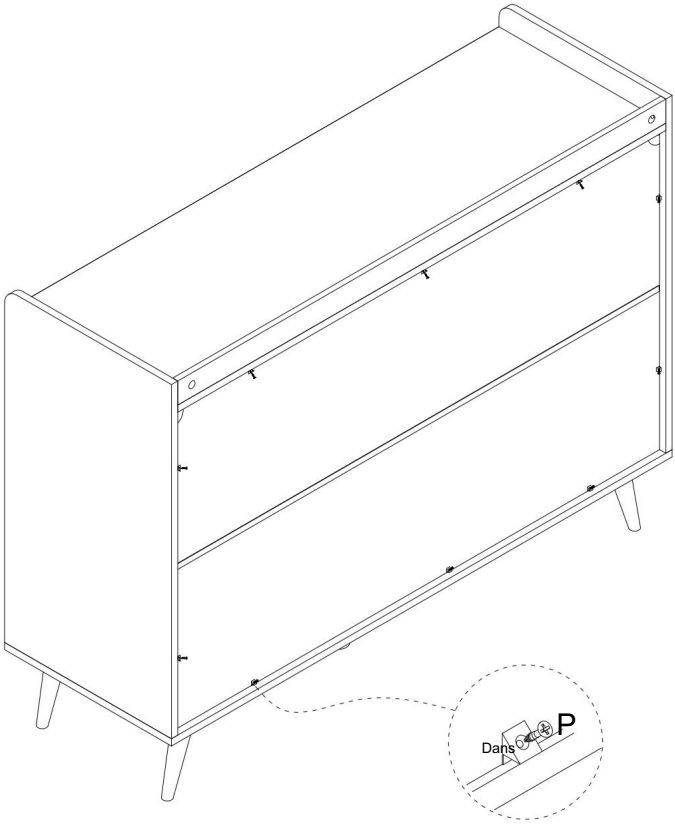


Machine Translated by Google

méthode de réglage des charnières de porte

Méthode 1 :

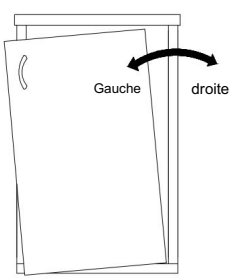


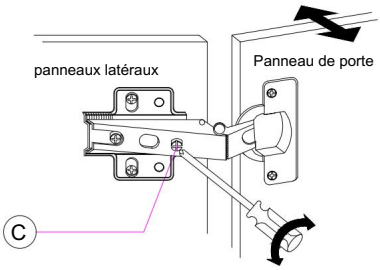


Déplacer la porte à gauche ou à droite : 1. Tournez la vis C dans le sens horaire avec un tournevis pour déplacer le panneau de porte vers la gauche.

2. Tournez la vis C dans le sens antihoraire avec un tournevis pour déplacer le panneau de porte vers la droite.

Méthode 2 :

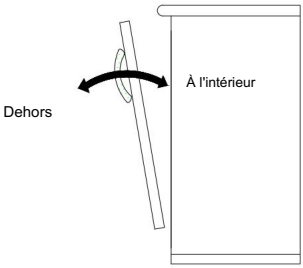


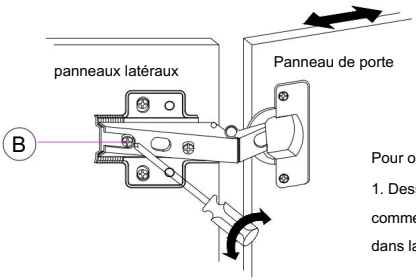


Pour ouvrir ou fermer la porte :

1. Desserrez la vis B à l'aide d'un tournevis, comme indiqué sur la figure 2. 2. Déplacez la porte dans la position souhaitée. 3. Resserrer les vis.

Méthode 3 :

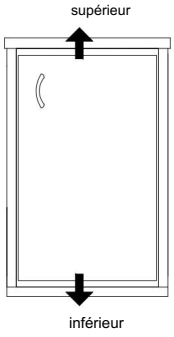


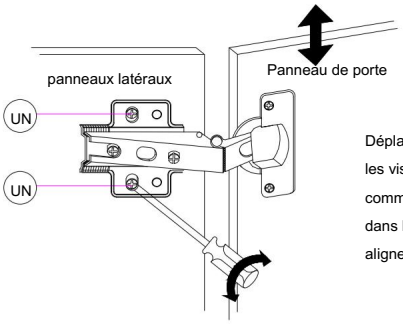



Déplacer la porte de haut en bas : 1. Desserrez les vis A du haut et du bas à l'aide d'un tournevis, comme indiqué sur la figure. 2. Déplacez la porte dans la position souhaitée et alignez-la. 3. Resserrer les vis.


Machine Translated by Google


Installez le dispositif anti-basculement.

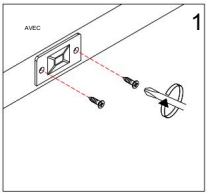

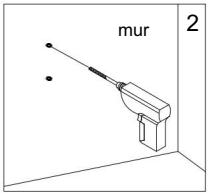


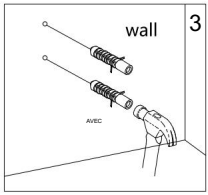

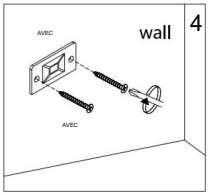







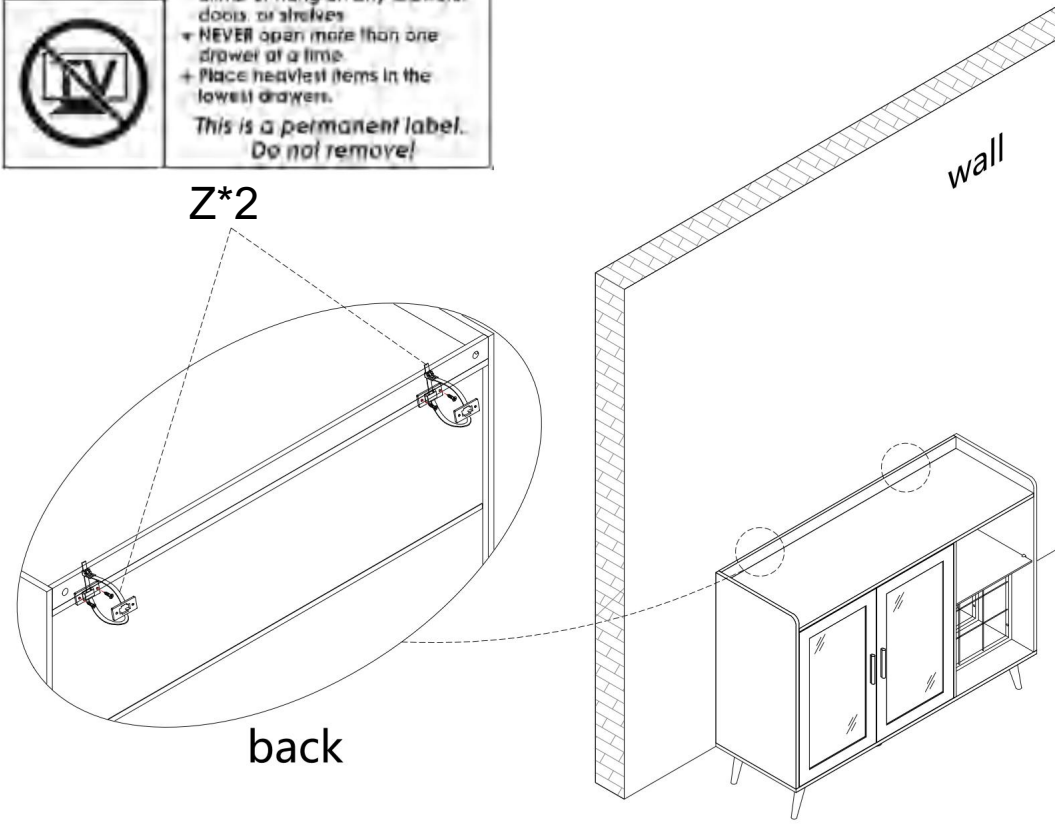

Machine Translated by Google



Télécommande



petit

Autocollant




petit

Aimant




Grand

Aimant



Grand

Autocollant

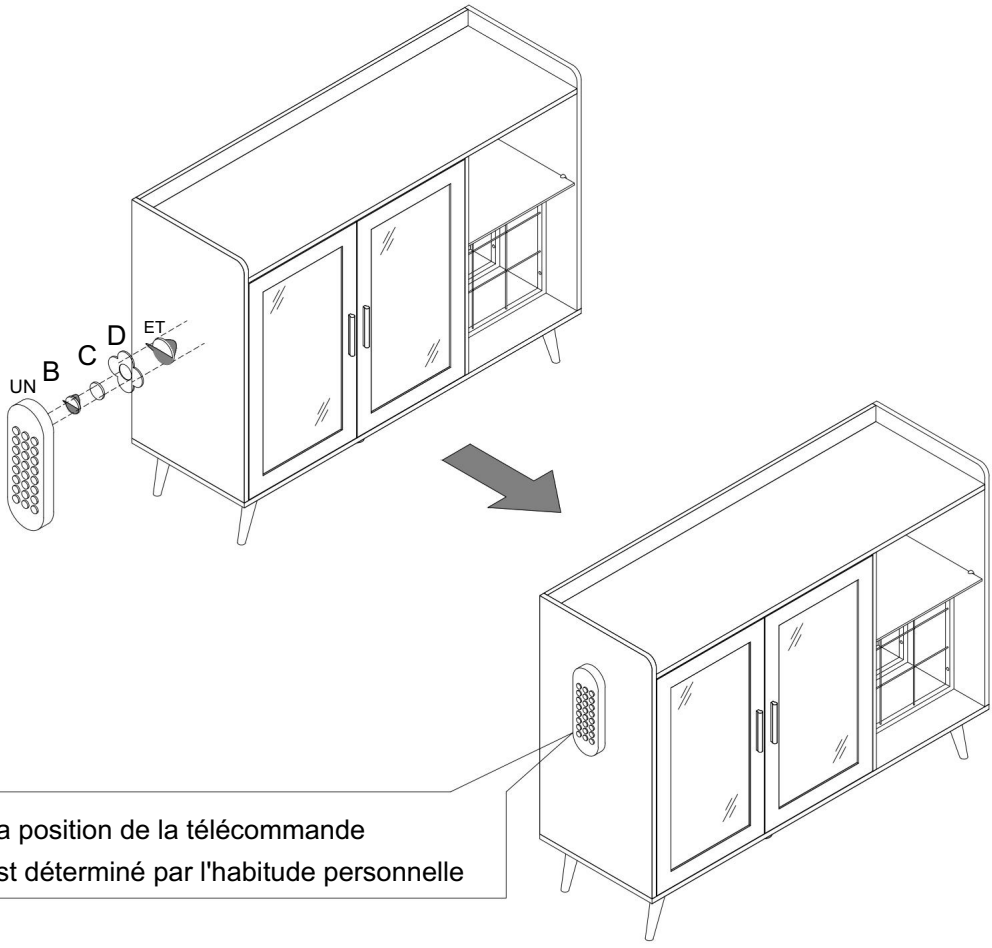

La position de la télécommande
est déterminé par l'habitude personnelle

Machine Translated by Google



Machine Translated by Google

VEVOR

Upgrade · The Home Creator Way

Plate type wine cabinet


MODEL: DX0202-C250498S-01

Machine Translated by Google

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

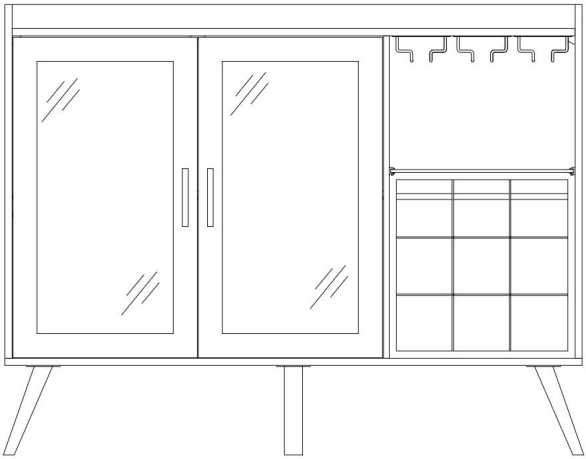

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Machine Translated by Google

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Machine Translated by Google

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

Machine Translated by Google

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Machine Translated by Google

Montage von Nocken und Stiften


Schrauben Sie den Stift in die Öffnung. Achten Sie beim Einstellen der Nocken darauf, dass der Pfeil auf der Nocke zur Öffnung des zugehörigen Stifts zeigt. Arretieren Sie die Nocke, indem Sie den Nockenkopf mit einem Schraubendreher festdrehen. Verwenden Sie zum Zusammenbau keinen Akkuschrauber.

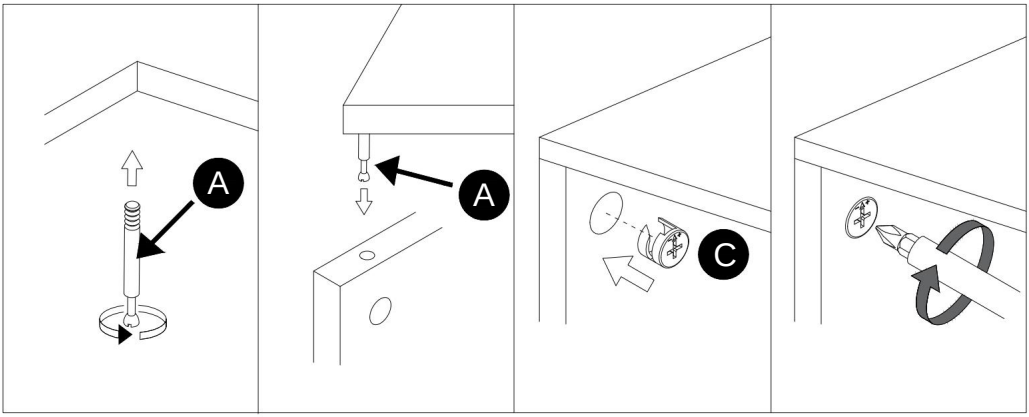

Lesen Sie jeden Schritt sorgfältig durch, bevor Sie beginnen. Es ist sehr wichtig, dass jeder Schritt der Anleitung in der richtigen Reihenfolge ausgeführt wird. Wenn diese Schritte nicht in der vorgegebenen Reihenfolge befolgt werden, treten Montageprobleme auf.












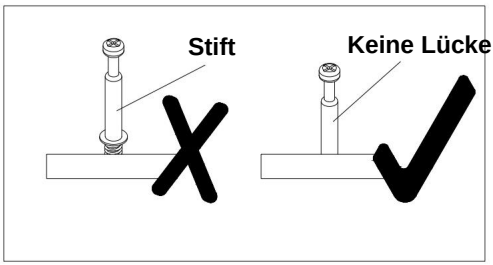


Machine Translated by Google

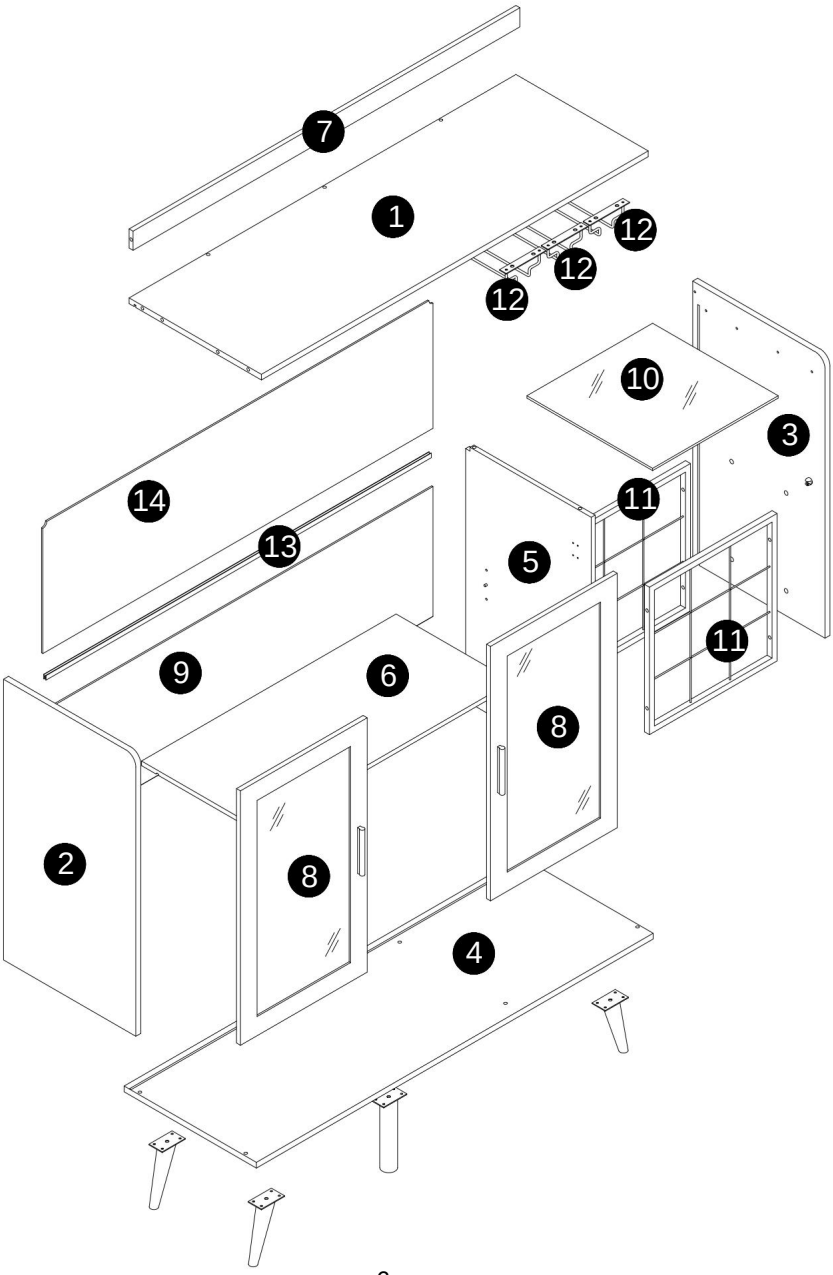


Machine Translated by Google

Teile- und Hardwareliste

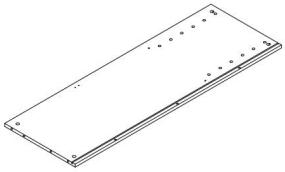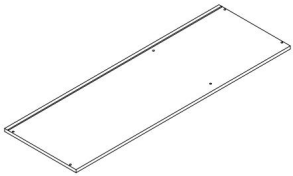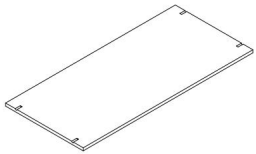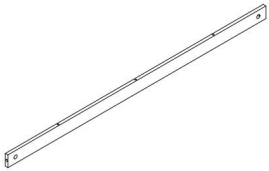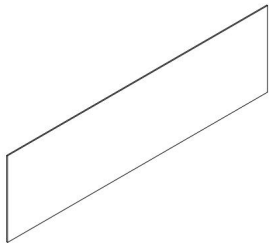
 1 Stück	 2 Stück	 3 Stück
 4 Stück	 5 Stück	 6 1 Stück
 7 Stück	 8 2 Stück	 9 Stück
 10 Stück	 11 2 Stück	 12 8 Stück

Machine Translated by Google

Teile- und Hardwareliste

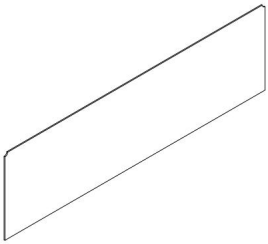
 13 1 Stück	 14 1 Stück	


Teile- und Hardwareliste

 A 8 Stück + 1	 M7x50 mm B 9 Stück + 1	 C 8 Stück + 1	 M6 x 23 mm E 8 Stück + 1
 DW K 4 Stück + 1	 Ø6 x 30 mm L 4 Stück + 1	 M6 x 10 mm N 12 Stück + 1	 O 4 Stück + 1
 ST3,5 x 12 mm P 56 Stück + 5	 Q 4 Stück	 R 2 Stück	 S 4 Stück + 1
 M4 x 16 mm T 4 Stück + 1	 Und 1 Stück	 In 10 Stück + 1	 IN 1 Stück
 X 4 Stück + 1	 Y 1 Stück	 Mit 2 Stück	 1 Stück
			

Machine Translated by Google

1

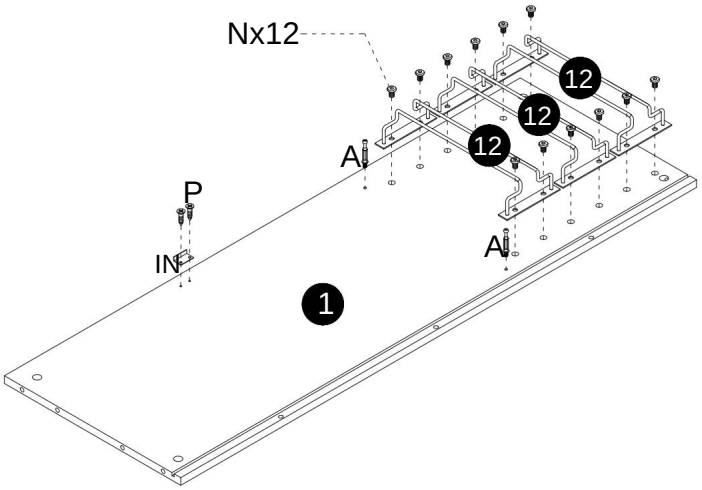




x2



x1




x2




x1

2



x3

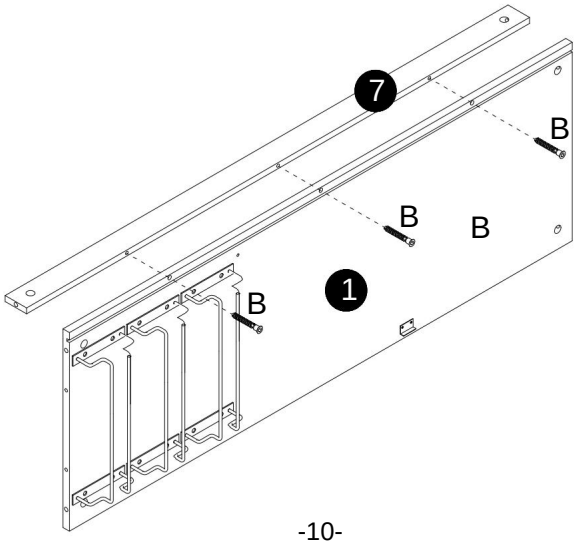


Machine Translated by Google


3



x6

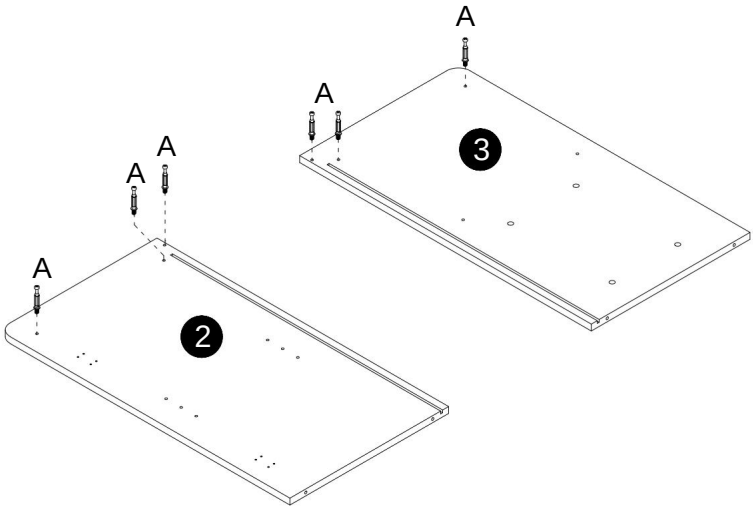

4






x4




x4

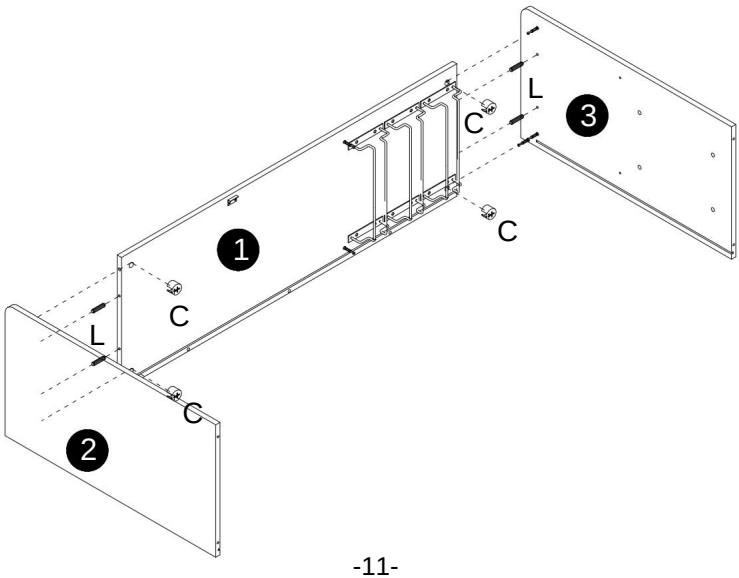


Machine Translated by Google

5







x2

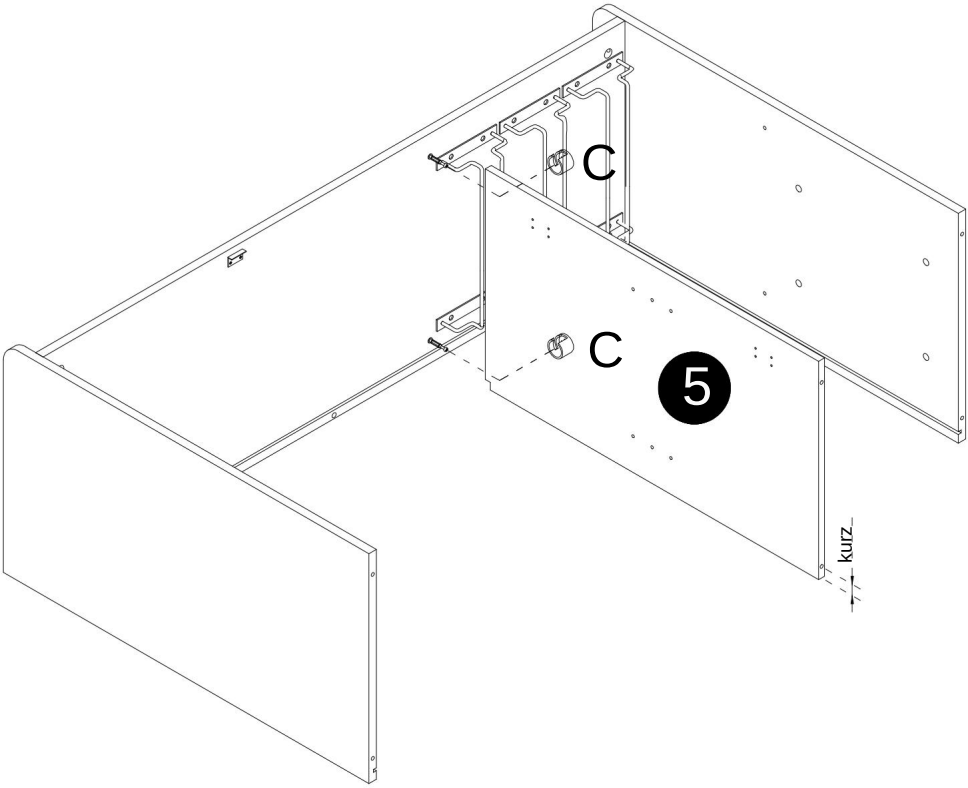


6

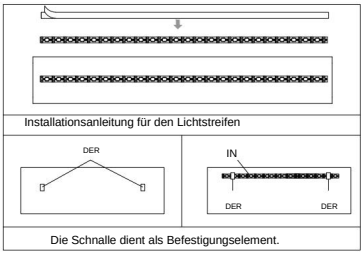




Der Lichtstreifen ist unter der Trägerplatte installiert.

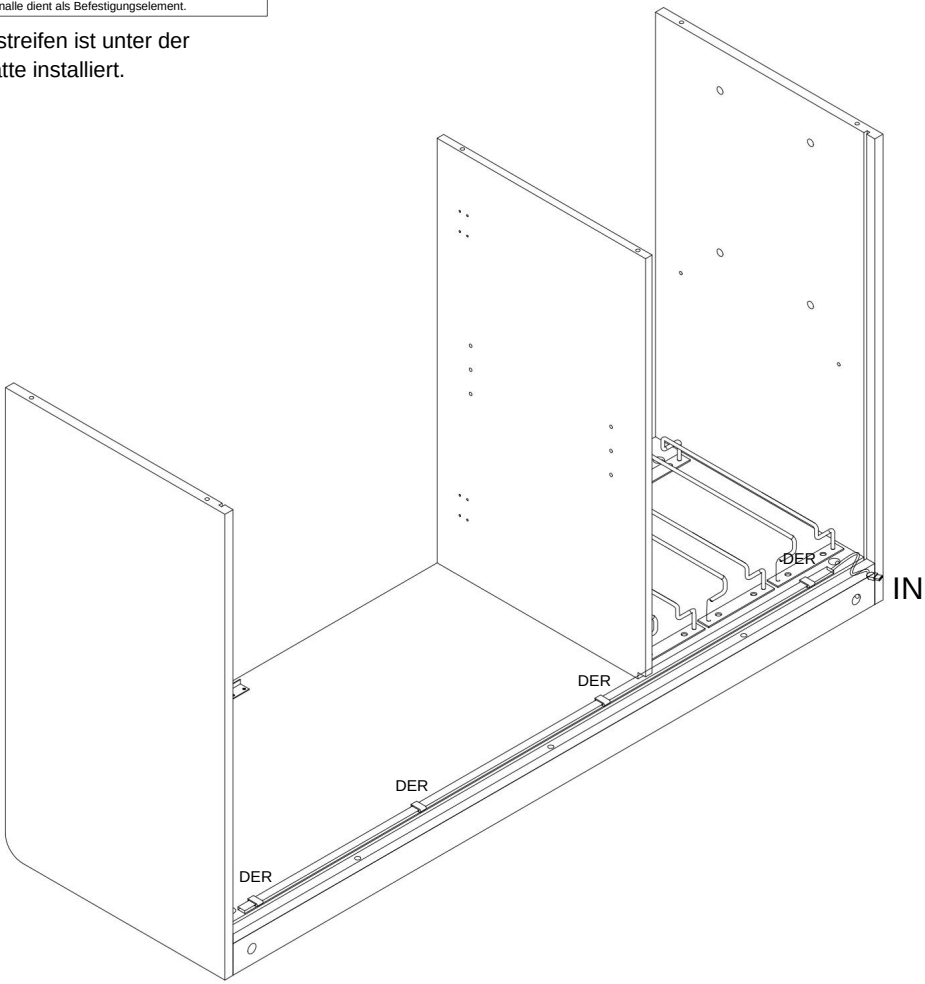


Machine Translated by Google

7






x2

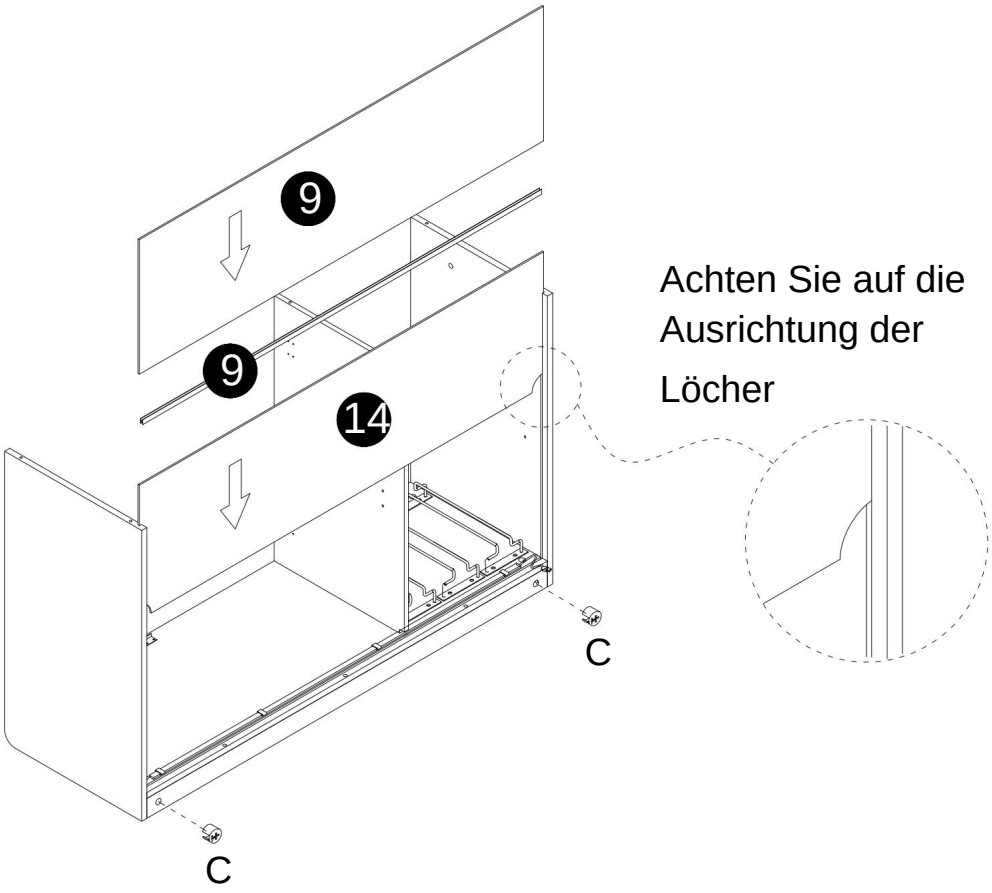


Achten Sie auf die Ausrichtung der Löcher

Machine Translated by Google


8




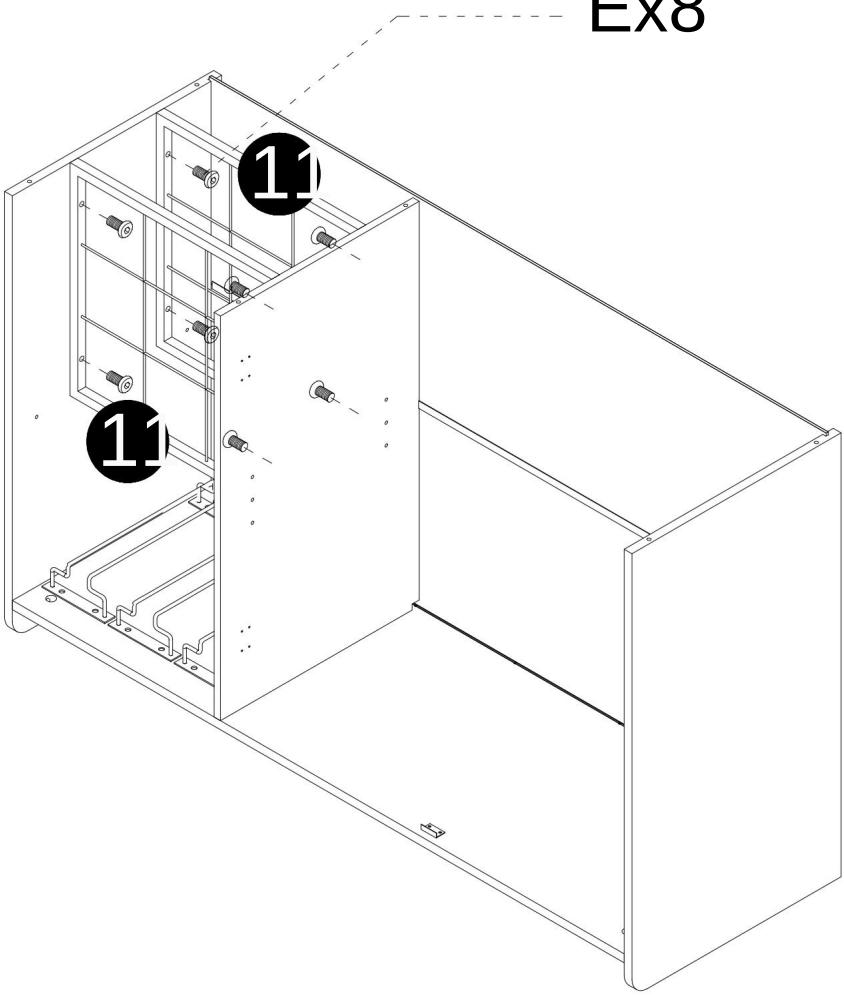


Machine Translated by Google


9

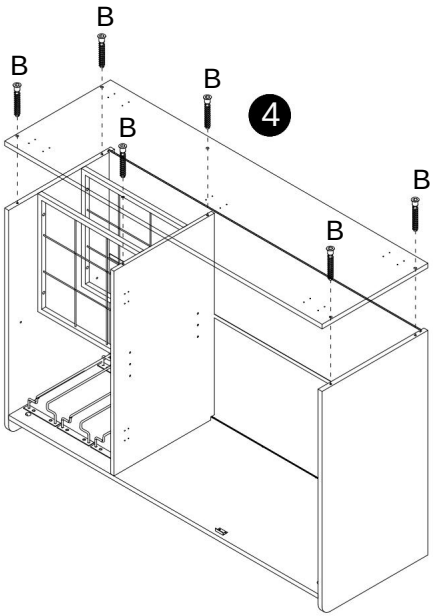




10

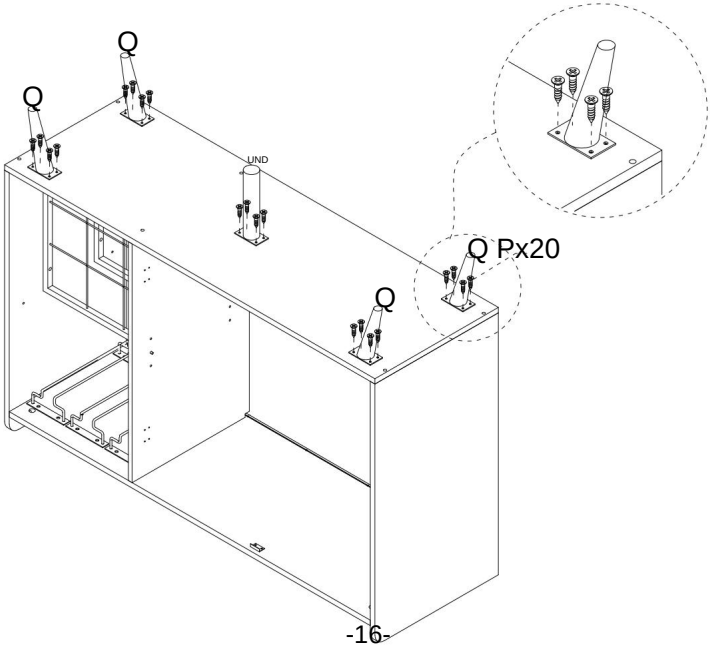

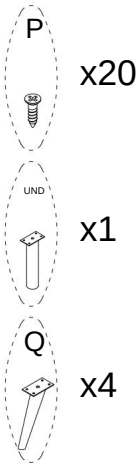


Machine Translated by Google

11

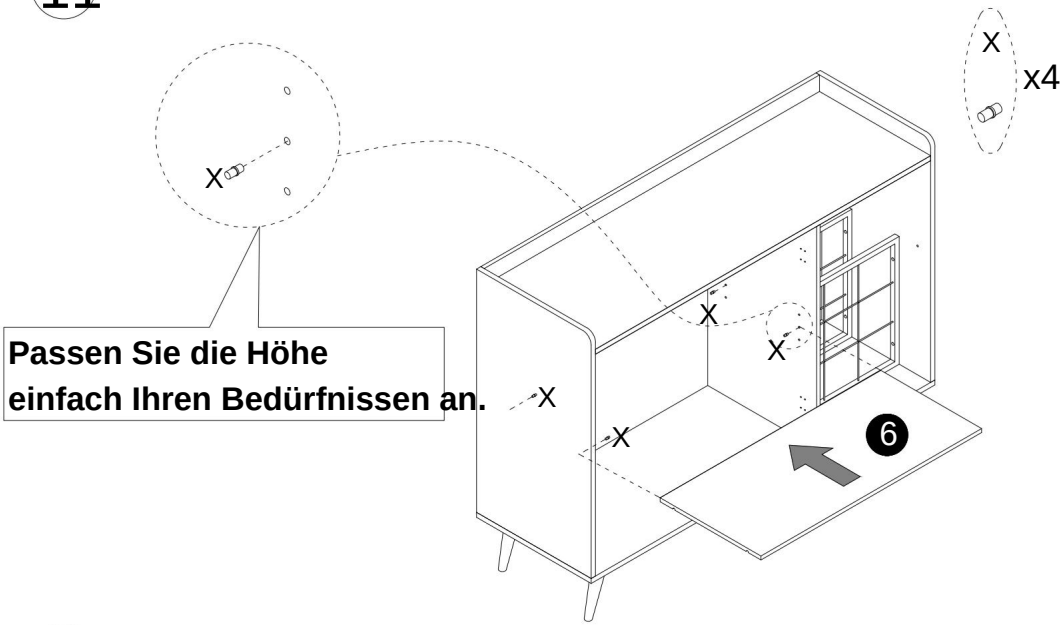


Passen Sie die Höhe einfach Ihren Bedürfnissen an.


12

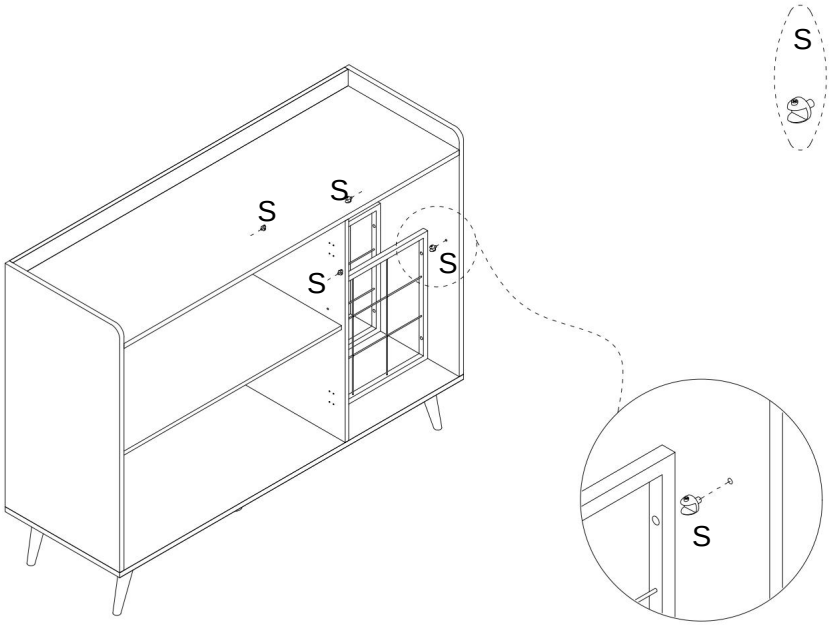

Machine Translated by Google


13

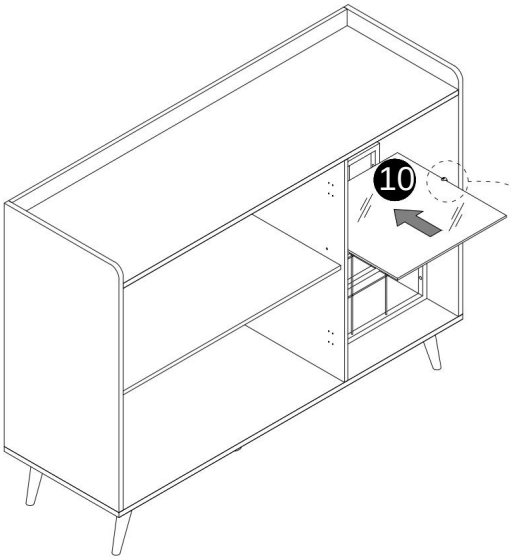

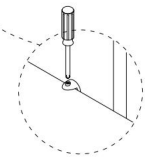


Die Schrauben müssen festgezogen werden.

14

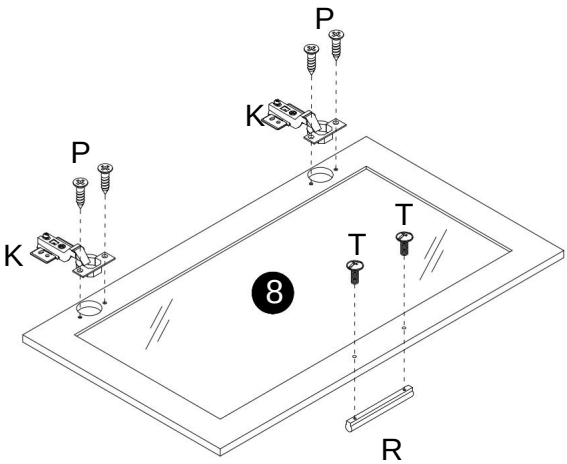



x2




Machine Translated by Google


15



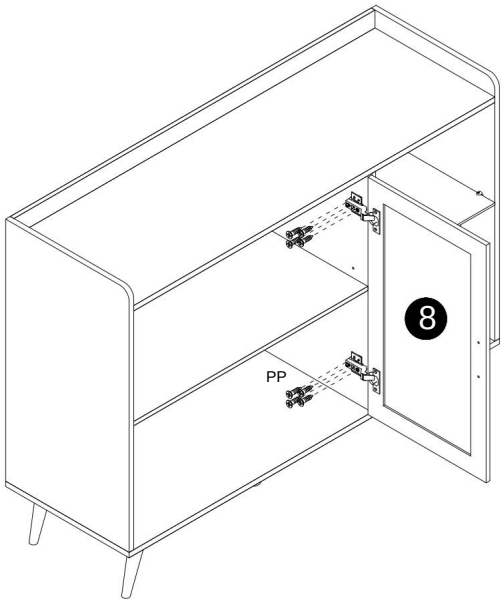

16



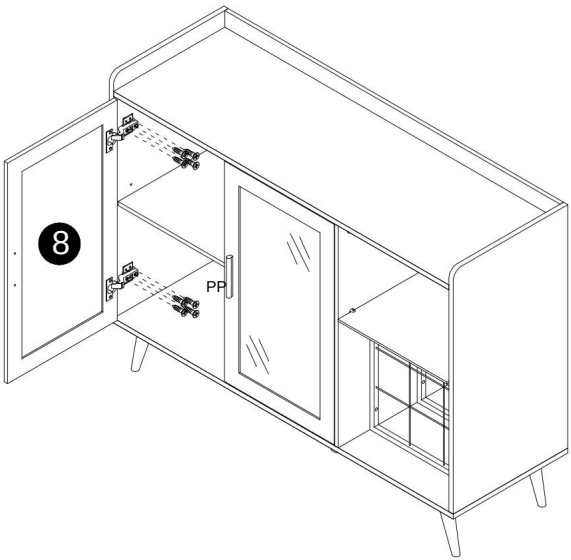


Machine Translated by Google

17

In x10


P x10

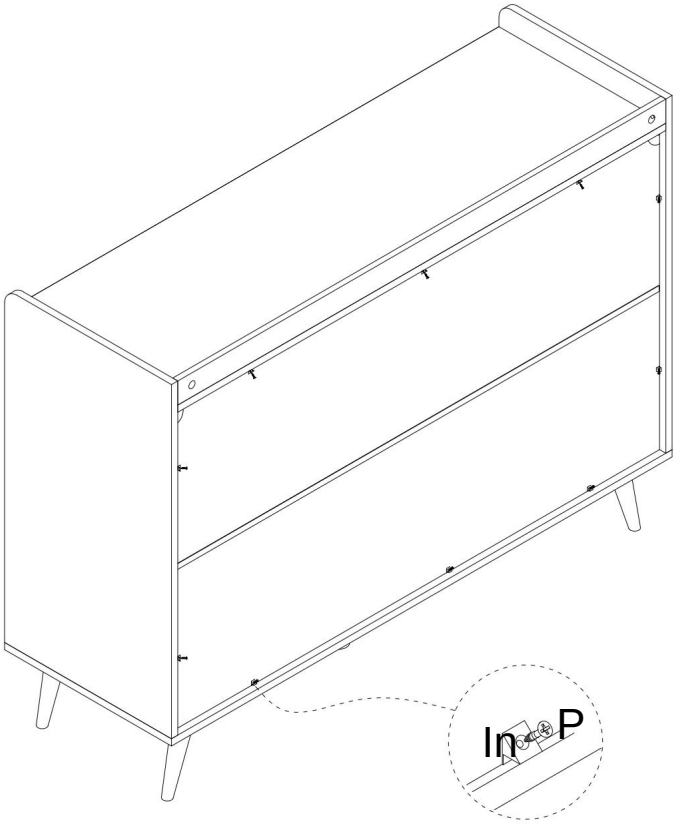

Machine Translated by Google


Methode zur Justierung von Türscharnieren

Methode 1:

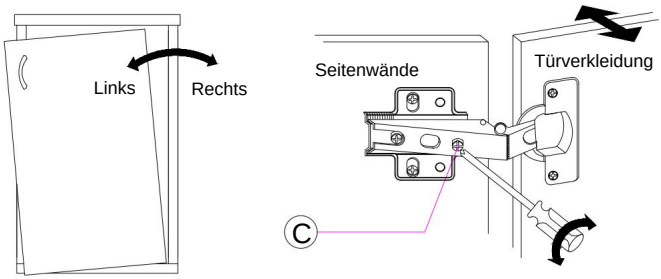

Tür nach links oder rechts bewegen: 1. Die C-Schraube mit einem Schraubendreher im Uhrzeigersinn drehen, um die Türverkleidung nach links zu bewegen. 2. Die C-Schraube mit einem Schraubendreher gegen den Uhrzeigersinn drehen, um die Türverkleidung nach rechts zu bewegen.


Methode 2:

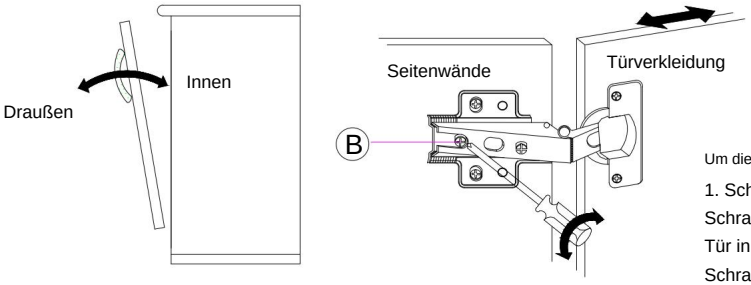

Um die Tür nach innen oder außen zu bewegen:

1. Schraube B mit einem Schraubendreher lösen (siehe Abbildung). 2. Tür in die richtige Position bringen. 3. Schrauben wieder festziehen.


Methode 3:

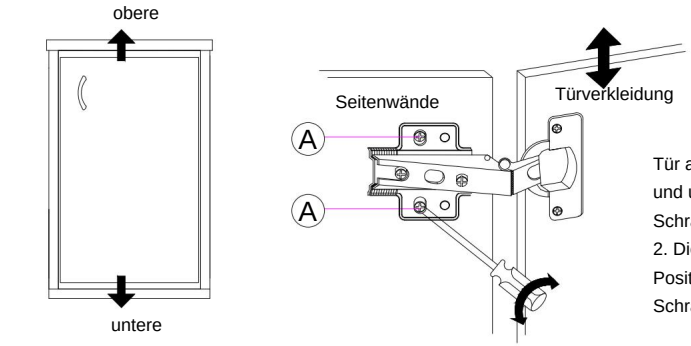



Tür auf und ab bewegen: 1. Die oberen und unteren Schrauben A mit einem Schraubendreher lösen (siehe Abbildung). 2. Die Tür in die richtige Position bringen und ausrichten. 3. Die Schrauben wieder festziehen.


Machine Translated by Google


Montieren Sie die Kippsicherungs-Hardware.

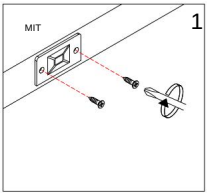

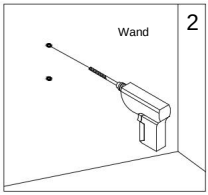


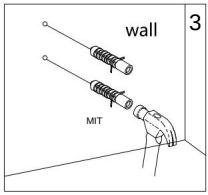

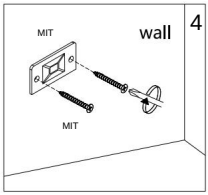







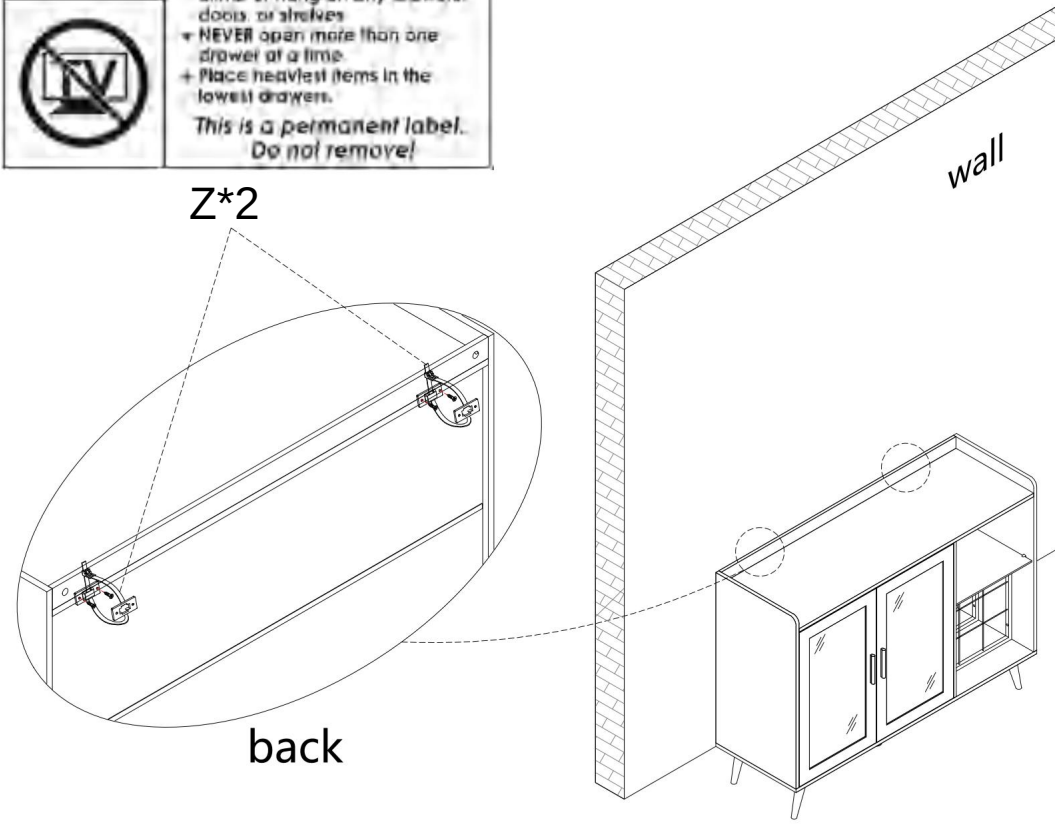

Machine Translated by Google

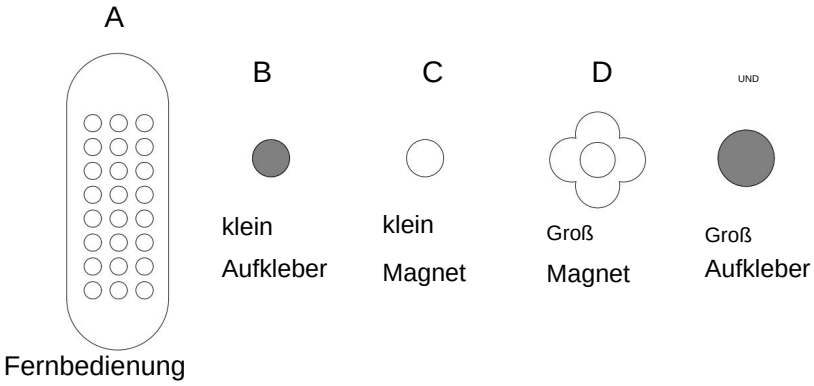

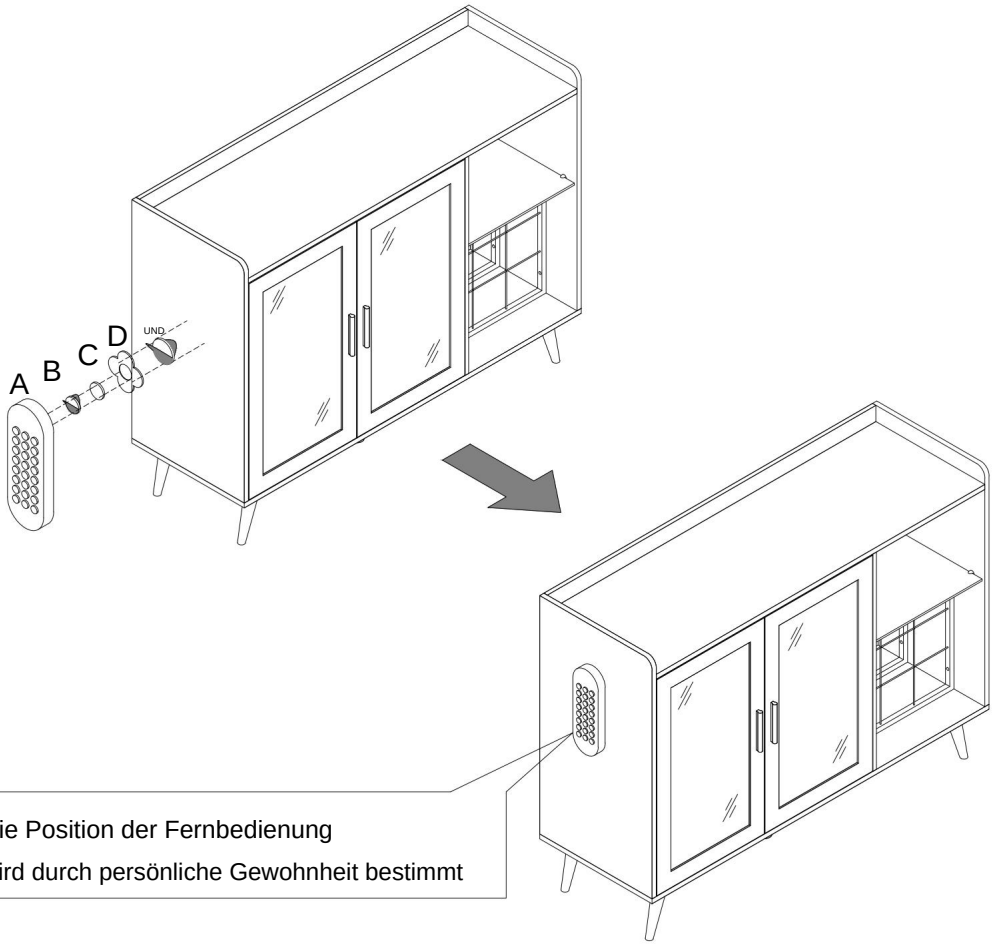

Machine Translated by Google



Machine Translated by Google

VEVOR

Upgrade · The Home Creator Way

Plate type wine cabinet


MODEL: DX0202-C250498S-01

Machine Translated by Google

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

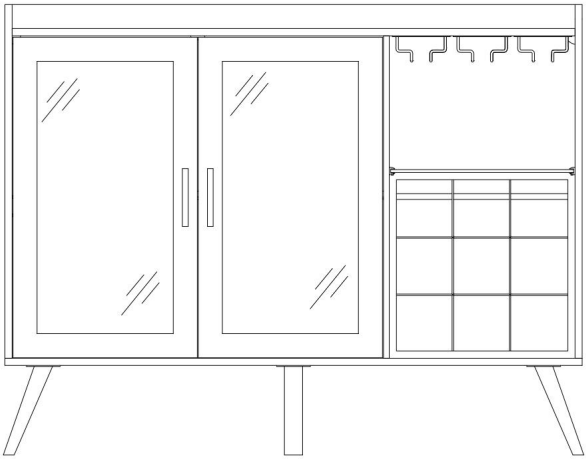

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Machine Translated by Google

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Machine Translated by Google

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

Machine Translated by Google

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Machine Translated by Google

Installazione di camme e perni


Avvitare il perno nel foro. Per impostare correttamente le camme, assicurarsi che la freccia sulla camma si apra verso il foro del perno che si sta bloccando. Bloccare la camma ruotando la testa della camma con un cacciavite fino a quando non è ben serrata. Non utilizzare un cacciavite elettrico per assemblare l'unità.

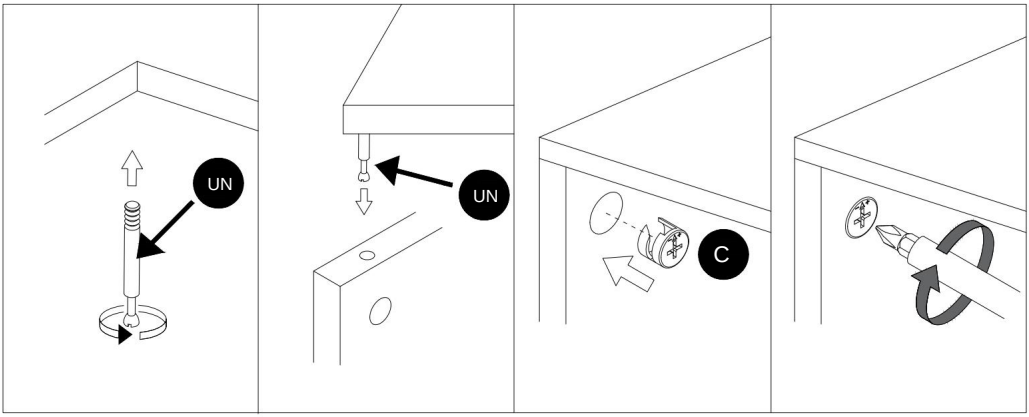

Leggere attentamente ogni passaggio prima di iniziare. È fondamentale che ogni passaggio delle istruzioni venga eseguito nell'ordine corretto. Se non si seguono questi passaggi in sequenza, si verificheranno difficoltà di montaggio.












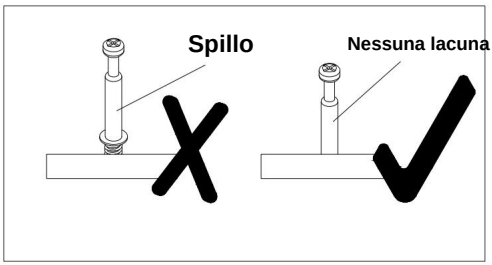


Machine Translated by Google

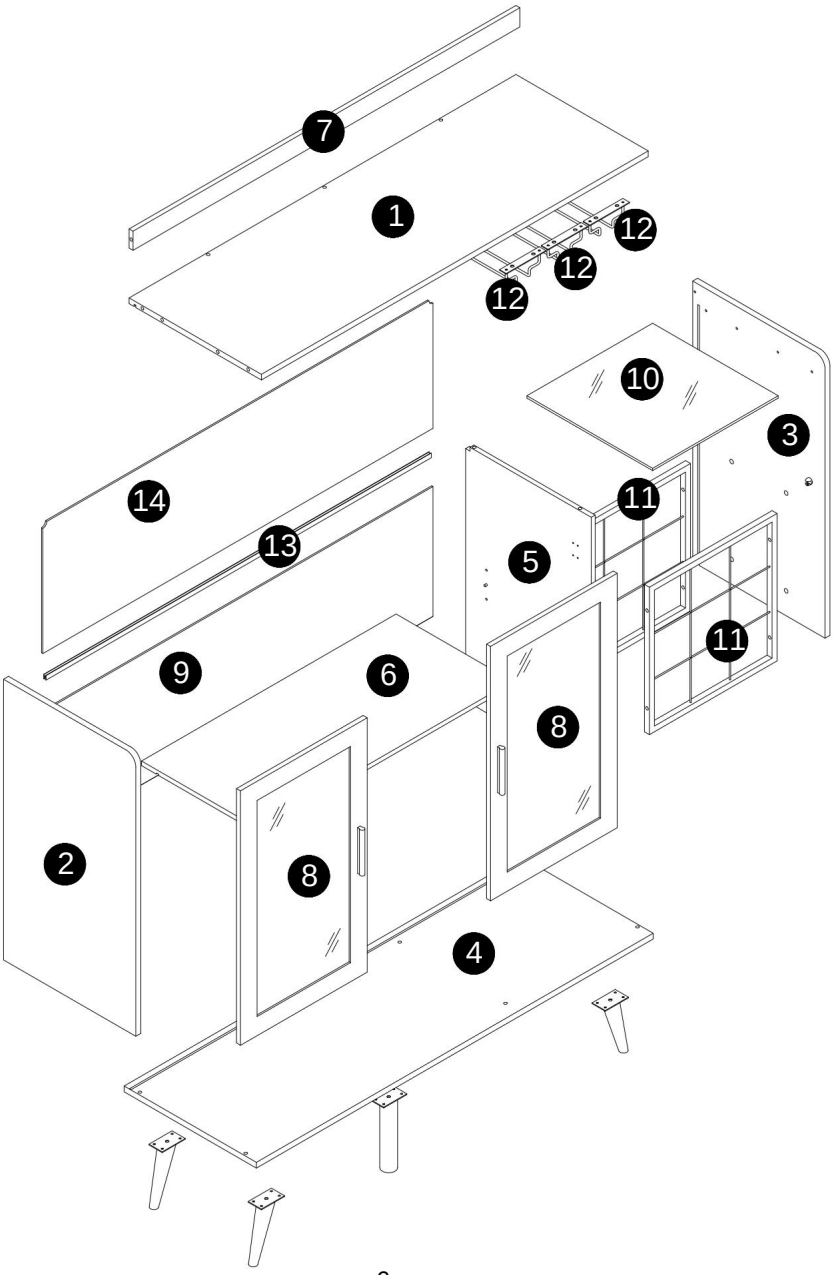


Machine Translated by Google

Elenco parti e hardware

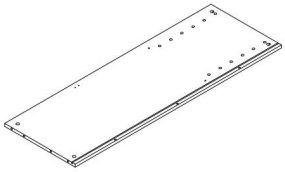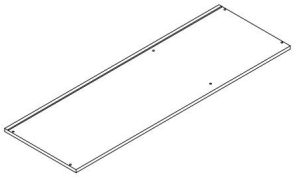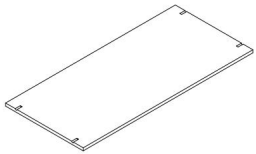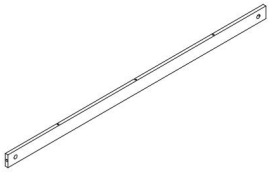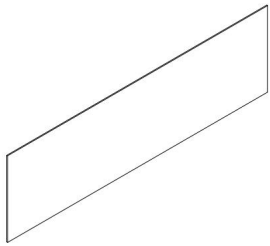
 1 1 pz	 2 1 pz	 3 1 pz
 4 1 pz	 5 1 pz	 6 1 pz
 7 1 pz	 8 2 pezzi	 9 1 pz
 10 1 pz	 11 2 pezzi	 12 3 pezzi

Machine Translated by Google

Elenco parti e hardware

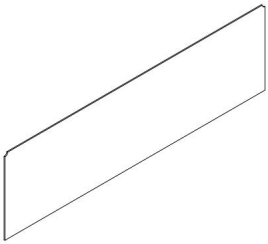
 13 1 pz	 14 1 pz	

Elenco parti e hardware

 Un 8 pezzi + 1	 M7X50MM B 9 pezzi+1	 C 8 pezzi+1	 M6X23MM E 8 pezzi+1
 DW K 4 pezzi+1	 Ø6X30MM L 4 pezzi+1	 M6X10MM N 12 pezzi+1	 O 4 pezzi+1
 ST3.5X12MM P 56 pezzi+5	 Q 4 pezzi	 R 2 pezzi	 S 4 pezzi+1
 M4X16MM T 4 pezzi+1	 E 1 pz	 In 10 pezzi + 1	 IN 1 pz
 X 4 pezzi + 1	 Y 1 pz	 2 pezzi	 1 pz
			

Machine Translated by Google

1

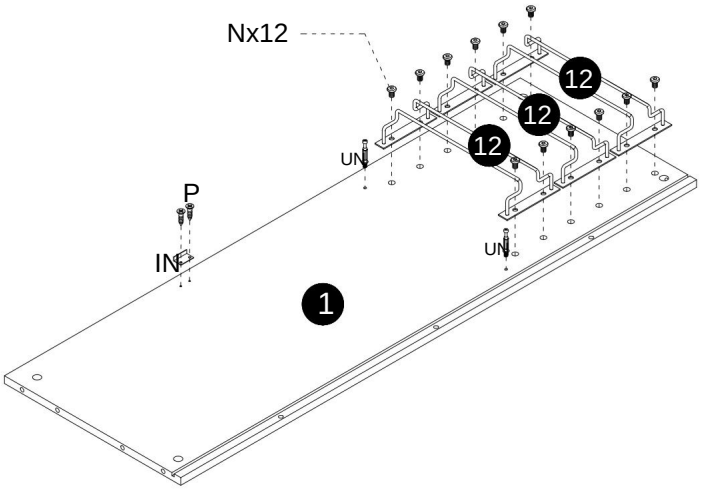



x2



x1




x2




x1

2



x3

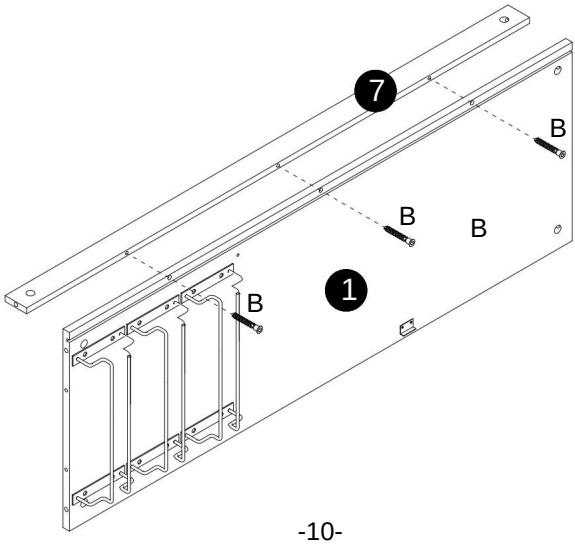


Machine Translated by Google


3



x6

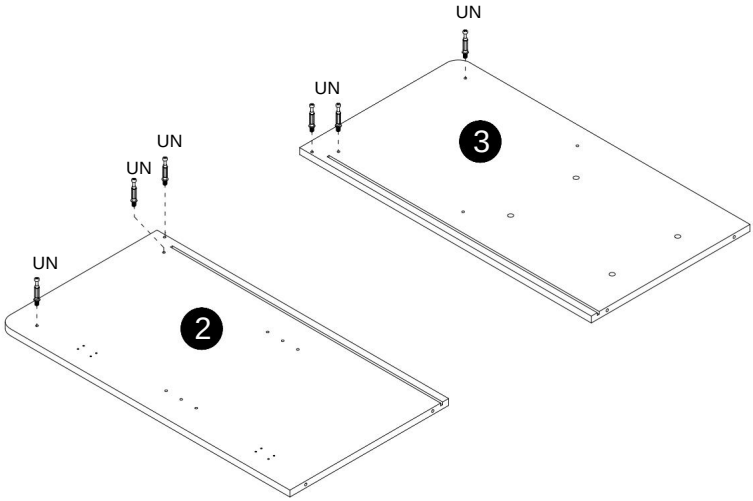

4






x4





x4

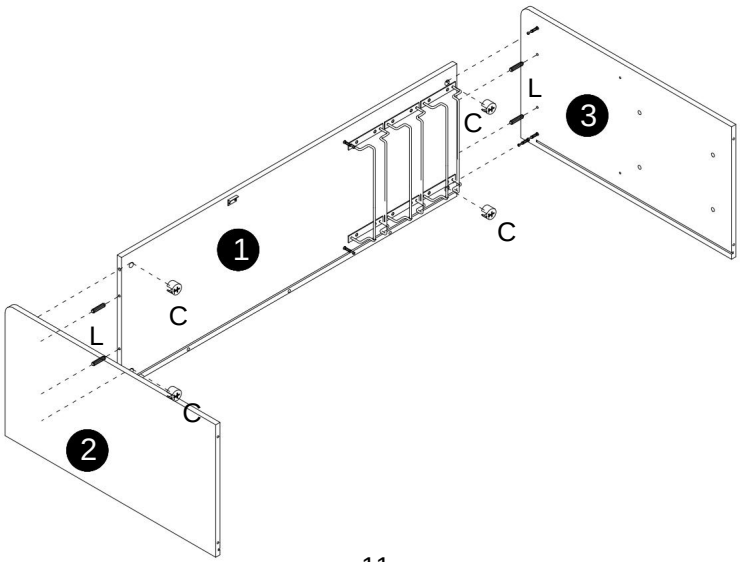


Machine Translated by Google

5







x2

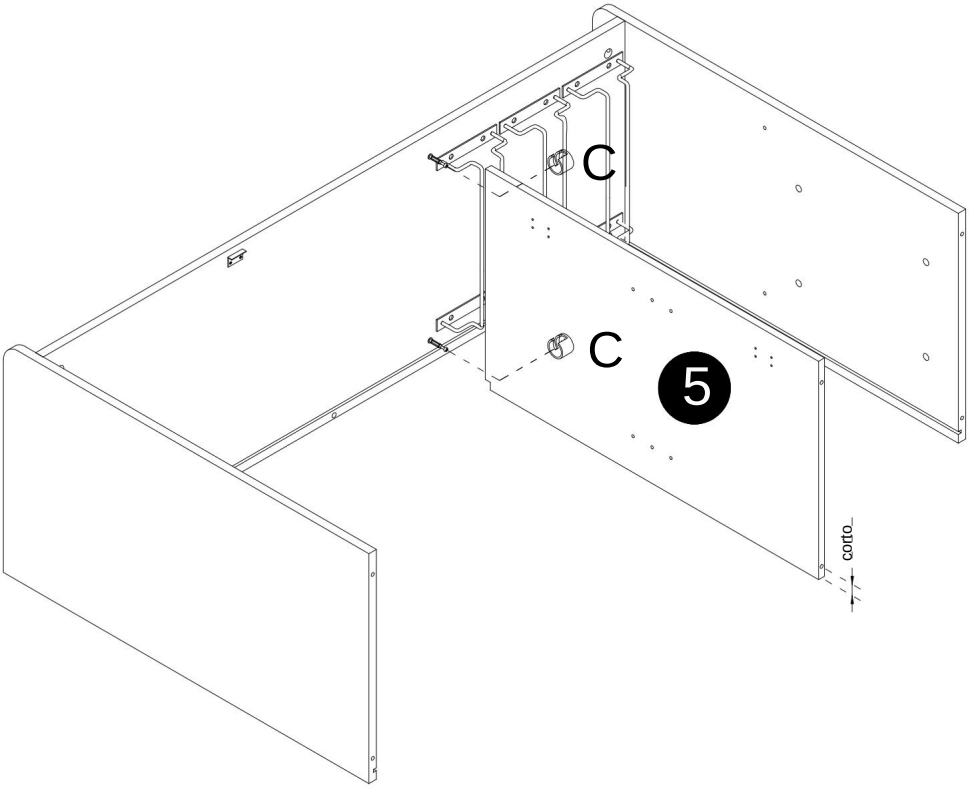


6

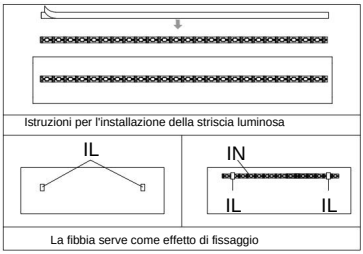




La striscia luminosa è installata sotto la tavola a strati

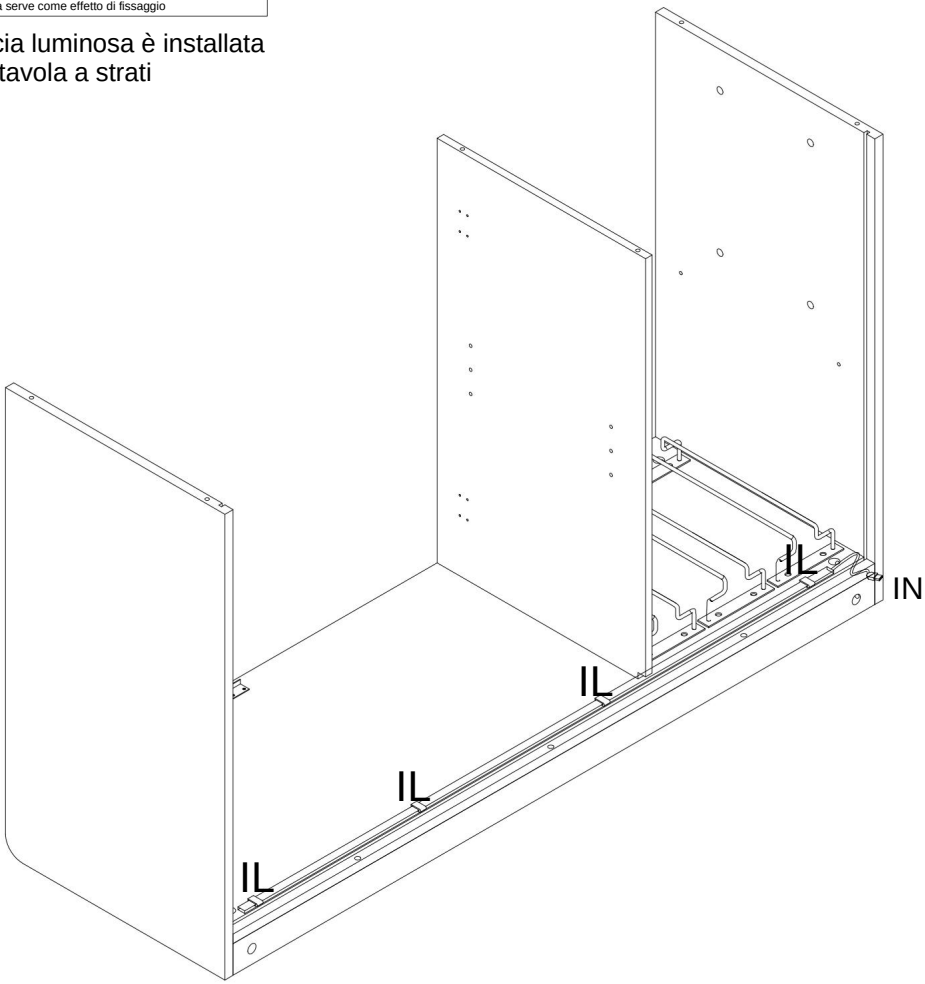


Machine Translated by Google

7






x2

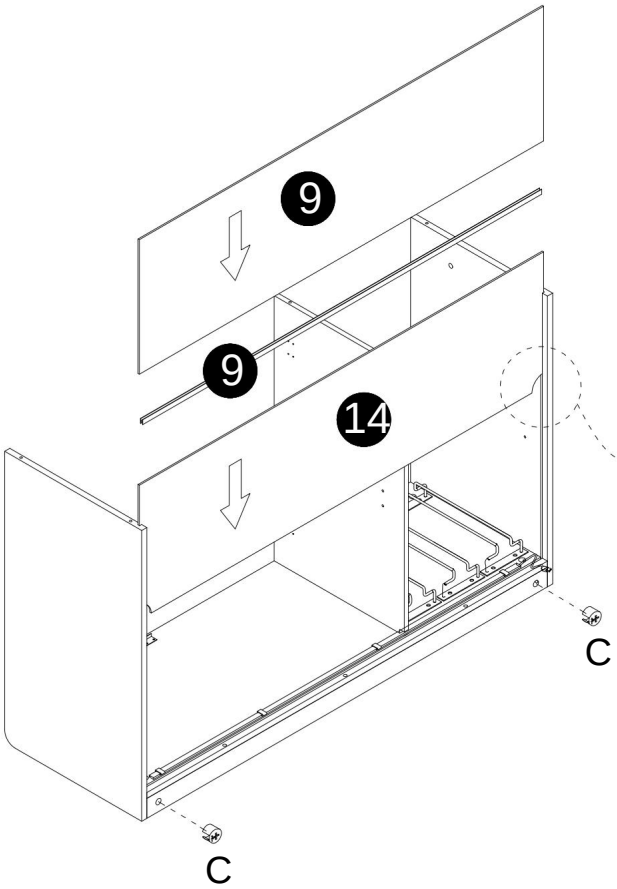

Prestare attenzione alla direzione dei fori

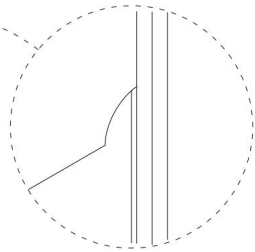


Machine Translated by Google

8

E


x8


Es.8

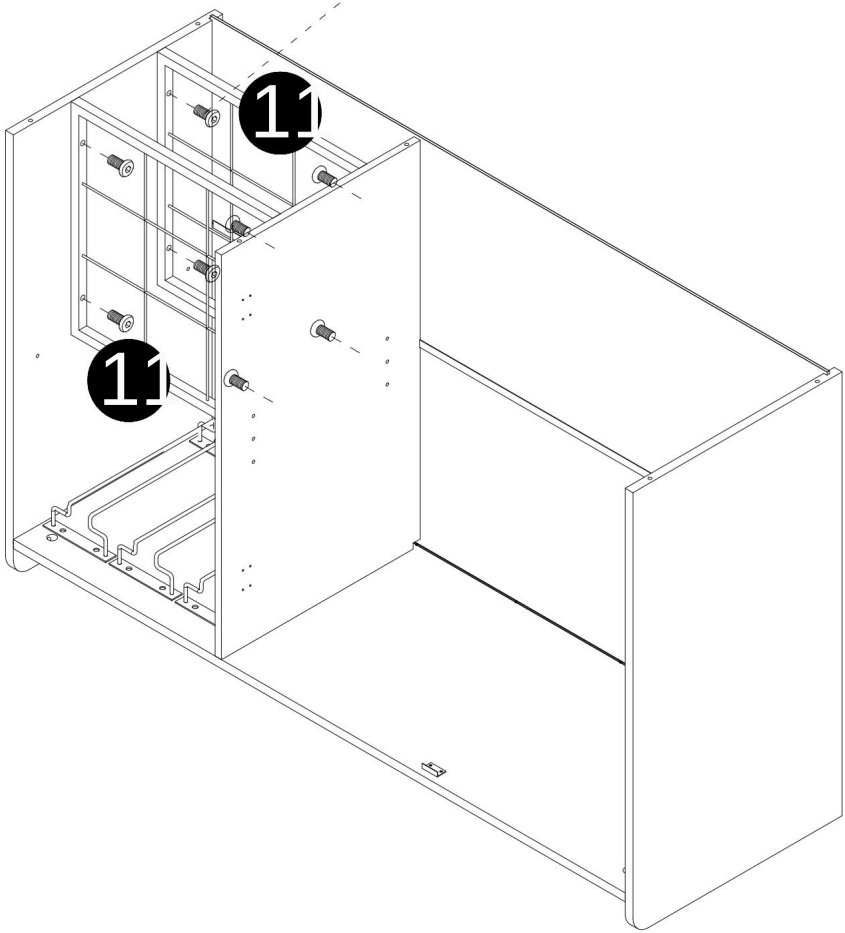


Machine Translated by Google


9

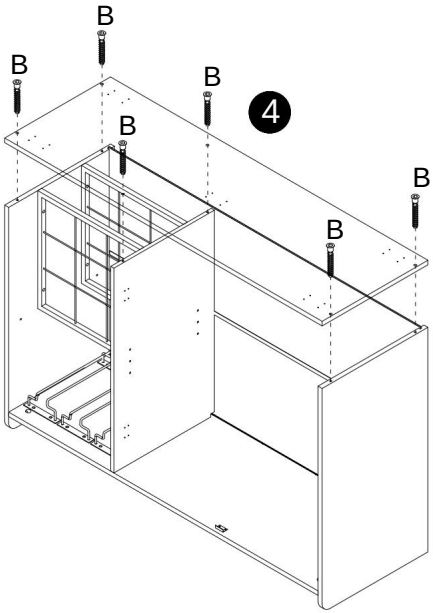




10

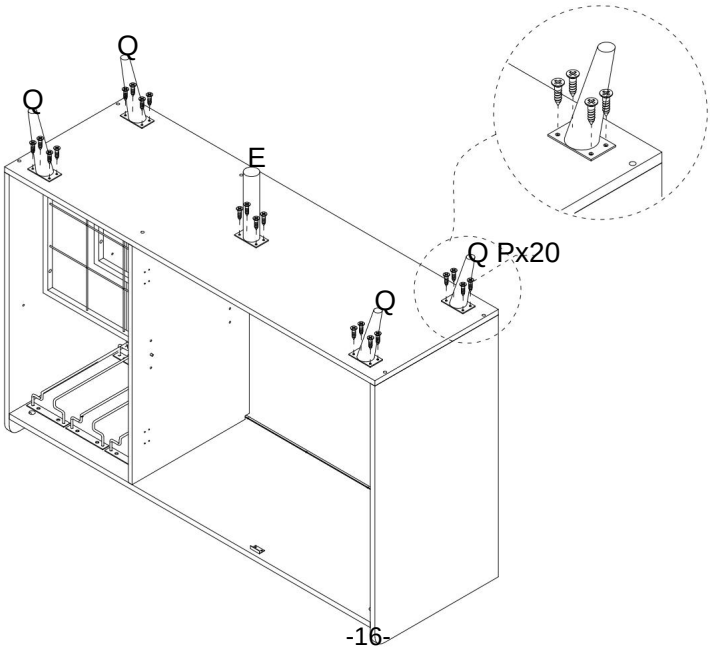

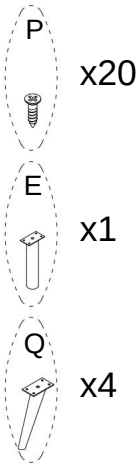


Machine Translated by Google

11

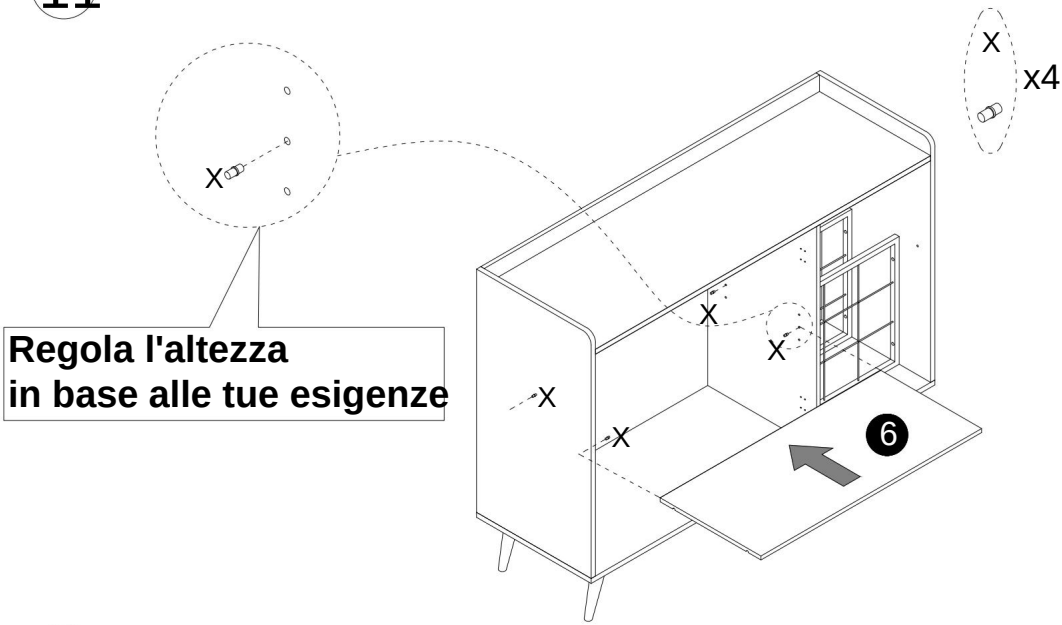


12

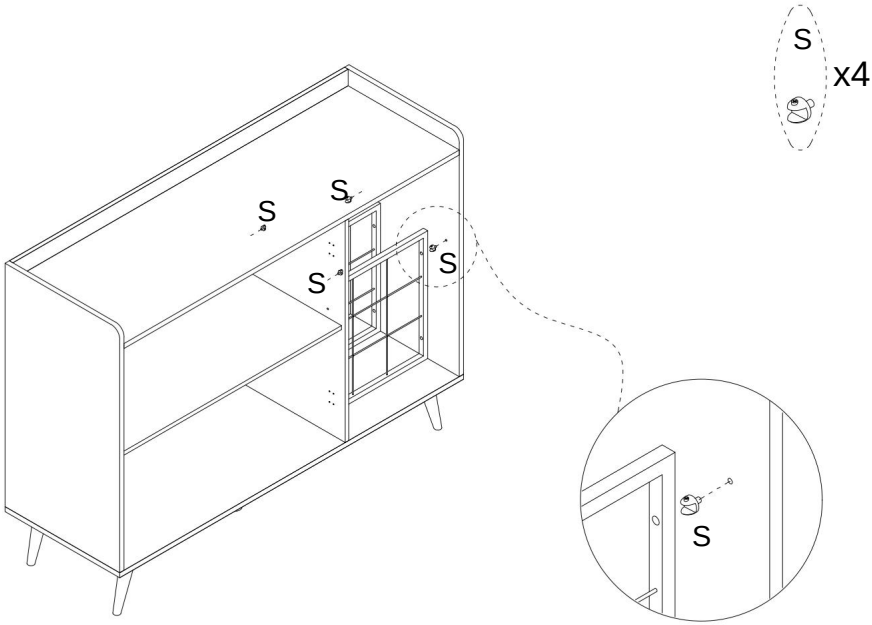


Machine Translated by Google


13

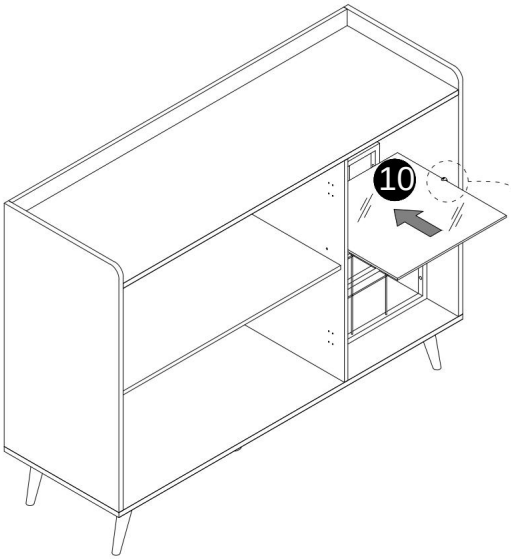


Le viti devono essere serrate.

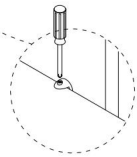

14

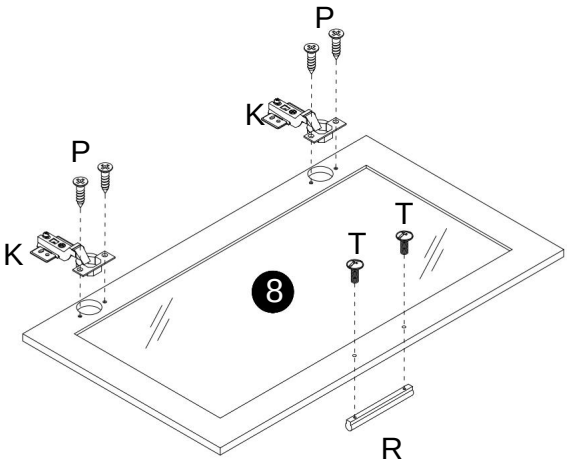



x2




Machine Translated by Google


15



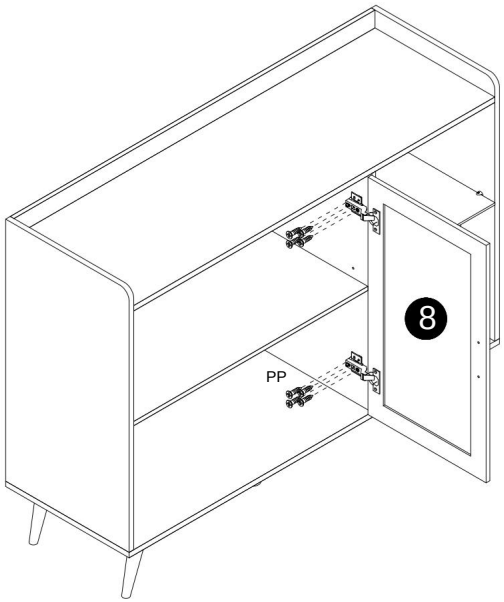

16



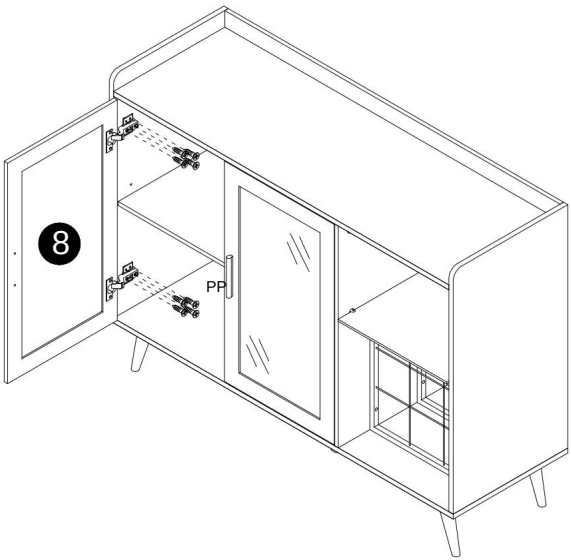


Machine Translated by Google

17

In x10


P x10

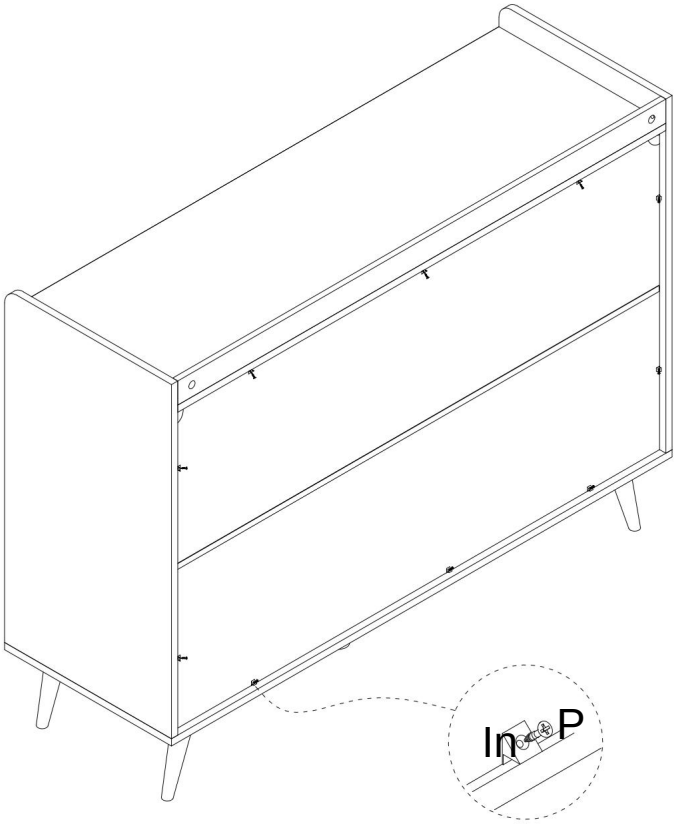


Machine Translated by Google

Metodo di regolazione della cerniera della porta


Metodo 1:

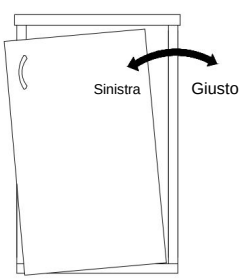


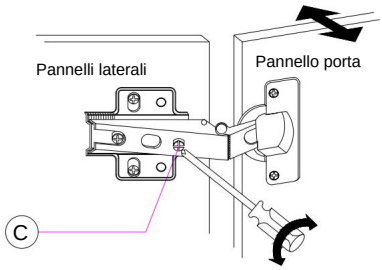

Spostare la porta a sinistra o a destra: 1. Ruotare la vite C con un cacciavite in senso orario per spostare il pannello della porta a sinistra 2. Ruotare la vite C in senso antiorario con un cacciavite per regolare lo spostamento del pannello della porta a destra

Metodo 2:

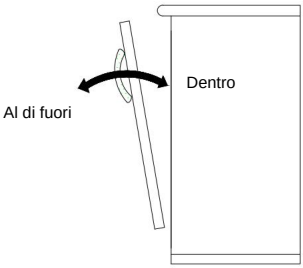


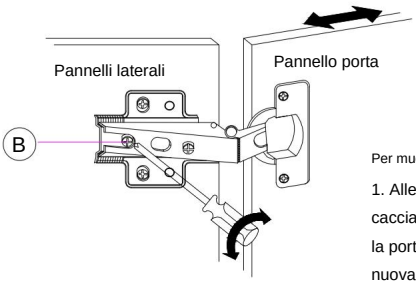


Per muovere la porta verso l'interno o verso l'esterno:

1. Allentare la vite B utilizzando un cacciavite, come mostrato nella Figura 2. Spostare la porta nella posizione corretta 3. Stringere nuovamente le viti

Metodo 3:

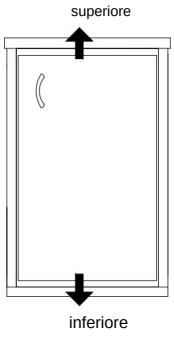


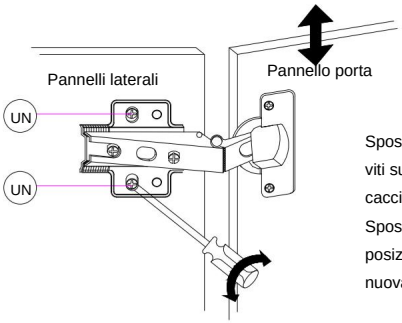



Spostare la porta su e giù: 1. Allentare le viti superiore e inferiore A utilizzando un cacciavite, come mostrato nella Figura 2. Spostare la porta nella posizione corretta e allinearla 3. Stringere nuovamente le viti


Machine Translated by Google


Installare l'hardware di sicurezza antiribaltamento

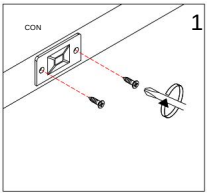

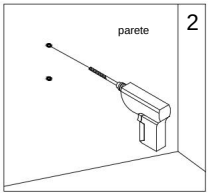


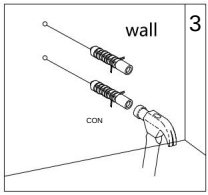

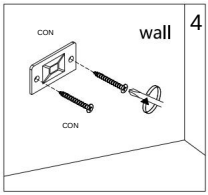






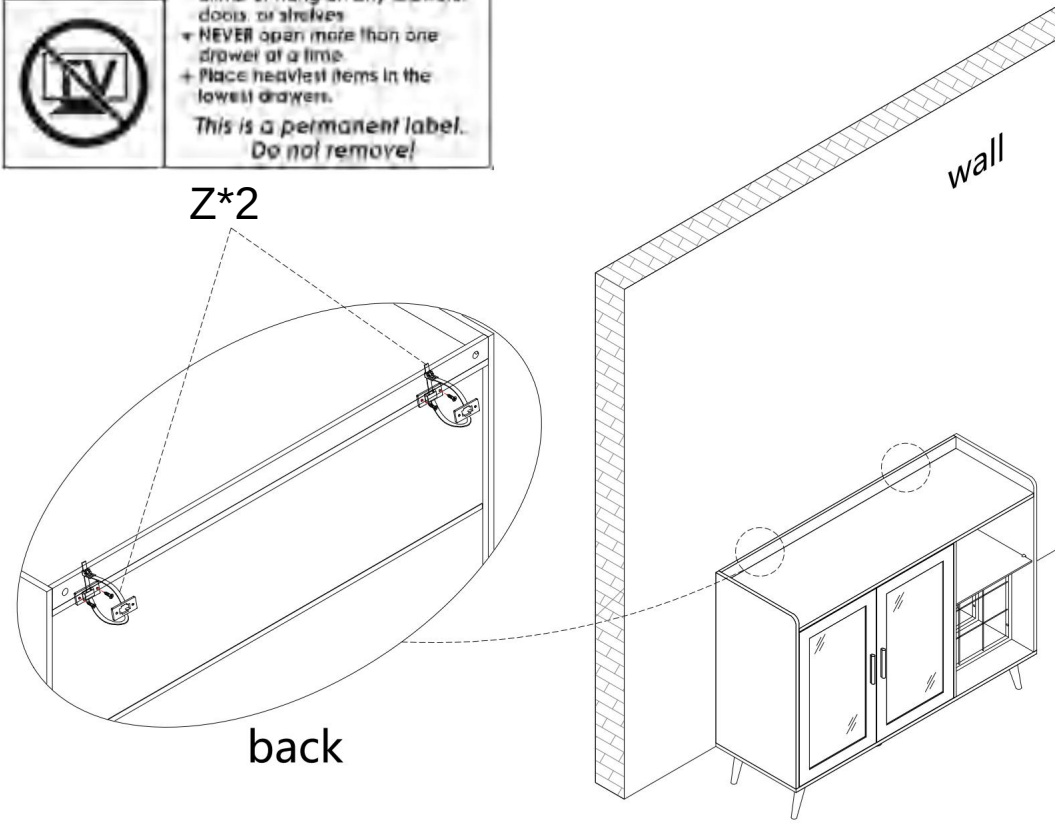

Machine Translated by Google



Telecomando



piccolo
Adesivo




piccolo
Magnete




Grande
Magnete



Grande
Adesivo

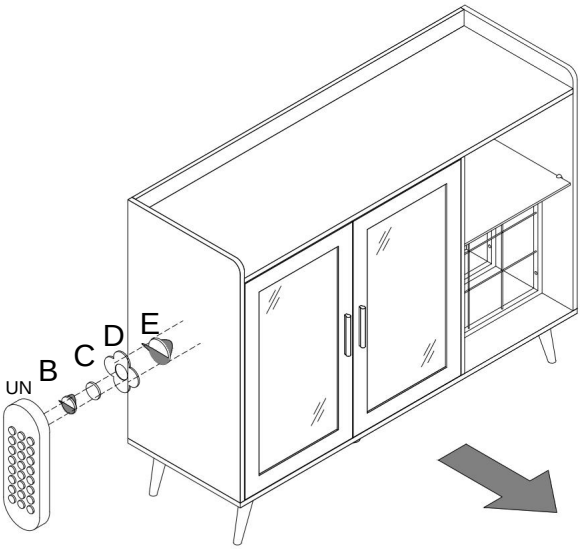

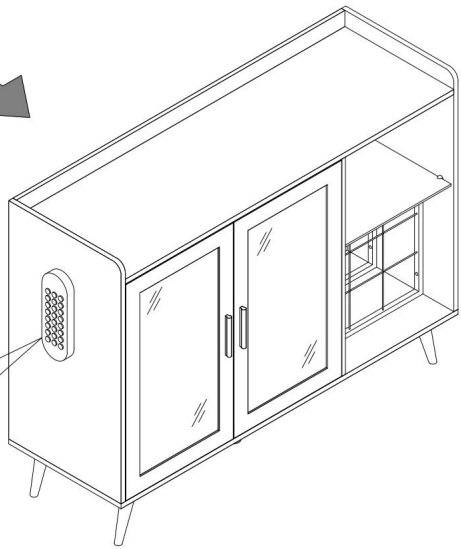

La posizione del telecomando
è determinato dall'abitudine personale

Machine Translated by Google



Machine Translated by Google

VEVOR

Upgrade · The Home Creator Way

Plate type wine cabinet


MODEL: DX0202-C250498S-01

Machine Translated by Google

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

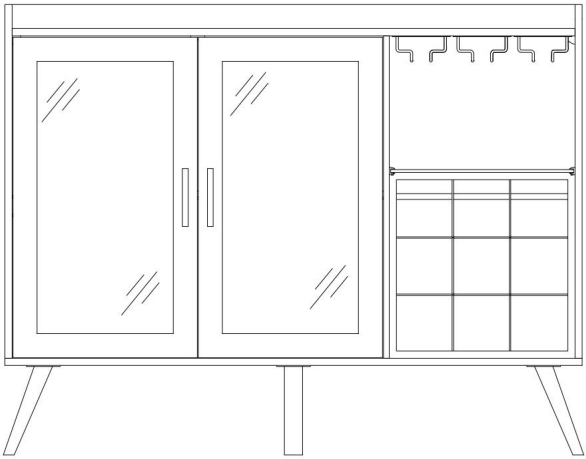

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Machine Translated by Google

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Machine Translated by Google

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

Machine Translated by Google

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Machine Translated by Google

Instalación de levas y pasadores


Enrosque el pasador en el orificio. Para ajustar las levas correctamente, asegúrese de que la flecha de la leva esté orientada hacia el orificio del pasador que bloquea. Bloquee la leva girando la cabeza de la leva con un destornillador hasta que esté apretada. No utilice un destornillador eléctrico para ensamblar la unidad.

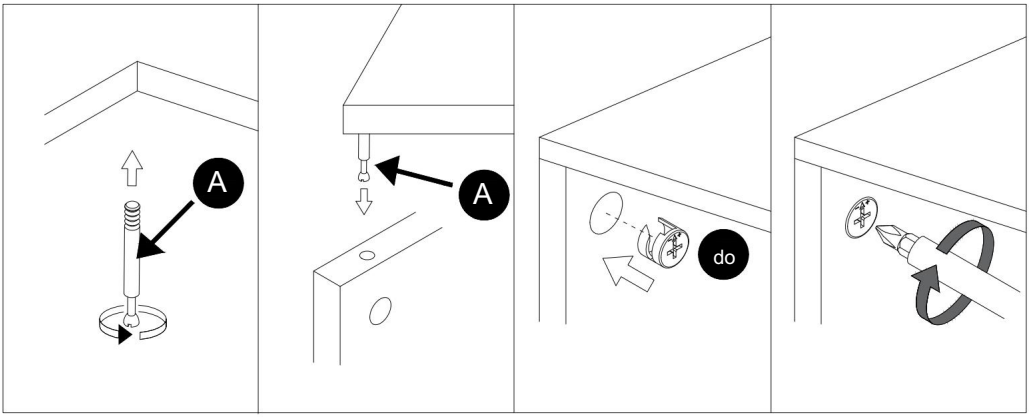

Lea cada paso detenidamente antes de comenzar. Es fundamental realizar cada paso de las instrucciones en el orden correcto. Si no se siguen en secuencia, podrían surgir dificultades de montaje.












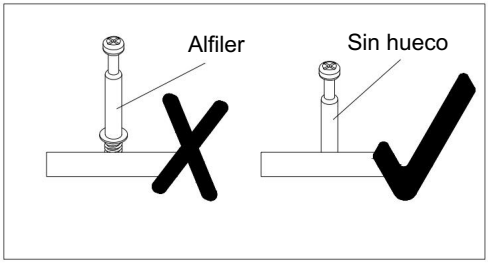


Machine Translated by Google

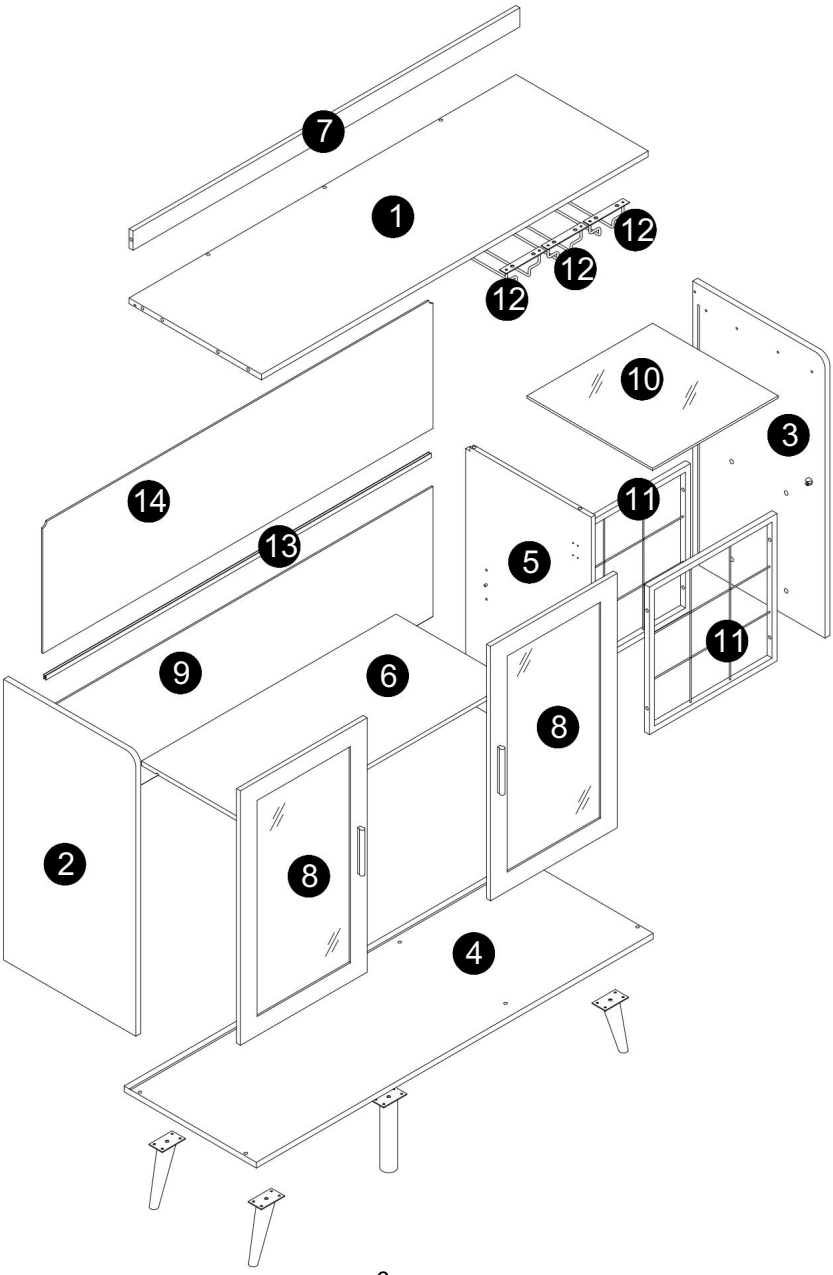


Machine Translated by Google

Lista de piezas y hardware

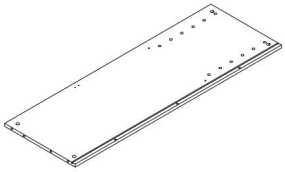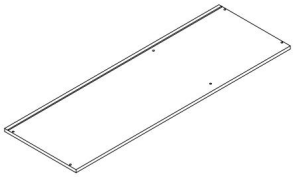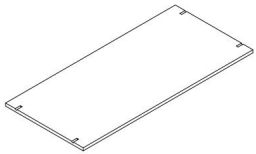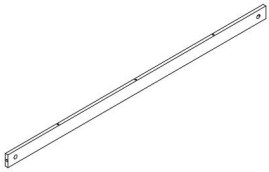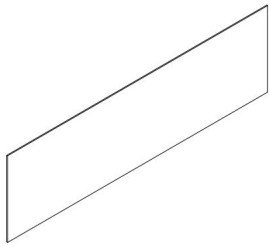
 1 pieza	 2 pieza	 3 pieza
 4 pieza	 5 pieza	 6 1 pieza
 7 pieza	 8 2 piezas	 9 pieza
 10 1 pieza	 11 2 piezas	 12 3 piezas

Machine Translated by Google

Lista de piezas y hardware

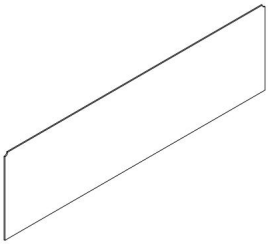
 13 1 pieza	 14 1 pieza	


Lista de piezas y hardware

 Un 8 piezas + 1	 M7X50MM B 9 piezas + 1	 C 8 piezas + 1	 M6X23MM E 8 piezas + 1
 DW K 4 piezas + 1	 Ø6X30MM L 4pcs+1	 M6X10MM N 12 piezas + 1	 O 4 piezas + 1
 ST3.5X12MM P 56 piezas + 5	 Q 4 piezas	 R 2 piezas	 S 4 piezas + 1
 M4X16MM T 4 piezas + 1	 Y 1pc	 En 10 piezas + 1	 EN 1 pieza
 X 4 piezas + 1	 Y 1 pieza	 2 piezas	 1 pieza
			

Machine Translated by Google

1

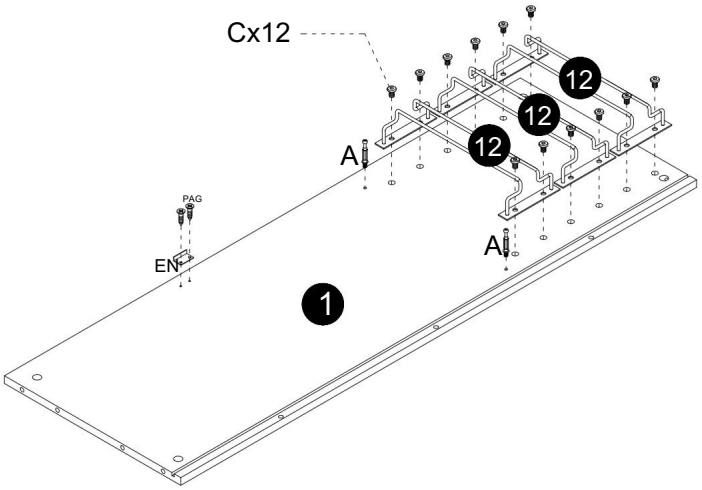




x2



x1




x2




x1

2



x3

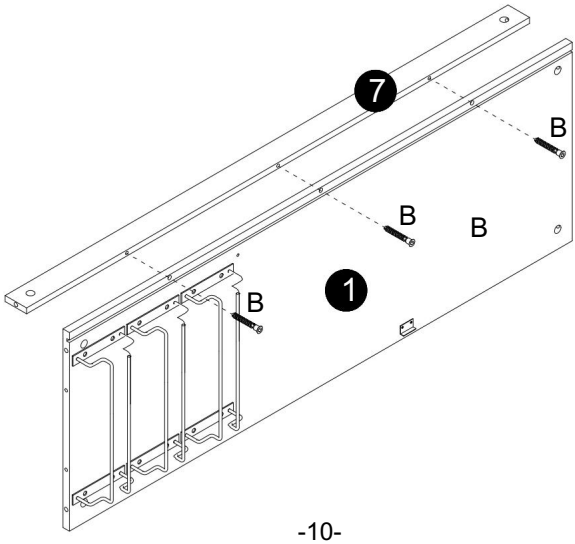


Machine Translated by Google


3



x6

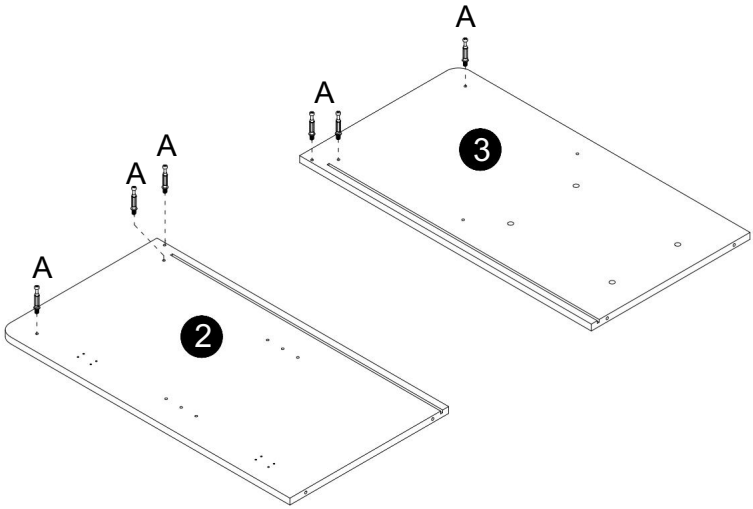

4






x4




x4

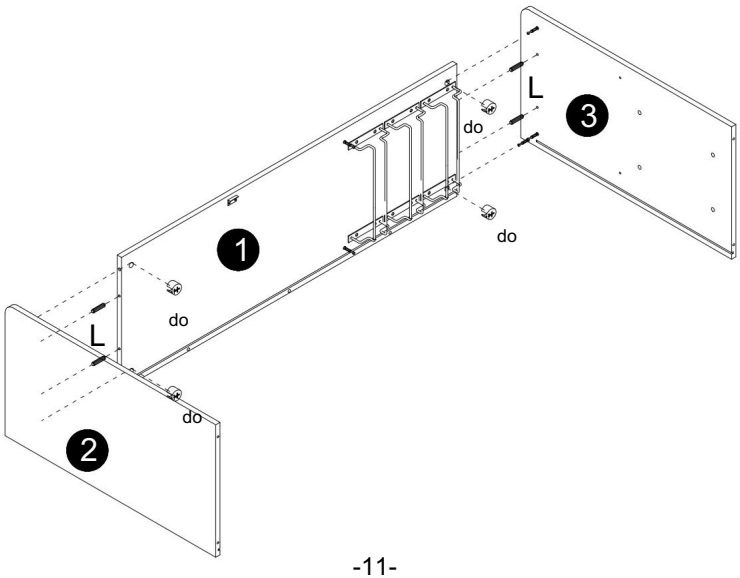


Machine Translated by Google

5







x2

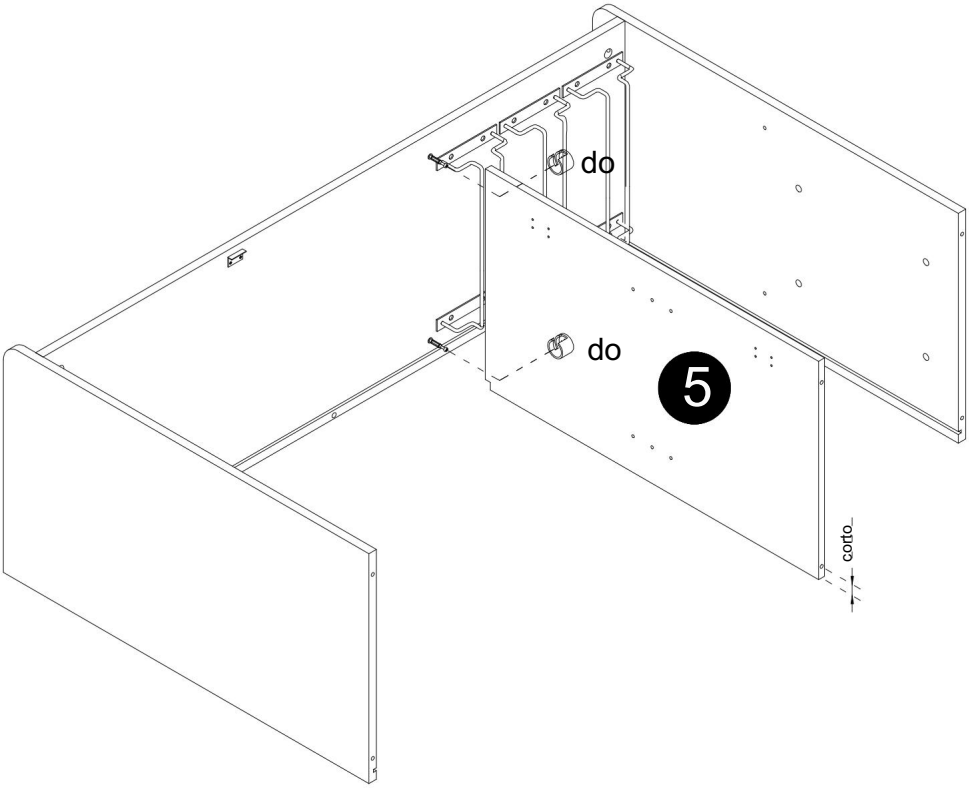


6

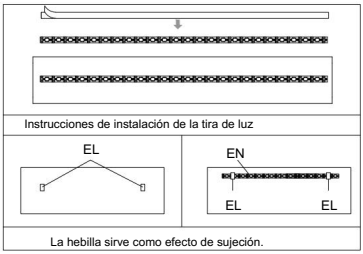




La tira de luz se instala debajo del tablero de capas.

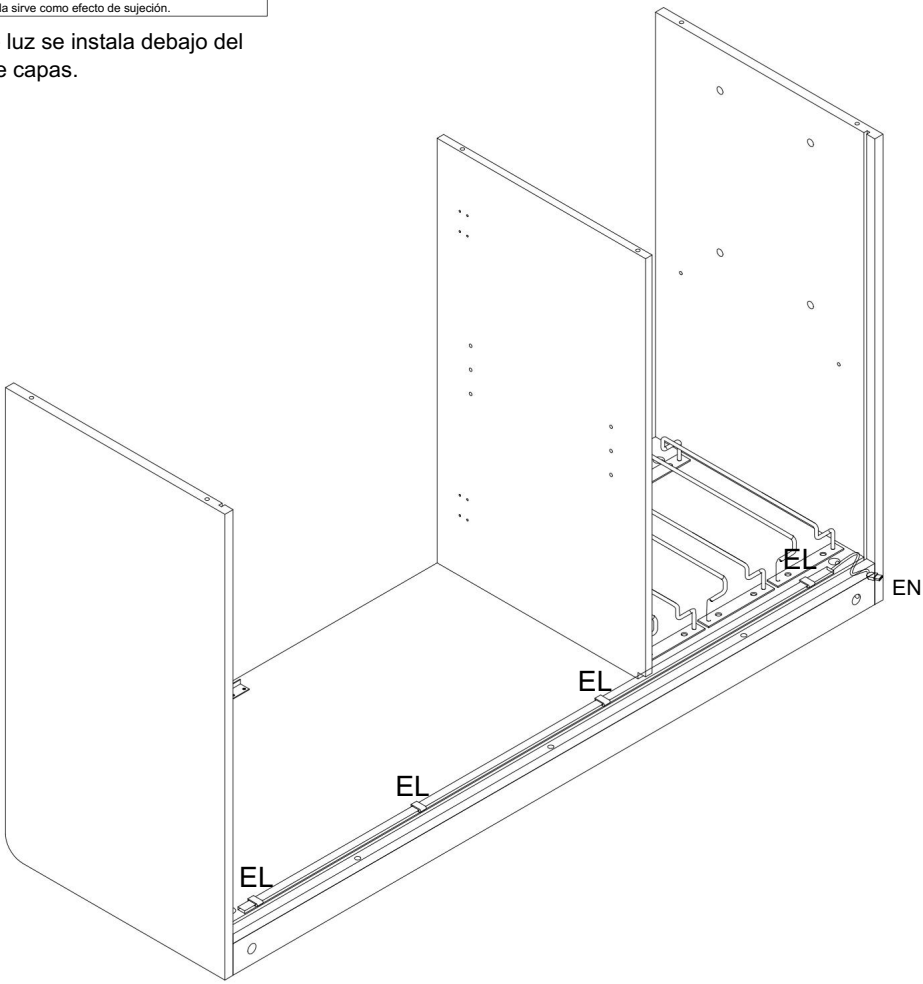


Machine Translated by Google

7






x2

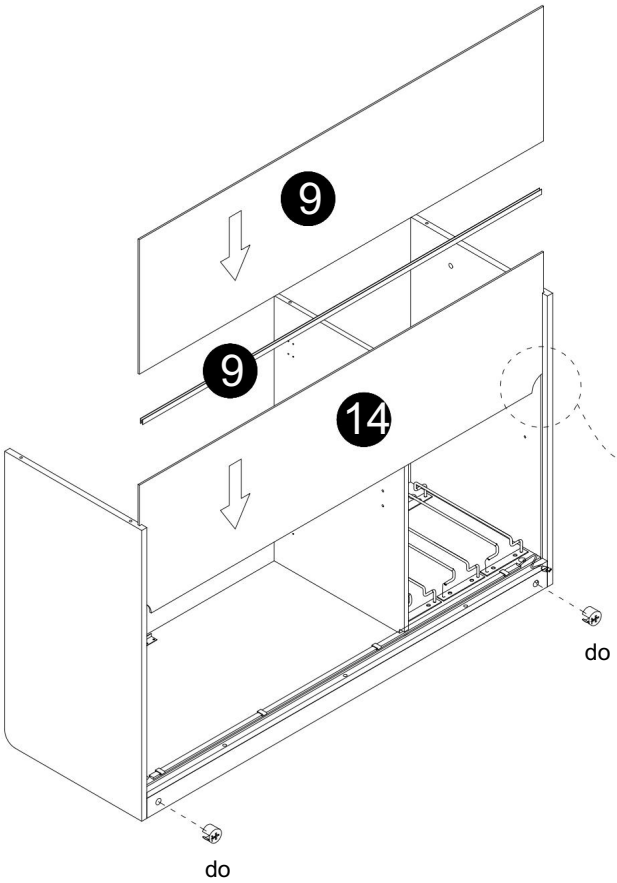

Preste atención a la dirección de los agujeros.

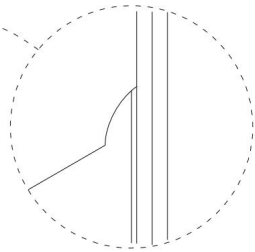


Machine Translated by Google

8

Y


x8

Ejemplo 8

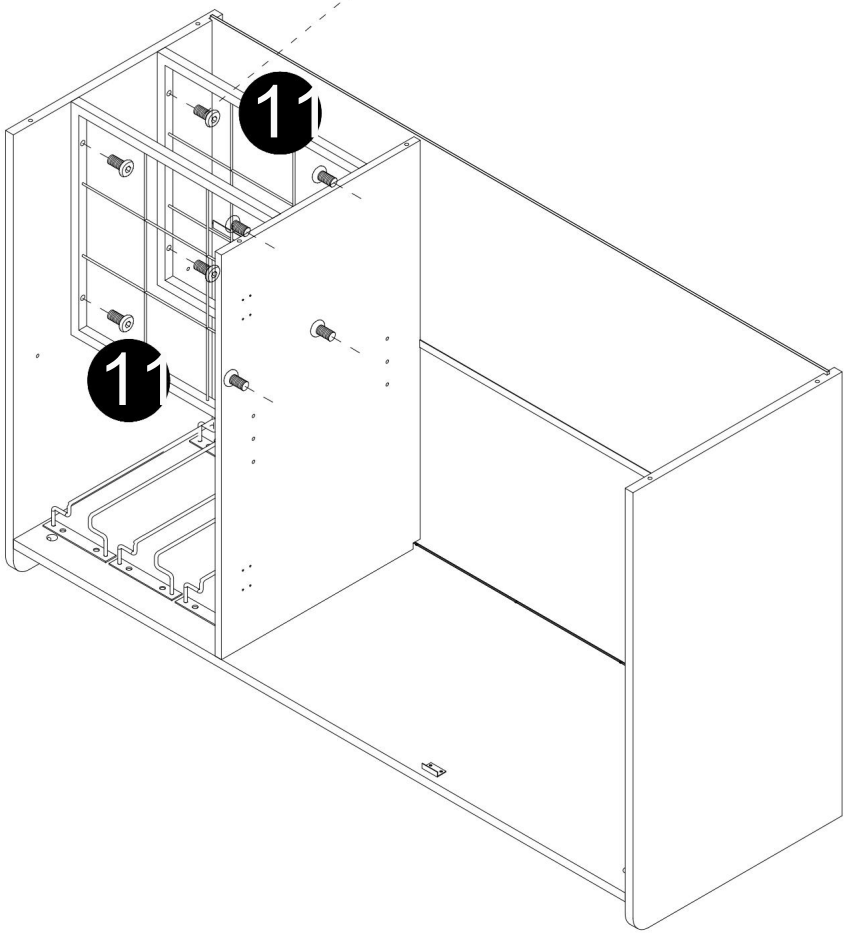

Machine Translated by Google


9

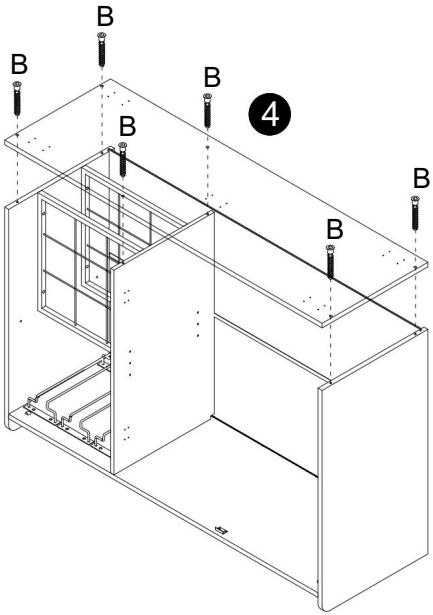



x6

10

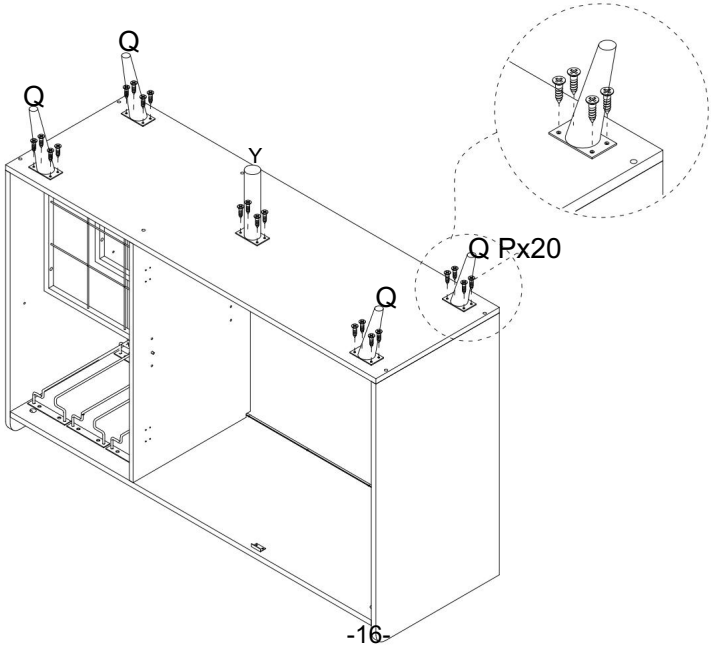



x20



x1




x4

Machine Translated by Google


11




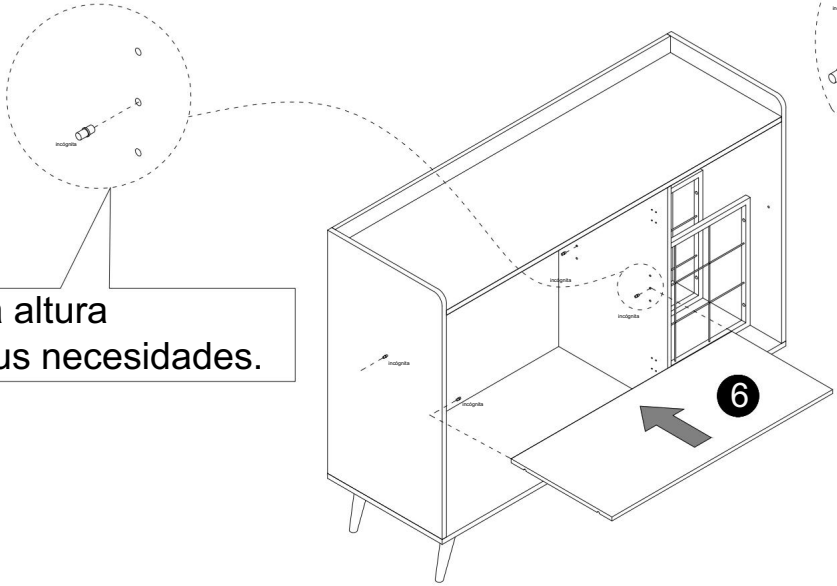

Ajuste la altura
según sus necesidades.


12



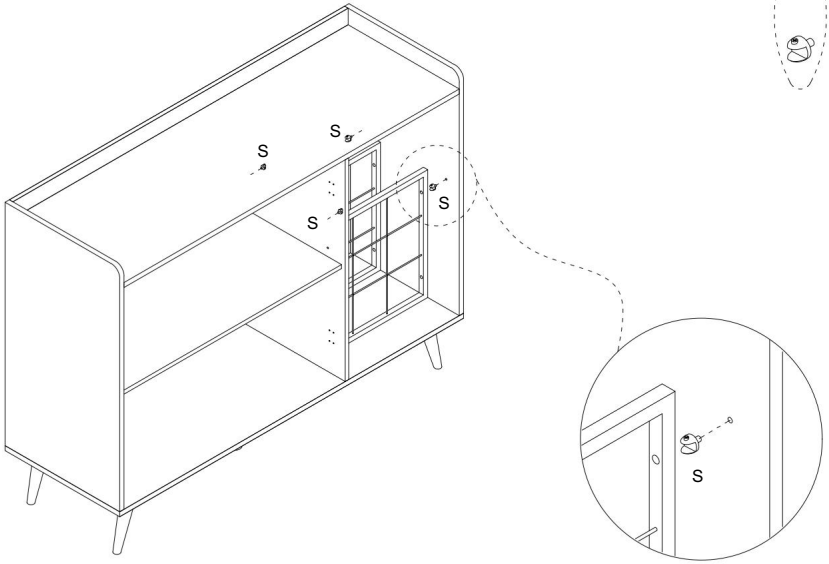


Machine Translated by Google


13

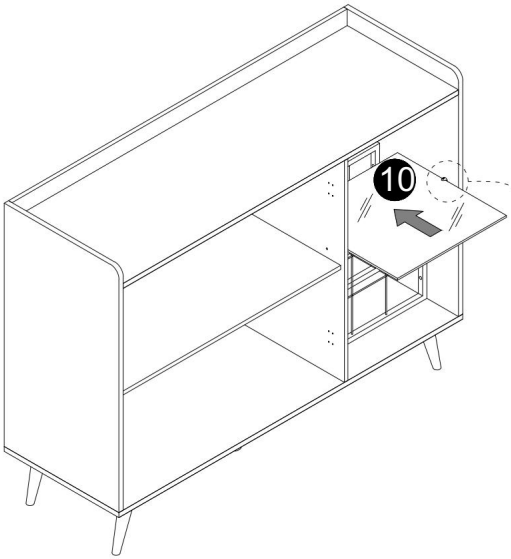


Es necesario apretar los tornillos.

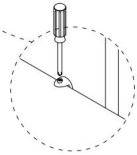

14

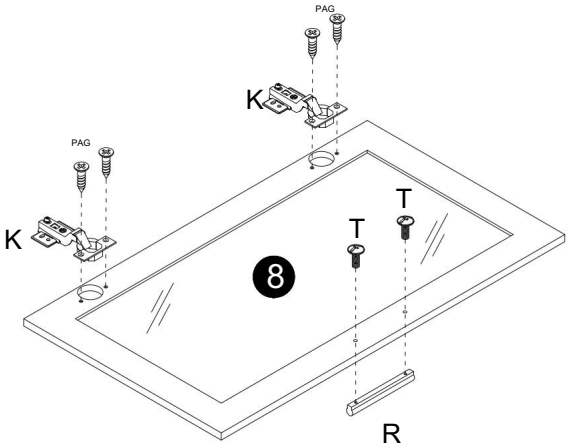

x2




Machine Translated by Google

15




x8

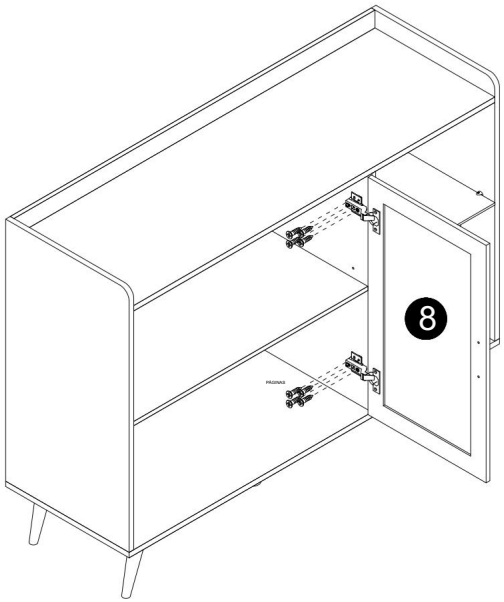

16





x8

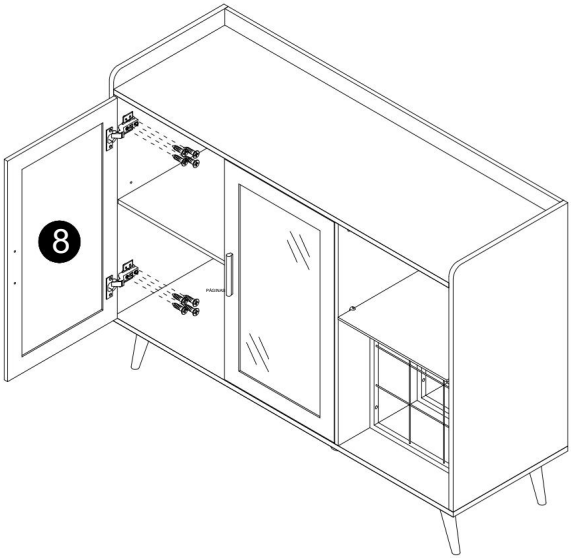

Machine Translated by Google

17

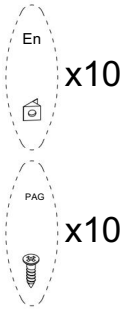


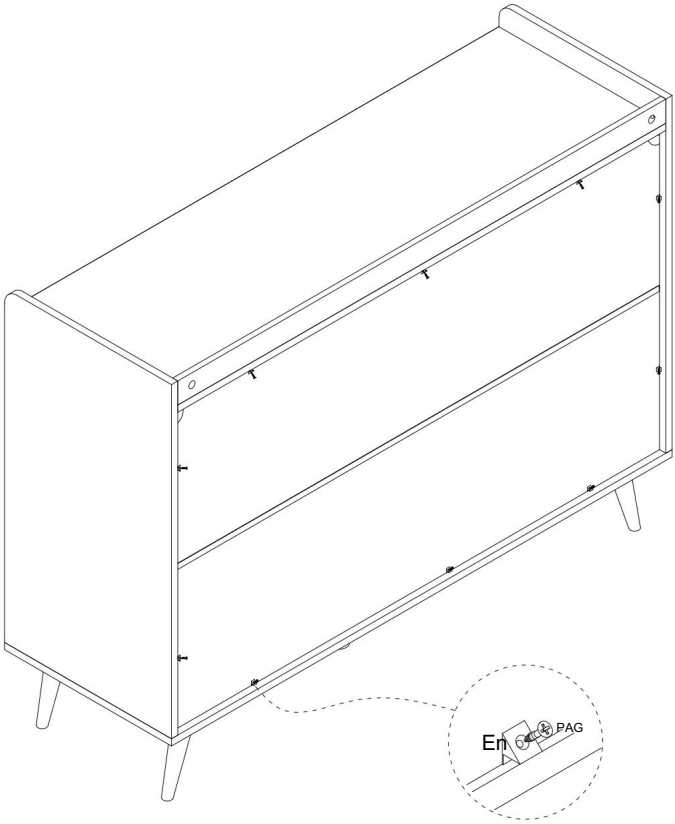


Machine Translated by Google

Método de ajuste de las bisagras de la puerta


Método 1:

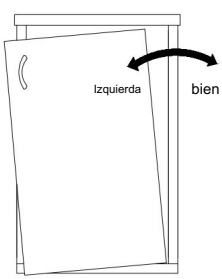


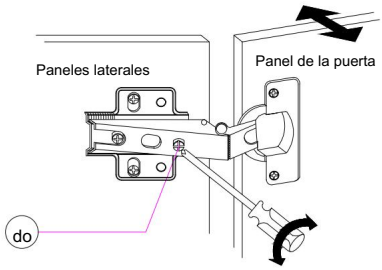

Mueva la puerta hacia la izquierda o la derecha: 1. Gire el tornillo C con un destornillador en el sentido de las agujas del reloj para mover el panel de la puerta hacia la izquierda. 2. Gire el tornillo C en el sentido contrario a las agujas del reloj con un destornillador para ajustar el panel de la puerta para que se mueva hacia la derecha.

Método 2:

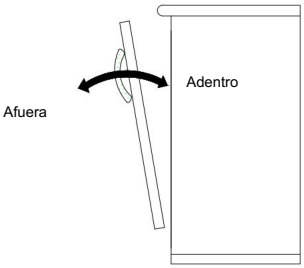


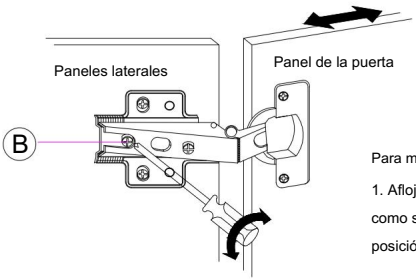


Para mover la puerta hacia adentro o hacia afuera:

1. Afloje el tornillo B con un destornillador, como se muestra en la Figura 2. Mueva la puerta a la posición adecuada. 3. Apriete los tornillos nuevamente.

Método 3:

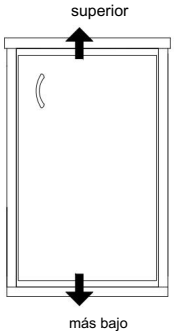


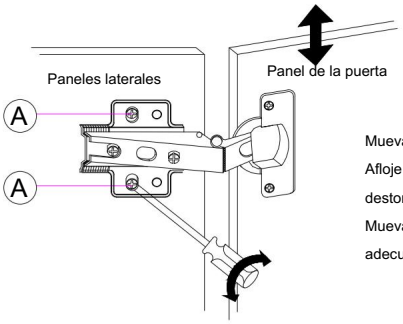



Mueva la puerta hacia arriba y hacia abajo: 1. Afloje los tornillos superior e inferior A con un destornillador, como se muestra en la Figura 2. Mueva la puerta a la posición adecuada y alinéela 3. Apriete los tornillos nuevamente


Machine Translated by Google


Instalar el hardware de retención antivuelco

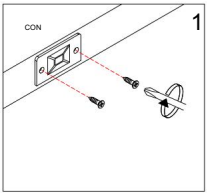

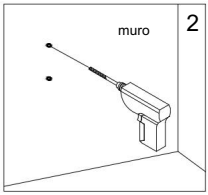


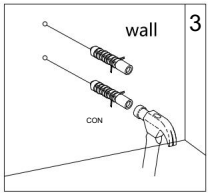

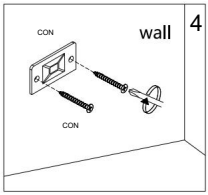







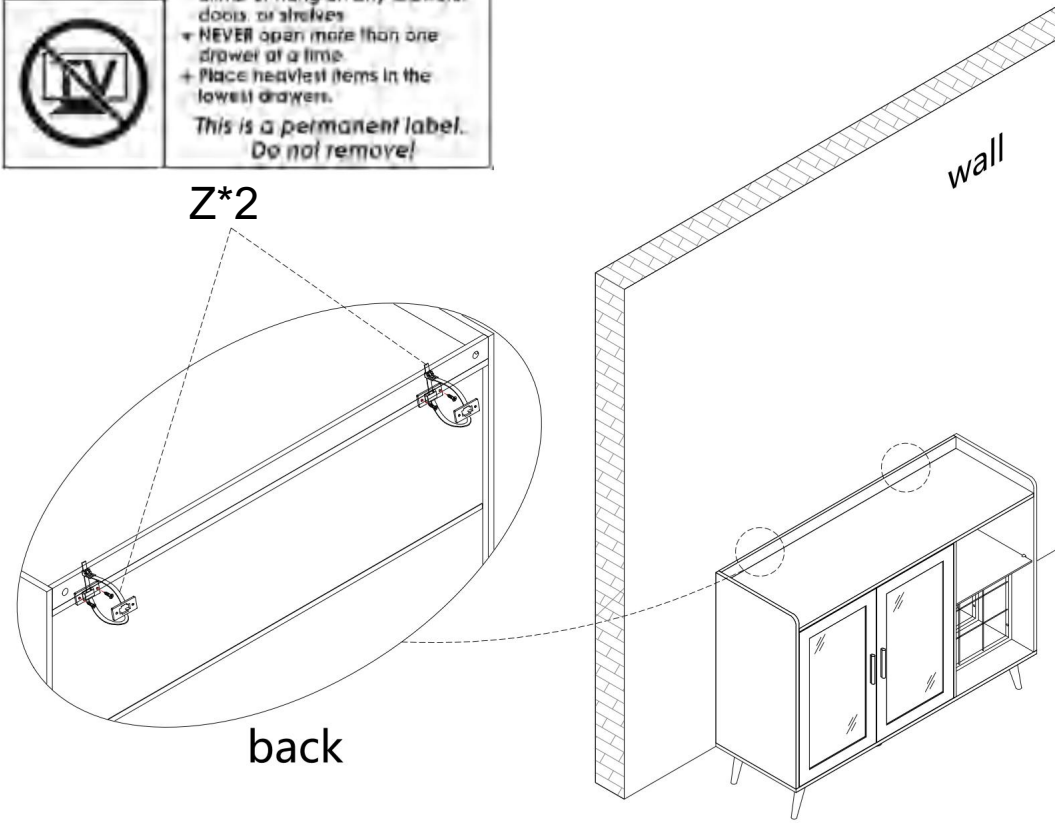


Machine Translated by Google



Mando a distancia

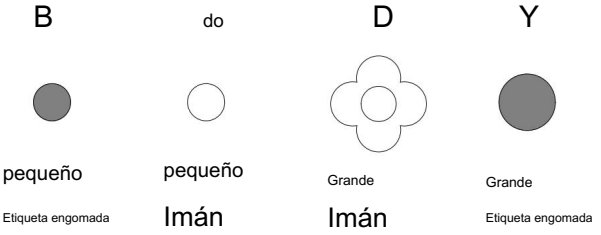

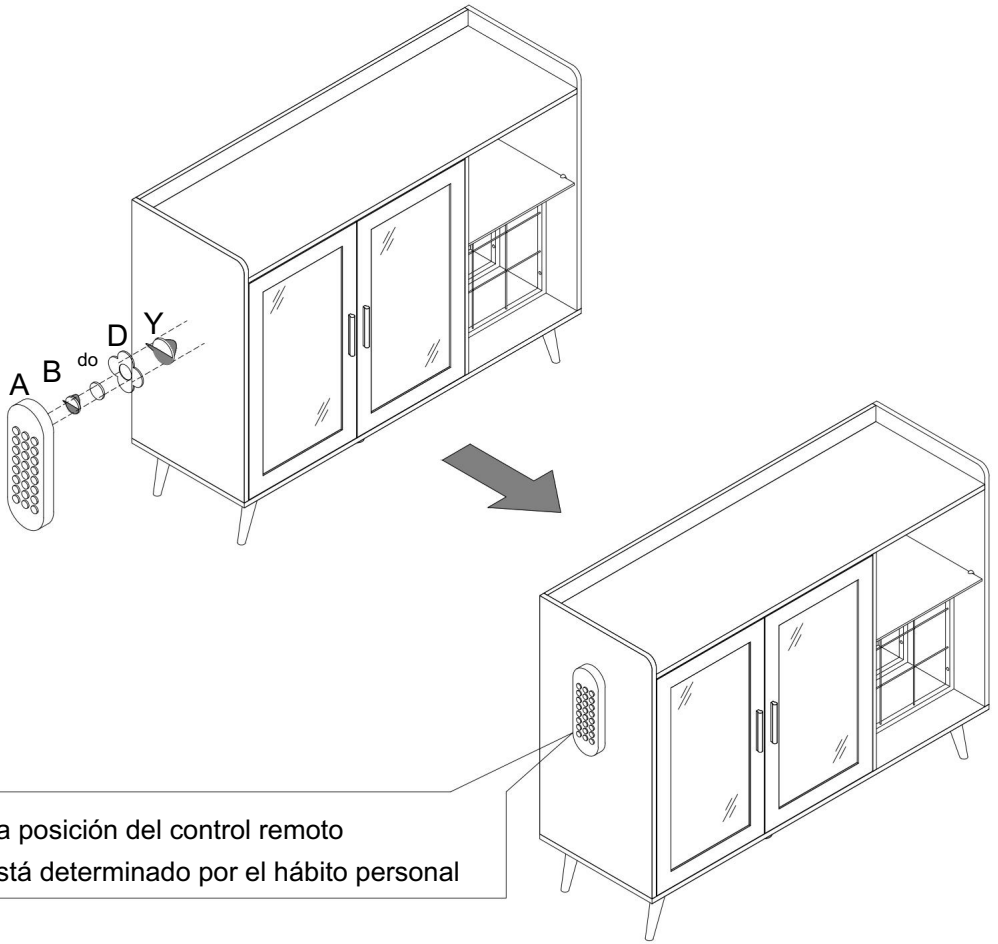

Machine Translated by Google



Machine Translated by Google

VEVOR

Upgrade · The Home Creator Way

Plate type wine cabinet


MODEL: DX0202-C250498S-01

Machine Translated by Google

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

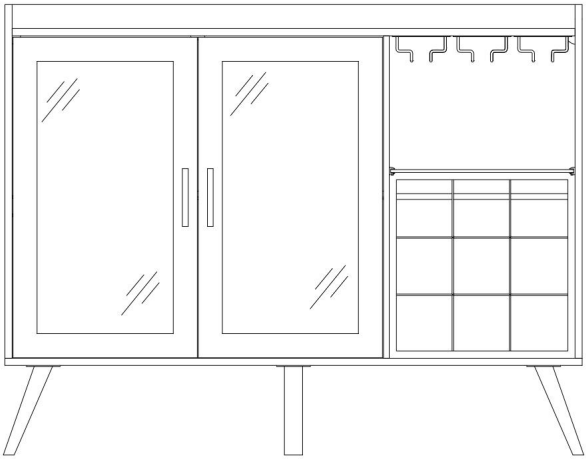

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Machine Translated by Google

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Machine Translated by Google

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

Machine Translated by Google

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Machine Translated by Google

Montaż krzywek i sworzni


Wkręć sworzeń w otwór. Aby prawidłowo ustawić krzywki, upewnij się, że strzałka na krzywce jest skierowana w stronę otworu blokującego sworznia. Zablokuj krzywkę, obracając głowicę krzywki śrubokrętem, aż będzie dokręcona. Nie używaj wkrętarki elektrycznej do montażu urządzenia.

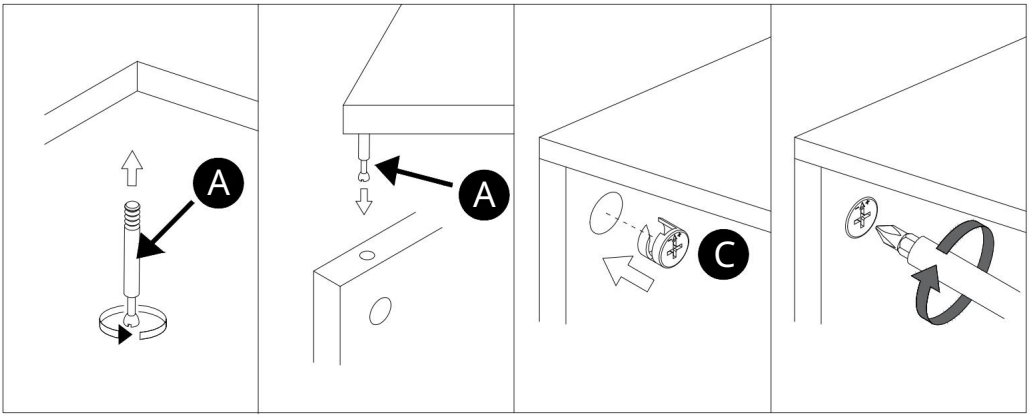

Przed rozpoczęciem pracy należy uważnie przeczytać każdy krok. Bardzo ważne jest, aby każdy krok instrukcji został wykonany we właściwej kolejności. Niewykonanie tych kroków w odpowiedniej kolejności może spowodować trudności w montażu.












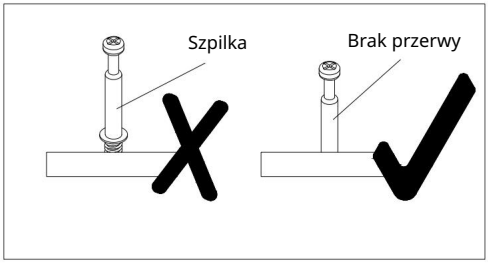


Machine Translated by Google

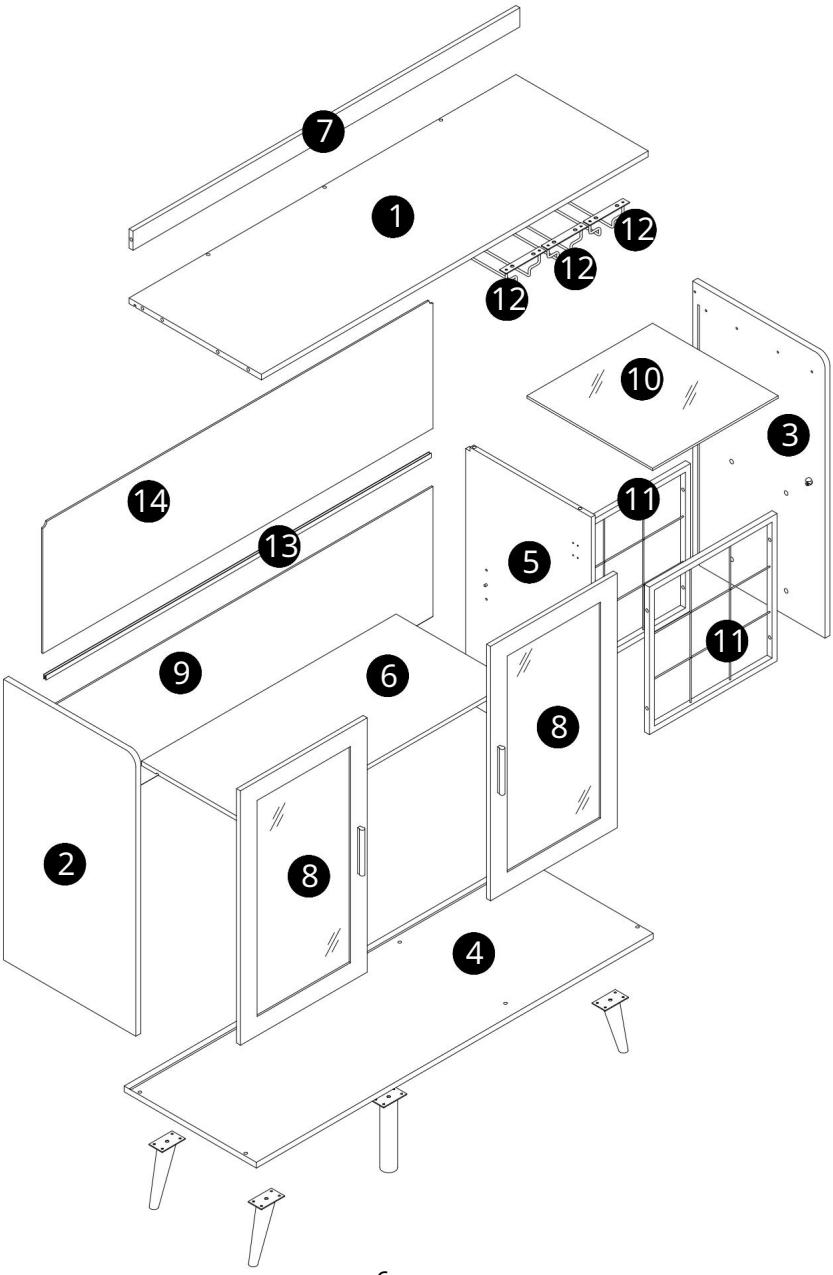


Machine Translated by Google

Lista części i sprzętu

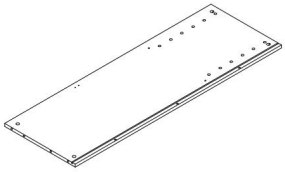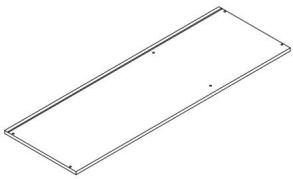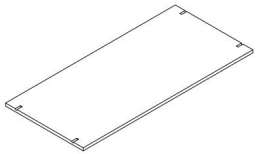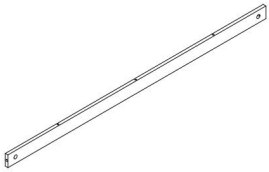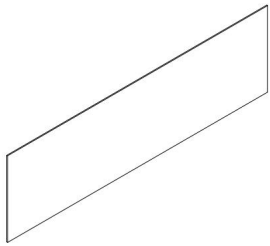 1 1 szt.	 2 1 szt.	 3 1 szt.
 4 1 szt.	 5 1 szt.	 6 1 szt.
 7 1 szt.	 8 2 szt.	 9 1 szt.
 10 1 szt.	 11 2 szt.	 12 3 szt.


Machine Translated by Google

Lista części i sprzętu

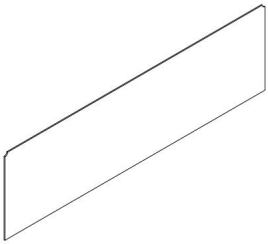 13 1 szt.	 14 1 szt.	


Machine Translated by Google

Lista części i sprzętu

 8 szt. + 1	 M7X50MM B 9 szt. + 1	 C 8 szt.+1	 M6X23MM E 8 szt.+1
 DW K 4 szt.+1	 Ø6X30MM L 4 szt.+1	 M6X10MM N 12 szt. + 1	 O 4 szt.+1
 ST3.5X12MM P 56szt+5	 Q 4 szt.	 R 2 szt.	 S 4 szt.+1
 M4X16MM T 4szt+1	 I 1 szt.	 W 10 szt. + 1	 W 1 szt.
 X 4 szt. + 1	 Y 1 szt.	 Z 2pcs	 1 szt.
			

Machine Translated by Google

1

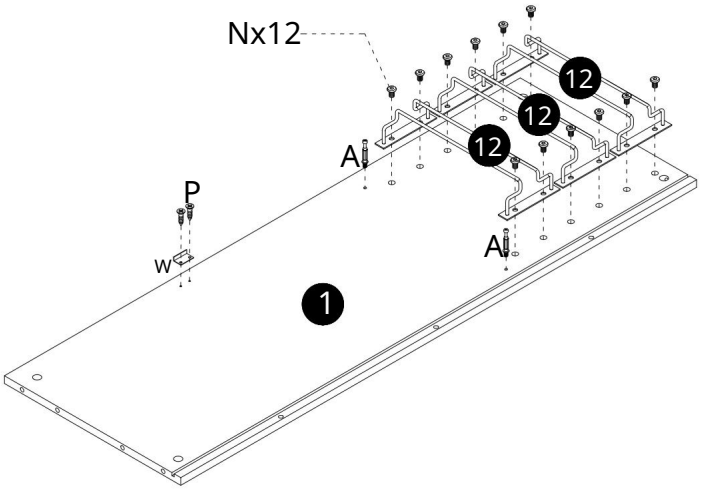

A x2


N x1

P x2

W x1

2

B x3

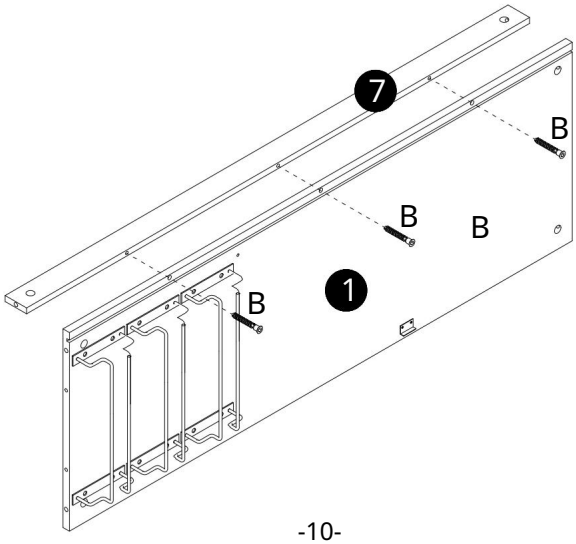


Machine Translated by Google


3



x6

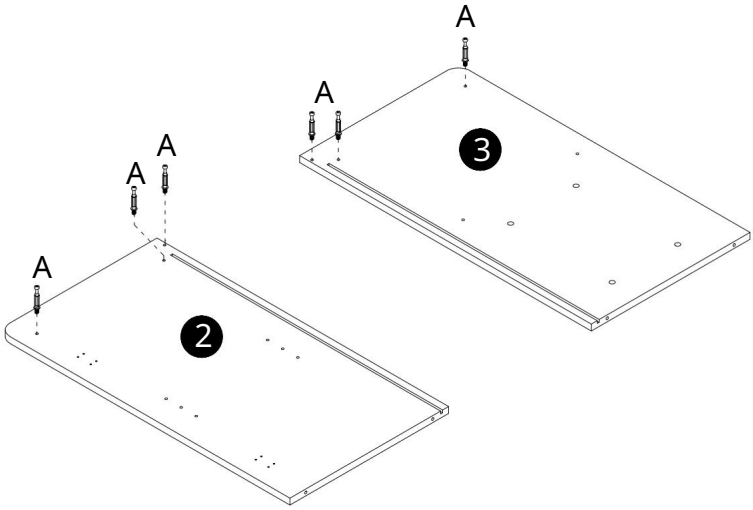

4






x4




x4

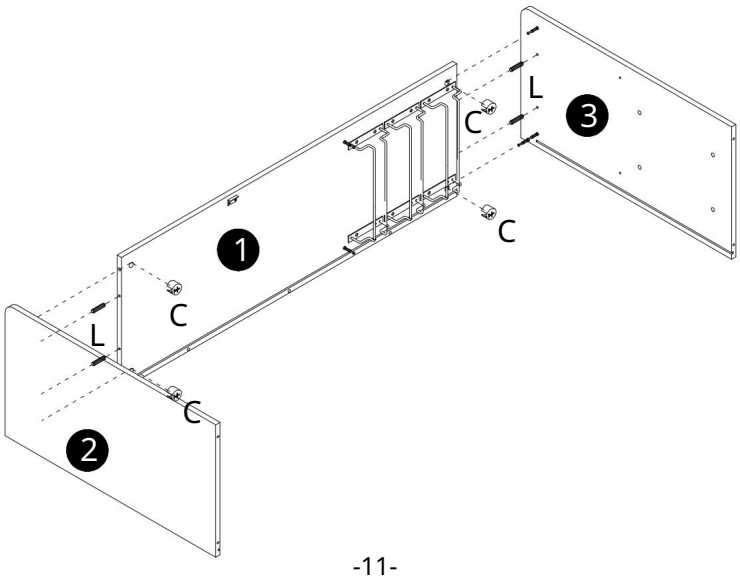


Machine Translated by Google

5






x2

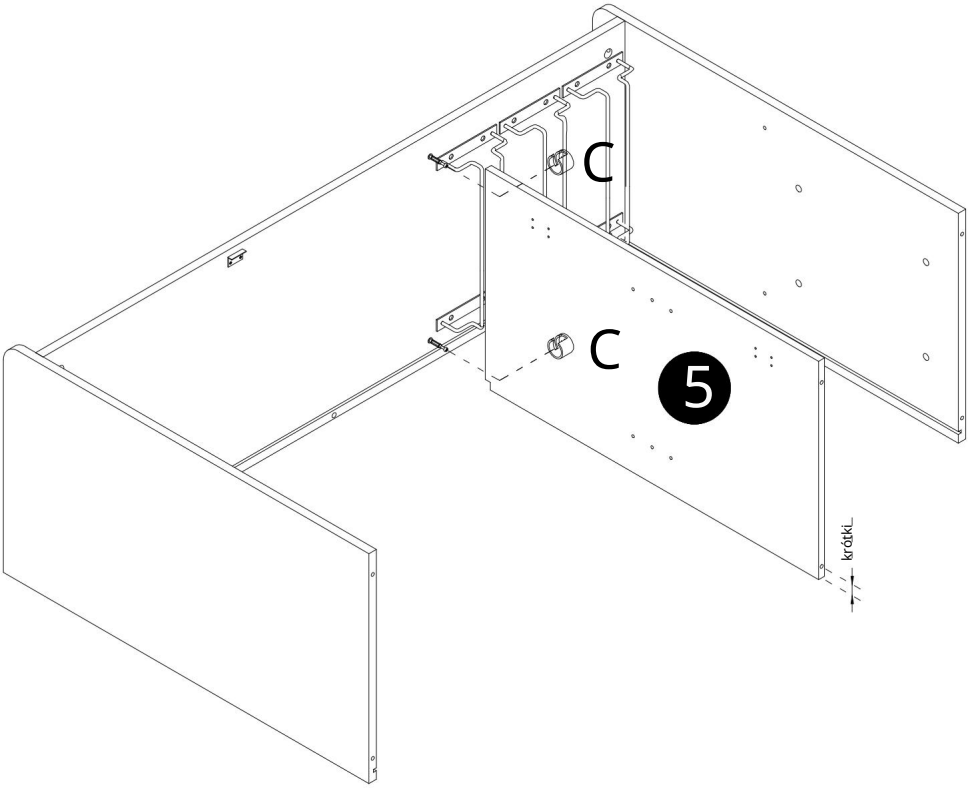


6

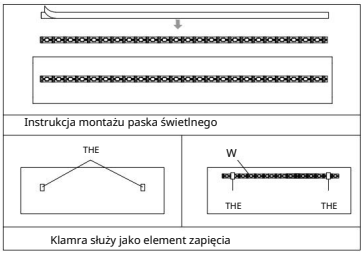




Pasek świetlny montowany jest pod płytą warstwową

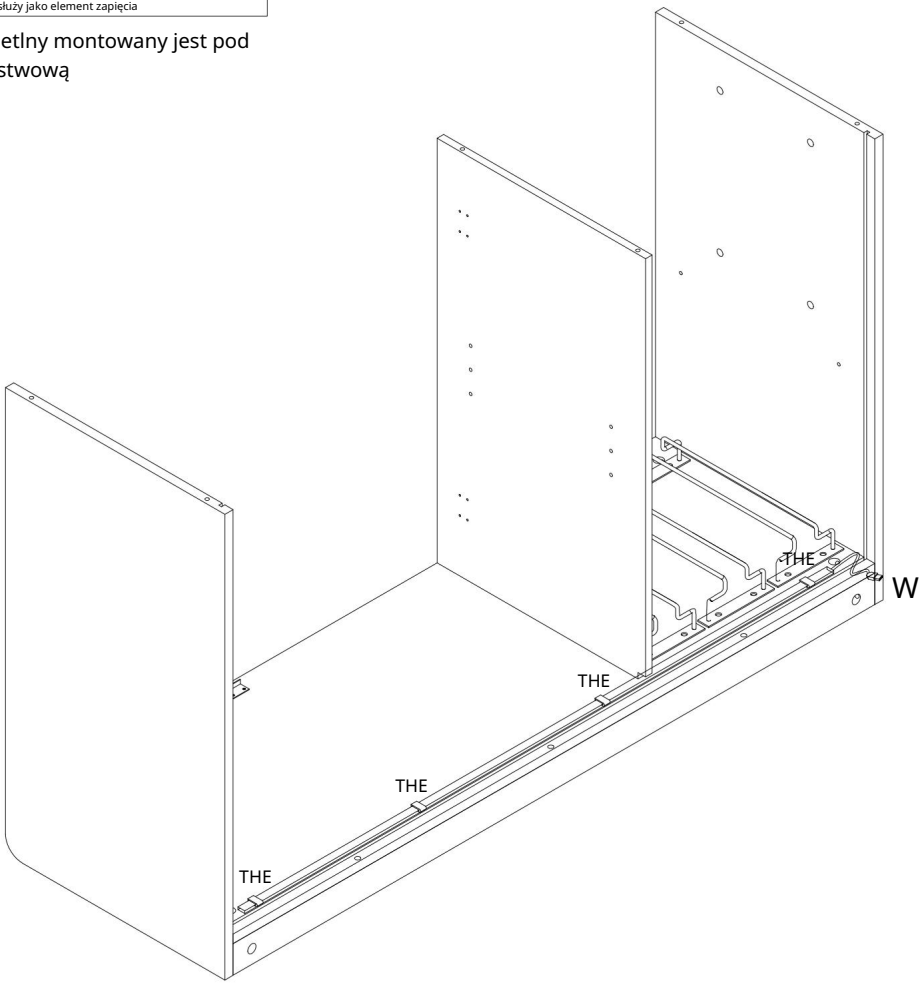


Machine Translated by Google

7






x2

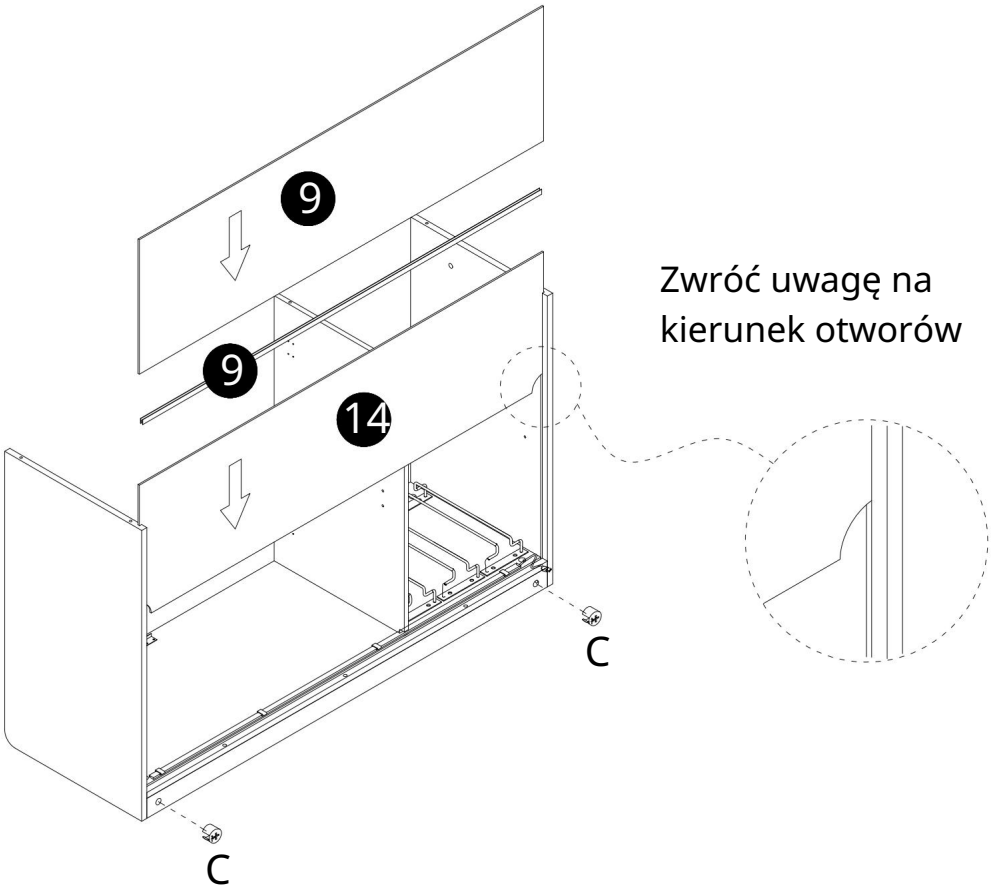


Zwróć uwagę na kierunek otworów

Machine Translated by Google


8




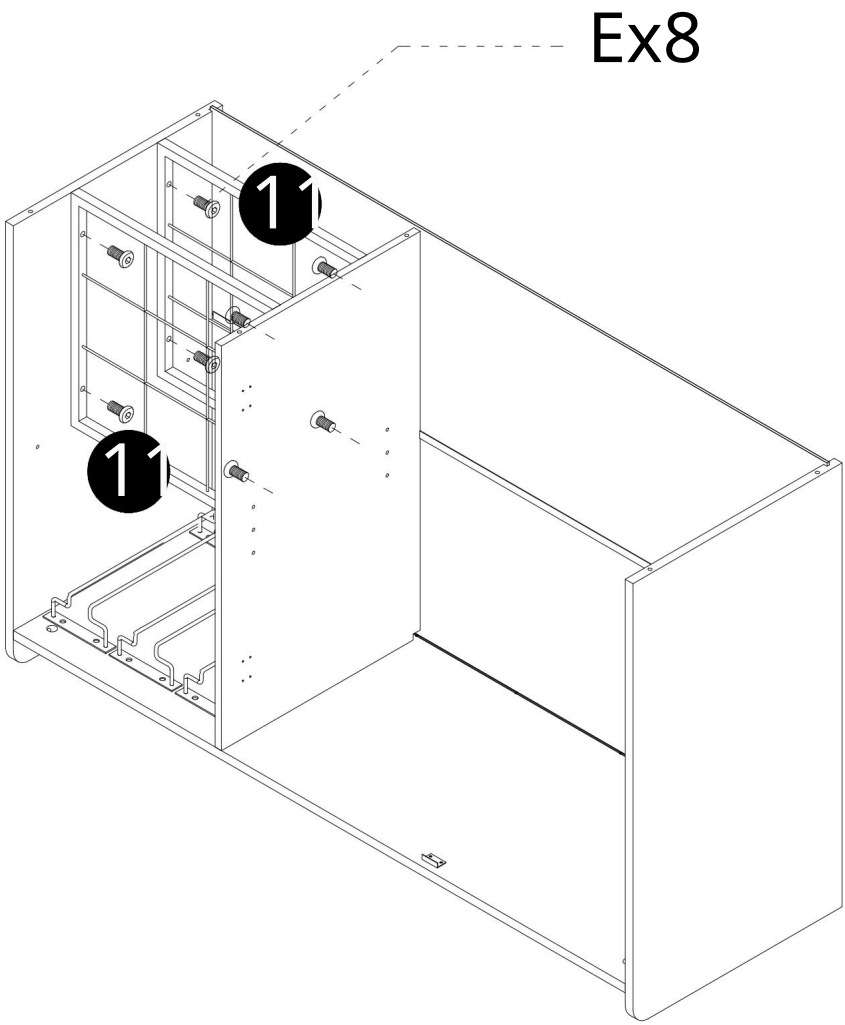


Machine Translated by Google


9

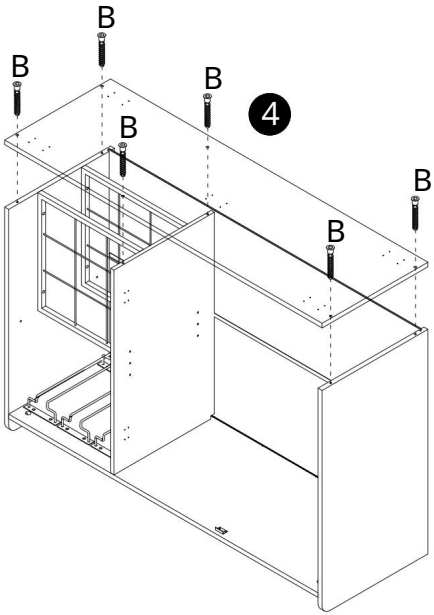




10

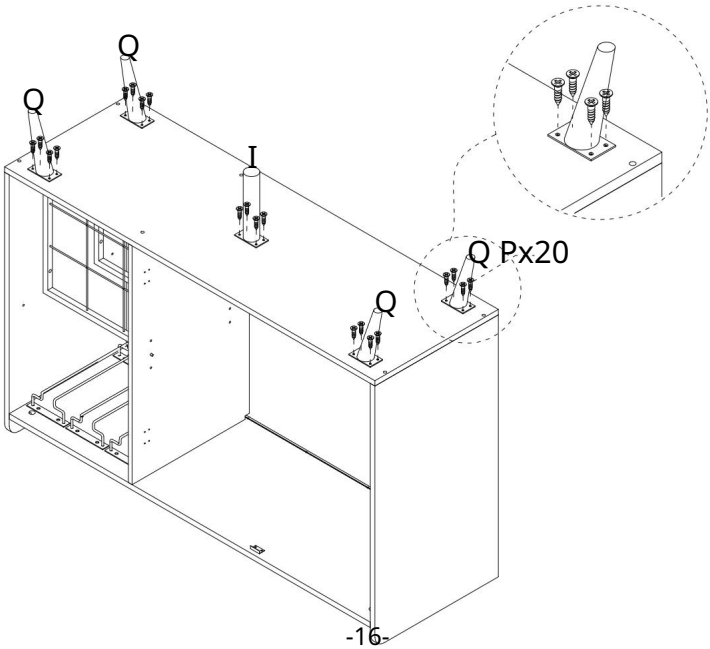

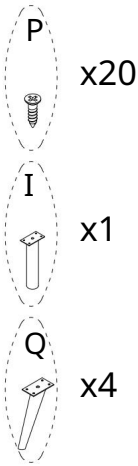


Machine Translated by Google

11

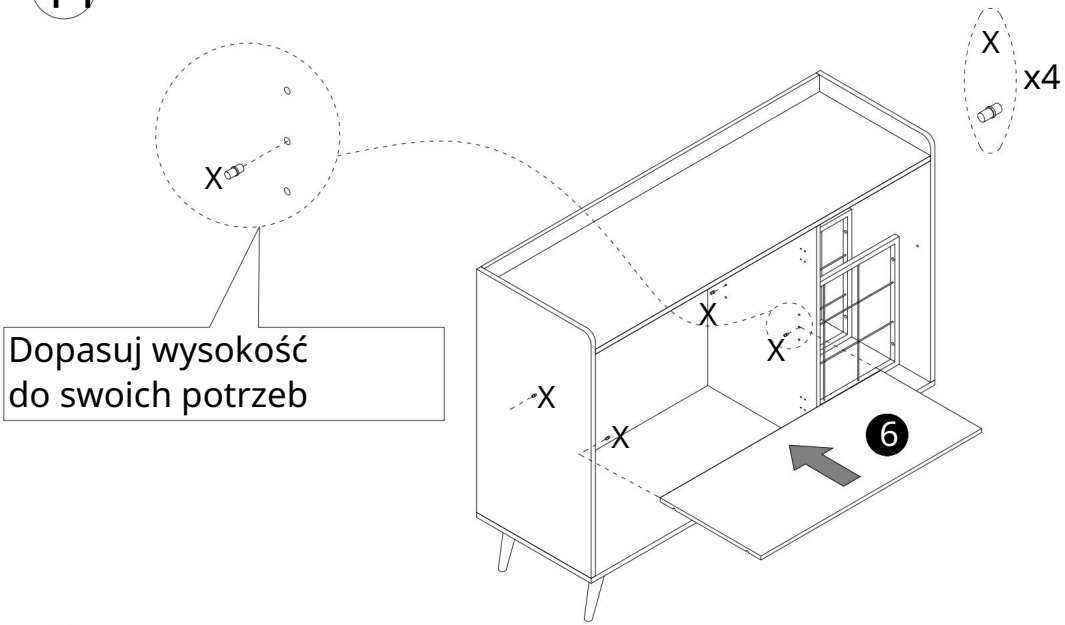


12

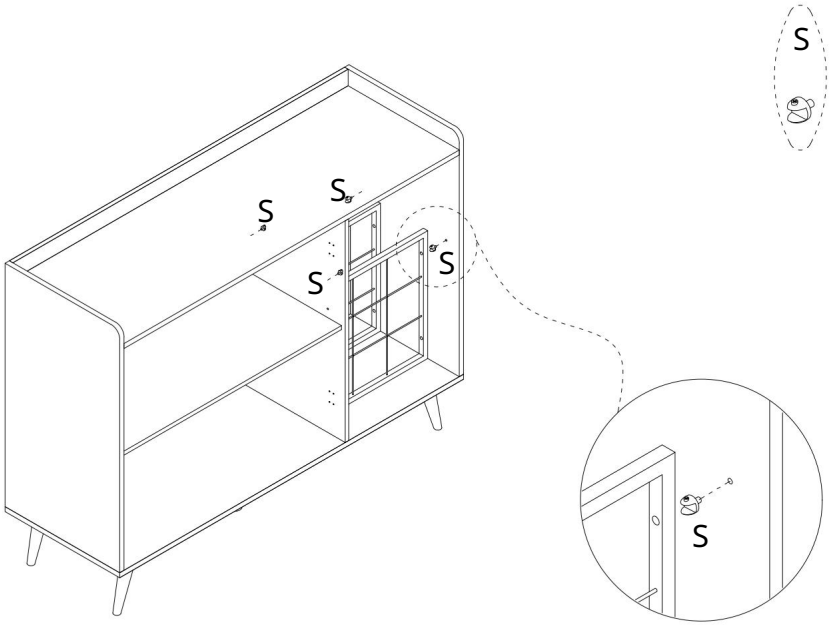


Machine Translated by Google


13

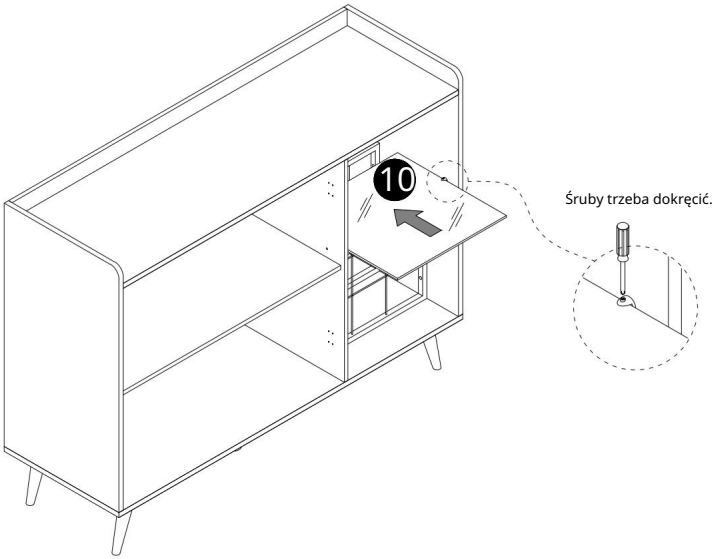

14

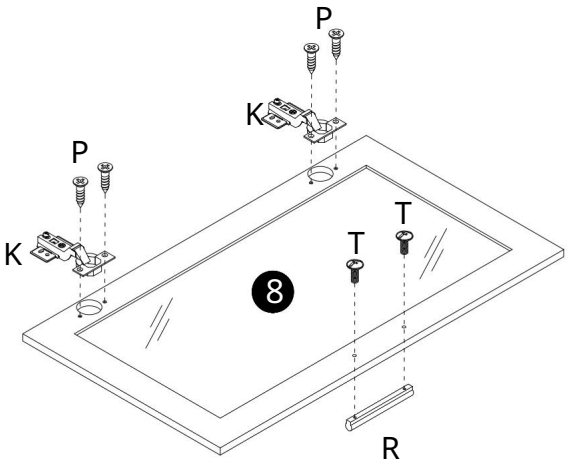


x2




Machine Translated by Google


15



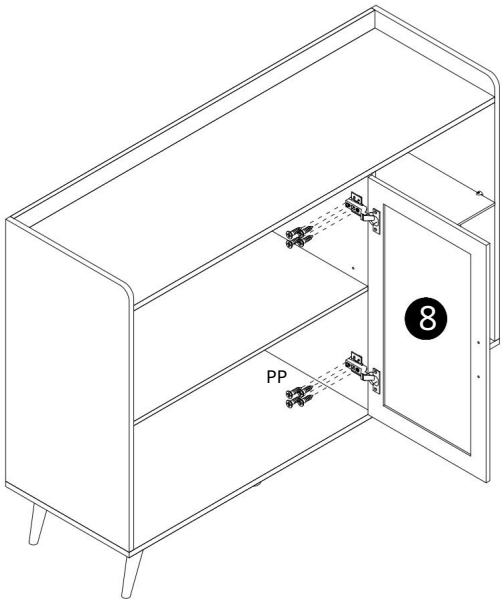

16



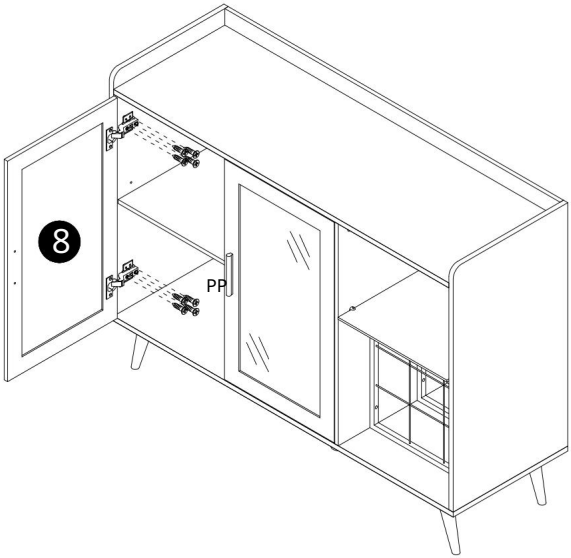


Machine Translated by Google

17

W x10


P x10

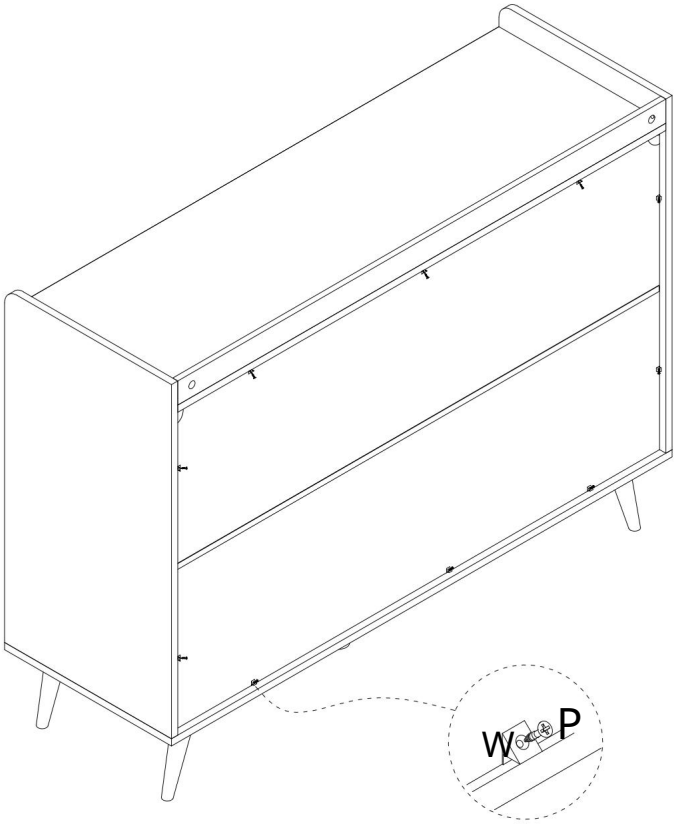

Machine Translated by Google


Metoda regulacji zawiasów drzwi

Metoda 1:

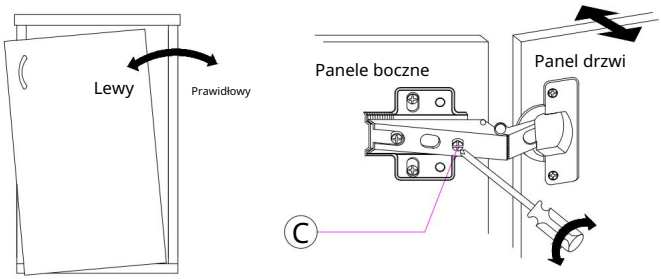

Przesuń drzwi w lewo lub w prawo: 1. Obróć śrubę C śrubokrętem zgodnie z ruchem wskazówek zegara, aby przesunąć panel drzwi w lewo. 2. Obróć śrubę C śrubokrętem przeciwnie do ruchu wskazówek zegara, aby przesunąć panel drzwi w prawo.


Metoda 2:

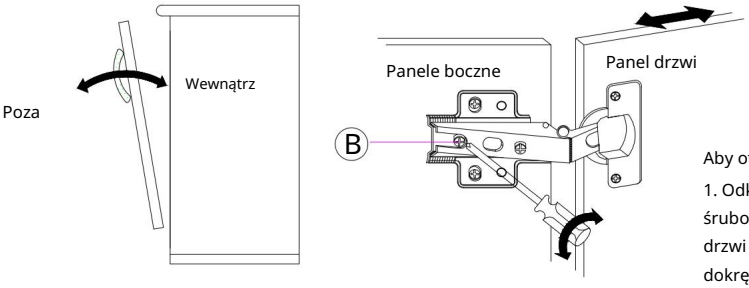

Aby otworzyć lub otworzyć drzwi:

1. Odkręć śrubę B za pomocą śrubokręta, jak pokazano na rysunku 2. Przesuń drzwi do właściwej pozycji. 3. Ponownie dokręć śruby.


Metoda 3:

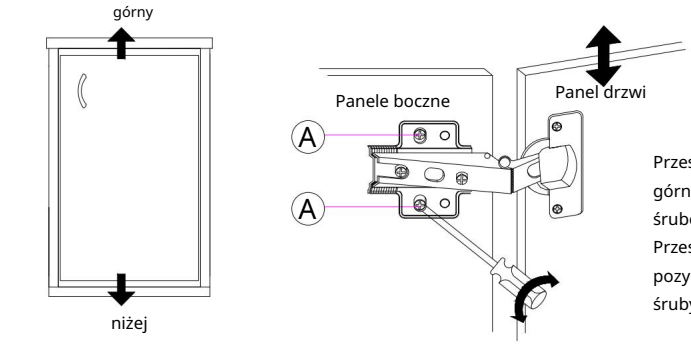



Przesuń drzwi w górę i w dół: 1. Odkręć górne i dolne śruby A za pomocą śrubokręta, jak pokazano na rysunku 2. Przesuń drzwi do właściwej pozycji i wyrównaj drzwi 3. Ponownie dokręć śruby


Machine Translated by Google


Zamontuj zabezpieczenie przed przewróceniem

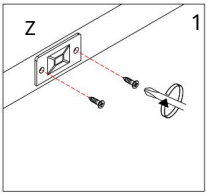

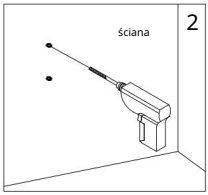


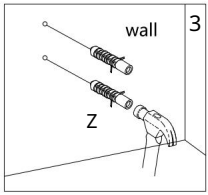

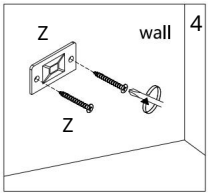







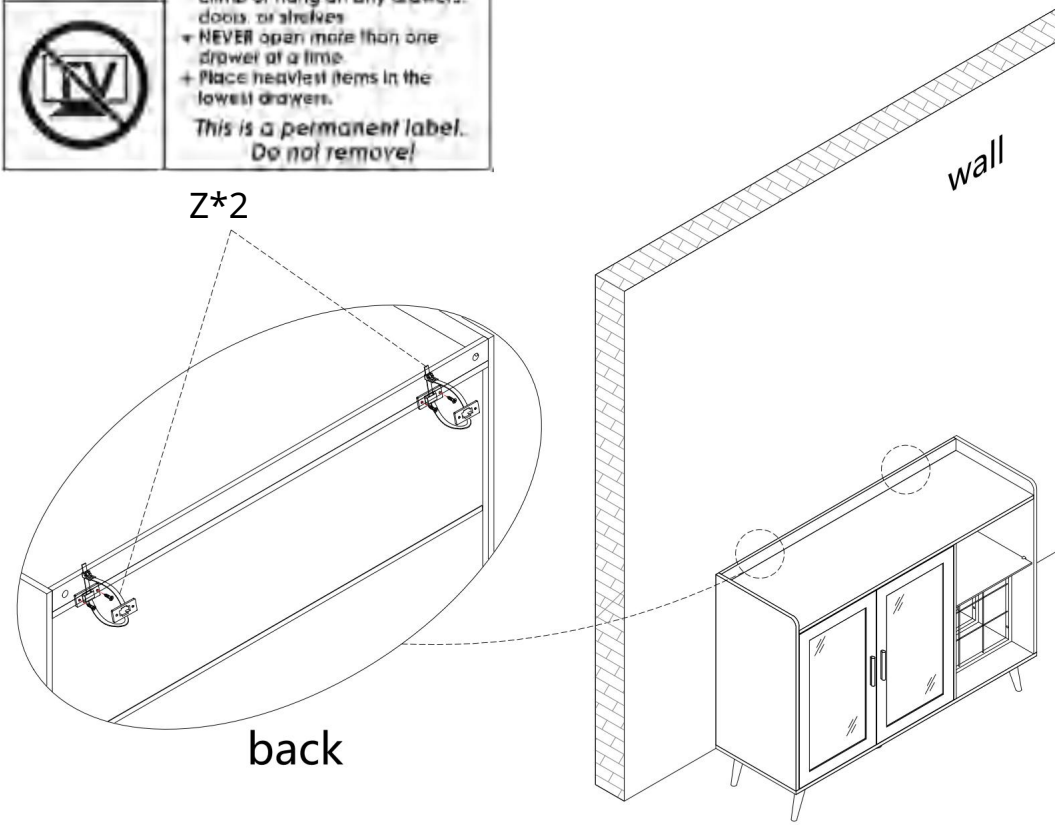

Machine Translated by Google



Zdalne sterowanie



mały
Naklejka




mały
Magnes




Duży
Magnes



Duży
Naklejka

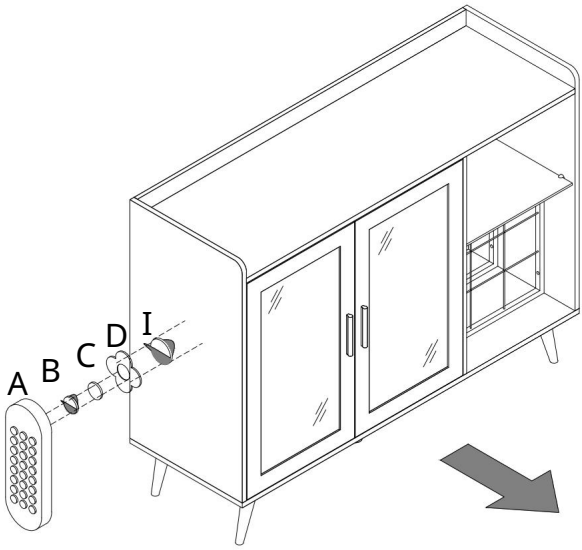

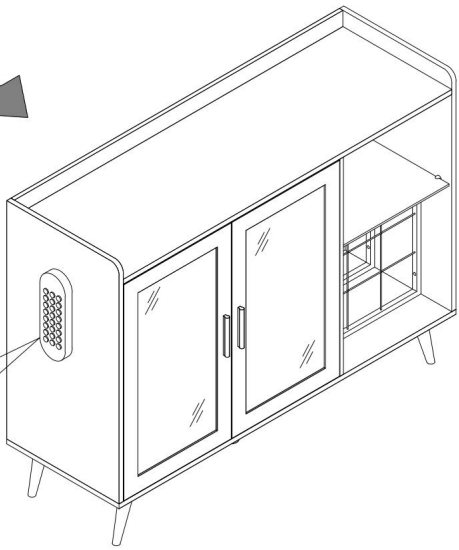

Pozycja pilota zdalnego sterowania
jest determinowane przez osobiste nawyki

Machine Translated by Google



Machine Translated by Google

VEVOR

Upgrade · The Home Creator Way

Plate type wine cabinet


MODEL: DX0202-C250498S-01

Machine Translated by Google

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

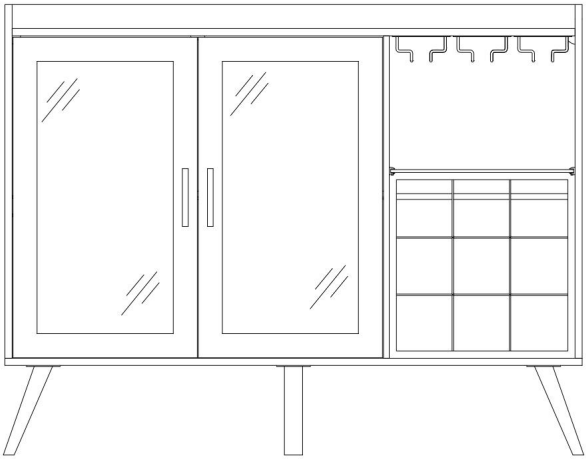

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Machine Translated by Google

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Machine Translated by Google

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

Machine Translated by Google

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Machine Translated by Google

Montage van nokken en pinnen


Draai de pin in het gat. Om de nokken correct te plaatsen, moet u ervoor zorgen dat de pijl op de nok naar het gat van de pin wijst. Vergrendel de nok door de nokkop met een schroevendraaier te draaien totdat deze vastzit. Gebruik geen elektrische schroevendraaier voor de montage.

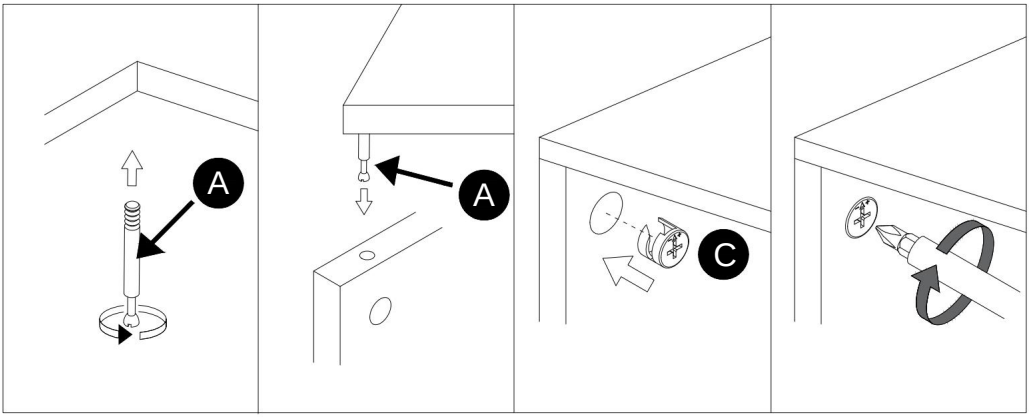

Lees elke stap zorgvuldig door voordat u begint. Het is erg belangrijk dat elke instructiestap in de juiste volgorde wordt uitgevoerd. Als deze stappen niet in de juiste volgorde worden gevolgd, zullen er montageproblemen optreden.












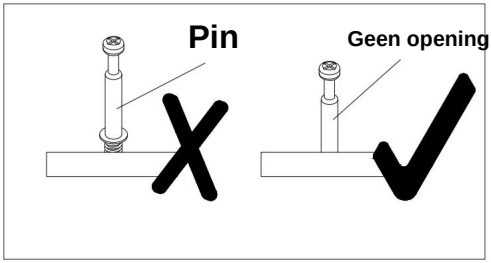


Machine Translated by Google

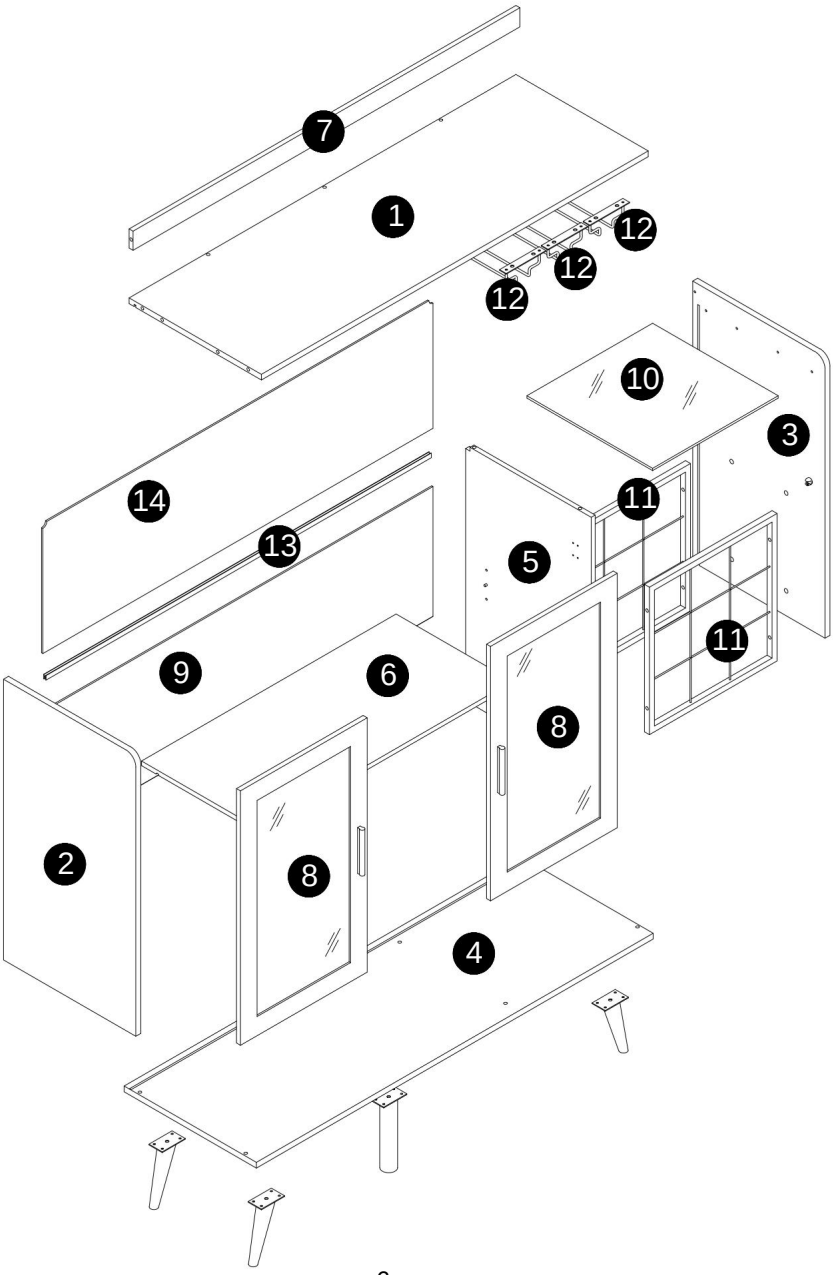


Machine Translated by Google

Onderdelen- en hardwarelijst

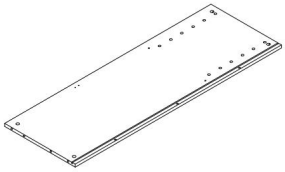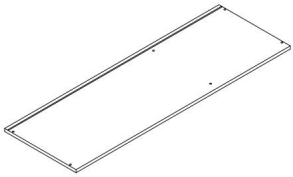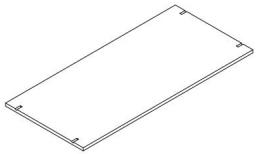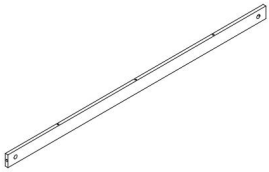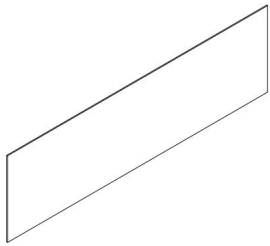
 1 stuk	 2 stuks	 3 stuks
 4 stuks	 5 stuks	 6 1 stuk
 7 1 stuk	 8 2 stuks	 9 1 stuk
 10 stuks	 11 2 stuks	 12 3 stuks

Machine Translated by Google

Onderdelen- en hardwarelijst

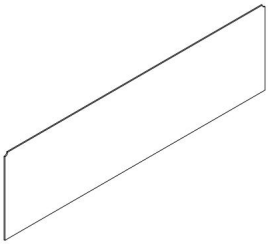
 13 1 stuk	 14 1 stuk	

Onderdelen- en hardwarelijst

 Een van 8 stuks + 1	 M7X50MM B 9 stuks + 1	 C 8 stuks + 1	 M6X23MM E 8 stuks + 1
 DW K 4 stuks + 1	 Ø6X30MM L 4 stuks + 1	 M6X10MM N 12 stuks + 1	 O 4 stuks + 1
 ST3.5X12MM P 56 stuks + 5	 Q 4 stuks	 R 2 stuks	 S 4 stuks + 1
 M4X16MM T 4 stuks + 1	 En 1 stuk	 In 10 stuks + 1	 IN 1 stuk
 X 4 stuks + 1	 Y 1 stuk	 2 stuks	 1 stuk
			

Machine Translated by Google

1

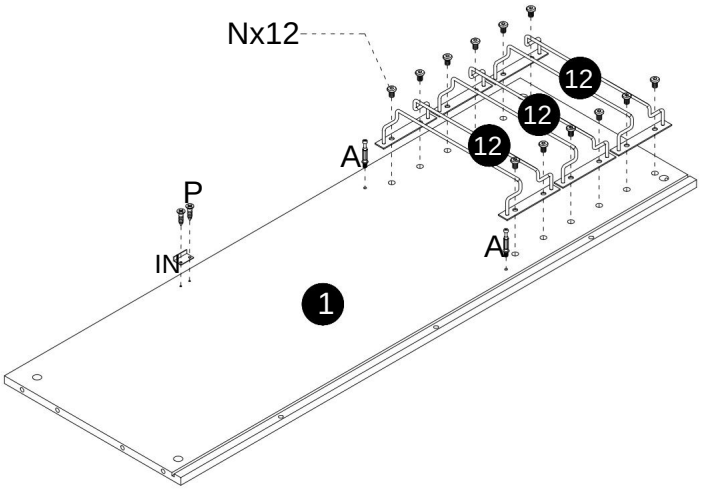

A x2


N x1

P x2

IN x1

2

B x3

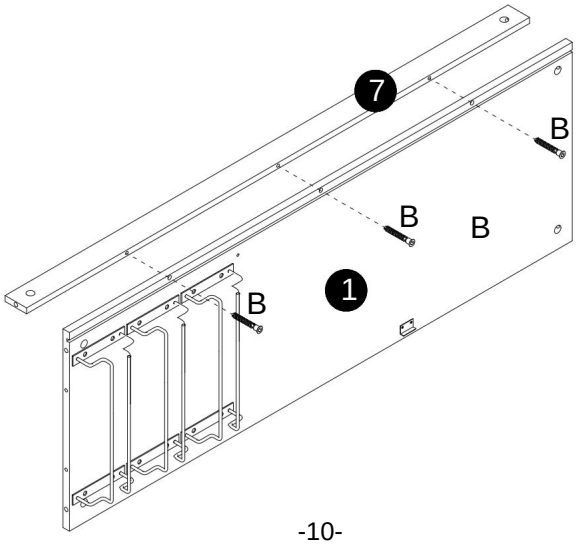


Machine Translated by Google


3



x6

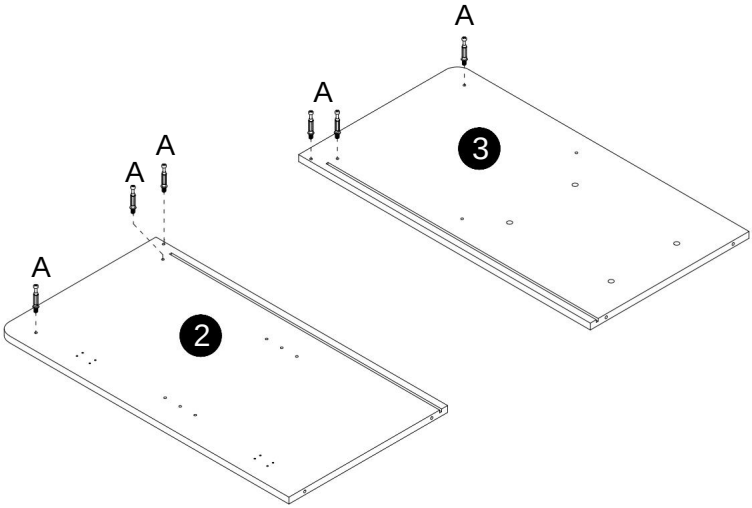

4






x4




x4

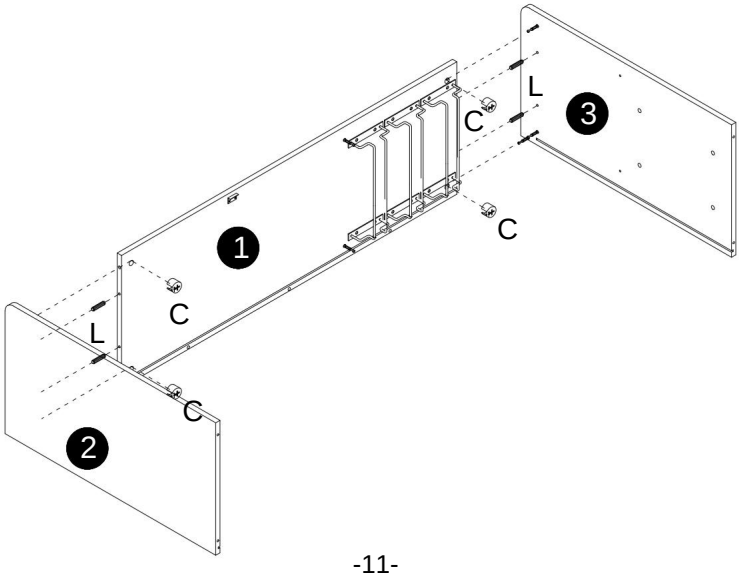


Machine Translated by Google

5







x2

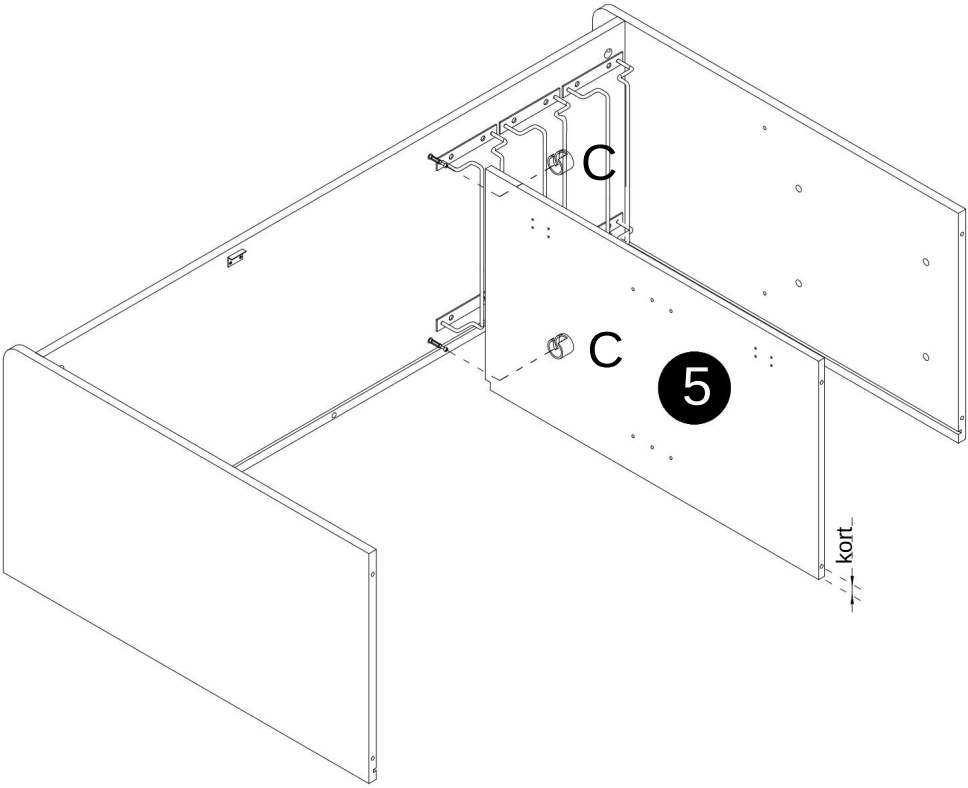


6

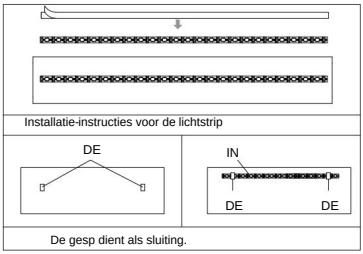




De lichtstrip is onder de laagplaat gemonteerd.

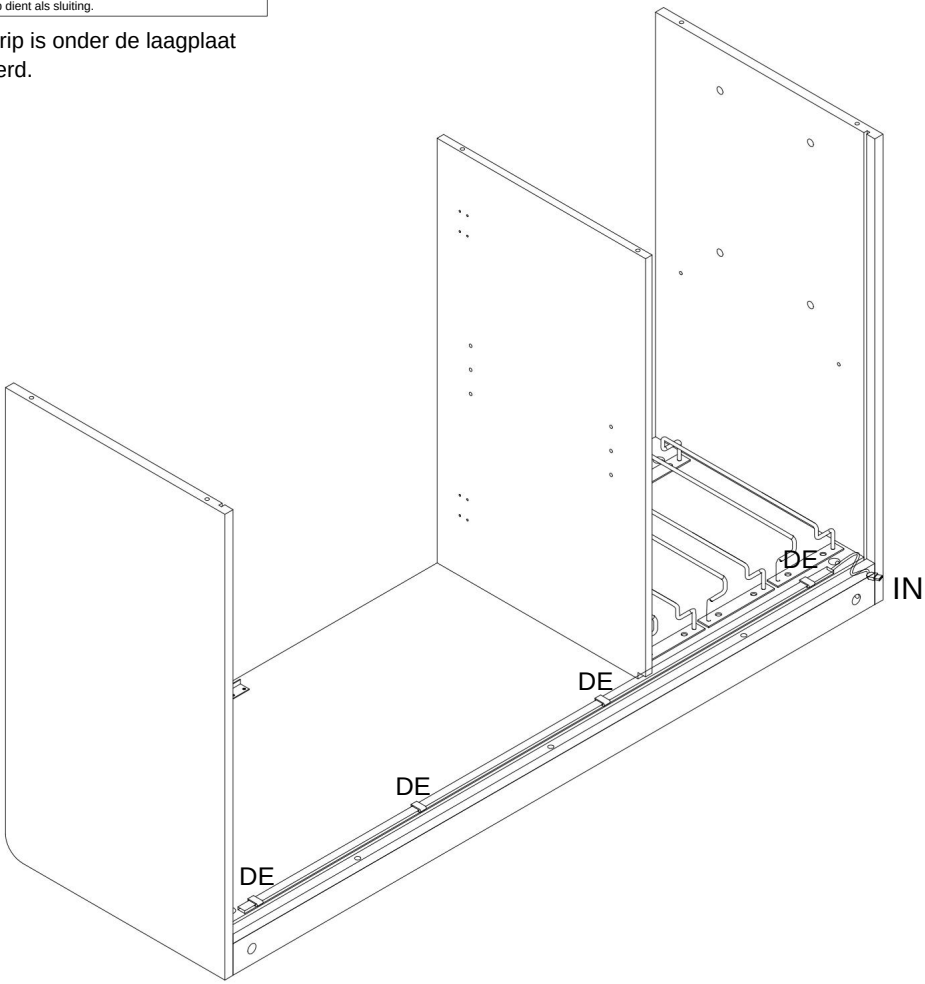


Machine Translated by Google

7






x2

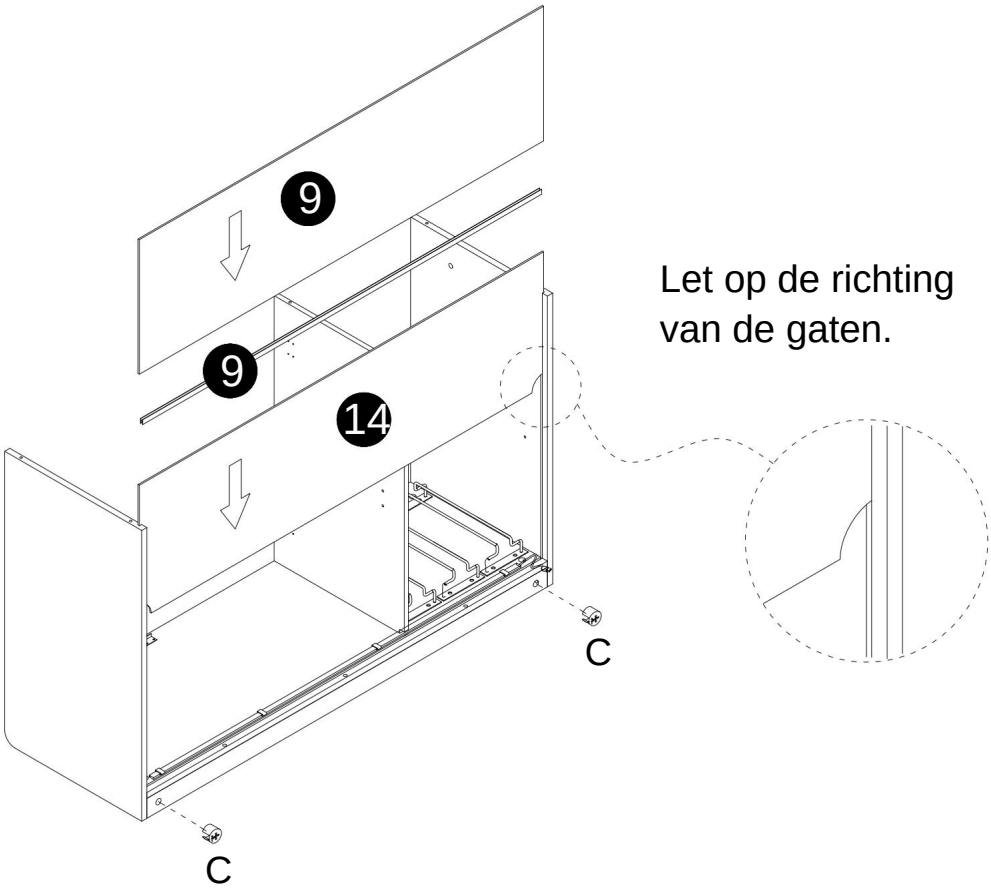


Let op de richting van de gaten.

Machine Translated by Google


8



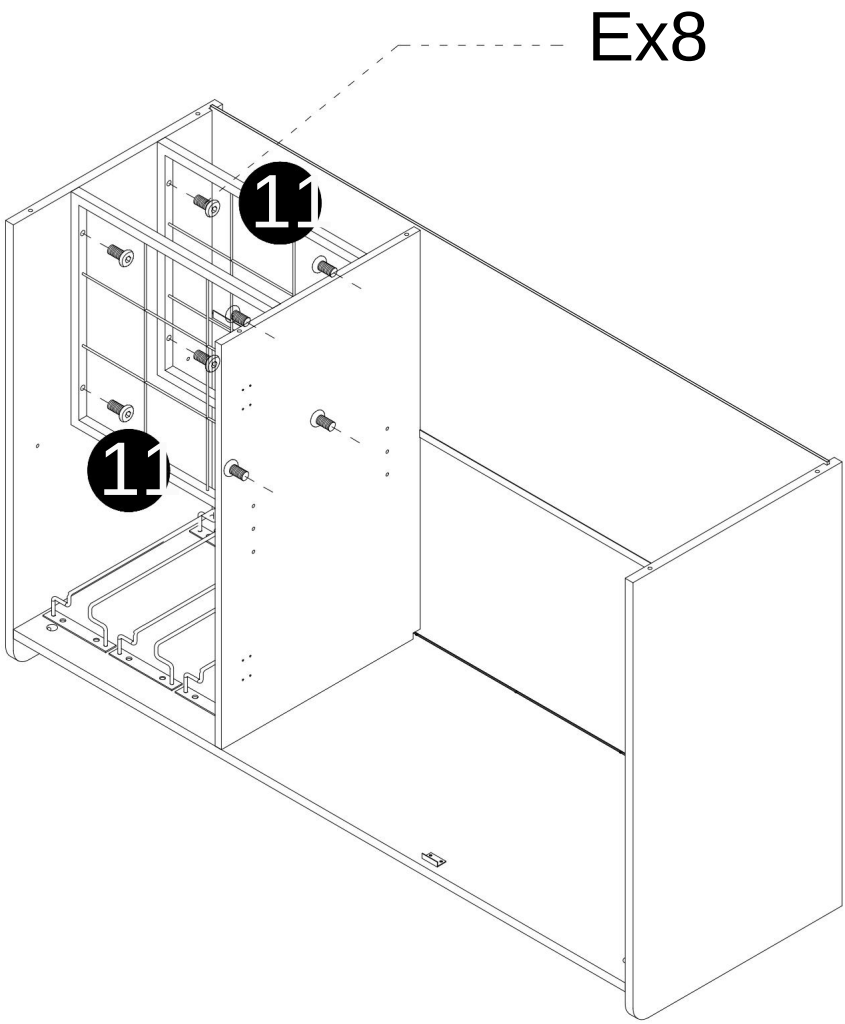

Machine Translated by Google


9

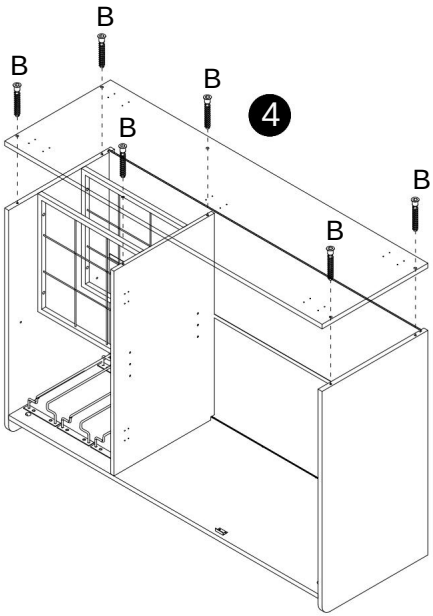




x6

10

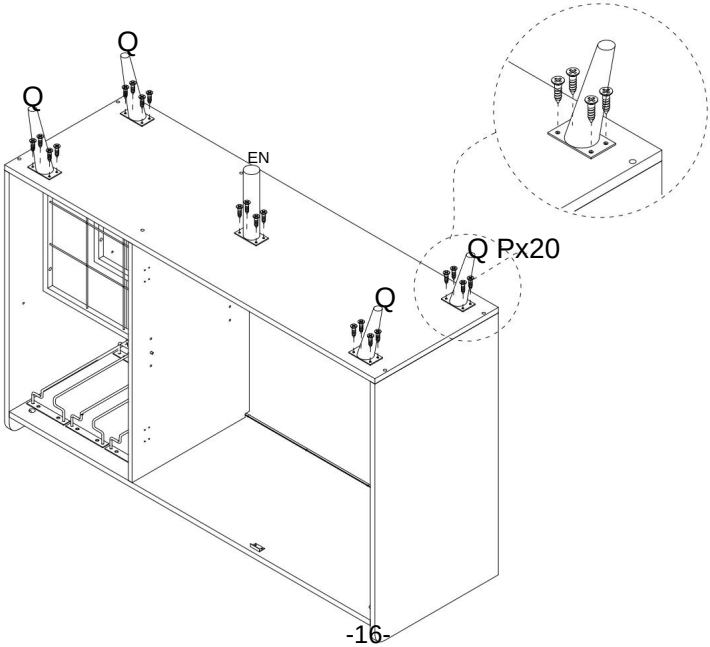



x20




x1




x4

Machine Translated by Google

11

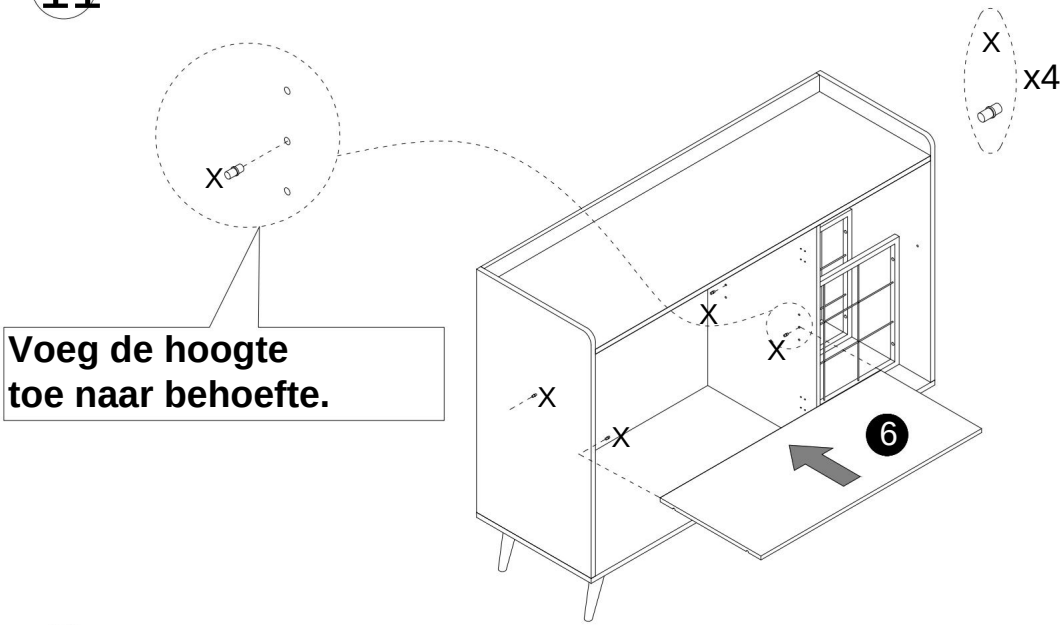



12

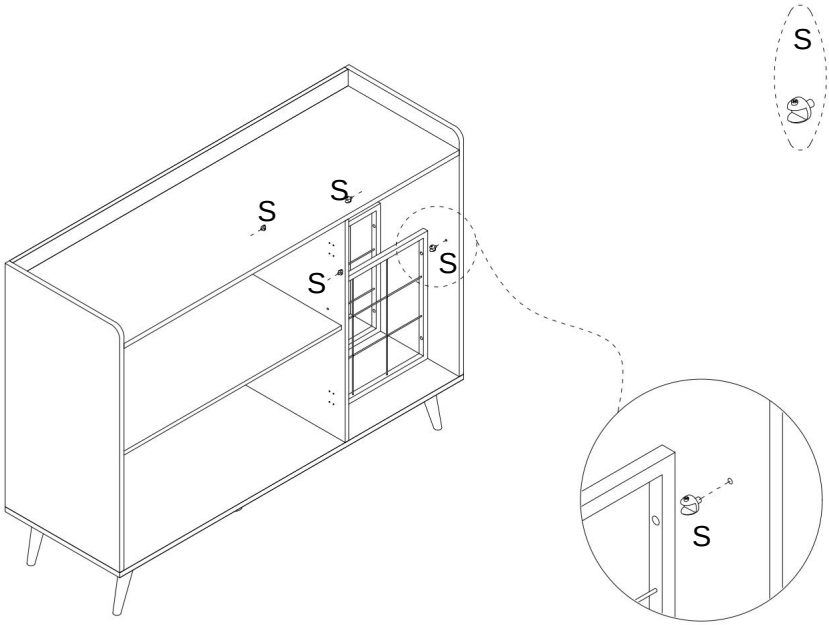

Machine Translated by Google


13

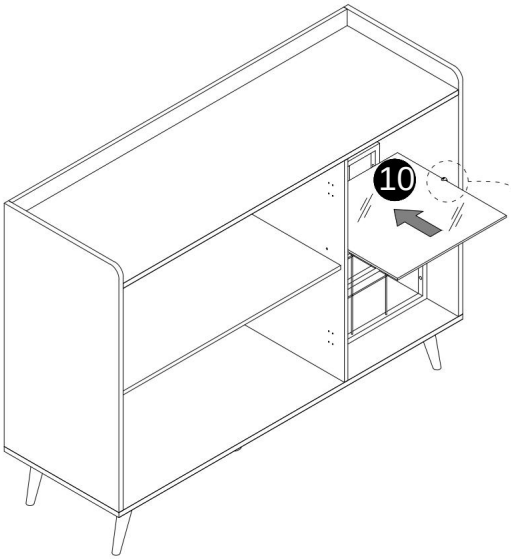

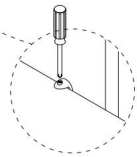


De schroeven moeten worden vastgedraaid.

14

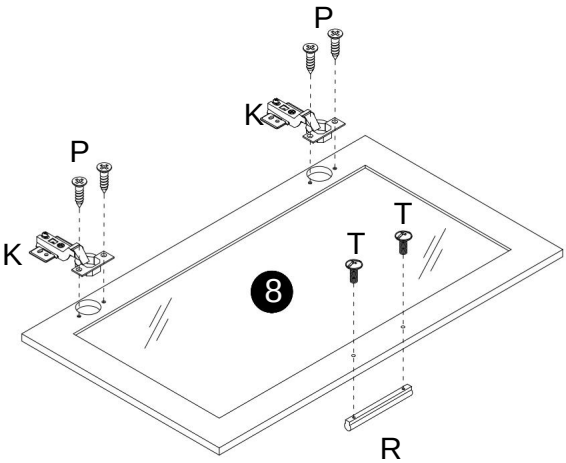



x2




Machine Translated by Google


15



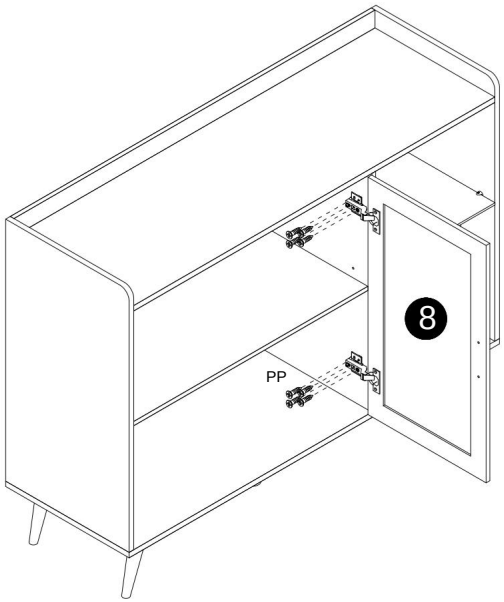

16



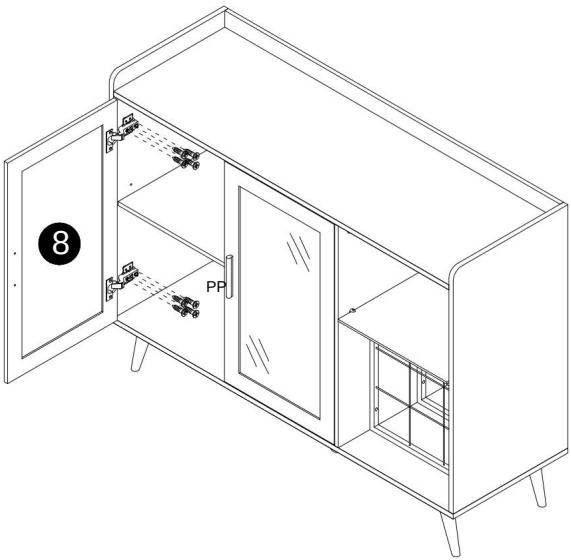


Machine Translated by Google

17

In x10


P x10

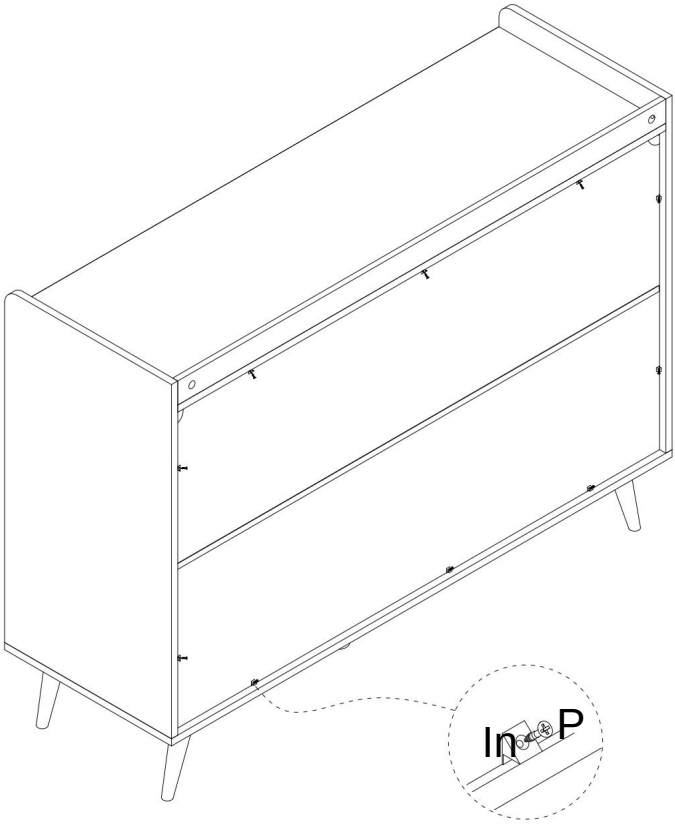


Machine Translated by Google

Methode voor het afstellen van deurscharnieren


Methode 1:

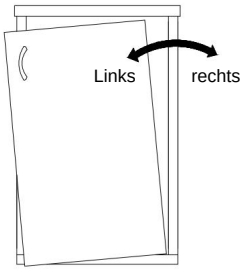


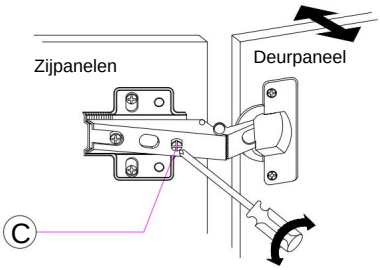

De deur naar links of rechts verplaatsen:
1. Draai de C-schroef met een schroevendraaier met de klok mee om het deurpaneel naar links te verplaatsen.
2. Draai de C-schroef met een schroevendraaier tegen de klok in om het deurpaneel naar rechts te verplaatsen.


Methode 2:

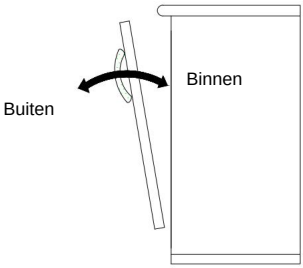


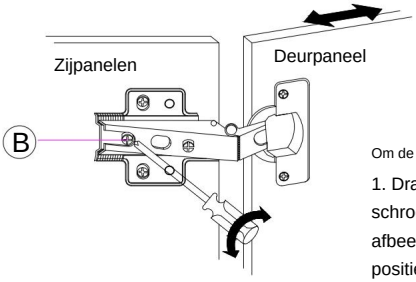

Om de deur naar binnen of naar buiten te schuiven:
1. Draai schroef B los met een schroevendraaier, zoals weergegeven in afbeelding 2. 2. Plaats de deur in de juiste positie. 3. Draai de schroeven weer vast.

Methode 3:

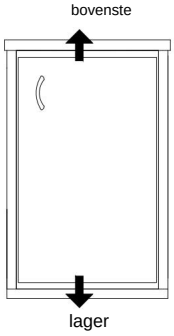


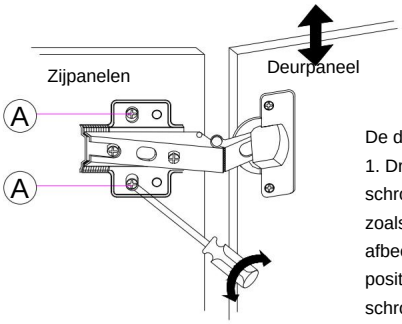



De deur omhoog en omlaag bewegen:
1. Draai de bovenste en onderste schroeven A los met een schroevendraaier, zoals weergegeven in afbeelding 2. Beweeg de deur naar de juiste positie en lijn deze uit. 3. Draai de schroeven weer vast.


Machine Translated by Google


Installeer de bevestigingsmaterialen voor de kantelbeveiliging.

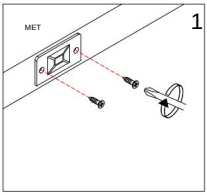

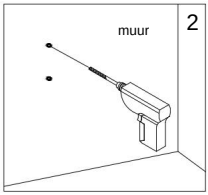


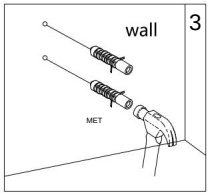

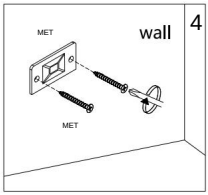







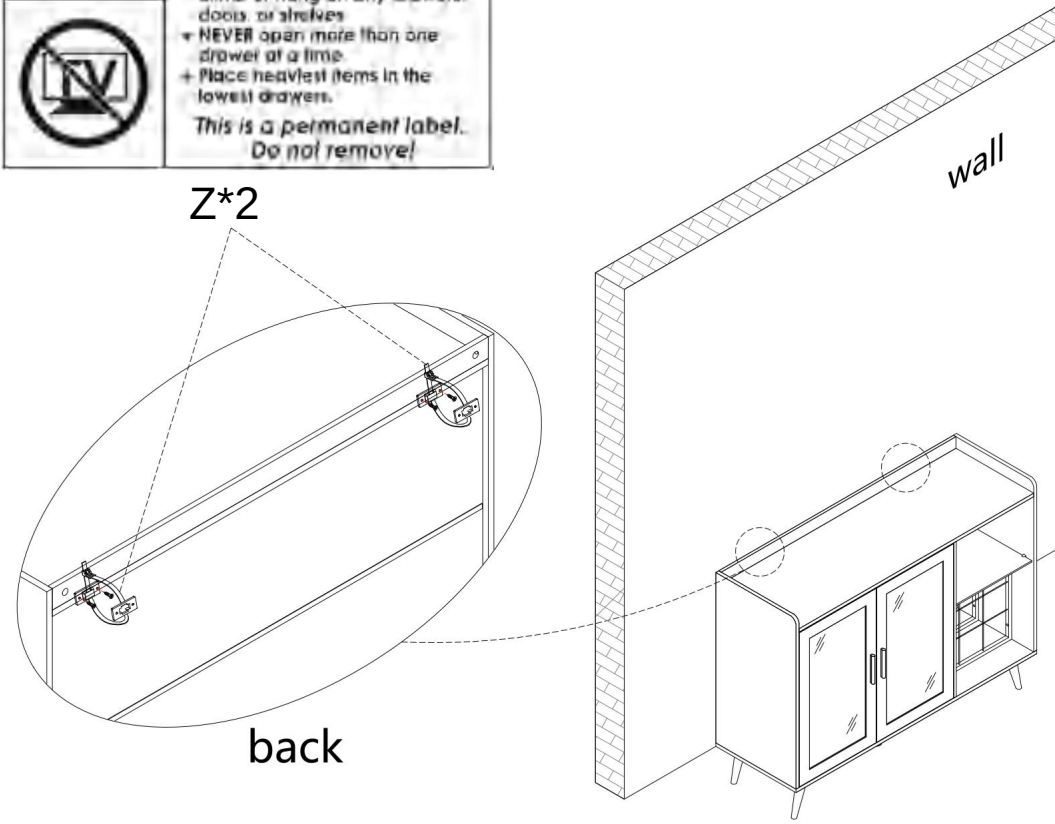

Machine Translated by Google

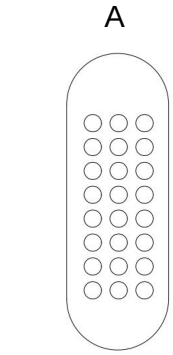

Afstandsbediening



klein

Sticker



klein

Magneet




Groot

Magneet



Groot

Sticker

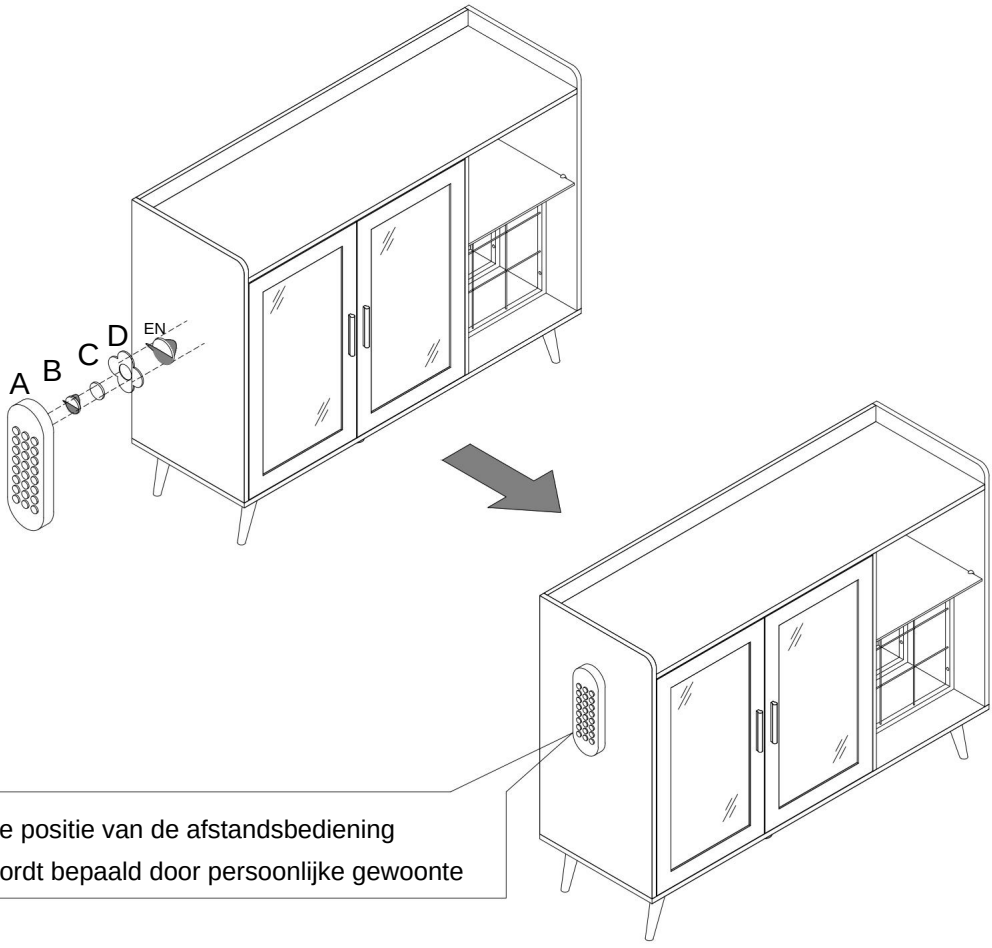

De positie van de afstandsbediening wordt bepaald door persoonlijke gewoonte

Machine Translated by Google



Machine Translated by Google

VEVOR

Upgrade · The Home Creator Way

Plate type wine cabinet


MODEL: DX0202-C250498S-01

Machine Translated by Google

VEVOR
Upgrade·The Home Creator Way

Plate type wine cabinet

MODEL: DX0202-C250498S-01

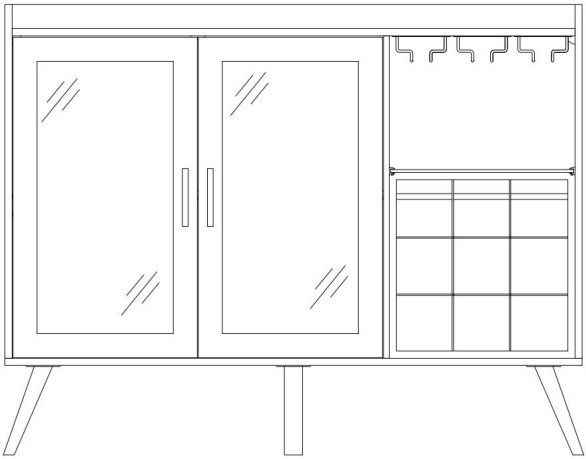

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Machine Translated by Google

SAFETY INSTRUCTIONS

INTRODUCTION

Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

ASSEMBLY PRECAUTIONS

There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. If possible, you can use power tools to make assembly easier.
8. The main components of the product is relatively heavy. Please pay attention to safety during installation.
9. The product is not stable during installation, Please do not move it randomly before it is completely installed.
10. For additional information regarding the parts listed in the following.
11. pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Machine Translated by Google

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECSSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

USE PRECAUTIONS

1) Do not exceed specified weight capacities.
2) Use only on a flat, level, hard, and smooth surface
3) Use as intended only.
4) Inspect before every use; do not use if parts are loose or damaged.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers,doors,or shelves.**
- **Place heaviest items in the lowest drawers.**

SAVE THIS MANUAL

FCC Information for USB light strings:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

Machine Translated by Google

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

CORRECT DISPOSAL FOR USB LIGHT STRINGS




This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.


Machine Translated by Google

Installation av kammar och stift


Skruva fast stiftet i hålet. För att justera kammarna korrekt, se till att pilen på kammen pekar mot hålet på stiftet som den låser. Lås kammen genom att vrida kamhuvudet med en skruvmejsel tills den är åtdragen. Använd inte en elektrisk skruvmejsel för att montera enheten.

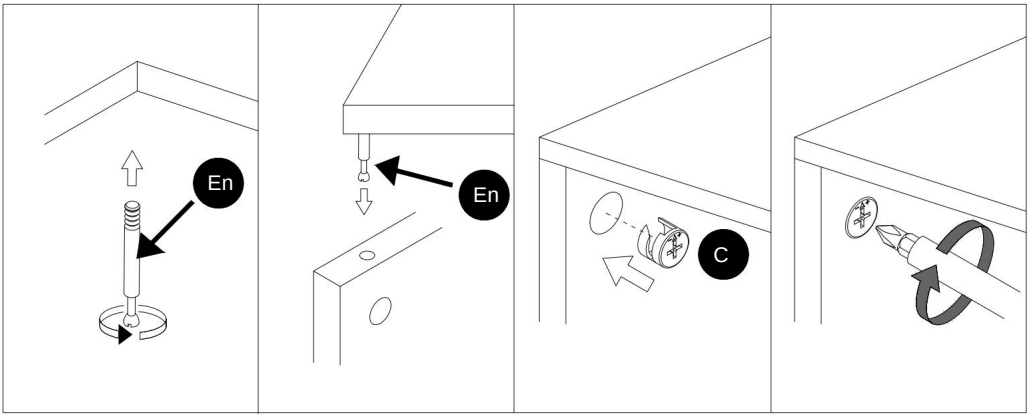

Läs varje steg noggrant innan du börjar. Det är mycket viktigt att varje steg i instruktionerna utförs i rätt ordning. Om dessa steg inte följs i rätt ordning kommer monteringsproblem att uppstå.












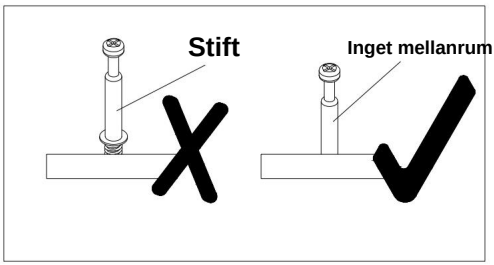


Machine Translated by Google

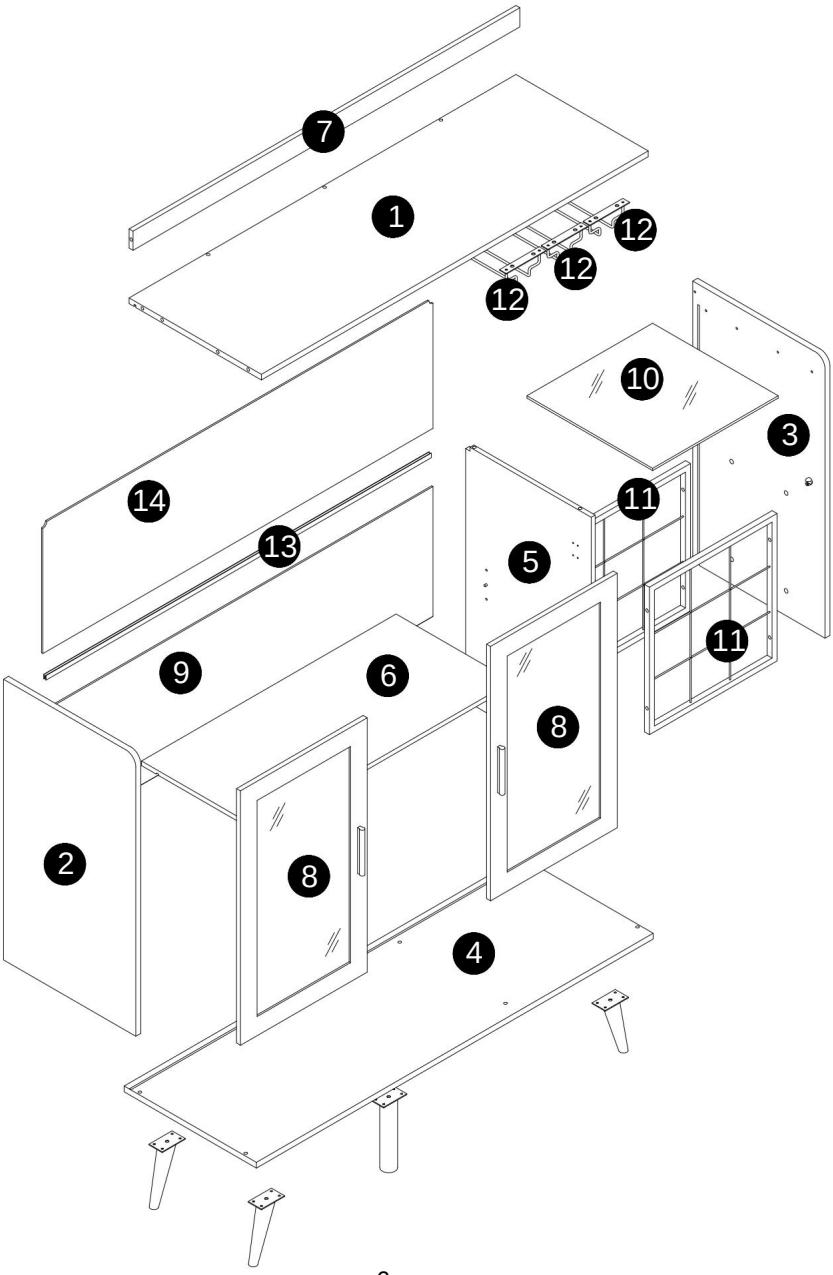


Machine Translated by Google

Delar och hårdvara lista

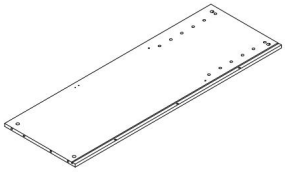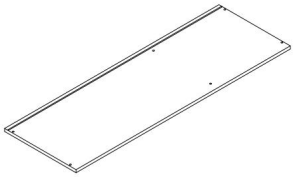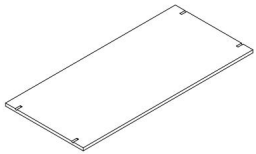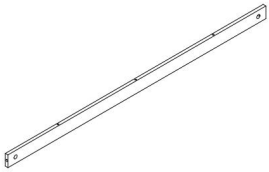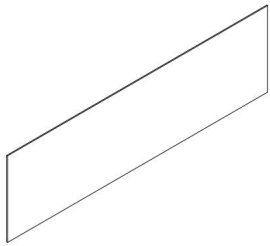
 1 st	 2 1 st	 3 1 st
 4 1 st	 5 1 st	 6 1 st
 7 1 st	 8 2 st	 9 1 st
 10 1 st	 11 2 st	 12 3 st

Machine Translated by Google

Delar och hårdvara lista

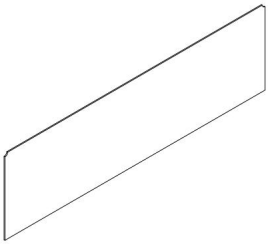
 13 1 st	 14 1 st	


Delar och hårdvara lista

 8 st + 1	 M7X50MM B 9 st + 1	 C 8 st + 1	 M6X23MM E 8 st + 1
 DW K 4 st+1	 Ø6X30MM L 4 st + 1	 M6X10MM N 12 st + 1	 O 4 st + 1
 ST3,5X12MM P 56 st + 5	 Q 4 st	 R 2 st	 S 4 st + 1
 M4X16MM T 4st+1	 U 1 st	 I 10 st + 1	 I 1 st
 4 st + 1	 Y 1 st	 V 2 st	 1 st
			

Machine Translated by Google

1

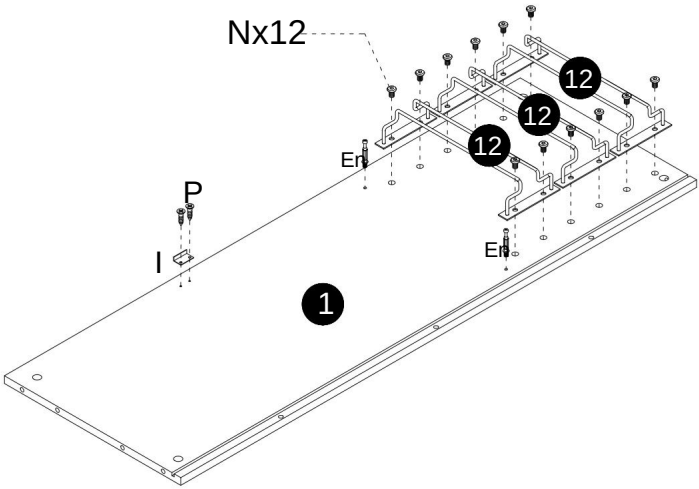



x2



x1




x2




x1

2



x3

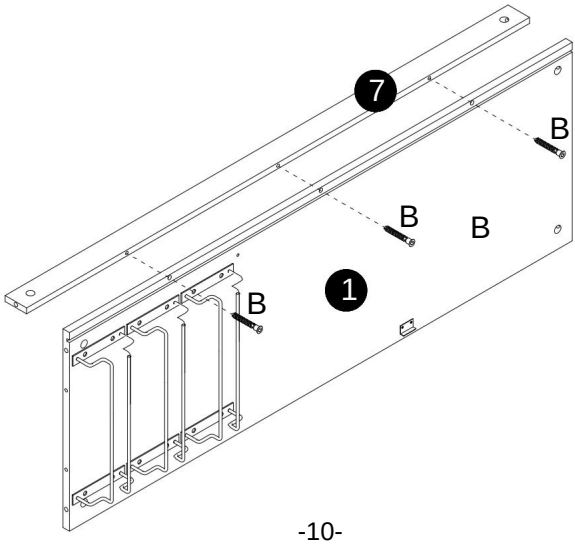


Machine Translated by Google


3



x6

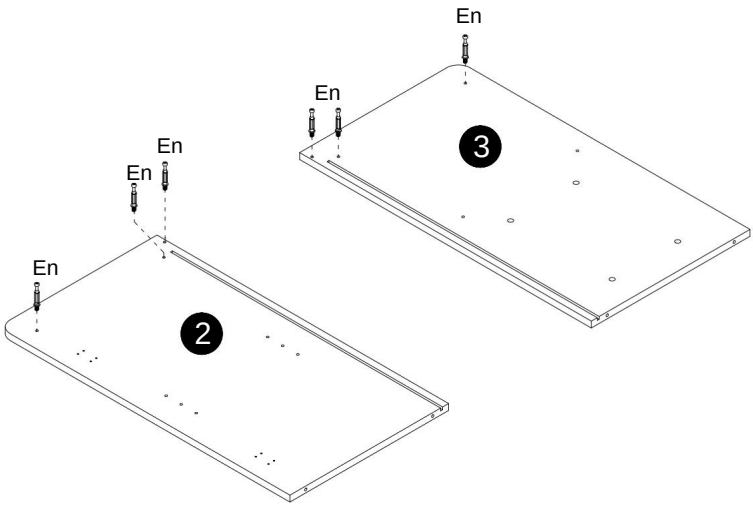

4






x4




x4

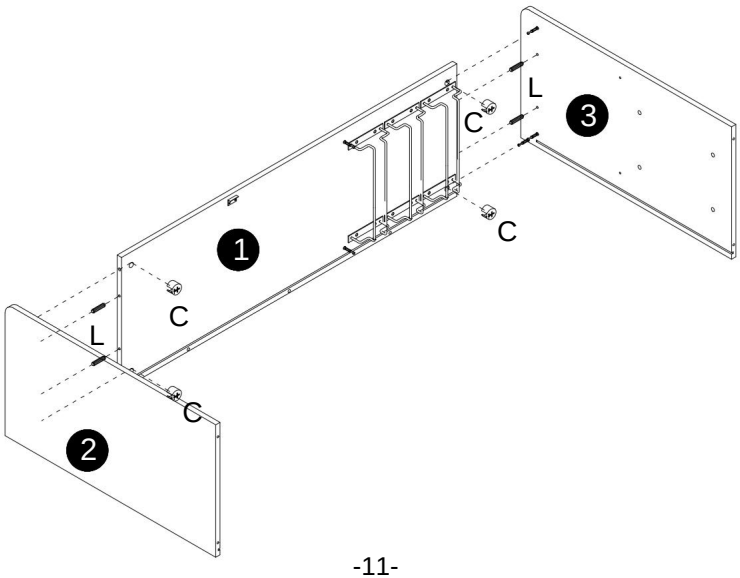


Machine Translated by Google

5







x2

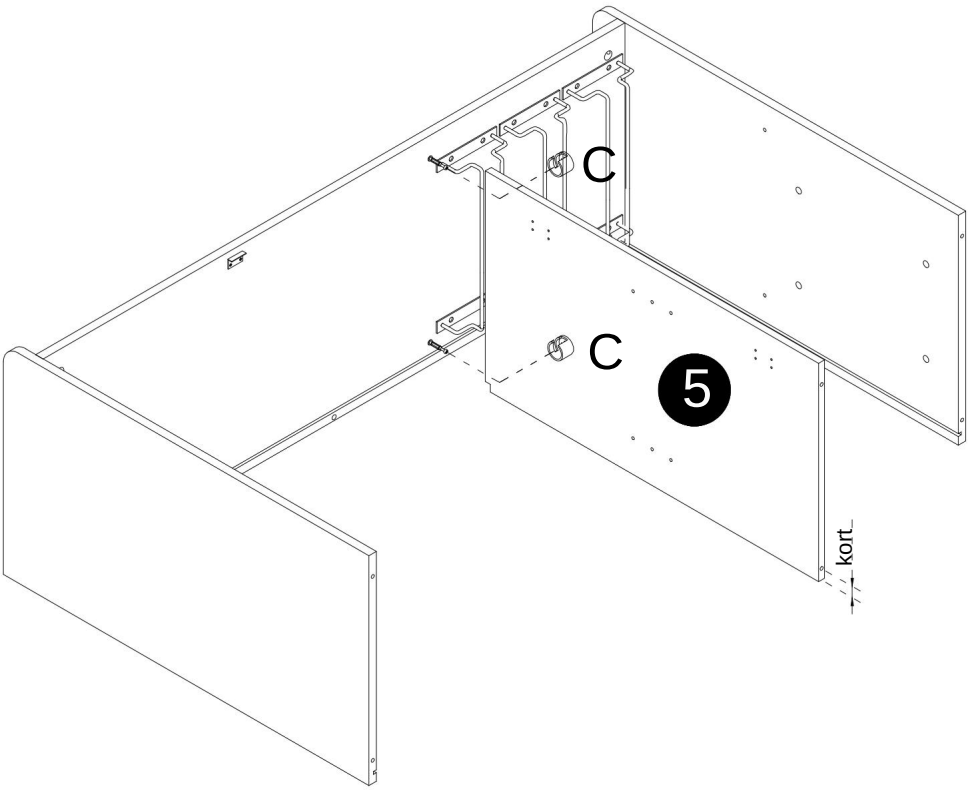


6

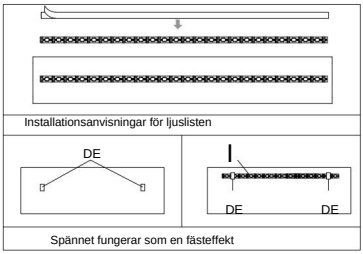




Ljusremsan är installerad under lagerplattan

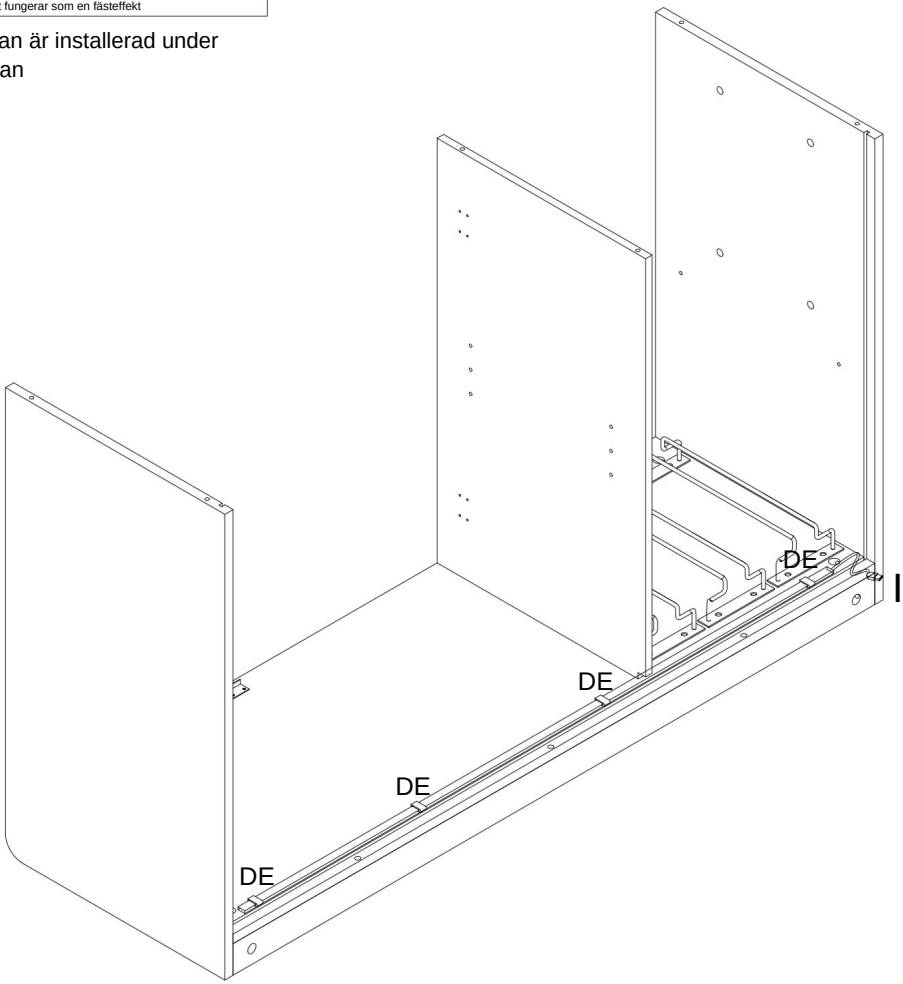


Machine Translated by Google

7






x2

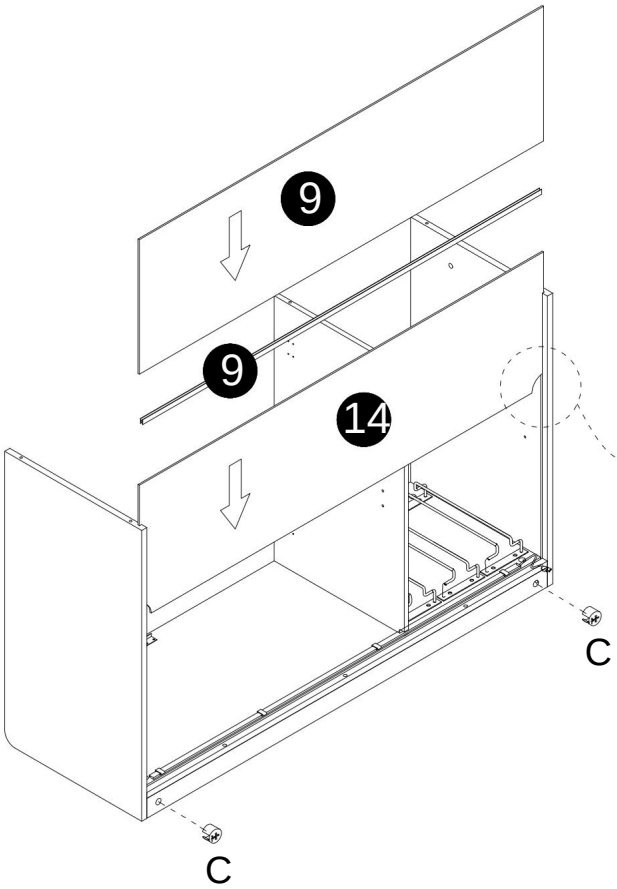



Var uppmärksam på hålens riktning

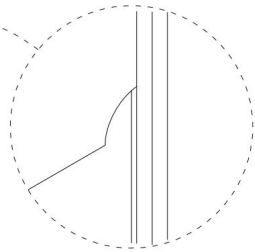

Machine Translated by Google


8




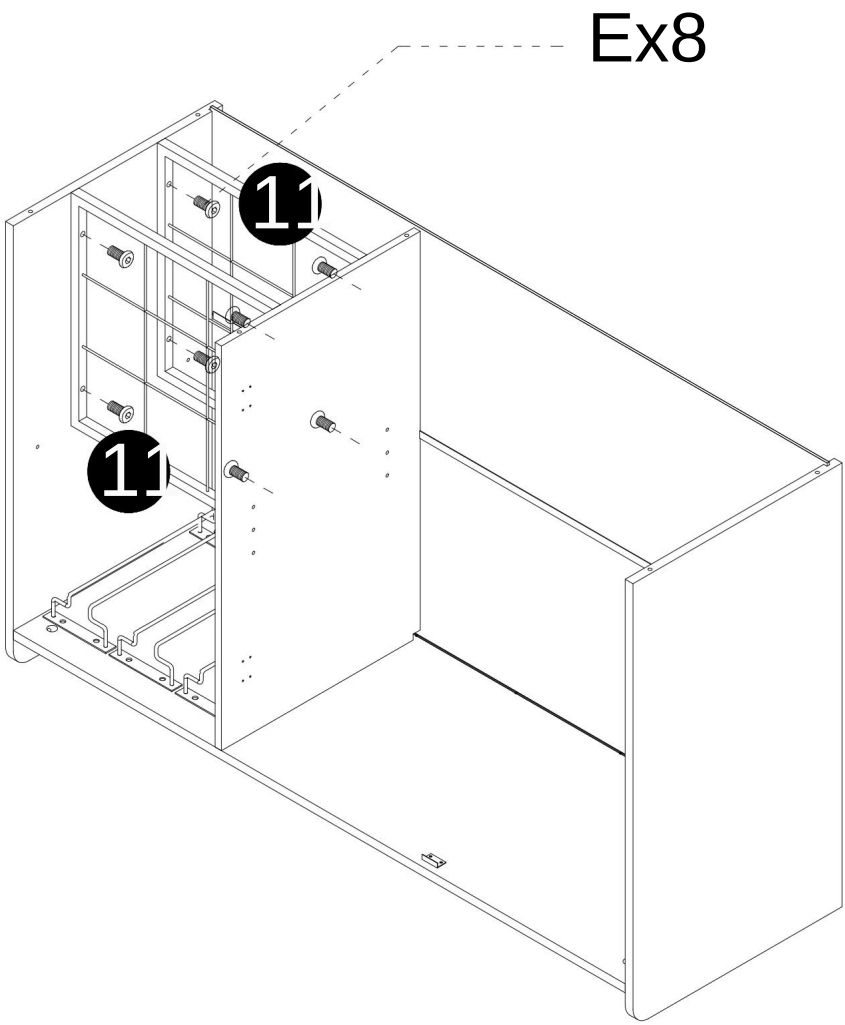


Machine Translated by Google


9

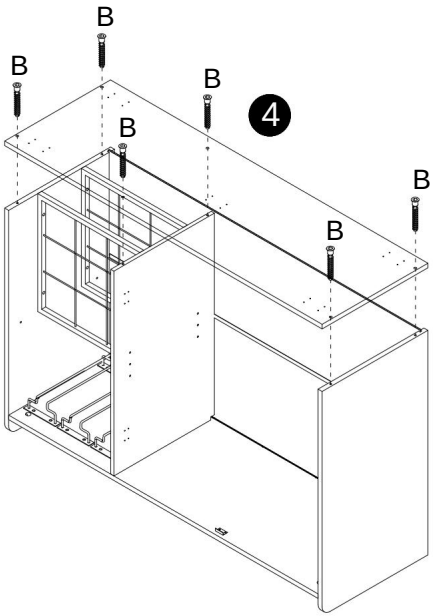




10

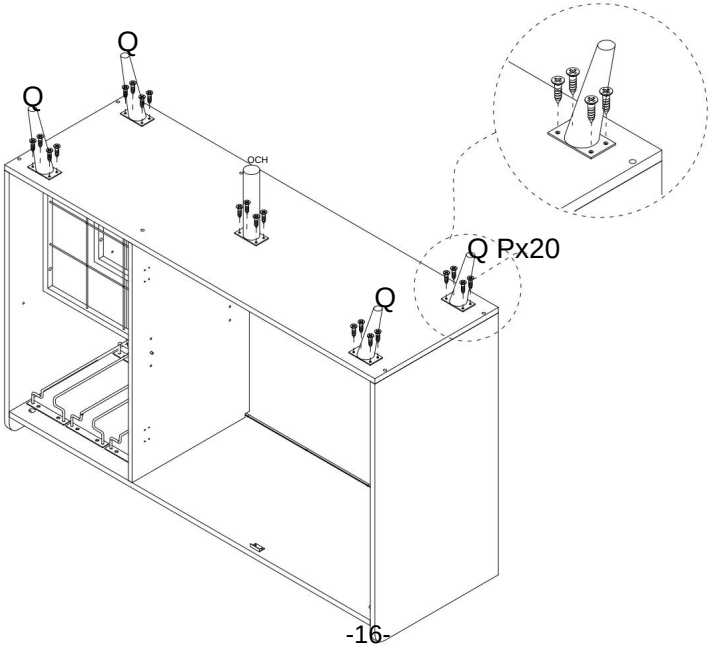




Machine Translated by Google

11

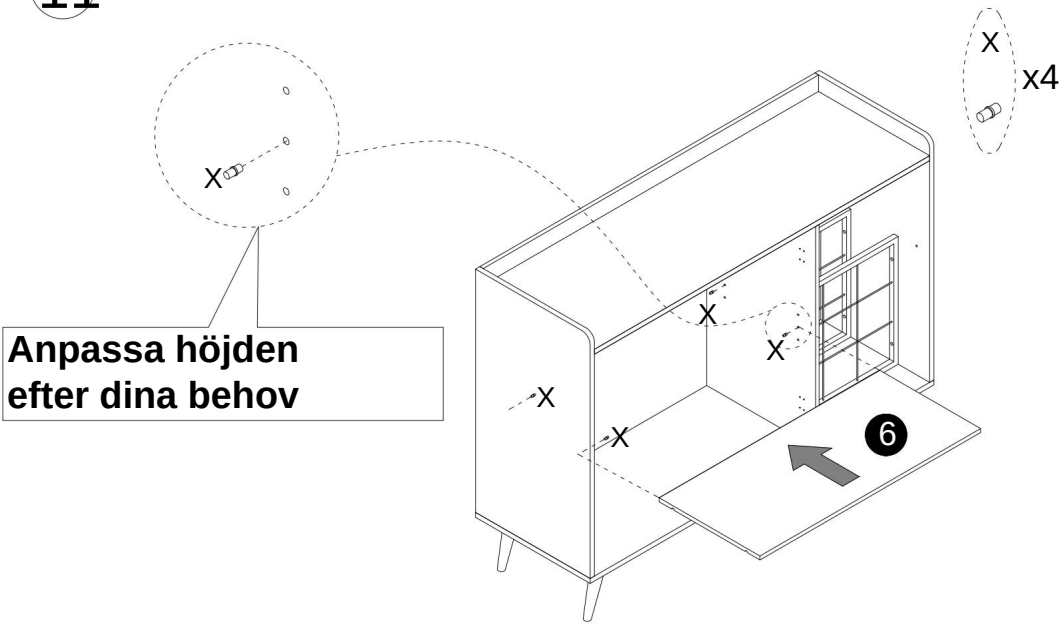


12

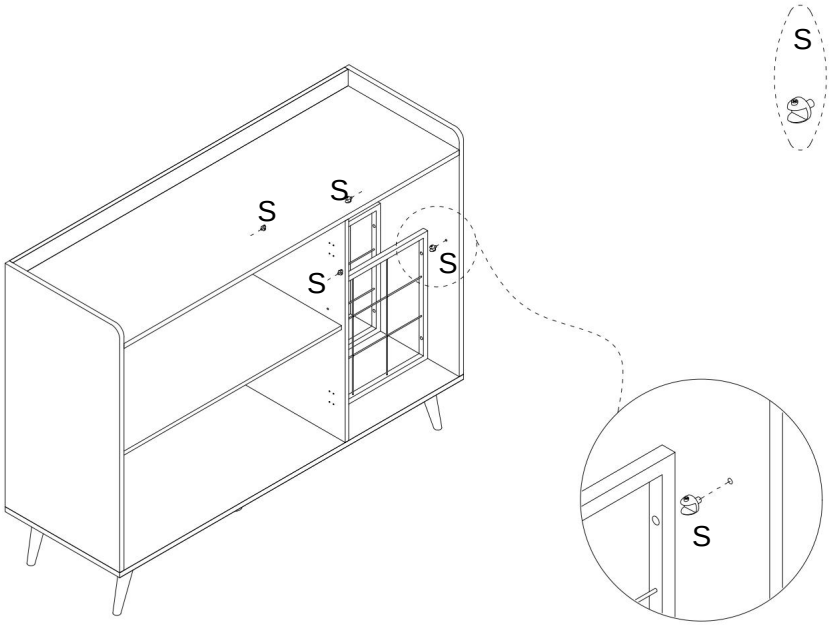


Machine Translated by Google


13

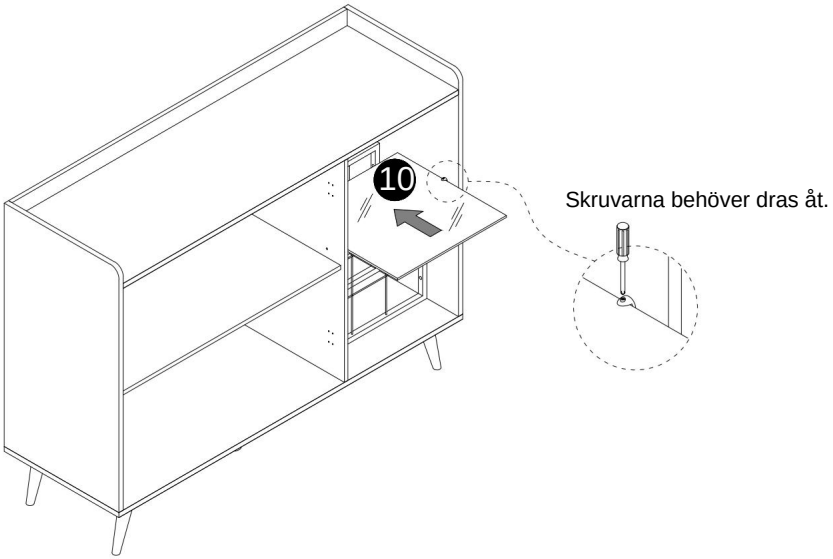

14

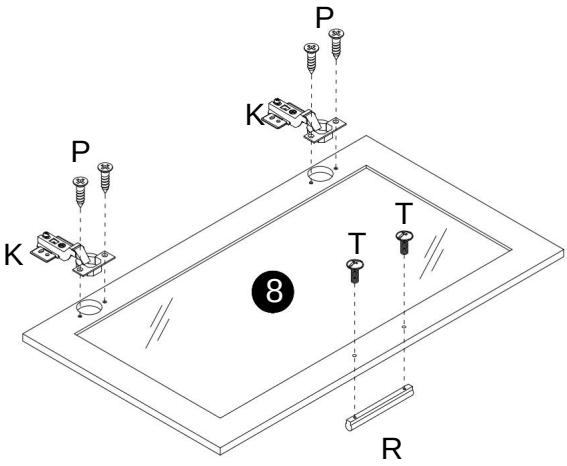



x2




Machine Translated by Google


15



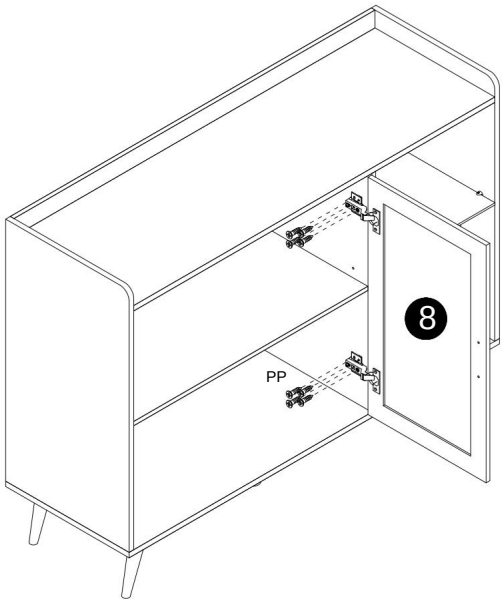

16



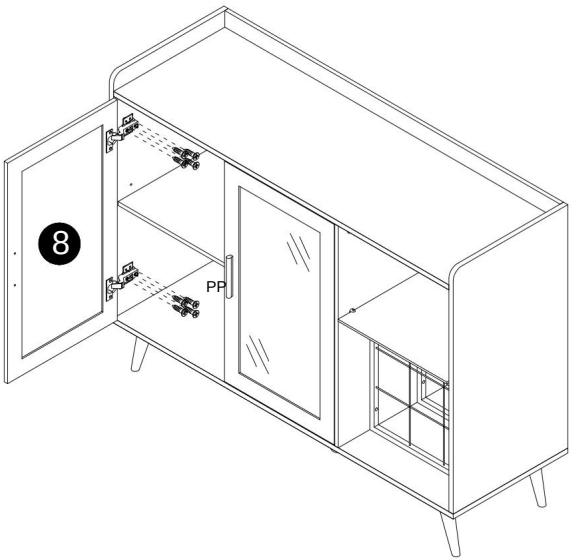


Machine Translated by Google

17

I x10


P x10

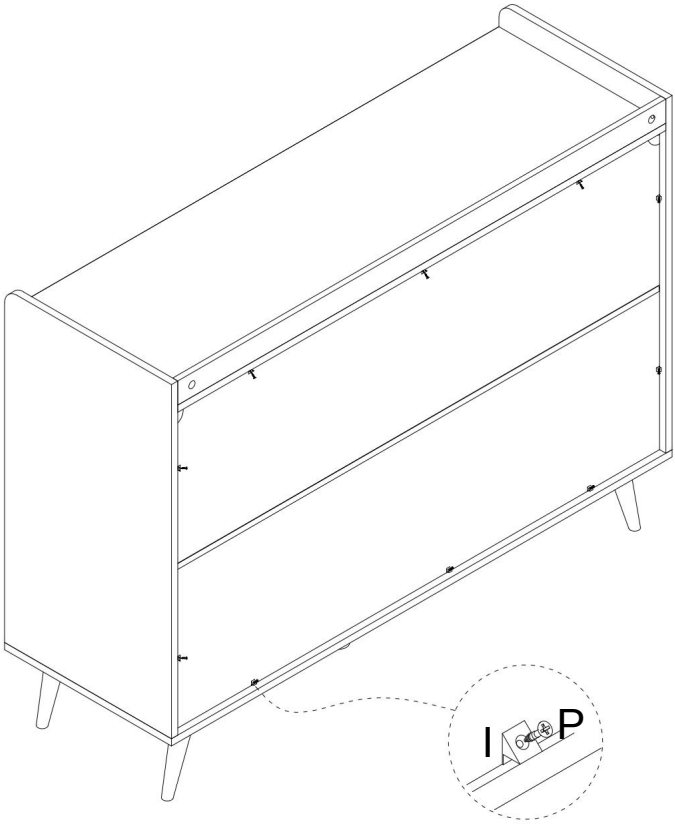


Machine Translated by Google

Justeringsmetod för dörrgångjärn


Metod 1:

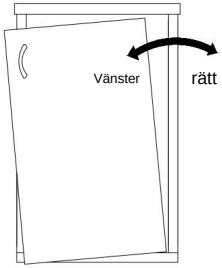


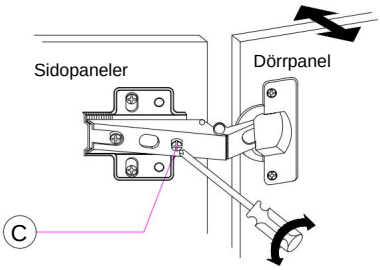

Flytta dörren åt vänster eller höger: 1. Vrid C-skruven medurs med en skruvmejsel för att flytta dörrpanelen åt vänster. 2. Vrid C-skruven moturs med en skruvmejsel för att justera dörrpanelen så att den flyttas åt höger.

Metod 2:

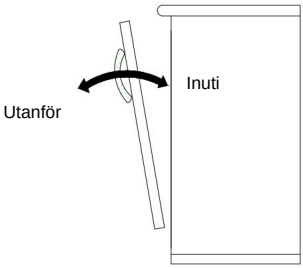


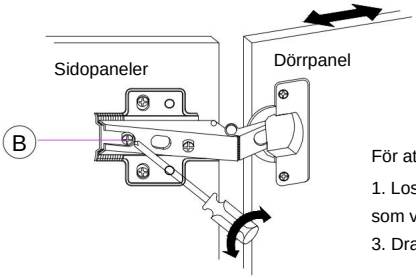


För att flytta dörren in eller ut:

1. Lossa skruv B med en skruvmejsel, som visas i figur 2. Flytta dörren till rätt position. 3. Dra åt skruvarna igen.

Metod 3:

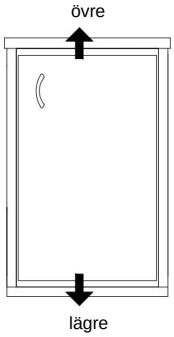


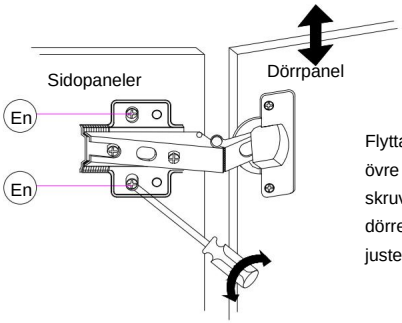



Flytta dörren upp och ner: 1. Lossa de övre och nedre skruvarna A med en skruvmejsel, som visas i figur 2. Flytta dörren till rätt position och justera den. 3. Dra åt skruvarna igen.


Machine Translated by Google


Montera tippningsskyddets beslag

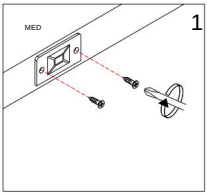

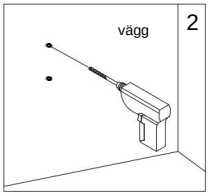


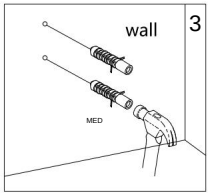

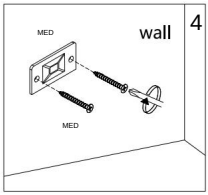







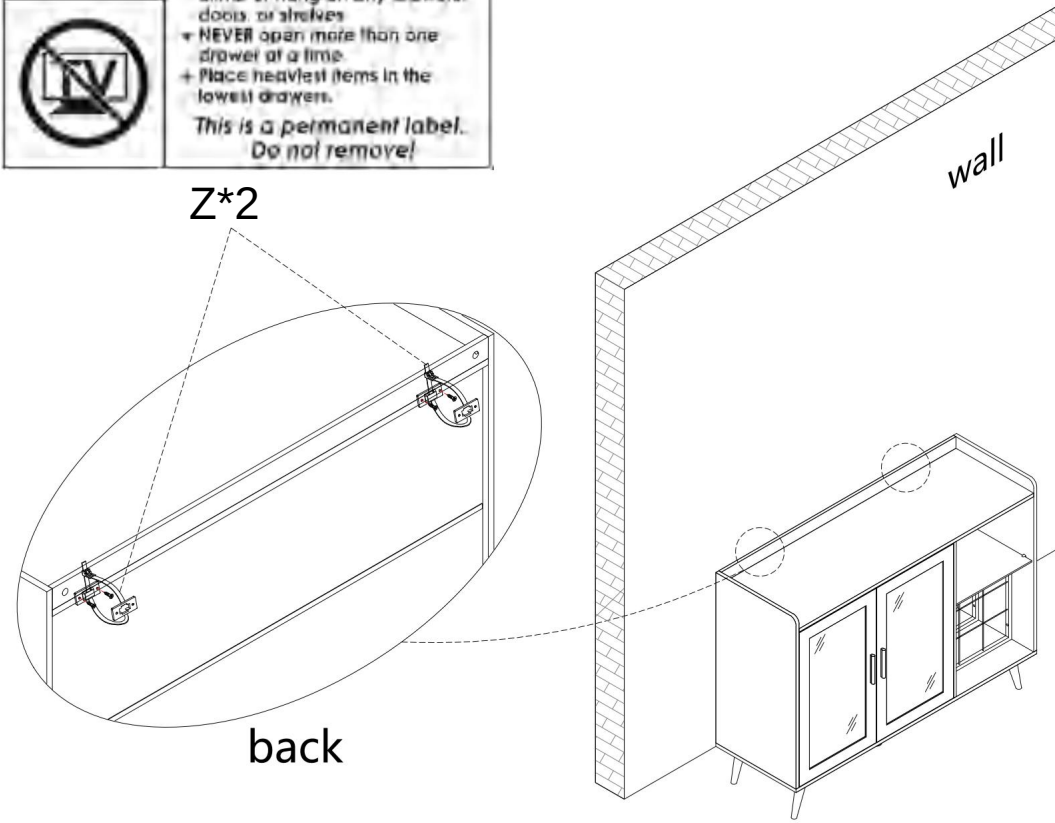

Machine Translated by Google

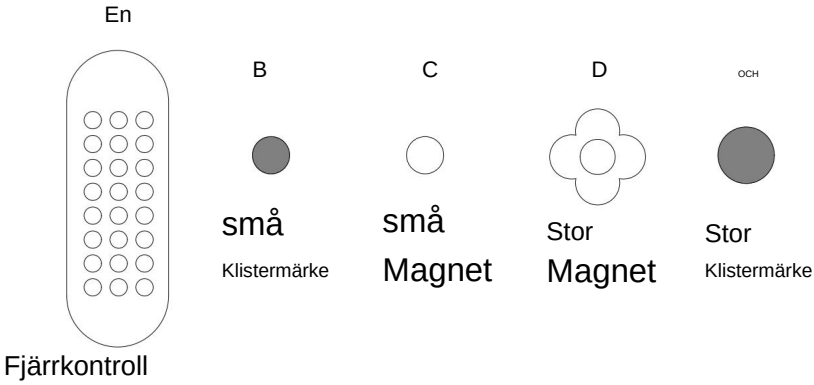

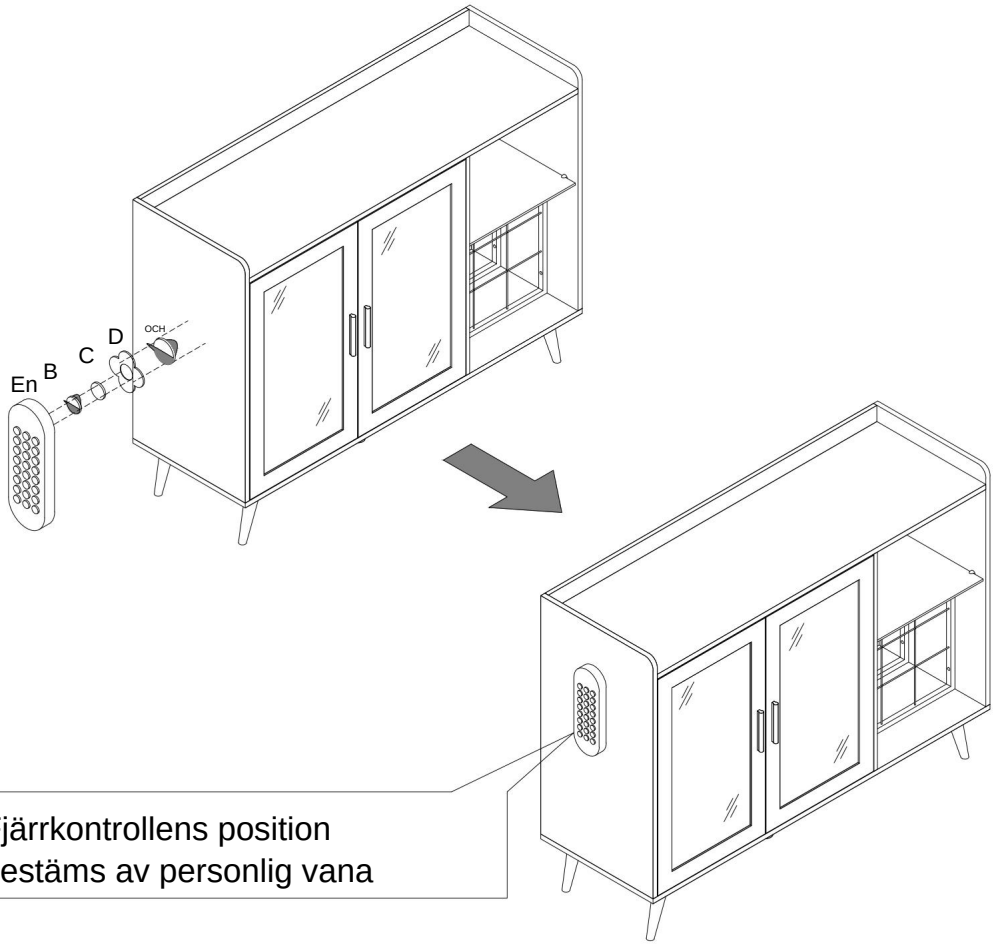

Machine Translated by Google

