
Get in Touch

support@cozibb.com

Manufacturer: Shenzhen Guiyang Network Technology Co., Ltd
Address: 1404K3, East Block, Shengtang Commercial Building, Futian District, Shenzhen, China
MADE IN CHINA Rev_1.1

Cozibb

4-IN-1 KIDS **SLIDE AND SWING SET**

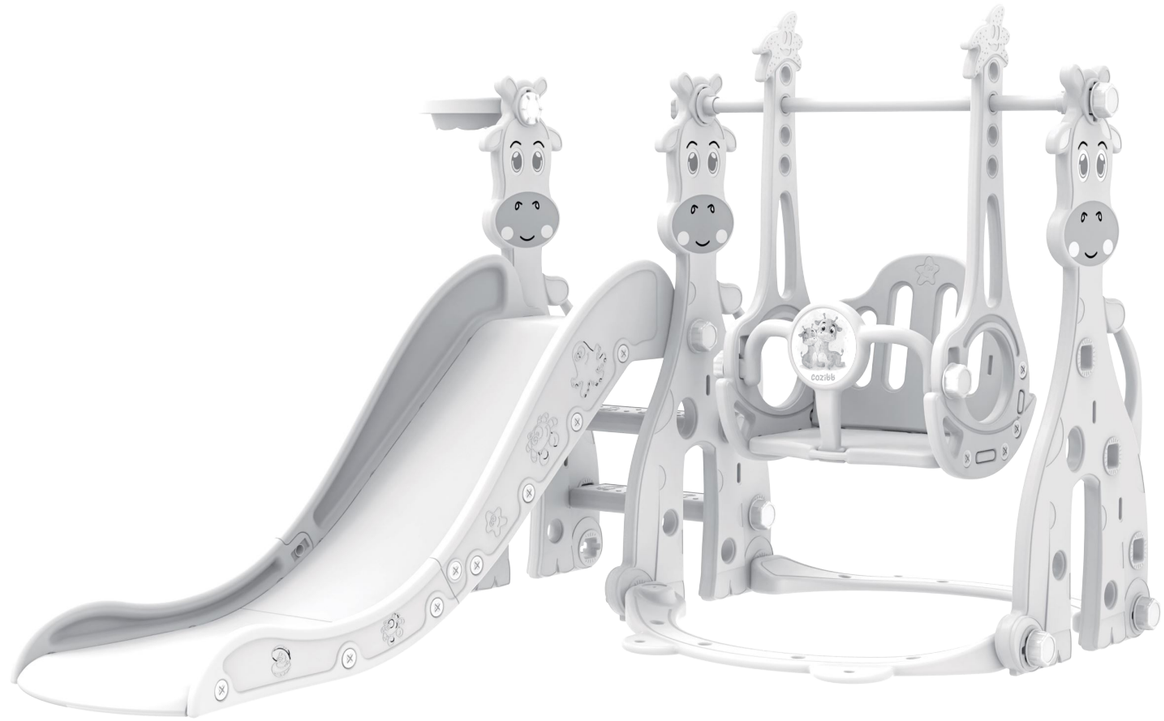

Model: CZ-SS01

User Manual

⚠ WARNING

This toy is to be assembled by an adult. It contains potentially hazardous sharp edges or points, or small parts in an unassembled state. Keep unassembled parts out of reach of children.

IMPORTANT! READ BEFORE USE AND SAVE FOR FUTURE REFERENCE.

IMPORTANT SAFETY CAUTIONS

WARNING **READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE**



Adult assembly required. Keep unassembled parts out of reach of children.



Never leave your child unattended. On site adult supervision must be provided for children at all times.

- Warning! The children must not use the slide and swing set until properly installed.
- DO NOT use on sloping ground. Use only on flat surfaces. Place a non-slip mat under for safety.
- DO NOT install over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the slide and swing set user.
- DO NOT use the slide and swing set if any part is missing, damaged, or worn.
- Check the slide and swing set for any wear and tear before each use. Stop using it at first sign of damage or if parts become detached.
- Fully tighten all bolts and nuts before use. Regularly check and make sure all bolts and nuts are fully tightened.
- Choking Hazard – Keep all bolts and small parts away from children and pets.
- Instruct children not to walk close to, in front of, behind, or between moving items.
- Instruct children to avoid swinging empty seat.
- Instruct children not to use the slide and swing set in a manner other than intended.
- Instruct children not to get off the swing while it is in motion.
- Instruct children not to climb when the slide is wet.
- Instruct children to remove their bike or other sports helmet before playing on the slide and swing set.
- DO NOT allow children to wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- Dress children with well-fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.
- Disassemble and dispose of the slide and swing set in such a way that no unreasonable hazards will exist at the time the slide and swing set is discarded.
- Dispose of all packaging materials properly. Keep away from children and pets.
- To clean the slide and swing set, simply wipe with a dry, soft cloth.


SAVE THESE INSTRUCTIONS


Max Load	110 lbs / 50 kg
For Children	18-36 months old
Unfolded Size	54.1 x 63.8 x 37.5 in / 137.5 x 162 x 95.2 cm

IN THE BOX

Check if all accessories are included. Contact us via email: **support@cozibb.com** if there is any part missing or damaged.


Slide & Swing Set Parts

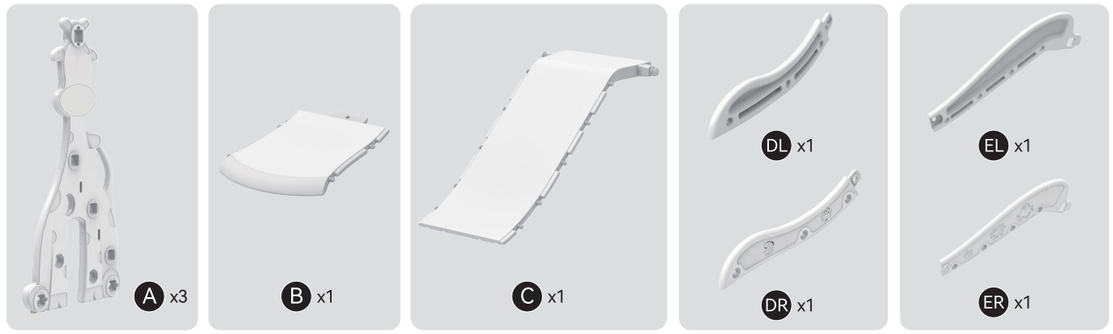

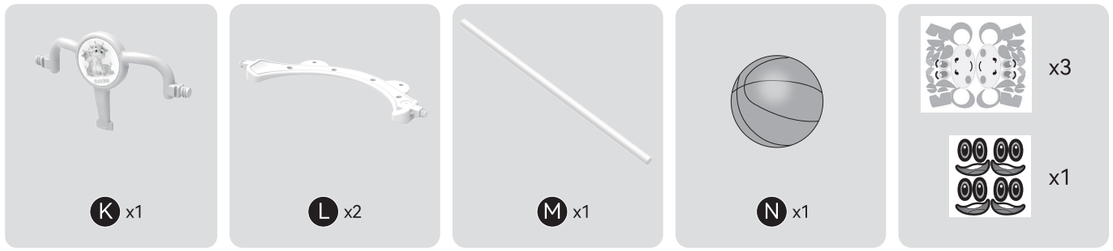

Hardware Kit


The plus numbers are the additional parts provided in case of missing or damaged ones.

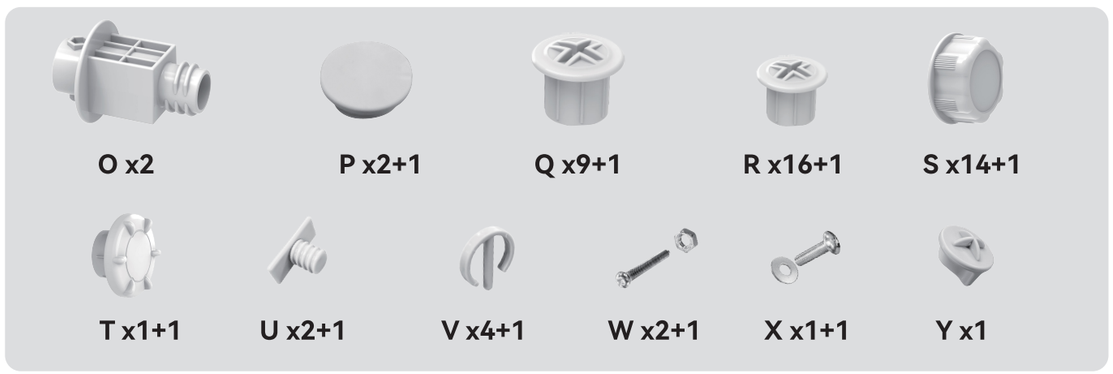

ASSEMBLY


- Slightly tighten all parts during assembling and firmly secure after all parts are installed.
- Any questions concerning assembly, contact our Customer Support via email: **support@cozibb.com** for video tutorial.

1 X x1

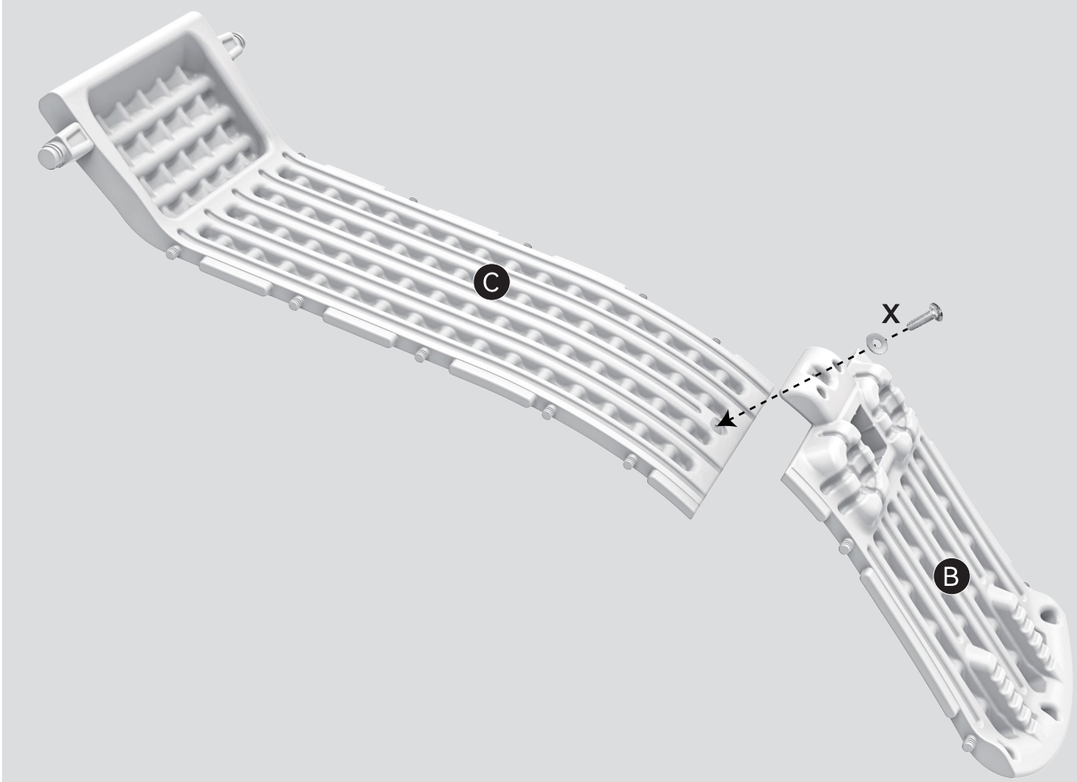


2

R x2 U x2 Y x1

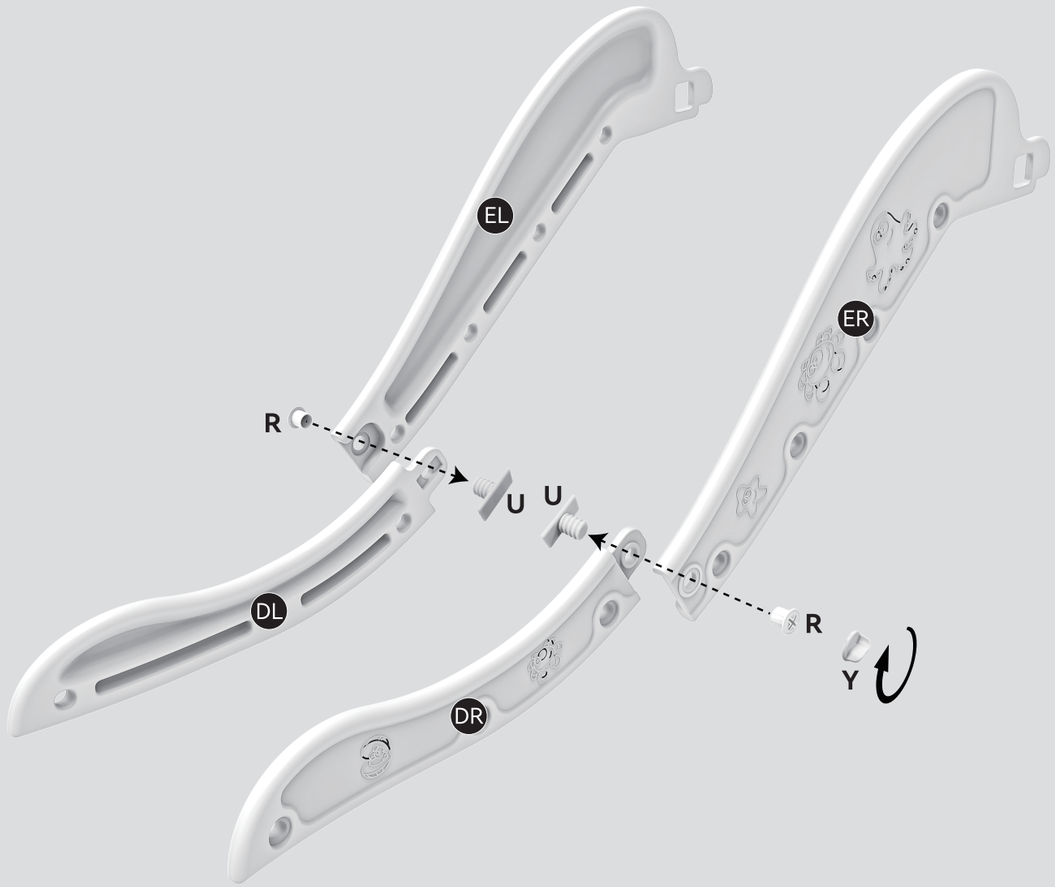


3

R x14 Y x1

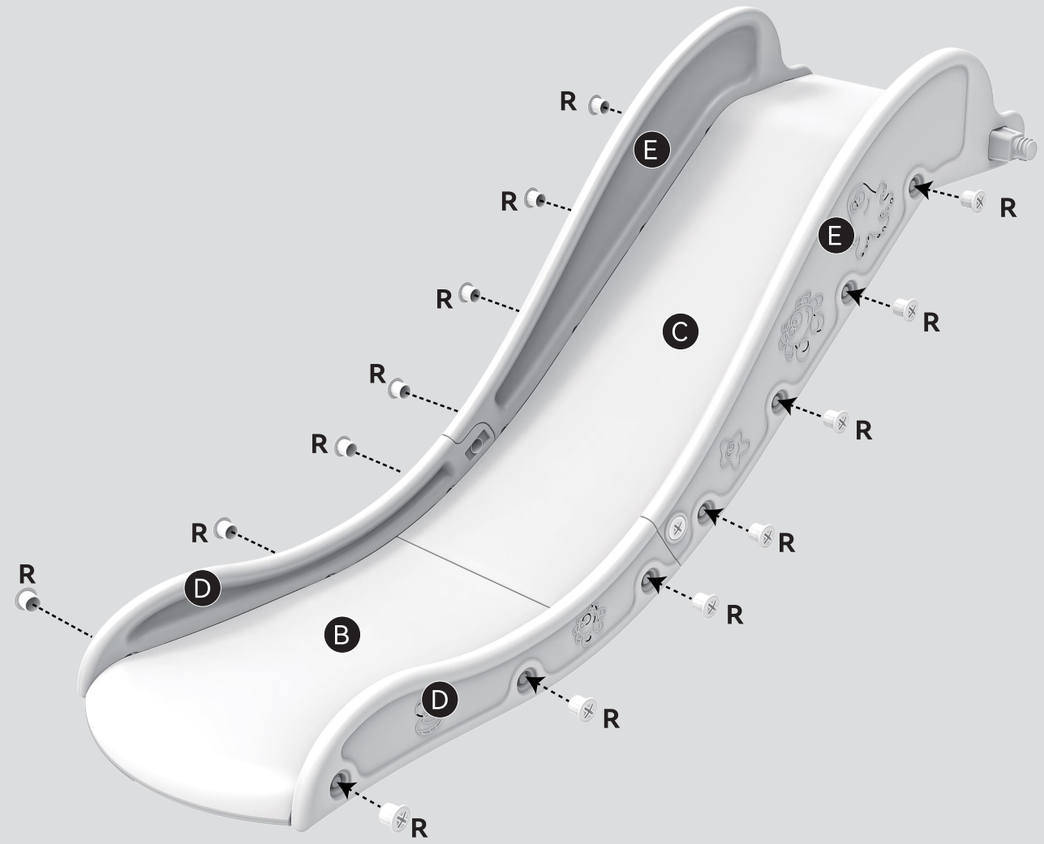

4

S x6

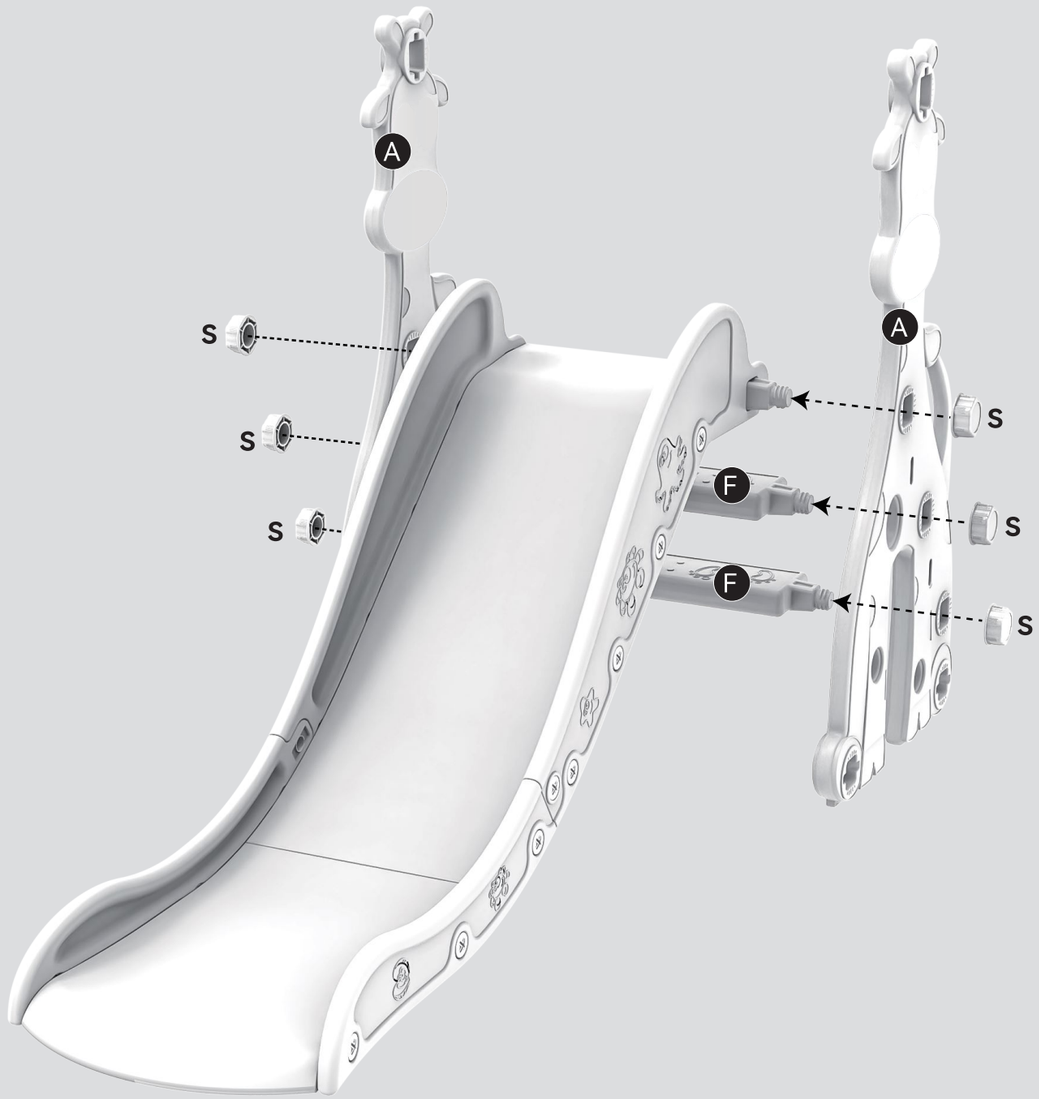

5



Q x1




Y x1




6

S x2 Q x8 Y x1

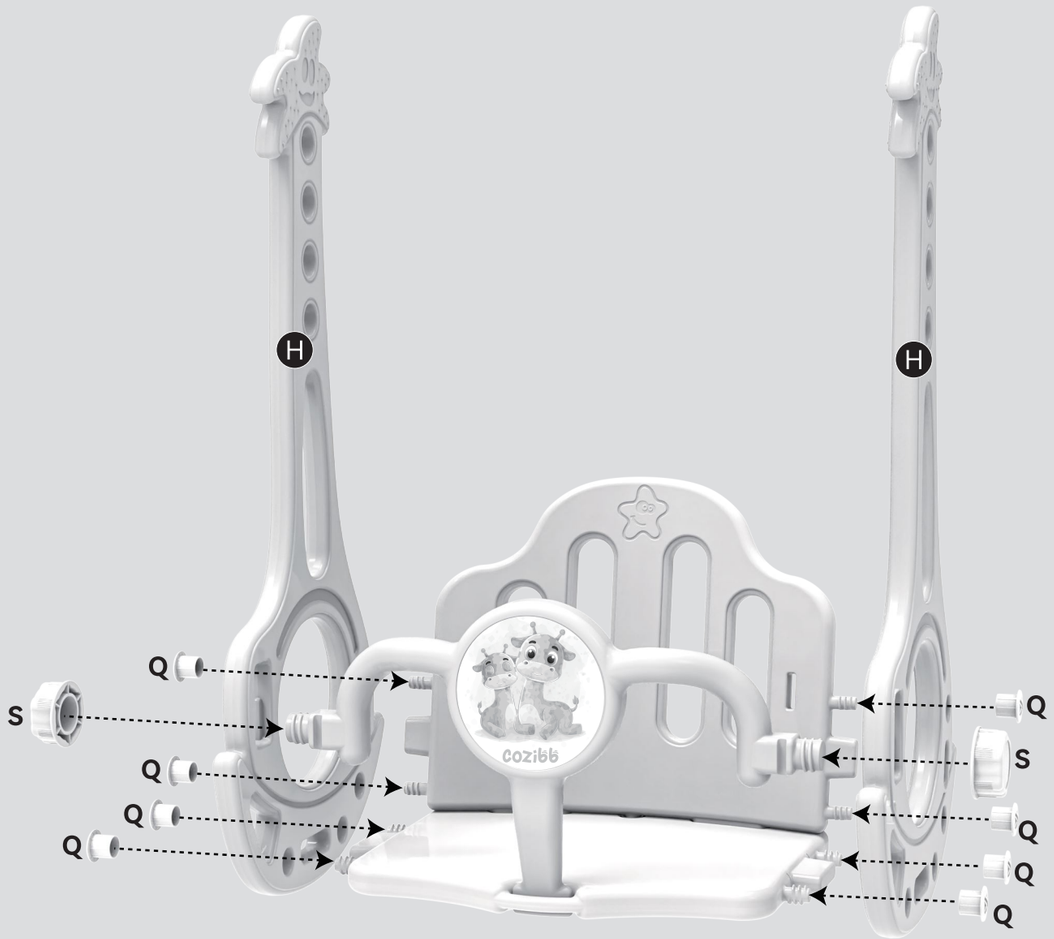


7

V x4

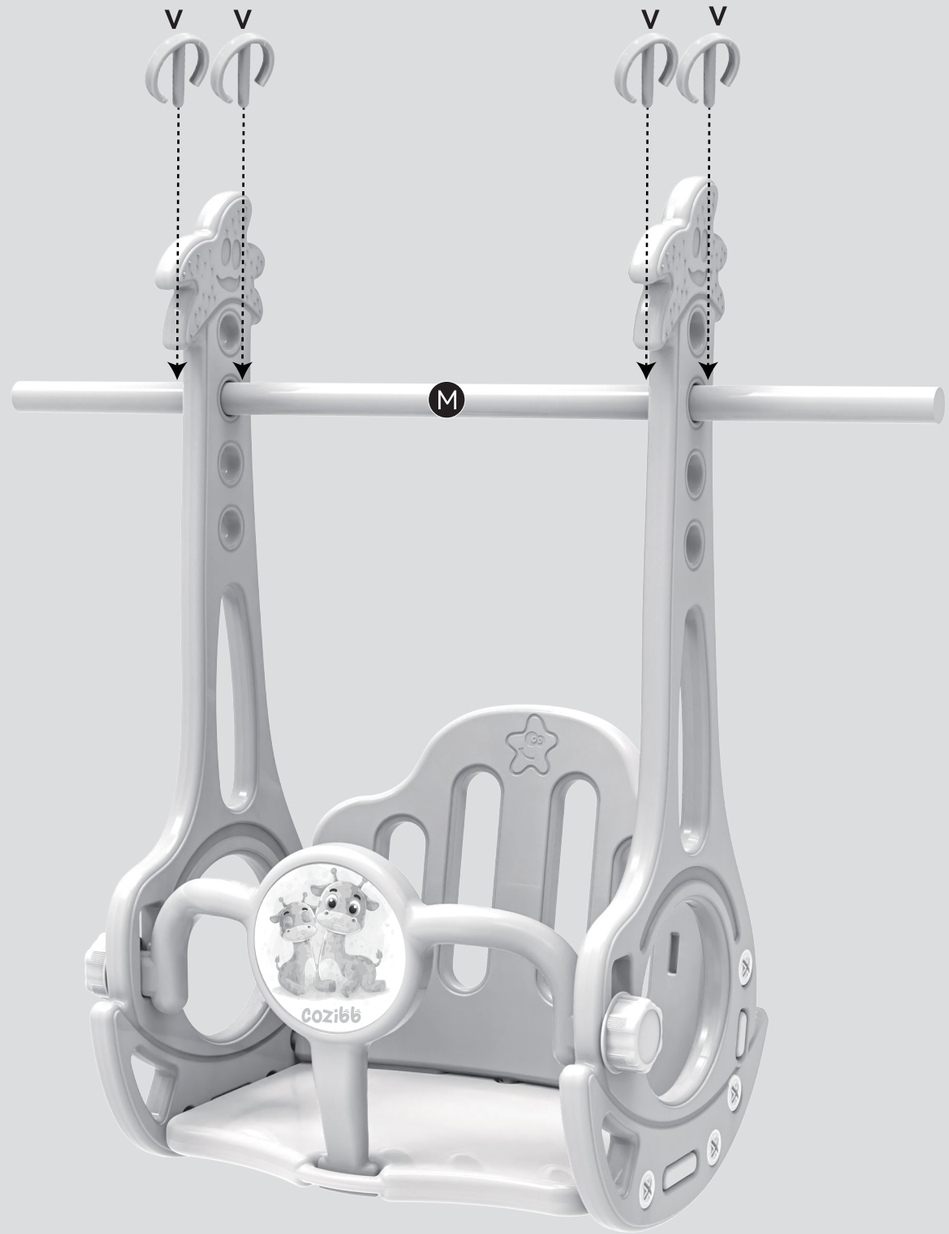


8



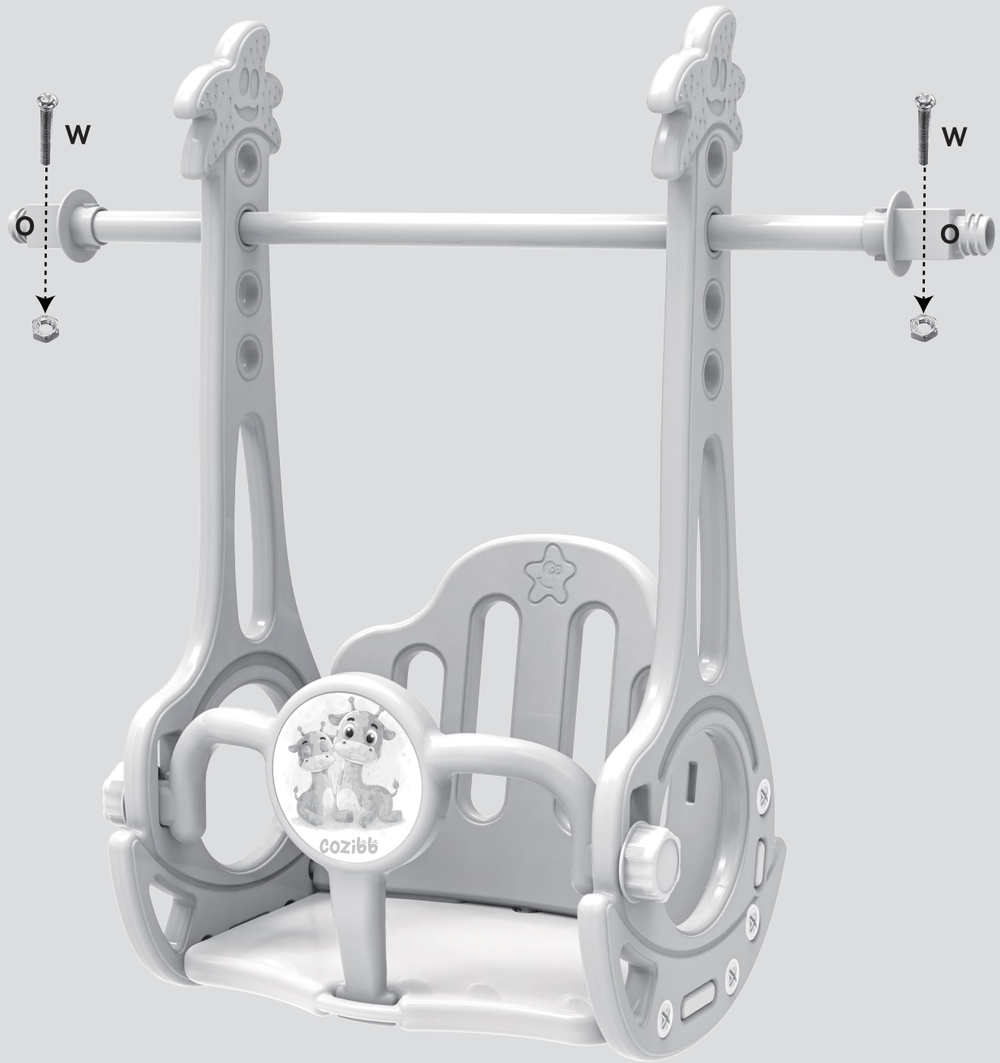


9



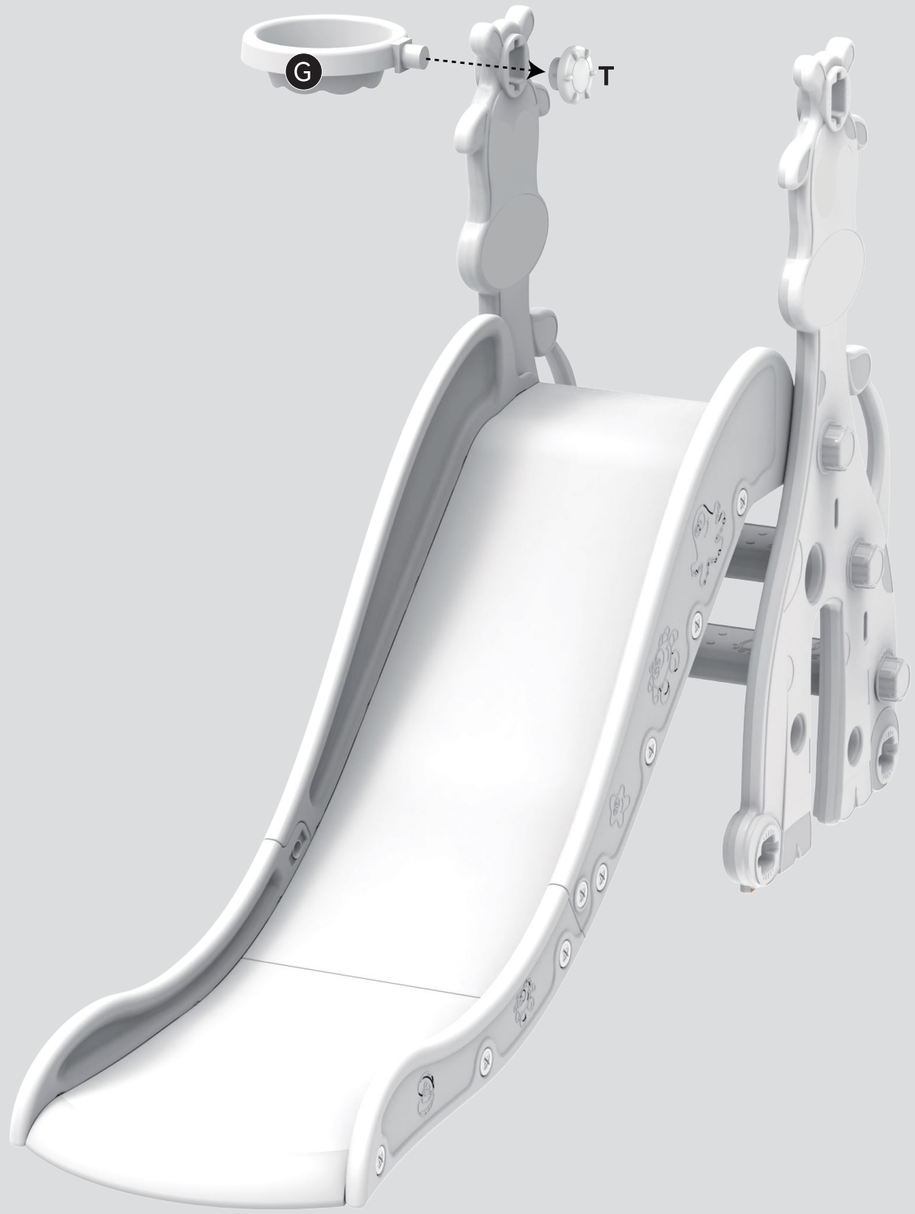


10

S x6

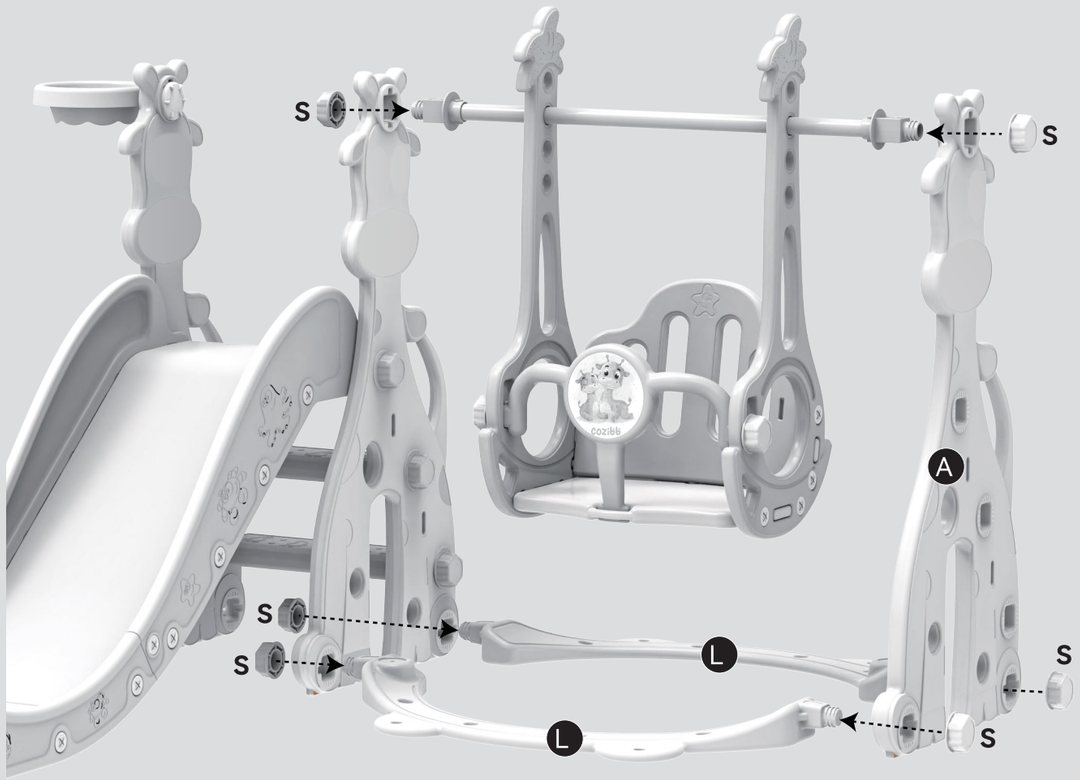

11

P x2

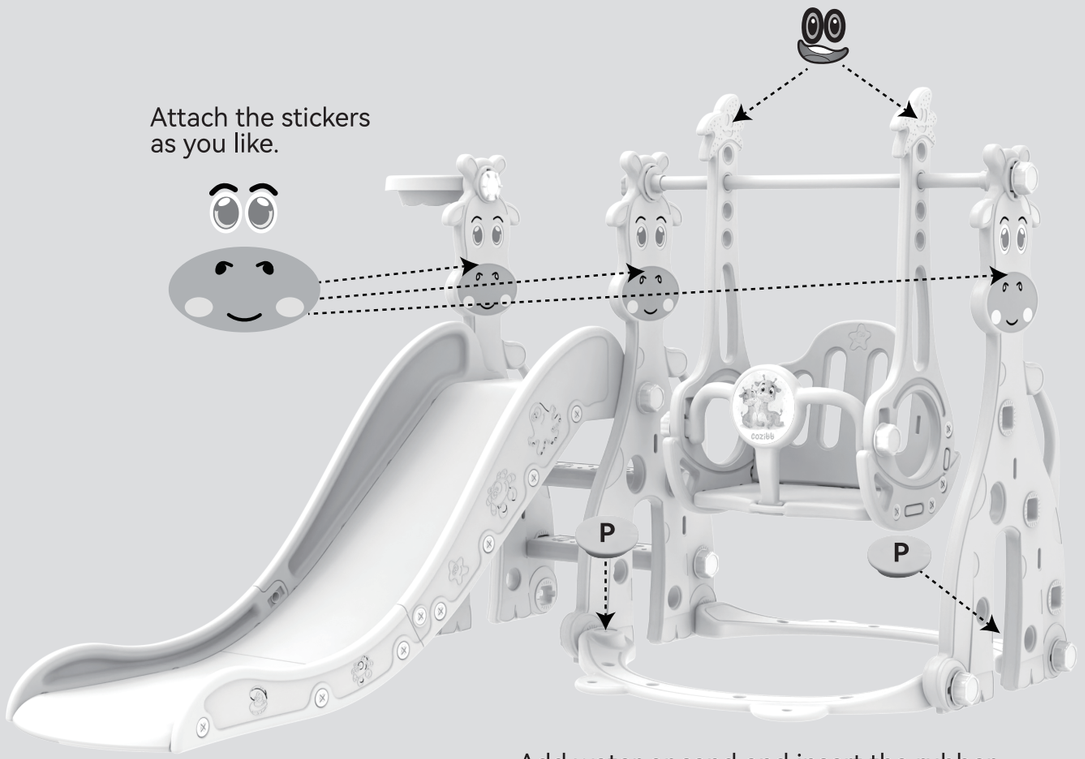

Attach the stickers as you like.

Add water or sand and insert the rubber cap P to make the swing more stable.