ASSEMBLY INSTRUCTION

ASSEMBLY PROGRAM

1

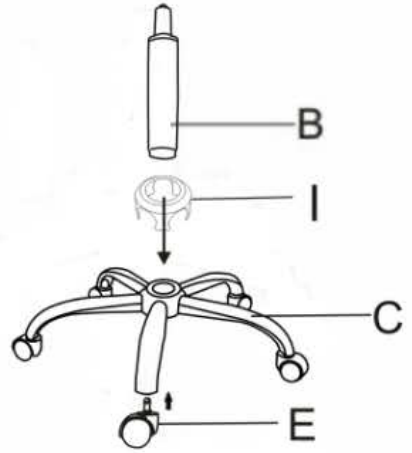

2

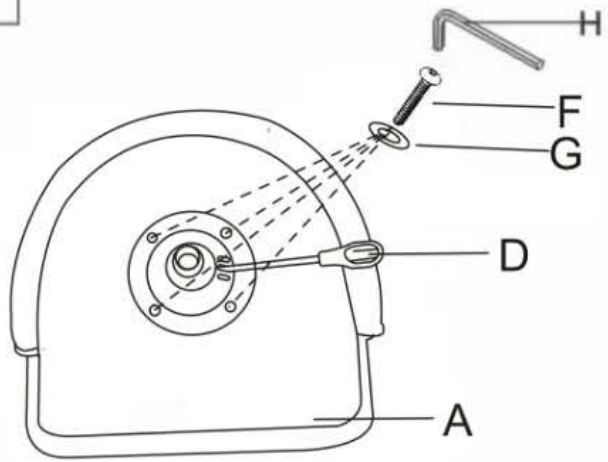

3

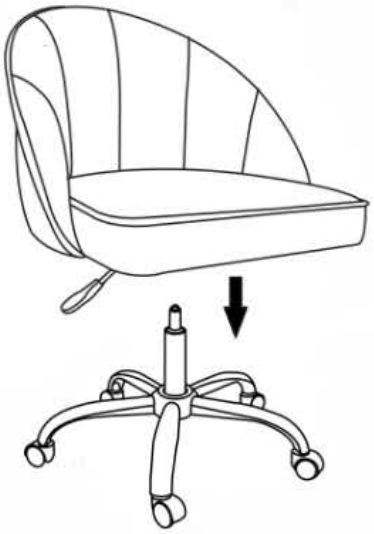

4

PARTSxQTY

Ax1 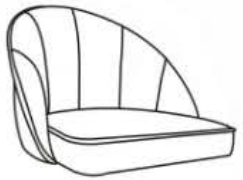	Ex5
Bx1	Fx4
Cx1	Gx4
Dx1 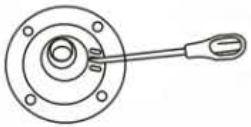	Hx1
	Ix1