
Ceiling fan light installation instructions

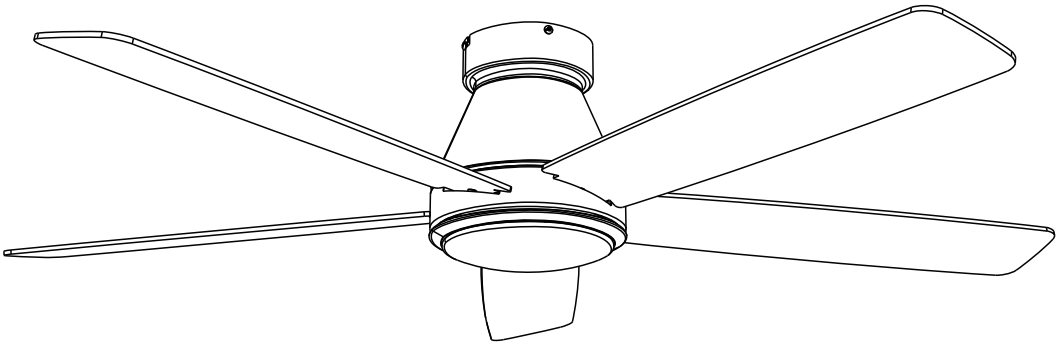

Thank you for choosing our Ceiling fan light!
Please be sure to read the instructions carefully to fully understand the installation and usage methods of this product.

Dimmable with remote | Timer function | Silent operation | 6-speed settings | Remote control | App control



【EN】

Before assembling or installing the fan light, please read this manual carefully. To ensure a safe and smooth installation process, be sure to read this manual in full, keep it accessible to installers throughout the installation, and store it properly for future reference.

1. All electrical work must be carried out only by a suitably qualified and licensed electrical contractor. This ceiling fan must be installed exclusively by a licensed electrician.
2. This appliance may be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they are supervised or instructed concerning safe use of the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children without supervision.
3. Children must not play with this appliance and should always be supervised when near electrical equipment.
4. Before commencing any electrical work, ensure the power supply is switched off and/or isolated at the distribution board, and that all poles are disconnected.
5. The mounting point for the ceiling fan must be capable of supporting a load of at least 45 kg.
6. The installation location must ensure that the fan blades do not come into contact with any objects or surfaces. A minimum clearance of 30 cm must be maintained between the blade tips and the nearest wall or object. Installing too close to walls or ceilings will also reduce airflow performance.
7. During installation, ensure that the minimum distance between the lowest point of the fan blades and the floor is 2.3 m.
8. The fan light must be properly grounded.
9. The ceiling fan may only be connected to the mains power supply. Fans connected to alternative power systems such as solar, wind, or battery systems are not covered by this warranty.
10. Do not insert any objects into the fan blades while the fan light is in operation, as this may cause damage or personal injury.
11. This product is intended for use in dry, enclosed indoor environments only. It is not suitable for bathrooms or other areas with prolonged humidity. This product is for private household use only. Do not operate in ambient temperatures above 40°C (104°F).
12. Proper performance of the ceiling fan depends on correct product selection and installation in an optimal location. Products that do not meet performance expectations but are otherwise fault-free are not eligible for replacement or return under warranty.
13. Warning: If excessive wobbling or vibration is observed, immediately stop using the fan light and contact the manufacturer, its service agent, or a suitably qualified professional.


EN Product data

Material	Ironwork + Plywood + Acrylic
Blade Finish	White / Black / Natural Wood / Walnut
Color temperature	3000K / 4000K / 6500K
Brightness	10%-100%Dimmable
Power	24W
Service life	Over 10,000 hours
Color rendering index (CRI)	CRI>80
Warranty period	1 year

Accessories Section




Round Mounting Plate x1

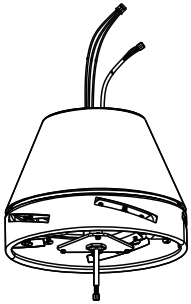


Motor Section x1




Light Source x1



Lampshade x1




Fan Blades x5

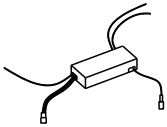

Controller x1PCS




Remote Control x1PCS




Canopy x1




Lamp Plate x1




Tools You Need

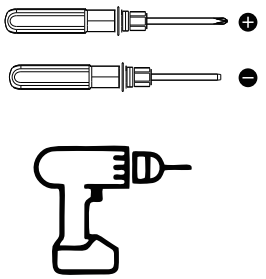



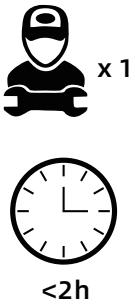


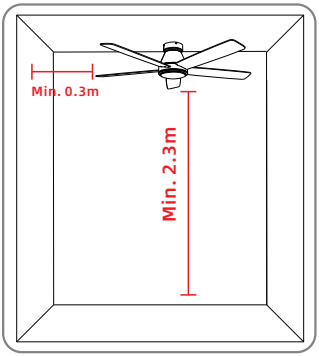

What to Expect with Your Installation




Installation on sloped ceilings is not supported.

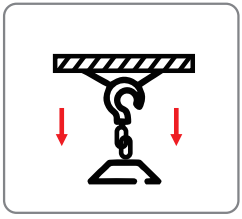

Ensure the ceiling is sufficiently sturdy.



You may need assistance from others to complete the installation.

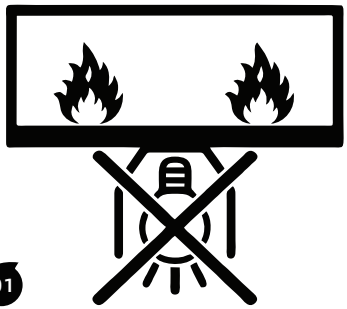


Note: This product is not suitable for direct installation on ordinary combustible surfaces.

WARNING!


Installation must be carried out by certified professionals. Users are not allowed to install it themselves!

1.Disconnect the power supply before installation. 2.Installation must be carried out by qualified professionals. 3.Ensure the mounting surface is structurally solid and reliable. 4.Use only original factory-supplied mounting accessories. 5.Before powering on, ensure all components of the lamp body are securely installed.

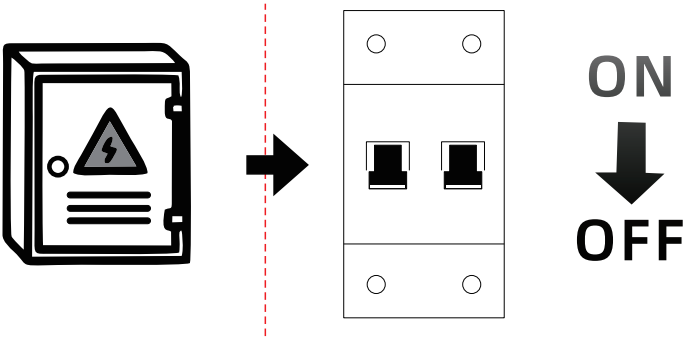


02


Remove the fan blade screws

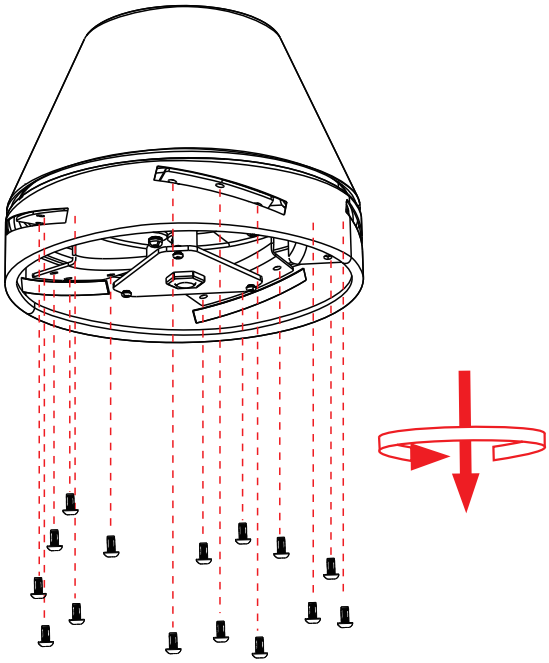


03

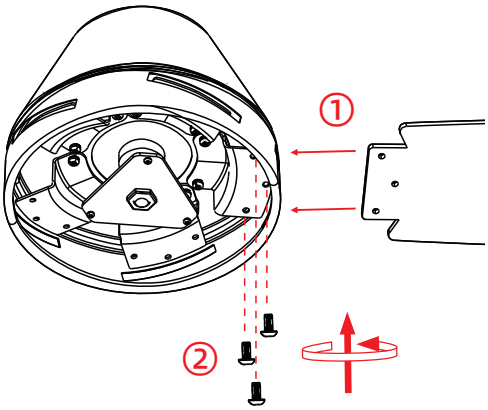

Install the fan blades

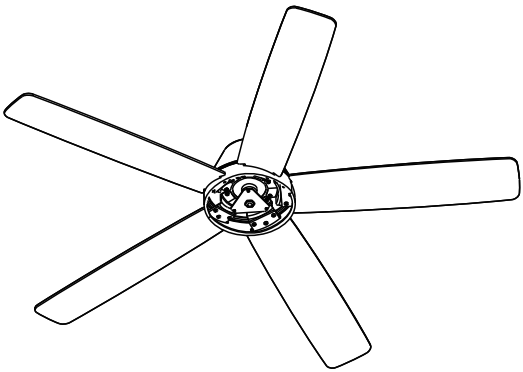


04

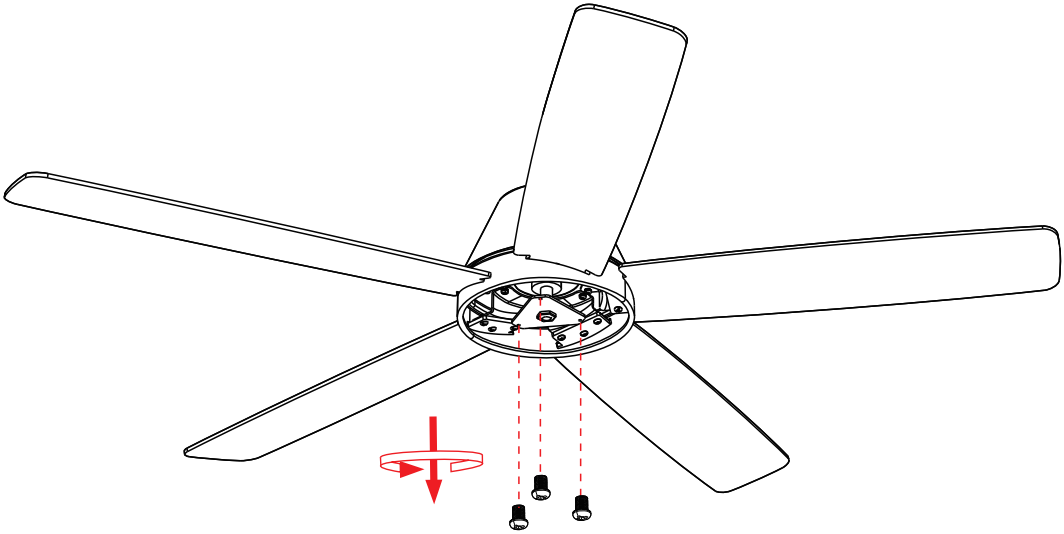


First remove the lamp plate screws ;

05

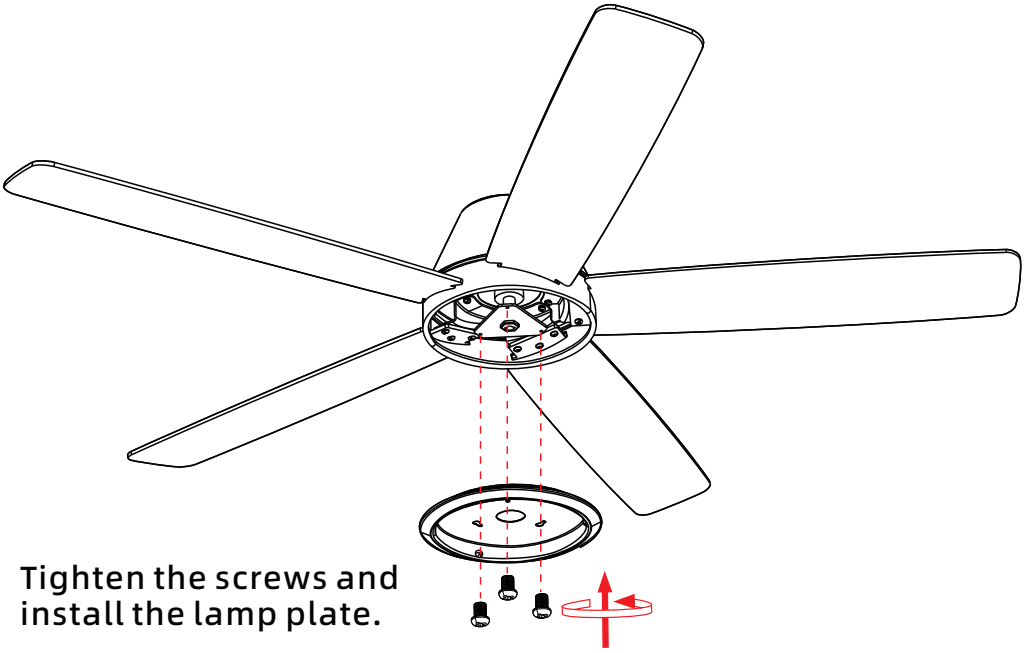


Tighten the screws and
install the lamp plate.

06

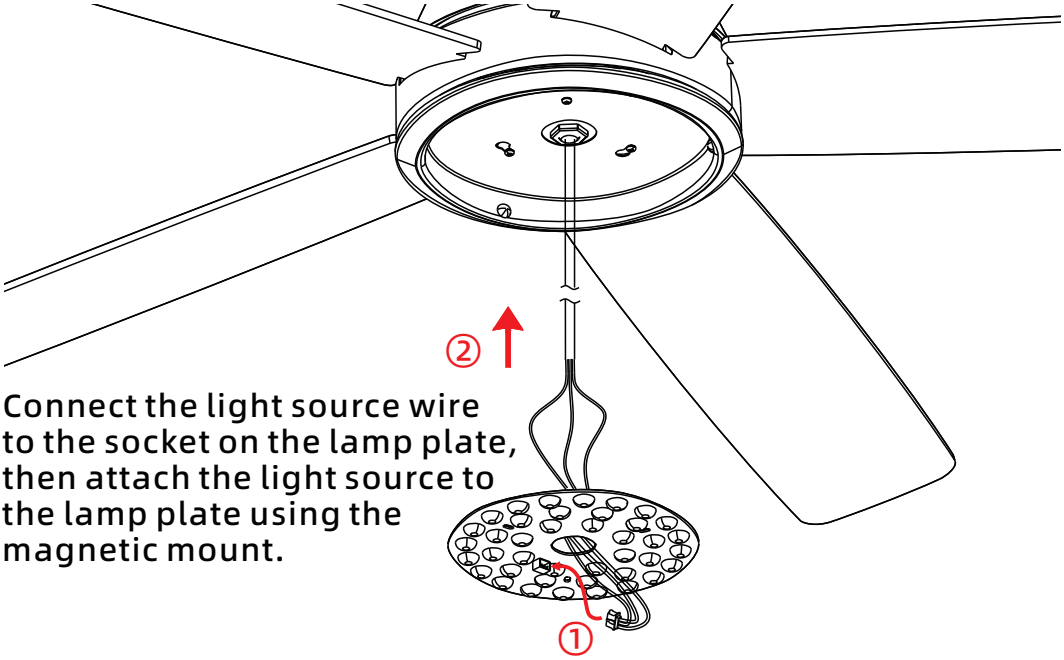


Connect the light source wire to the socket on the lamp plate, then attach the light source to the lamp plate using the magnetic mount.

07

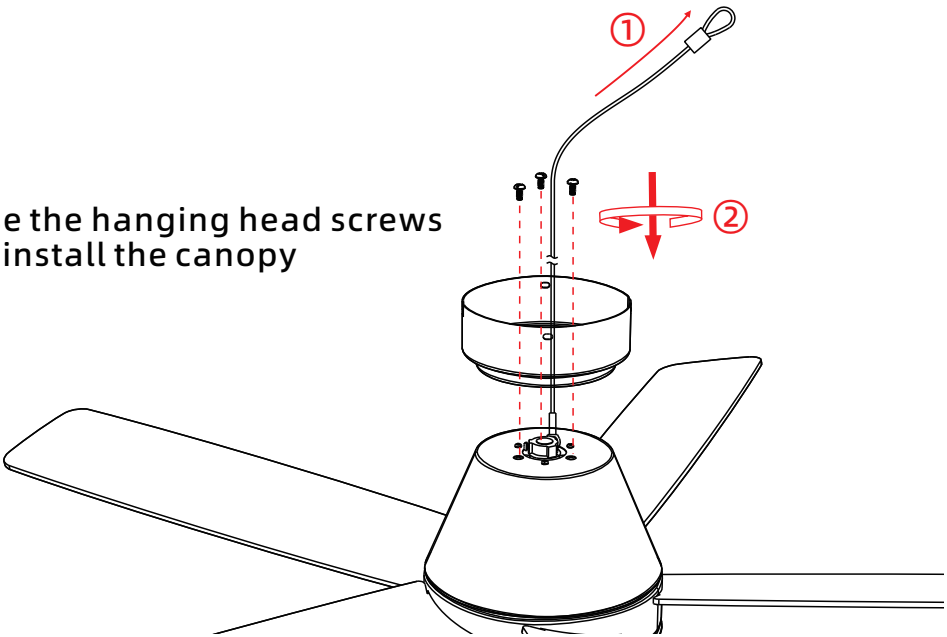


Use the hanging head screws to install the canopy

08

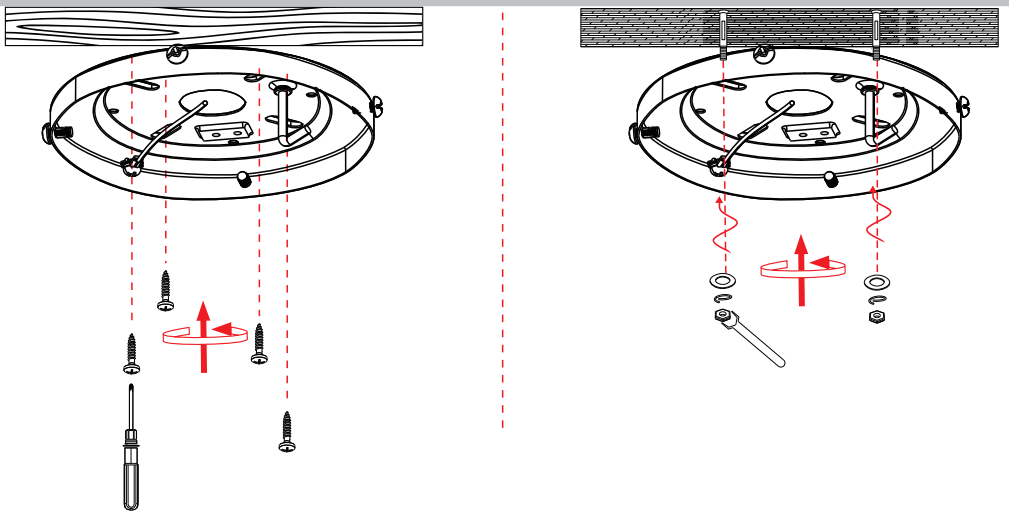


Install the Mounting Bracket: use wood screws for wooden ceilings; use expansion bolts for concrete ceilings.

09

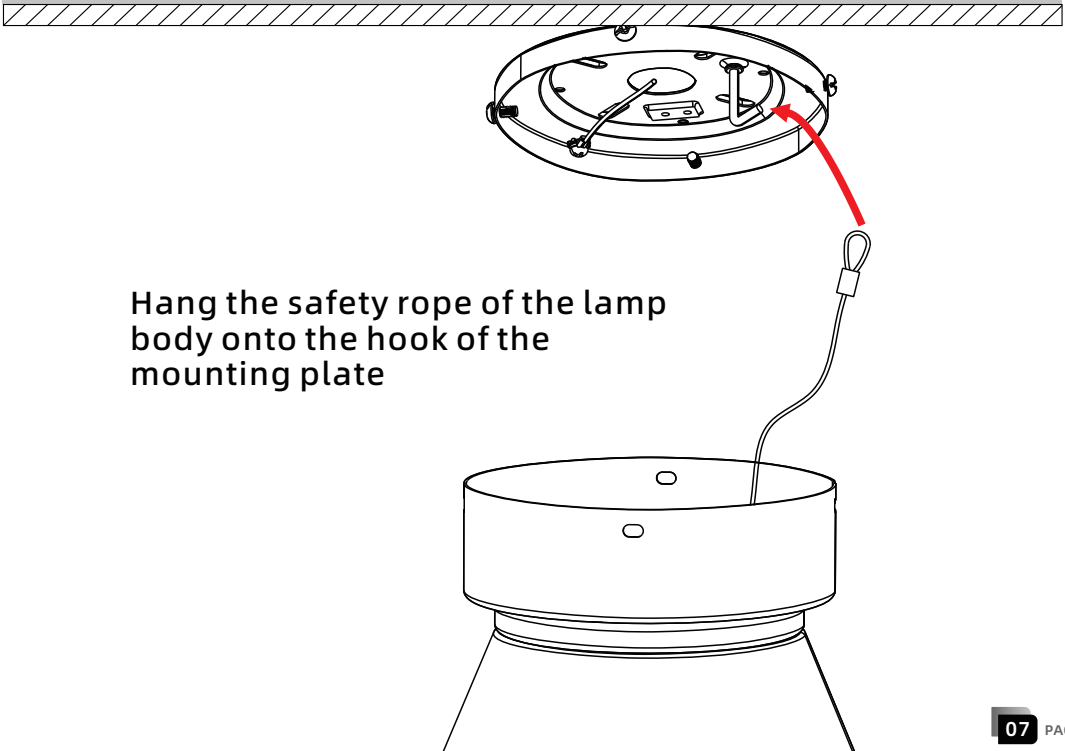


Hang the safety rope of the lamp body onto the hook of the mounting plate

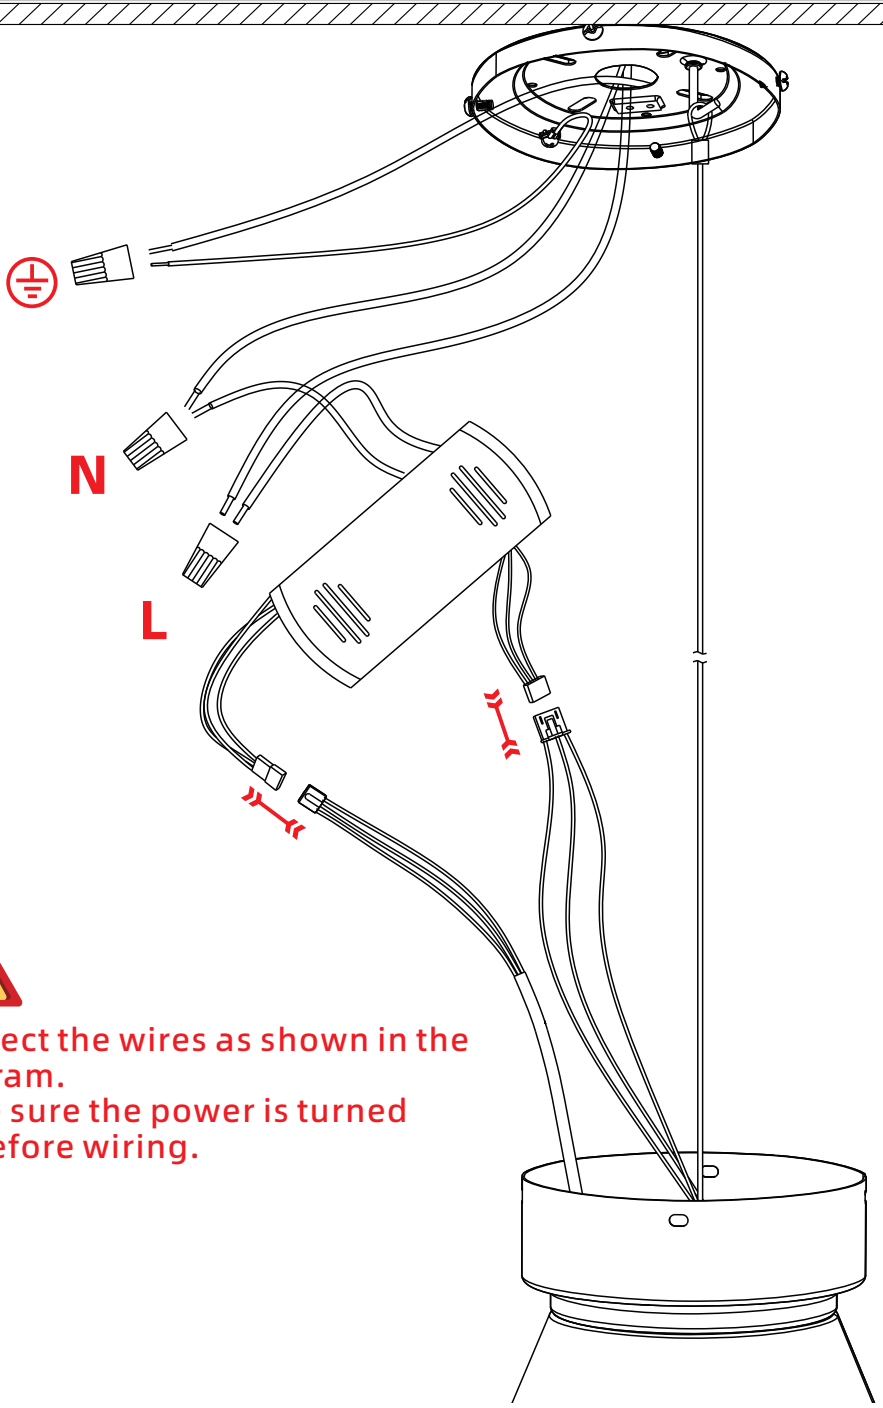


Connect the wires as shown in the diagram.
Make sure the power is turned off before wiring.

11

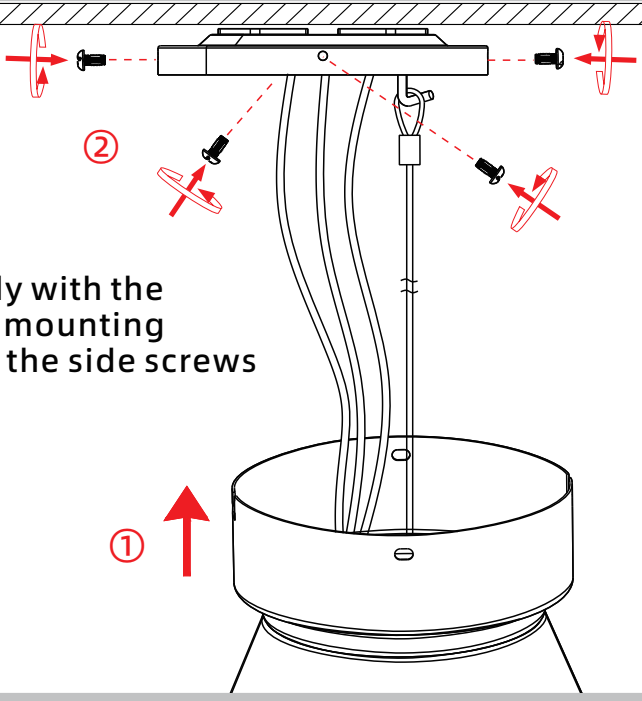


Align the lamp body with the screw holes on the mounting plate, then tighten the side screws

12

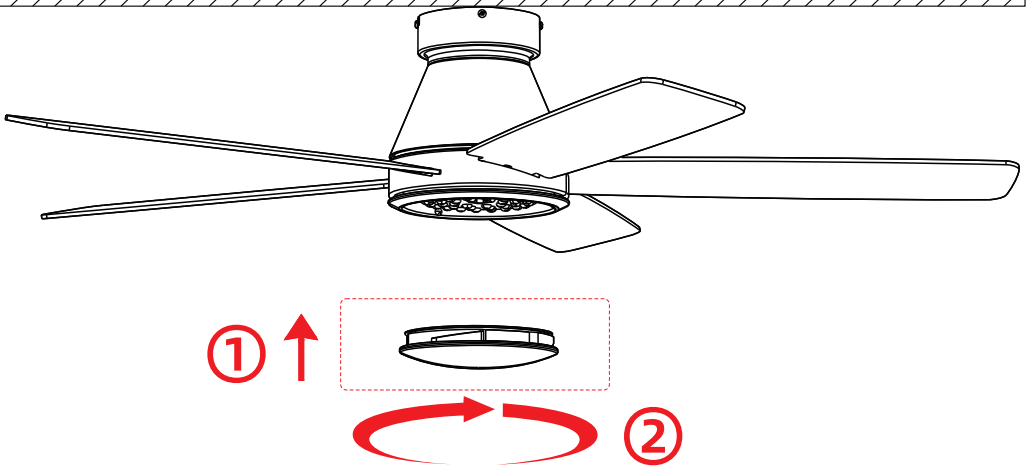

Screw on the lampshade clockwise.

13 Remote Control Button Instructions

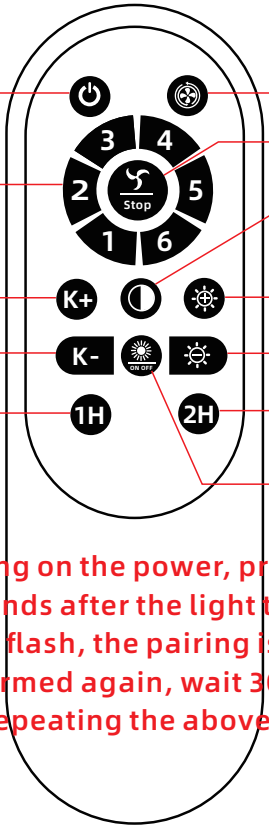

Master Off

1-6 Speed Levels

Color Temperature +

Color Temperature -

1H Timer
(Clear pairing code: press this button 9 times to clear the code)

Forward / Reverse Rotation

Fan Off

Short press for color temperature switching; long press for pairing

Brightness +


Brightness -


2H Timer

Light on/off

Pairing Process:After turning on the power, press and hold the "◐" button within 5 seconds after the light turns on. Once you hear a beep or see the light flash, the pairing is successful.
If pairing needs to be performed again, wait 30 seconds before turning on the power and repeating the above steps.


Note: Batteries are not included.
Please purchase AAA batteries separately.

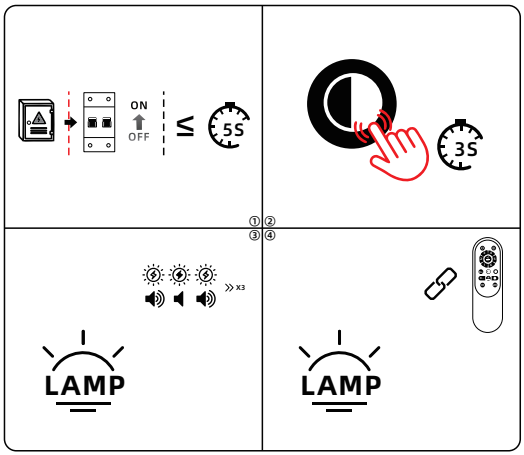

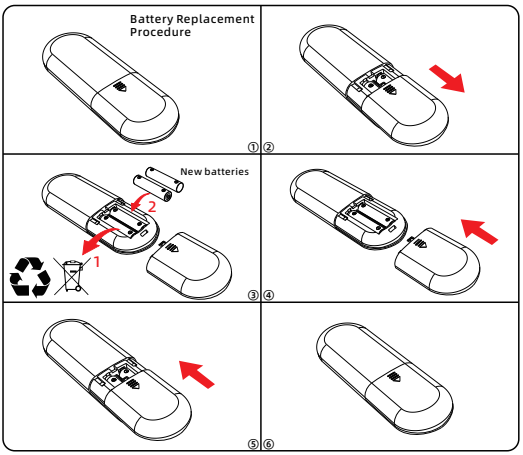


1. Search “Fan Light PRO” in the app store to download the control app.


2.The APP supports multiple languages for operation.

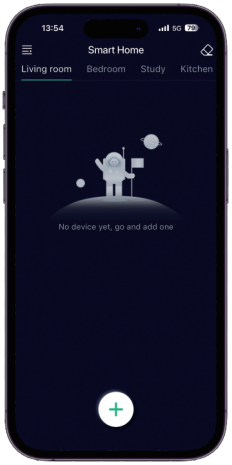

3.Select the "+" to add a device name.

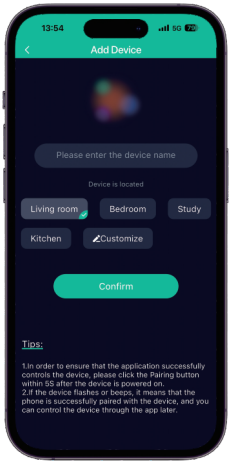



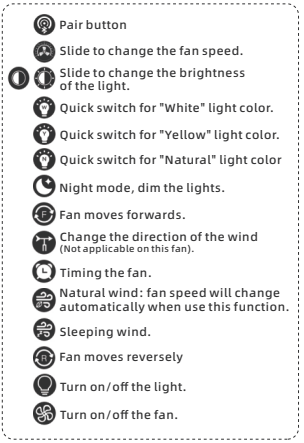

4.Set your preferred device name.

5.Turn on your phone's Bluetooth. Within 5 seconds of powering on the light, press the " " button. If the device flashes or beeps, it means it has been successfully paired with your phone.

Maintenance and Care

1.Regular Cleaning:
It is recommended to clean the fan blades and lampshade every 1-3 months. Use a soft dry cloth or a slightly damp cloth to wipe, and avoid dust buildup that may affect airflow and heat dissipation. Do not allow water to enter the motor.

2.Power Off Before Maintenance:
Always disconnect the power before cleaning, inspecting, or maintaining to prevent electric shock or accidental operation.

3.Keep Dry Environment:
This product is not waterproof. Do not use it in humid areas such as bathrooms or kitchens, and avoid rain or moisture exposure.

4.Check Fasteners:
Regularly inspect the screws, blade inserts, and installation parts for looseness. Tighten them if necessary to ensure safe operation.

5.Maintain Proper Ventilation:
Do not hang objects around the light or fan, and avoid blocking air inlets or outlets to ensure proper cooling performance.

6.Prevent Strong Impacts:
Avoid severe vibration or impact, which may cause housing deformation, motor damage, or loosening of the fixture.

7.Inspect Wiring and Connections:
Regularly check whether the power cord is aged, loose, or damp. Stop using immediately and contact a professional if any issues are found.

8.Long-Term Storage:
If not in use for a long time, disconnect the power and periodically run the device for a few minutes to maintain motor performance.

9.Avoid Humid Environments:
This product is for indoor use only. Do not use in bathrooms, kitchens, or outdoors, and avoid exposure to rain or moisture.

10.Do Not Disassemble:
Do not disassemble or repair the product by yourself. Contact professional technicians or dealers for maintenance.



Replacement of Light Source and Accessories

LED light sources and other accessories must be replaced by qualified professionals.



Cleaning

Use a soft brush or a lint-free cloth. For light dirt, wipe with a mild neutral detergent and a slightly damp cloth. Do not use abrasive cleaners to avoid damaging the surface of the lamp.



Disposal

Old equipment must not be disposed of with household waste. When the device can no longer be used, consumers are legally required to dispose of it separately, for example by taking it to a local recycling center. Before recycling, remove the remote control batteries and light source, without damaging the device, and dispose of them at designated collection points. If the device contains a non-removable rechargeable battery, this should be indicated during disposal. The crossed-out wheeled bin symbol on the product indicates that the device must be collected and recycled separately as electronic waste.

Fan Blade Balancing Procedure

The balance kit should only be used if the fan has unacceptable wobbling after completing all the steps in the "Fan Blade Installation" section of the user manual.

1. Turn on the fan and set the speed to the level where the wobbling is greatest.

2. Turn off the fan and wait until it stops completely. Select one blade and place the balance clip on it, halfway between the blade bracket and the blade tip, on the trailing edge of the blade.

3. Turn on the fan and observe whether the wobbling increases or decreases. Turn off the fan, move the balance clip to another blade, and test again. Repeat this procedure for all blades and note the blade that shows the greatest improvement.

4. Reattach the balance clip to the blade that showed the greatest improvement. Move the clip inward and outward along the blade and run the fan to find the position where the clip provides the greatest improvement.

5. Remove the balance clip and install a balancing weight on the top of the blade along the centerline, near the position where the clip was placed. If the fan wobbling has not been corrected, you can further improve the balance using the balance clip and additional balancing weights.

