



Electric Standing Desk


Elektrischer Stehpult

Instruction Manual

Bedienungsanleitung

EGESD126 / EGESD127

V1

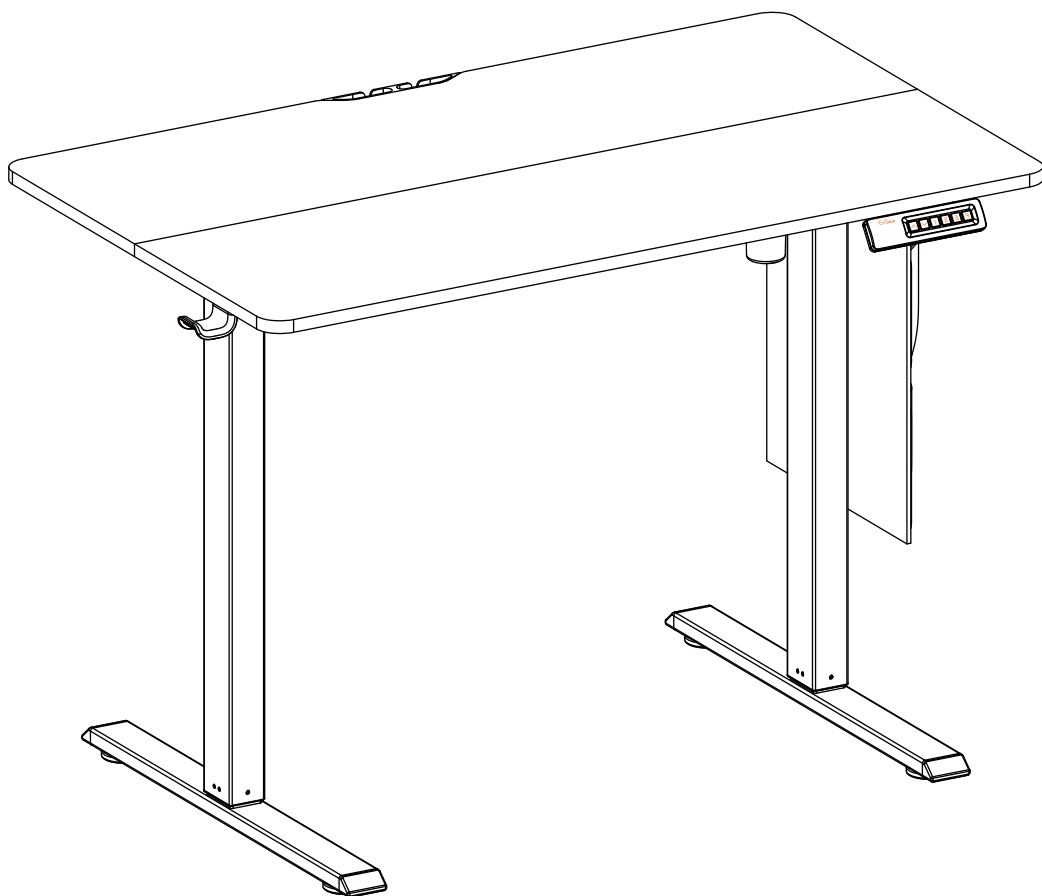

English -----

01-16

Deutsch -----

17-32

UK Declaration of Conformity

Declaration Number: 20241030

We, hereby declare that the essential requirements set out in the **Electromagnetic Compatibility Regulations 2016/1091 (EMC)** , **Electrical Equipment(Safety) Regulations 2016:(LVD)** have been fully fulfilled on our product with indication as below:

Product Name	Electric Standing Desk
Product Description	Height Adjustable Desk for Home Office
Brand Name / Model	EGESD126、EGESD127

The following standards have been applied for the investigation of compliance:

	Testing Standard	Test Report	Testing Lab
✗ Safety	EN 60335-1; 2012+A11:2014+A13:2017+A1:2019 +A14:2019 +A2:2019+A15:2021 EN 62233:2008	S24051405001001	Shenzhen NTEK Testing Technology Co., Ltd.
✗ Safety (Adaptor)	EN IEC 61558-1:2019, EN 61558-2-16:2009+A1:2013 EK1 527-12 Rev.2, EK1 557-13	CN24JP44 001	TÜV Rheinland (Guangdong) Ltd.
✗ EMC	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A2:2021	S24051405002001	Shenzhen NTEK Testing Technology Co., Ltd.

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.

Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Information:

Company	BESTQI INNOVATION (HONGKONG) TECHNOLOGY CO., LIMITED		
Address	Rm 4, Unit G 4/F, BLK 1 KOON WAH MIRROR FTY.(6th) IND., BLDG. 7-9 Ho Tin St., TUEN MUN, N.T., HONG KONG		
Name/Title	Ivy Chen / Certification Specialist		
Tel. No.	00852-30697751	Fax No.	/

Authorised Representative

Company	ERGEAR TECHNOLOGIES LIMITED
Address	SOUTH GYLE WESTPOINT 4 REDHEUGHS RIGG EDINBURGH Scotland EH12 9DQ GB

Ivy Chen

Signature / stamp Date: 2024-10-30

EU Declaration of Conformity

Declaration Number:20241030

We, hereby declare that the essential requirements set out in the **Directive 2014/30/EU Electromagnetic Compatibility (EMC) , 2014/35/EU (Low Voltage Directive)** have been fully fulfilled on our product with indication as below:

Product Name Electric Standing Desk
Product Description Height Adjustable Desk for Home Office
Brand Name / Model EGESD126、EGESD127

The following standards have been applied for the investigation of compliance:

	Testing Standard	Test Report	Testing Lab
✕ Safety	EN 60335-1: 2012+A11:2014+A13:2017+A1:2019 +A14:2019 +A2:2019+A15:2021 EN 62233:2008	S24051405001001	Shenzhen NTEK Testing Technology Co., Ltd.
✕ Safety (Adaptor)	EN IEC 61558-1:2019, EN 61558-2-16:2009+A1:2013 EK1 527-12 Rev.2, EK1 557-13	CN24JP44 001	TÜV Rheinland (Guangdong) Ltd.
✕ EMC	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A2:2021	S24051405002001	Shenzhen NTEK Testing Technology Co., Ltd.

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.
Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Information:

Company BESTQI INNOVATION (HONGKONG) TECHNOLOGY CO., LIMITED
Address Rm 4, Unit G 4/F, BLK 1 KOON WAH MIRROR FTY.(6th) IND., BLDG.7-9 Ho
Tin St., TUEN MUN, N.T., HONG KONG
Name/Title Ivy Chen / Certification Specialist
Tel. No. 00852-30697751 **Fax No.** /

Authorised Representative

Company BSQ Technology GmbH
Address Feringastr. 6, Unterföhring, 85774 ,DE

Ivy Chen

Signature / stamp Date: 2024-10-30

IMPORTANT SAFETY INFORMATION

- With proper supervision and instruction, this desk can be used by children 8 years and above and by persons with reduced physical, sensory, or mental capabilities. Users must understand safe operation and the potential hazards involved.
- Cleaning and user maintenance shall not be performed by children.
- The desk is only to be used with the power supply unit provided.
- Disconnect the power supply when performing maintenance and cleaning.
- Examine the desk frequently for signs of wear or damage. If there are such signs or if the desk has been misused or does not work, contact the supplier for further information.
- When operating a switch that initiates and maintains the movement of the furniture, terminates the movement of the furniture, or causes a change of the direction of the furniture, make sure that all persons are kept clear of movement.
- Properly place the desk to avoid creating collision hazards with other furniture.
- Dust off regularly to keep your desktop clean. Power off the desk, then use a damp piece of cloth to gently rub the surface.



For indoor use only

Specifications



Height Adjustment Range
27.9-46.8" (71-119cm)




Power Input
100V-240V




Max. Speed
18mm/s

Tools Needed (Not Included)

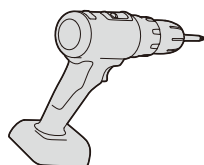

Drill

OR




Phillips Screwdriver

Step 1

Supplied Parts and Hardware

A x 8



Bolt
M6 x 30mm

B x 10



Bolt
M6 x 10mm

C x 1



Allen Key
5/32" (4mm)

I x 1




Wrench

01 x 1




Crossbar

02 x 1

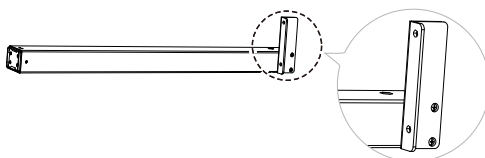

L Leg

03 x 1

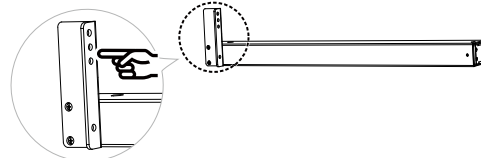


R Leg

04 x 2



Leg Base

05 x 2




Side Plate

06 x 1



Transmission Rod

07 x 1



Motor

Step 2 Supplied Parts and Hardware

D x 6



Screw
ST5 x 14mm

E x 3



Screw
ST3.9 x 13mm

F x 3




Desktop Panel
Connector

G x 5




Wood
Dowel Pin

08 x 1



Cable Organizer

09 x 1



Desktop

Step 3 Supplied Parts and Hardware

D x 14




Screw
ST5 x 14mm

10 x 1



Storage Hook

11 x 1



Controller


Step 4 Supplied Parts and Hardware

H x 4



Cable Clip

12 x 1



Power Cable

Actual part
may vary.

Step 5 Supplied Parts and Hardware

B x 2




Bolt
M6 x 10mm

C x 1



Allen Key
5/32" (4mm)

13 x 1



Side Pocket

Not all hardware included in this package will be used.

Contact Us

If you receive parts that are damaged, defective, or are missing parts, please contact us.




1-800-651-9525 (US/CA)
44-808-196-3875 (UK)

Mon-Fri, 8am-8pm (CST)
Mon-Fri, 2pm-10pm (UTC)



support@ergear.com

Step 1 Assembling the Frame


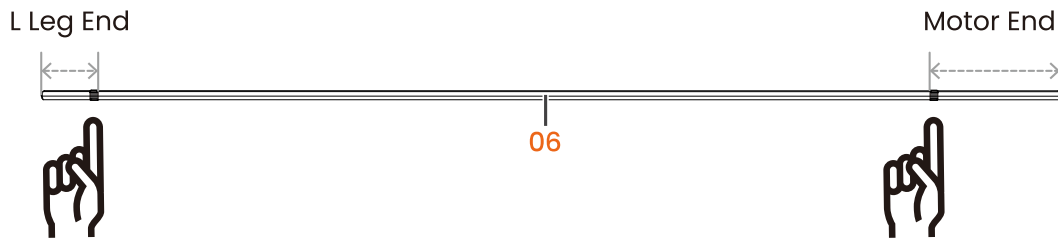


The bump is set back closer.


The bump is set back farther.

Insert the transmission rod into the motor.


Important: Note the direction of the tab.

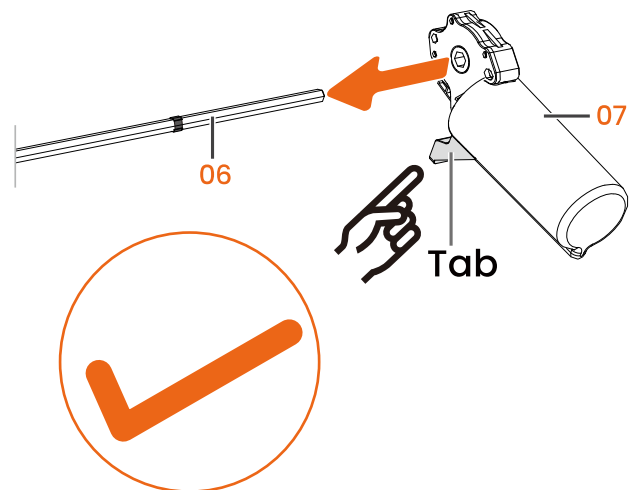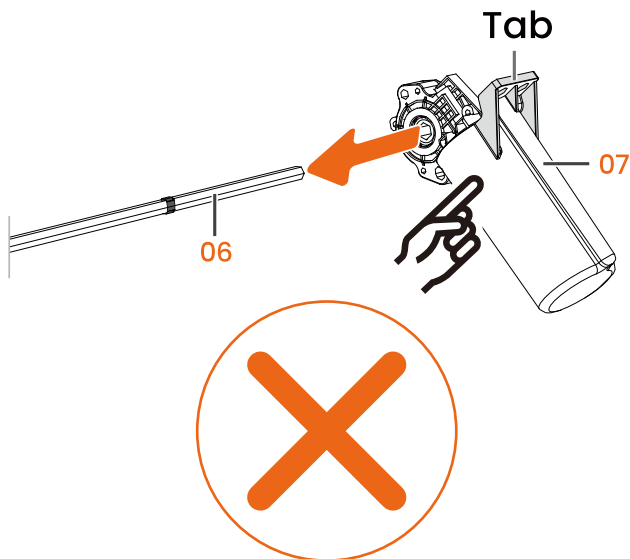


The bump is set back farther.

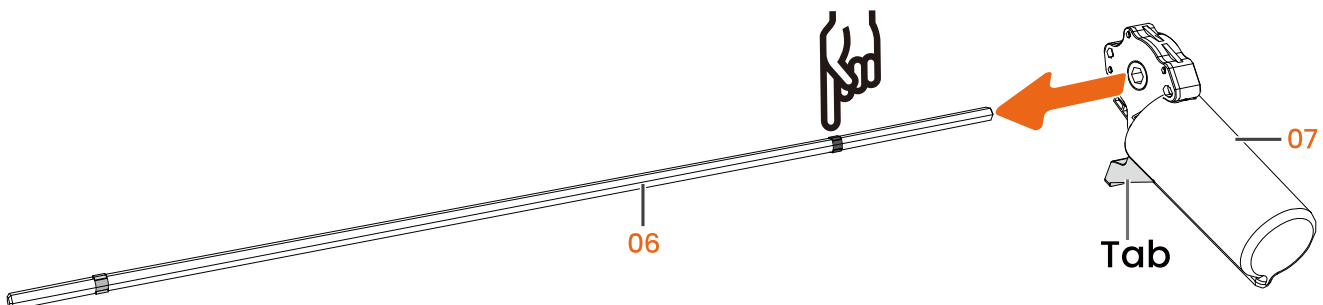


Insert the transmission rod with the motor into the R leg.

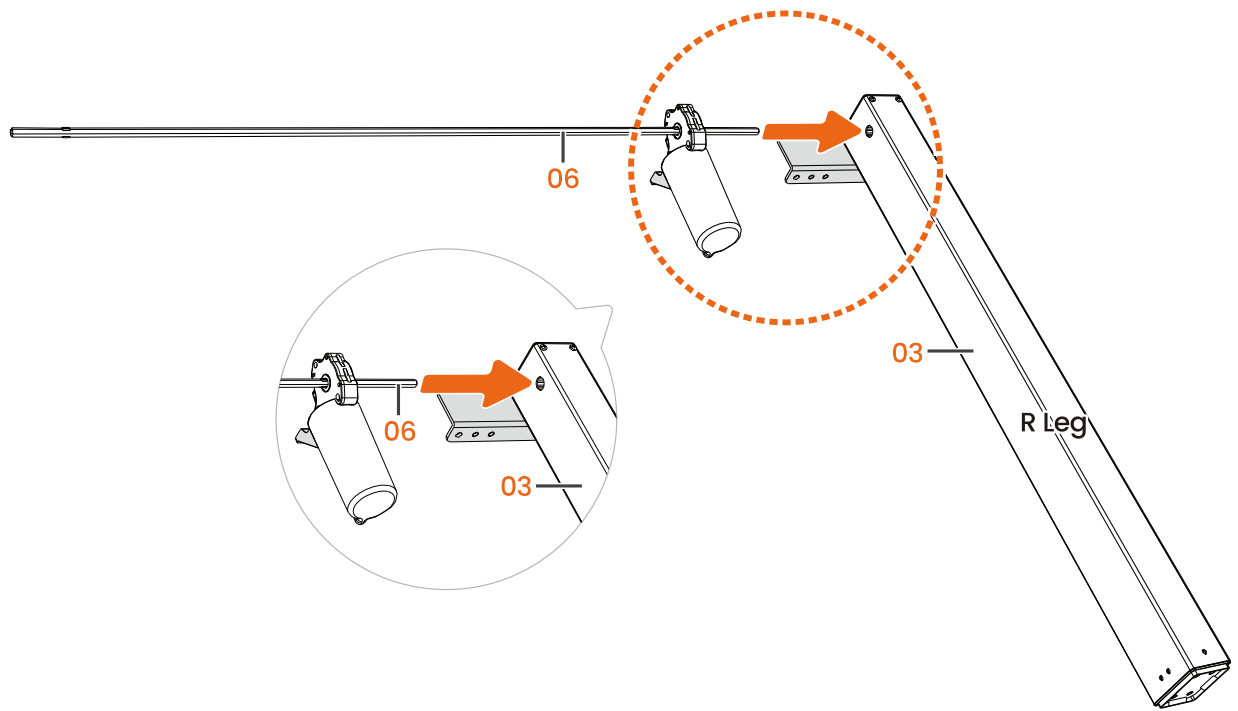


Insert the L leg onto the other end of the transmission rod.

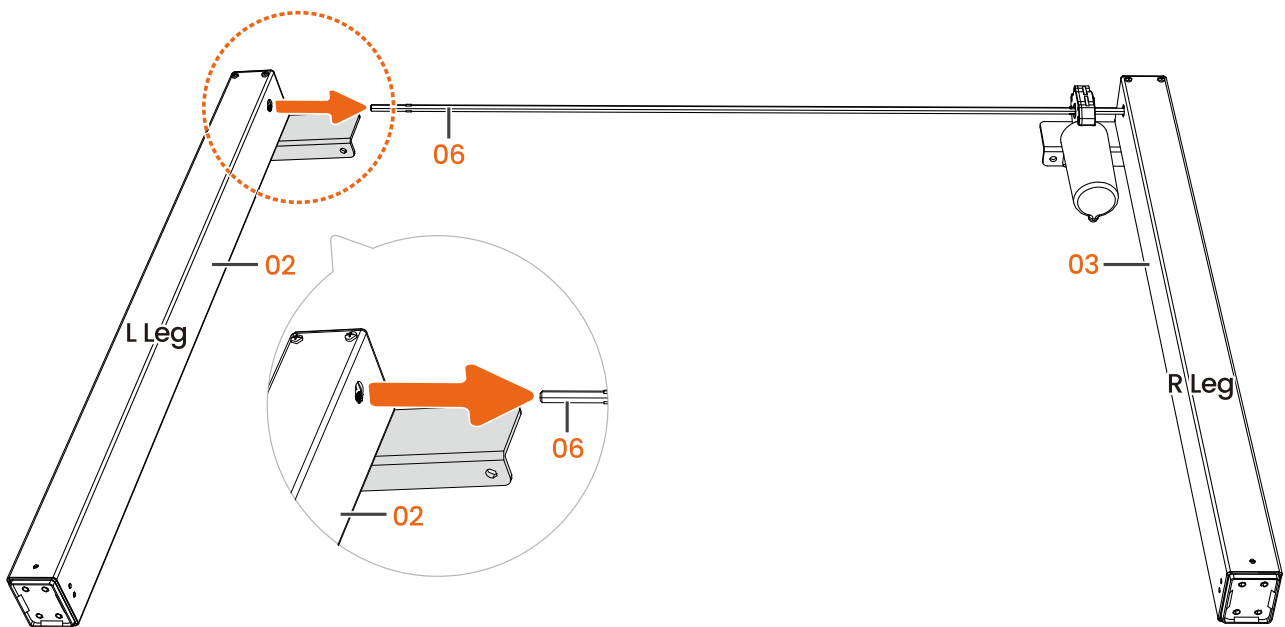


Note: If the transmission rod doesn't fit smoothly into the hole in the L Leg, use the wrench to fine-tune the position.

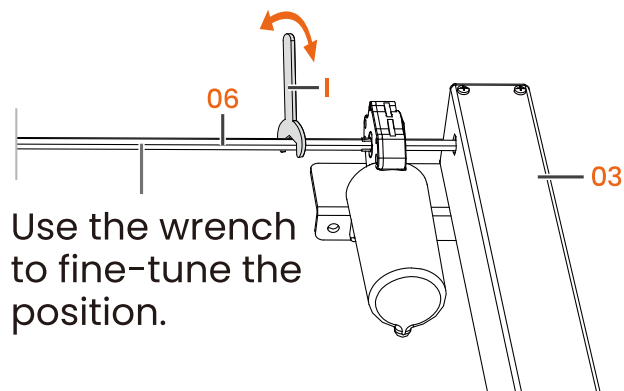


Carefully flip each leg over one by one.




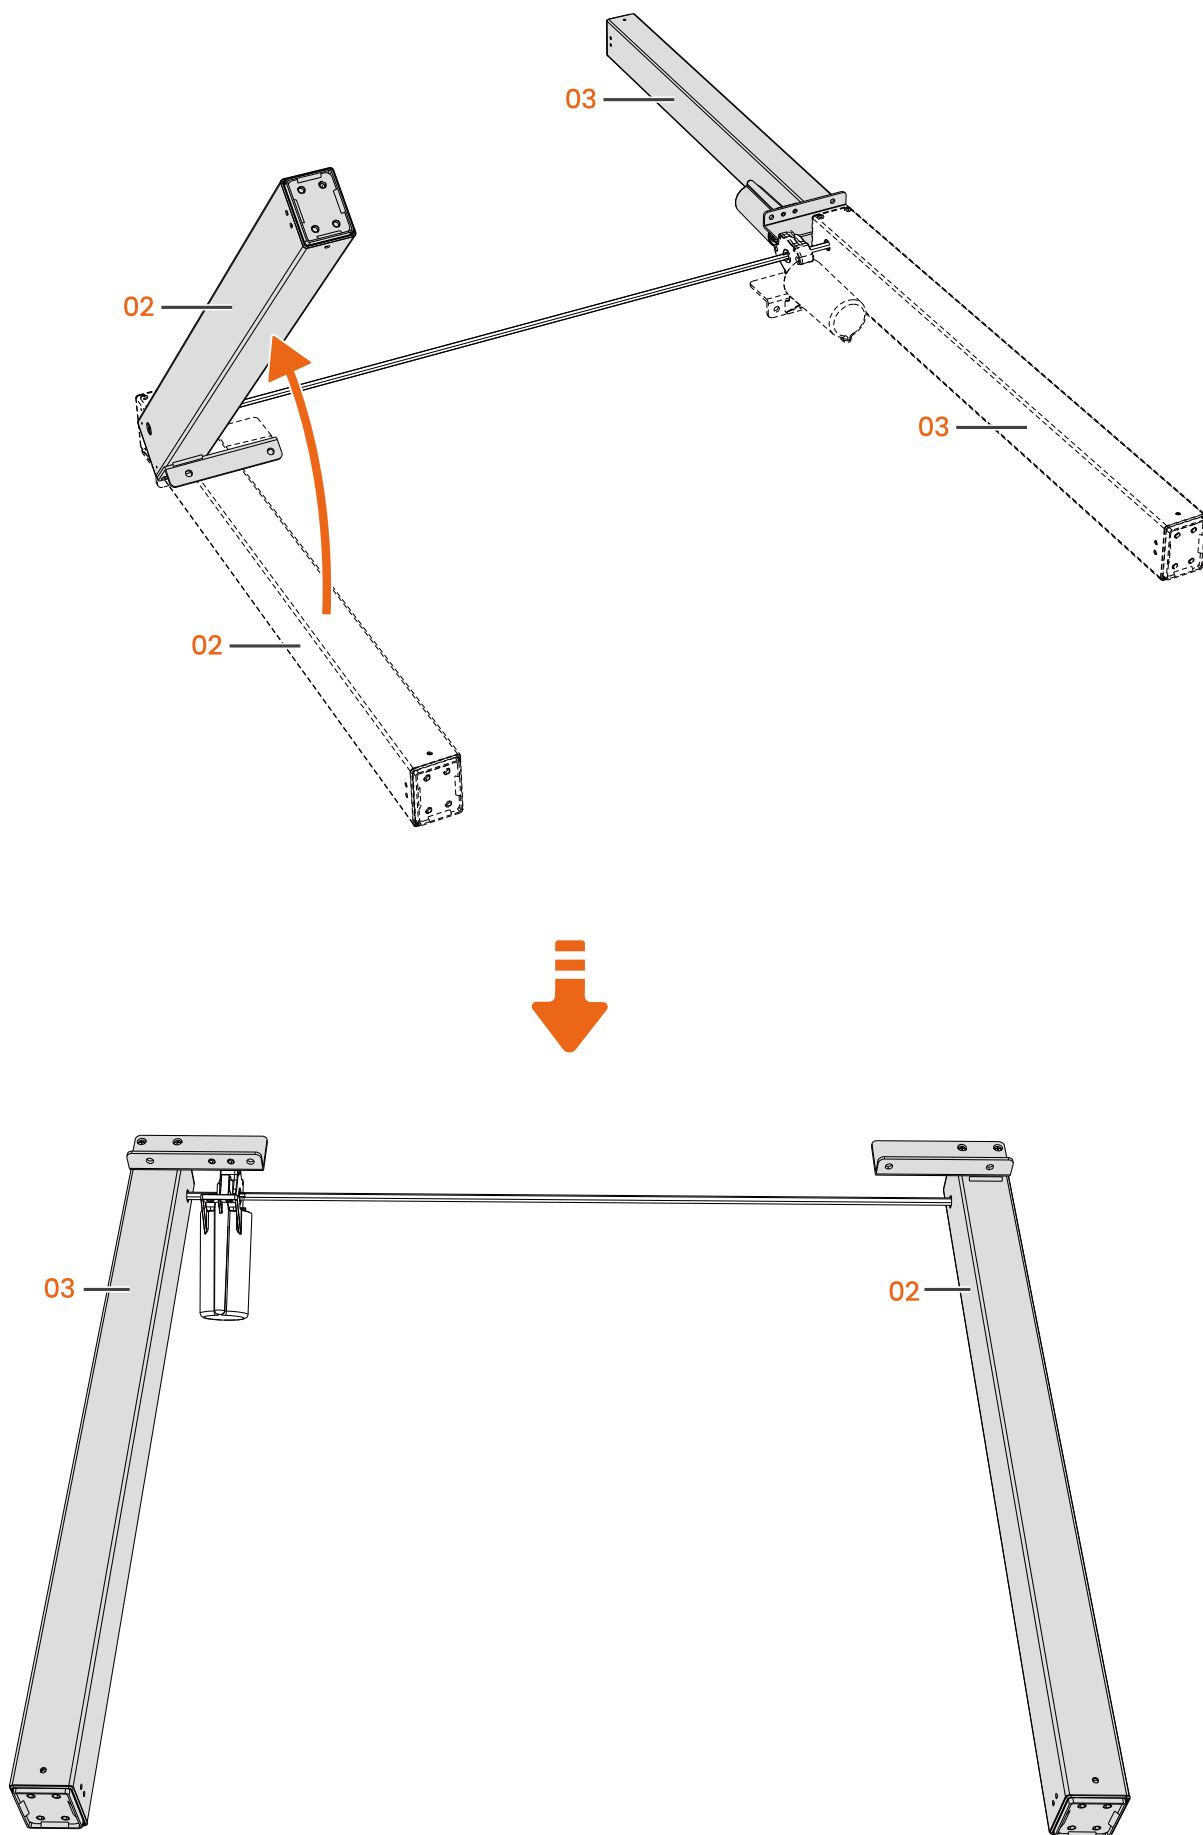


Secure the crossbar to the R leg, then to the L leg. If the holes in the crossbar and L leg are not aligned, adjust the L leg to align.

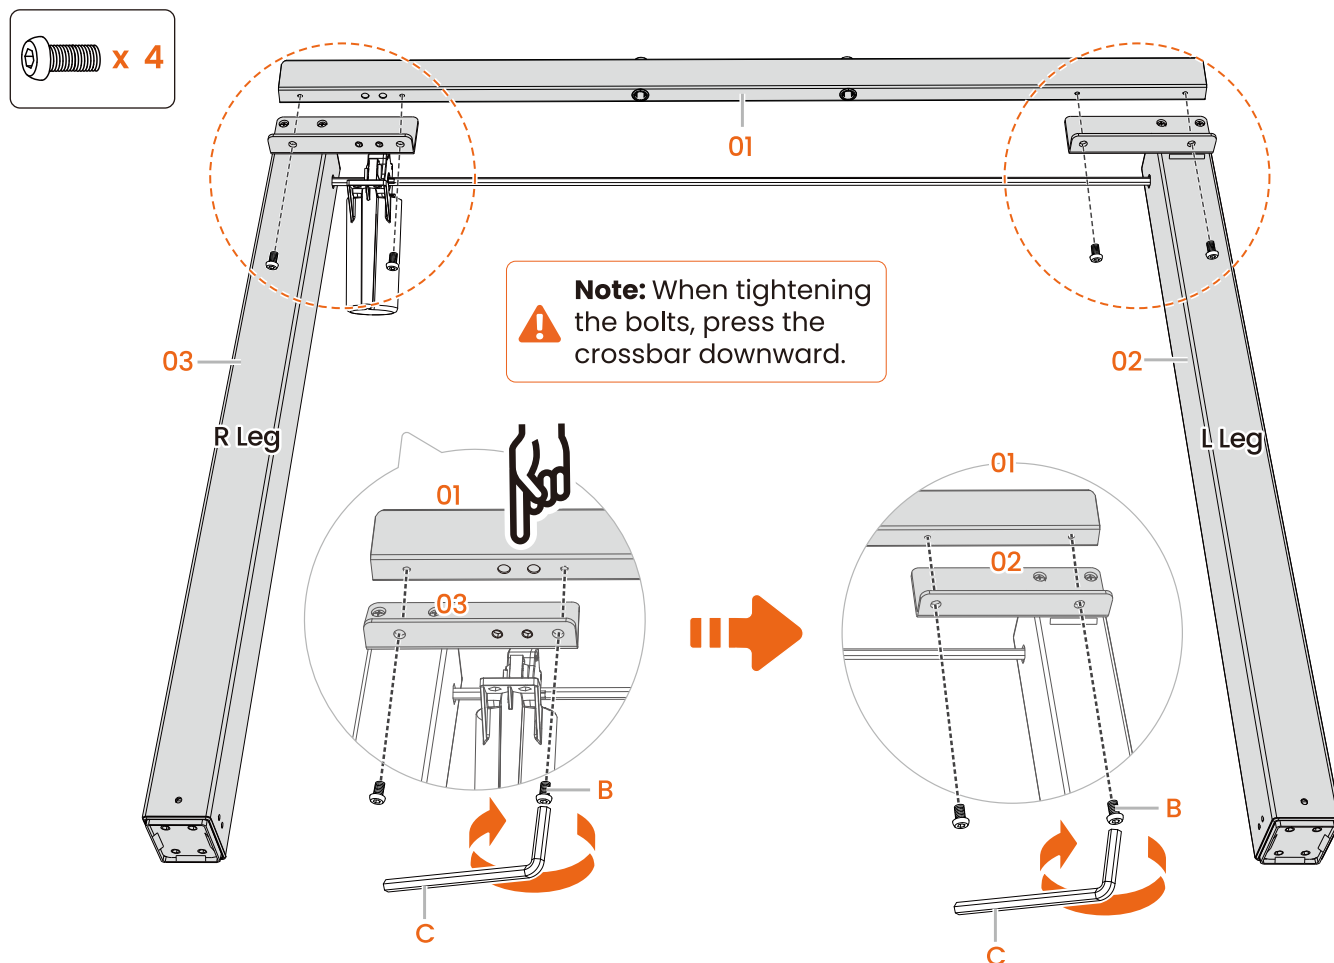


Secure the motor.

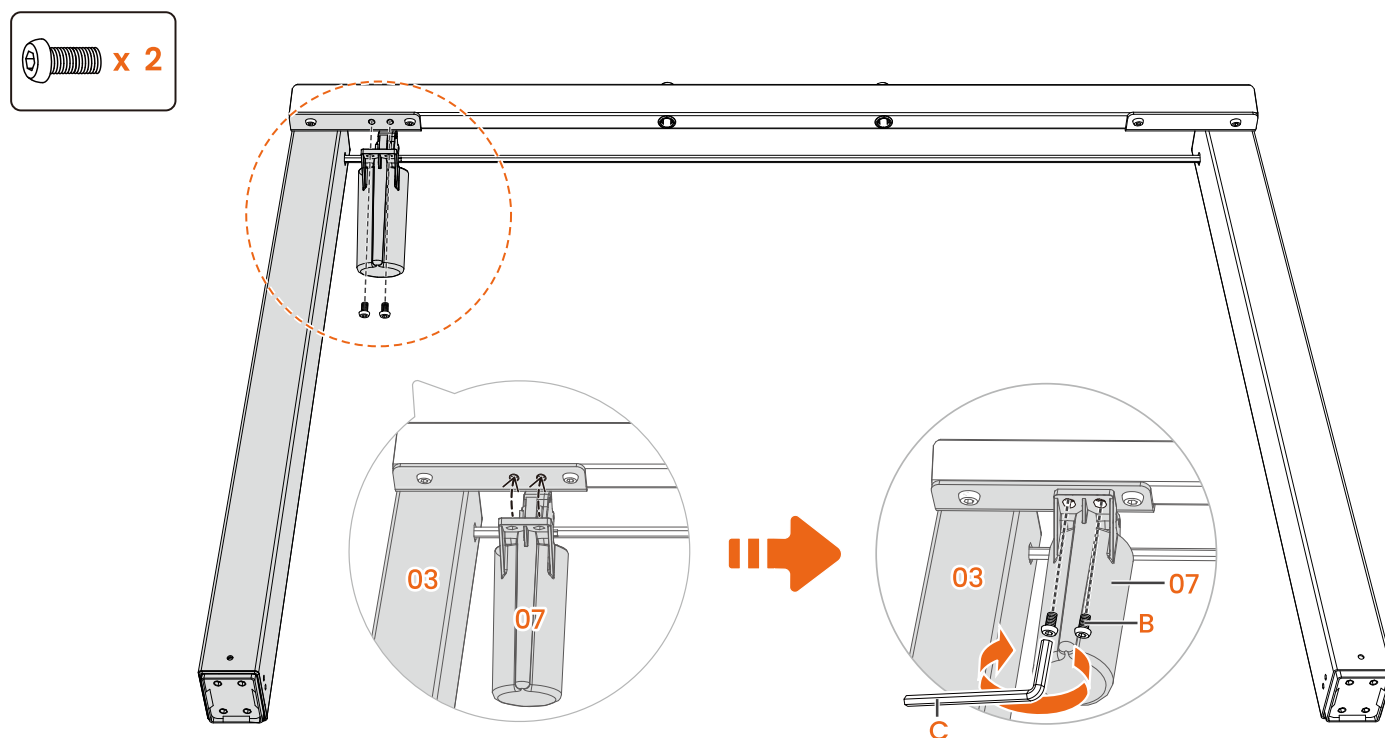

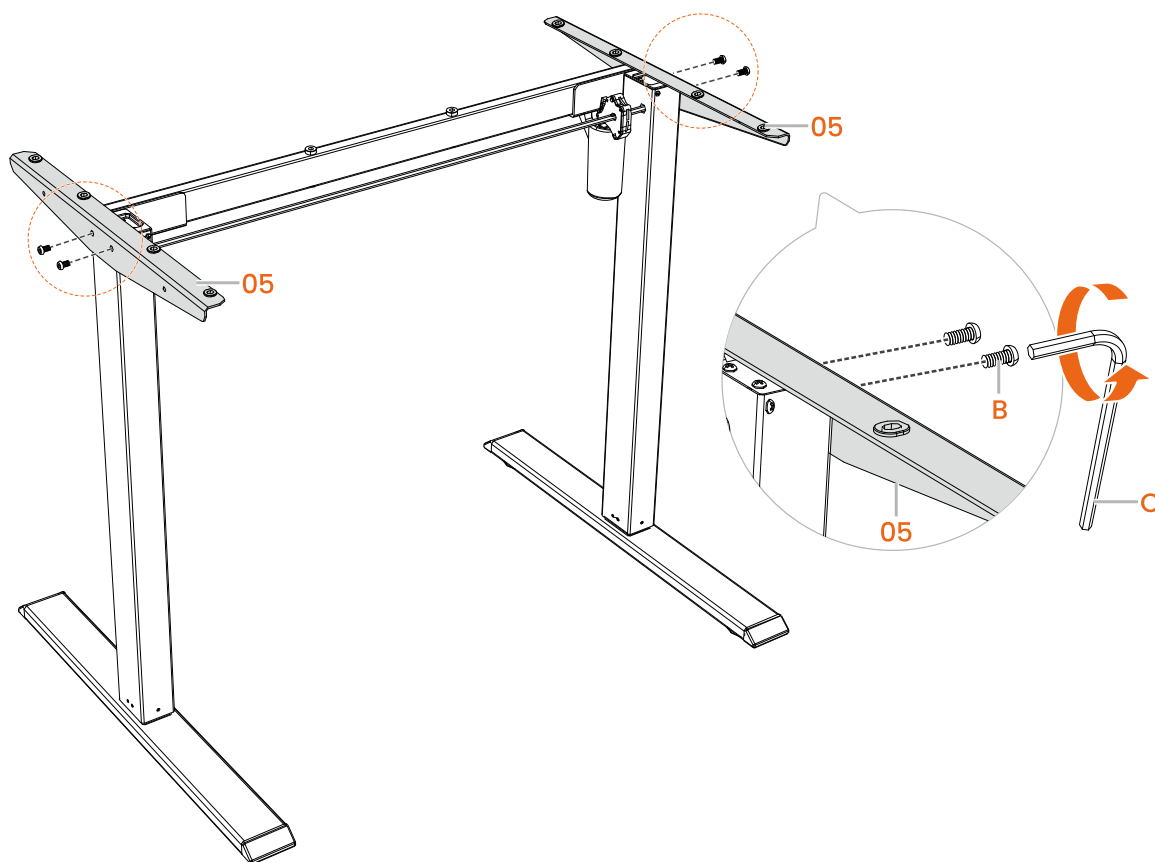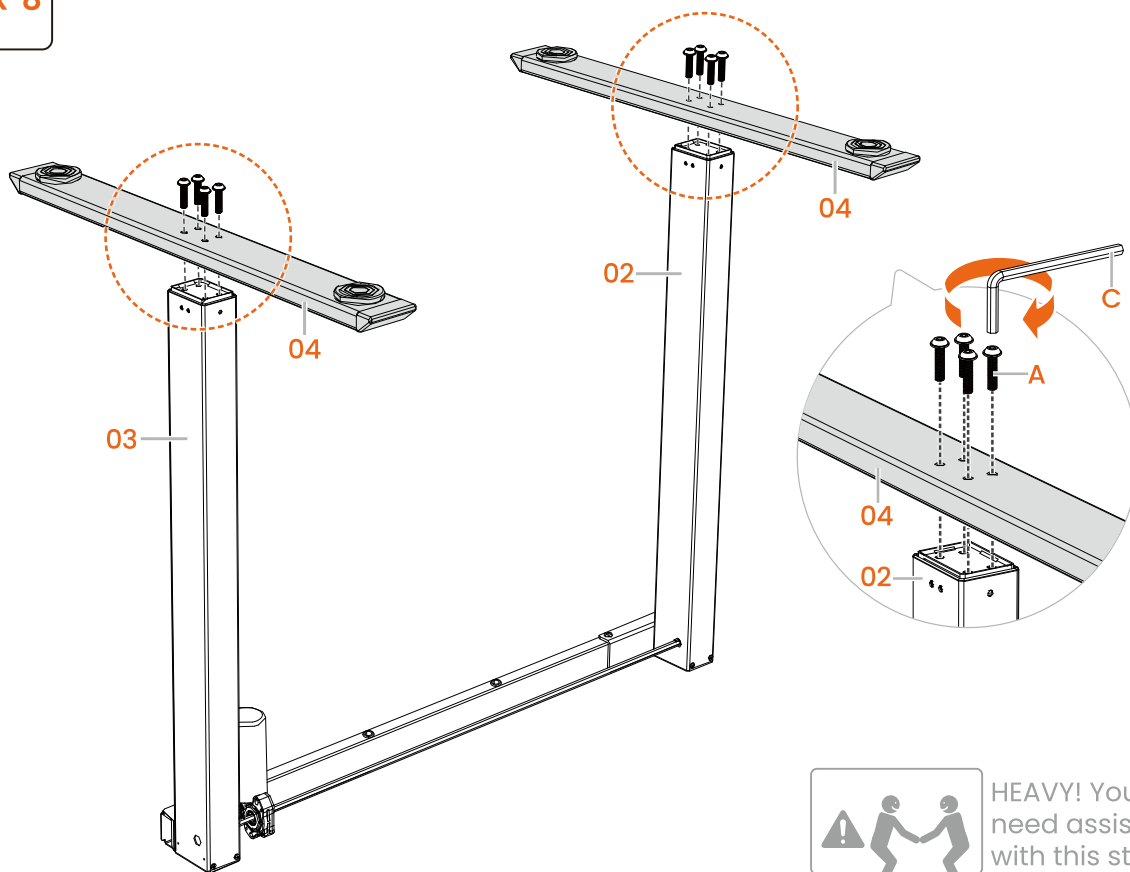


Ensure the rubber pads are attached to the frame. If any have fallen off, reattach them or use the spare rubber pads.

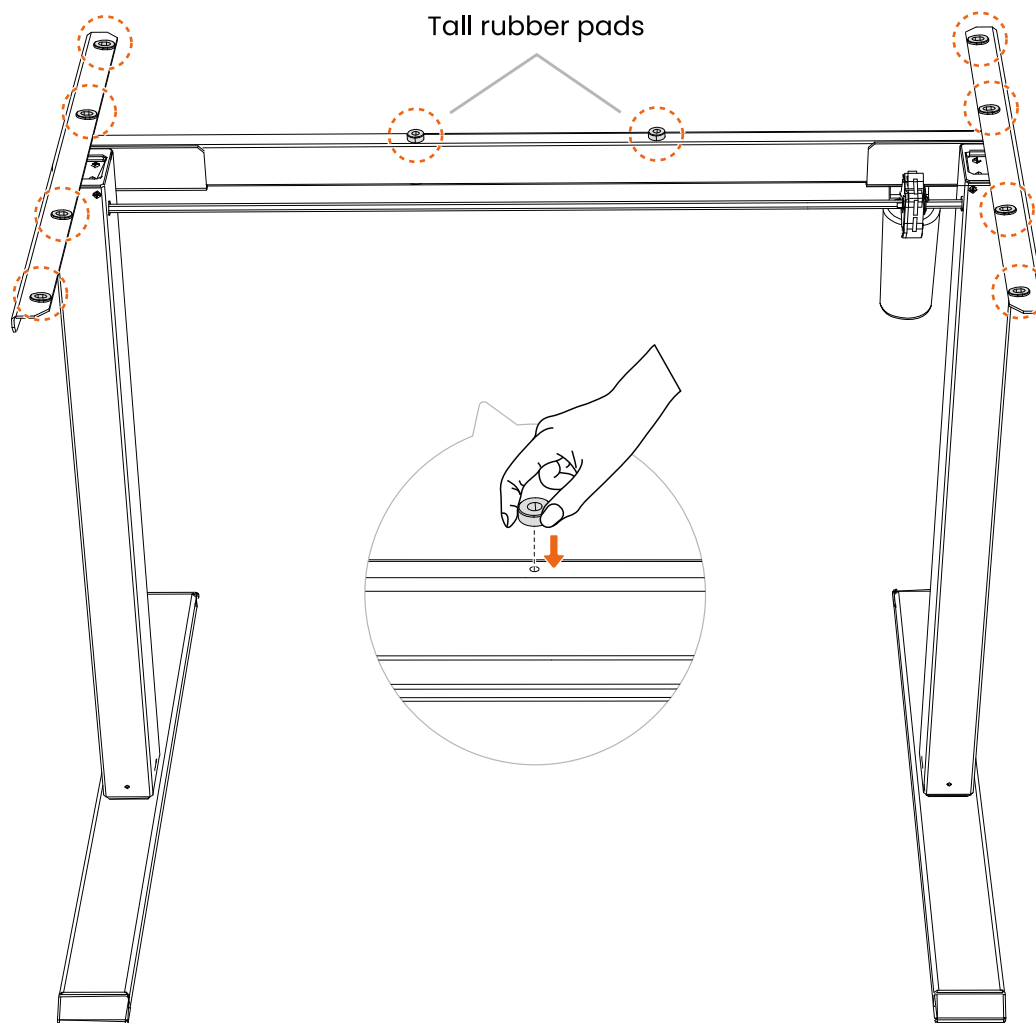


Step 2 Assembling the Desktop



Tip: ○ indicate pre-drilled hole locations.

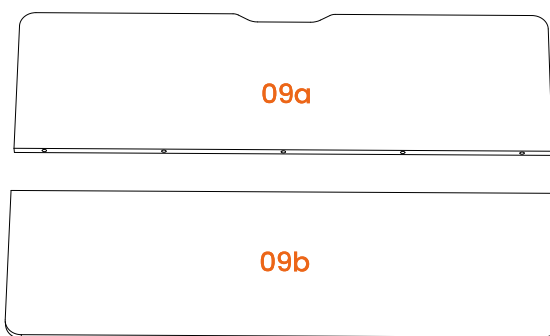

Top

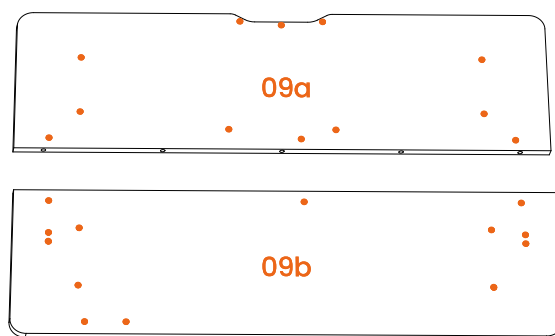

Bottom

IMPORTANT:



Some pre-drilled hole locations may vary between desks of different sizes. The illustrations demonstrate assembly steps using one desk size, but should remain similar for each installation process.

If you have any issues, please contact us.




1-800-651-9525 (US/CA) Mon–Fri, 8am–8pm (CST)
44-808-196-3875 (UK) Mon–Fri, 2pm–10pm (UTC)




support@ergear.com

For 40" long desk


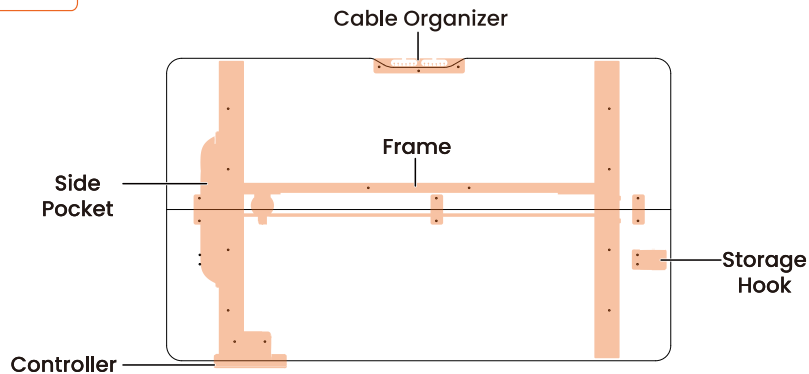




For 48" long desk

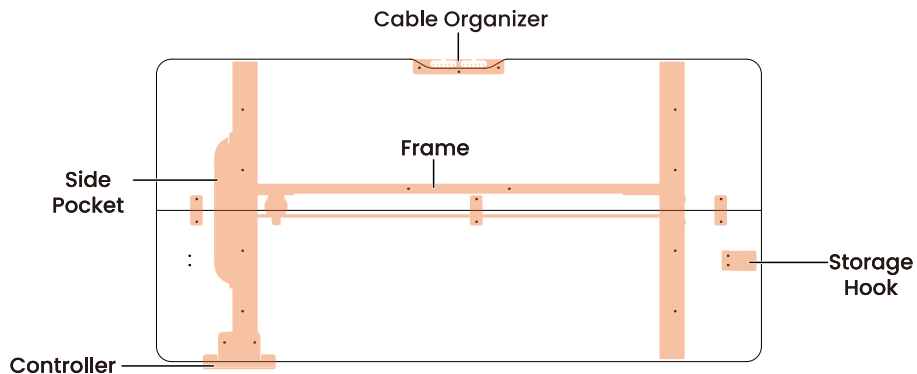




Assemble the desktop with the bottom of the panels facing up.



 x 5

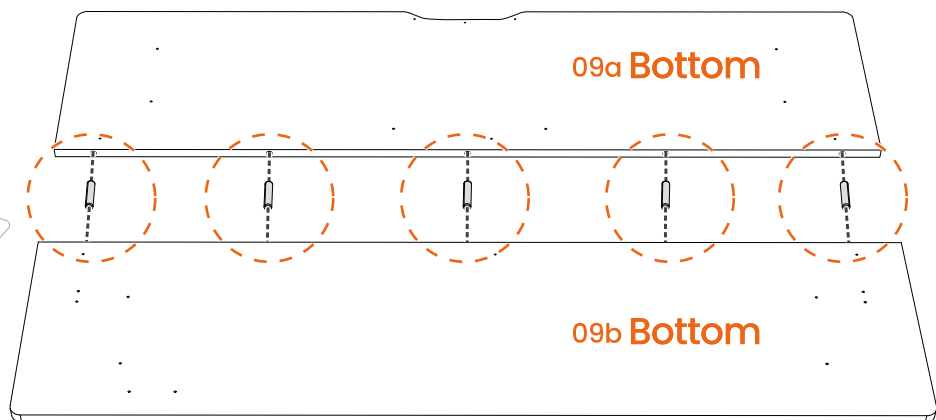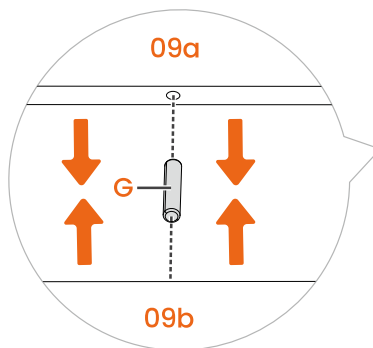

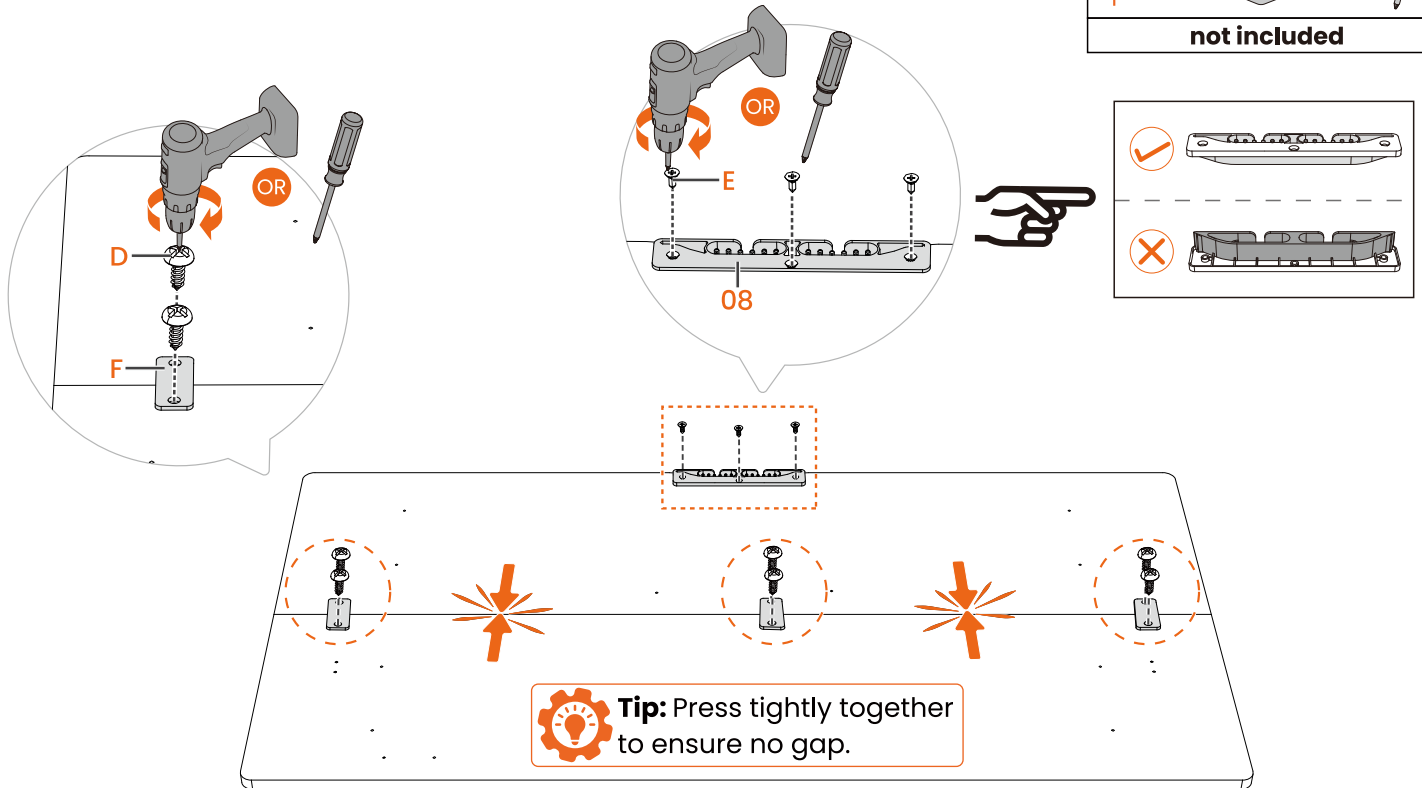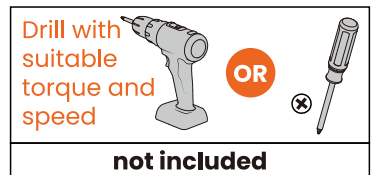

Step 3 Attaching the Desktop

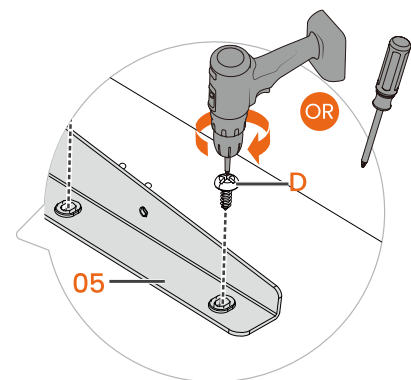
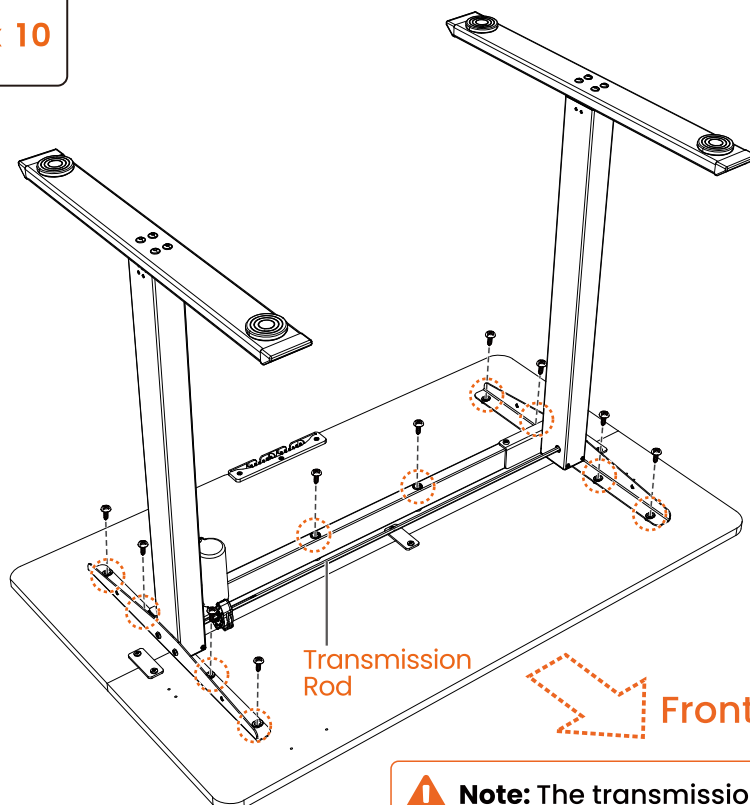
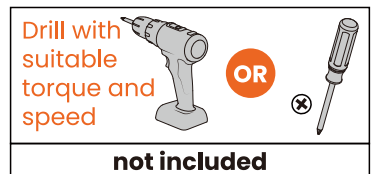


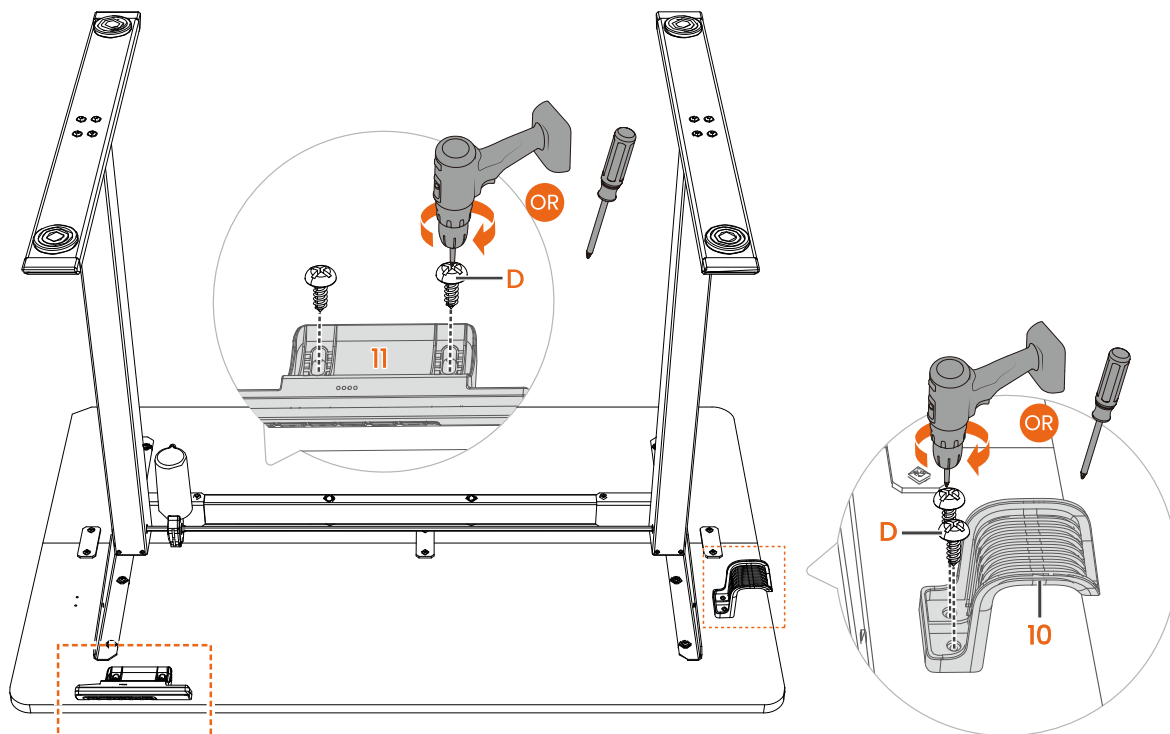

Step 4 Connecting the Cables





Tip: An example of a cable clip layout is indicated below. However, the cable clips can be arranged according to your needs.

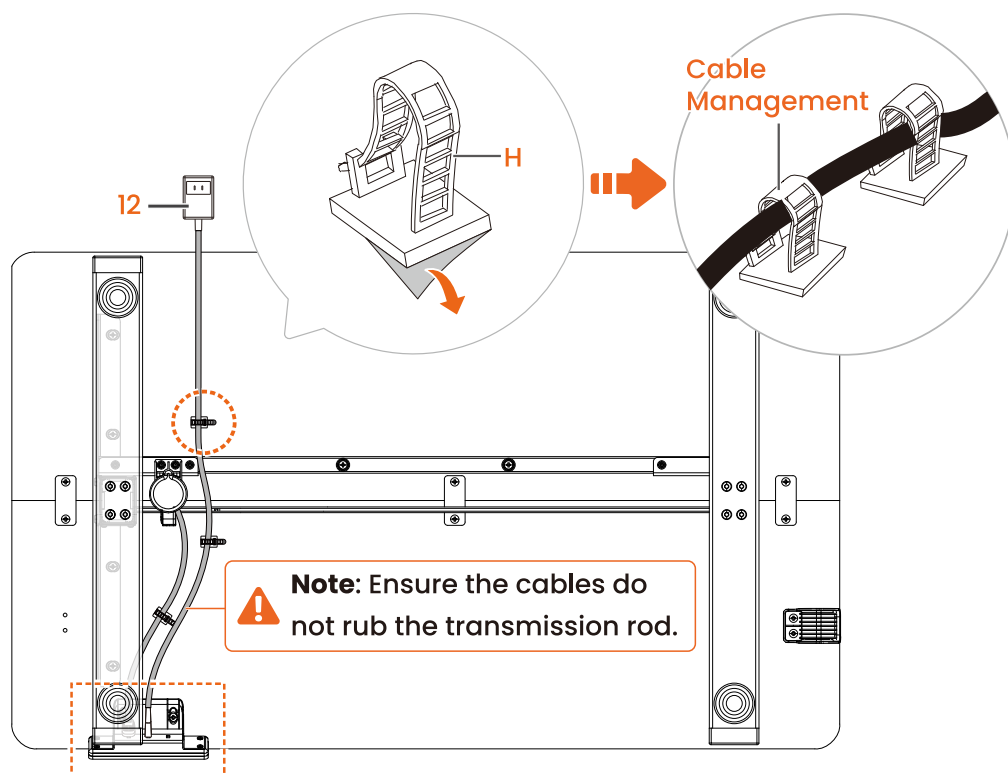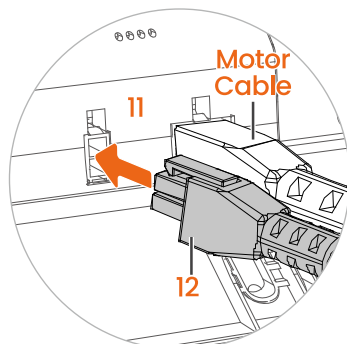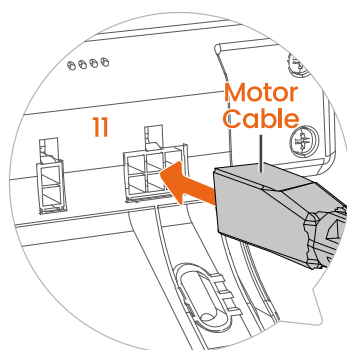


! Note: When flipping the desk over, do not allow the controller to collide with the ground, which could cause damage.

Step 5 Attaching the Side Pocket

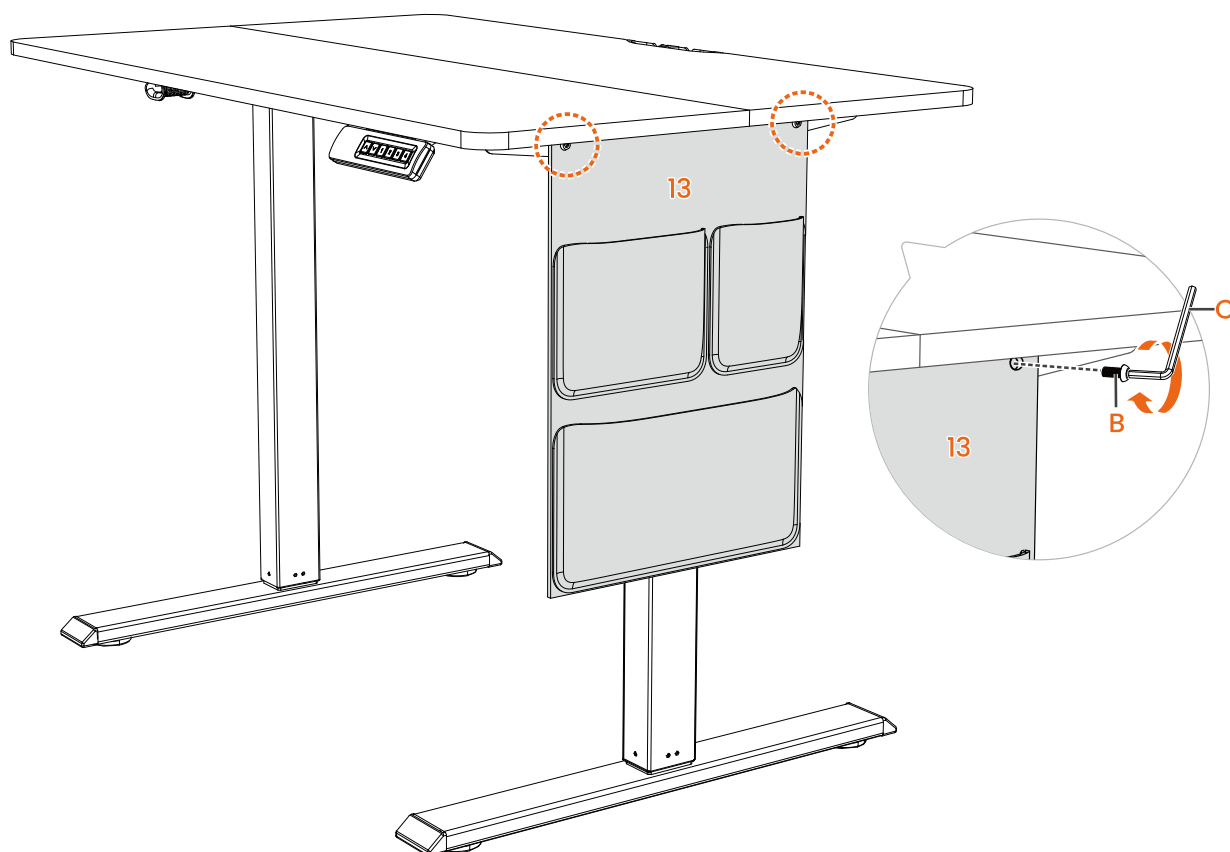

Using the Controller

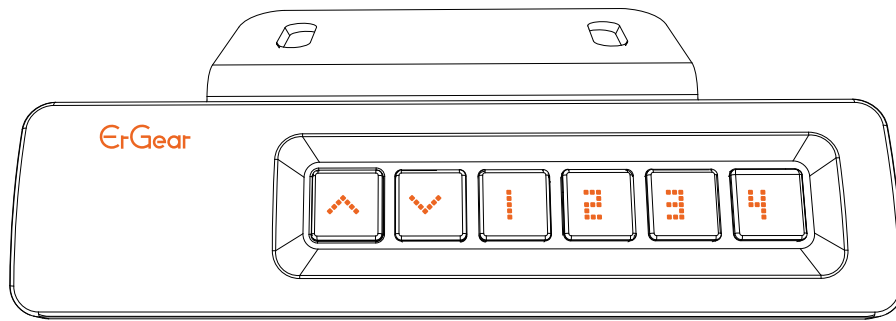

Tip: Reset before first use.

Note: Ensure that there are no obstacles when using the desk, that the desktop is not too close to the wall, and that all cables are long enough for the desk to move up and down freely. When the controller screen is off (power-saving mode), press any button to wake it before operating.

Suggestion: Set the most comfortable height when you sit down to **1** and the most comfortable height when you stand up to **2**. The other two presets can be set for another user or for other heights you want to use.

Raise the Desk

Press the  button to raise the desk continuously until it reaches the highest position of 46.8" (119cm) or the button is released.

Lower the Desk

Press the  button to lower the desk continuously until it reaches the lowest position of 27.9" (71cm) or the button is released.

Save Height Settings

Four heights can be stored. Press and hold the **1** / **2** / **3** / **4** button for 3 seconds. The digital number will flash three times and the current height will be stored to that button.

Select Height Setting 1

Press the **1** button. The desk will move to the height that was previously set for that button. Press any button to stop the desk.

Select Height Setting 2

Press the **2** button. The desk will move to the height that was previously set for that button. Press any button to stop the desk.

Select Height Setting 3

Press the **3** button. The desk will move to the height that was previously set for that button. Press any button to stop the desk.

Select Height Setting 4

Press the **4** button. The desk will move to the height that was previously set for that button. Press any button to stop the desk.

Settings	
Reset	1. Press and hold the ✓ button until the desk goes down to its lowest level, and then release the button. 2. Press and hold the ✓ button for 5 seconds until the screen displays 'RST,' then release the button with 'RST' flashing. 3. Press and hold it again until the desk goes down to its lowest level and comes back up slightly. The screen will display current height again, and reset is complete. Note: It is recommended that you remove all items from the desktop before performing a reset.
'RST' displays as RST on the screen.	
Lock/Unlock	Press and hold 1 and 2 buttons together for 3 seconds to turn the lock on. The screen will display 'LOC' and the buttons will be disabled. Repeat to turn the lock off again.
Change Display Height Units	Press and hold 1 and 3 buttons together for 3 seconds to switch the display height unit. The default unit is imperial.

Change Collision Detection Sensitivity	1. Press and hold 1 and 4 buttons together for 3 seconds and 'S02' will flash on the screen. The last digit displayed is the current sensitivity level, and the value range is 0–3 (0: off; 1–3: highest to lowest). 2. Select other levels by pressing △ or ▽ button, then press and hold 1 and 4 buttons together for 3 seconds. The digits will stop flashing and the screen will display the current height again. Note: Sensitivity is preset to Normal by the factory. However, sensitivity may be adjusted if needed.
Set/Clear Lowest Limit	1. To set the lowest height limit, press and hold ▽ and 1 buttons together for 3 seconds. The screen will display '–dO.' Whenever the desk reaches the lowest limit, the screen will display '–LO.' 2. To clear the lowest height limit, move the desk down to the lowest height (screen displays '–LO'), then press ▽ and 1 buttons together for 3 seconds. '–dO' will flash on the screen and the limit will be cleared.
Set/Clear Highest Limit	1. To set the highest limit, press and hold △ and 1 buttons together for 3 seconds. The screen will display '–UP.' Whenever the desk reaches the highest limit, the screen will display '–HI.' 2. To clear the highest limit, move the desk up to the highest level (screen displays '–HI'), then press △ and 1 buttons together for 3 seconds. '–UP' will flash on the screen and the limit will be cleared.
Troubleshooting	
1. Please try resetting the desk if you have any issues including the following: • Abnormal operation. • The controller screen displays 'RST' (reset). • The controller screen displays error message E01–E08, but the motor cable is connected correctly. 2. If the controller screen displays 'HOT,' please wait 20 minutes for the motor to cool down before making any further height adjustment.	

Wichtige Sicherheitsinformationen

- Bei entsprechender Aufsicht und Einweisung kann dieser Schreibtisch von Kindern ab 8 Jahren und Personen mit eingeschränkten körperlichen, sensorischen oder geistigen Fähigkeiten verwendet werden. Benutzer müssen den sicheren Betrieb und die damit verbundenen potenziellen Gefahren verstehen.
 - Reinigung und Benutzerwartung dürfen nicht von Kindern durchgeführt werden.
 - Der Schreibtisch darf nur mit dem mitgelieferten Netzteil betrieben werden.
 - Trennen Sie die Stromversorgung, wenn Sie Wartungs- und Reinigungsarbeiten durchführen.
 - Untersuchen Sie den Schreibtisch regelmäßig auf Anzeichen von Abnutzung oder Beschädigung. Wenn solche Anzeichen vorhanden sind oder der Schreibtisch missbräuchlich verwendet wurde oder nicht funktioniert, wenden Sie sich für weitere Informationen an den Lieferanten.
 - Wenn Sie einen Schalter betätigen, der die Bewegung des Möbels einleitet und aufrechterhält, die Bewegung des Möbels beendet oder eine Richtungsänderung des Möbels bewirkt, stellen Sie sicher, dass sich keine Personen in der Bewegung befinden.
 - Stellen Sie den Schreibtisch richtig auf, um eine Gefahr durch Einklemmen mit anderen Möbeln zu vermeiden.
 - Entfernen Sie regelmäßig Staub, um Ihren Schreibtisch sauber zu halten. Schalten Sie den Schreibtisch aus und reiben Sie ihn dann vorsichtig mit einem feuchten Tuch ab.
-



nur für die Verwendung in Innenräumen

Spezifikationen



Höhenverstell-Bereich
71-119cm (27.9 bis 46.8 Zoll)




Eingangsstrom
100V bis 240V




Max. Geschwindigkeit
18mm/s

Werkzeuge benötigt (nicht enthalten)

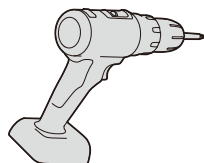

Bohrer

ODER




Kreuzschraubendreher

Schritt 1

Mitgelieferte Teile und Beschläge

A x 8



Bolzen
M6 x 30mm

B x 10



Bolzen
M6 x 10mm

C x 1



Inbusschlüssel
4mm (5/32 Zoll)

I x 1




Schraubenschlüssel

01 x 1




Querstange

02 x 1

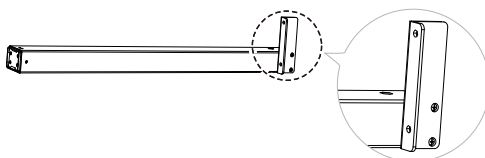

L-Fuß

03 x 1

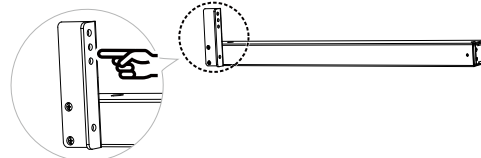


R-Fuß

04 x 2



Bein-Unterteil

05 x 2




Seitenplatte

06 x 1



Übertragungsstange

07 x 1



Motor

Schritt 2 Mitgelieferte Teile und Beschläge

D x 6



Schrauben
ST5 x 14mm

E x 3



Schrauben
ST3.9 x 13mm

F x 3



Tischplattenverbinder

G x 5




Holzdübel

08 x 1



Kabelorganizer

09 x 1



Schreibtischplatte

Schritt 3 Mitgelieferte Teile und Beschläge

D x 14




Schrauben
ST5 x 14mm

10 x 1



Ablagehaken

11 x 1



Steuergerät


Schritt 4 Mitgelieferte Teile und Beschläge

H x 4



Kabelklemme

12 x 1



Stromkabe

**Tatsächliches
Teil kann variieren.**

Schritt 5 Mitgelieferte Teile und Beschläge

B x 2




Bolzen
M6 x 10mm

C x 1



Inbusschlüssel
4mm (5/32 Zoll)

13 x 1



Seitentasche

Nicht sämtliche Hardware, die in diesem Paket enthalten ist, wird verwendet.

Kontaktiere uns

Wenn Sie Teile erhalten, die beschädigt oder defekt sind oder Teile fehlen, kontaktieren Sie uns bitte.



1-800-651-9525 (US/CA)
44-808-196-3875 (UK)

Mon-Fri, 8am-8pm (CST)
Mon-Fri, 2pm-10pm (UTC)



support@ergear.com

Schritt 1 Zusammenbau des Rahmens


L-Fuß Ende



Die Beule wird näher nach hinten versetzt.

06



Motor Seite

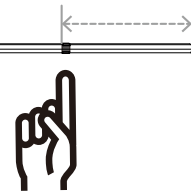


Die Bodenwelle ist weiter zurückgesetzt.

Setzen Sie die Übertragungsstange in den Motor ein.


Wichtig: Achten Sie auf die Ausrichtung der Lasche.

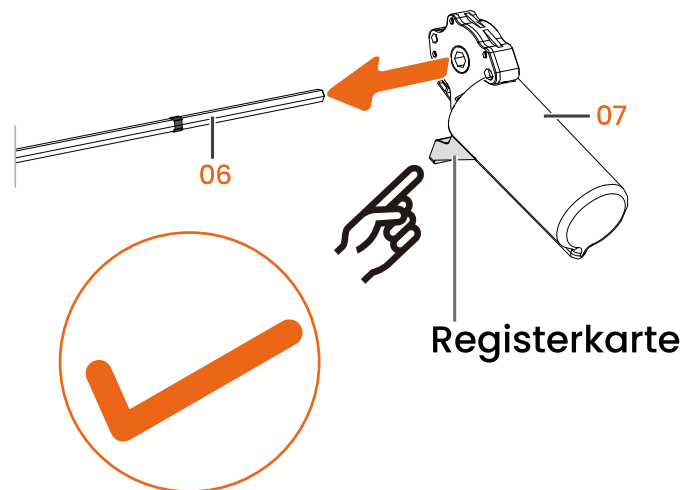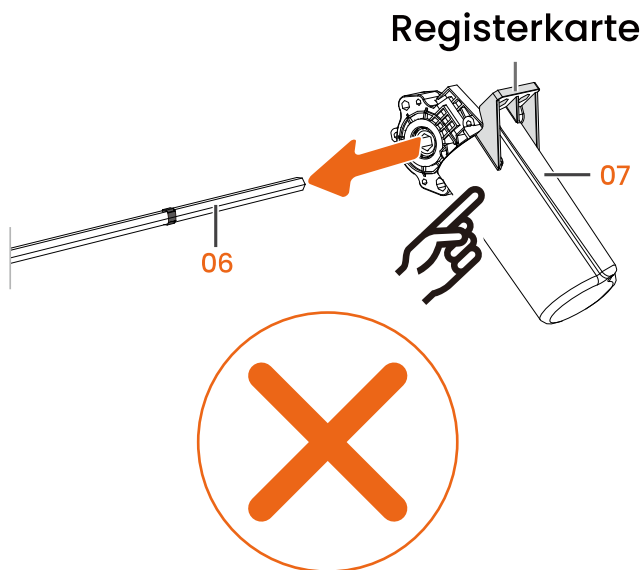


Die Bodenwelle ist weiter zurückgesetzt.

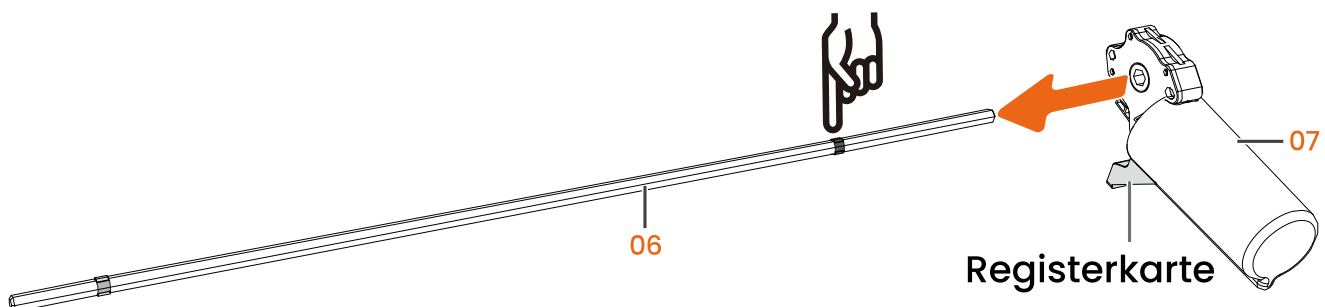

Setzen Sie die Übertragungsstange mit dem Motor in das R-Fuß.

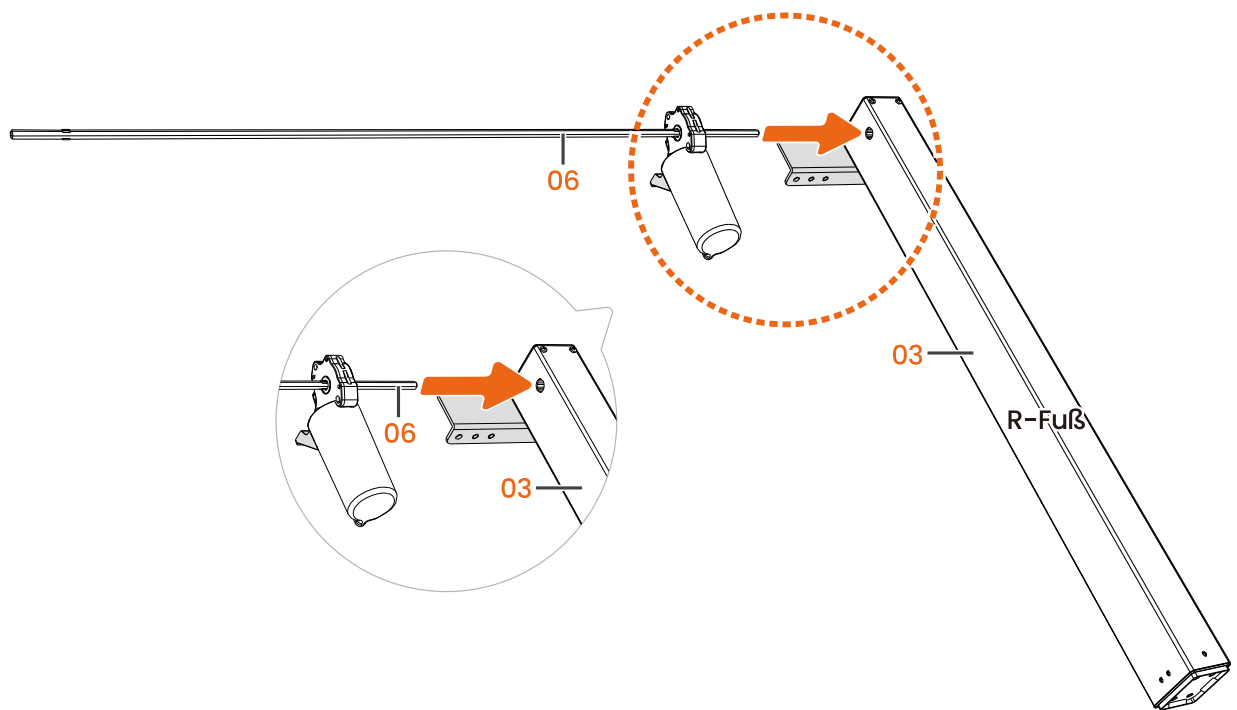


Stecken Sie das L-Fuß auf das andere Ende der Übertragungsstange.

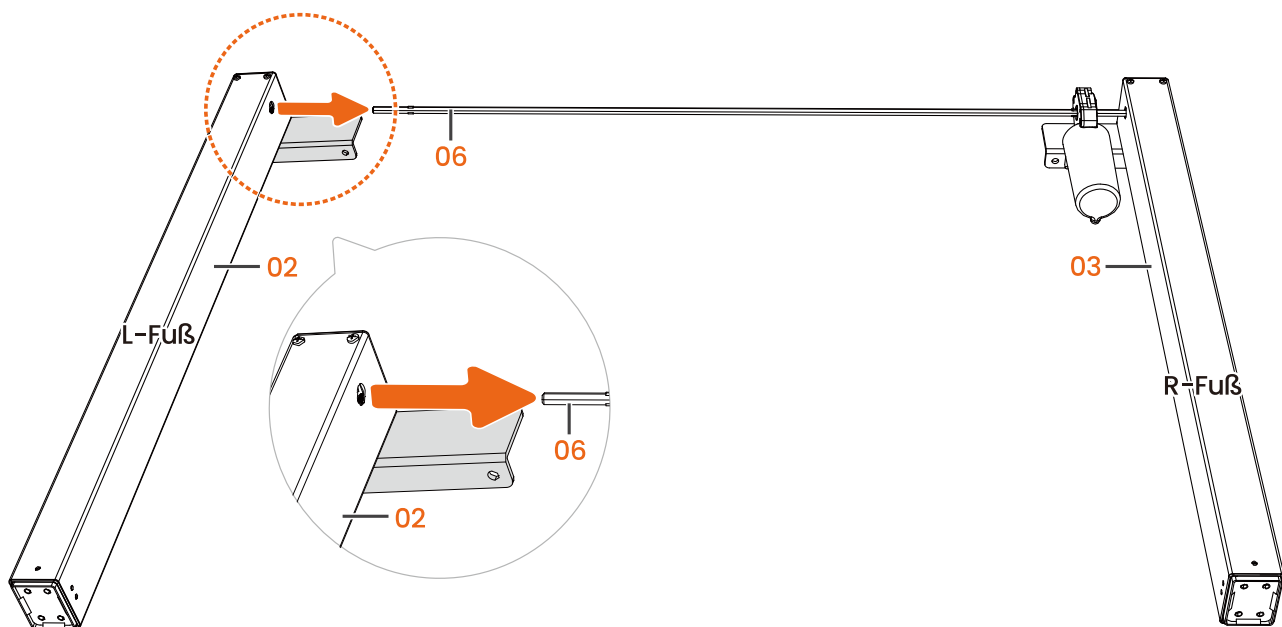


Hinweis: Wenn die Antriebsstange nicht reibungslos in das Loch im L-Fuß passt, verwenden Sie den Schraubenschlüssel, um die Position fein einzustellen.




Verwenden Sie den Schraubenschlüssel, um die Position fein einzustellen.

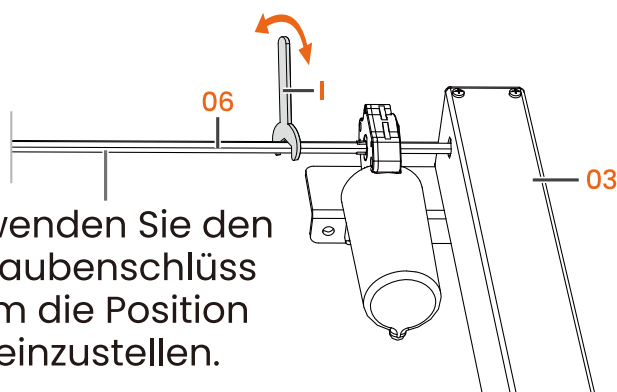


Drehen Sie die Beine vorsichtig nacheinander um.




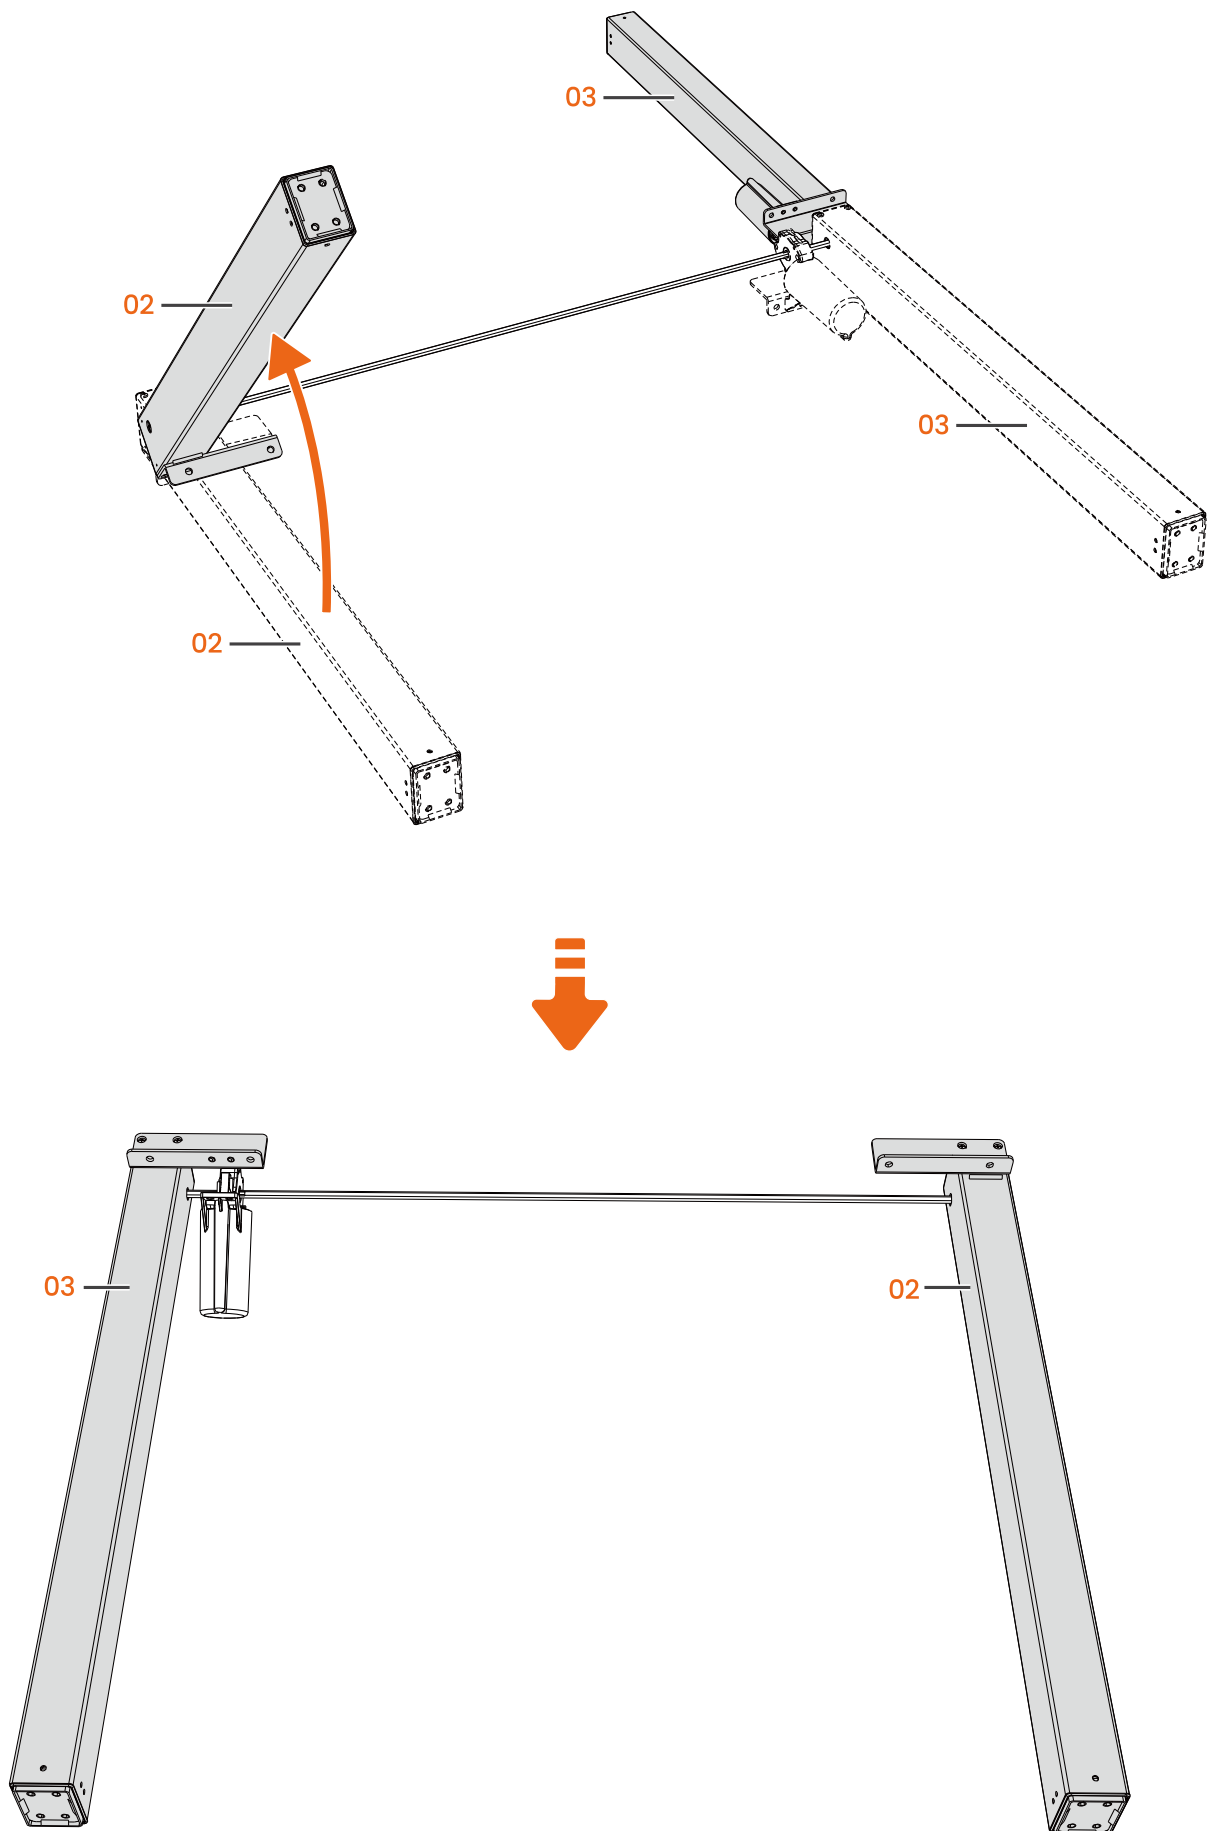


Befestigen Sie die Querstange am R-Fuß und dann am L-Fuß. Wenn die Löcher nicht ausgerichtet sind, justieren Sie das L-Fuß.

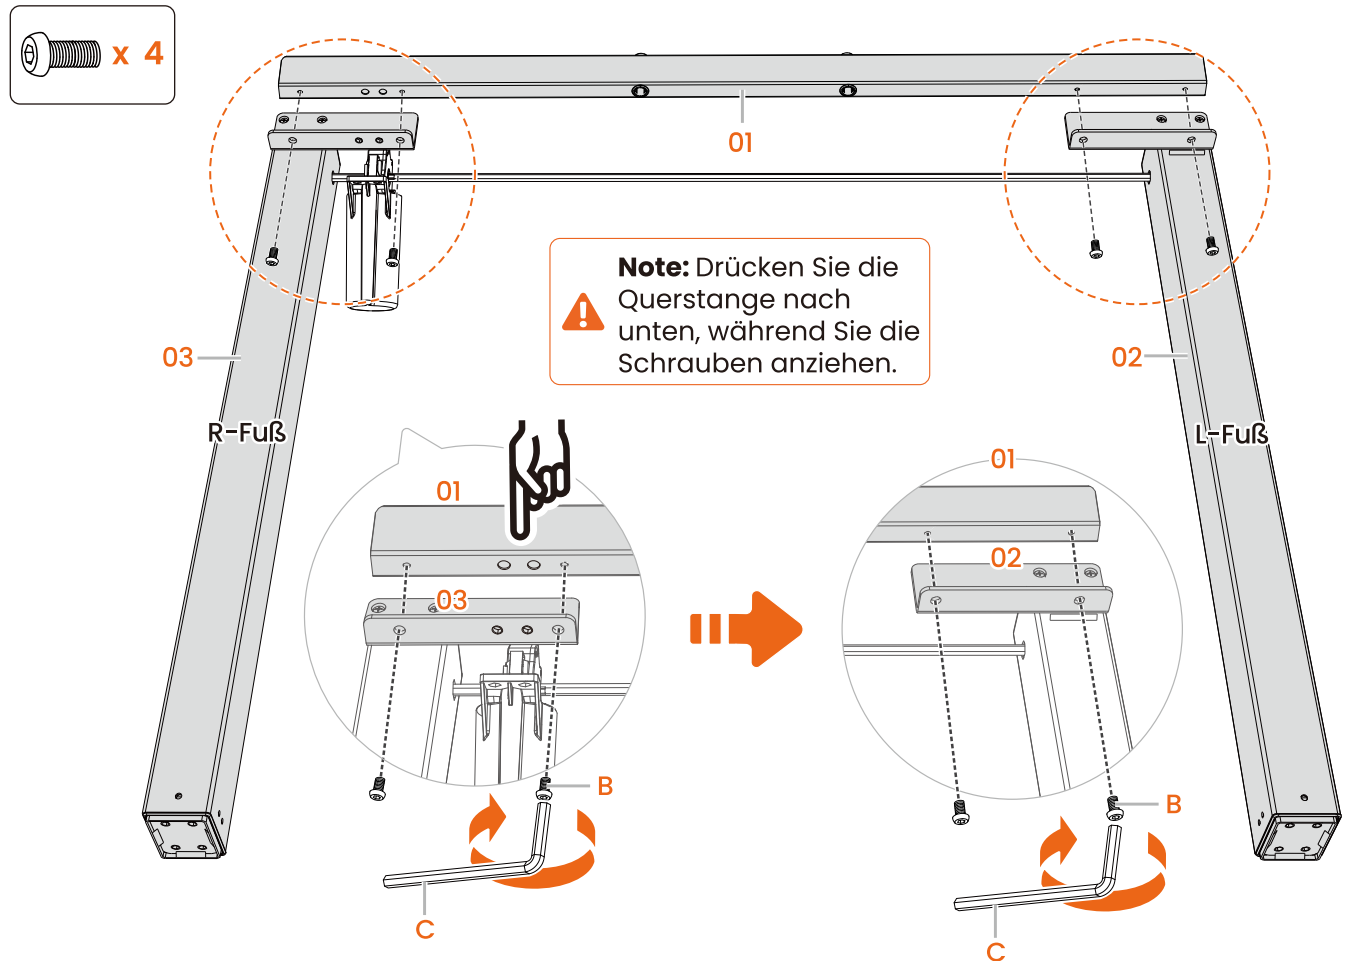


Sichern Sie den Motor.

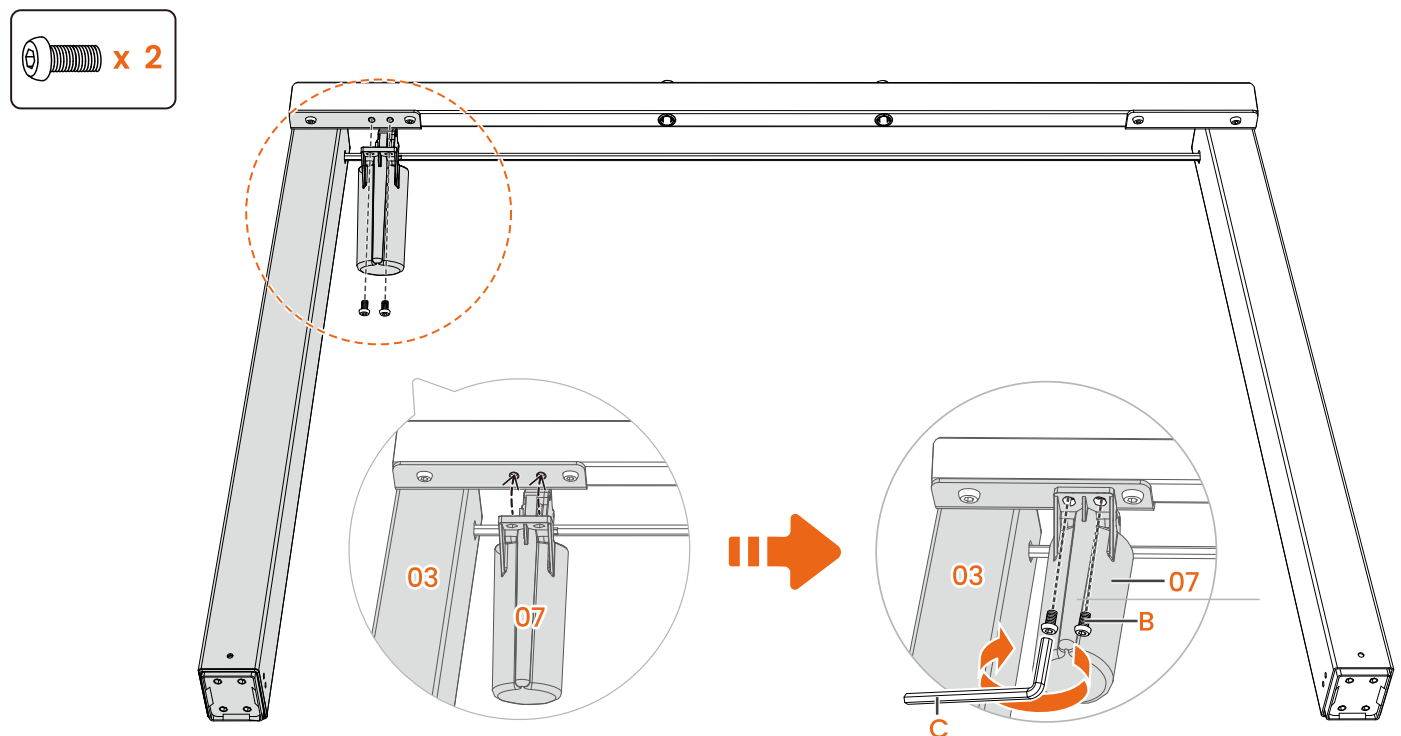

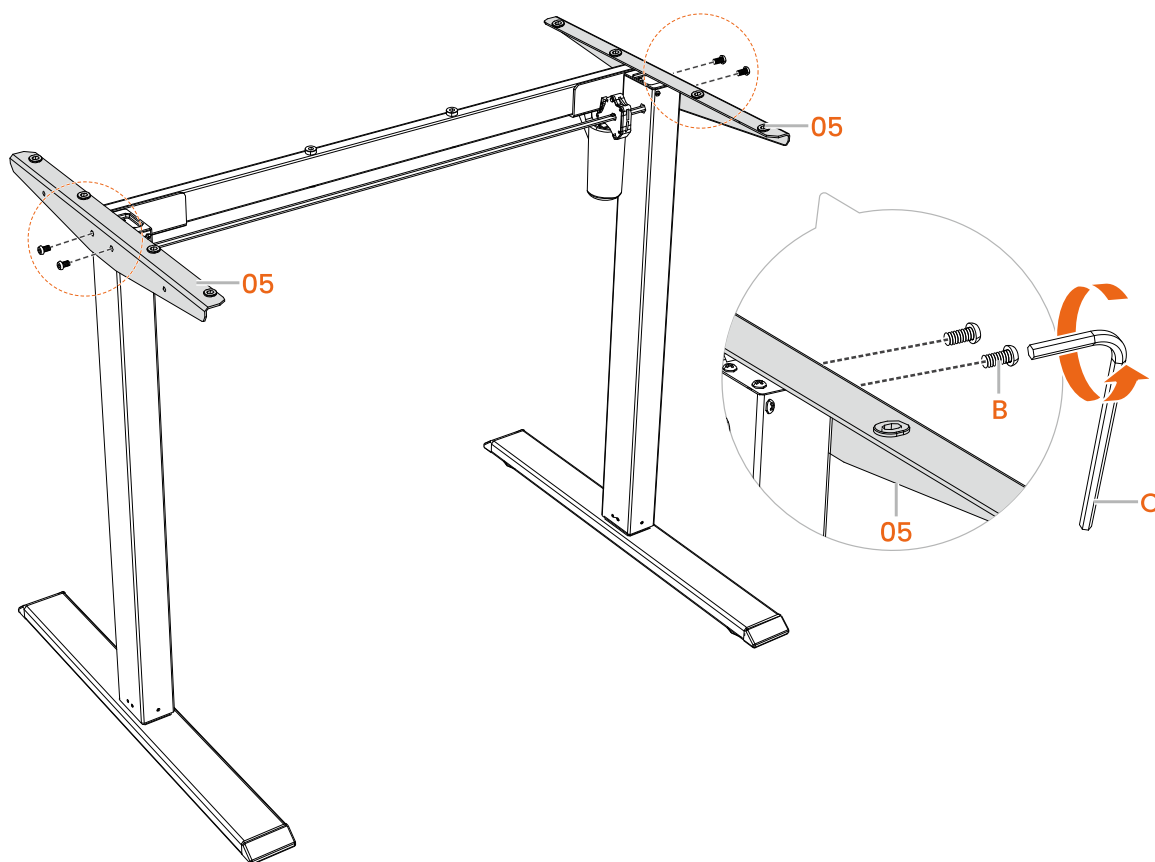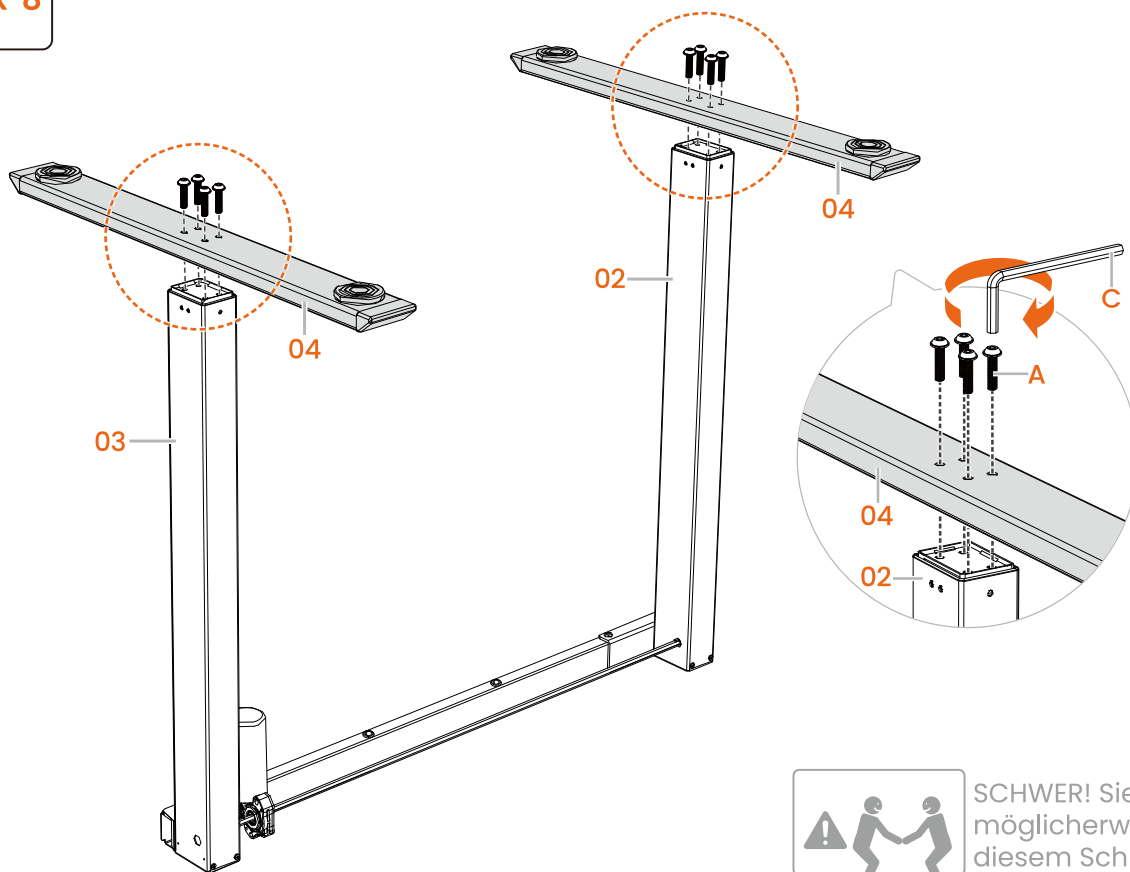




Stellen Sie sicher, dass die Gummipuffer am Rahmen befestigt sind. Wenn welche abgefallen sind, bringen Sie sie wieder an oder verwenden Sie die Ersatz-Gummipuffer.

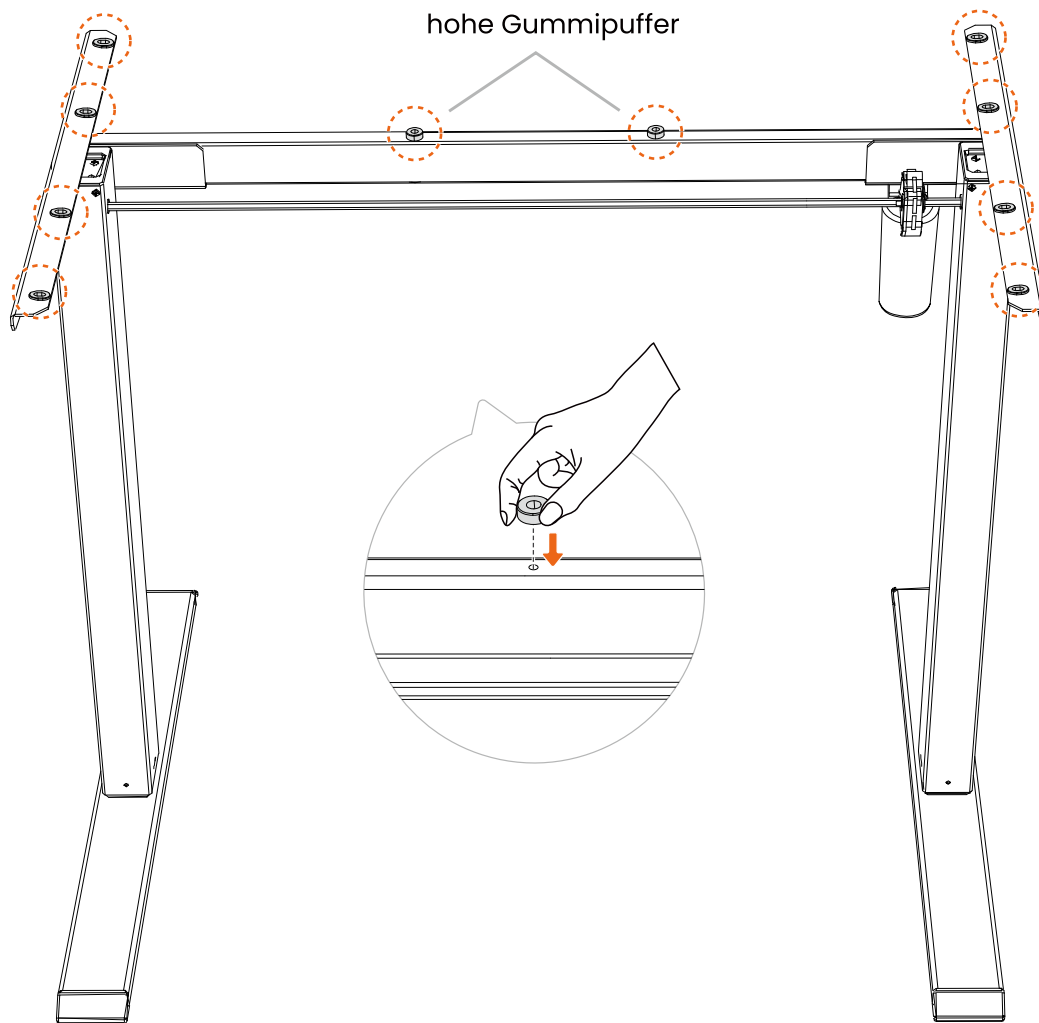

Schritt 2 Zusammenbau der Tischplatte



Tipp: Markieren Sie die Positionen der vorgebohrten Löcher.

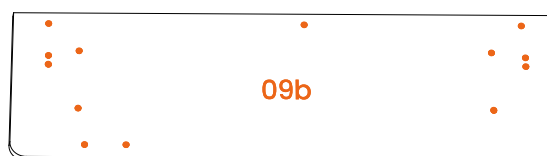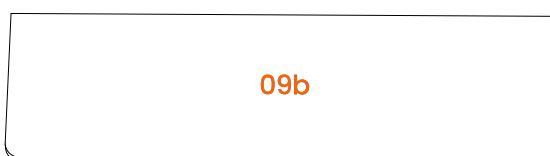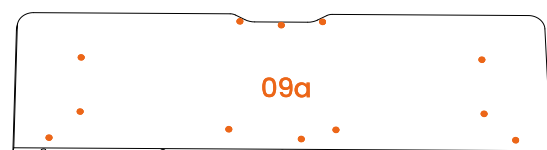

Oberseite

Unterseite

WICHTIG:



Die Positionen der vorgebohrten Löcher können je nach Schreibtischgröße variieren. Die Illustrationen zeigen Montageschritte für eine Schreibtischgröße, sollten jedoch für jeden Installationsprozess ähnlich bleiben.

Bei Problemen kontaktieren Sie uns bitte.




1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)




support@ergear.com


Für einen 40 Zoll langen Tisch


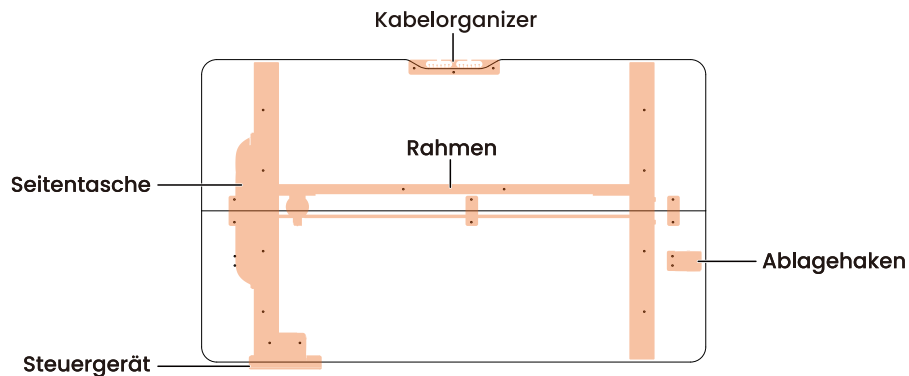




Für einen 48 Zoll langen Tisch

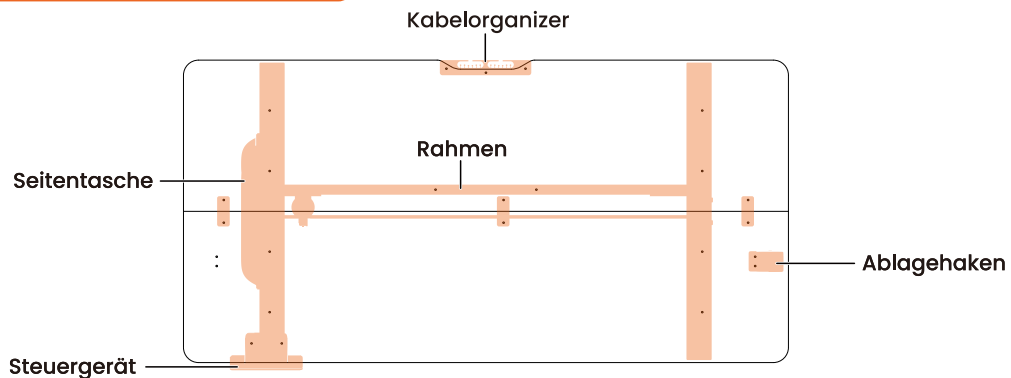



Bauen Sie die Tischplatte so zusammen, dass die Unterseite der Platten oben zeigt.

 x 5


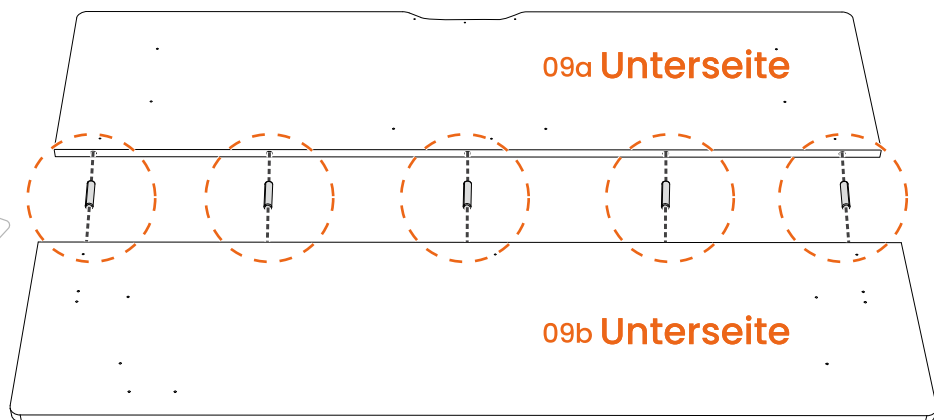
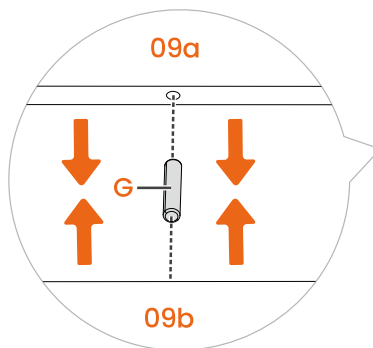


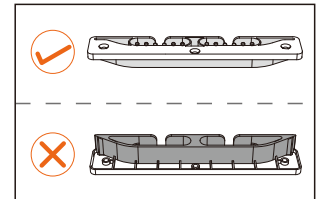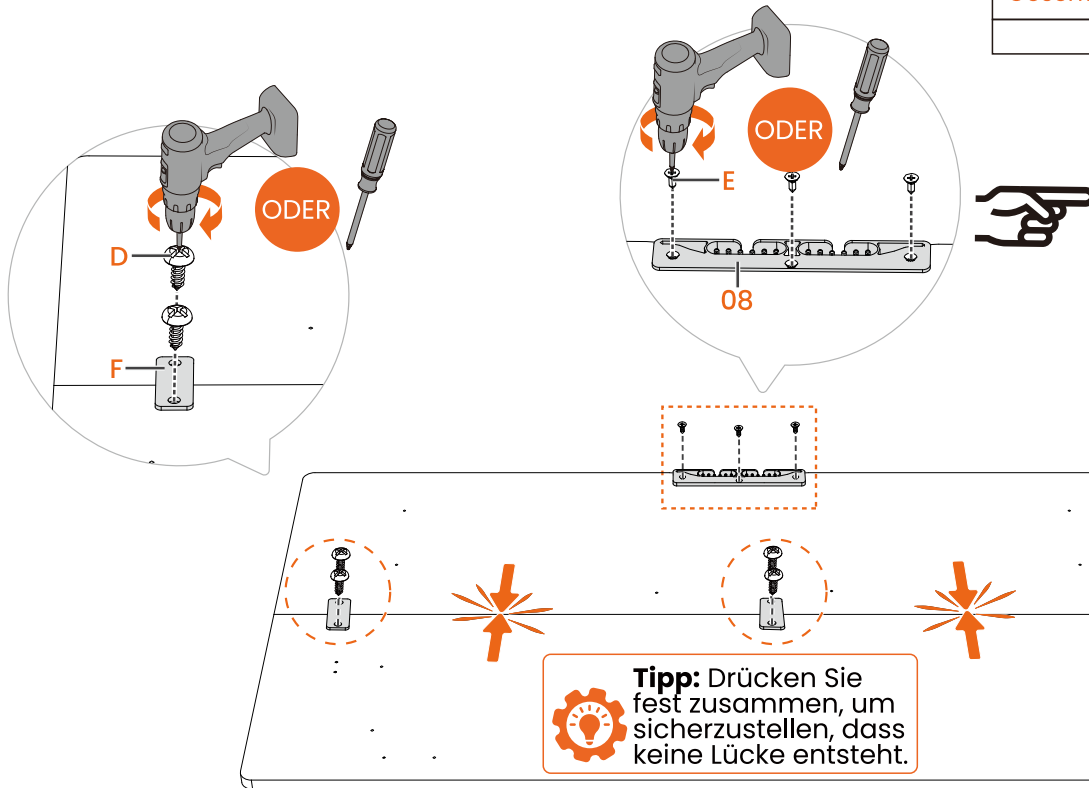

Schritt 3 Anbringen der Tischplatte

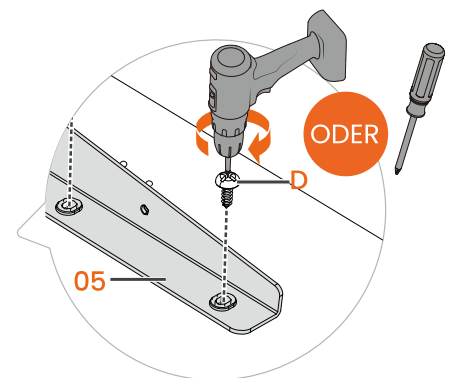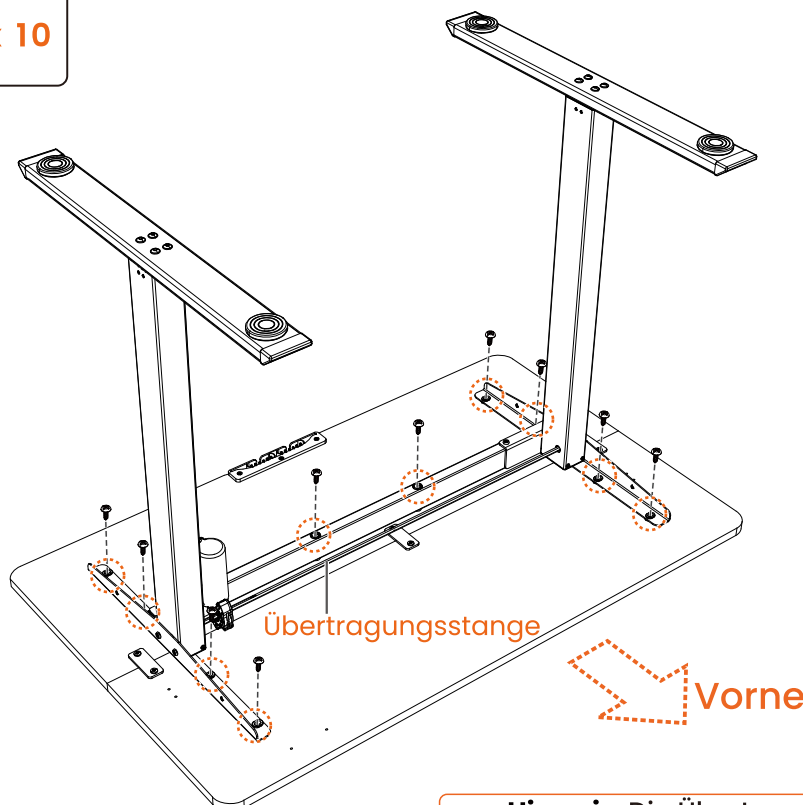




Hinweis: Die Übertragungsstange zeigt nach Vorderseite.

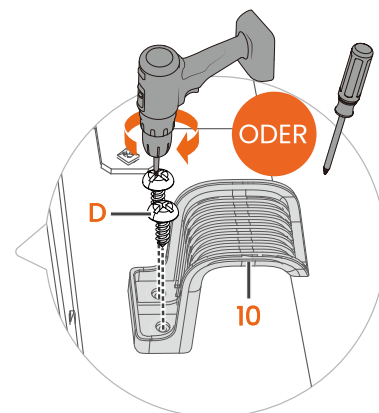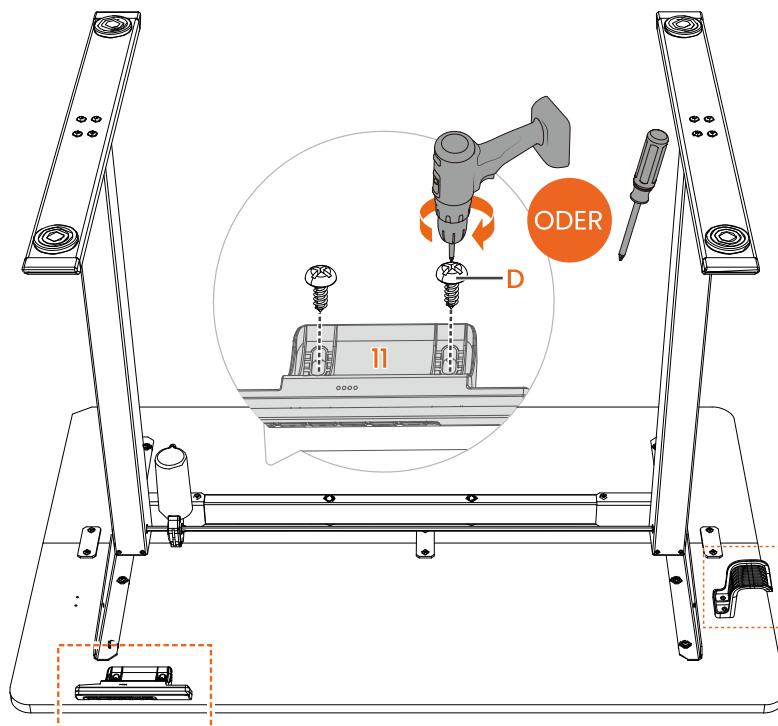

Schritt 4 Anschließen der Kabel





Tipp: Ein Beispiel für die Anordnung von Kabelclips ist unten dargestellt. Die Kabelclips können jedoch nach Ihren Bedürfnissen angeordnet werden.

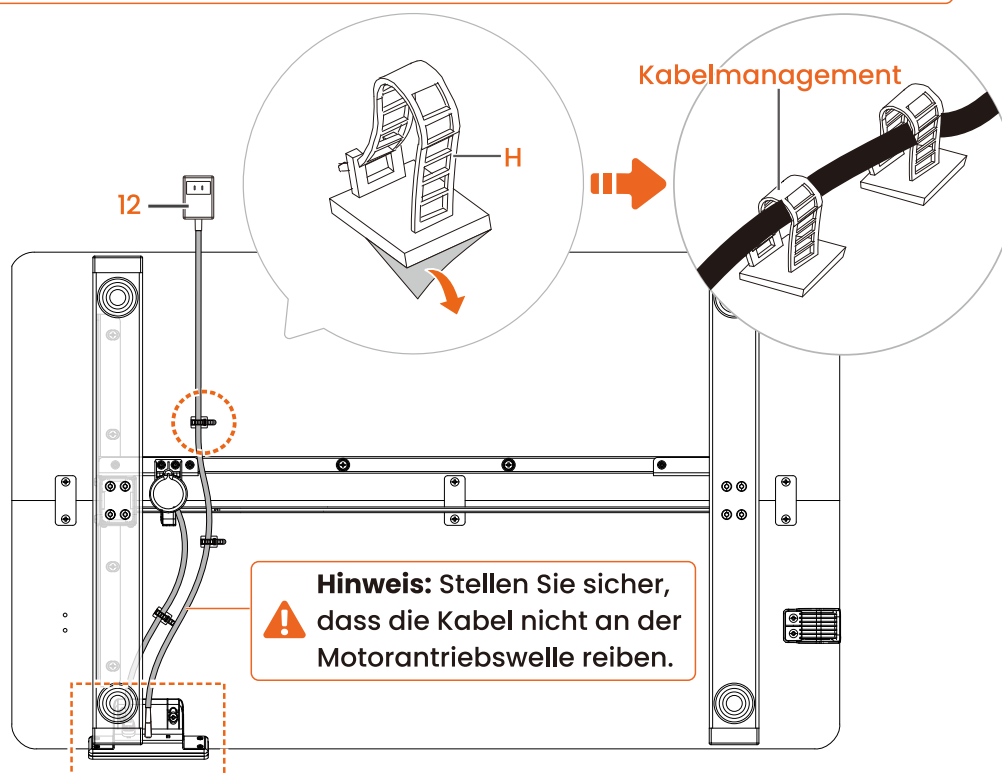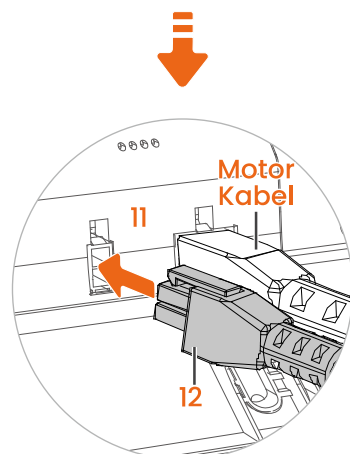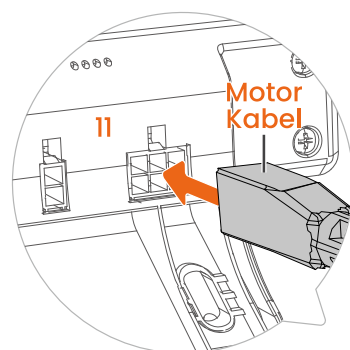


Hinweis: Beim Umdrehen des Schreibtisches darf der Controller nicht mit dem Boden kollidieren, da dies zu Schäden führen könnte.

Schritt 5 Befestigen der Seitentasche

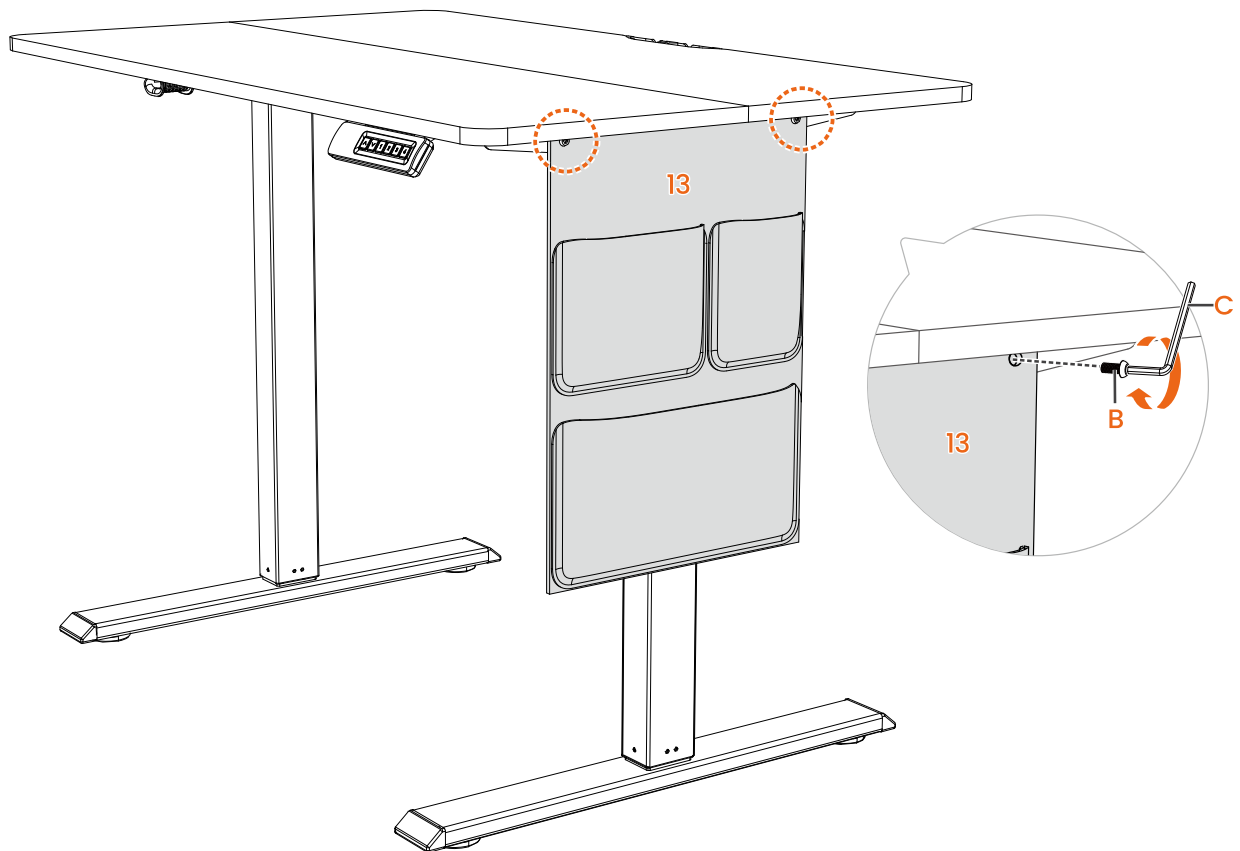

Verwendung der Steuerung

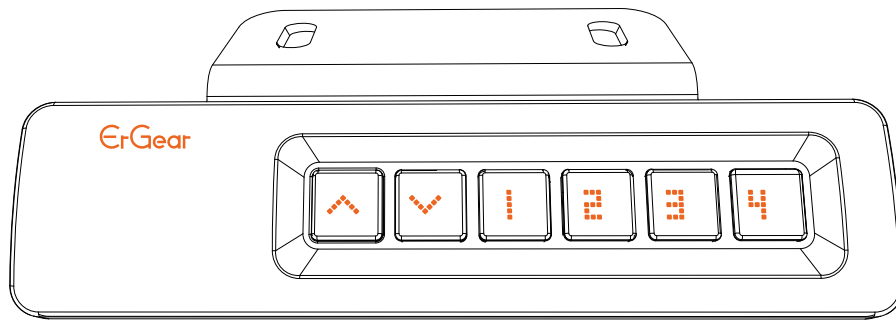

Tipp: Vor der ersten Verwendung zurücksetzen.

Hinweis: Stellen Sie sicher, dass beim Benutzen des Tisches keine Hindernisse vorhanden sind, dass die Tischplatte nicht zu nah an der Wand ist und dass alle Kabel lang genug sind, damit der Tisch frei auf- und abbewegt werden kann. Wenn der Controller-Bildschirm ausgeschaltet ist (Energiesparmodus), drücken Sie eine beliebige Taste, um ihn vor dem Betrieb zu aktivieren.

Anregung: Stellen Sie die bequemste Höhe beim Sitzen auf **1** und die bequemste Höhe beim Stehen auf **2**. Die anderen beiden Voreinstellungen können für einen anderen Benutzer oder für andere Höhen, die Sie verwenden möchten, eingestellt werden.

Den Schreibtisch anheben

Drücken Sie die Taste , um den Schreibtisch fortwährend anzuheben, bis Sie in die höchste Position von 119cm (46.8 Zoll) gelangen oder die Taste freigegeben wird.

Den Schreibtisch absenken

Drücken Sie die Taste , um den Schreibtisch fortwährend abzusenken, bis er in die niedrigste Position von 71cm (27.9 Zoll) gelangt, oder die Taste freigegeben wird.

Speichern der Höheneinstellungen

Sie können vier Höhen speichern. Halten Sie die Taste **1** / **2** / **3** / **4** für 3 Sekunden gedrückt. Die digitale Zahl blinkt dreimal und die aktuelle Höhe wird auf dieser Taste gespeichert.

Wählen Sie die Einstellung der Höhe 1

Drücken Sie die Taste **1**, und der Schreibtisch bewegt sich auf die Höhe, die zuvor für diese Taste eingestellt wurde. Drücken Sie eine beliebige Taste, um den Schreibtisch zu stoppen.

Wählen Sie die Einstellung der Höhe 2

Drücken Sie die Taste **2**, und der Schreibtisch bewegt sich auf die Höhe, die zuvor für diese Taste eingestellt wurde. Drücken Sie eine beliebige Taste, um den Schreibtisch zu stoppen.

Wählen Sie die Einstellung der Höhe 3

Drücken Sie die Taste **3**, und der Schreibtisch bewegt sich auf die Höhe, die zuvor für diese Taste eingestellt wurde. Drücken Sie eine beliebige Taste, um den Schreibtisch zu stoppen.

Wählen Sie die Einstellung der Höhe 4

Drücken Sie die Taste **4**, und der Schreibtisch bewegt sich auf die Höhe, die zuvor für diese Taste eingestellt wurde. Drücken Sie eine beliebige Taste, um den Schreibtisch zu stoppen.

Einstellungen	
Zurücksetzen	1. Halten Sie die Taste  gedrückt, bis der Schreibtisch auf die niedrigste Fläche abgesenkt ist, und geben Sie dann die Taste frei. 2. Halten Sie die Taste  5 Sekunden lang gedrückt, bis auf dem Bildschirm 'RST' angezeigt wird, und geben Sie dann die Taste frei, wobei 'RST' blinkt. 3. Halten Sie die Taste erneut gedrückt, bis der Schreibtisch auf die niedrigste Höhe sinkt und wieder leicht nach oben fährt. Die aktuelle Höhe wird wieder auf dem Bildschirm angezeigt und das Zurücksetzen ist abgeschlossen. Hinweis: Es wird empfohlen, alle Gegenstände von der Tischplatte zu entfernen, bevor Sie einen Reset durchführen.
Verriegeln/ Entriegeln	Drücken und halten Sie die Tasten 1 und 2 3 Sekunden lang zusammen, um die Sperre zu aktivieren. Der Bildschirm zeigt 'LOC' an und die Tasten werden deaktiviert. Wiederholen Sie den Vorgang, um die Sperre wieder zu deaktivieren.
Wechsel der Höheneinheiten des Displays	Drücken und halten Sie die Tasten 1 und 3 3 Sekunden lang zusammen, um die Anzeigehöheinheit zu wechseln. Die Standardeinheit ist imperial.

Wechsel der Empfindlichkeit für die Kollisionserkennung	1. Halten Sie die Tasten 1 und 4 gleichzeitig 3 Sekunden lang gedrückt. Auf dem Bildschirm blinkt 'S02'. Die letzte angezeigte Ziffer ist die aktuelle Stufe der Empfindlichkeit, der Wertebereich ist 0–3 (0: AUS; 1–3: höchste bis niedrigste). 2. Wählen Sie andere Stufen, indem Sie die Taste △ und ▽ drücken, und halten Sie dann die Tasten 1 und 4 3 Sekunden lang zusammen gedrückt. Die Ziffern stoppen zu blinken und der Bildschirm zeigt erneut die aktuelle Höhe an. Hinweis: Die Empfindlichkeit ist ab Werk auf Normal voreingestellt. Die Empfindlichkeit kann jedoch bei Bedarf angepasst werden.
Niedrigsten Grenzwert einstellen / löschen	1. Um den niedrigsten Höhengrenzwert einzustellen, halten Sie die Tasten ▽ und 1 zusammen 3 Sekunden lang gedrückt. Auf dem Bildschirm wird '–dO' angezeigt. Immer wenn Sie zum niedrigsten Grenzwert des Schreibtischs gelangen, wird '–LO' auf dem Bildschirm angezeigt. 2. Um den niedrigsten Höhengrenzwert zu löschen, bewegen Sie den Schreibtisch auf die niedrigste Höhe (auf dem Bildschirm wird '–LO' angezeigt) und drücken Sie die Tasten ▽ und 1 gleichzeitig für 3 Sekunden. Auf dem Bildschirm leuchtet '–dO' auf, und der Grenzwert wird gelöscht.
Höchsten Grenzwert einstellen / löschen	1. Um den höchsten Höhengrenzwert einzustellen, halten Sie die Tasten △ und 1 zusammen 3 Sekunden lang gedrückt. Auf dem Bildschirm wird '–UP' angezeigt. Immer wenn Sie zum höchsten Grenzwert des Schreibtisches gelangen, wird '–HI' angezeigt. 2. Um den höchsten Höhengrenzwert zu löschen, bewegen Sie den Schreibtisch auf die höchste Höhe (auf dem Bildschirm wird '–HI' angezeigt) und drücken Sie die Tasten △ und 1 zusammen für 3 Sekunden. Auf dem Bildschirm leuchtet '–UP' auf und der Grenzwert wird gelöscht.

Fehlerbehebung

- Bitte versuchen Sie, den Schreibtisch zurückzusetzen, wenn Sie folgende Probleme haben:
 - Abnormaler Betrieb.
 - Auf dem Bildschirm der Steuerung wird 'RST' (Rückstellen) angezeigt.
 - Auf dem Bildschirm der Steuerung wird die Fehlermeldung E01–E08 angezeigt, aber das Motorkabel ist richtig angeschlossen.
- Wenn auf dem Bildschirm der Steuerung 'HOT' angezeigt wird, warten Sie bitte 20 Minuten, bis der Motor abgekühlt ist, bevor Sie eine weitere Höheneinstellung vornehmen.



Complete Flexibility. Total Freedom

Totale Flexibilität. Totale Freiheit

Thank you for choosing this ErGear product. At ErGear, we strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.

Tielen Dank, dass Sie sich für dieses Produkt von ErGear entschieden haben. Wir bei ErGear sind bestrebt, Ihnen die besten Produkte und den besten Service der Branche zu bieten. Sollten Sie irgendwelche Probleme haben, zögern Sie bitte nicht, uns zu kontaktieren.