Animated White Mesh Reindeer



Illustrated assembly guide

MODEL XD6580

Finished dimensions
Heights: 54 in

Keep the power disconnected while joining the frame and light connections. Use the supplied power source for your item.

Before you begin

Arrange the components on a clean surface. Body and leg frames, upper neck and head, antlers, tail, LED cords, adaptor, ties and ground stakes.



Have scissors ready when zip ties are used. Cut only excess tie ends; keep scissors clear of the light wires.

Assembly sequence

Follow the numbered steps. Check each frame and cord connection before applying power.

1 Attach all four legs



Secure the light wire and fit the four legs with zip ties. Trim excess tie ends without cutting the light wires.

2 Connect the frame braces



Stand the figure upright, connect the frame sections between the legs, and secure them firmly.

3 Fit the upper neck section



Join the upper section to the body at the matching frame connections. Keep the LED cord clear of moving parts.

4 Add the head and antlers




Fit the head and antlers and secure their matching connections as shown.

Assembly sequence


Follow the numbered steps. Check each frame and cord connection before applying power.

5 Attach the tail

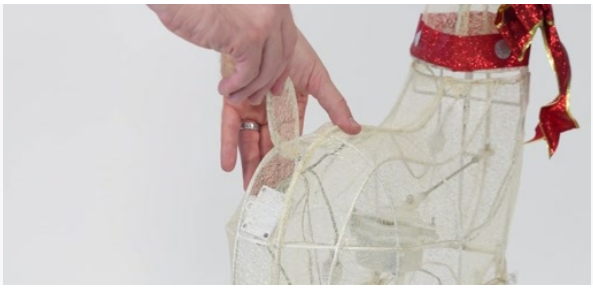

Align the tail with the rear frame and secure it firmly in place.

6 Secure and test

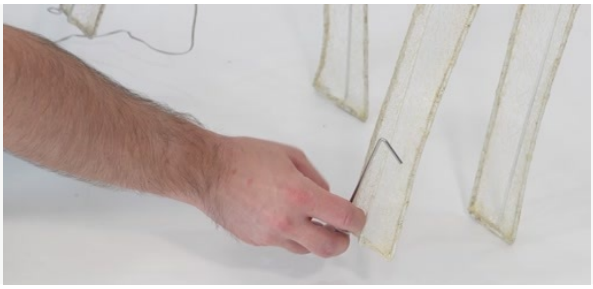

Hook the included stakes into the feet outdoors if needed. Check all fittings, connect the adaptor, and test the illuminated animated display.

Warranty?
Troubleshooting?

Scan the QR code for
instructions, support, & registration.

XProductSupport.com/product/XD6580

Instructions, support & warranty

Scan the mini card or click below to:

Watch the instructional video
Create a support ticket
Register your item for warranty

XProductSupport.com/product/XD6580