WARNING!

Children have died from furniture tipover. Fixed wall device have been included with this product;you must install the fixed wall device according to these instructions in order to minimize the risk of furniture.If you have any questions about this product or the Fixed wall device , please contact us immediately.

Never allow children to climb or hang on furniture,including drawers or cabiner doors.

In addition to installing the restrains,to help prevent tip-over.

1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on the product.

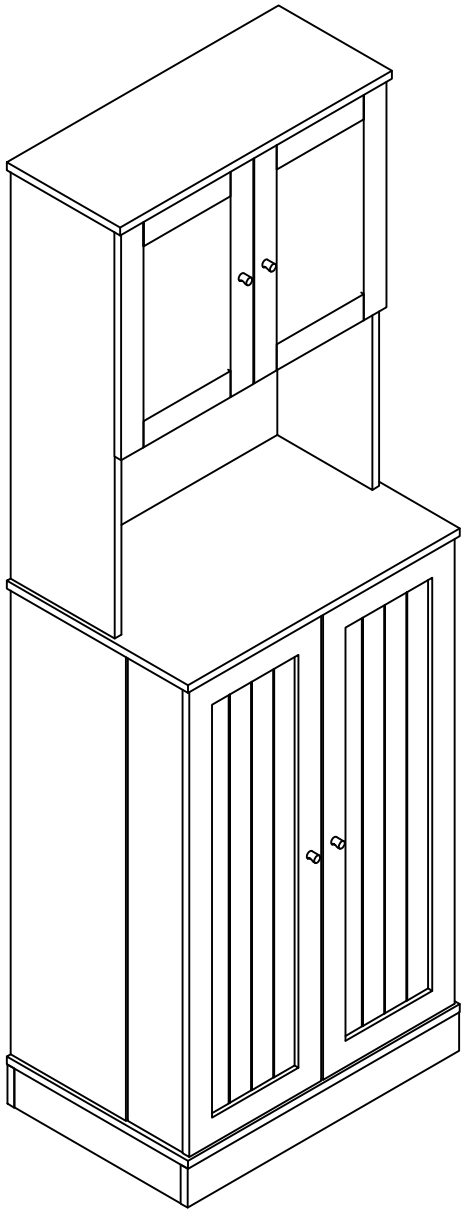

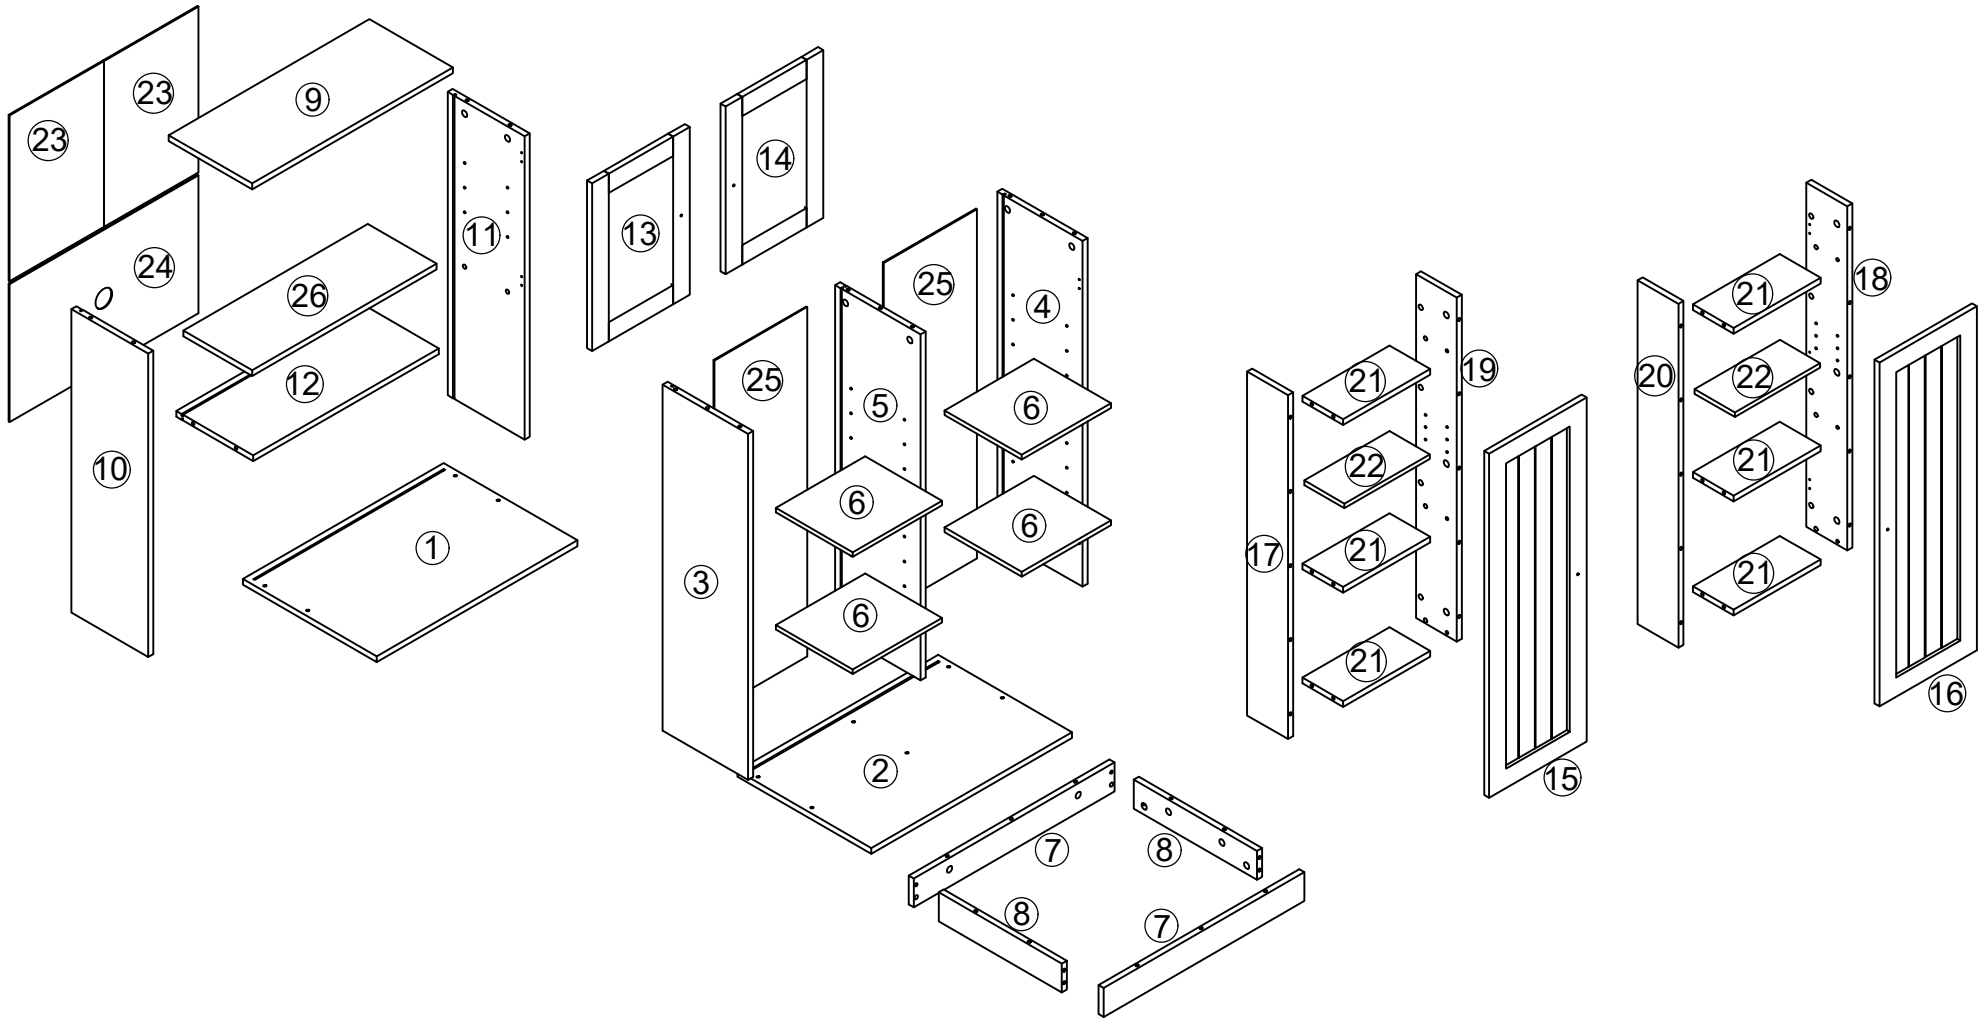

A 50PCS	B 50PCS	C 8*40 29PCS	D 3.5*14 72PCS	E 277mm 8PCS	F 7*50 10PCS	G 6PCS	H 28PCS	I 4PCS	J 2PCS
K K2 K1 4PCS	L 4PCS	M 4*20 4PCS	N 22PCS	O 3*12 22PCS					

1 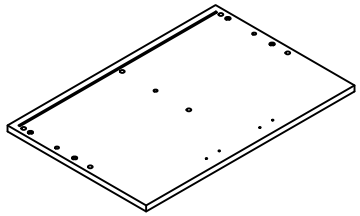 600*400 1PS	2 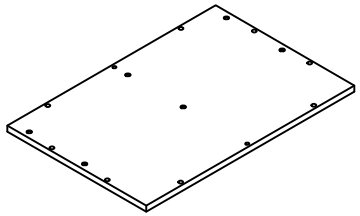 600*400 1PS	3 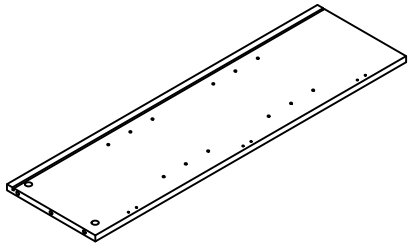 895*255 1PS	4 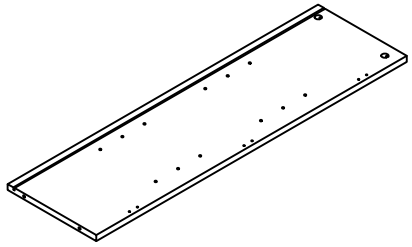 895*255 1PS
5 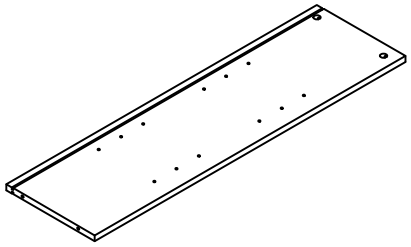 895*255 1PS	6  267*230 4PS	7 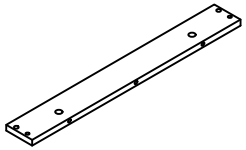 600*75 2PS	8  368*75 2PS
9 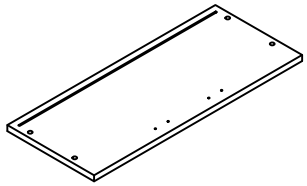 600*250 1PS	10 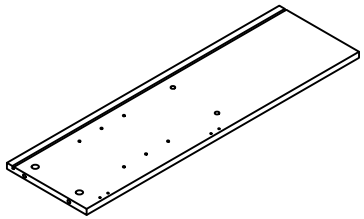 785*230 1PS	11 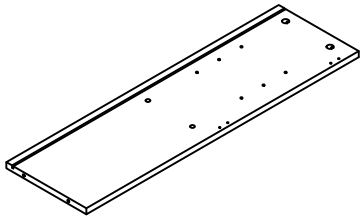 785*230 1PS	12 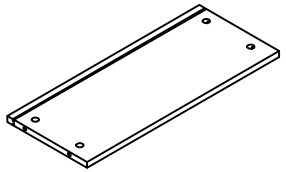 554*230 1PS
13 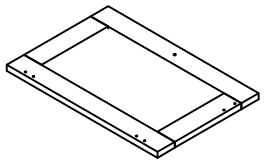 434*292 1PS	14 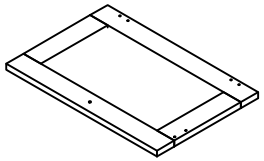 434*292 1PS	15 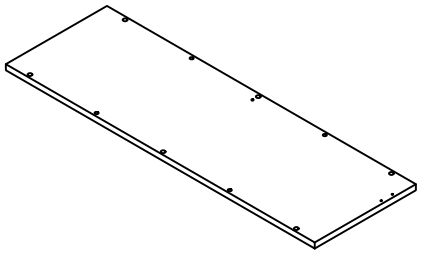 890*291 1PS	16 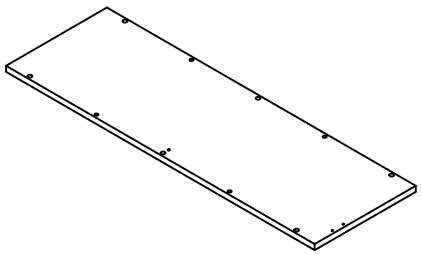 890*291 1PS

17

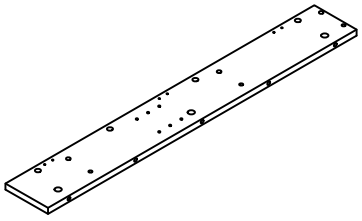

890*122 1PS

18

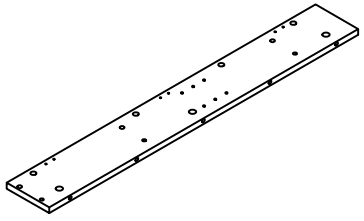

890*122 1PS

19

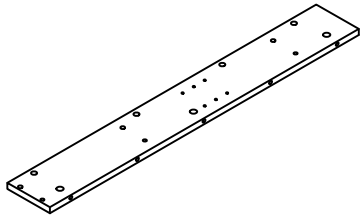

890*122 1PS

20

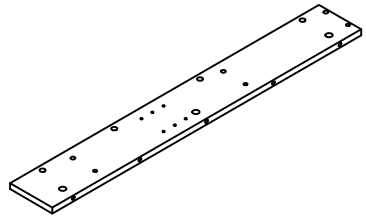

890*122 1PS

21



259*122 6PS

22



254*120 2PS

23

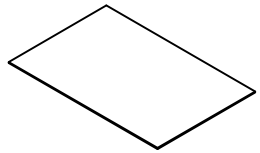

429*282 2PS

24

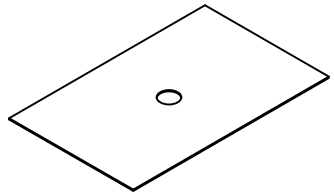

357*564 1PS

25

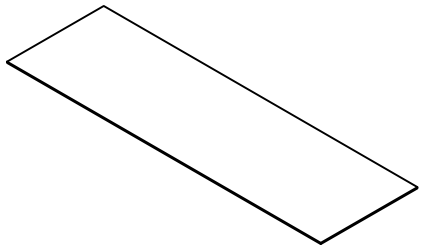

904*278 2PS

26

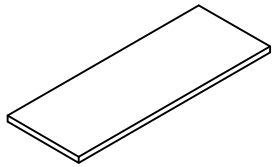

551*205 1PS

Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!

I

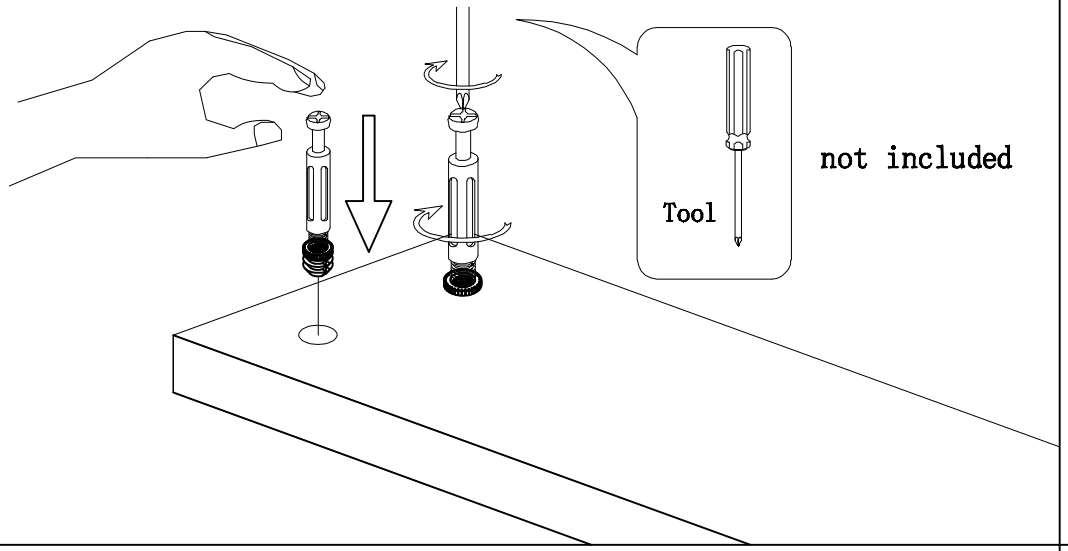

II

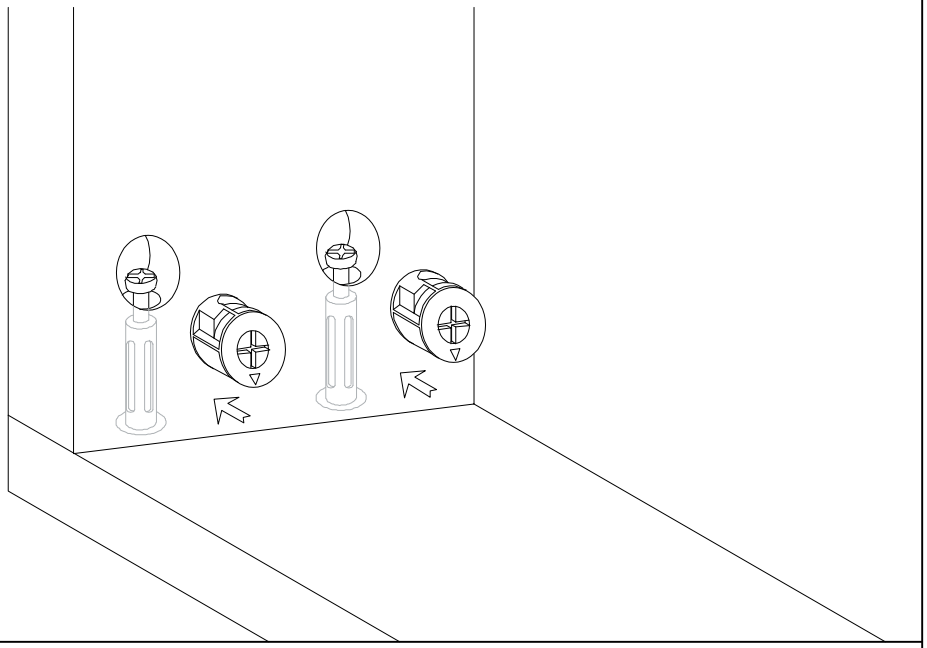

III

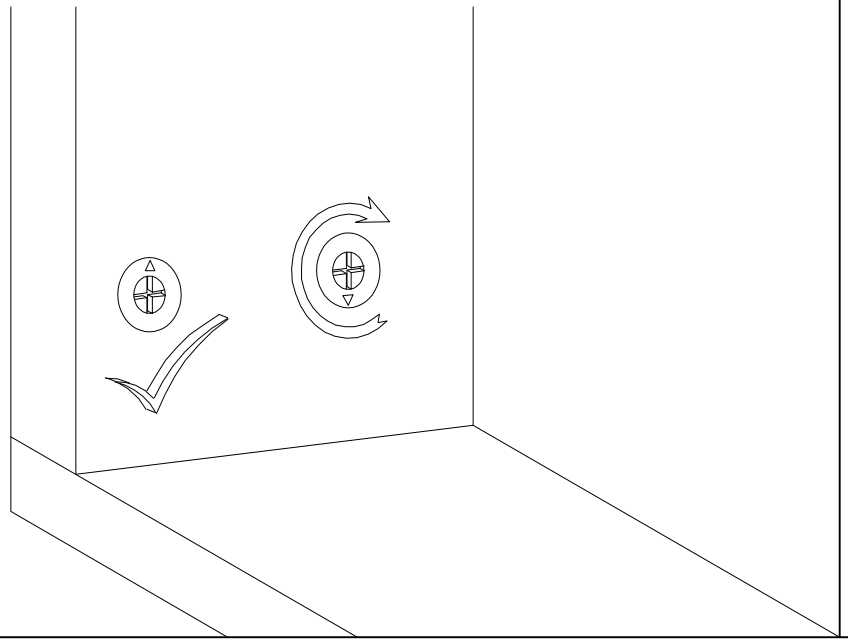

IV

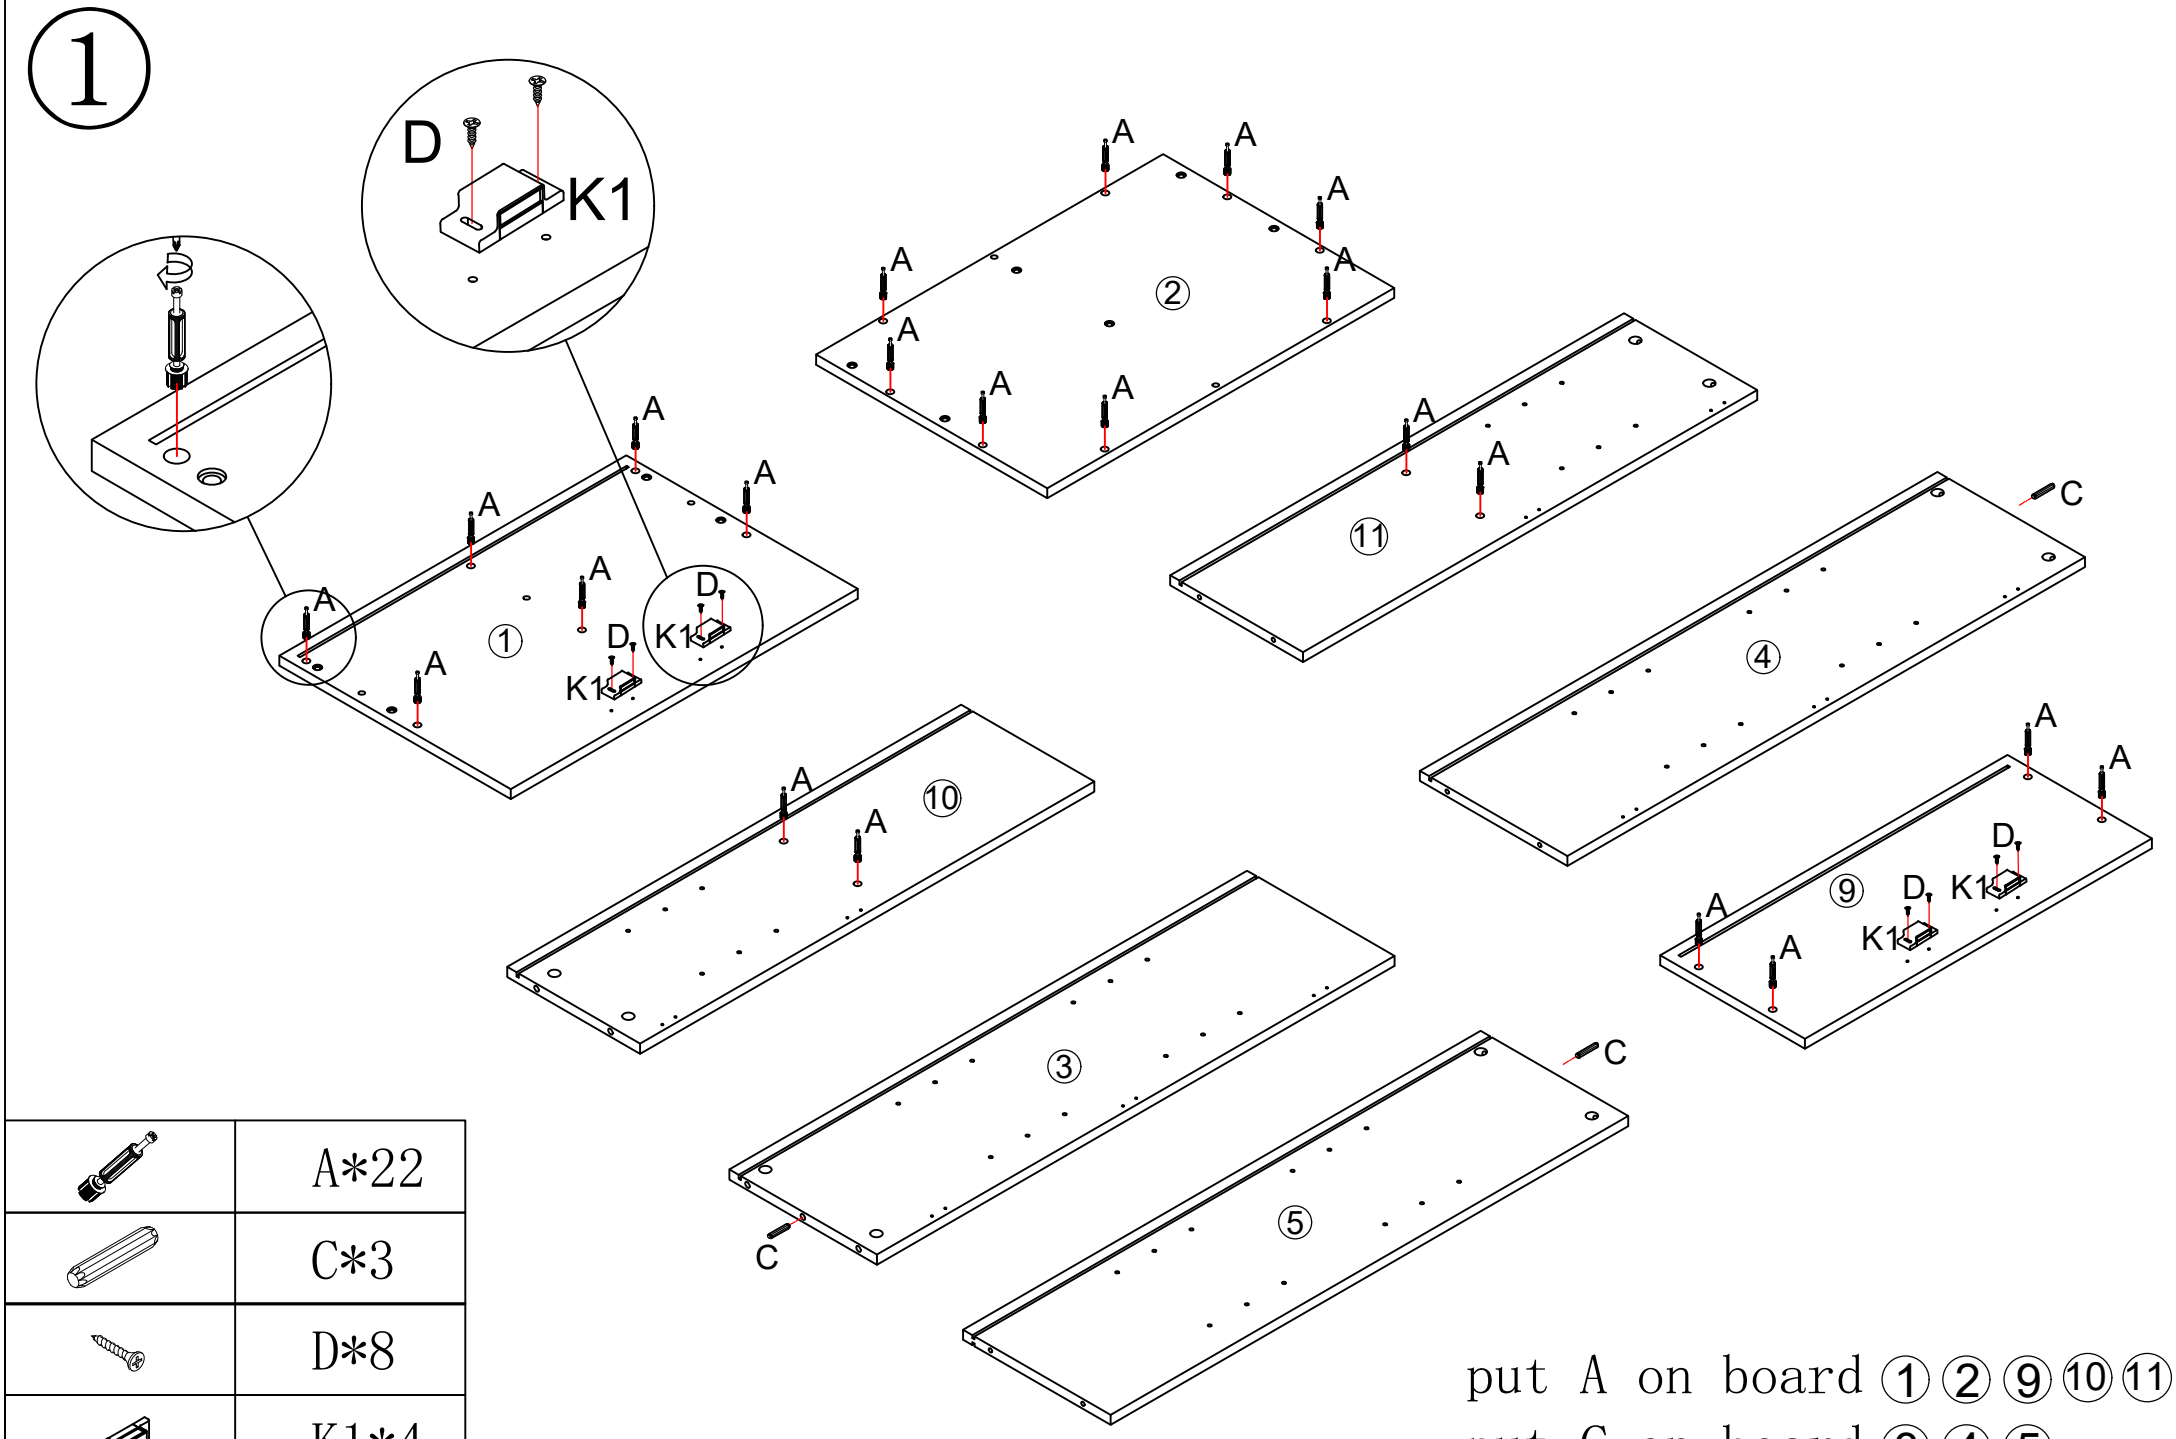

	A*22
	C*3
	D*8
	K1*4

put A on board ① ② ⑨ ⑩ ⑪

put C on board ③ ④ ⑤

②

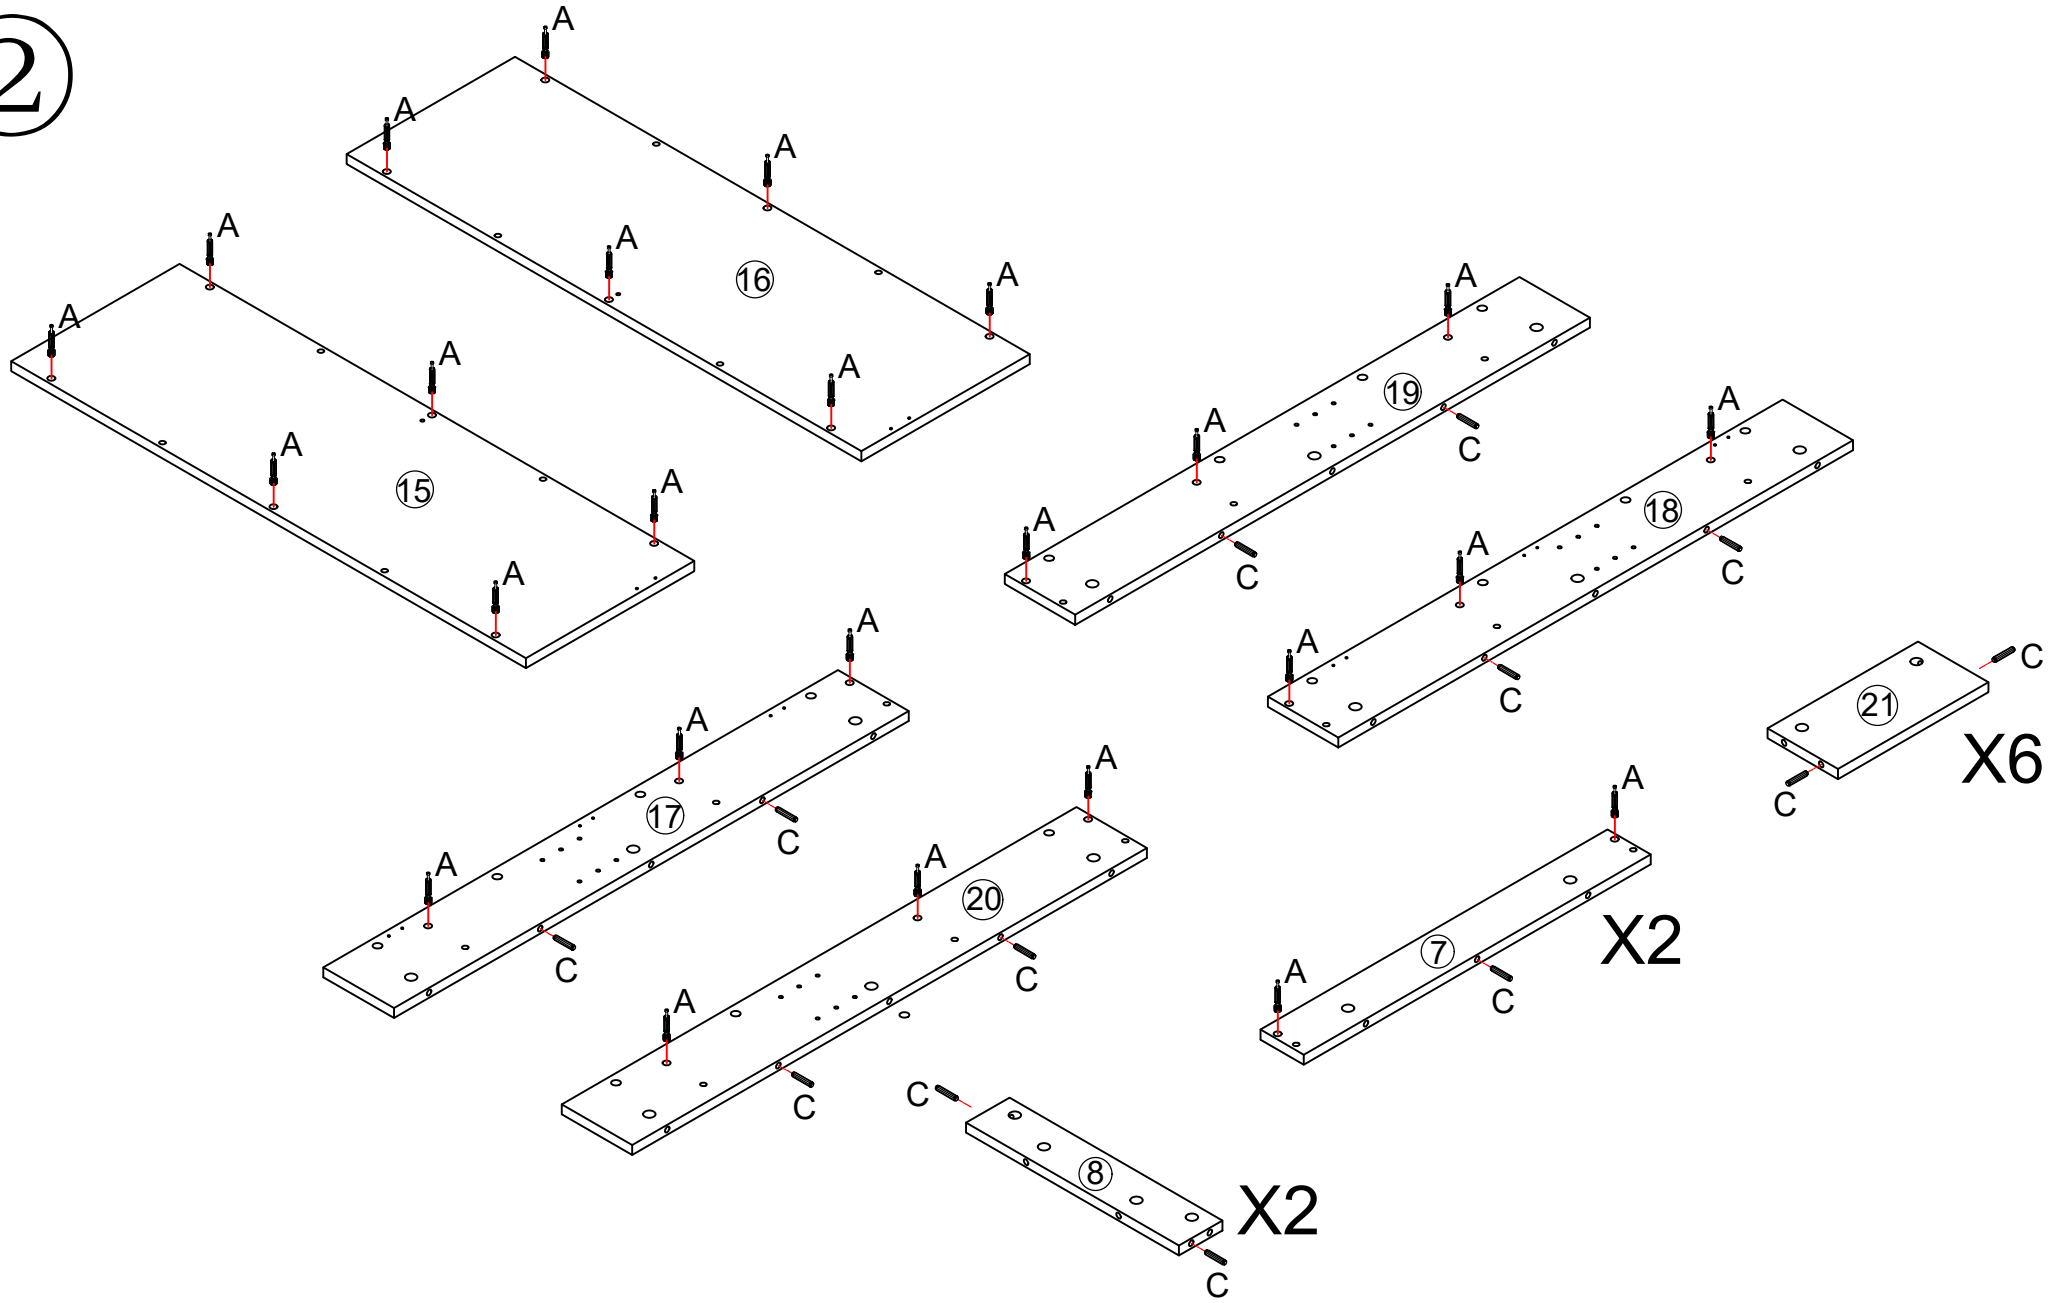

	A*28
	C*26

put A on board ⑦ ⑮ ⑯ ⑰ ⑱ ⑲ ⑳

put C on board ⑦ ⑧ ⑰ ⑱ ⑲ ⑳ ㉑

3

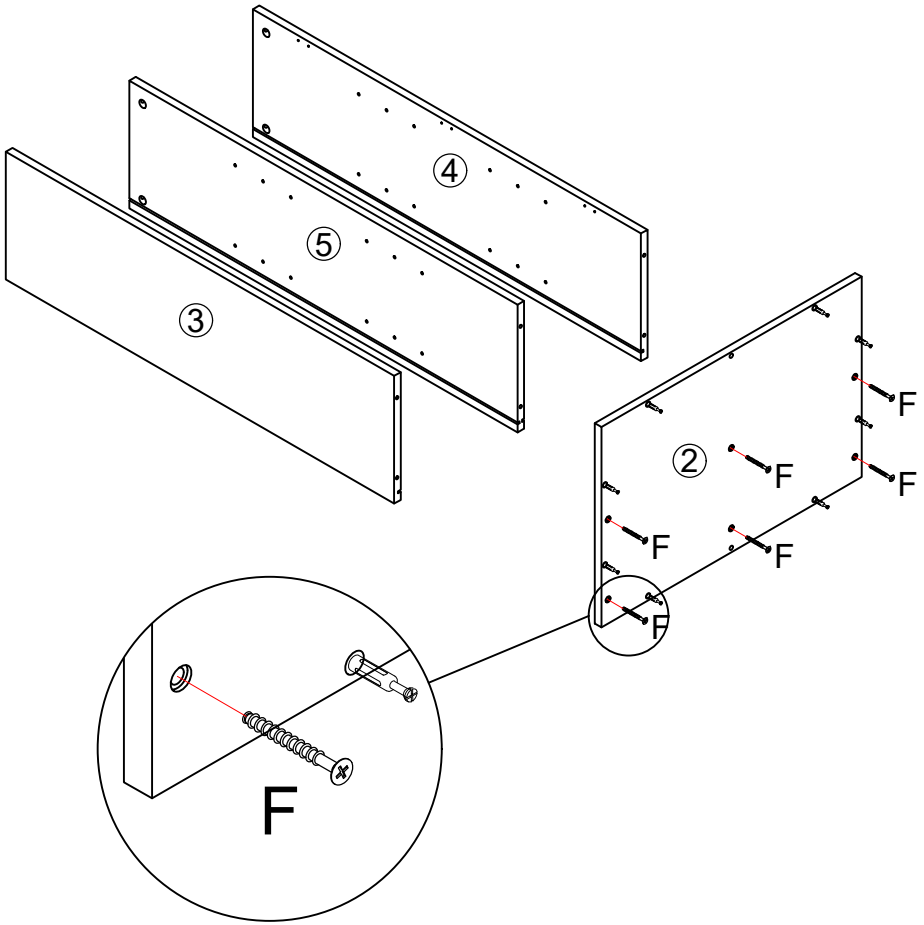

Make sure the arrow on the screw align to the hole on the side.

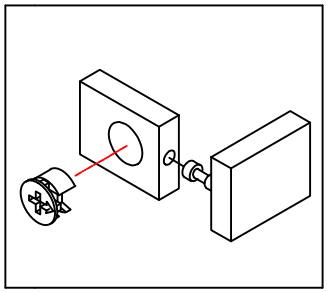

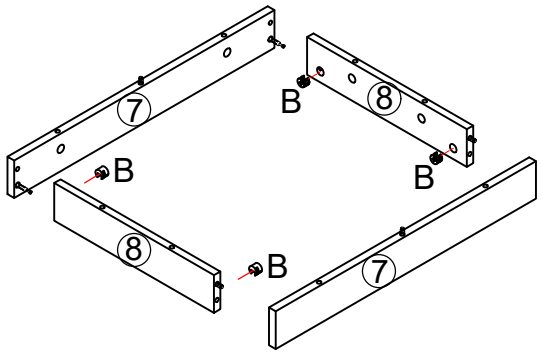

	B*4
	F*6

4

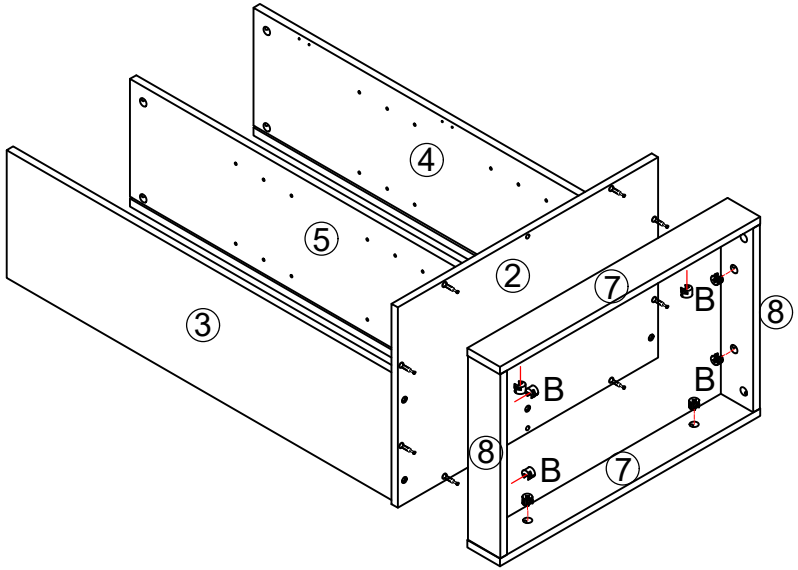



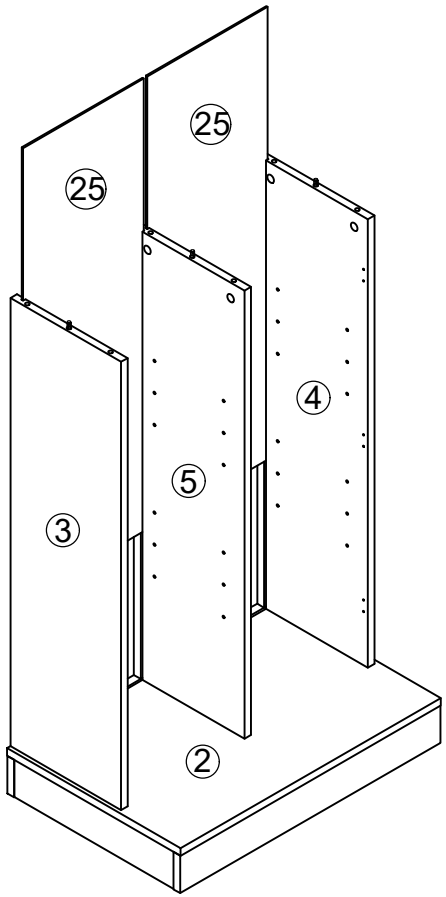

	B*8

5

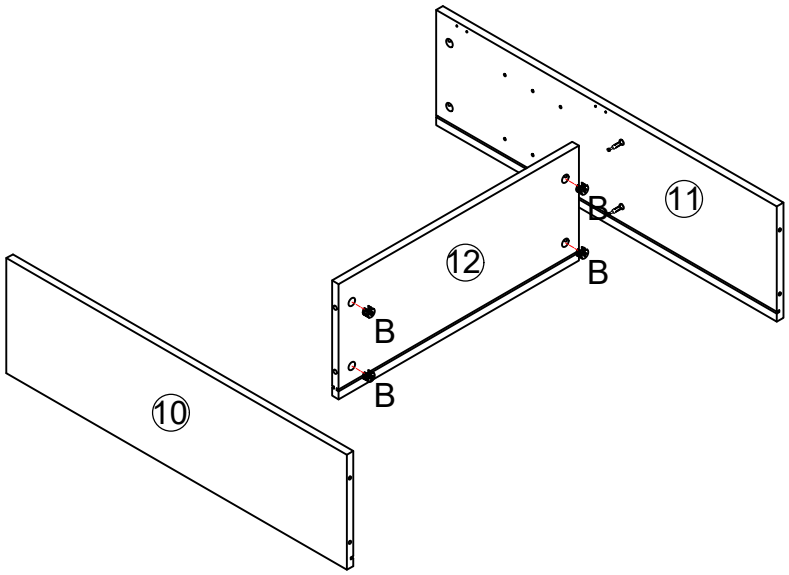

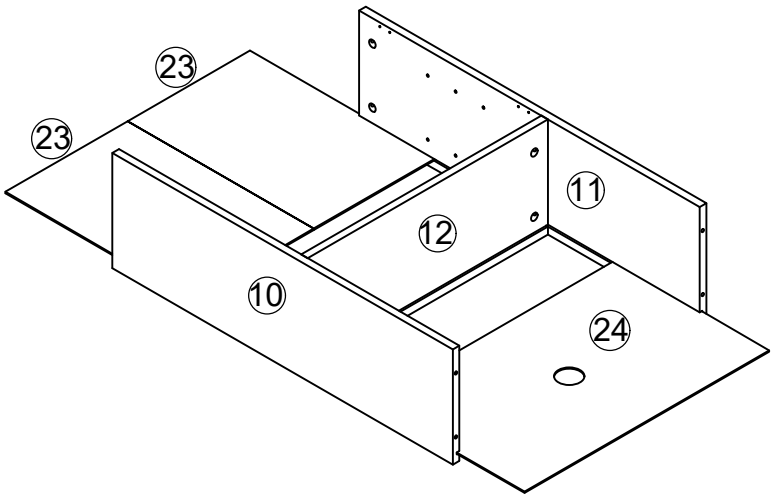

	B*4

6

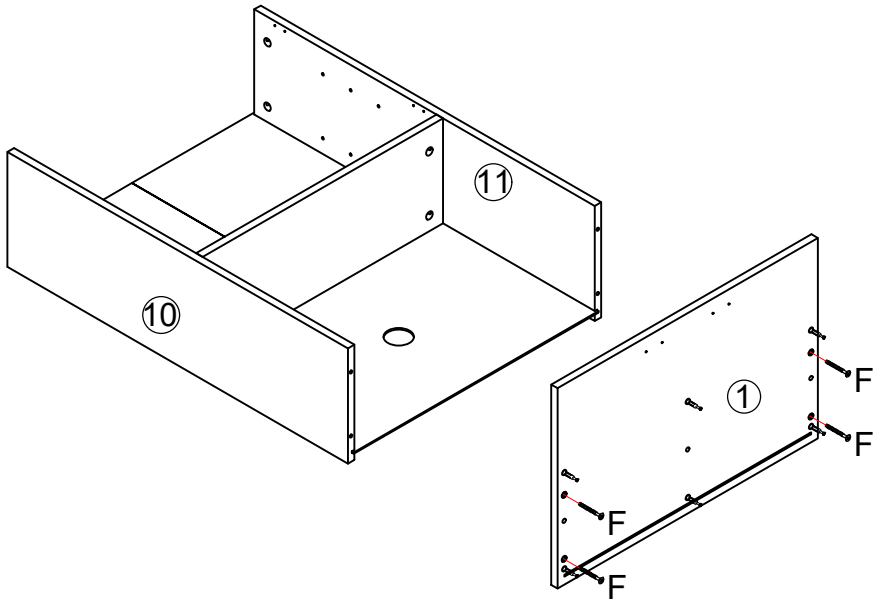

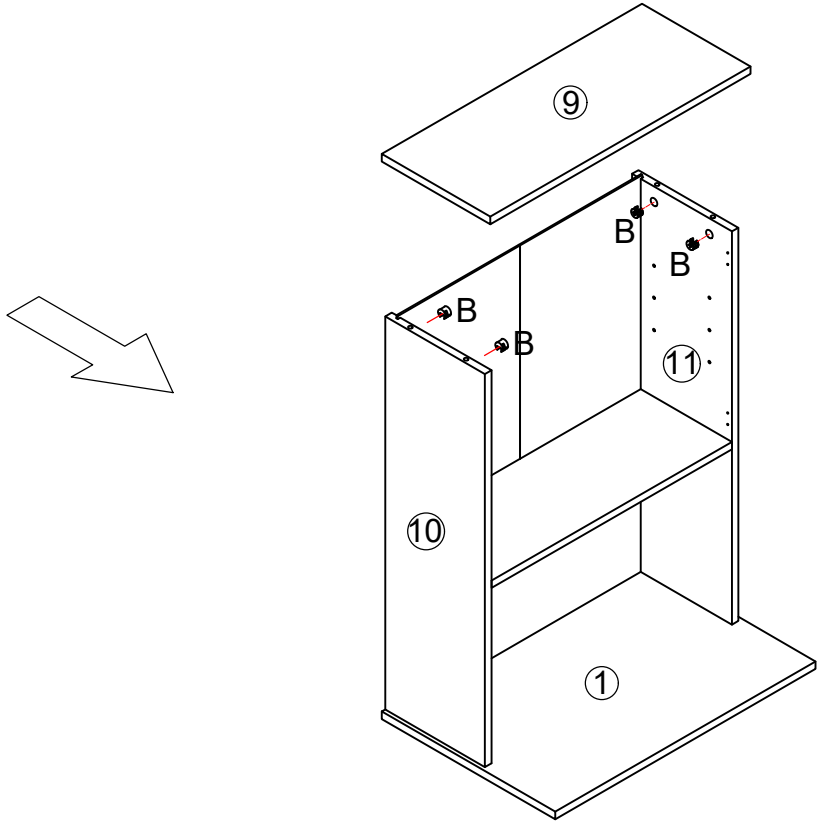

	B*4
	F*4

7

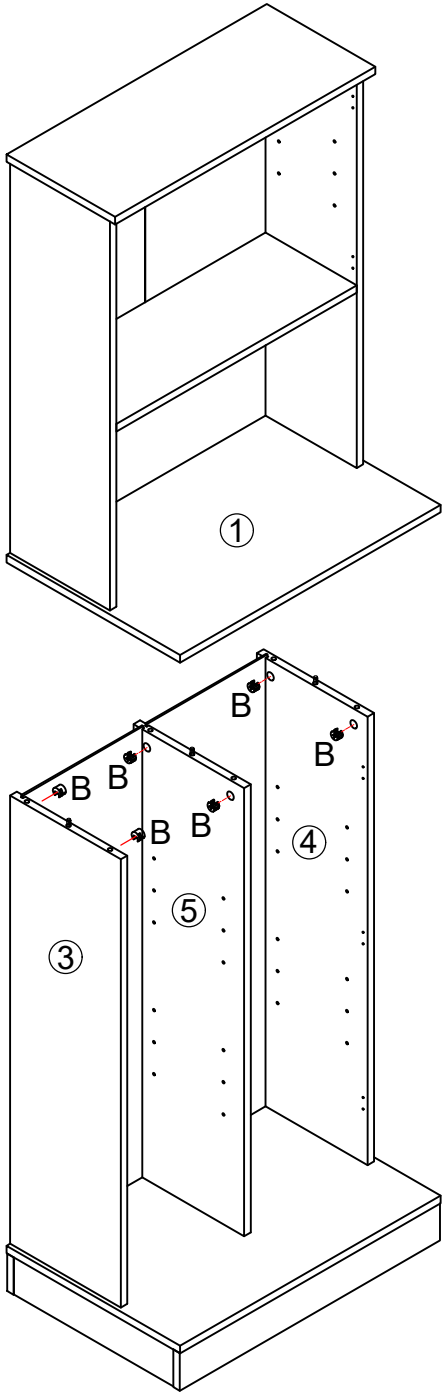

	B*6

8

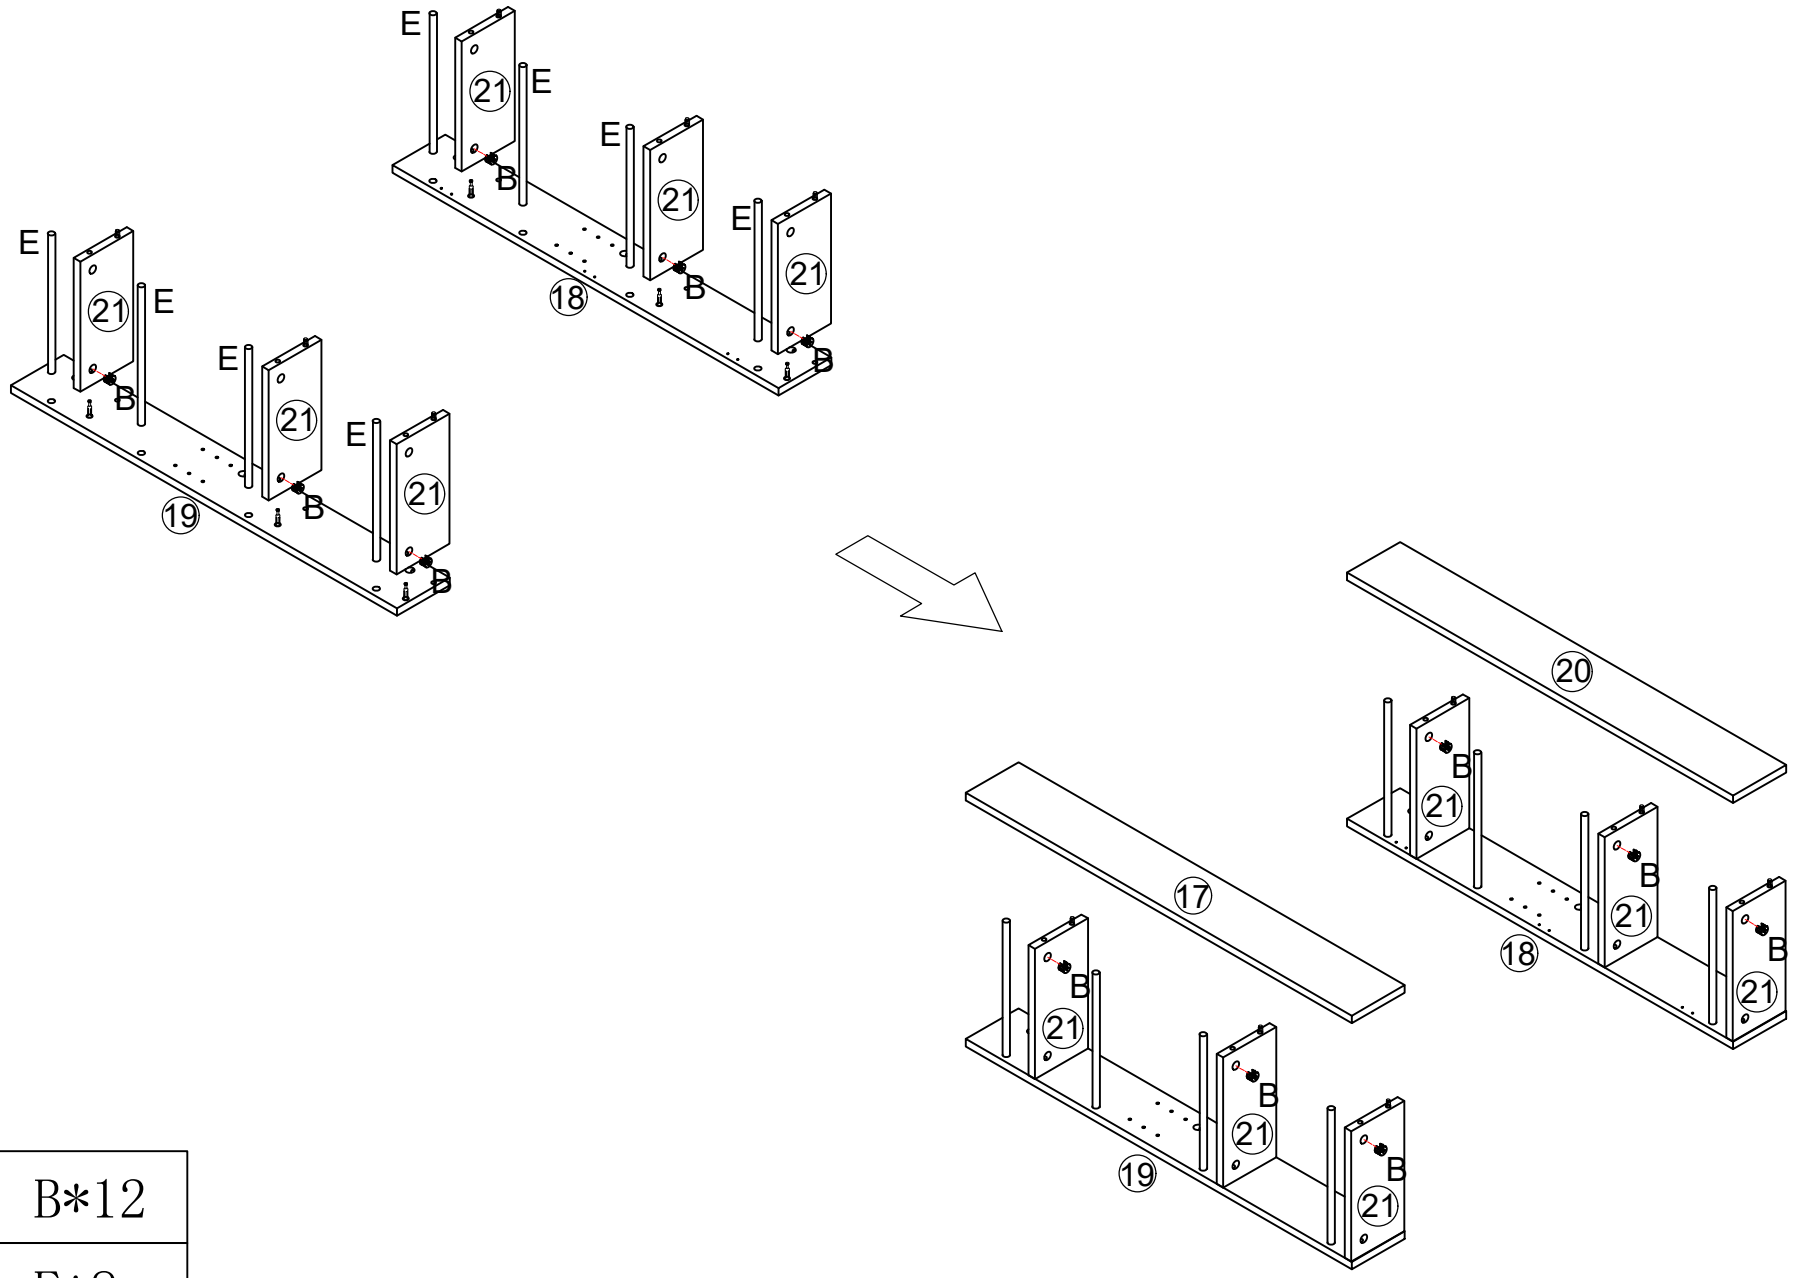

	B*12
	E*8

9

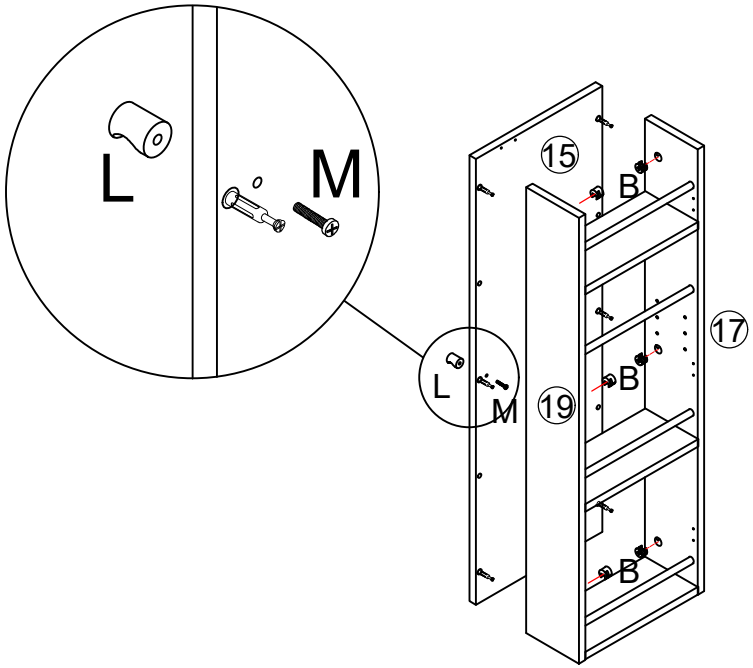

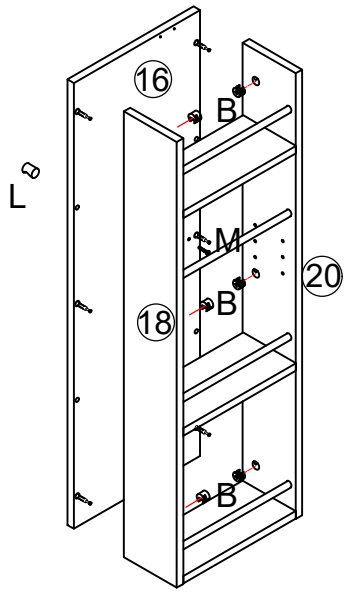

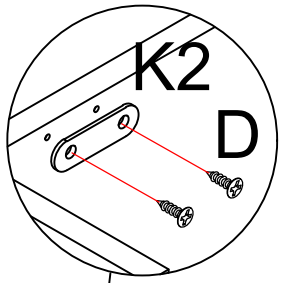

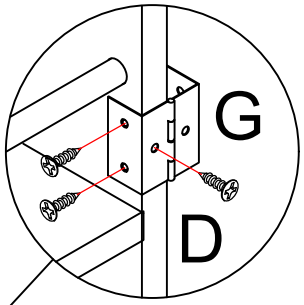

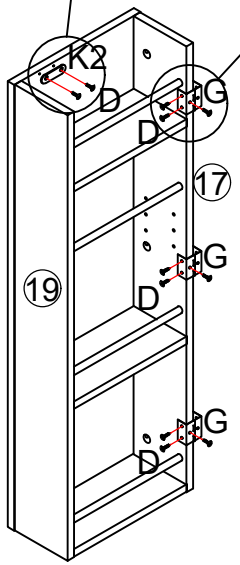

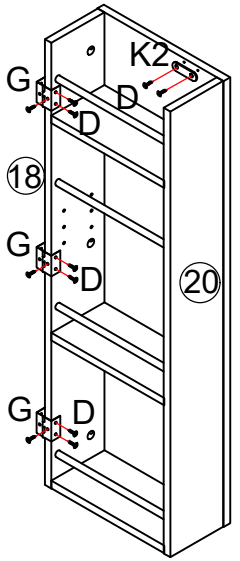

	B*12
	D*22
	K2*2
	G*6
	L*2
	M*2

10

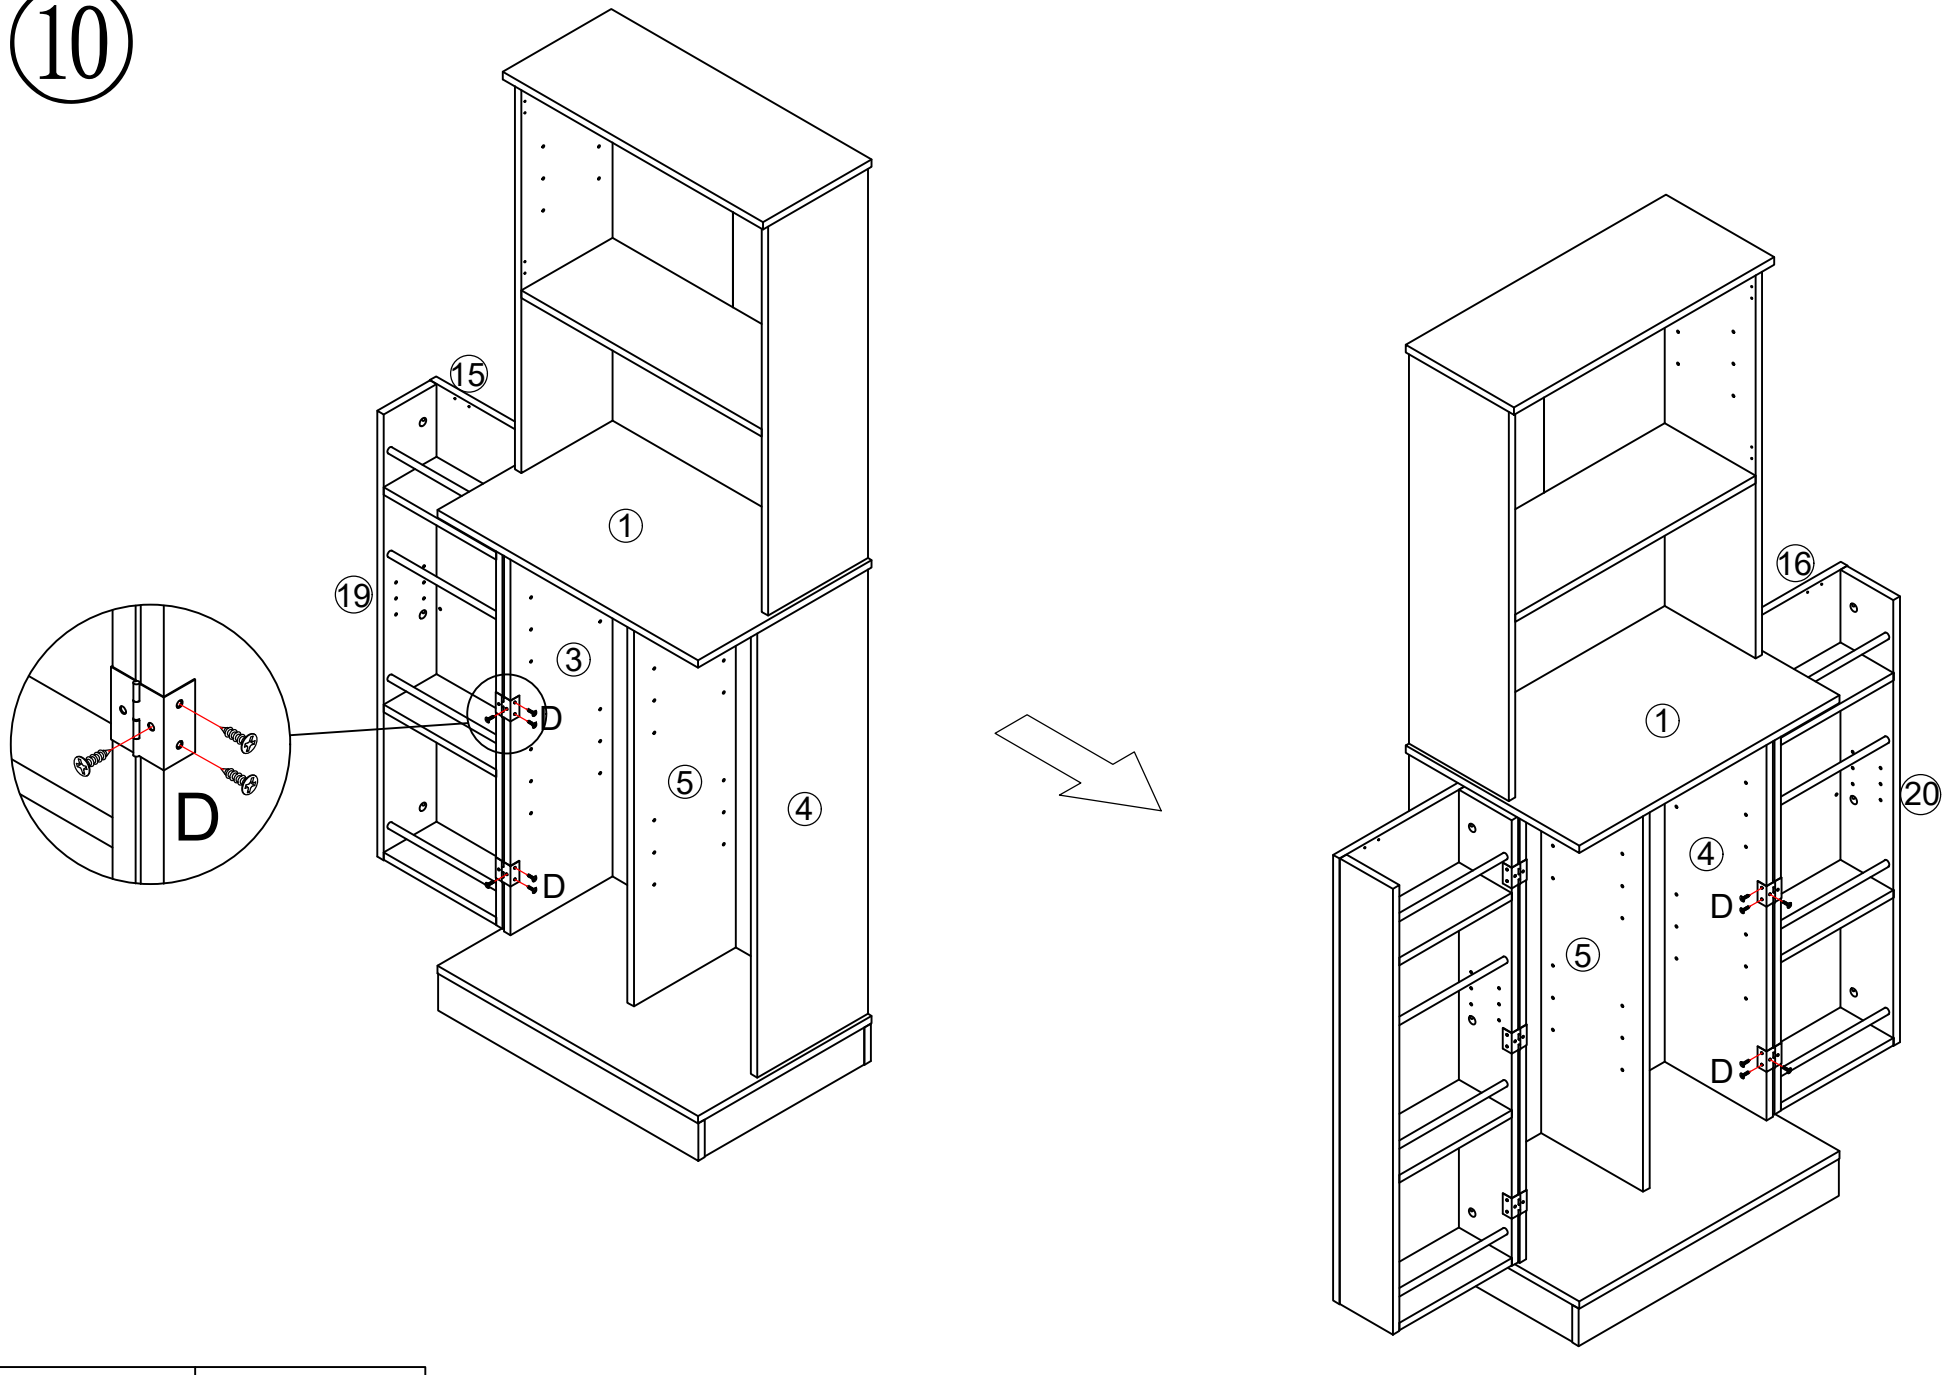

	D*18

⑪

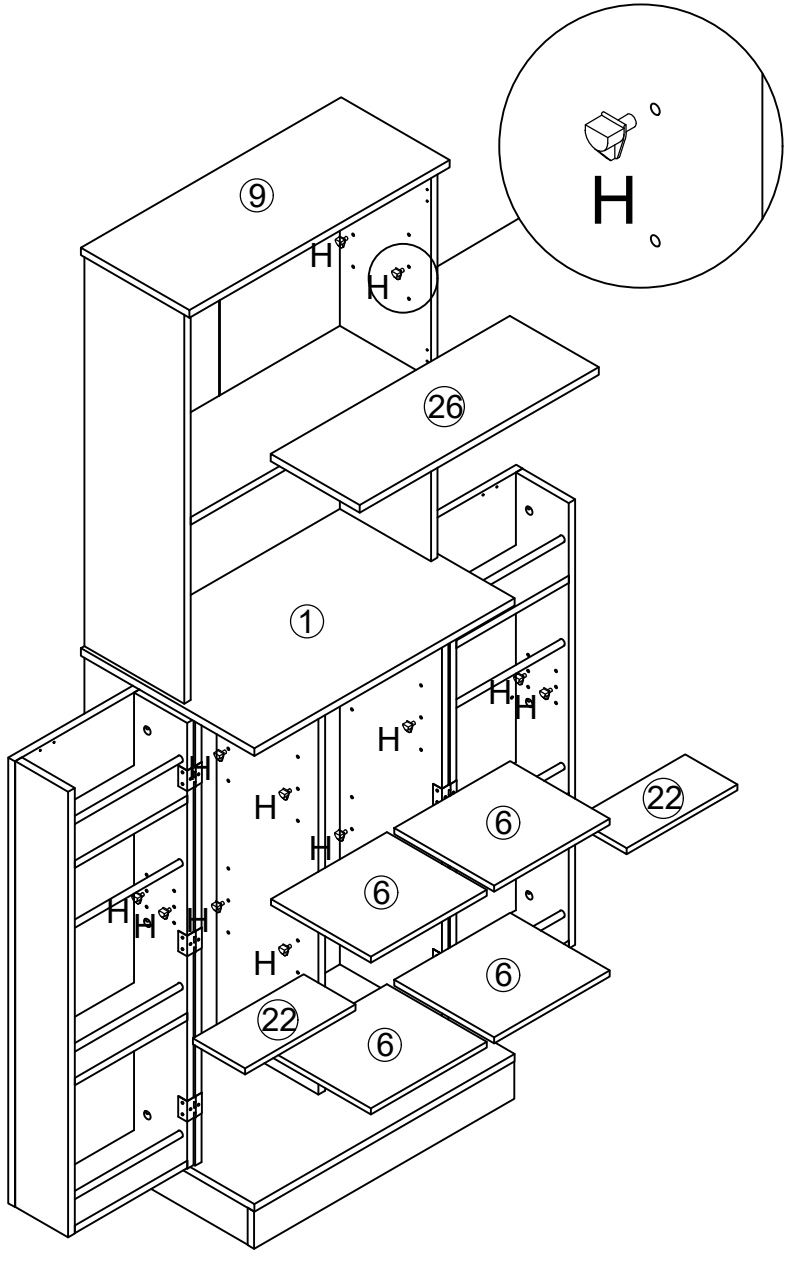

	H*28

12

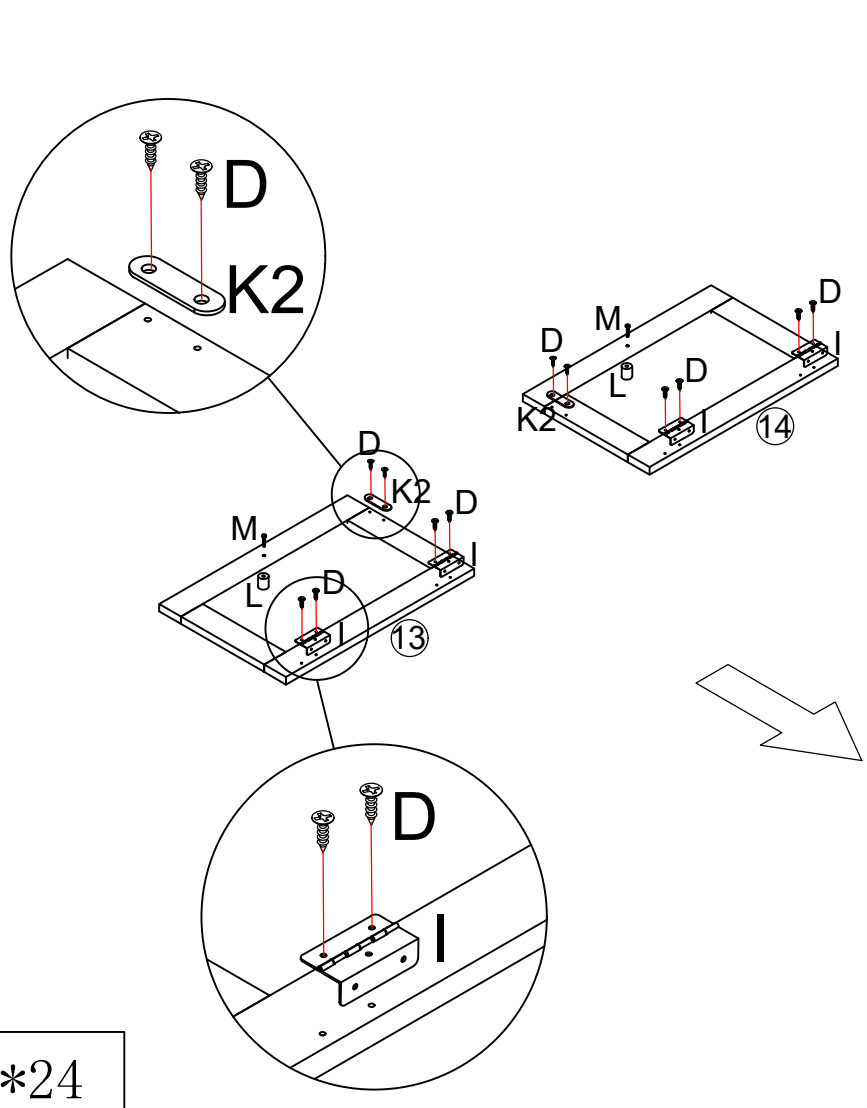

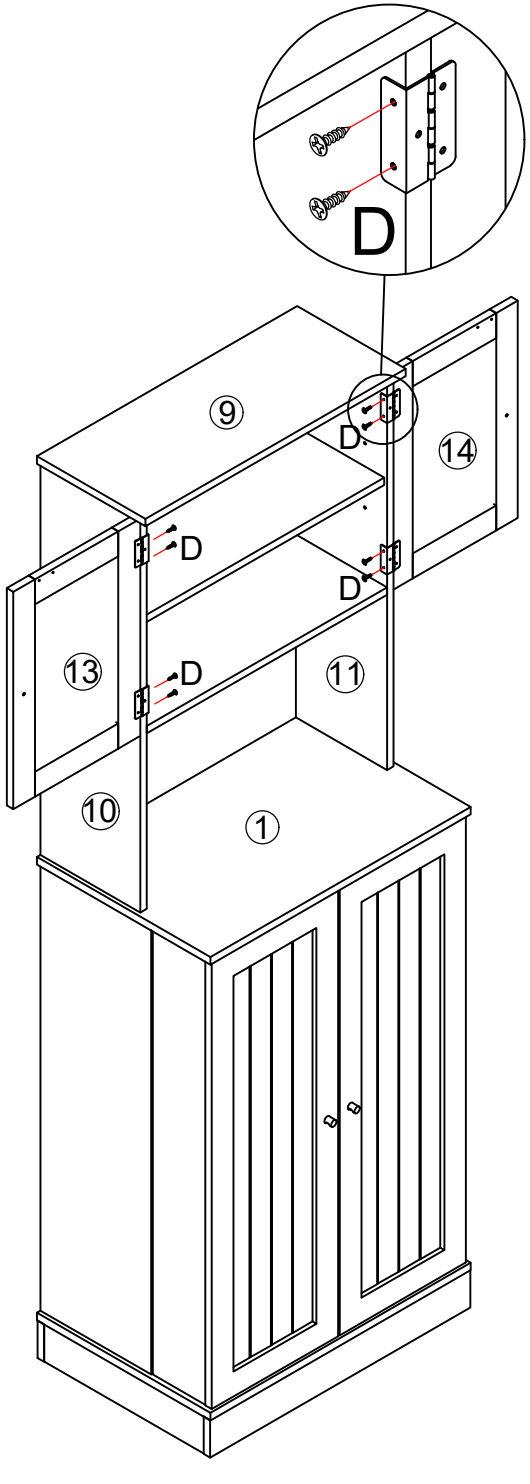

	D*24
	K2*2
	L*2
	M*2
	I*4

13

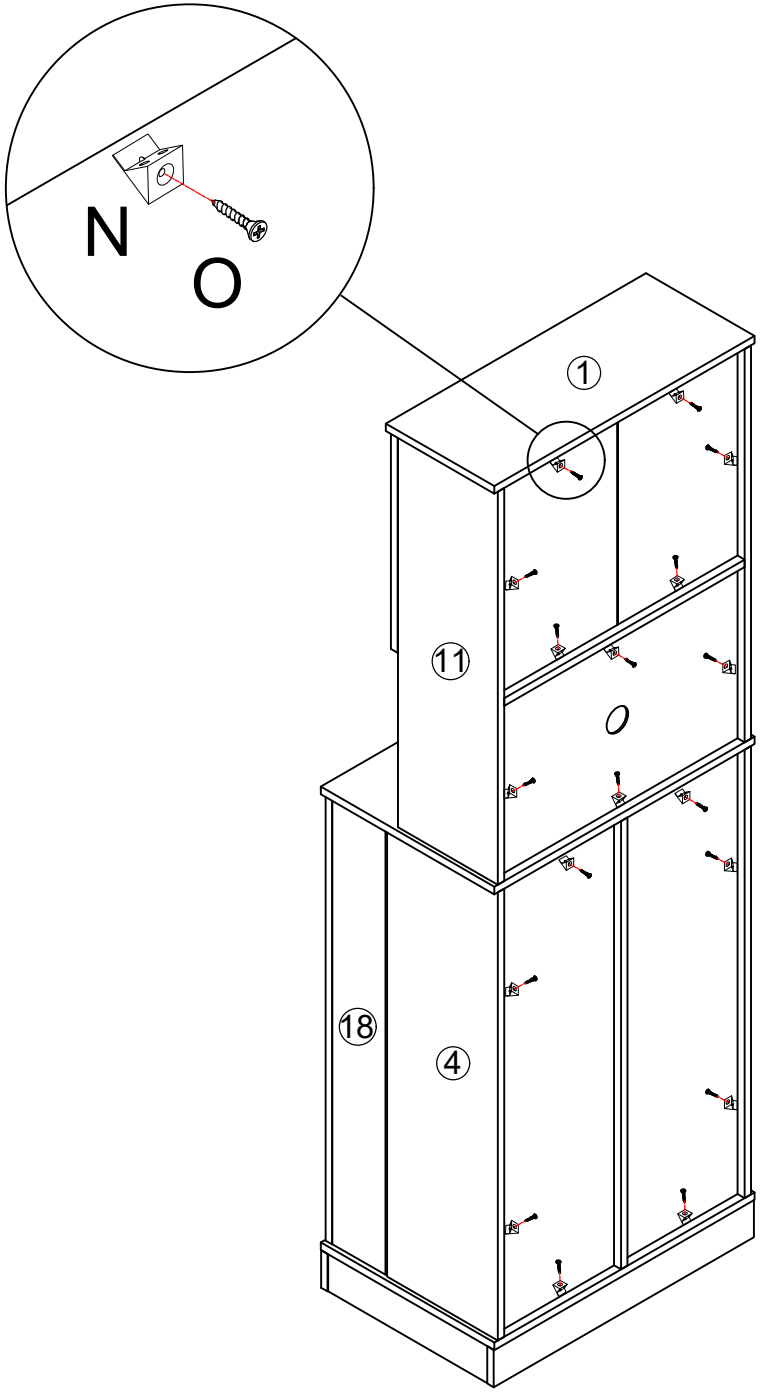

	N*18
	0*18

14

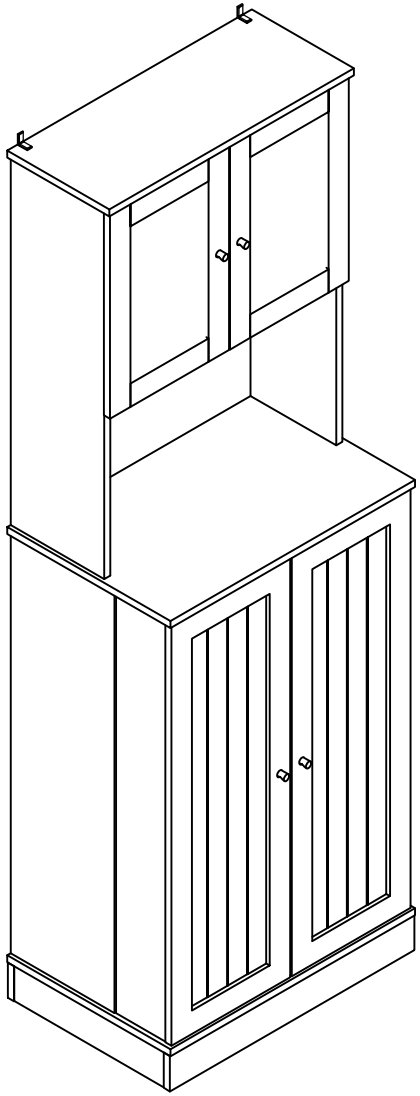

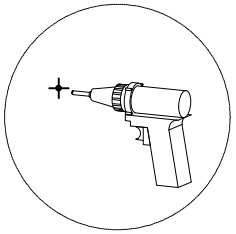

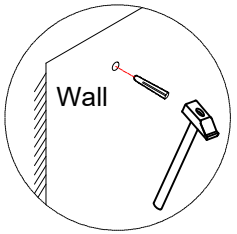

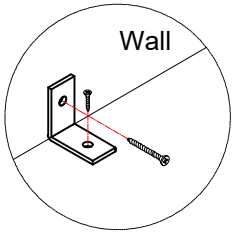

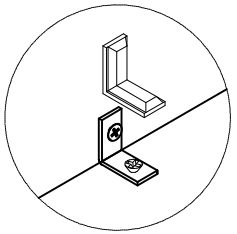

	J*2

Please install tip-proof fitting.