



Instruction for Remote Control:

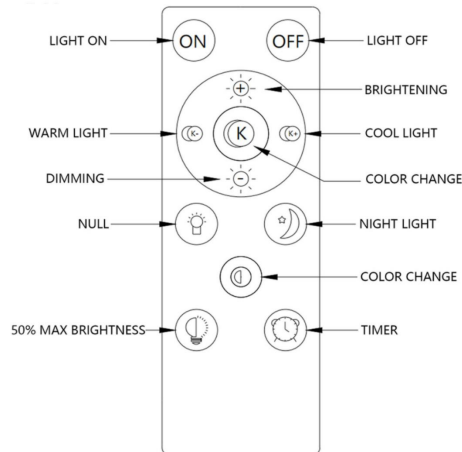


- 1.The button with MOON and STAR PATTERN represents " Night Mode" feature,which is able to reset the brightness and color of the lamp to default and make it suitable for sleeping.
 - 2.Press the timer button, if the lamp flashes, it indicates that 30mins timing function has been activated. Press it twice, if the lamp flashes twice consecutively, it indicates that 60mins timing function has been activated.
 - 3.Pairing should be performed before using the remote when it is unable to control the light, please complete the following steps below:
 - ①.Power on the lamp and press the "ON" button twice("ON"button should be pressed within 3 seconds after the lamp turned on).
 - ②.If the light flashes 3 times after step 1, it indicates that the remote is successfully paired with the lamp.
 - 4.Depairing:Press the "ON" button five times consecutively within 3 seconds after the lamp turned on. If the lamp flashes swiftly 6 times, it indicates the lamp has been unpaired with the remote.
- Note: Please ensure that the FOOT SWITCH is ON before use remote control.
Batteries are not included in the remote control. Batteries are two AAA batteries.

Assembly Instruction:

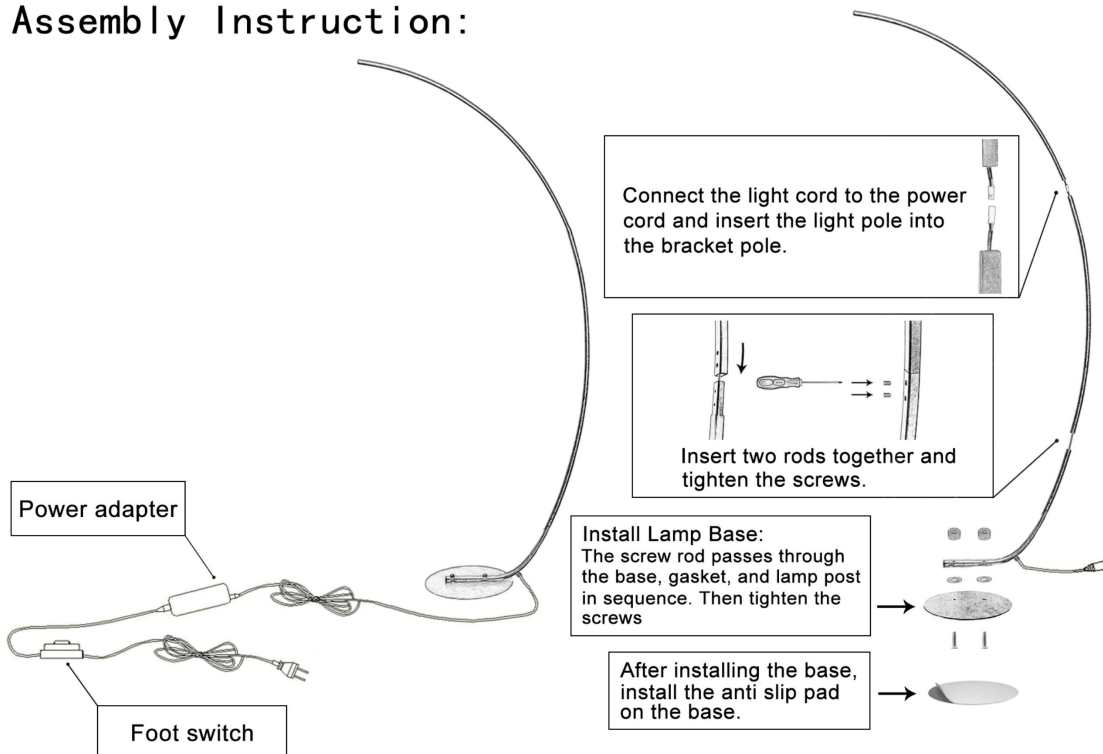

- Note:
- 1.All operations must be performed only after switching off or powering off.
 - 2.It is normal that yellow light spots appear from the light strip after brightness is adjusted to the minimum.
 - 3.The minimum brightness is not equal to 0% brightness.
 - 4.The lampshade may be slightly separated during transportation, which results in light leakage, it can be easily fixed by pushing it gently by hand.


Instructions pour la télécommande :

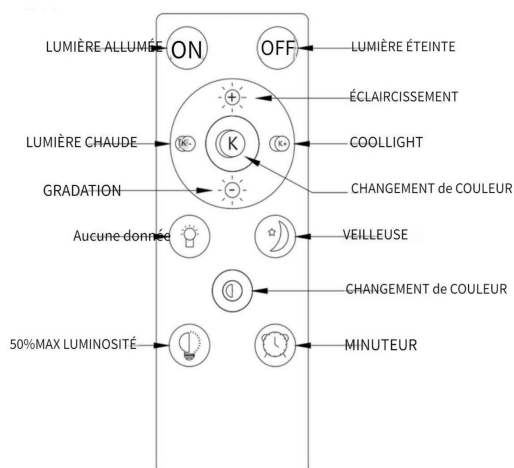

1. Le bouton avec le MOTIF LUNE et ÉTOILE représente la fonctionnalité "Mode Nuit", qui permet de réinitialiser le Réglez la luminosité et la couleur de la lampe par défaut et faites en sorte qu'elle soit adaptée au sommeil.
 2. Appuyez sur le bouton de la minuterie, si la lampe clignote, cela indique que la fonction de minuterie 30mins a été activée. Appuyez deux fois dessus, si la lampe clignote deux fois de suite, cela indique que la fonction de synchronisation de 60mins a été activée.
 3. L'appairage doit être effectué avant d'utiliser la télécommande lorsqu'elle est incapable de contrôler la lumière, veuillez compléter les étapes suivantes ci-dessous :
 - O. Allumez la lampe et appuyez deux fois sur le bouton "ON" (le bouton "ON" doit être enfoncé dans les 3 secondes qui suivent la lampe s'est allumée
 - @. Si la lumière clignote 3 fois après l'étape 1, cela indique que la télécommande est correctement jumelée à la lampe.
 4. Découplage : Appuyez cinq fois de suite sur le bouton "ON" dans les 3 secondes suivant l'allumage de la lampe. Si la lampe clignote rapidement 6 fois, cela indique que la lampe a été dissociée de la télécommande.
- Remarque : Veuillez vous assurer que le FOOT SWITCH est allumé avant d'utiliser la télécommande.

Les piles ne sont pas incluses dans la télécommande. Les piles sont deux piles AAA.

Assemblée Instruction :

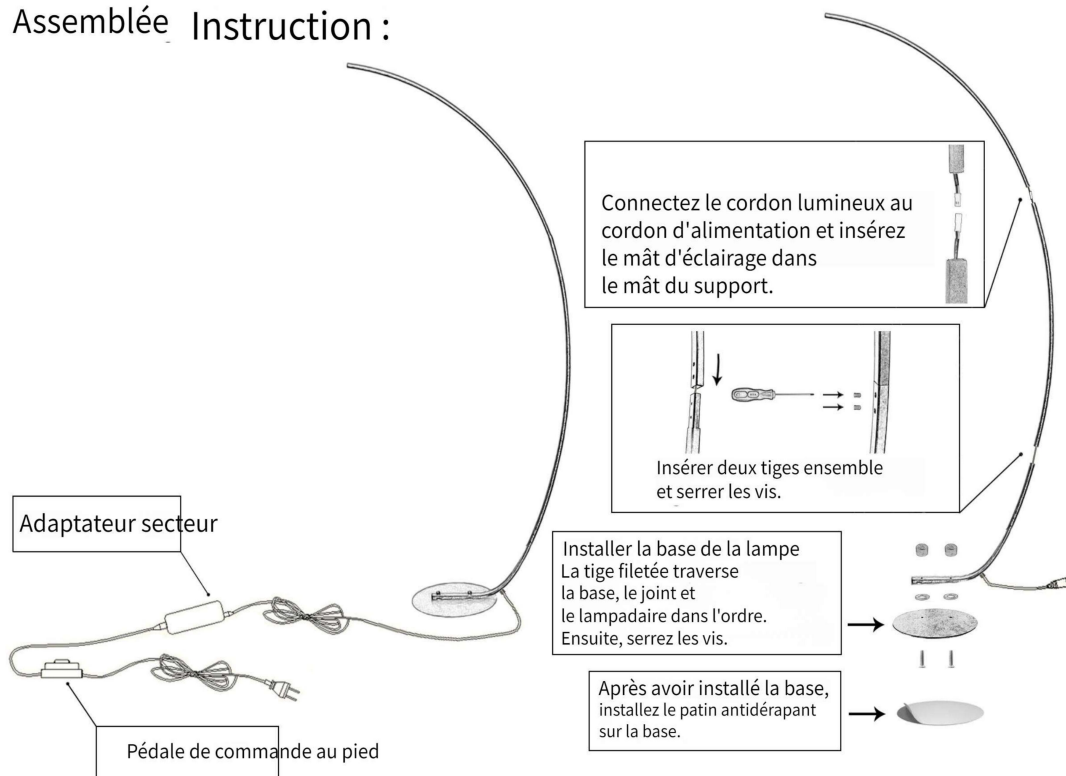

- Remarque : 1. Toutes les opérations doivent être effectuées uniquement après avoir éteint ou mis hors tension.
2. Il est normal que des points lumineux jaunes apparaissent de la bande lumineuse après que la luminosité soit réglée au minimum.
 3. La luminosité minimale n'est pas égale à 0 % de luminosité.
 4. L'abat-jour peut être légèrement séparé pendant le transport, ce qui entraîne une fuite de lumière, il peut être facilement réparé en le poussant doucement à la main.