

INSTALLATION
Product Manual

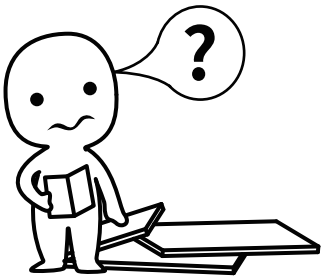


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

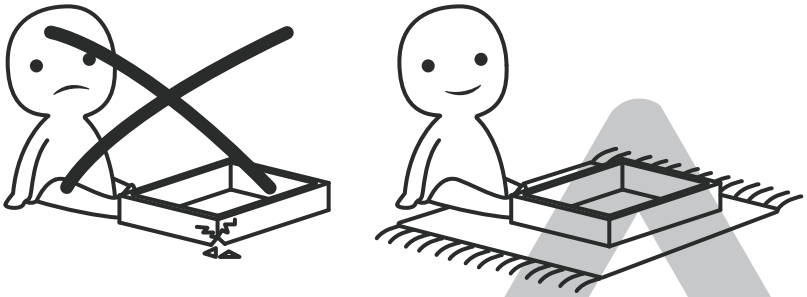


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

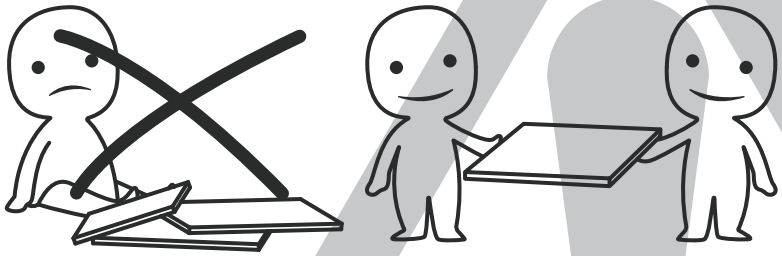

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

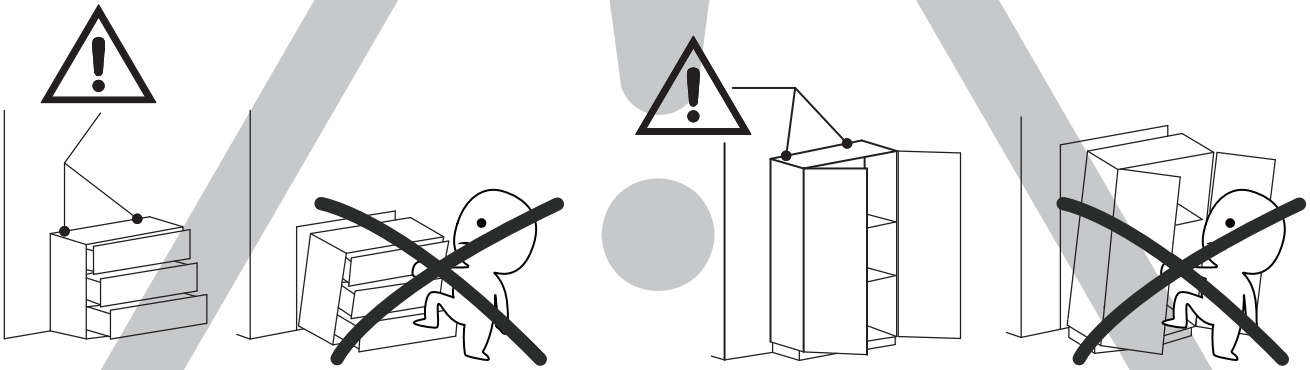

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



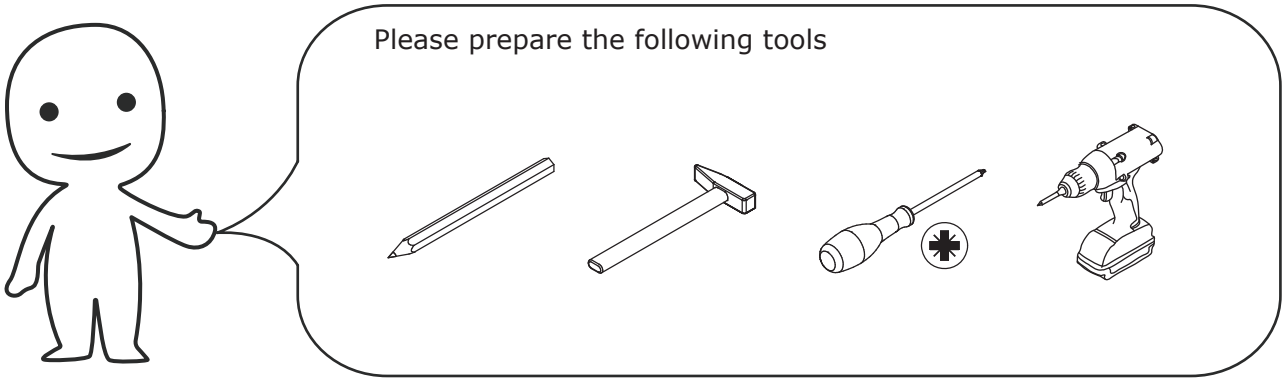






When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 22+2	B x 73+4	C x 73+4	D x 2	E x 12+1
				
∅6 x 30 mm	∅6 x 35 mm	∅15 x 10 mm	∅4 x 12 mm	∅5 x 40 mm

F x 7	G x 7	H x 84+4	K x 46+4	L x 12
				
∅4 x 14 mm		∅3.5 x 10 mm	∅4 x 35 mm	

M x 12+1	N x 16+1	P x 2	Q x 2	R x 4
				
∅3 x 14 mm	∅3 x 12 mm	∅6 x 30 mm		

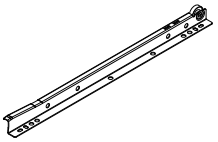S x 6	CL x 7	CR x 7	DL x 7	DR x 7
				

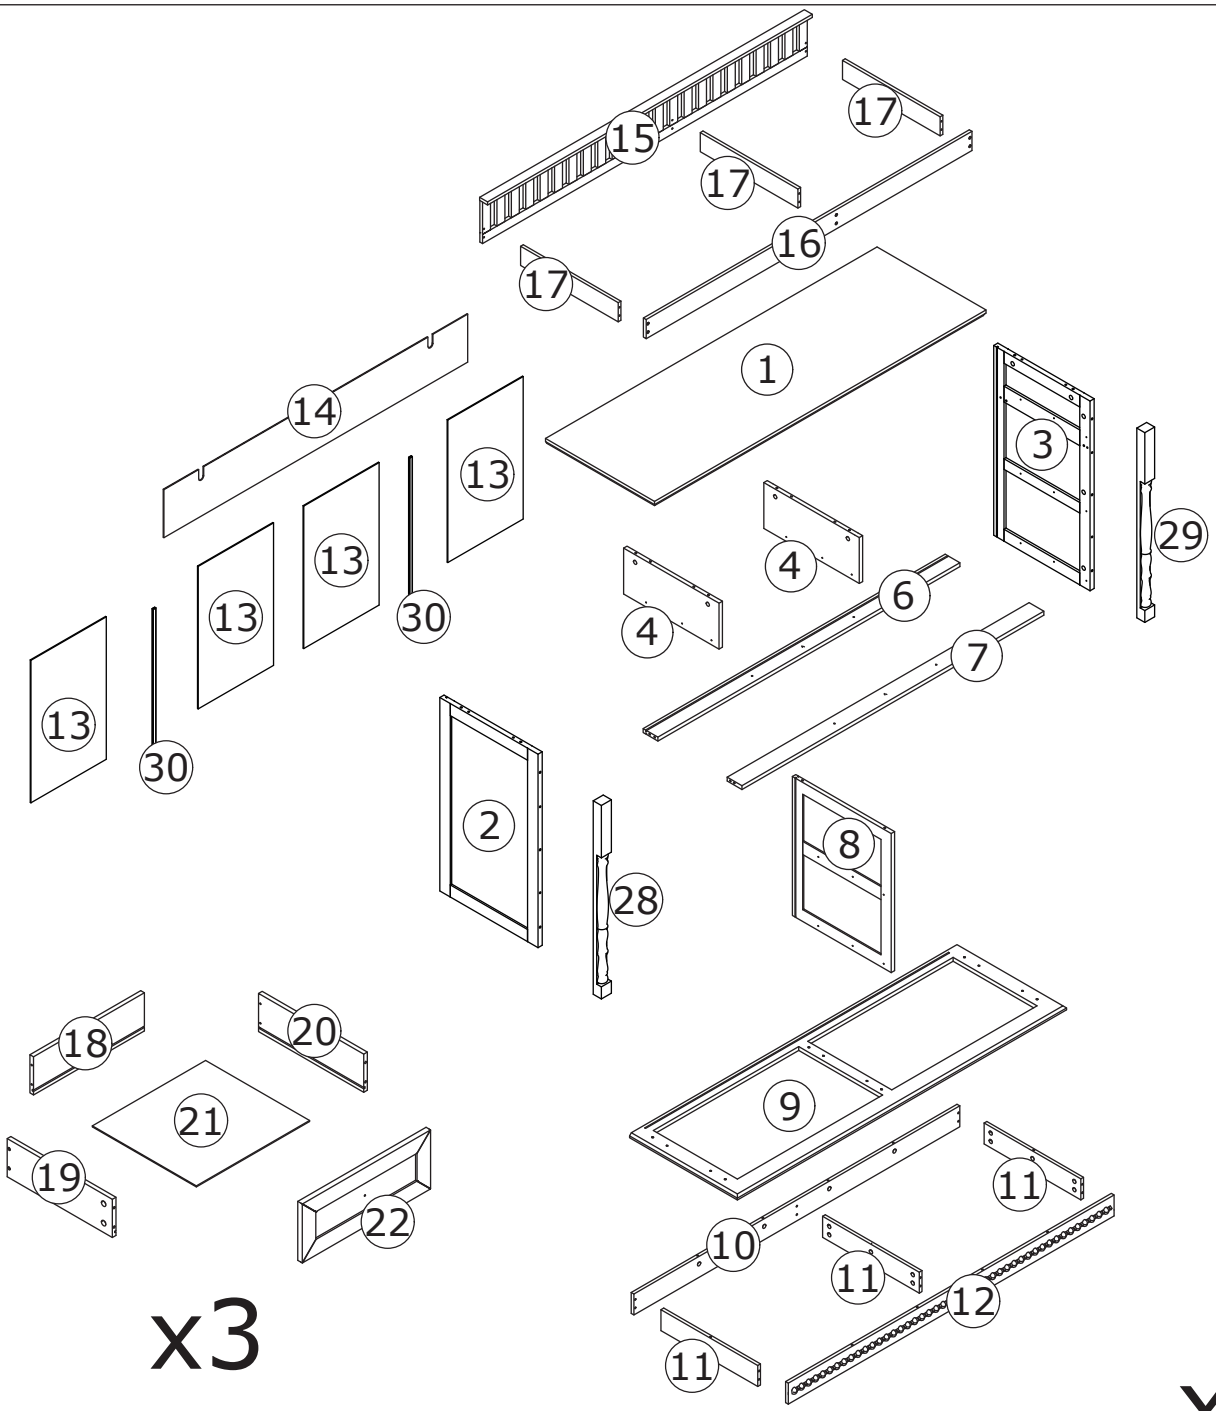


⚠WARNING





























Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!

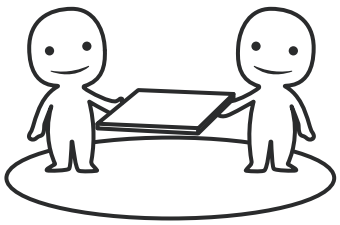


ASSEMBLED BY 2 ADULTS

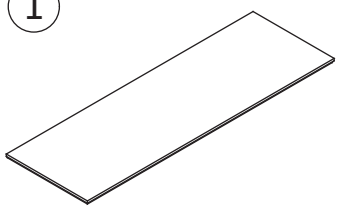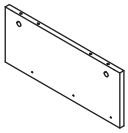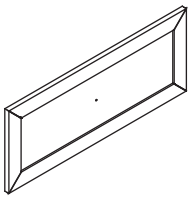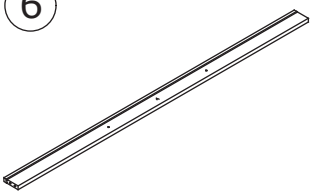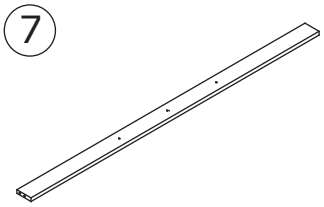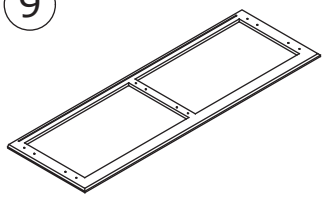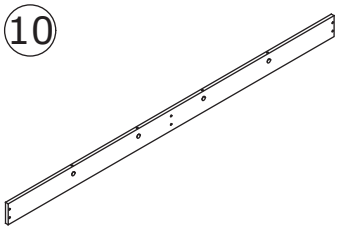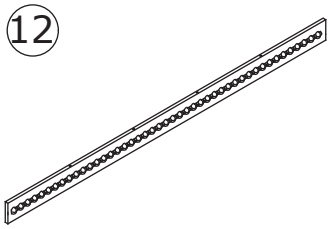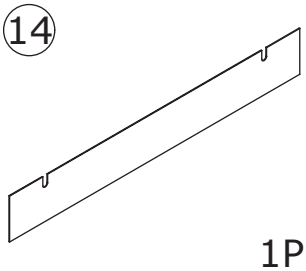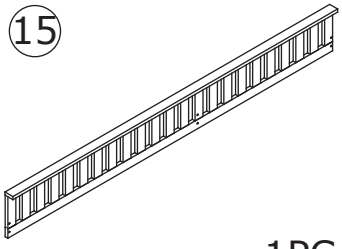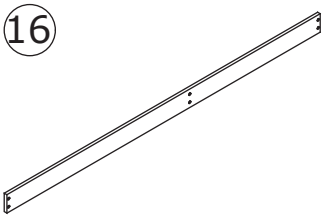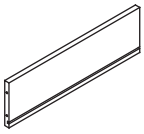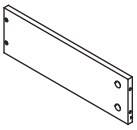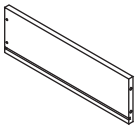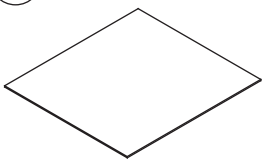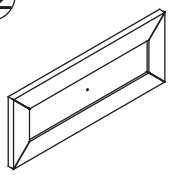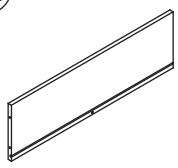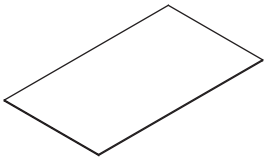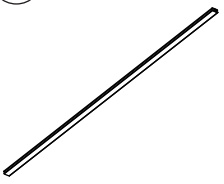
1  1PC	2  1PC	3  1PC	4  2PCS
5  4PCS	6  1PC	7  1PC	8  1PC
9  1PC	10  1PC	11  3PCS	12  1PC
13  4PCS	14  1PC	15  1PC	16  1PC
17  3PCS	18  3PCS	19  3PCS	20  3PCS
21  3PCS	22  3PCS	23  4PCS	24  4PCS	25  4PCS
26  4PCS	27  4PCS	28  1PC	29  1PC	30  2PCS

1

B x 32	F x 7	G x 7	
			
∅6 x 35 mm	∅4 x 14 mm		

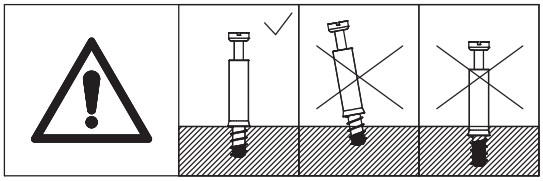

Screw eccentric rod(B) onto part 5 and 22 at first.
Fix knob(G) with screw(F).

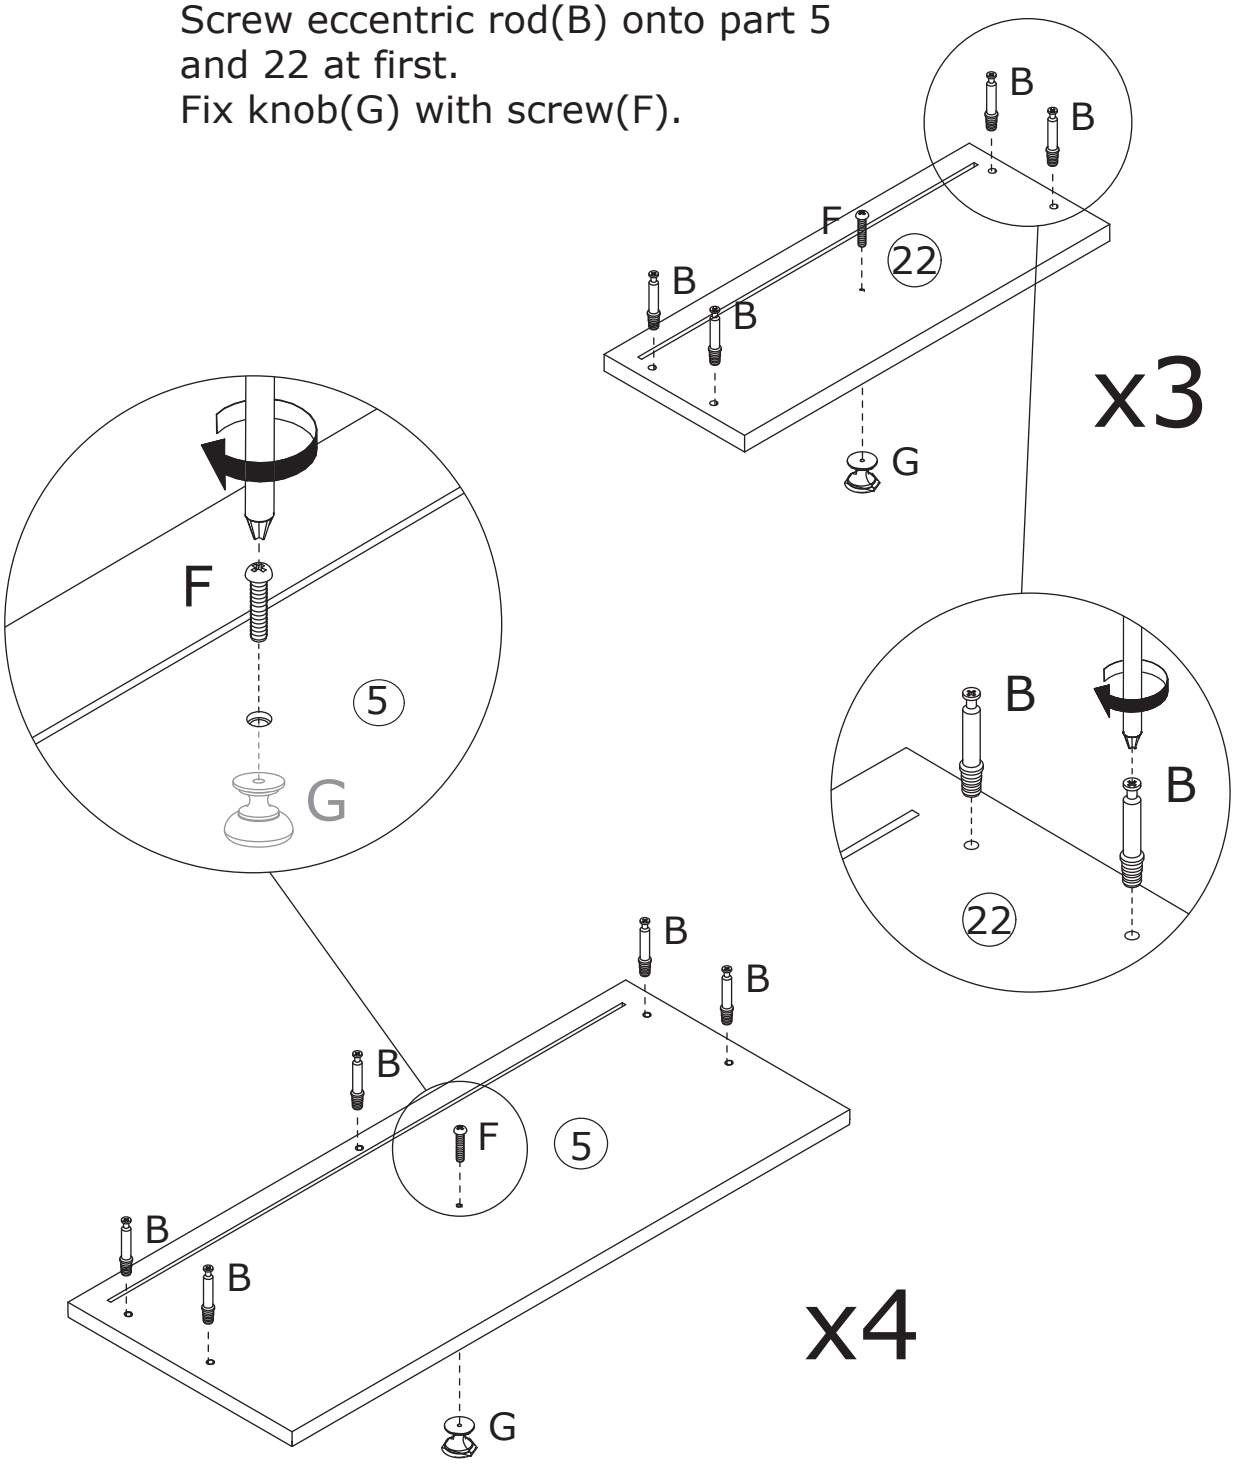


2

K x 32




∅4 x 35 mm






E

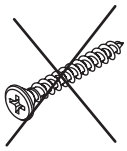


∅5 x 40 mm

K



∅4 x 35 mm

Secure part 19 and 20 to part 18 with screw(K), insert part 21 along available grooves.

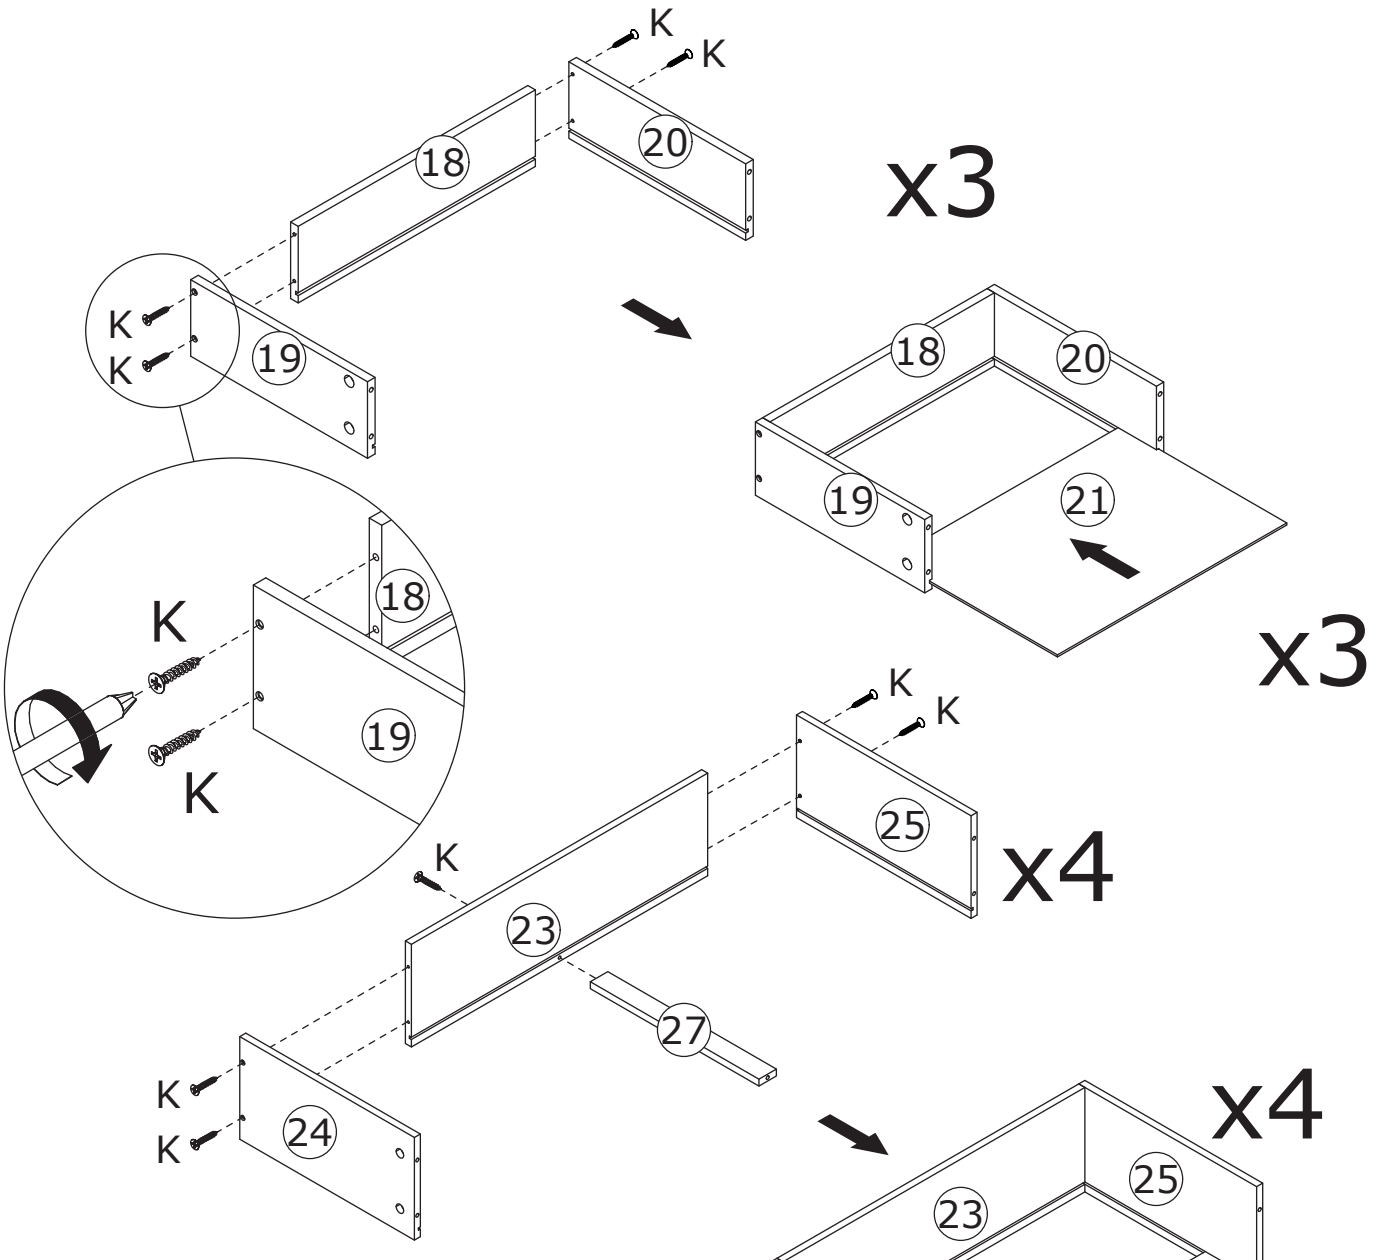


Secure part 24, 25 and 27 to part 23 with screw(K), insert part 26 along available grooves.


3

C x 32




∅15 x 10 mm






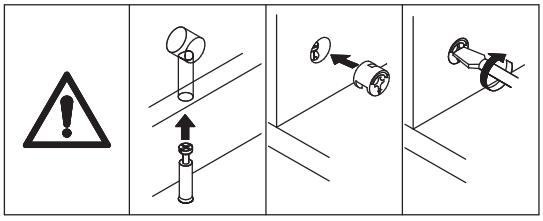


Attach part 22 to part 19 and 20, and part 5 to part 24, 27 and 25, tighten by turning cam lock(C) clockwise as shown.

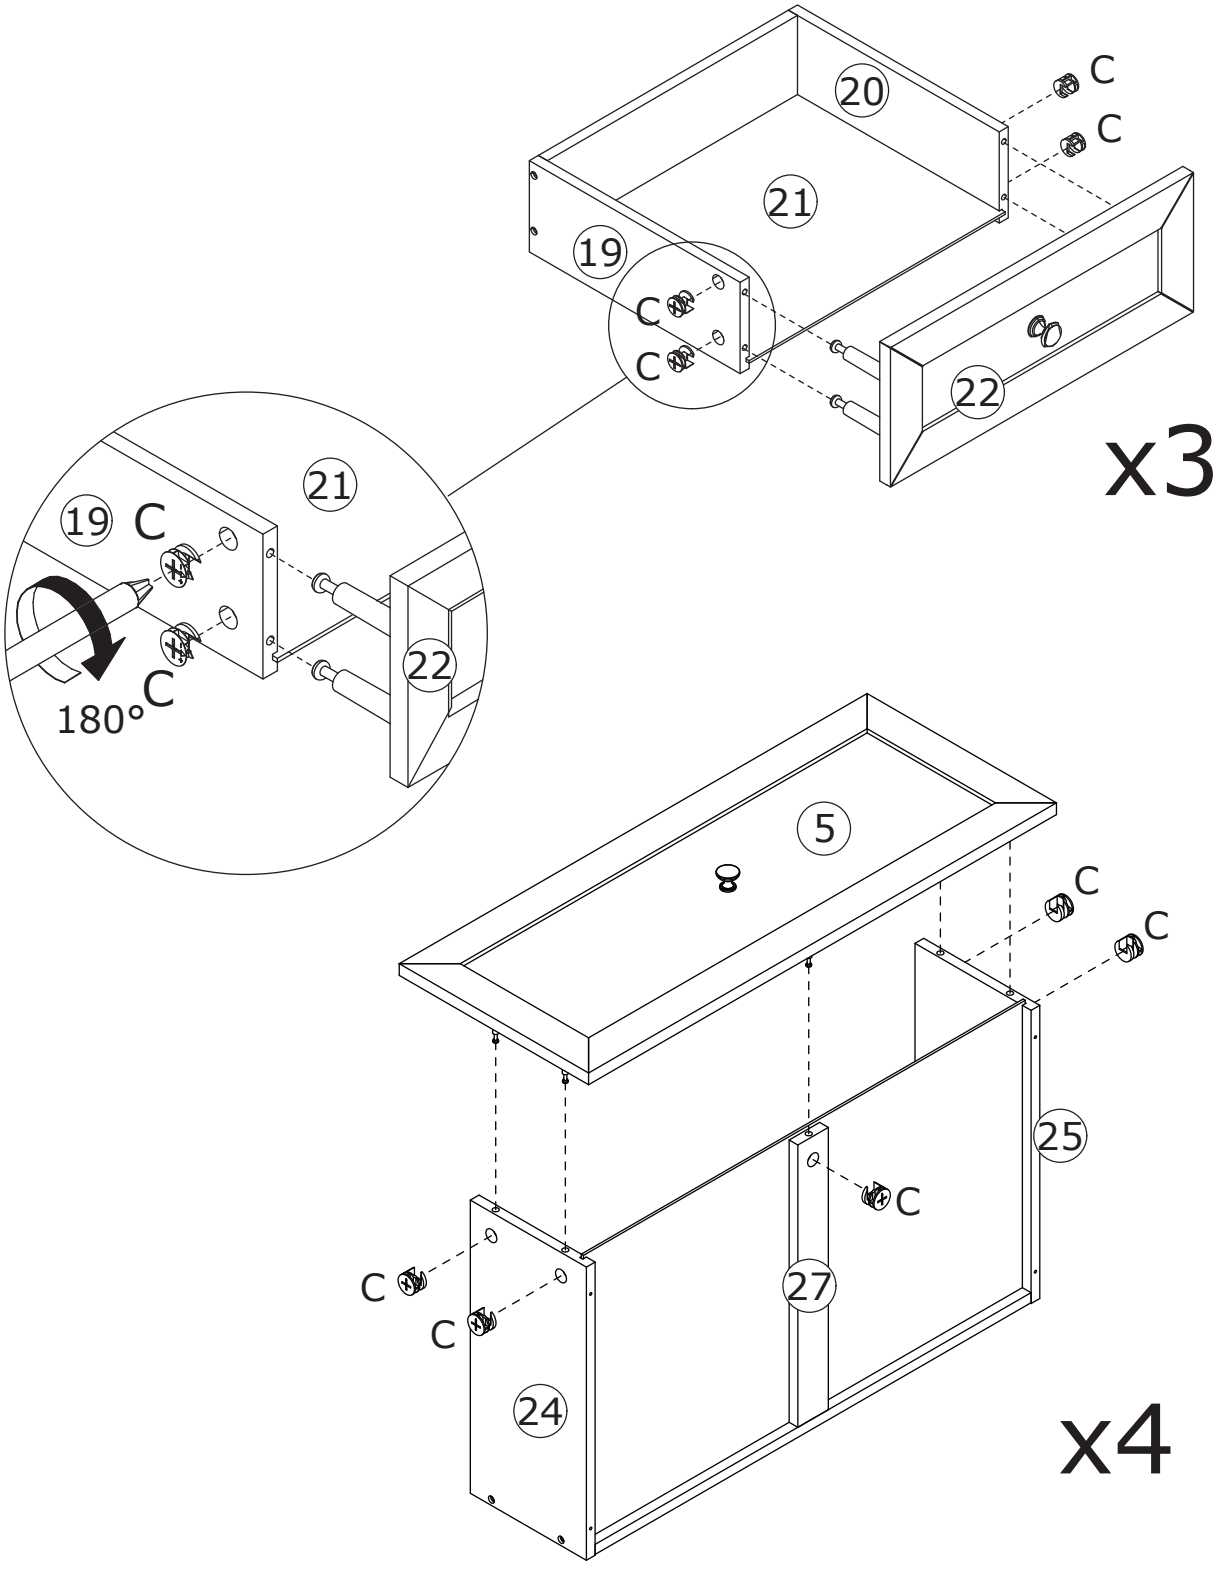



4

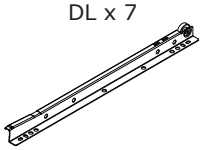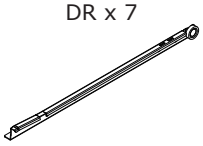H x 42	DL x 7	DR x 7	
 ∅3.5 x 10 mm			



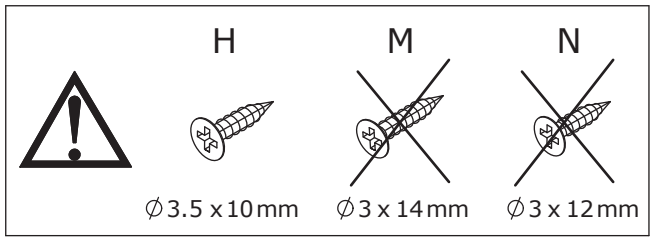


Secure slide rail(DL) and (DR) to part 19, 24 and 20, 25 with screw(H) as shown.

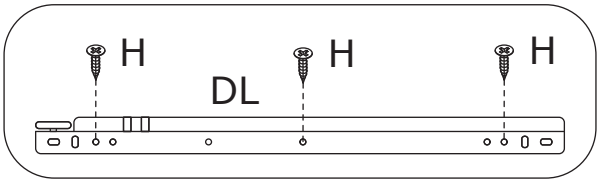

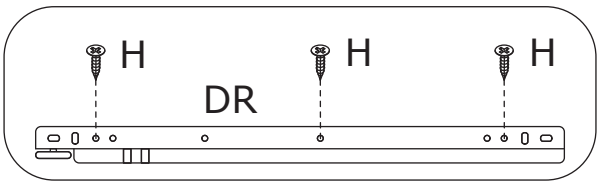



5

H x 12	CL x 2	CR x 2	
 ∅3.5 x 10 mm			





Secure slide rail(CR) to part 4 with screw(H) first.
Flip the panel to other side, secure slide rail(CL) as shown.

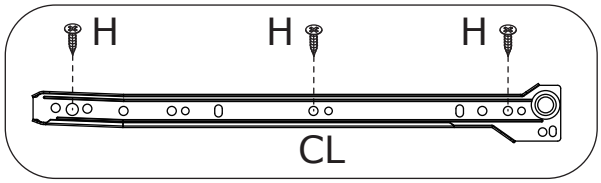

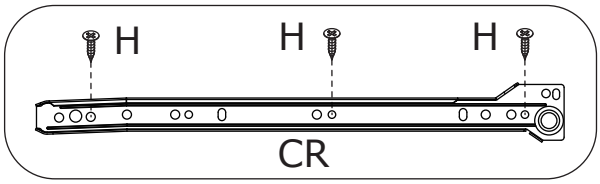


- **Please note that the screw positions of the two slide rails are different.**

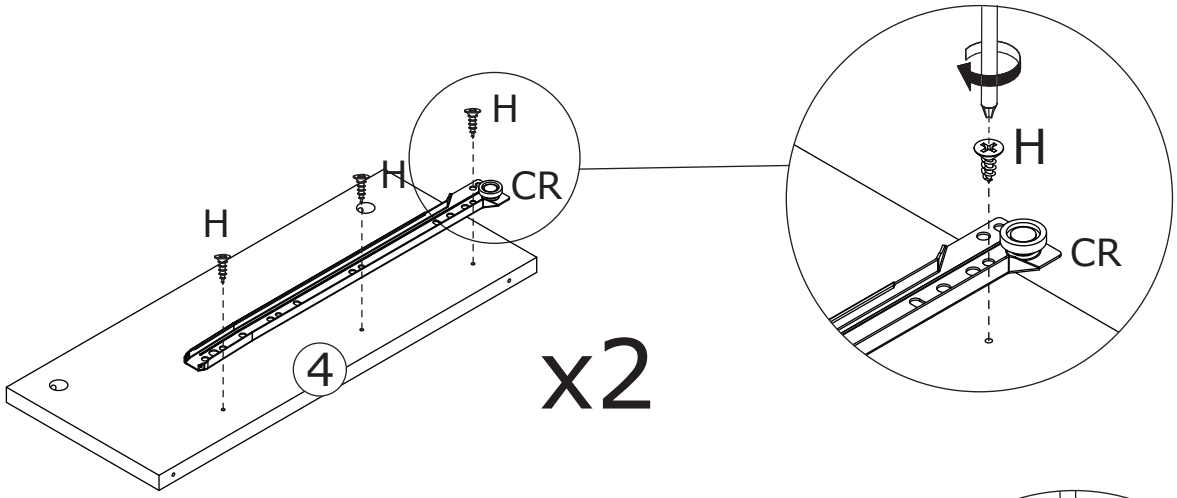

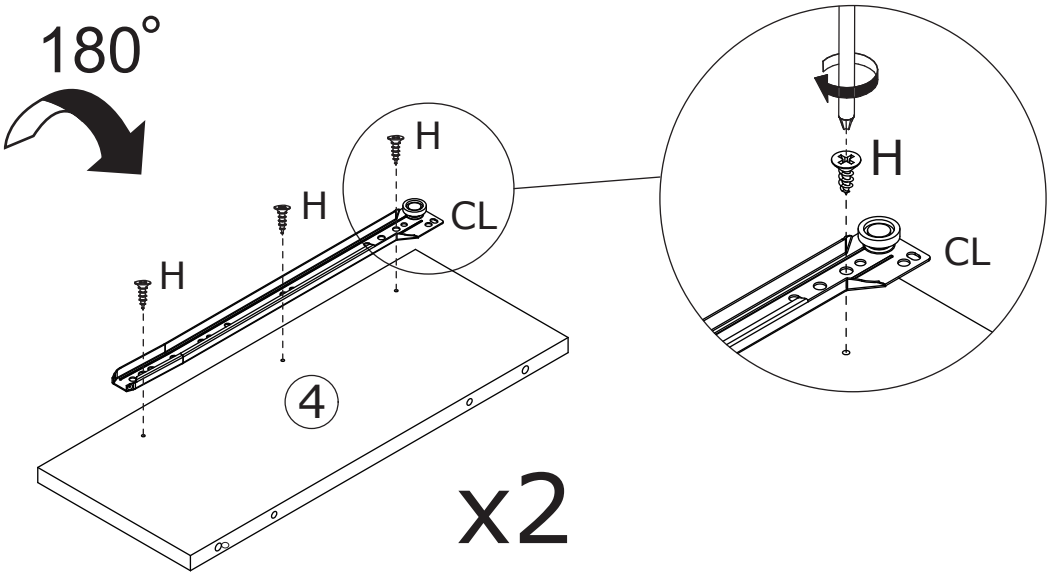


6

E x 4




∅5 x 40 mm






E




∅5 x 40 mm

K

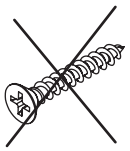


∅4 x 35 mm

Secure part 6 and 7 to part 4 with screw(E) as shown.

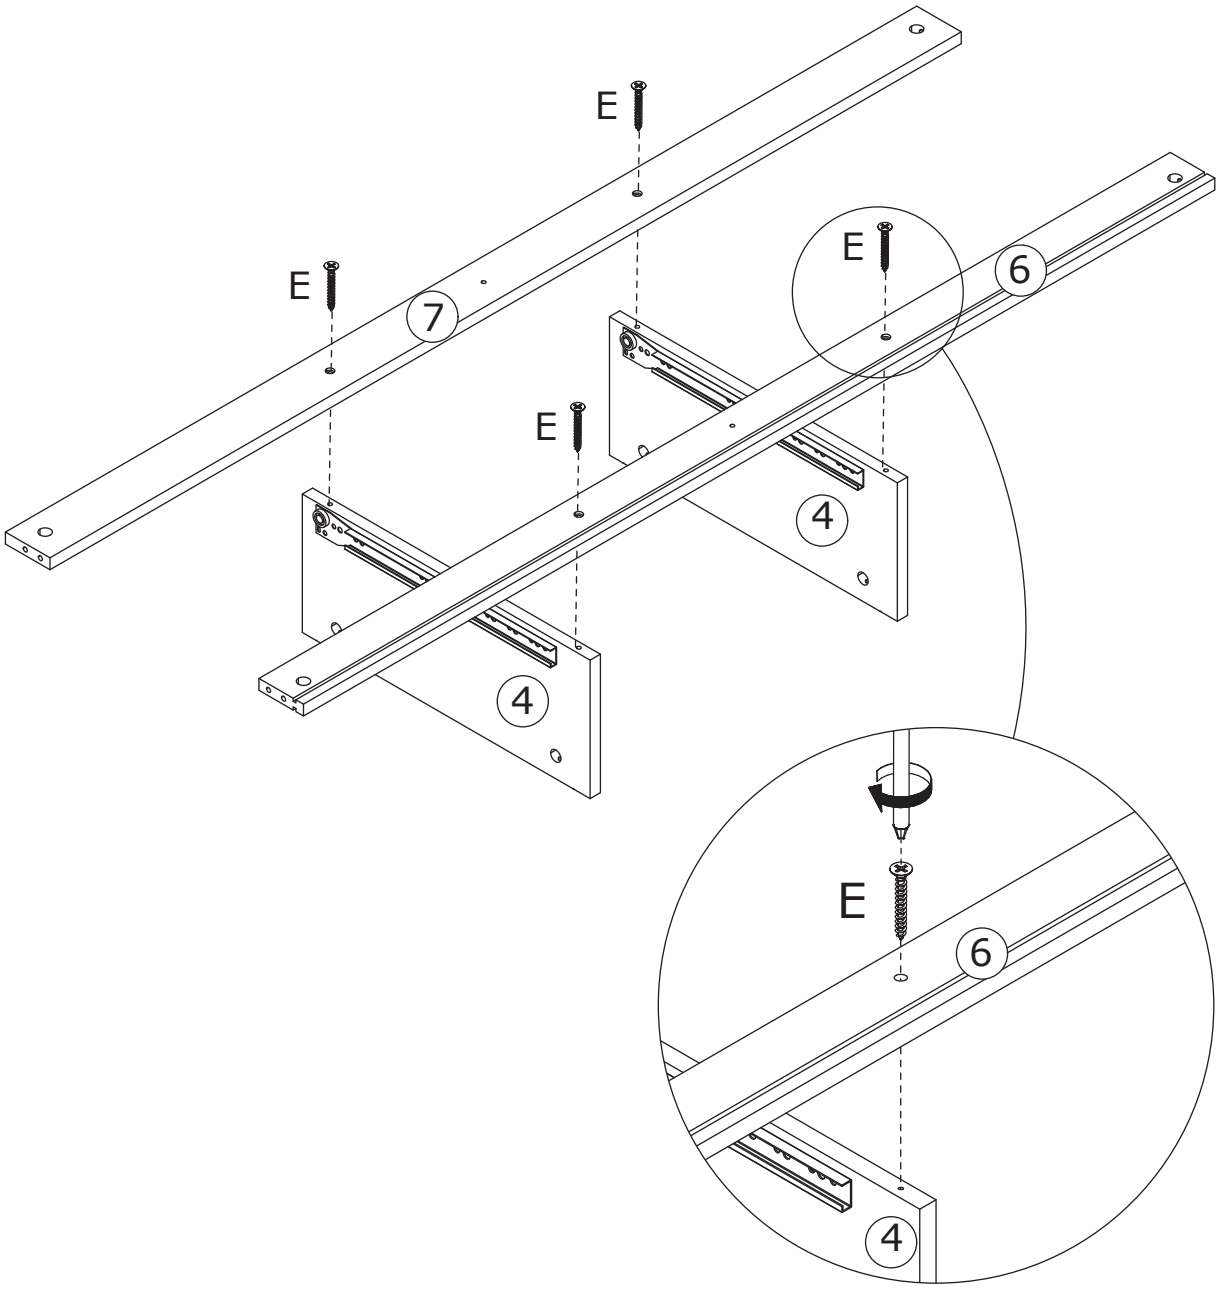



7

B x 10





∅6 x 35 mm




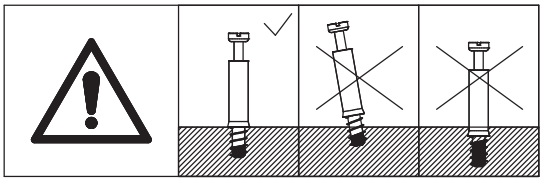



Screw eccentric rod(B) into part 2, 3, 28 and 29.

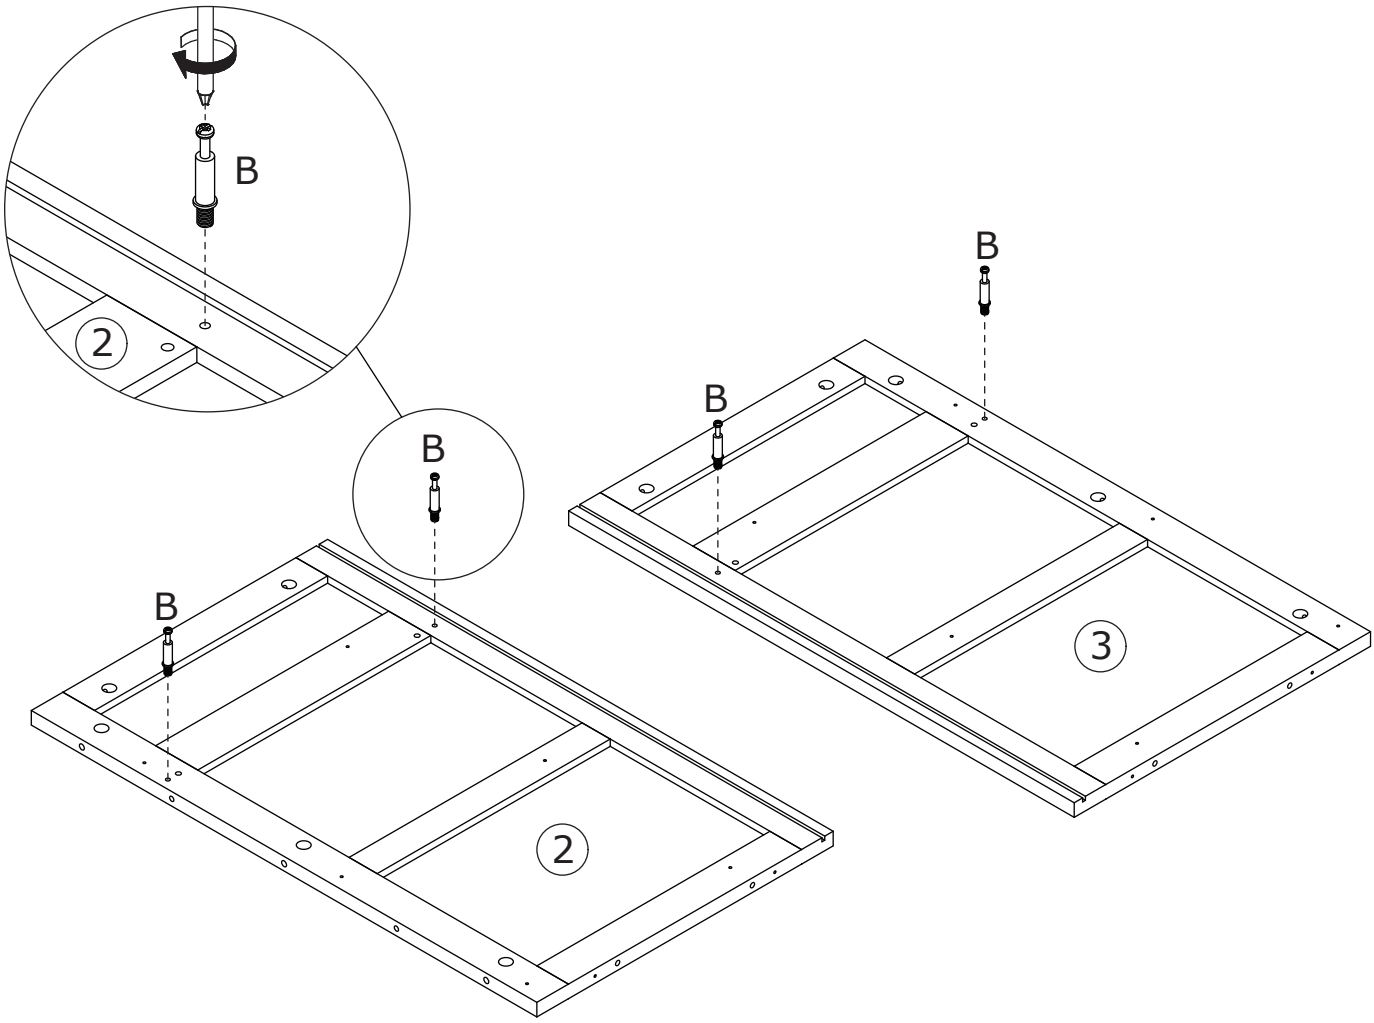


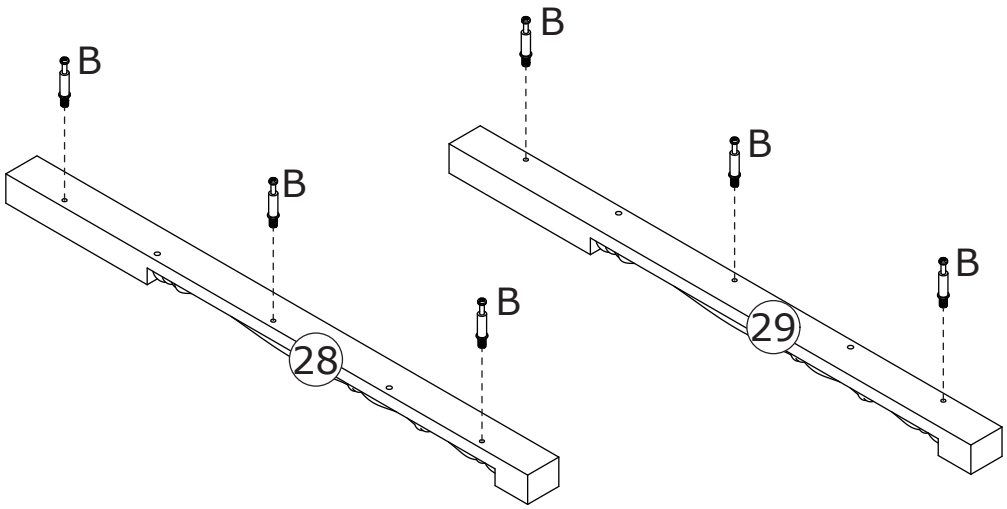


8

A x 4	C x 6	
		
∅6 x 30 mm	∅15 x 10 mm	



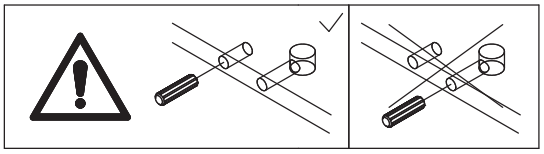


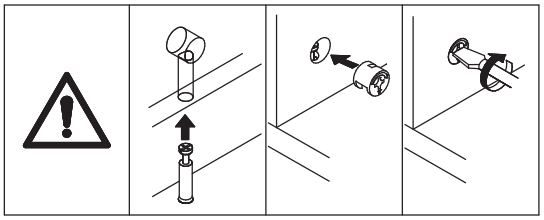


Connect part 28 and 29 to part 2 and 3 respectively using wooden dowel(A), tighten by turning cam lock(C) clockwise as shown.

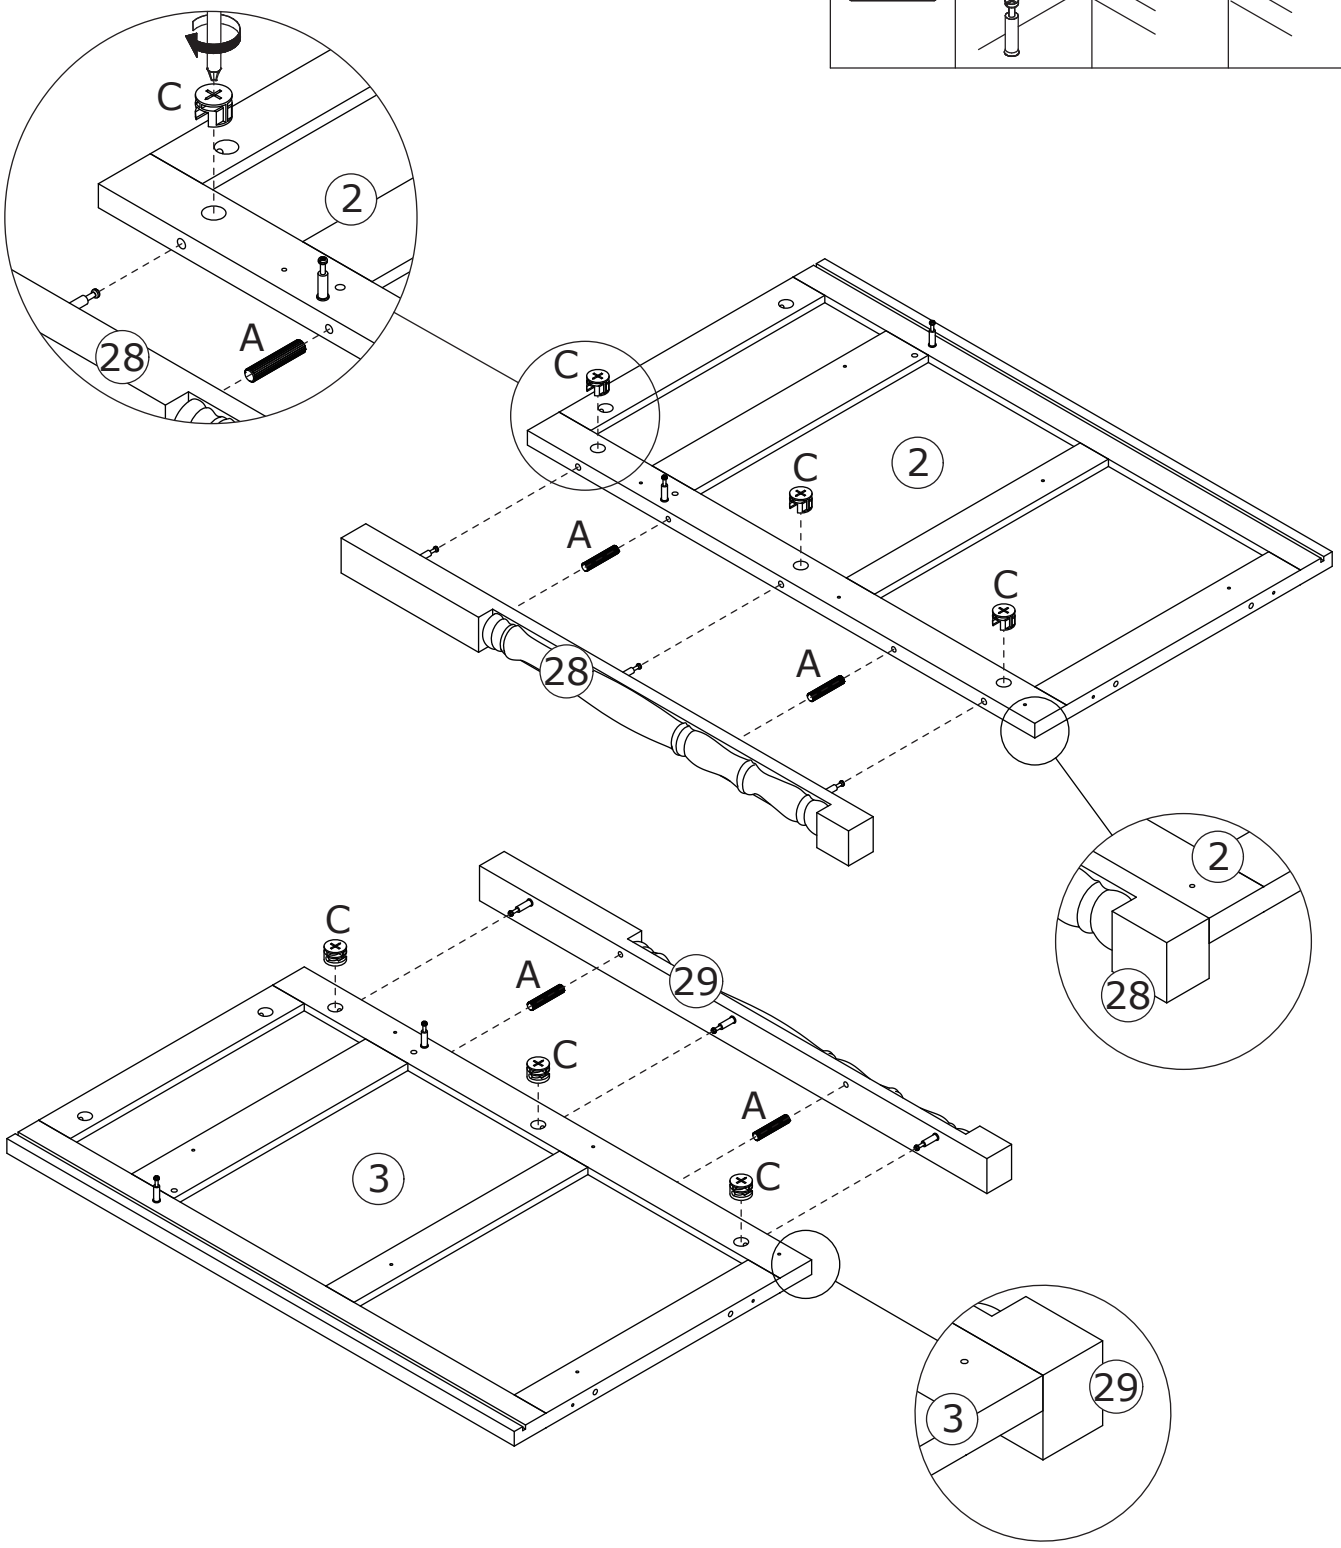



9


H x 18	CL x 3	CR x 3	
 ∅3.5 x 10 mm			


Secure slide rail(CL) and (CR) to part 2 and 3 respectively with screw(H) as shown.

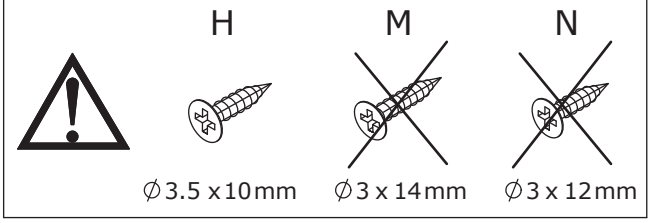


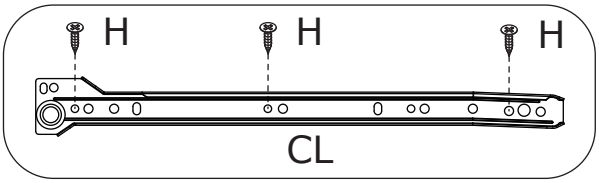



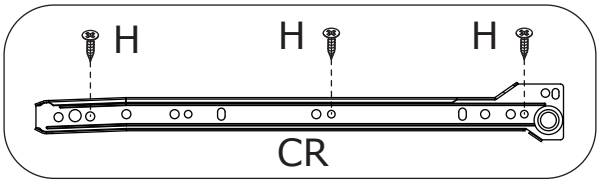


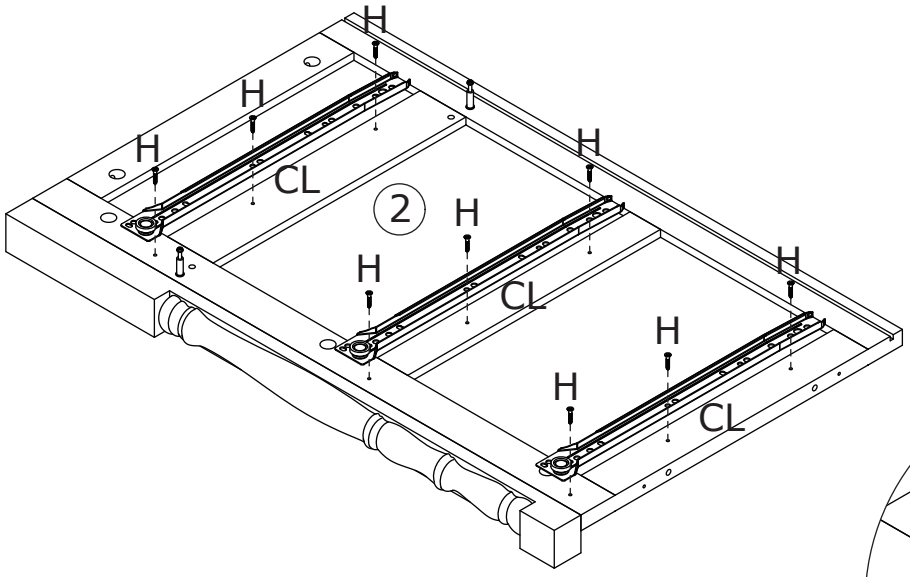

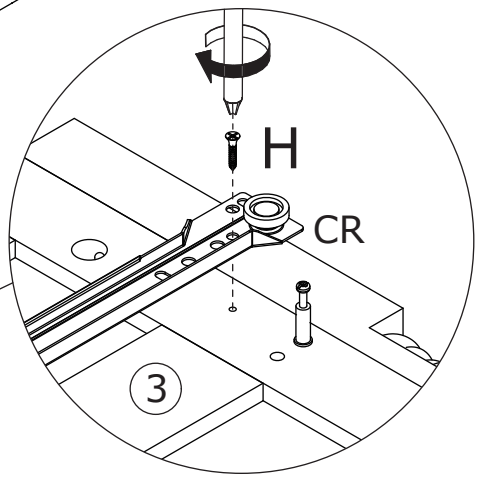


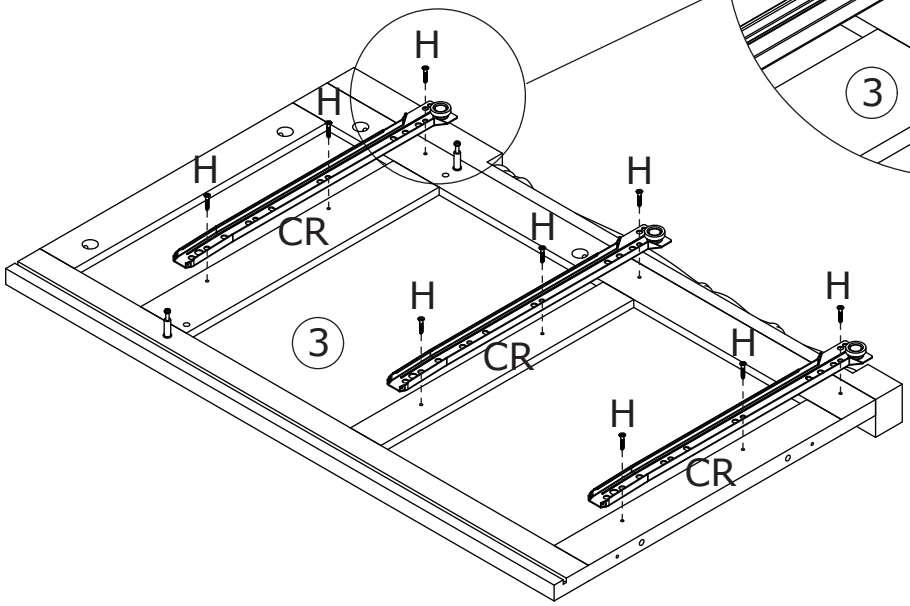



10

H x 12	CL x 2	CR x 2	
 ∅3.5 x 10 mm			


Secure slide rail(CR) to part 8 with screw(H) first.
Flip the panel to other side, secure slide rail(CL) as shown.

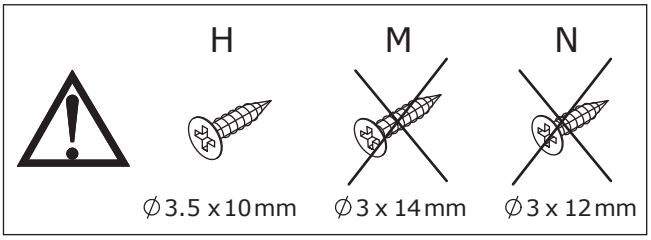


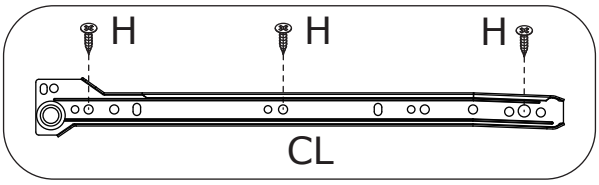


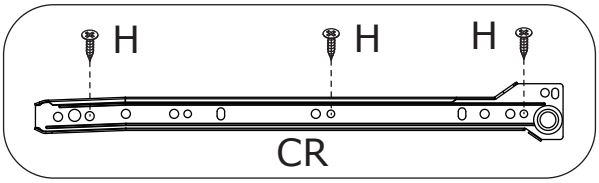



- **Please note that the screw positions of the two slide rails are different.**

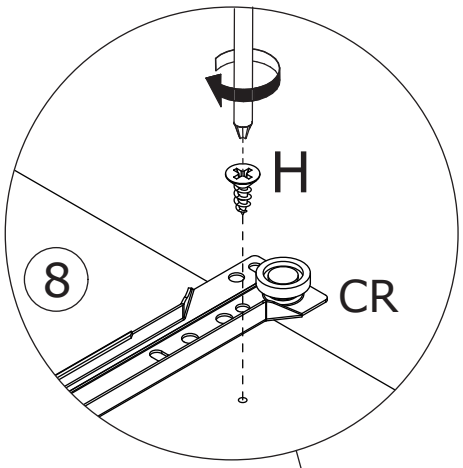


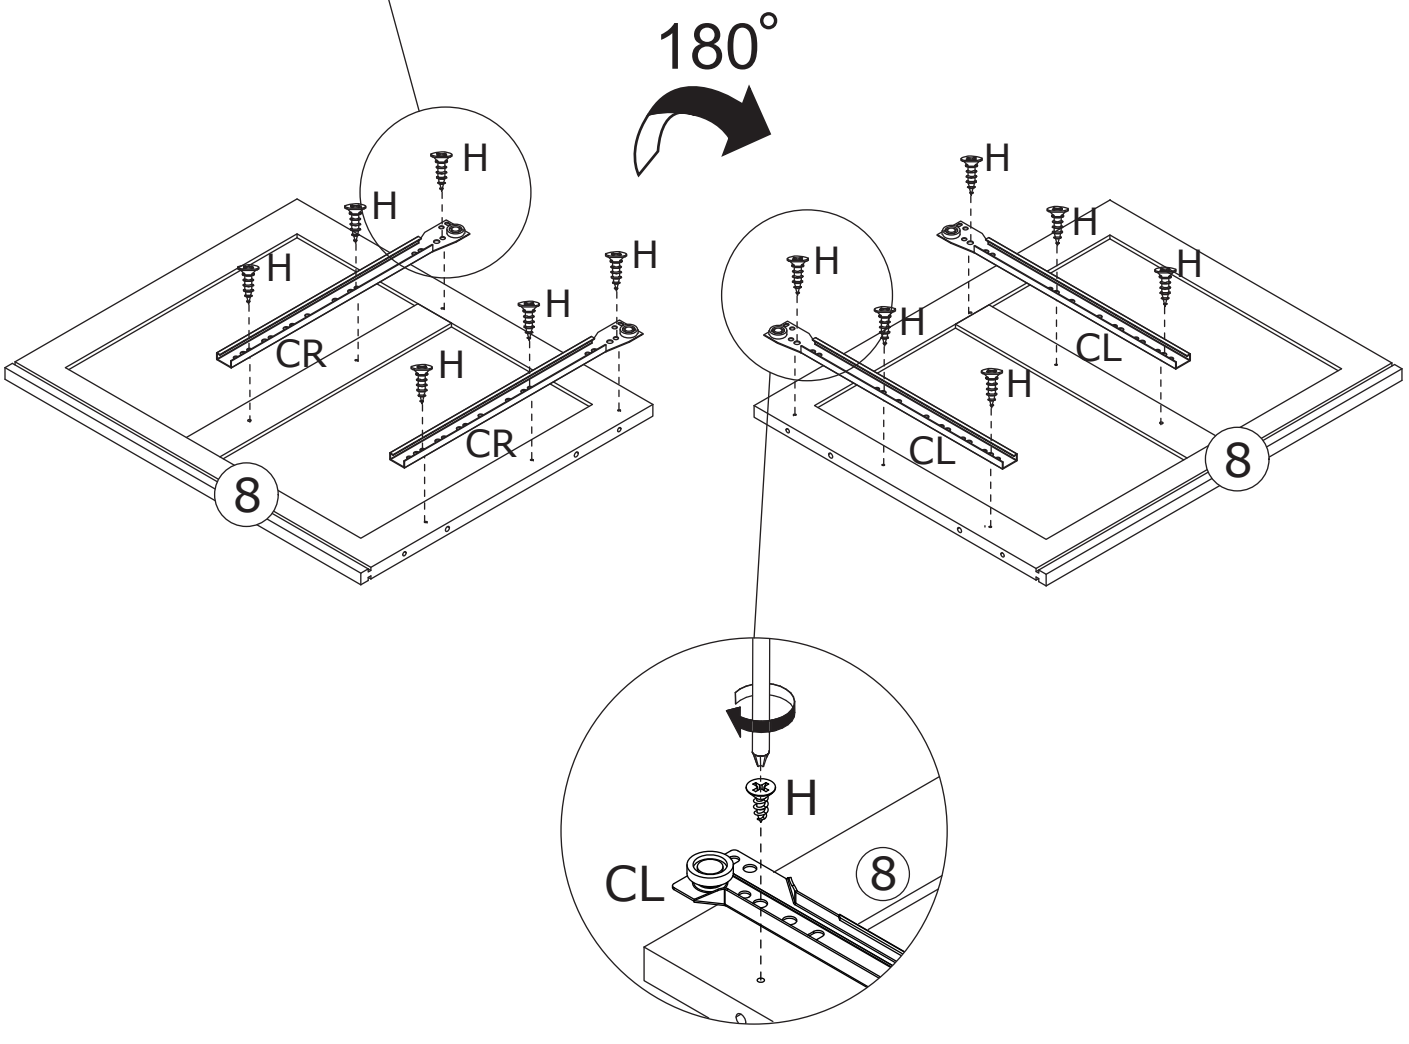


11

A x 4	C x 4	
		
∅6 x 30 mm	∅15 x 10 mm	

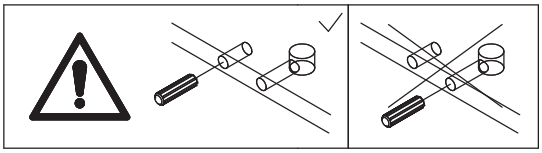

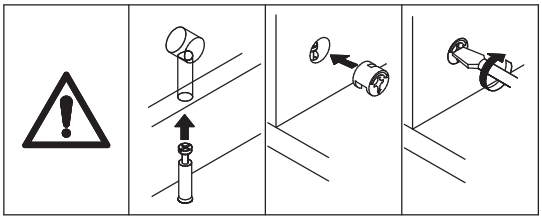


Connect part 2 and 3 to part 6 and 7 using wooden dowel(A), tighten by turning cam lock(C) clockwise as shown.

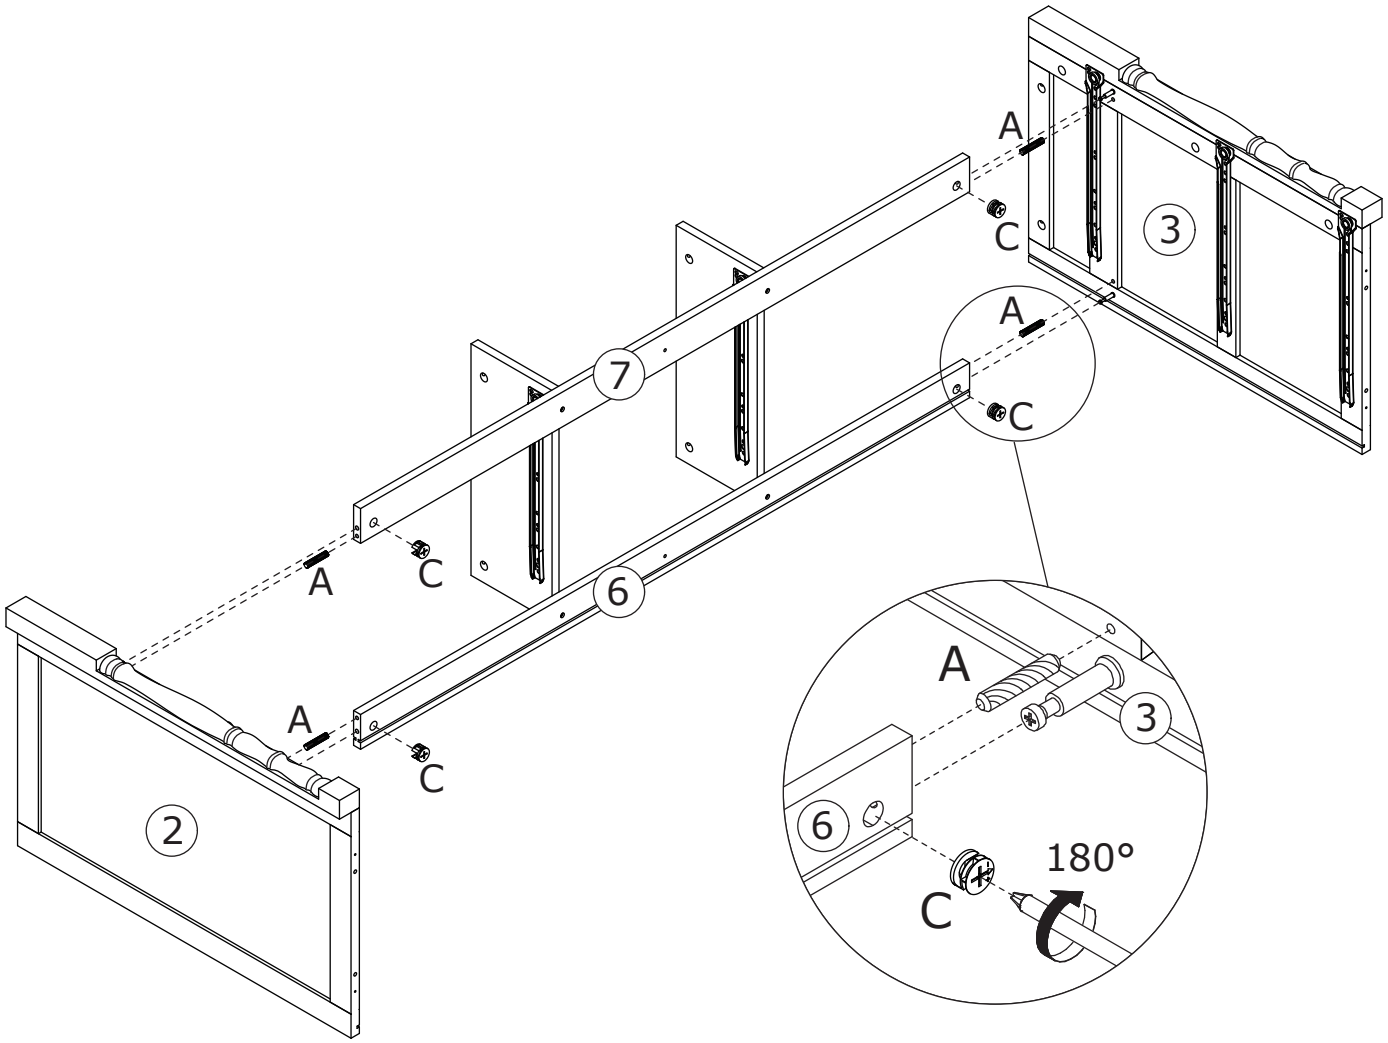


12


E x 2



∅5 x 40 mm




E




∅5 x 40 mm

K

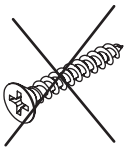


∅4 x 35 mm

Secure part 8 to part 6 and 7 with screw(E).

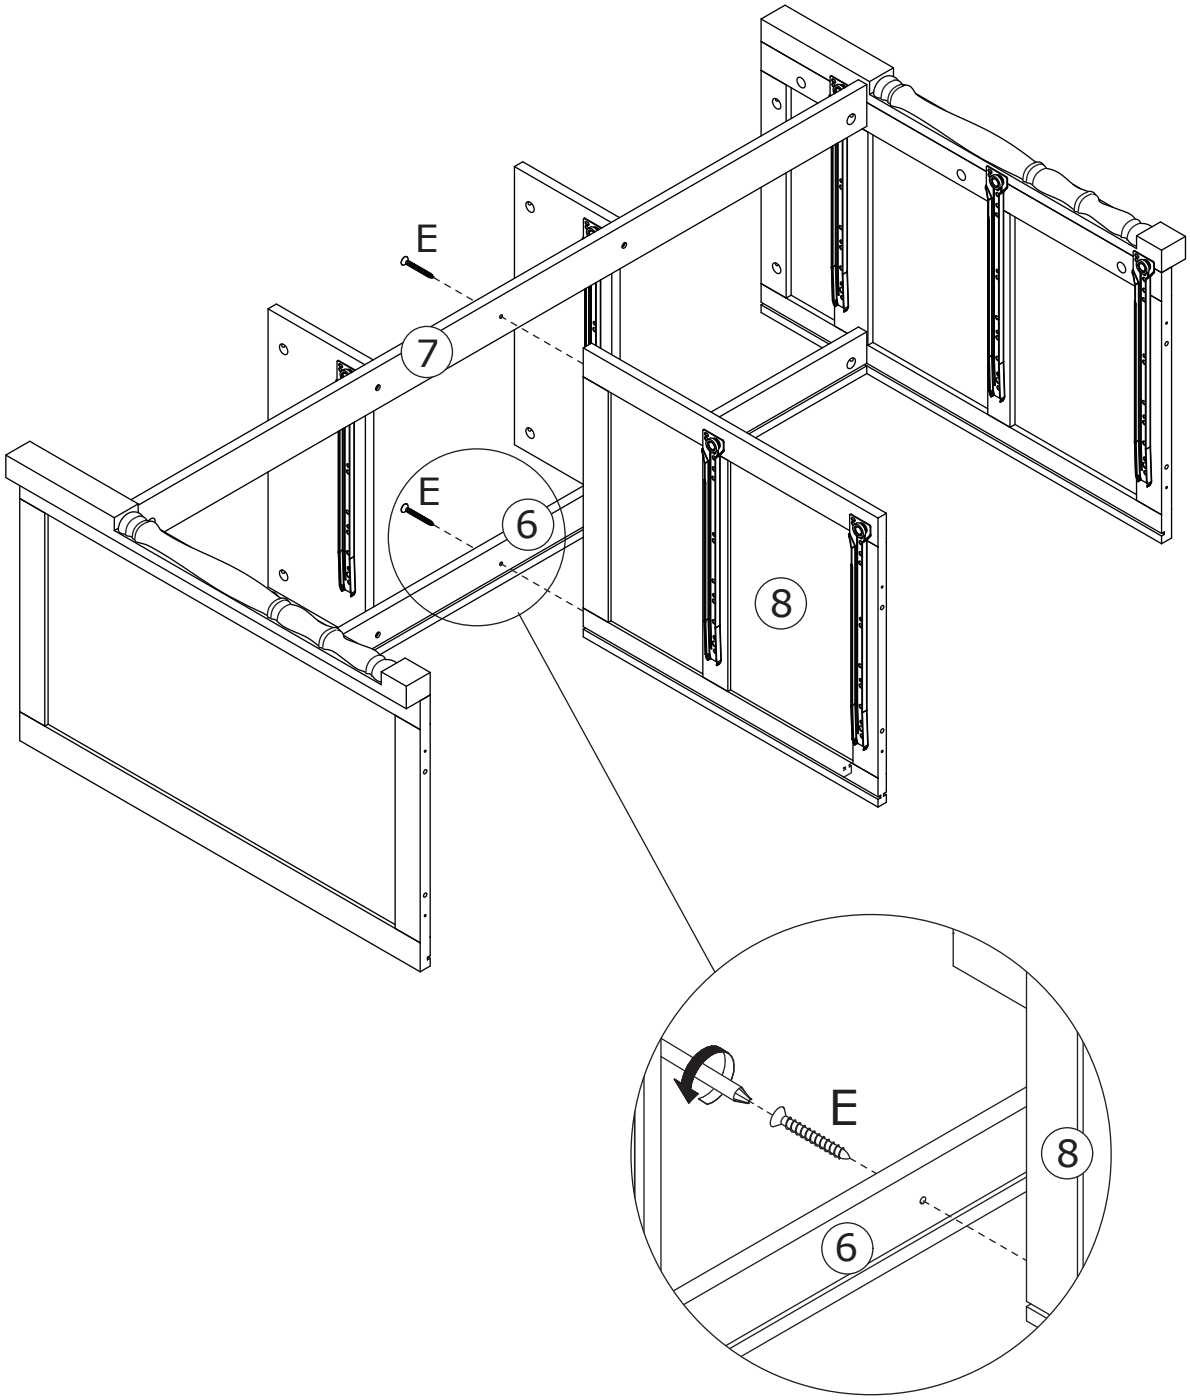


13

Connect two part 13 to part 30 first.
Insert part 13 along available grooves.

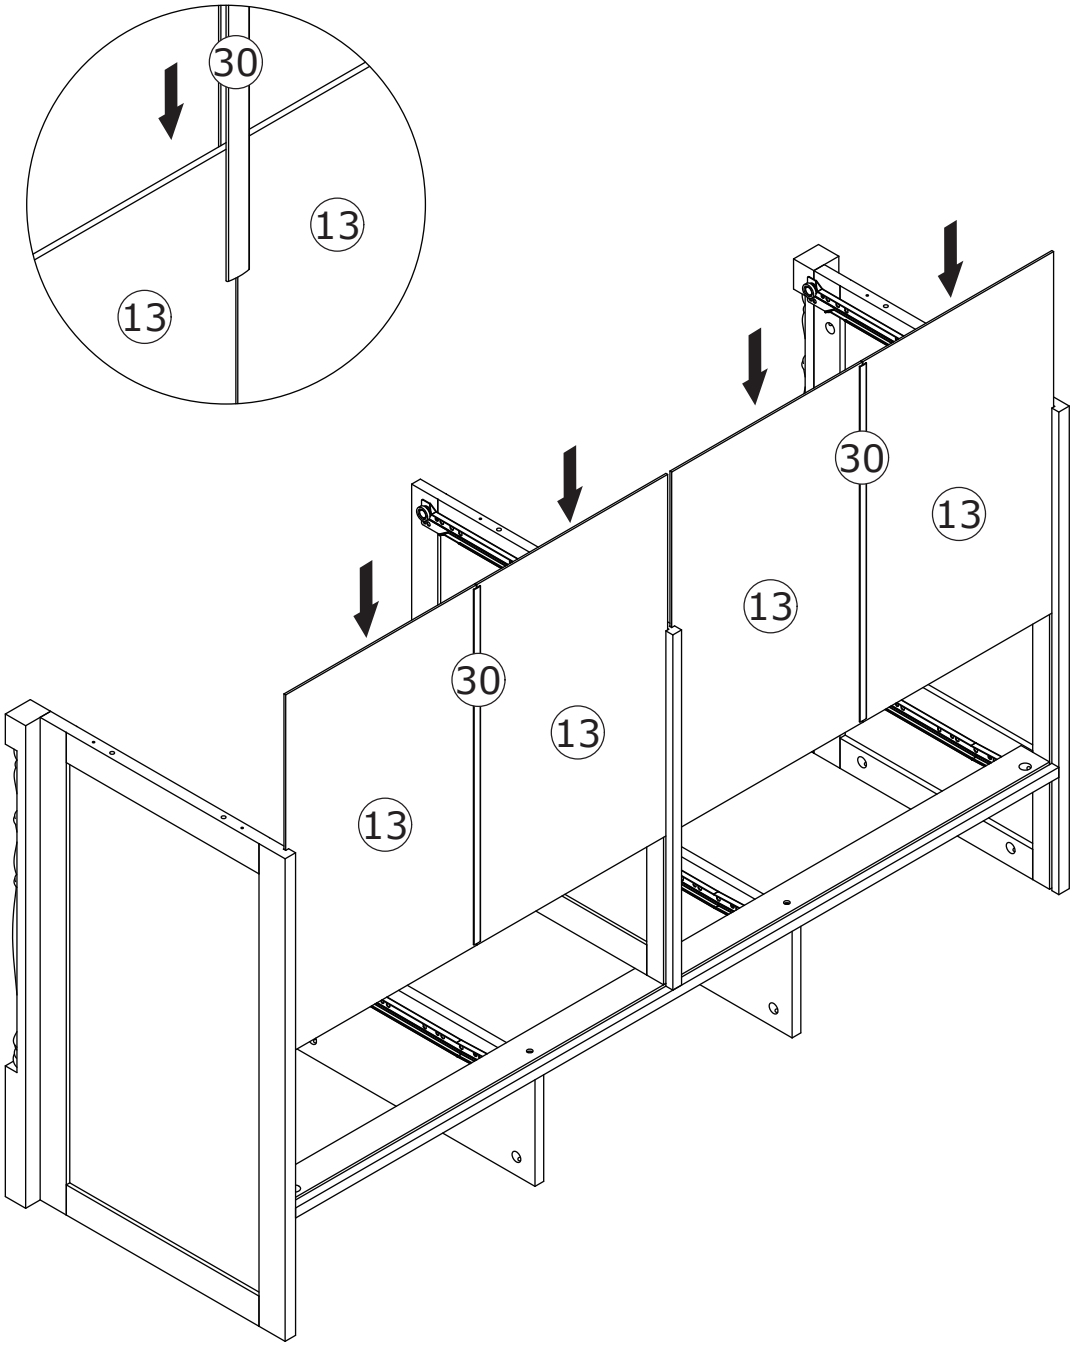



14

B x 23





∅6 x 35 mm





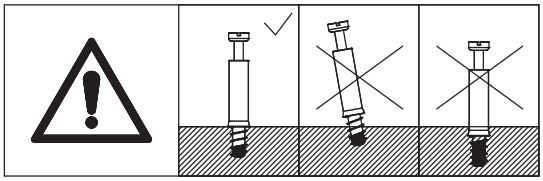



Screw eccentric rod(B) onto part 9, 10 and 12.

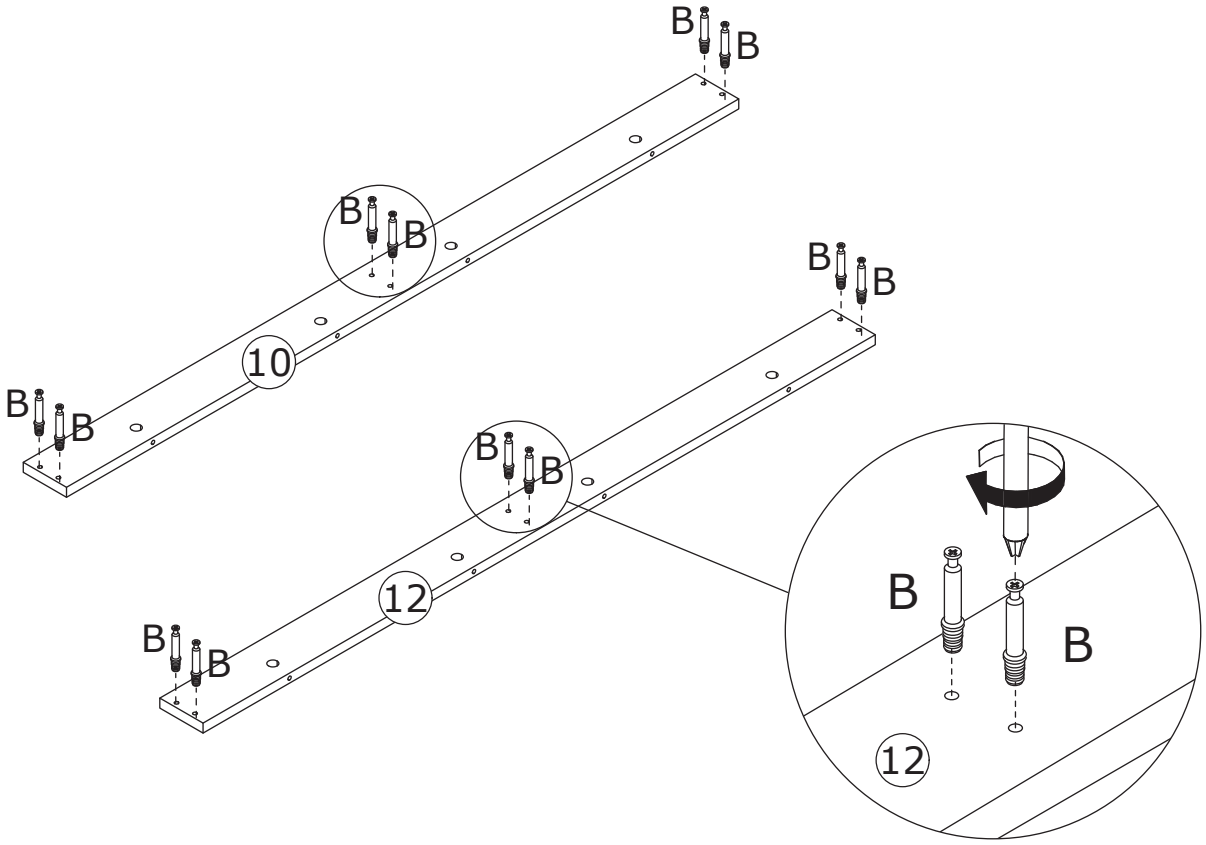

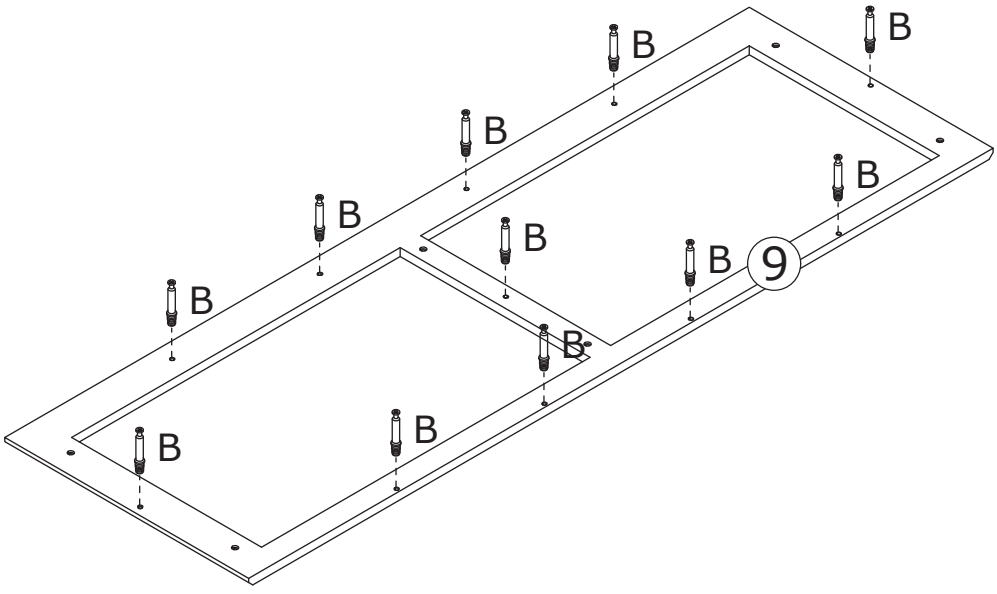


15

A x 6	E x 6	
		
∅6 x 30 mm	∅5 x 40 mm	

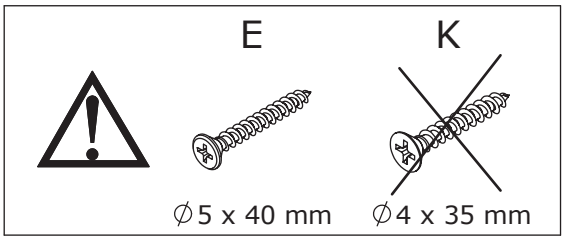

Connect part 9 to the component using wooden dowel (A), and secure with screw(E).

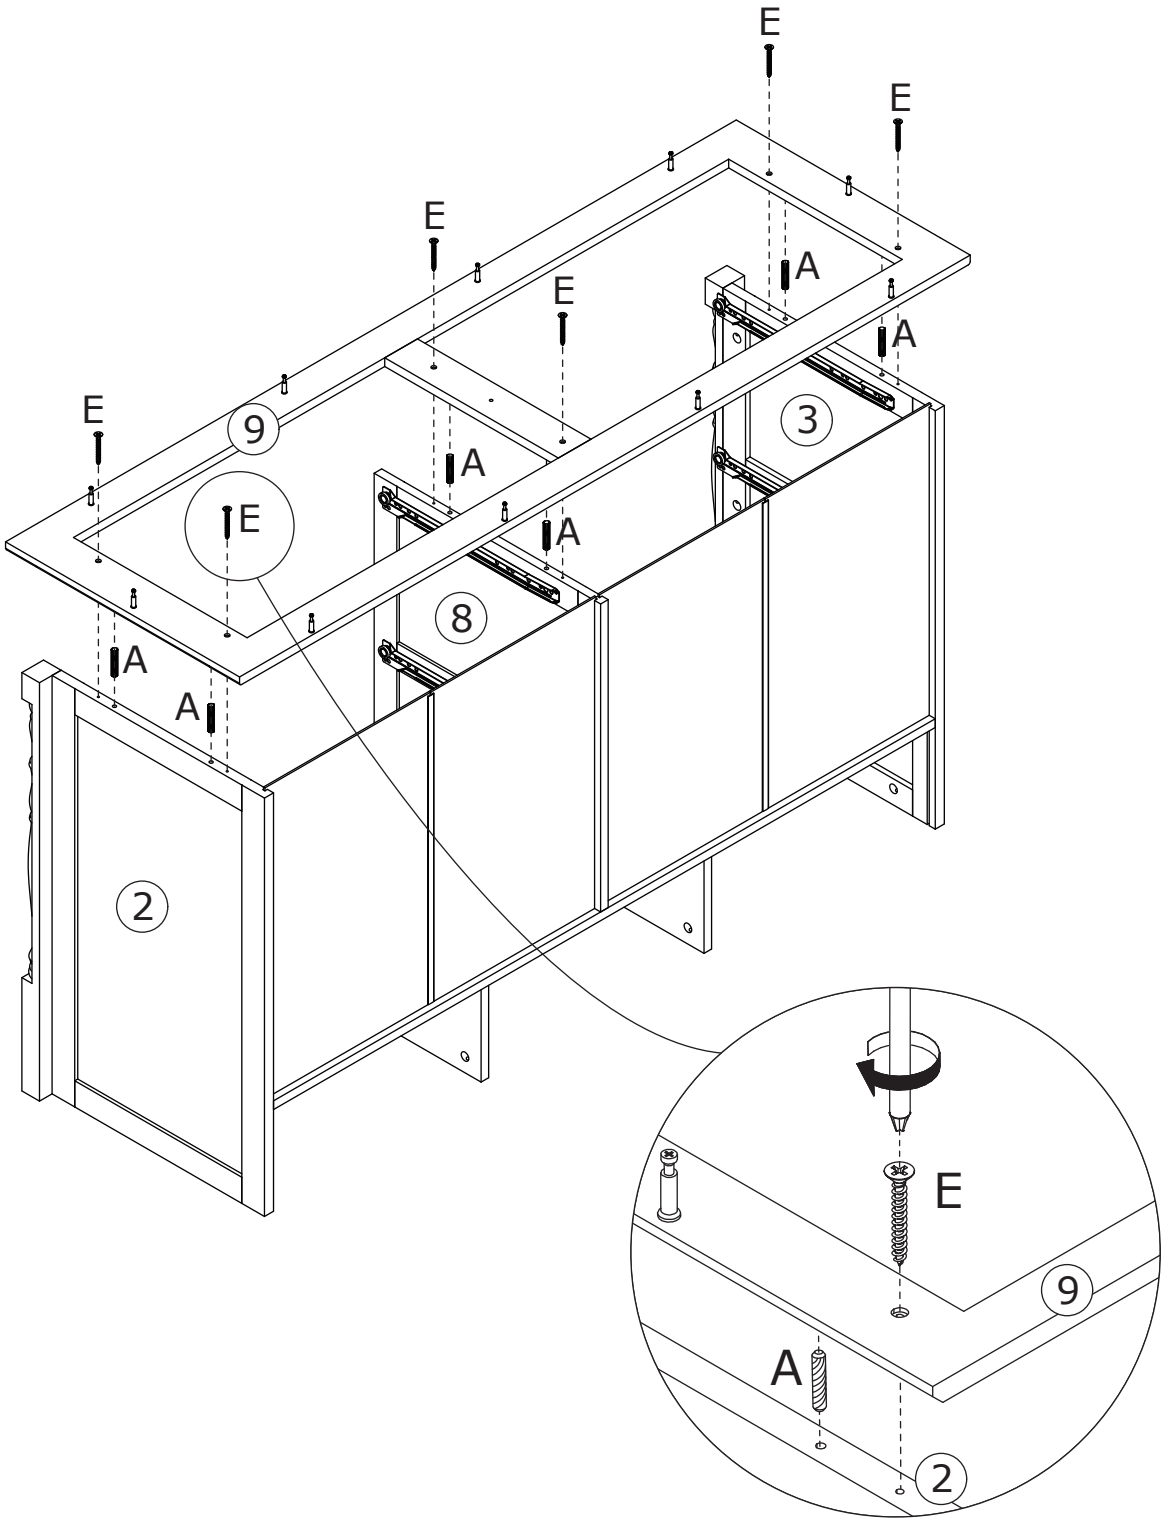



16

C x 12




∅15 x 10 mm



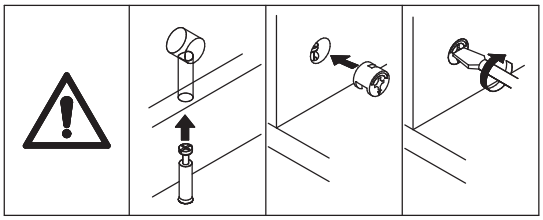

Connect part 11 to part 10 and 12, tighten by turning cam lock(C) clockwise as shown.

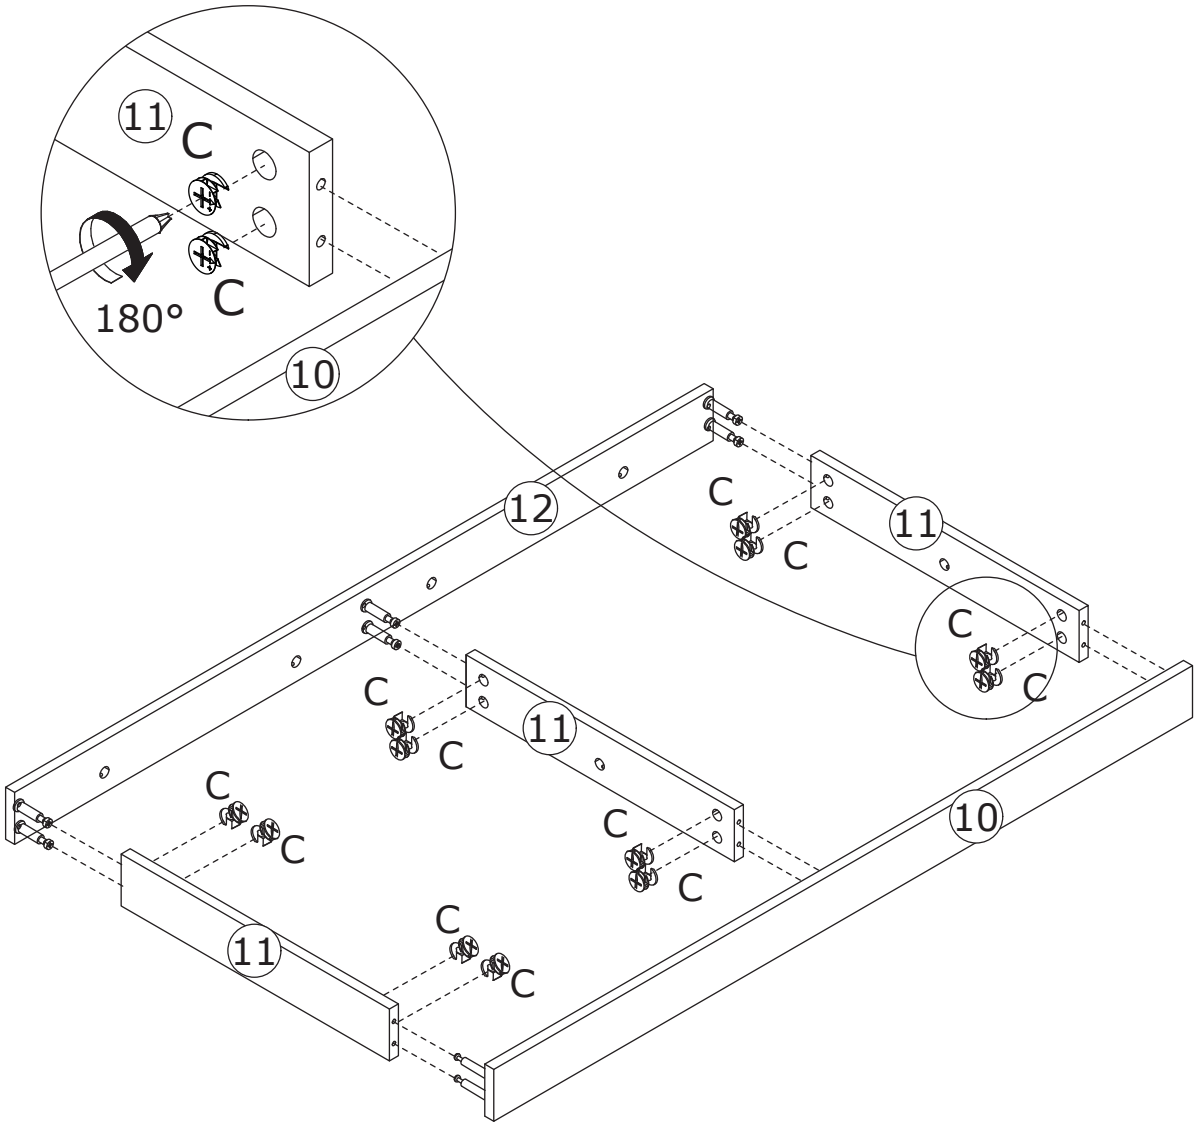



17

C x 11




∅15 x 10 mm



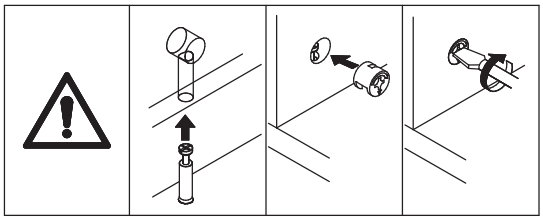


Attach the component to part 9, tighten by turning cam lock(C) clockwise as shown.



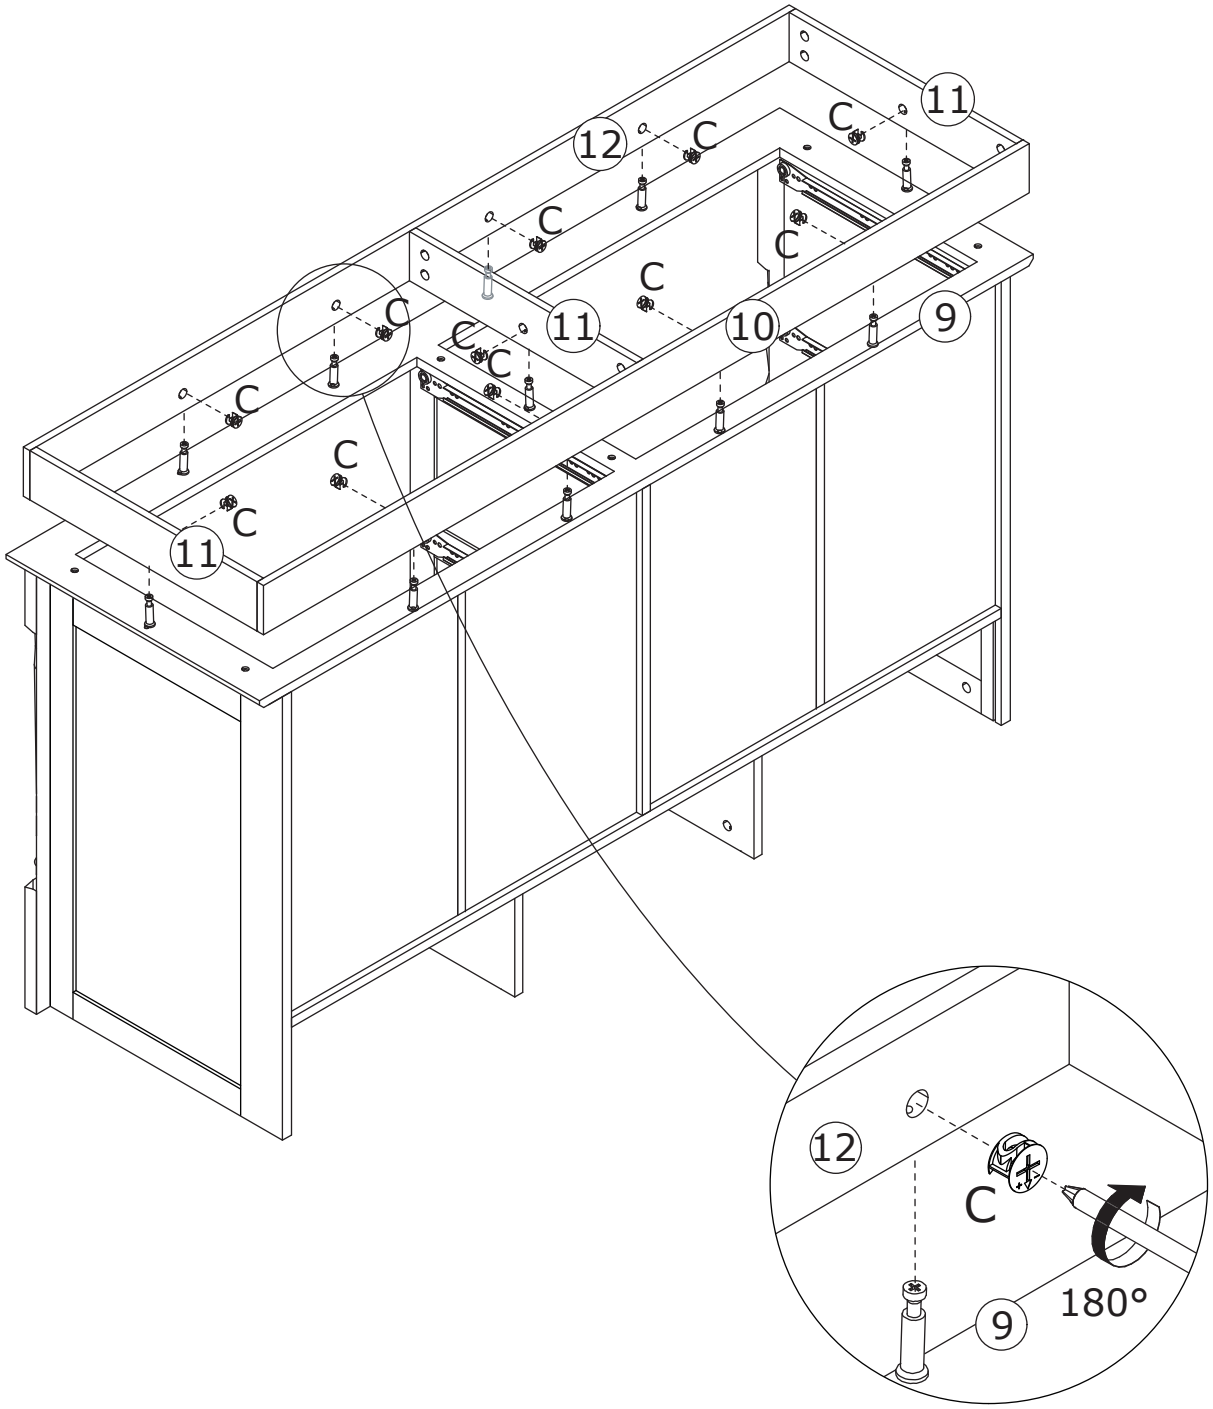



18

Insert part 14 along the available grooves.

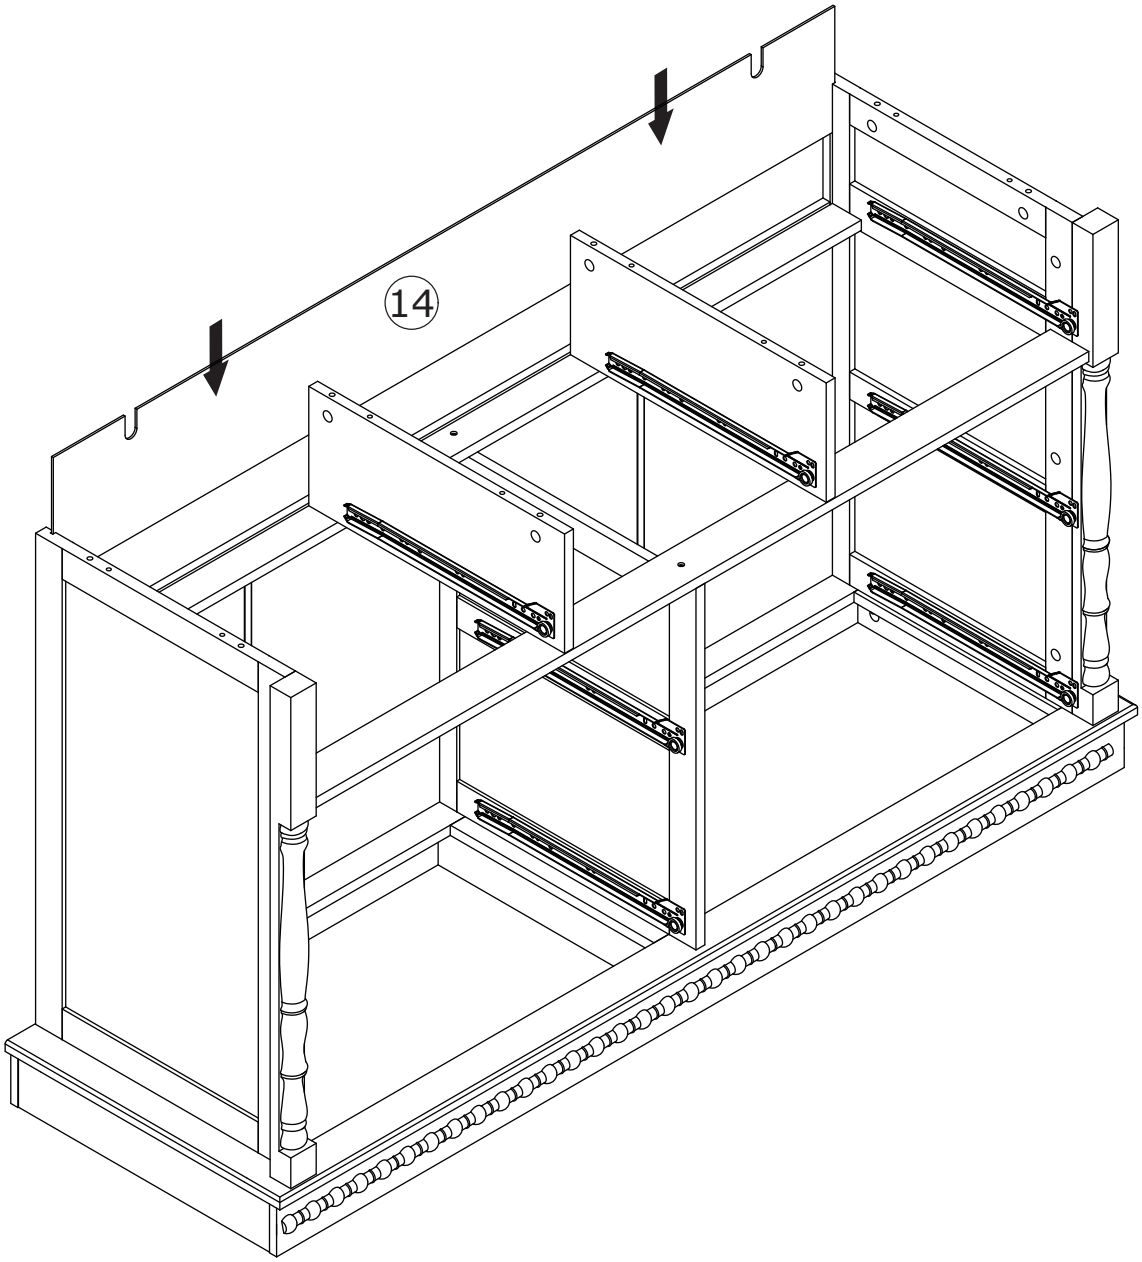


19



B x 8	D x 2	Q x 2	
			
∅6 x 35 mm	∅4 x 12 mm		

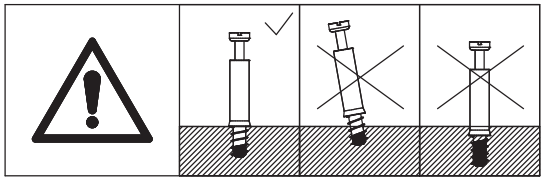



Screw eccentric rod(B) onto part 1.
Secure bracket(Q) with screw(D).

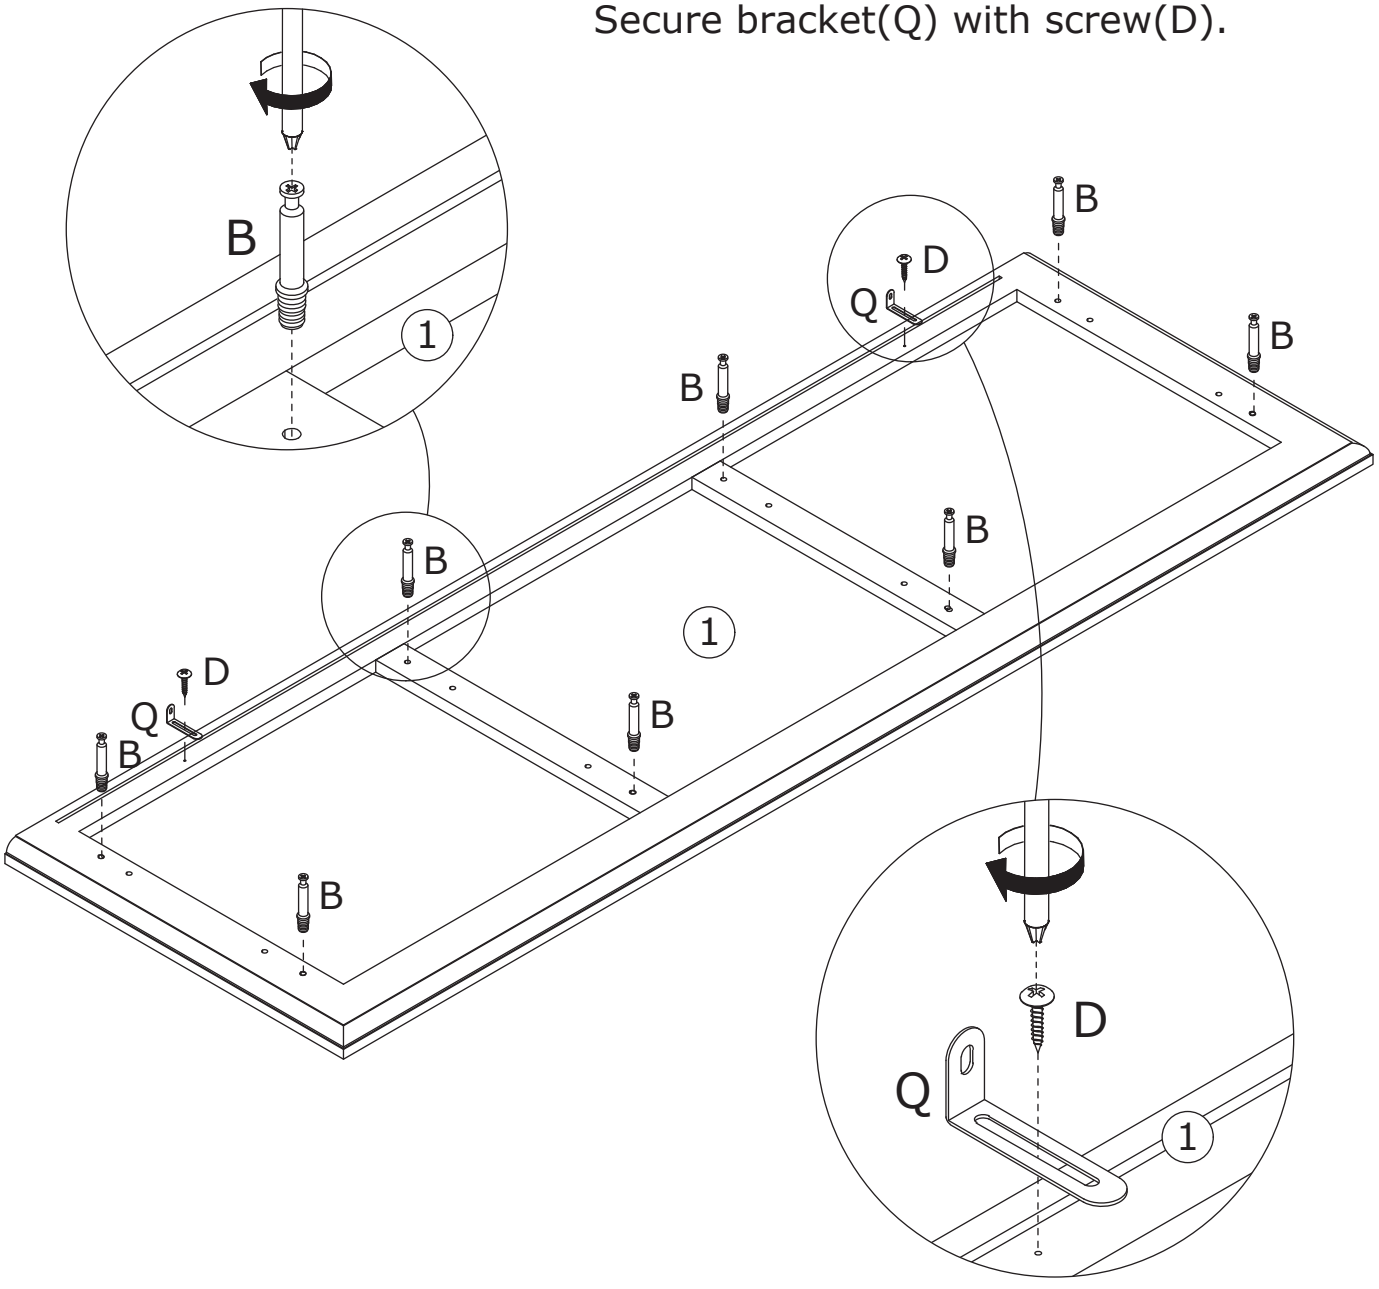


20

A x 8	C x 8	
		
∅6 x 30 mm	∅15 x 10 mm	

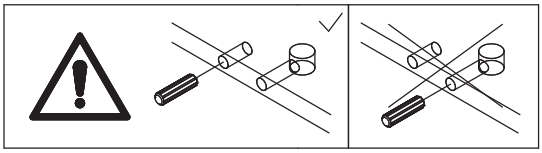

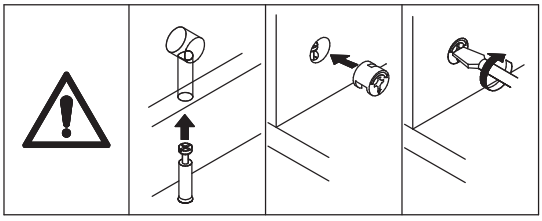

Connect part 1 to the top using wooden dowel(A), tighten by turning cam lock(C) clockwise as shown.

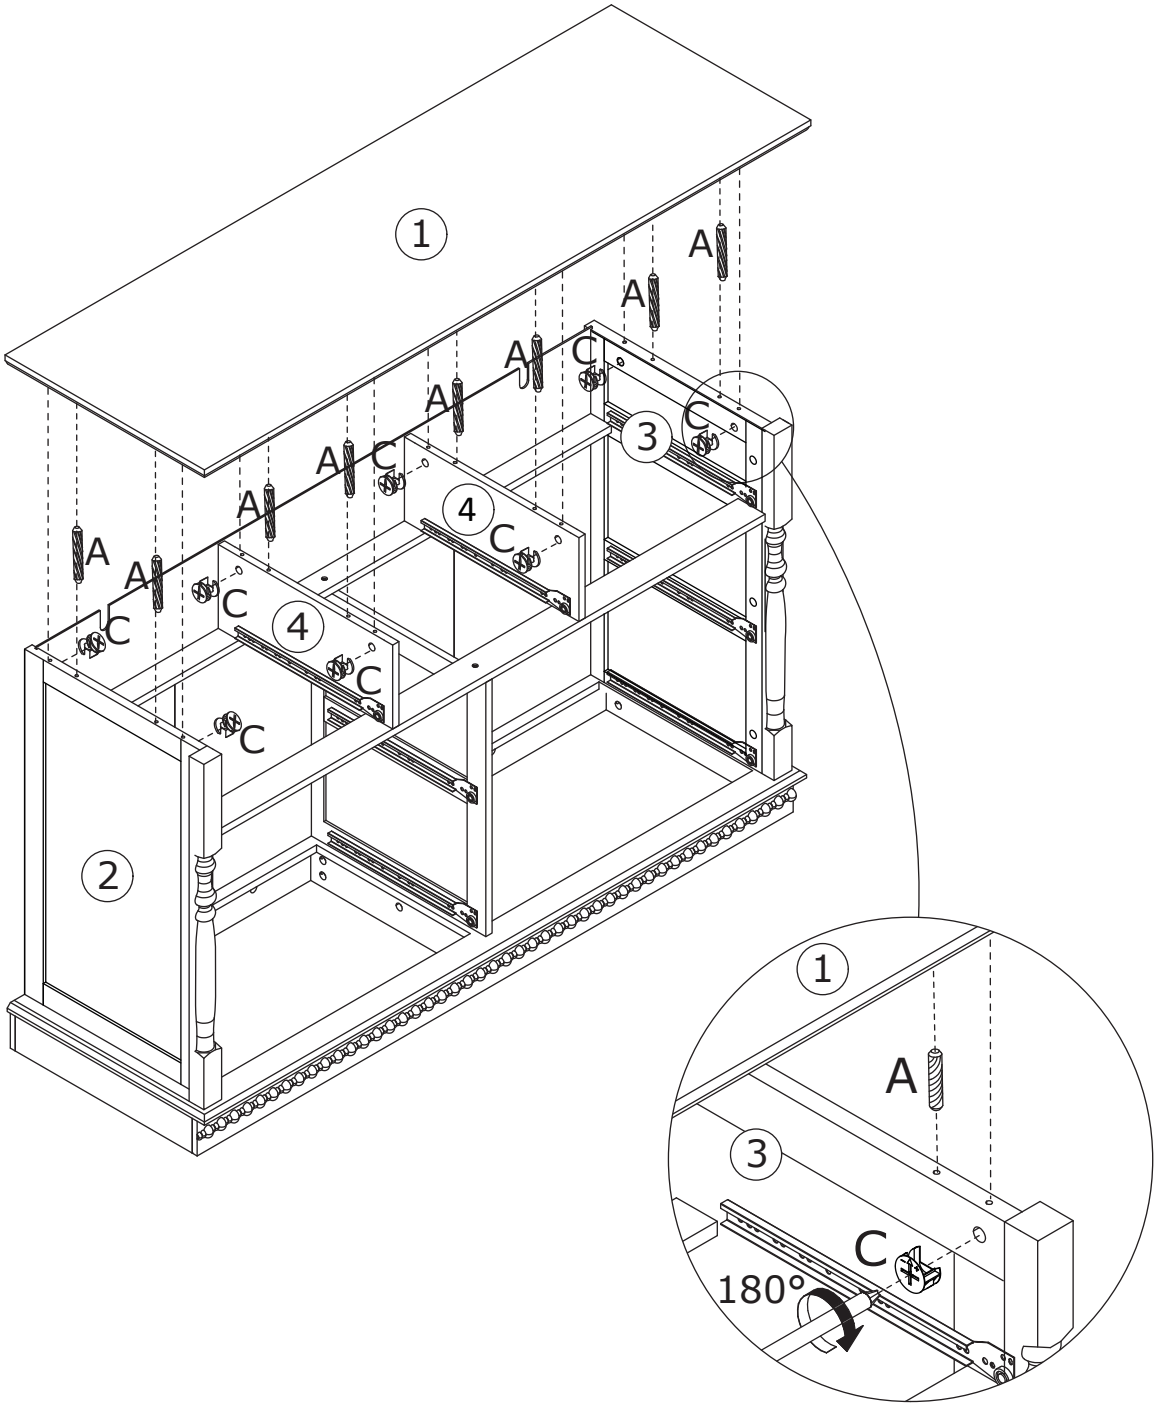


21


K x 12



∅4 x 35 mm




E

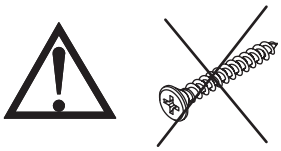


∅5 x 40 mm

K






∅4 x 35 mm

Secure part 15 and 16 to part 17 with screw(K).

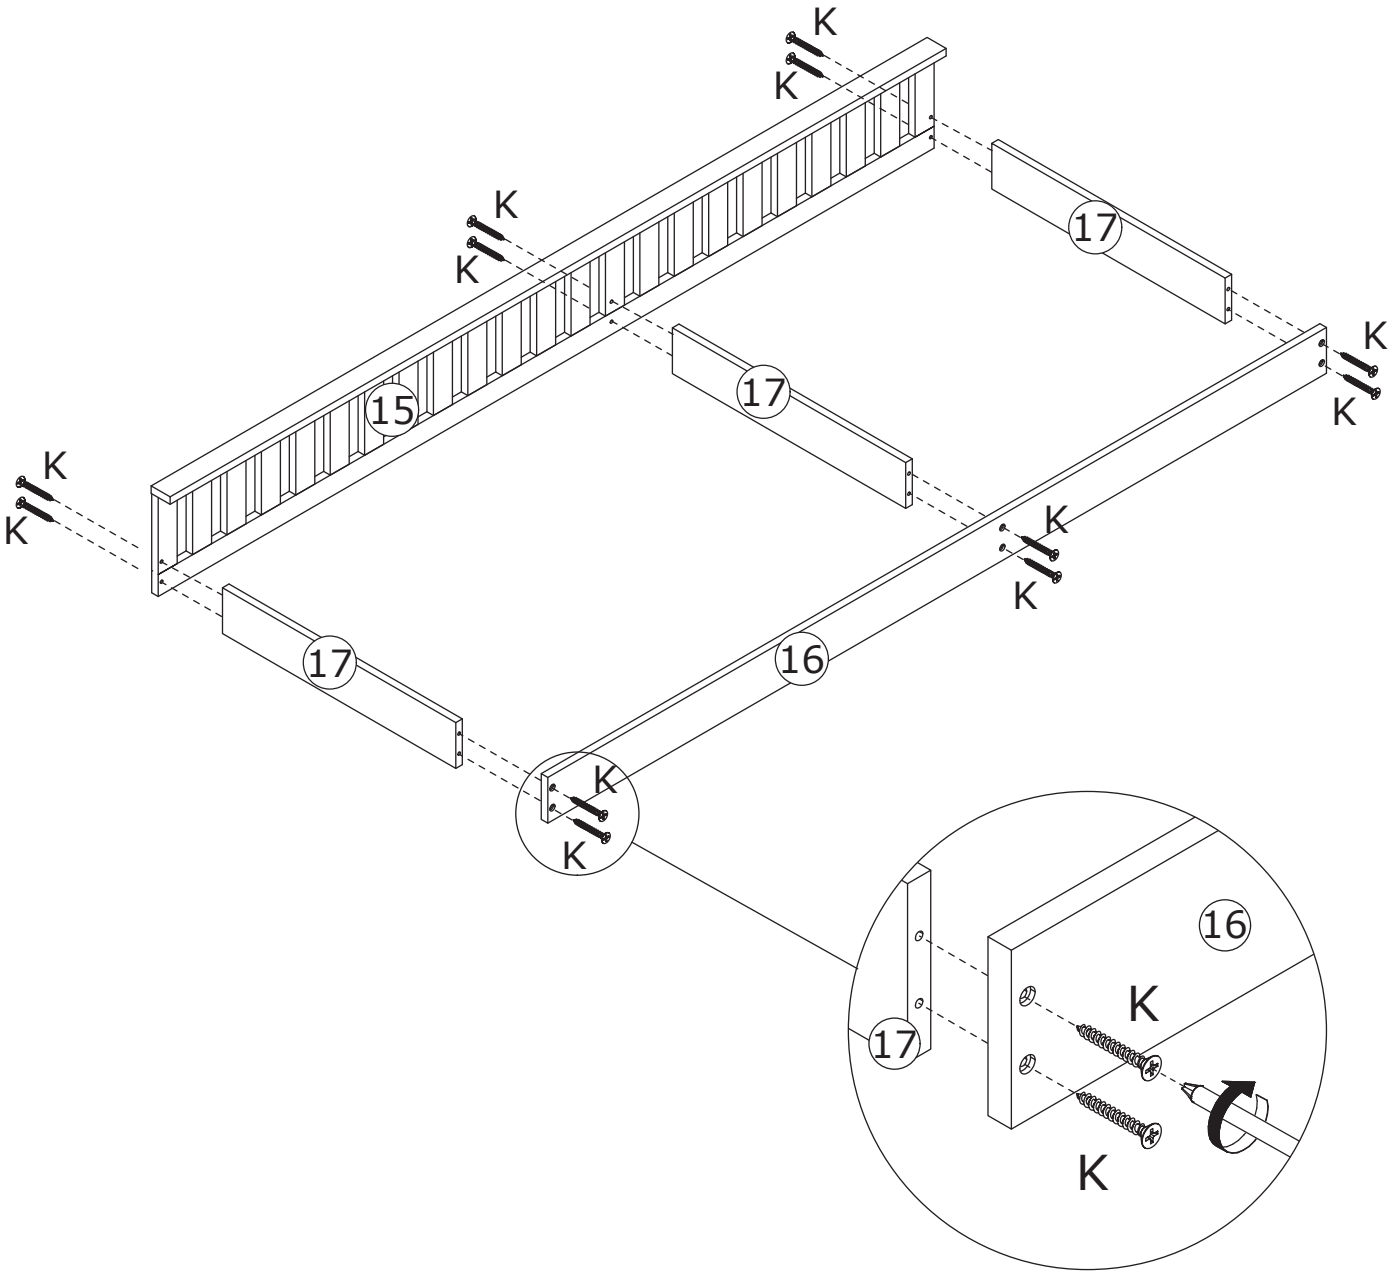


22


N x 16	R x 4	
 ∅3 x 12 mm		

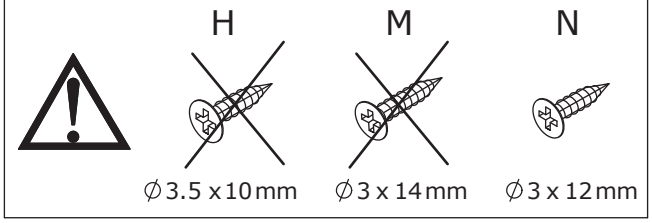


Secure hinge(R) to part 15 and 1 with screw(N) as shown.

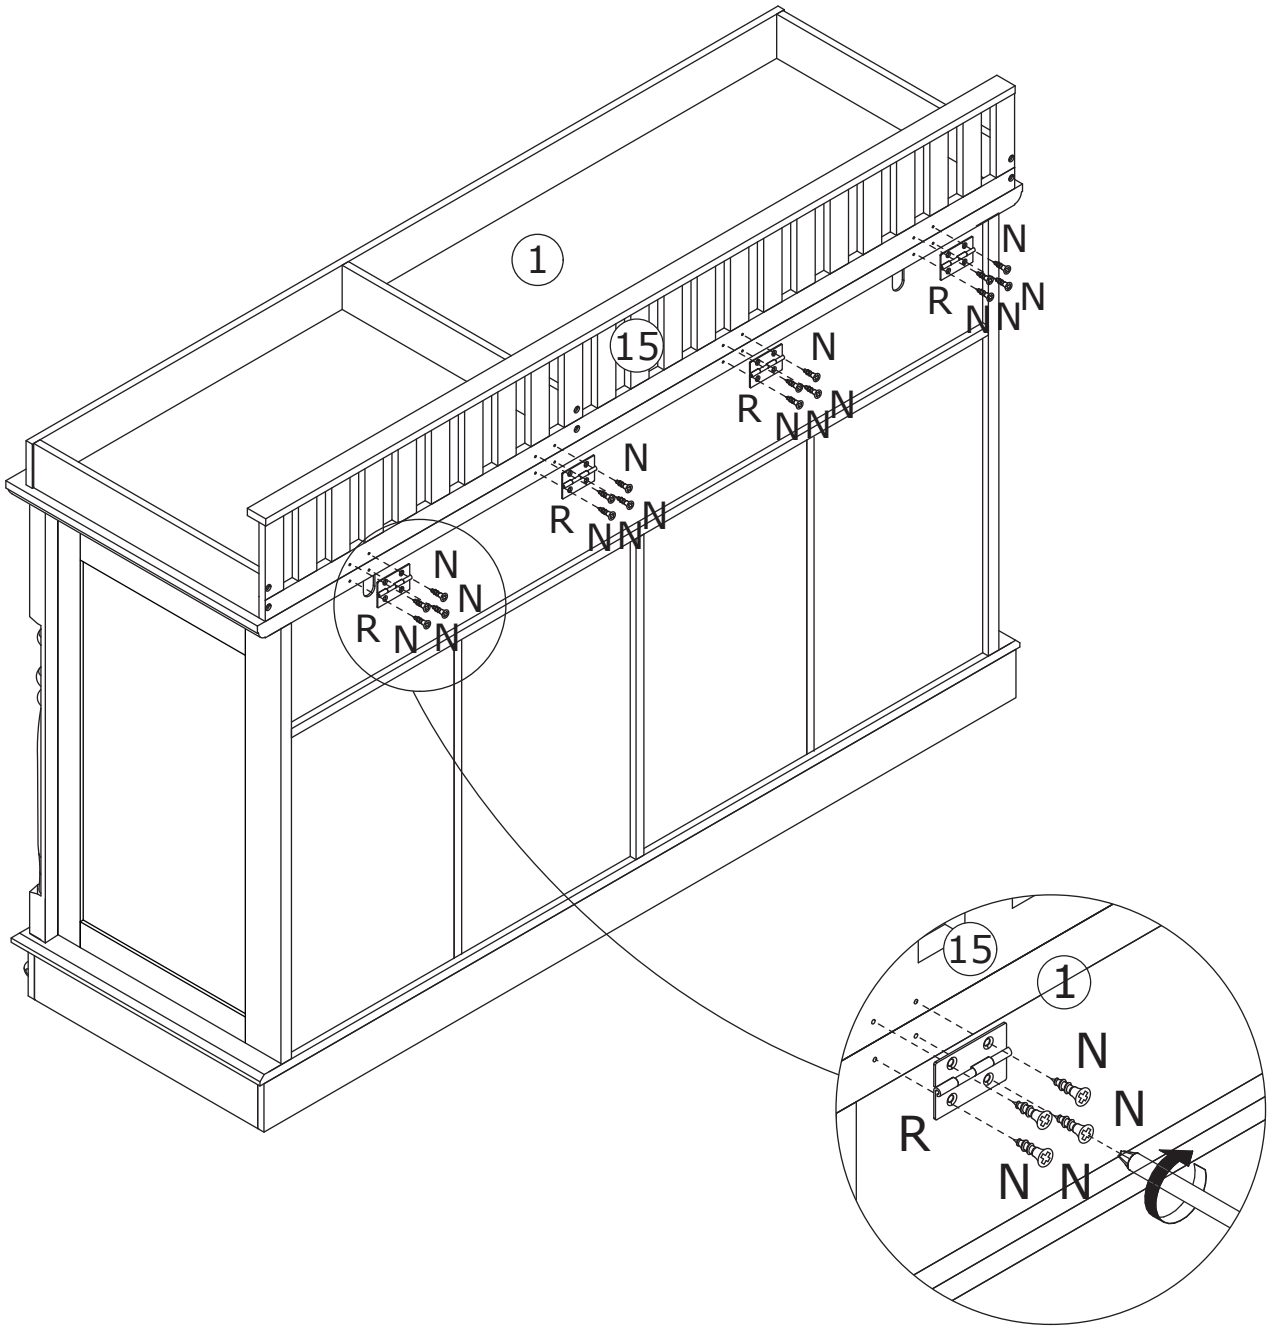


23




L x 12	M x 12	
	 ∅3 x 14 mm	


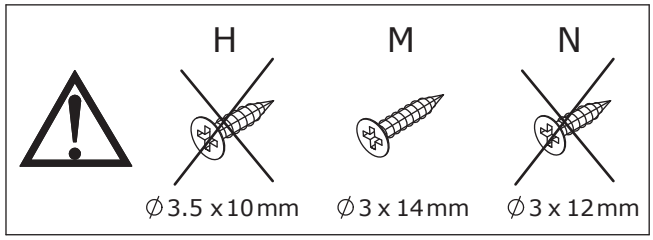


Insert buckle(L) into back slots and secure with screw(M) as shown.

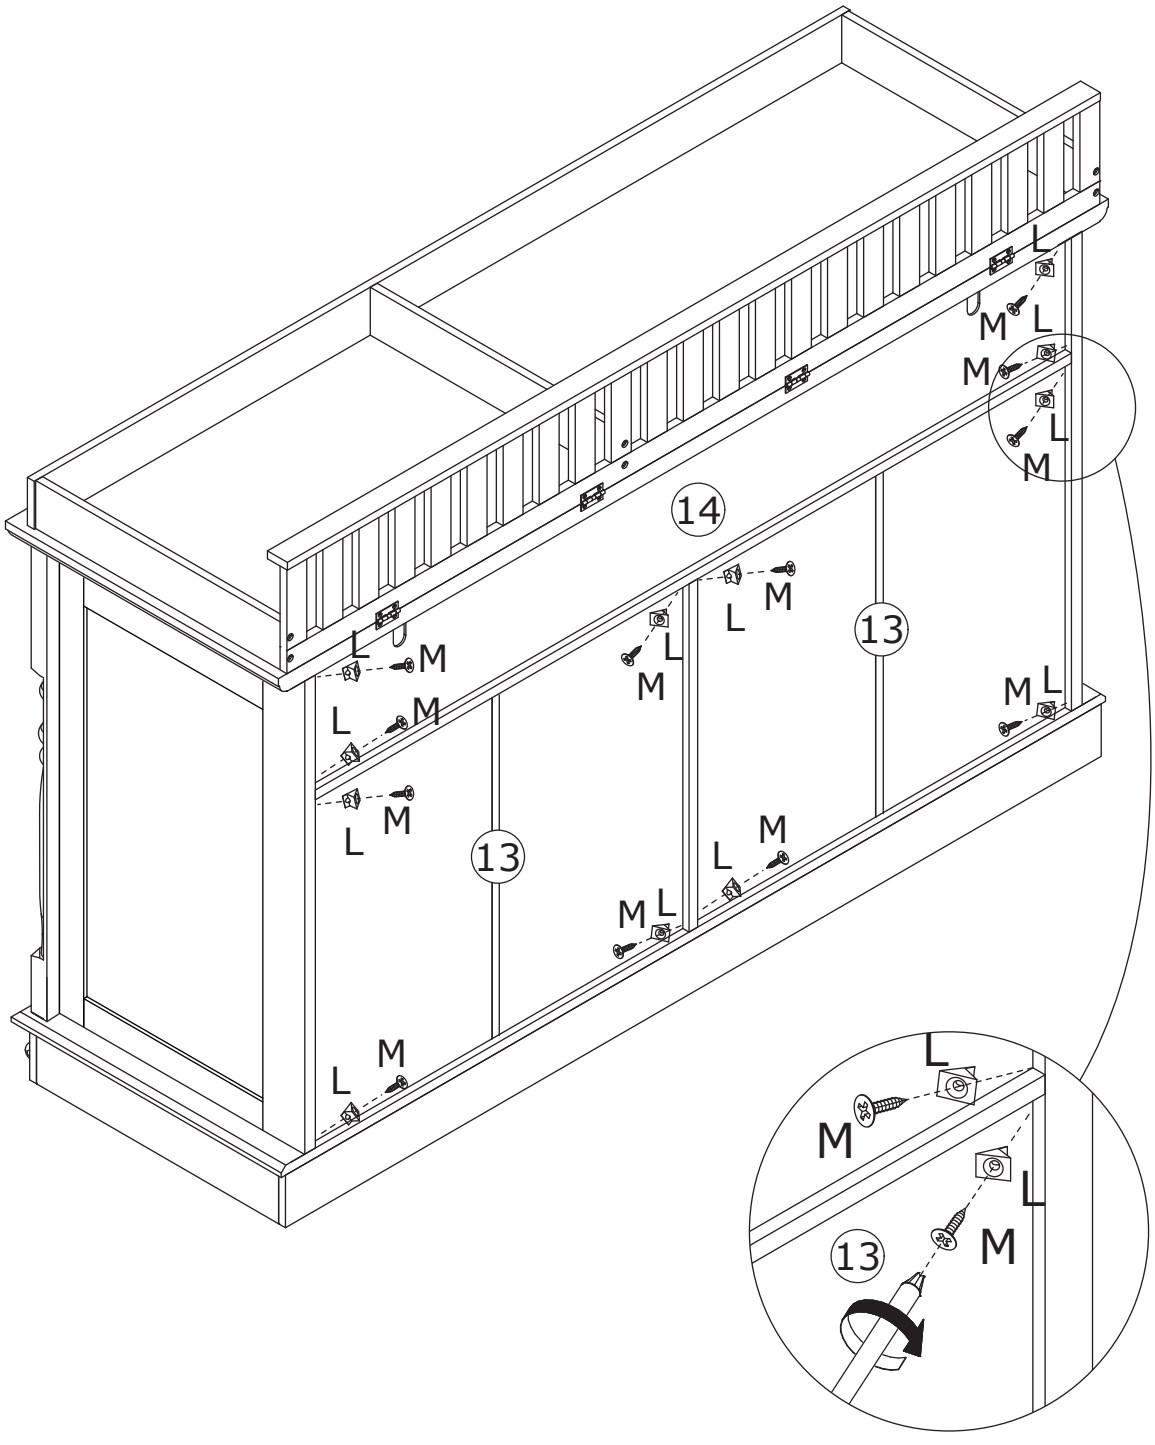



24

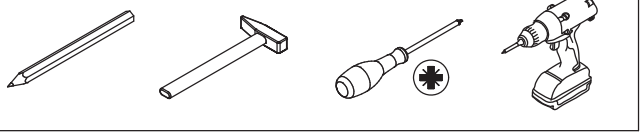K x 2	P x 2	
 ∅4 x 35 mm		

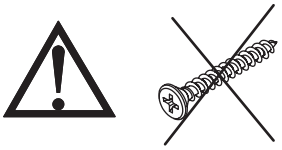
E	K
 ∅5 x 40 mm	 ∅4 x 35 mm

Install anti-tipping device as shown.

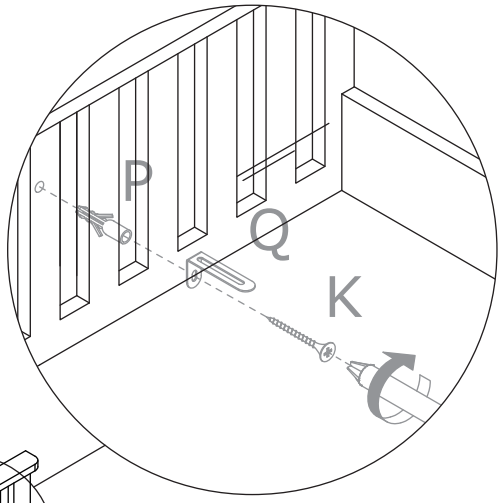


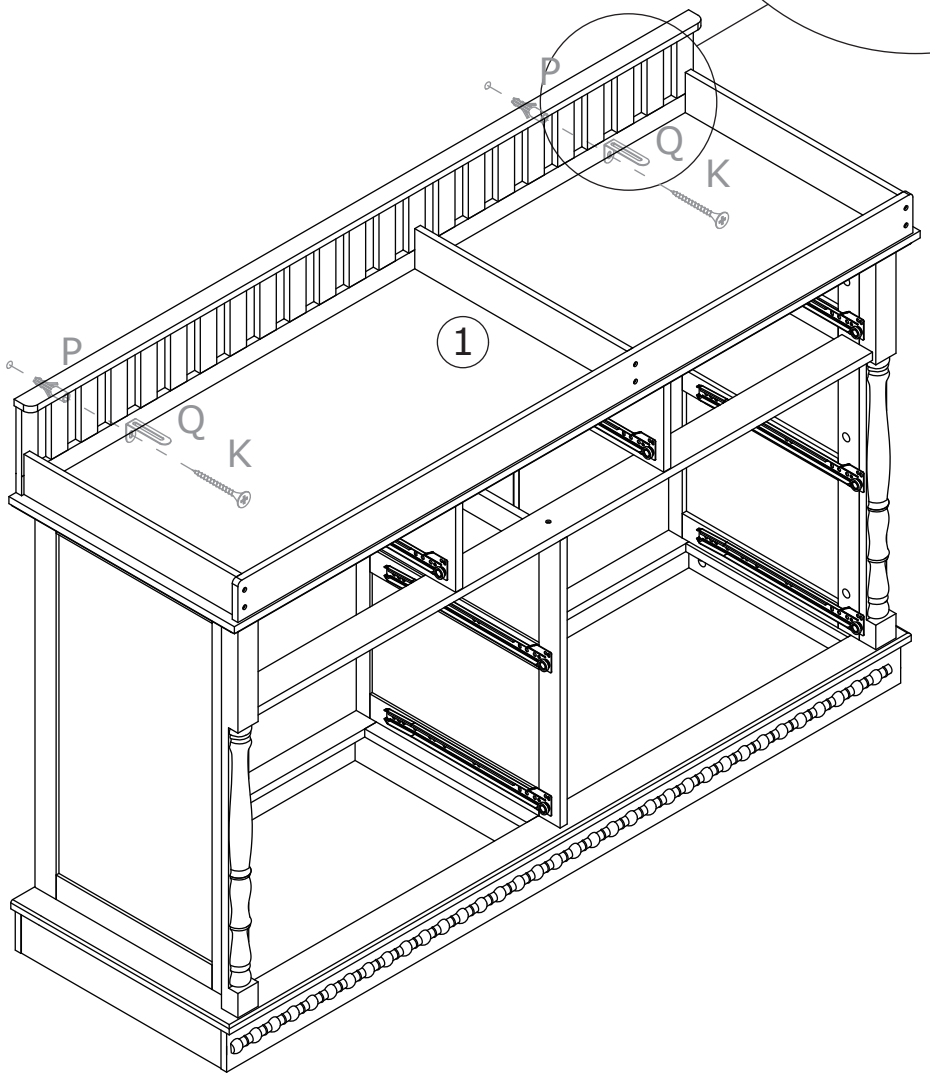


1.

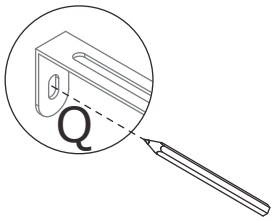


2.

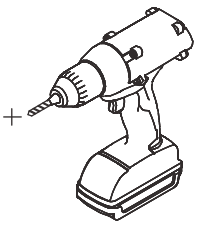

3.

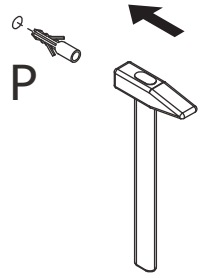


4.

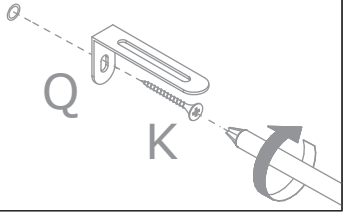

25

S x 6

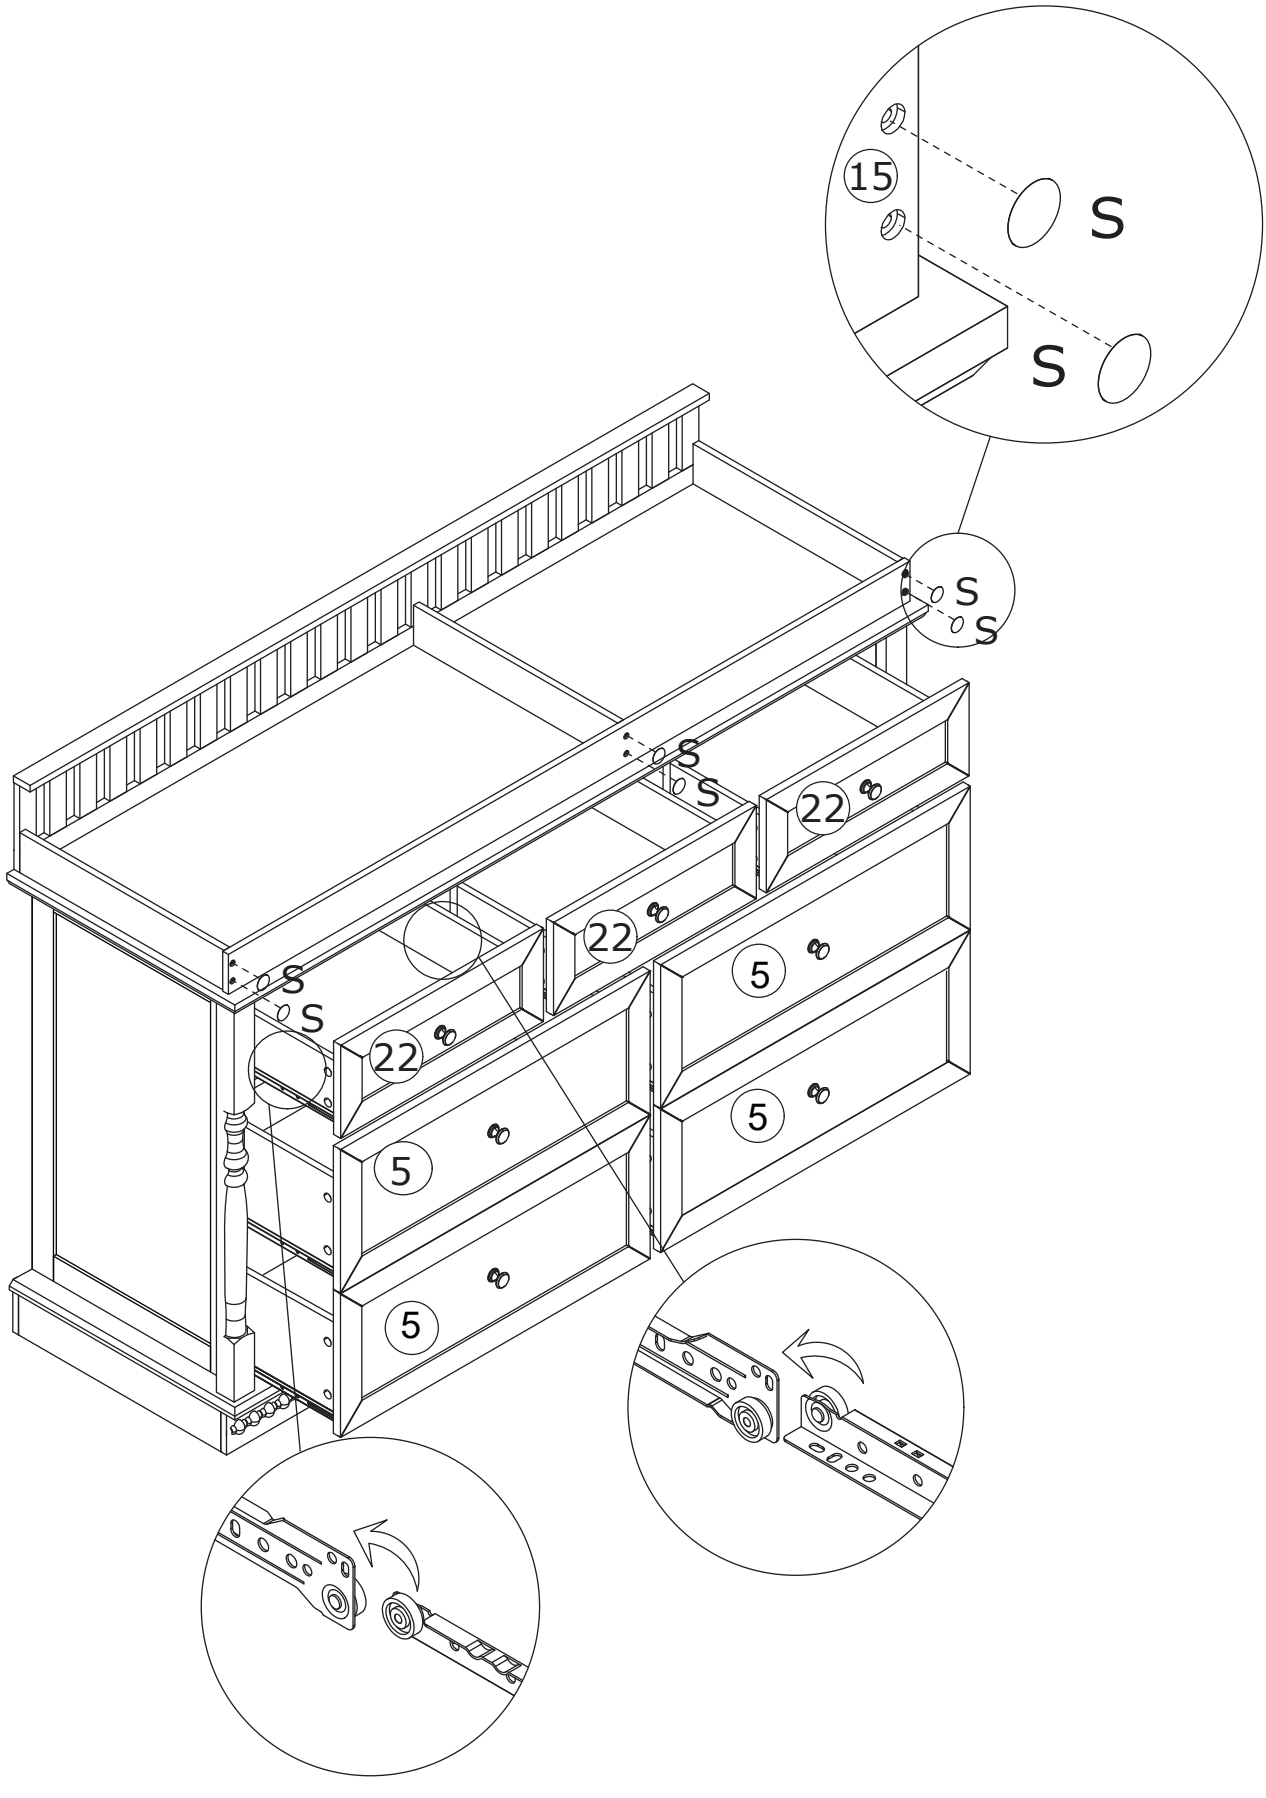

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order.
  Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.