
INSTALLATION GUIDE

30/36-IN Vanity With Top

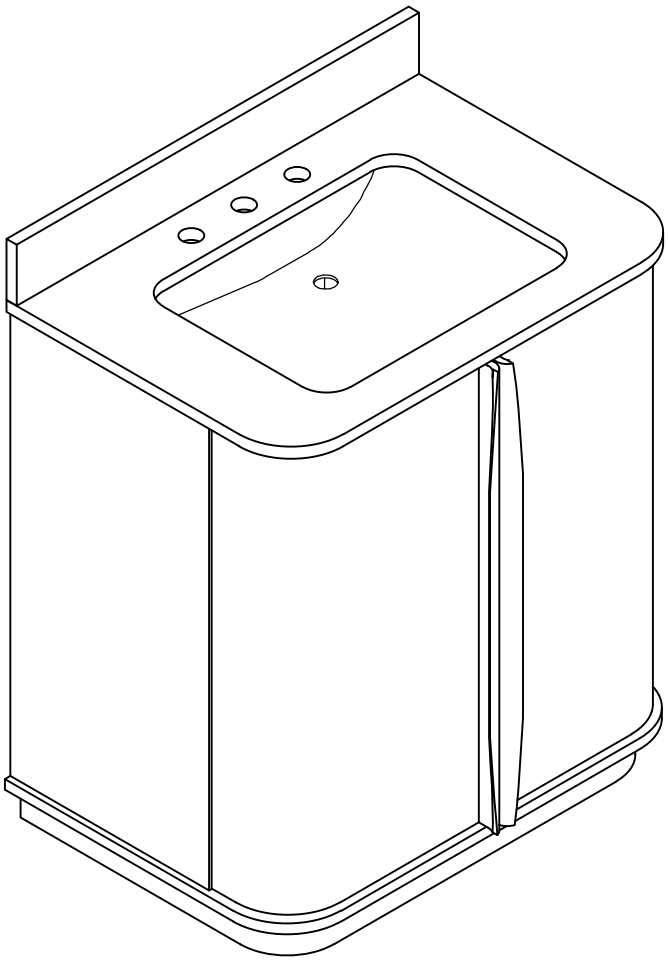

ATTACH YOUR RECEIPT HERE


Serial Number_____ **Purchase Date**_____

- Carefully read the instructions before starting the installation.
- This vanity should be installed by an experienced plumber.
- Drain pipe and drain trap are not supplied. Connect to an existing drain pipe.

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-888-860-9168, 9 a.m.- 5 p.m.CST, Monday - Friday.


All Rights Reserved.

PACKAGE CONTENTS

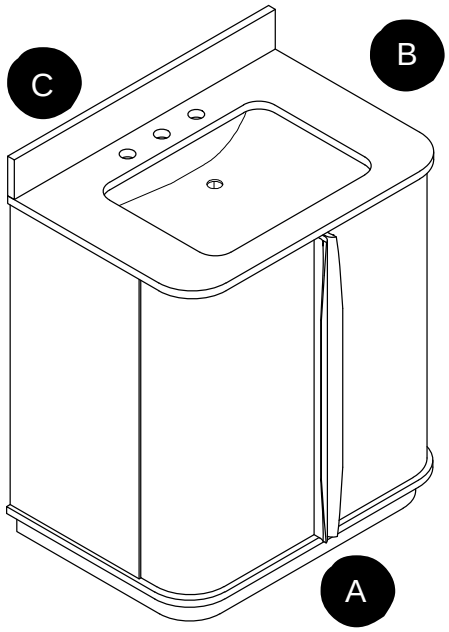

PART	DESCRIPTION	QUANTITY
A	Vanity	1
B	Top (pre assembled to Vanity (A))	1
C	Backsplash	1

HARDWARE CONTENTS

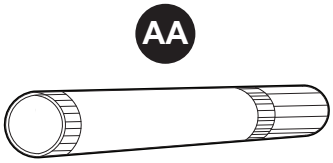

Touch-Up Pen
Qty: 1

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install this product.

WARNING

- Keep small parts away from children.
- Installing the item will require more than one person.

CAUTION

- **DO NOT** try to pry off top from vanity. Damage to top or vanity may occur.
- Use care when assembling the vanity; take your time and follow the assembly instructions closely.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Installation Time: 20-30 minutes (24 hours for adhesive to dry).

Tools Required for Installation (not included): Silicone compound, Utility knife, Phillips Screwdriver.

INSTALLATION INSTRUCTIONS

Step 1: Hinge Adjustable For Door Alignment.


1. If the doors preassembled to vanity base (A) require adjustment, follow the below options as needed:
   To adjust door up or down, loosen screws (a), adjust door and retighten screws.
   To adjust door left and right, turn screw (b) in or out.
   To adjust door in and out, loosen screw (c), adjust door and retighten screw.

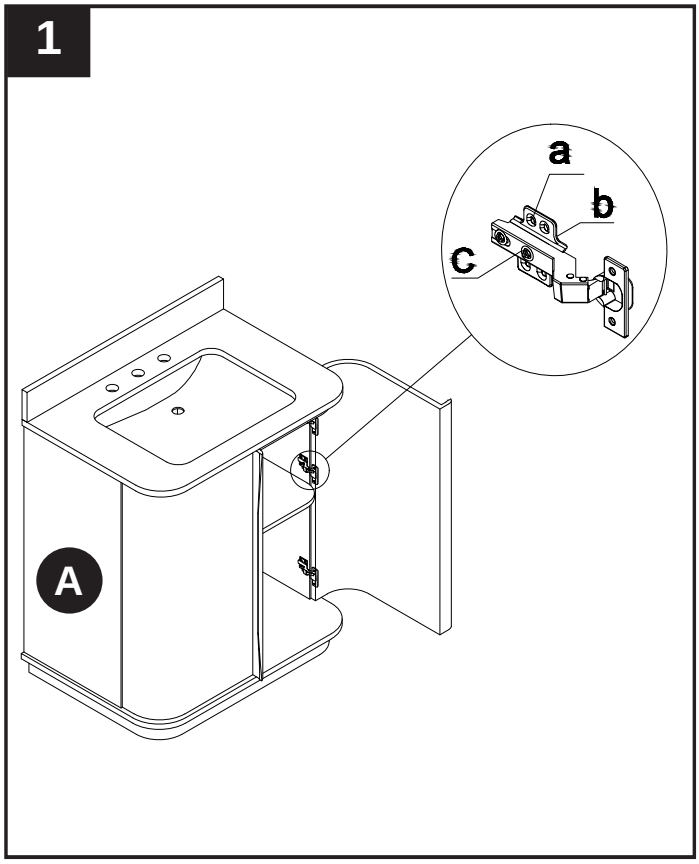

INSTALLATION INSTRUCTIONS


Step 2: Adjustable Level

2. In case of uneven floors, floor levelers are provided at the bottom of the vanity. If necessary, adjust floor levelers by hand to correct tilting and/ or level doors.

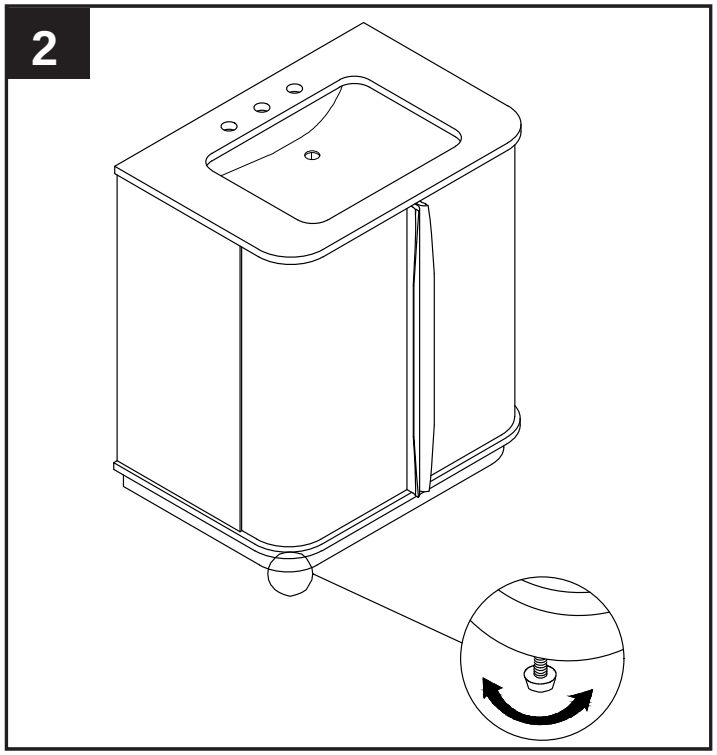


Step 3: Apply silicone compound to between the joint top and vanity

3. To prevent water from seeping into the joint between the vanity top (B) and the vanity (A), apply a appropriate of silicone compound (not included) to around the joint of vanity top (B) and vanity (A). Clean any excess silicone compound before allowing it to dry.

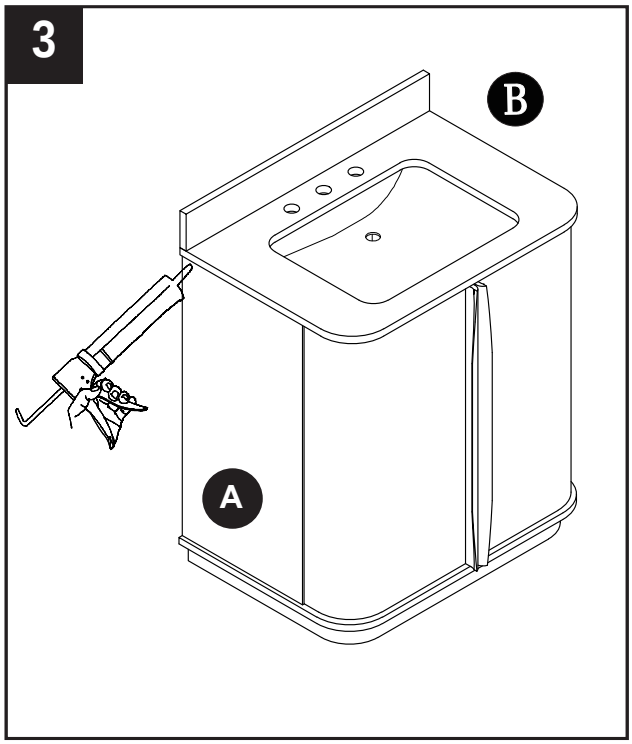

Step 4: Backsplash Installation

4. To mount the backslash (C) to the wall, apply a thin bead of silicone compound (not included) to the unpolished back side and bottom of the backsplash(C). Position backsplash (C) as shown onto vanity top (B) and against the wall. Clean any excess silicone compound before allowing to dry.

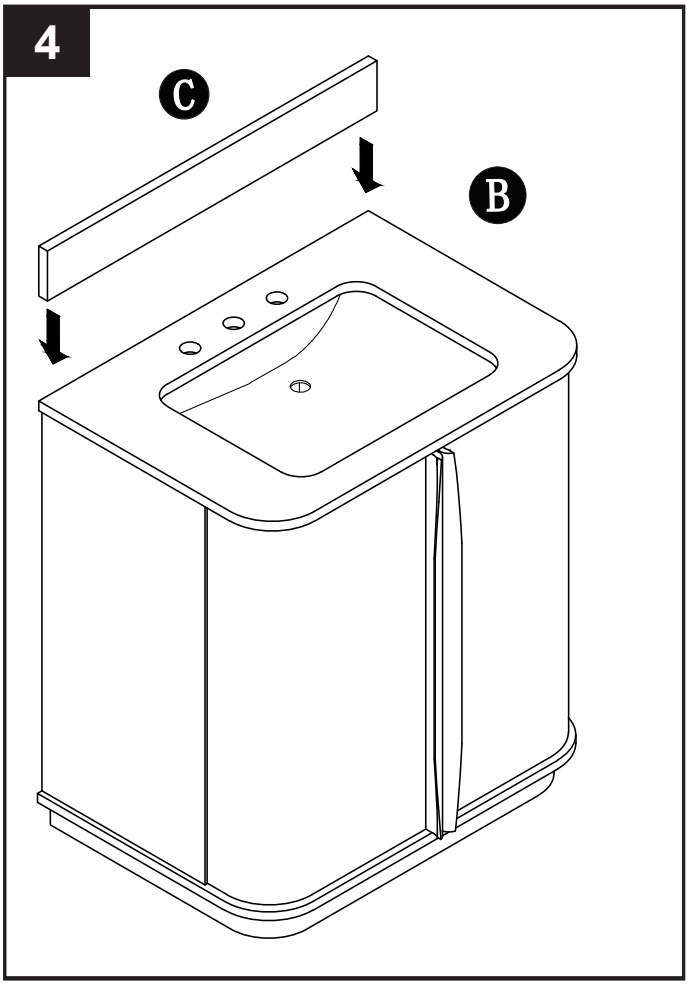

CARE AND MAINTENANCE

- Dust the vanity regularly with a soft, non-lint producing cloth or household dusting product.
- Vanity is for indoor use only. Temperature and humidity should be regulated.
- Make sure to dry the wood immediately with a soft cloth or towel.
- Countertop spills should be cleaned up immediately with a soft cloth and warm water. Be careful not to spill or use any acidic or caustic substances or any petroleum-based product.
- Tips for using touch-up pen (AA): For scratches, stroke in direction of scratch. Rub off excess colorant promptly with a soft cloth.

WARRANTY

The manufacturer provides a one year limited warranty for residential use that the vanity combo will be free from manufacturing defects, provided the original purchaser resides in or owns the home of installation, and provided the vanity combo is installed and maintained according to the installation and maintenance instructions contained within and supplied by the manufacturer. The liability will be limited to cost of products only. This warranty is in lieu of any other express warranties. This warranty applies only to the original purchaser. This warranty does not apply to any damage on the product by accident, misuse, or modified, improper installation or by affixing accessories not produced by the manufacturer. There is no further expressed warranty. The manufacturer shall not be legally responsible for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. The manufacturer disclaims any and all implied warranties.