
ASSEMBLY INSTRUCTIONS

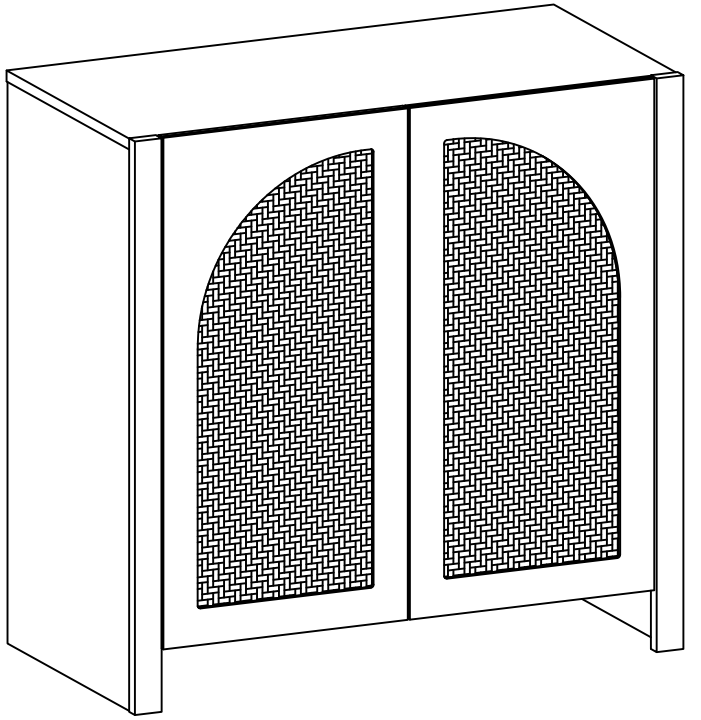

IMPORTANT : please read this manual carefully before beginning assembly of this product.keep this manual for future reference.

1

★ **Thank you for choosing our products,please read the instructions carefully before installation,and please keep the instructions properly**

Tips and tricks

1.Do not attempt to move this furniture without first removing all equipment

2.Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.

3.Please contact us using the details shown for further advice

⚠ **WARNING** If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

2

★ **¡Gracias por elegir nuestros productos, por favor lea las instrucciones cuidadosamente antes de la instalación, y guárdelas correctamente!**

Consejos y trucos

1.Si no quita todos los equipos en el primer lugar, no intente mover este mueble

2. Cuando los niños suben a los muebles con el equipo de audio y / o video, la muerte o las lesiones graves podrían ocurrir.El control remoto o los juguetes colocados en el mueble pueden estimar a un niño a subir en el él y el mueble podría volcarse sobre el niño.

3.Póngase en contacto con nosotros utilizando los detalles mostrados para obtener más sugerencias.

⚠ **ADVERTENCIA** Si las piezas faltan o están dañadas, no devuelva el producto dañado a su distribuidor; póngase en contacto con los Servicios al Cliente. ¡Nunca utilice las piezas dañadas!

3

★ **Vielen Dank für Ihre Auswahl für unsere Produkte, lesen Sie bitte die Anweisungen sorgfältig vor Ihrer Installation und halten Sie bitte die Anweisungen richtig!**

Tipps und tricks

1.Versuchen Sie bitte nicht, diese Möbel zu bewegen, ohne zuerst alle Geräte zu entfernen

2.Wenn die Kinder auf Audio und / oder Videogerätemöbel klettern, kann Tod oder schwere Verletzungen kommen. Eine Fernbedienung oder Spielzeug kann die Kinder ermutigen, die auf die Einrichtung gestellt wird, sich auf die Einrichtung zu klettern. Dies bewirkt, dass die Möbel auf Ihre Kinder umfallen könnte.

3.Bitte kontaktieren Sie uns mit den Details für weitere Beratung

⚠ **WARNING** Wenn irgendwelche Teile fehlen oder beschädigt sind, geben Sie bitte den beschädigten Artikel nicht an Ihren Händler zurück; Kontaktieren Sie bitte mit dem Kundendienst. Verwenden Sie bitte niemals beschädigte Teile!

4

★ **弊社の製品を選んでくれてありがとうございます。インストールする前に説明書をご覧にいただき、それに当説明書を適切に保存してください。**

提示と技巧

1.設備を全て開かない場合、当設備を移動することはできません。

2.子どもがステレオまたはビデオの設備の上に登ると、体を壊したり、ひどく傷ついたりする恐れがある。設備のリモコンと玩具によって、子ども が設備の上に登りたがっているかも知れないので、設備は子どもの身にに倒れる危険がある。

3.設備の使用に関わる詳細な情報を弊社にご連絡してください。

⚠**警告** どんな部品が紛失したり壊れたりする場合でも、そのままディーラーのところへ返送しないでくだい、顧客サービスセンターに連絡してください。壊れた部品を使用しないてください。

5

★ **Nous vous remercions d'avoir sélectionné nos produits, lisez les instructions attentivement avant l'installation, et gardez les instructions correctement s'il vous plaît!**

Conseils et astuces

1.Ne tentez pas de déplacer ce mobilier sans enlever tout l'équipement.

2. Des dégâts ou des blessures graves pourraient survenir lorsque les enfants grimpent sur des meubles audio et / ou vidéo. Une télécommande ou des jouets places sur le meuble pourraient encourager un enfant à grimper sur le meuble, il en résulte que le meuble pourrait basculer sur l'enfant.

3.Contactez-nous en utilisant les détails affichés pour obtenir les conseils s'il vous plaît

⚠ **AVERTISSEMENT** S'ily a des pièces manquantes ou endommagées, ne renvoyez pas l'article endommagé à votre vendeur; Contactez le service clientèle. Ne jamais utiliser de pièces endommagées!

6

★ **Grazie per aver scelto i nostri prodotti, si prega di leggere attentamente le istruzioni prima dell'installazione e rispettare le istruzioni corrette!**

Suggerimenti e trucchi


1.Non tentare di spostare questo mobile senza prima rimuovere tutte le apparecchiature

2. Possono verificarsi morti o gravi lesioni quando i bambini salgono su mobili per arredamento audio e/o video. Un telecomando o i giocattoli messi sull'arredamento possono incoraggiare un bambino ad arrampicarsi sull'arredamento, e di conseguenza l'arredamento può piegarsi sul bambino.

3.Vi preghiamo di contattarci utilizzando i dettagli mostrati per ulteriori consigli

⚠ **AVVERTENZA:** Sse mancano o sono danneggiate parti, non restituire l'elemento danneggiato al rivenditore; Contattare il Servizio Clienti. Non utilizzare mai parti danneggiate!

WHAT'S IN THE BOX

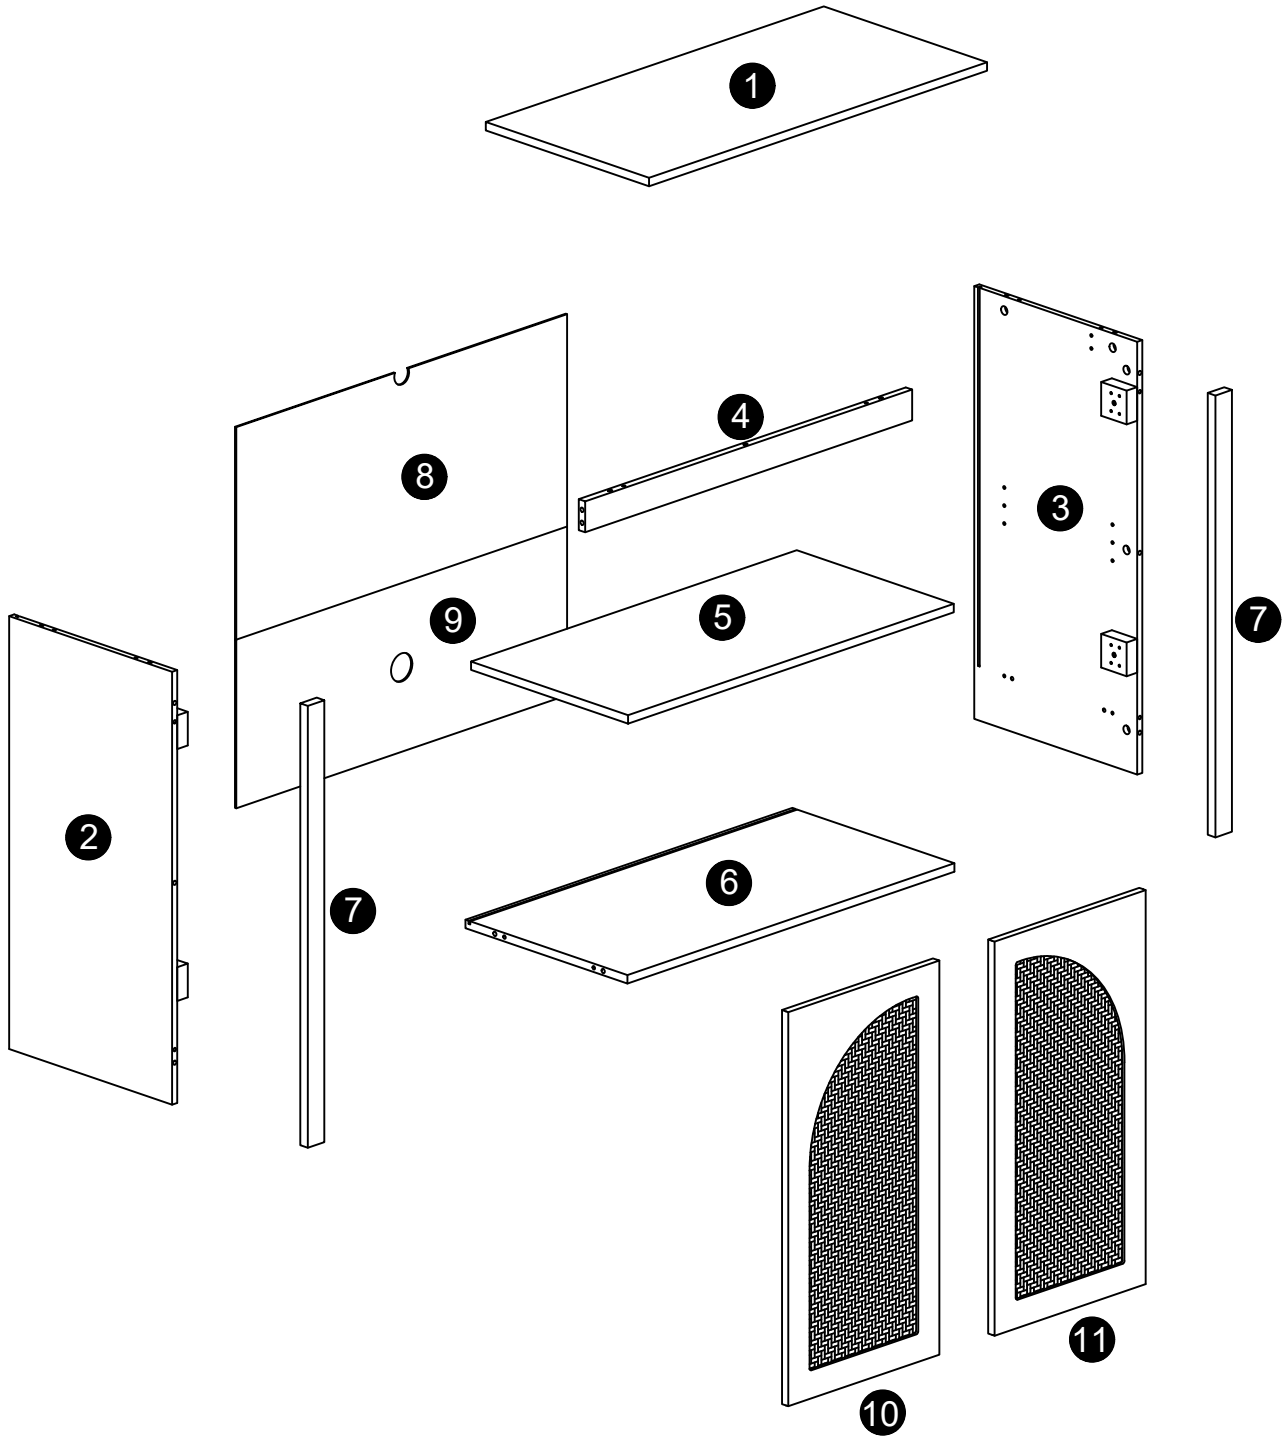

WHAT'S IN THE BOX




Cam bolt
Ø6x32mm

A x 19+2



Cam lock
Ø15x9mm

B x 19+2



Wooden dowel
Ø6x30mm

C x 16+2




Screw
Ø3x12mm

D x 30+2




Flat-head screw
Ø3x16mm

E x 8+1

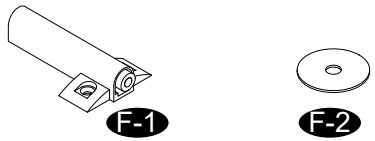


Door push

F x 2



Plastic wedge

G x 8+1

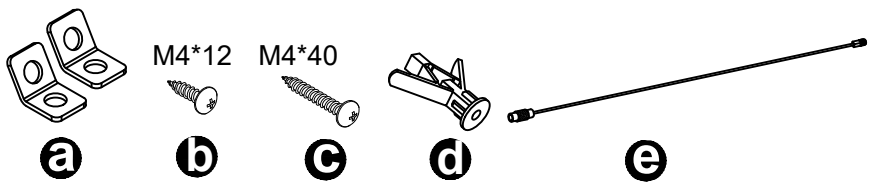

Anti-tip hardware

H x 1





Plate Dowel

I x 4

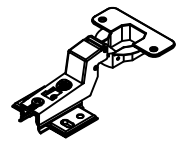


Door hinge

J x 4



K x 15+2

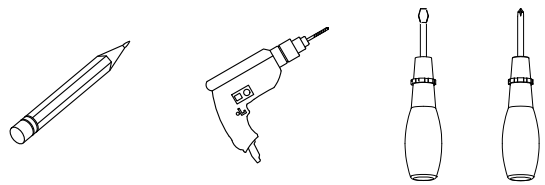



Tools Required
(Not included)


1

INSTALLATION STEPS

●Unpack the unit and confirm that you have all the hardware and required parts.
Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.

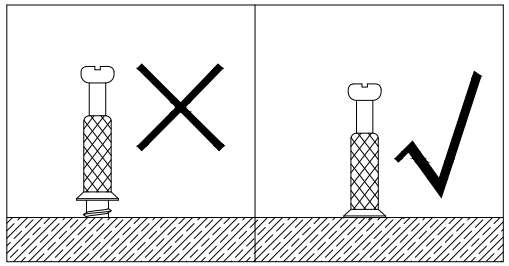

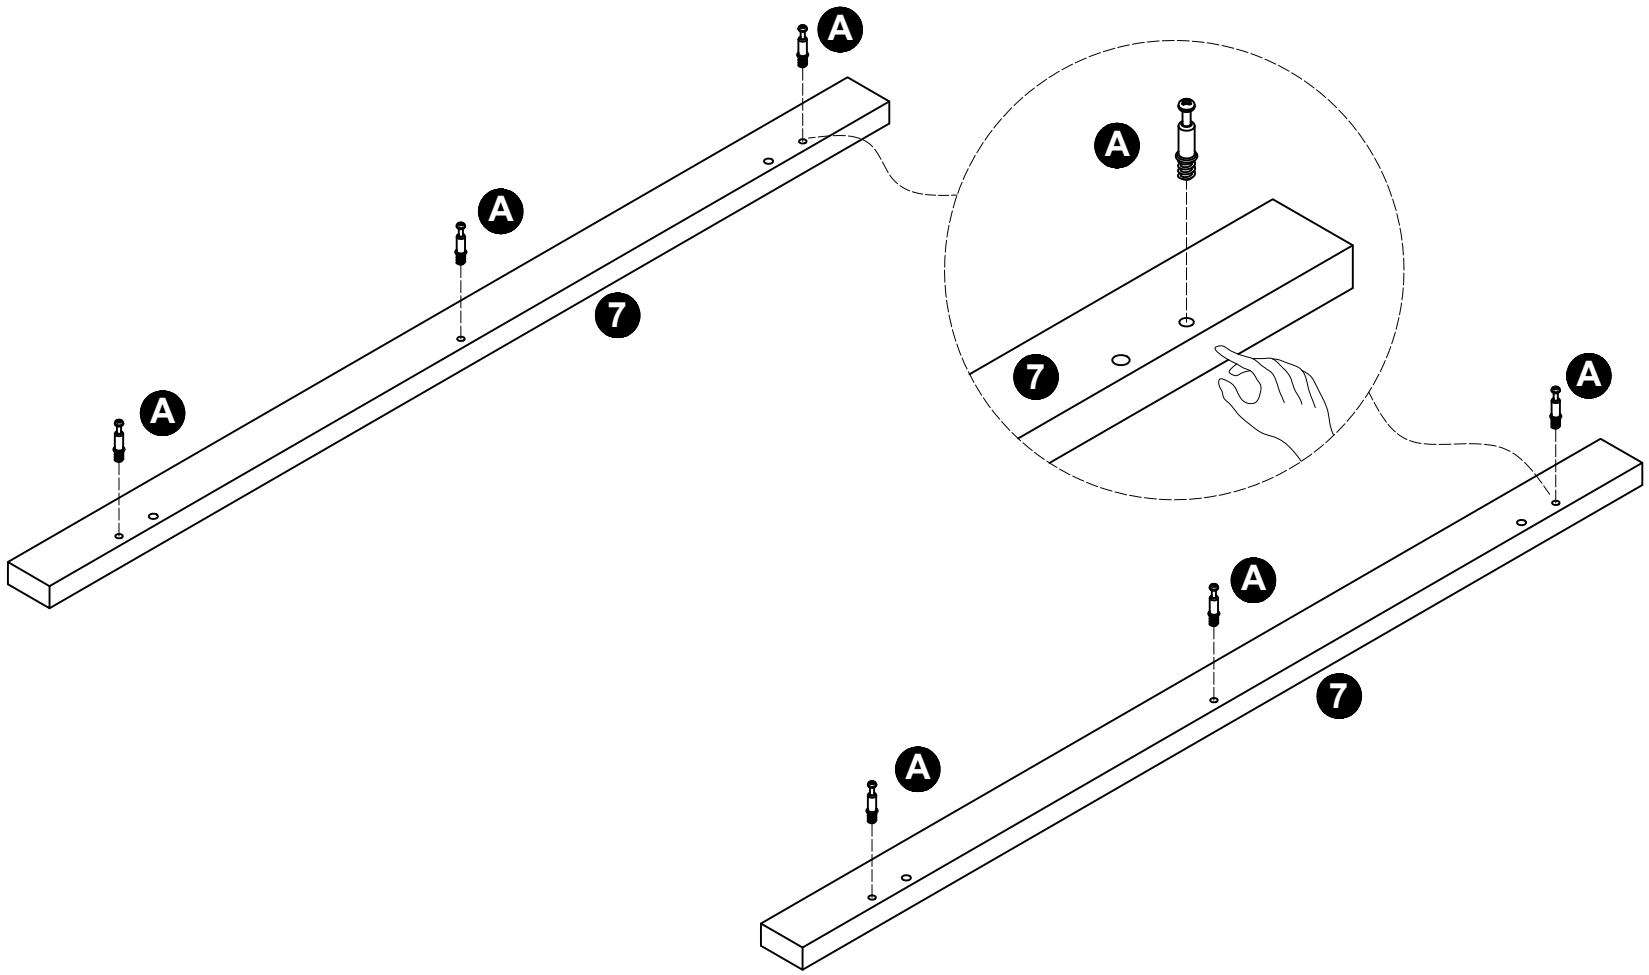


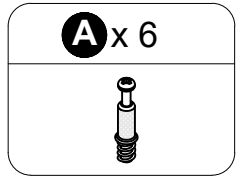



- Screw cam bolts(A) into panels (7).

2


INSTALLATION STEPS

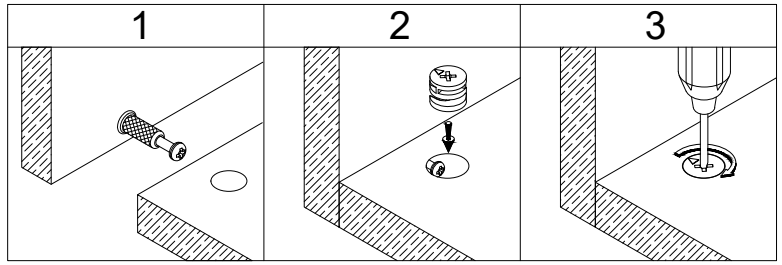


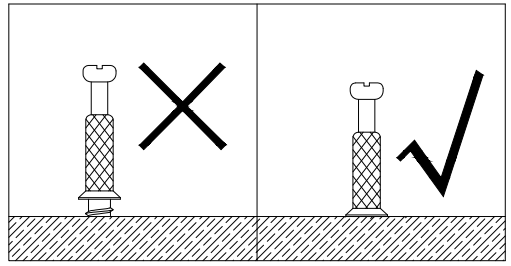

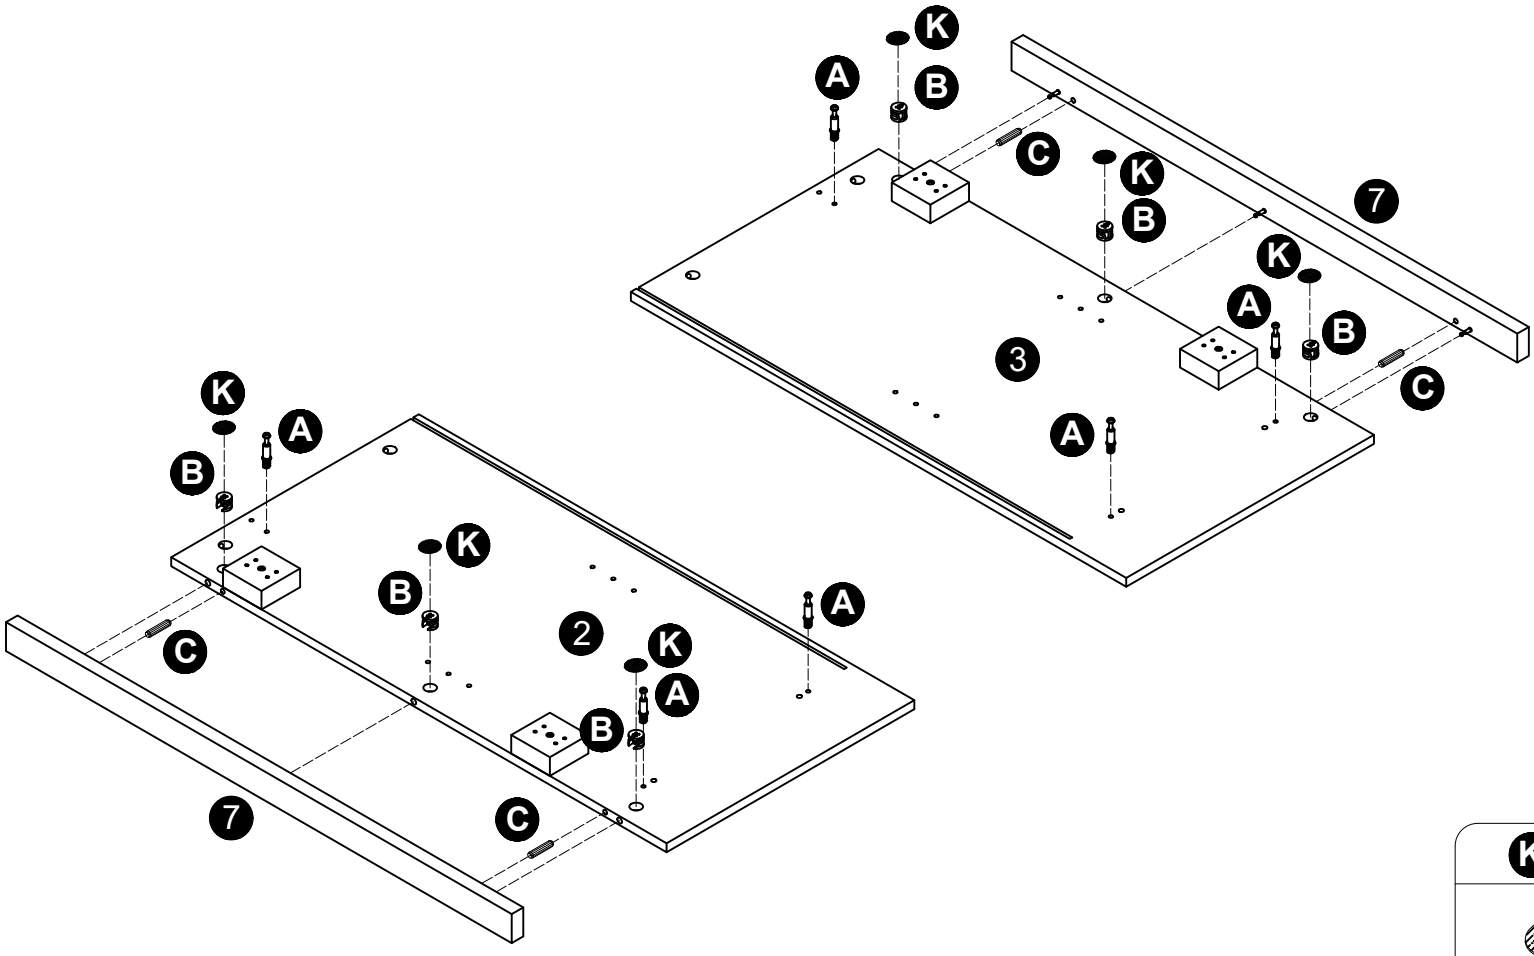


- Screw cam bolts(A) into panels (2,3).
- Insert dowels(C) into panels (2,3).
- Attach panels (7) to panels (2,3) correctly.
- Insert and secure cam locks (B) to panels (2,3) to lock them.
- Apply parts (K) to cover the cam locks (B) for a finished look.

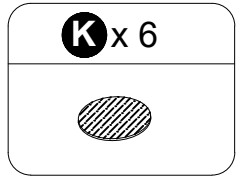


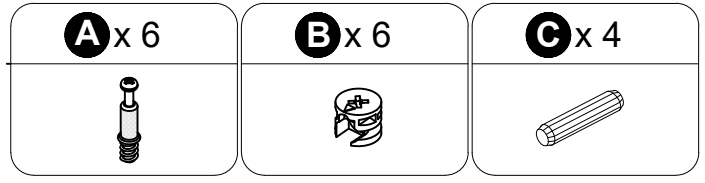


3


INSTALLATION STEPS

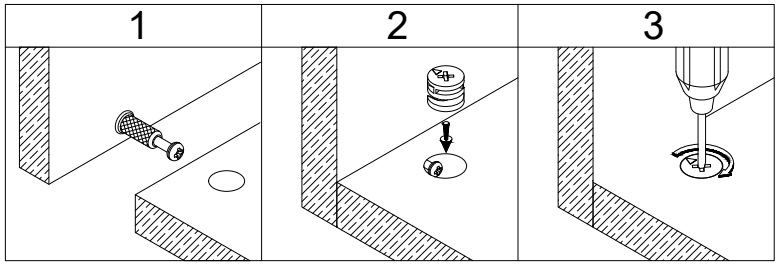

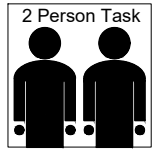

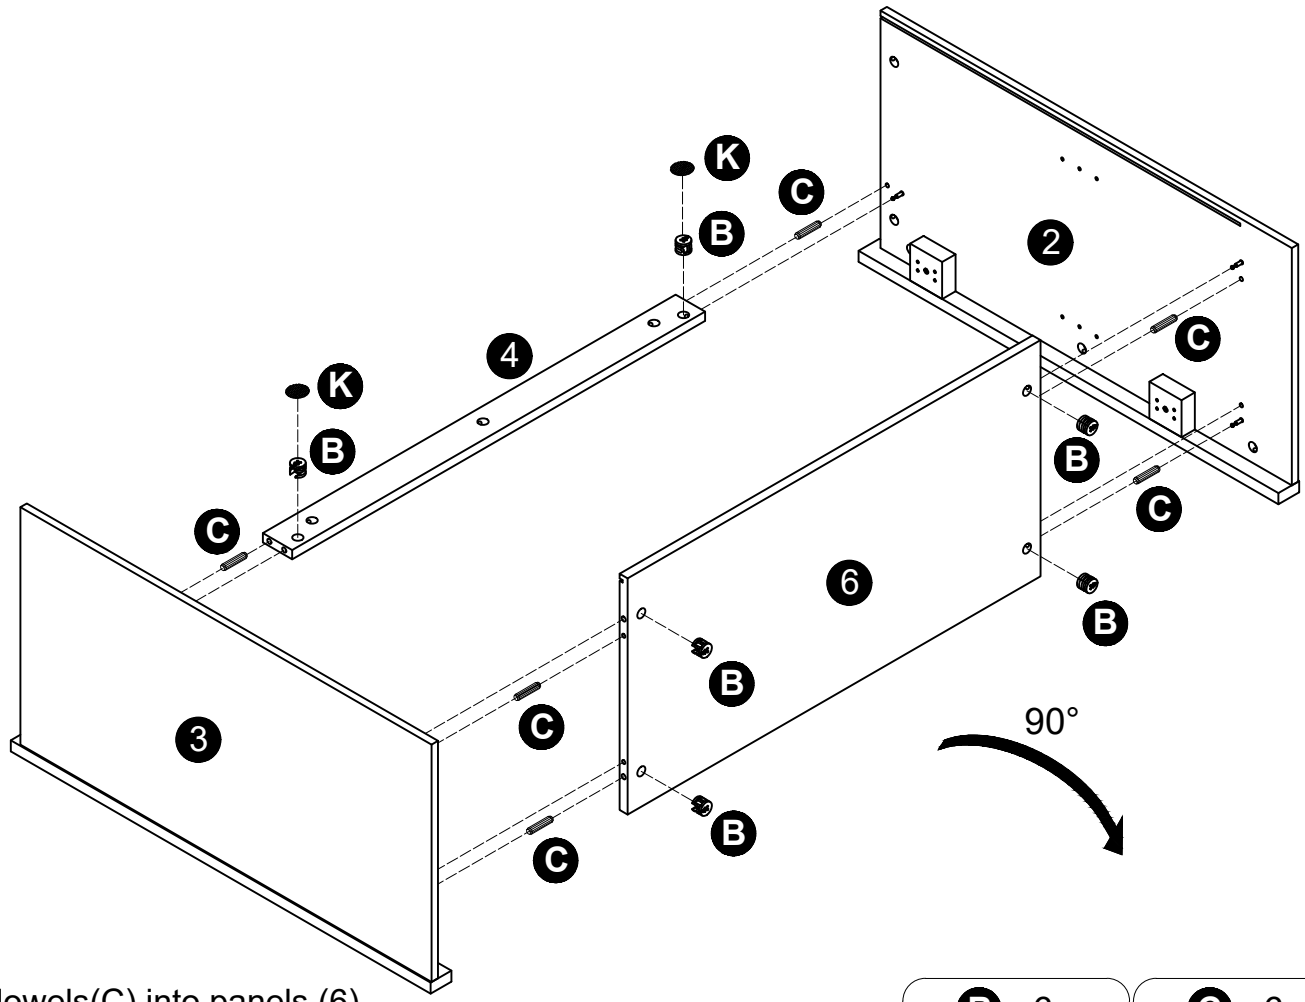



- Insert dowels(C) into panels (6).
- Attach panels (2,3) to panels (4,6) correctly.
- Insert and secure cam locks (B) to panels (4,6) to lock them.
- Apply parts (K) to cover the cam locks (B) for a finished look.

B x 6	C x 6	K x 2
		

4

INSTALLATION STEPS

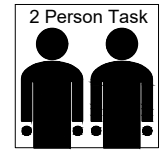


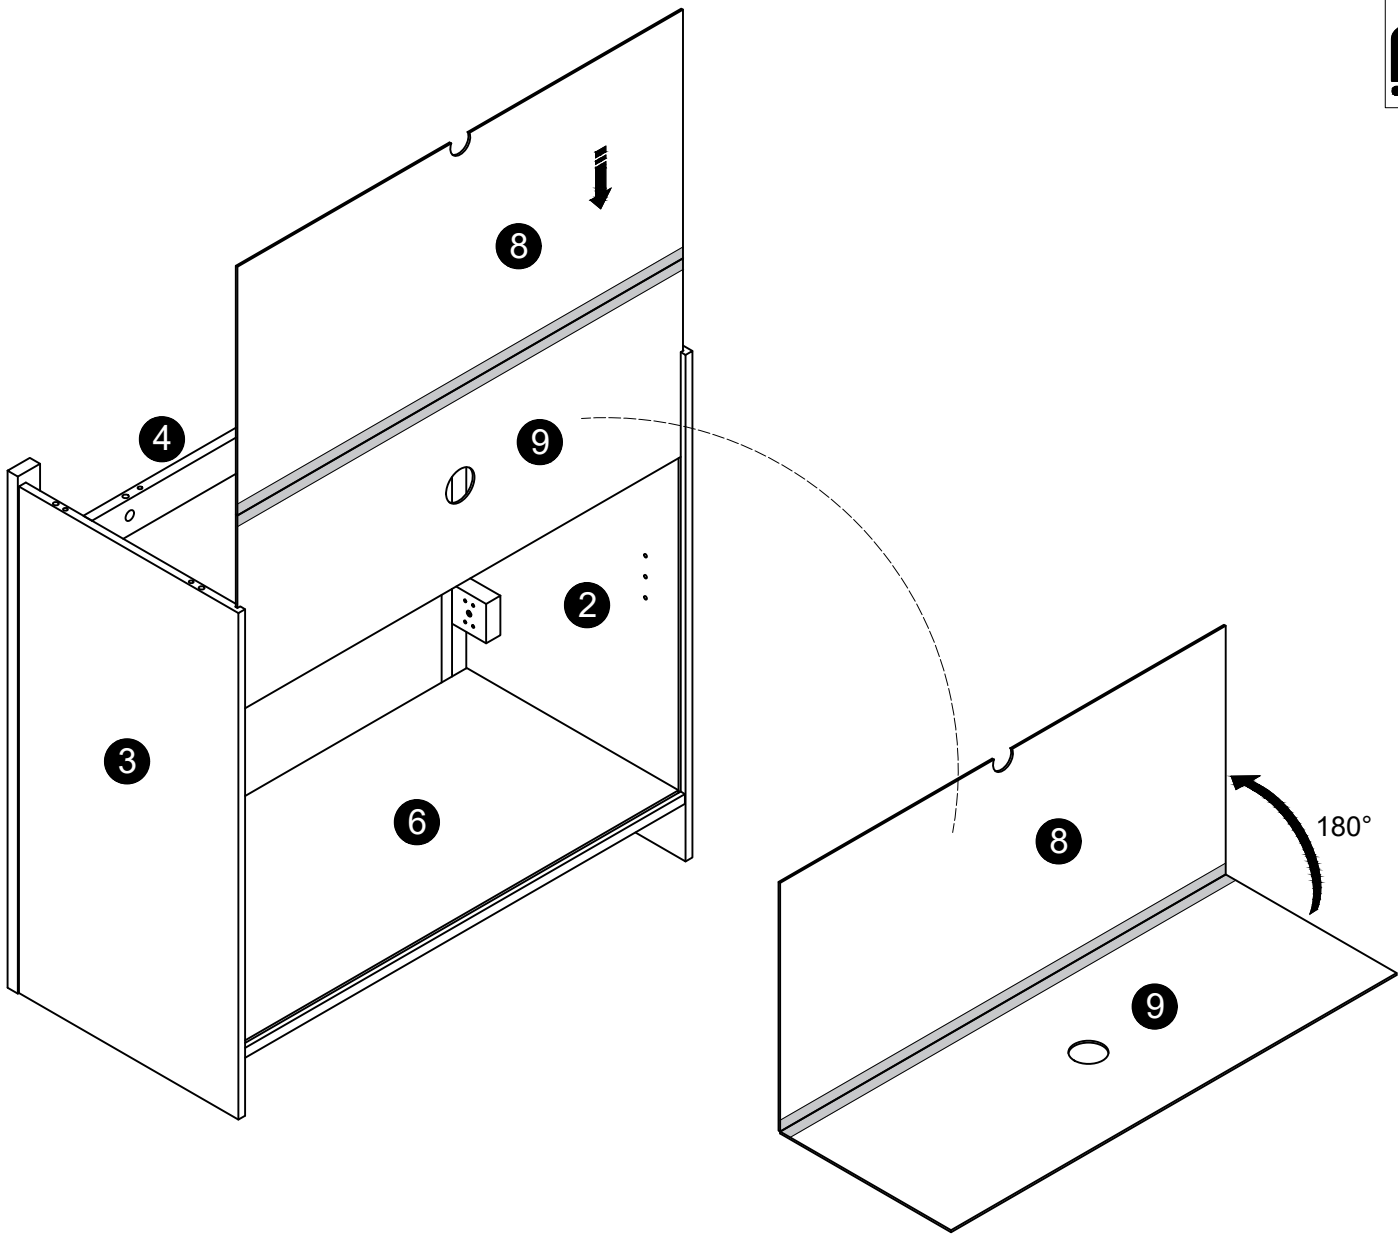


- Carefully slide panels (8, 9) into place along the back of the assembly


5

INSTALLATION STEPS

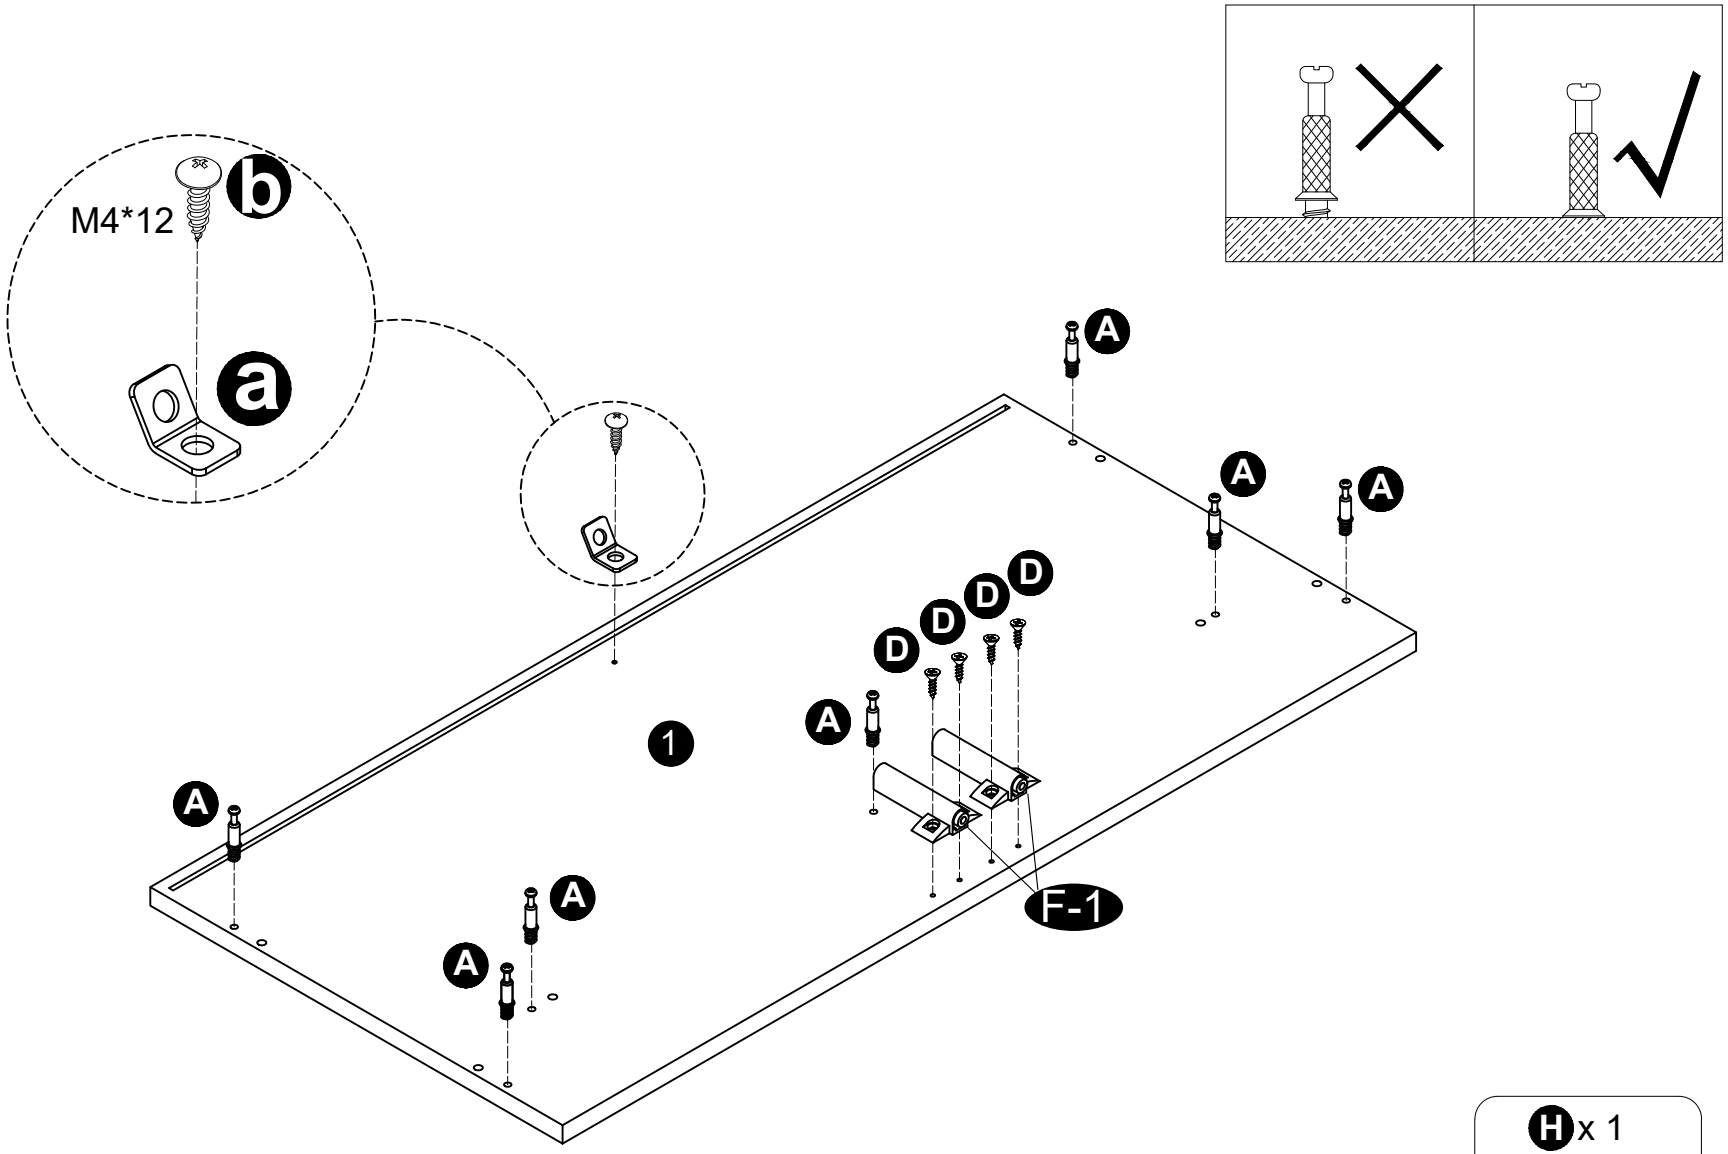


- Screw cam bolts (A) into panel (1).
- Secure part (H-a) to panel (1) using screw (H-b).
- Attach parts (F-1) to panel (1) with screws (D) correctly.

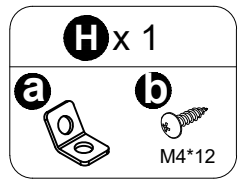


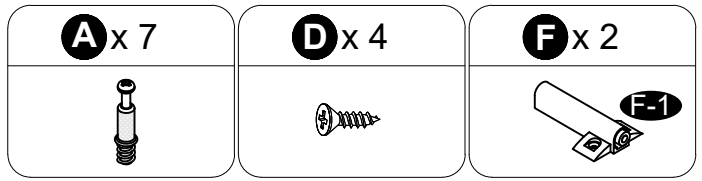


6

INSTALLATION STEPS

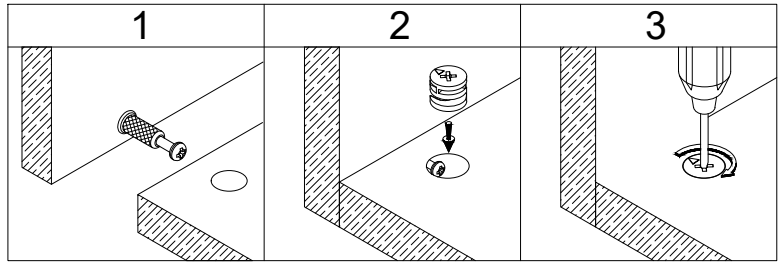

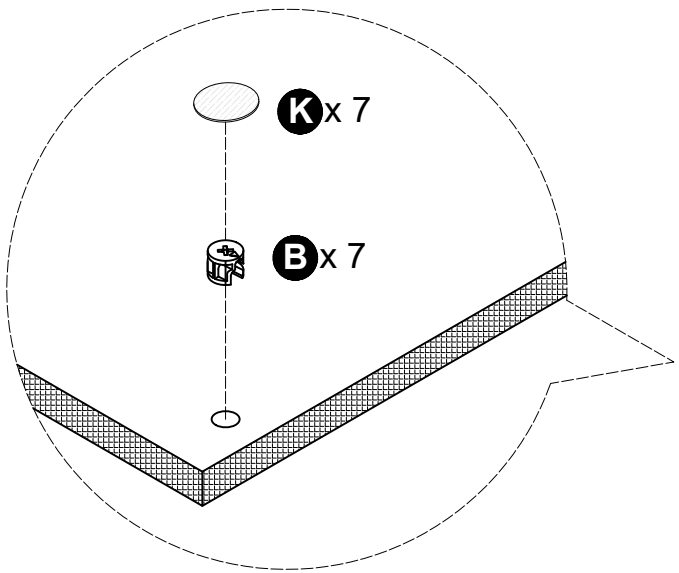


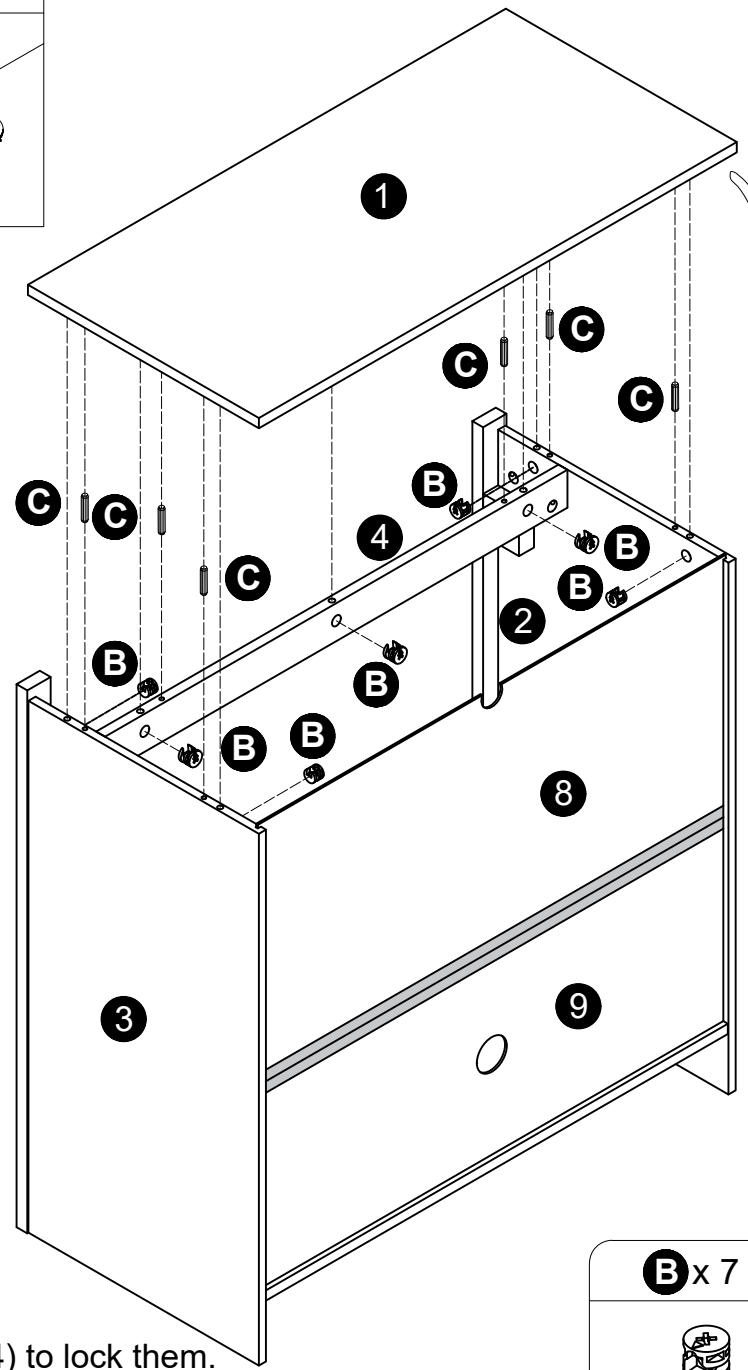






The slot is on the lower side .

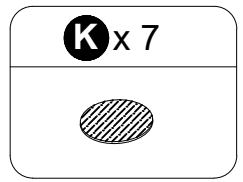


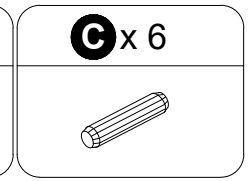

- Insert dowels(C) into panels (2,3,4).
- Attach panel (1) to panels (2,3,4) correctly.
- Insert and secure cam locks (B) to panels (2,3,4) to lock them.
- Apply parts (K) to cover the cam locks (B) for a finished look.

7

INSTALLATION STEPS

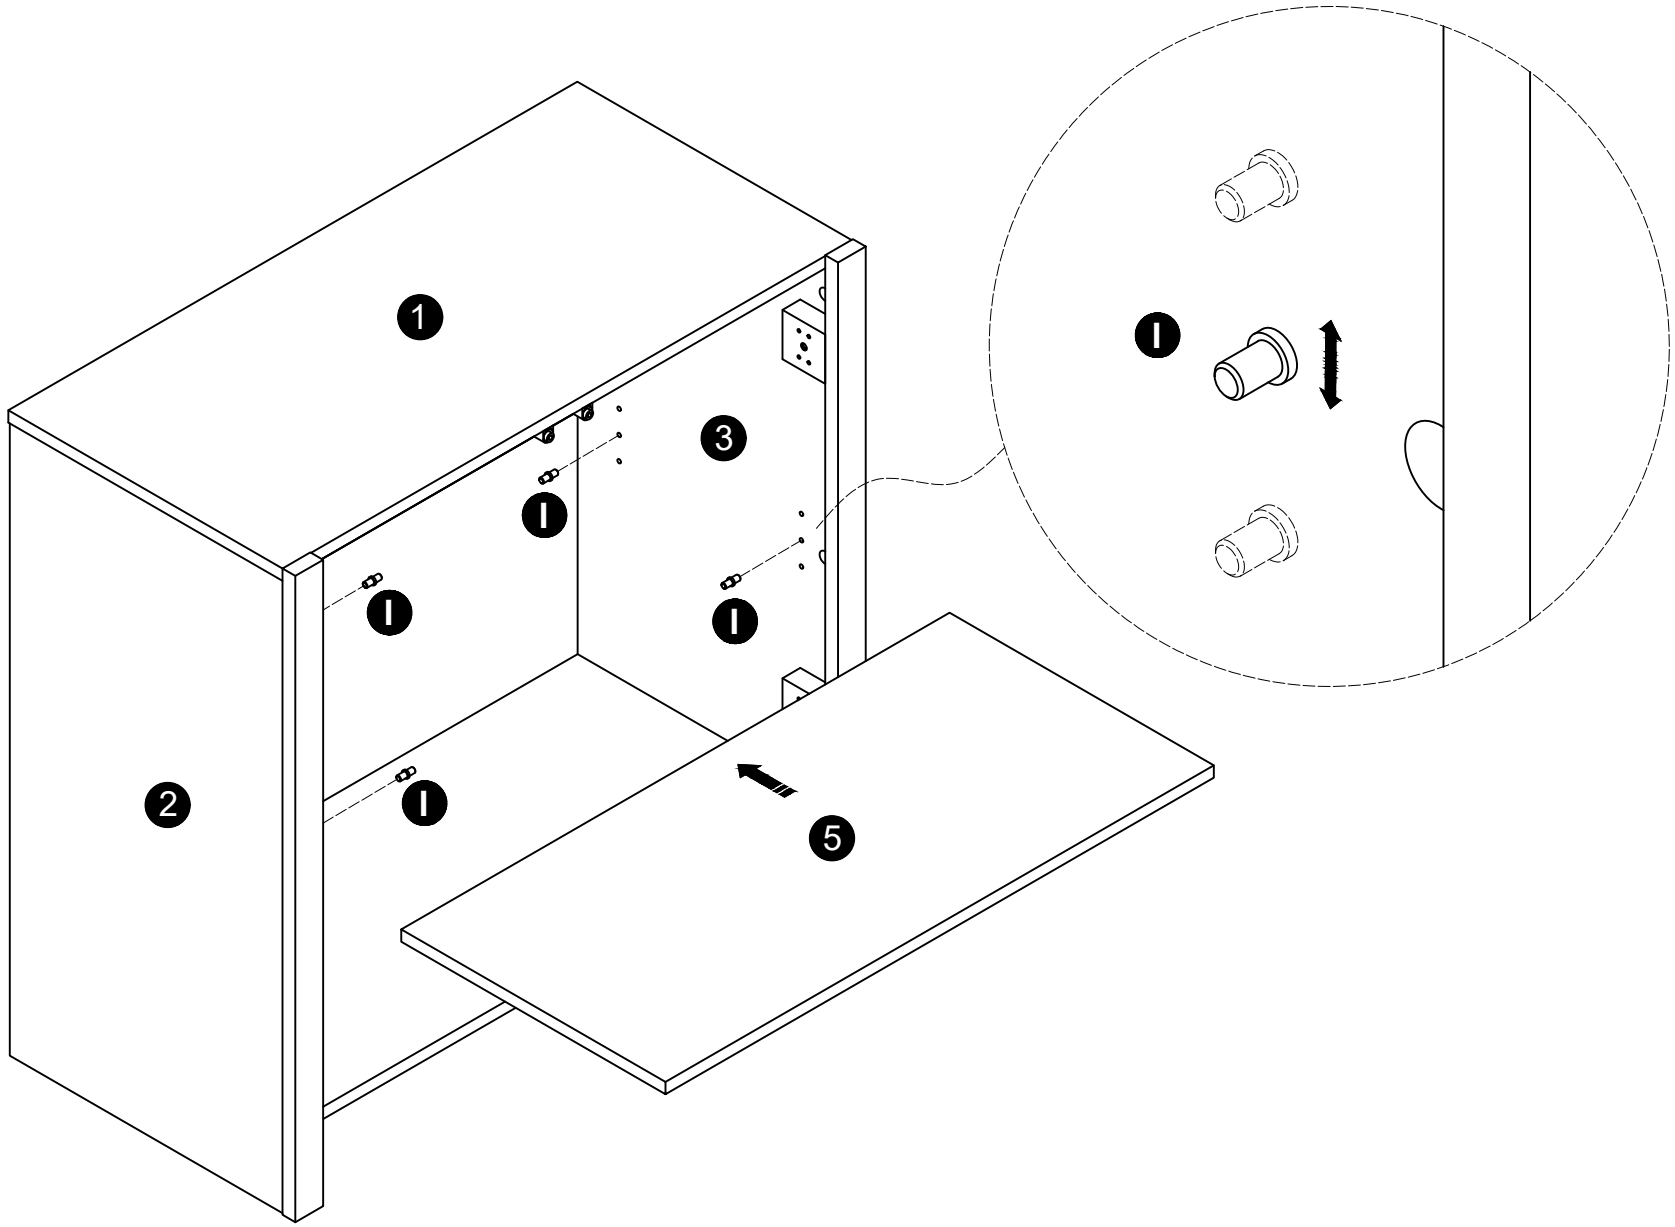

- Insert plate dowels (I) into panels (2,3).
- Place the panels(5) on the plate dowel(I).


I x 4





8

INSTALLATION STEPS

2 Person Task

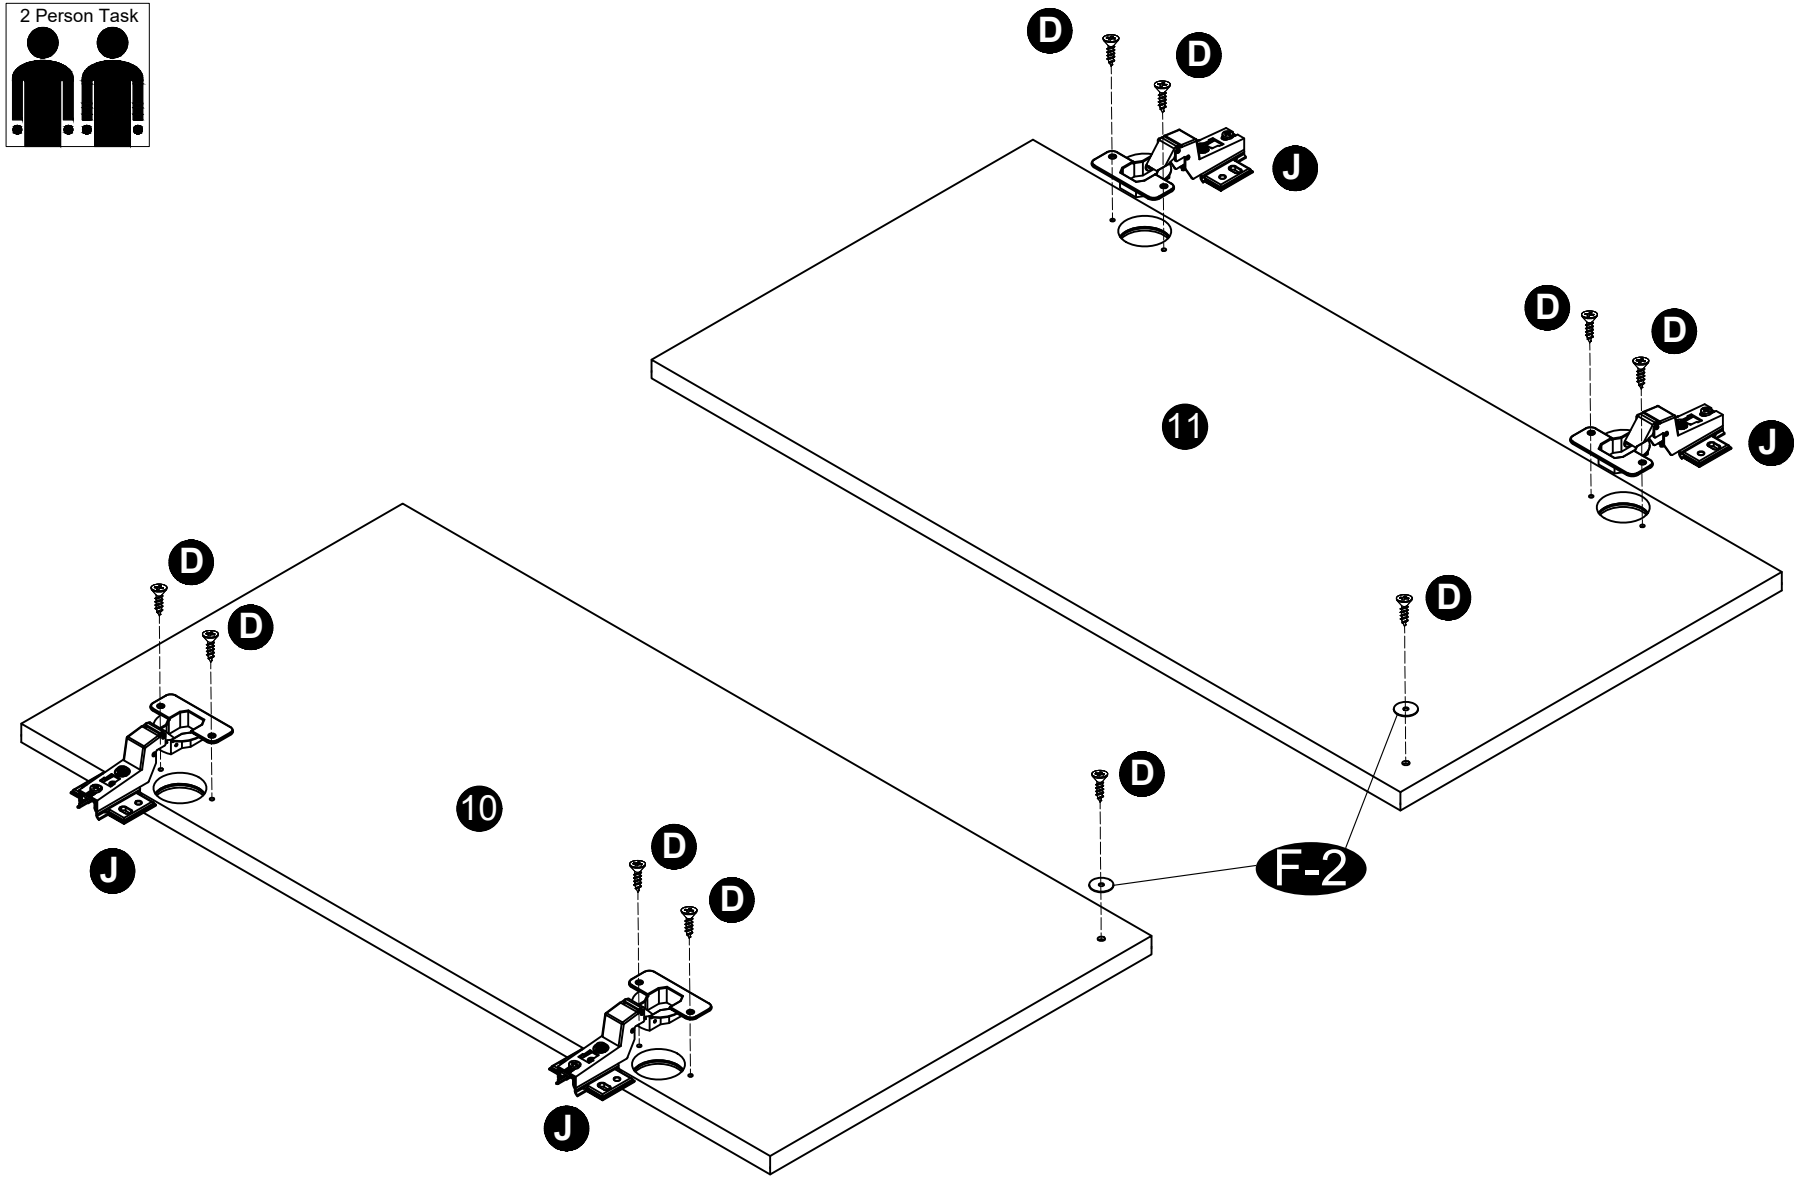


- Attach parts (F-2) to panels (10,11) with screws (D) correctly.
- Attach parts (J) to panels (10,11) with screws (D) correctly.


D x 10	J x 4	F x 2
		

9


INSTALLATION STEPS

2 Person Task

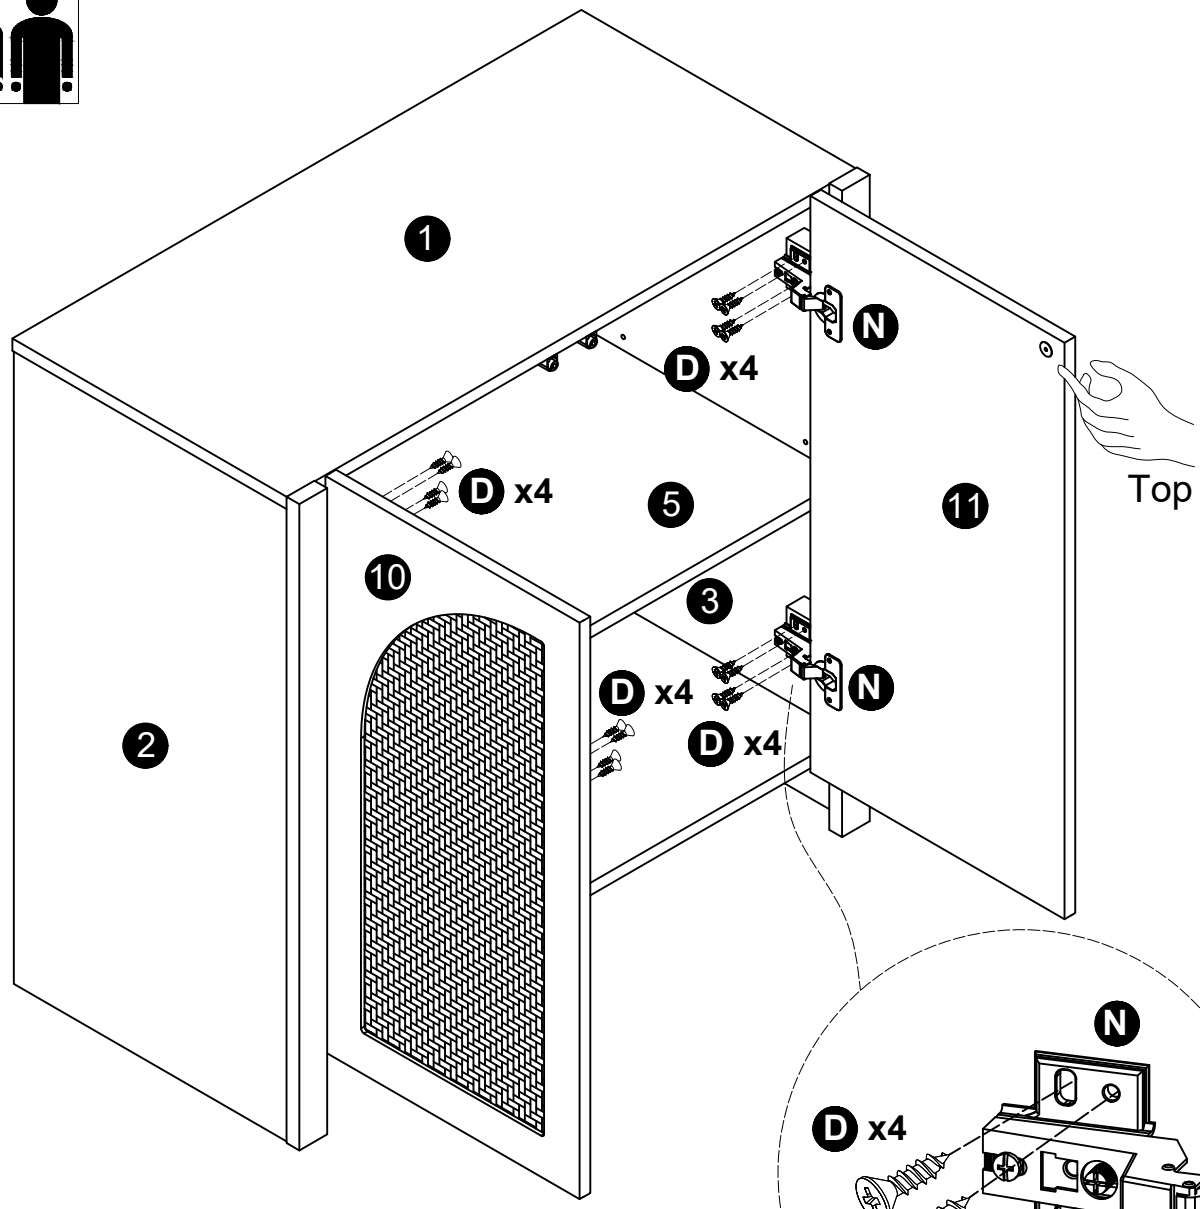


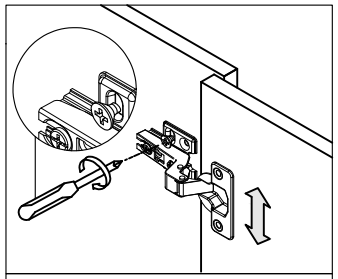

A. Adjustment Up or Down & Fix the screw after adjust

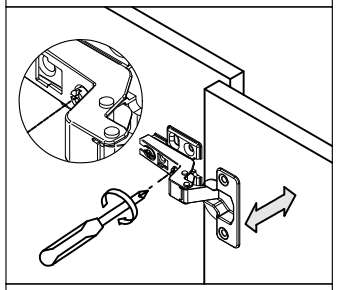

B. Lateral adjustment by screw adjusting

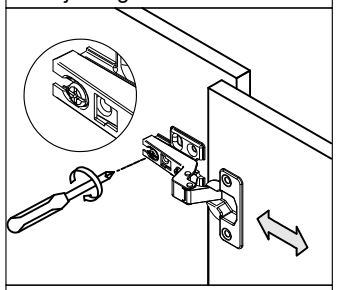

C. Front-to-Back by slacking the hinge arm mounting screw


D x 16



- Attach panels (10,11) to panels (2,3) with screws (D) correctly.

10


INSTALLATION STEPS

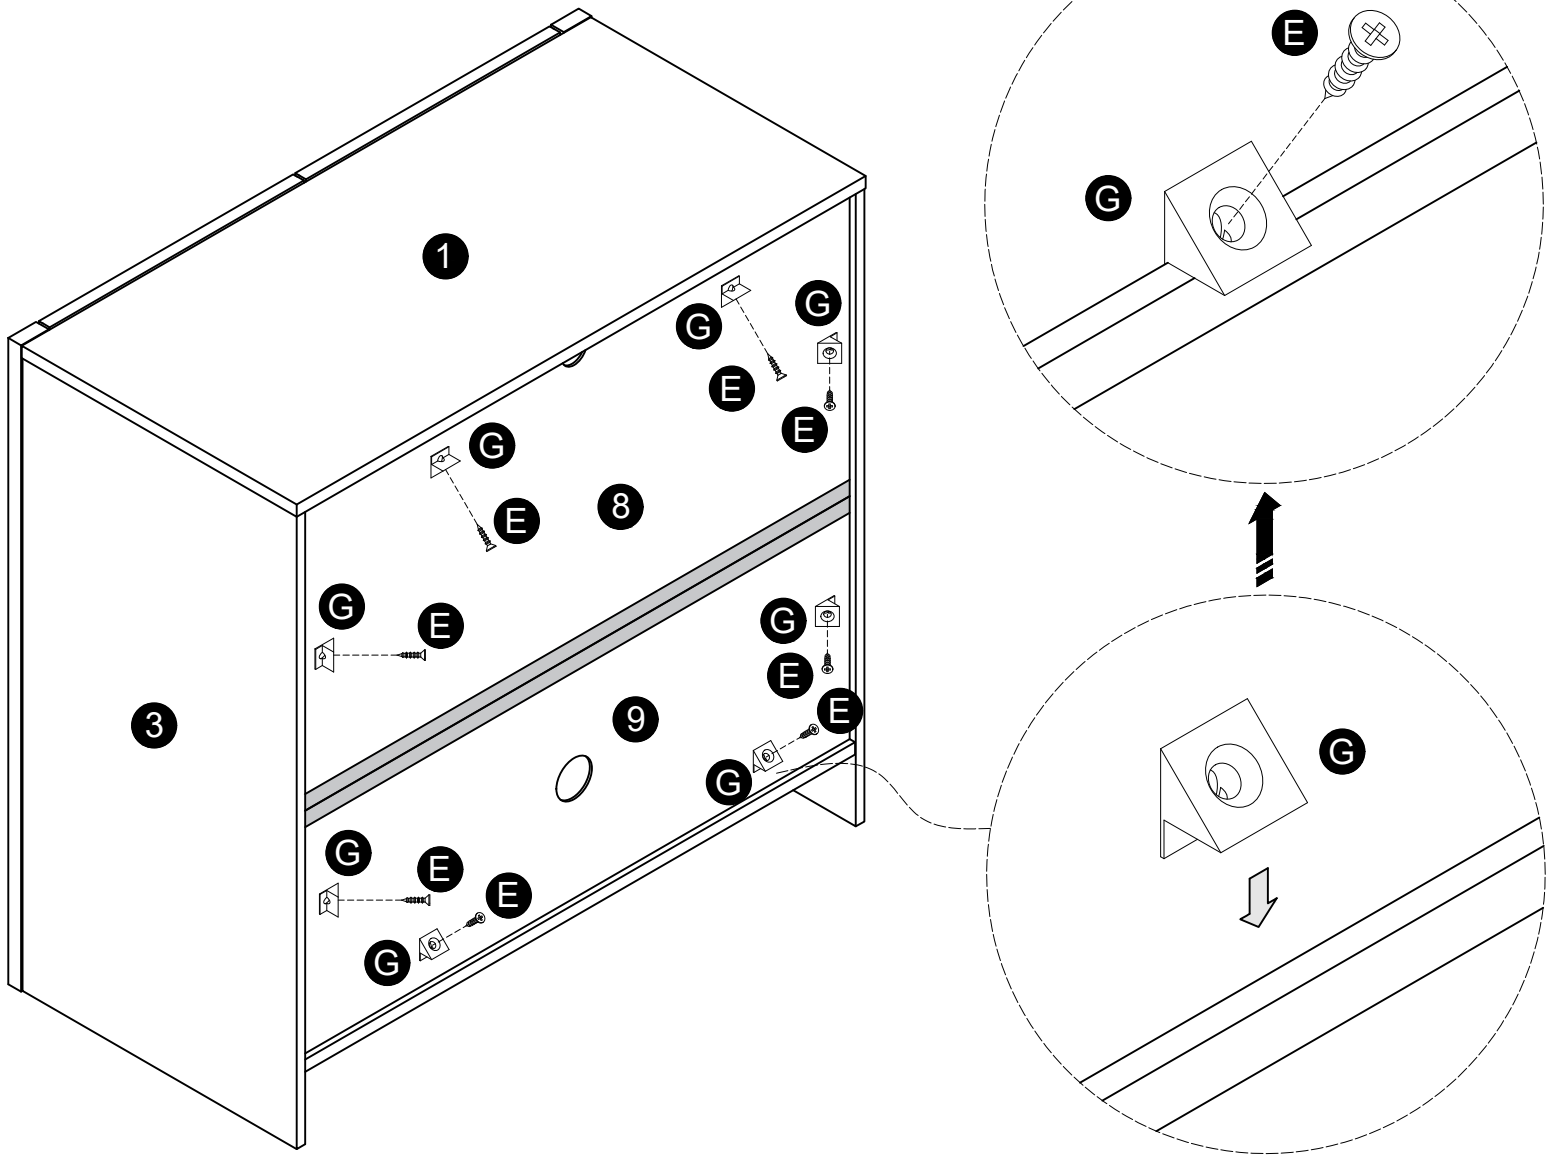


- Secure parts (G) to panels (1,2,3,6) using screws (E).

11


INSTALLATION STEPS

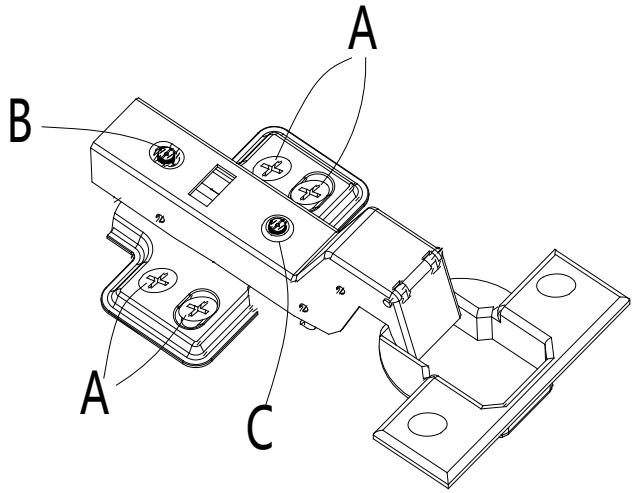

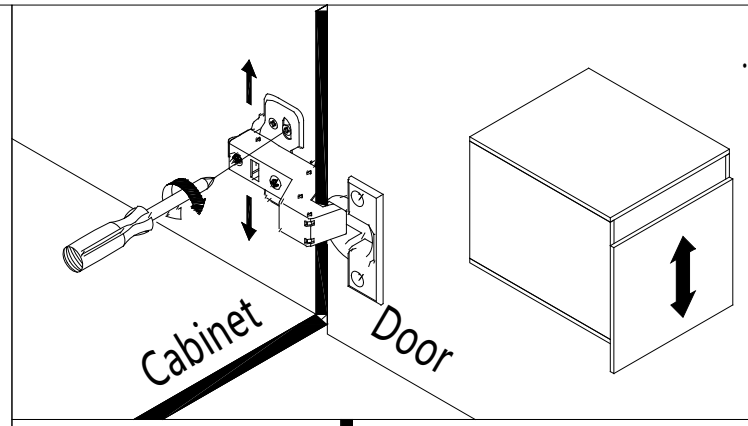


· To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which mean and you can adjust up or down by a few mm.
Then tighten back up.

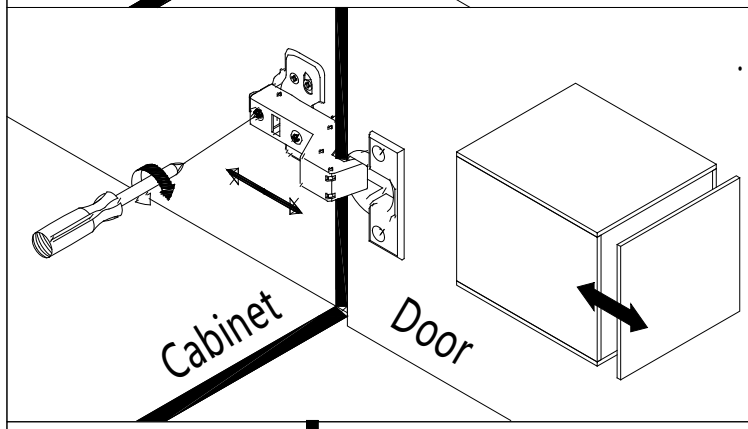

· To adjust depth.

Loosen screw"B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again.
Tighten screw "B" and "C".

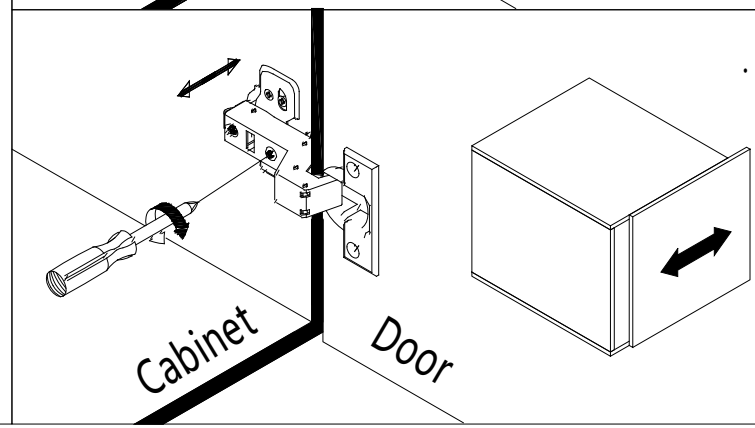

· To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

12


INSTALLATION STEPS

Tools required: Phillips screwdriver, Power Drill, 15/64” Drill Bit and Rubber Mallet.


Step ①

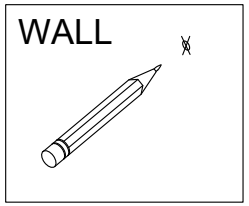


Step ②

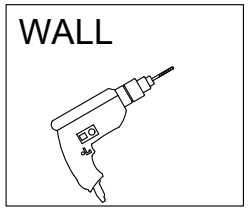


Step ③

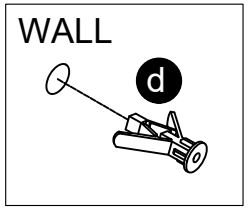


Step ④

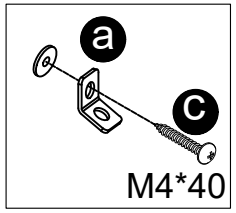

Step ⑤

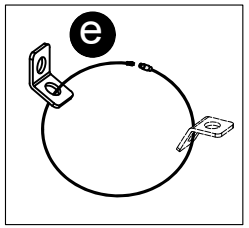

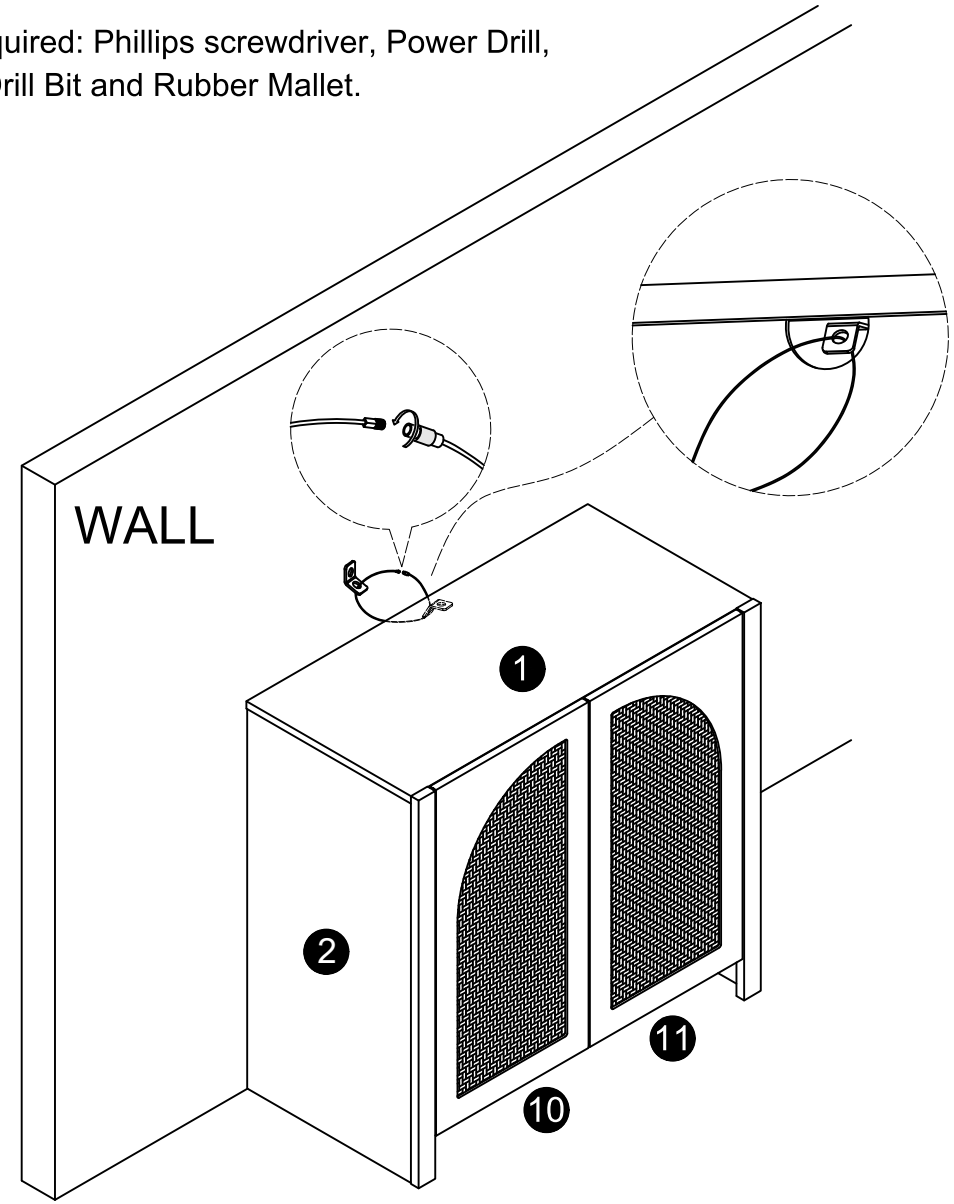

WARNING

Serious or fatal crushing injuries can occur from furniture tipover.
To prevent tipover:
* Install tipover restraint provided
* place heaviest items in the lowest drawers
* Unless specifically designed to accomodate, do not set TV or other heavy objects on the top of this product
* Never allow children to climb or hang on drawers, door, or shelves.
Use of tipover restarints may only reduce, but not eliminate the risk of tipover

