

INSTRUCTION MANUAL

Bird Feeding Station

NOTICE

Please retain these instructions for future reference.

- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

1 PERSON ASSEMBLY

APPROXIMATELY 15 MIN. ASSEMBLY


PARTS

A TOP HOOKS



1 PC

B BOTTOM POLE

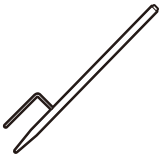

1 PC

C1 POLE




1 PC

C2 POLE



1 PC

D HOOK

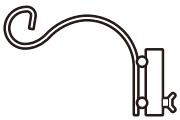


2 PC

E WATER BOWL




1 PC

F FOOD TRAY



1 PC

G GROUND STAKE

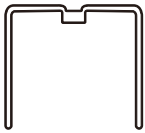


1 PC

H SUET FEEDER



1 PC


I TUBE FEEDER



1 PC


PRODUCT ASSEMBLY

1 Assemble the bird feeding station. Start from the bottom and assemble upwards.

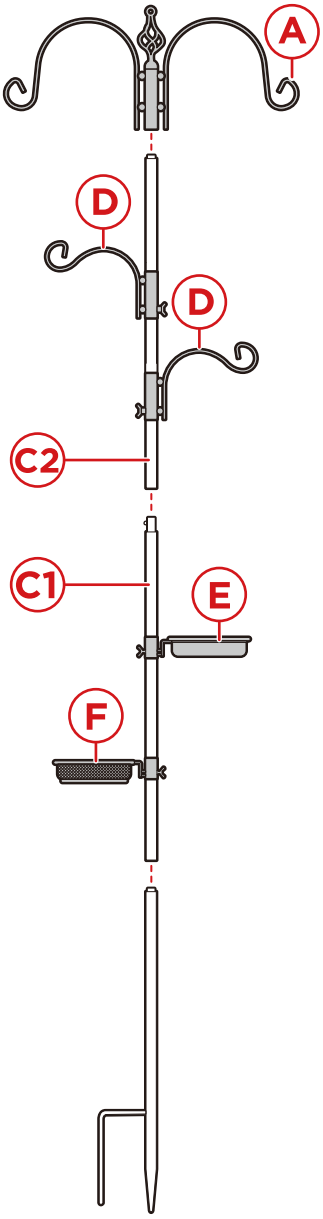

2 Attach the part G ground stake to the part B bottom pole. Hang the part H suet feeder and part I tube feeder.

Place the feeder in your desired location and step on the stakes to plant it into the ground.

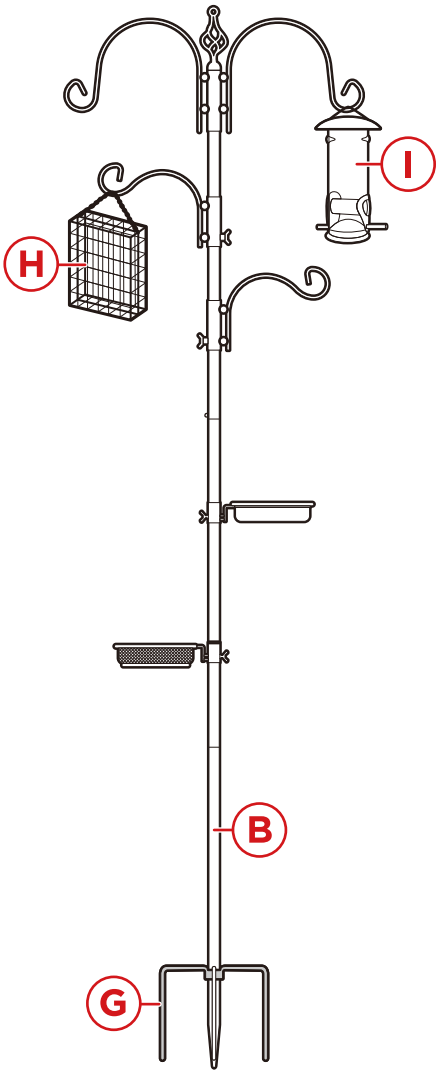

HELP CENTER

Question about your product? We're here to help.



Chat Support


Product Inquiry


Orders FAQ


Product Assembly


Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number which can only be provided by a Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Return Center at the customer's expense. If the reason for return is a result of an error by us then will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by as undamaged.

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.