
INSTRUCTIONS INSTALLATION

INFLATABLE ROOF TENT

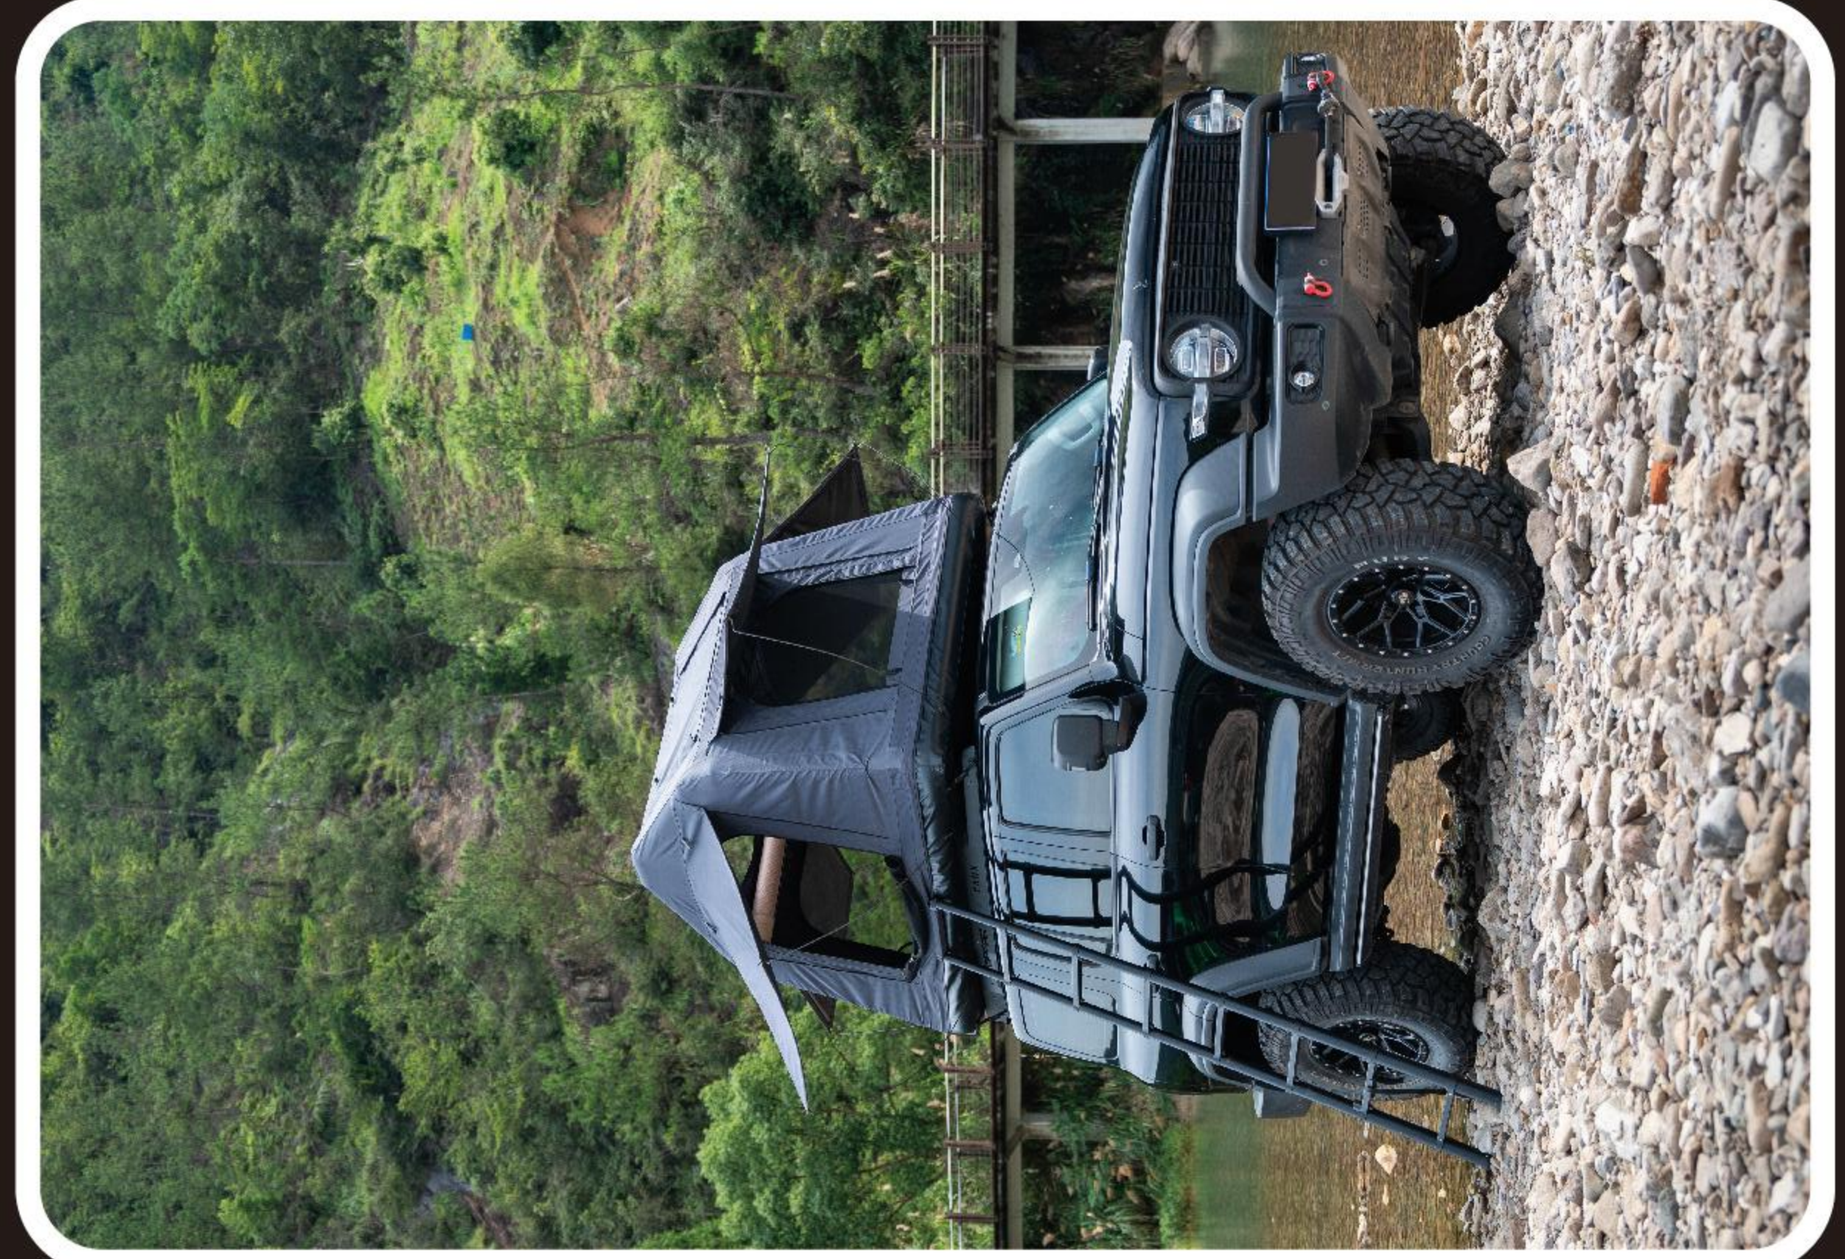



STEP 1

Open the storage bag, take out the tent and spread it out flat





STEP 2


1.Take out the pump and connect it to the nozzle adapter, then tighten both ends tightly




Connect the interface first, just like in the picture



Tighten

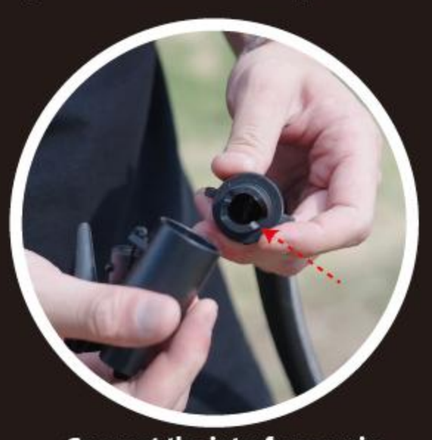

Connect the interface again as shown in the picture

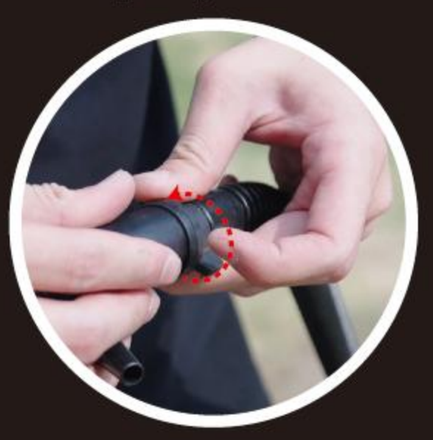


Tighten


2: Insert the nozzle of the air pump into the tent air column inlet, and inflate the roof tent air column and mattress to the appropriate pressure.



Open the tent air column inlet

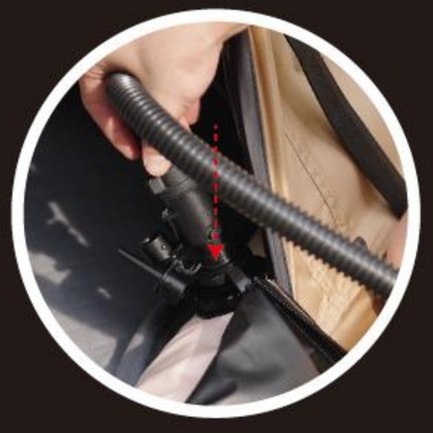

Connect them together

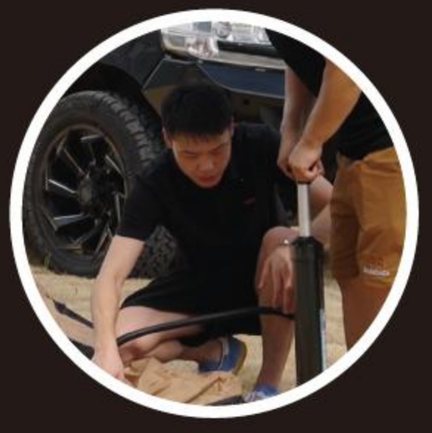

Aerate



To the appropriate air pressure

STEP 3

1: After charging, take out the support rod and support the door and window covers









Tighten the elastic rope tightly

2: Lift the tent to the roof of the car





STEP 4

Secure the tent and car in place



The bottom of the tent has Velcro that can be fixed to the roof crossbar or platform

FIXED METHOD






Short webbing is used to secure on the roof platform



Long webbing is used to secure onto car wheels

FINALLY, OPEN THE VELCRO TO SECURE THE LADDER (ENSURE IT IS SECURE)

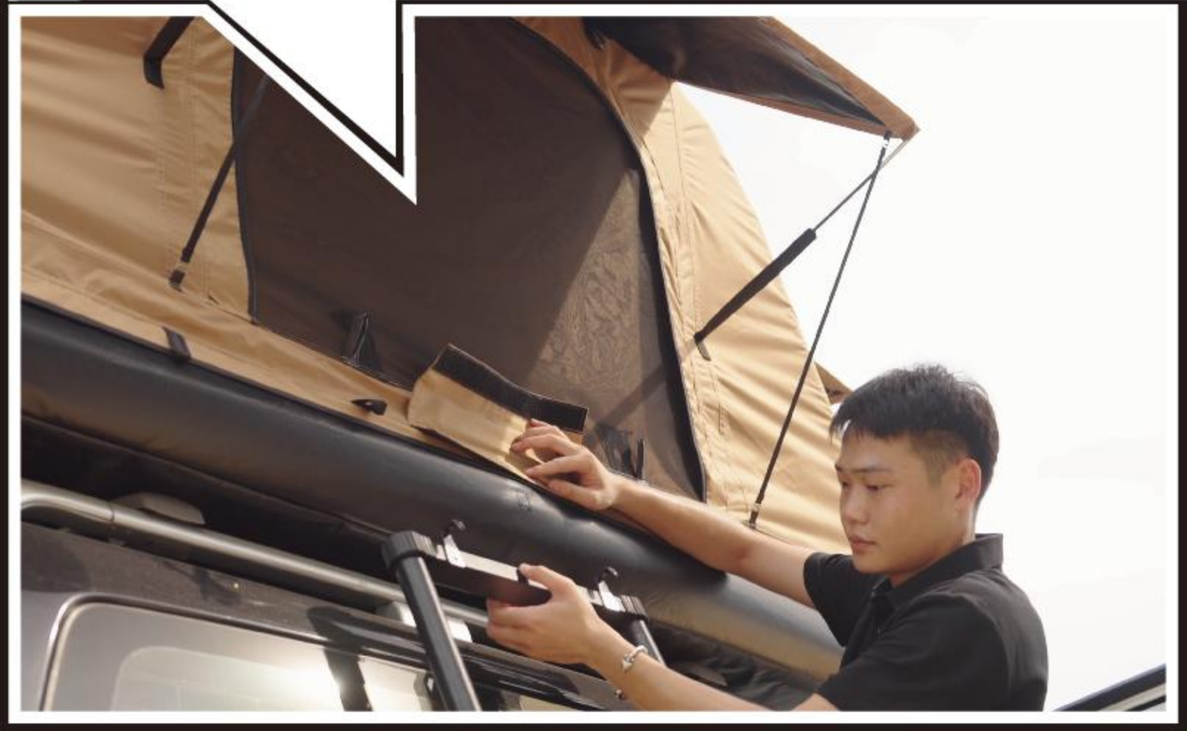



EFFECT



PRECAUTIONS FOR USE!

Our factory comes standard with an integrated connection of air column and air cushion



Do 't disassemble at will to avoid air leakage from the connecting trachea





If there is a leak in the connecting air pipe, the air valve in the accessory kit can be used to replace it. Separate the air column and cushion for inflation