

Assembly Instruction





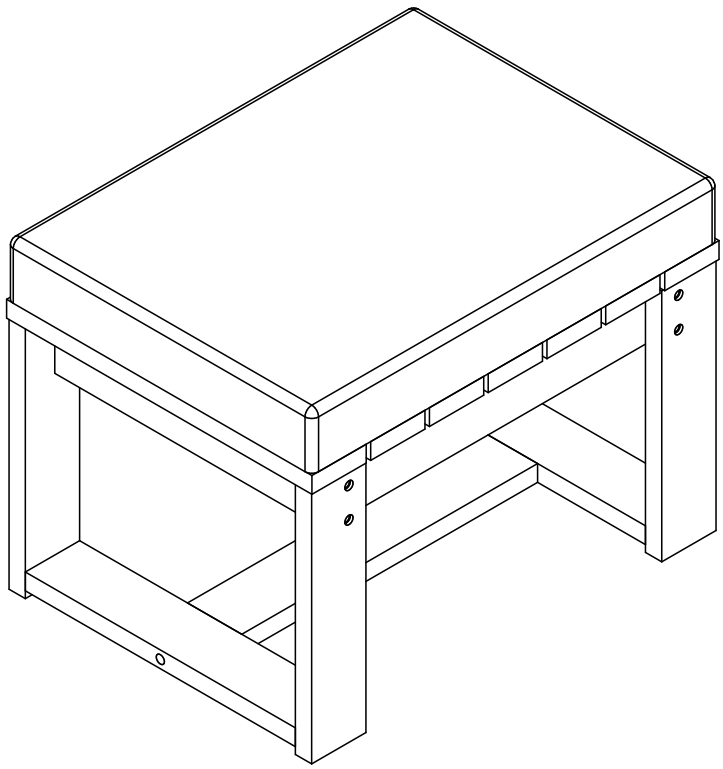


IF YOU PURCHASE THE PRODUCT ONLINE AND HAVE ANY QUESTIONS OR CONCERNS,
PLEASE CONTACT US WITH
E-MAIL: slhhomegarden@outlook.com



Assembly Instruction

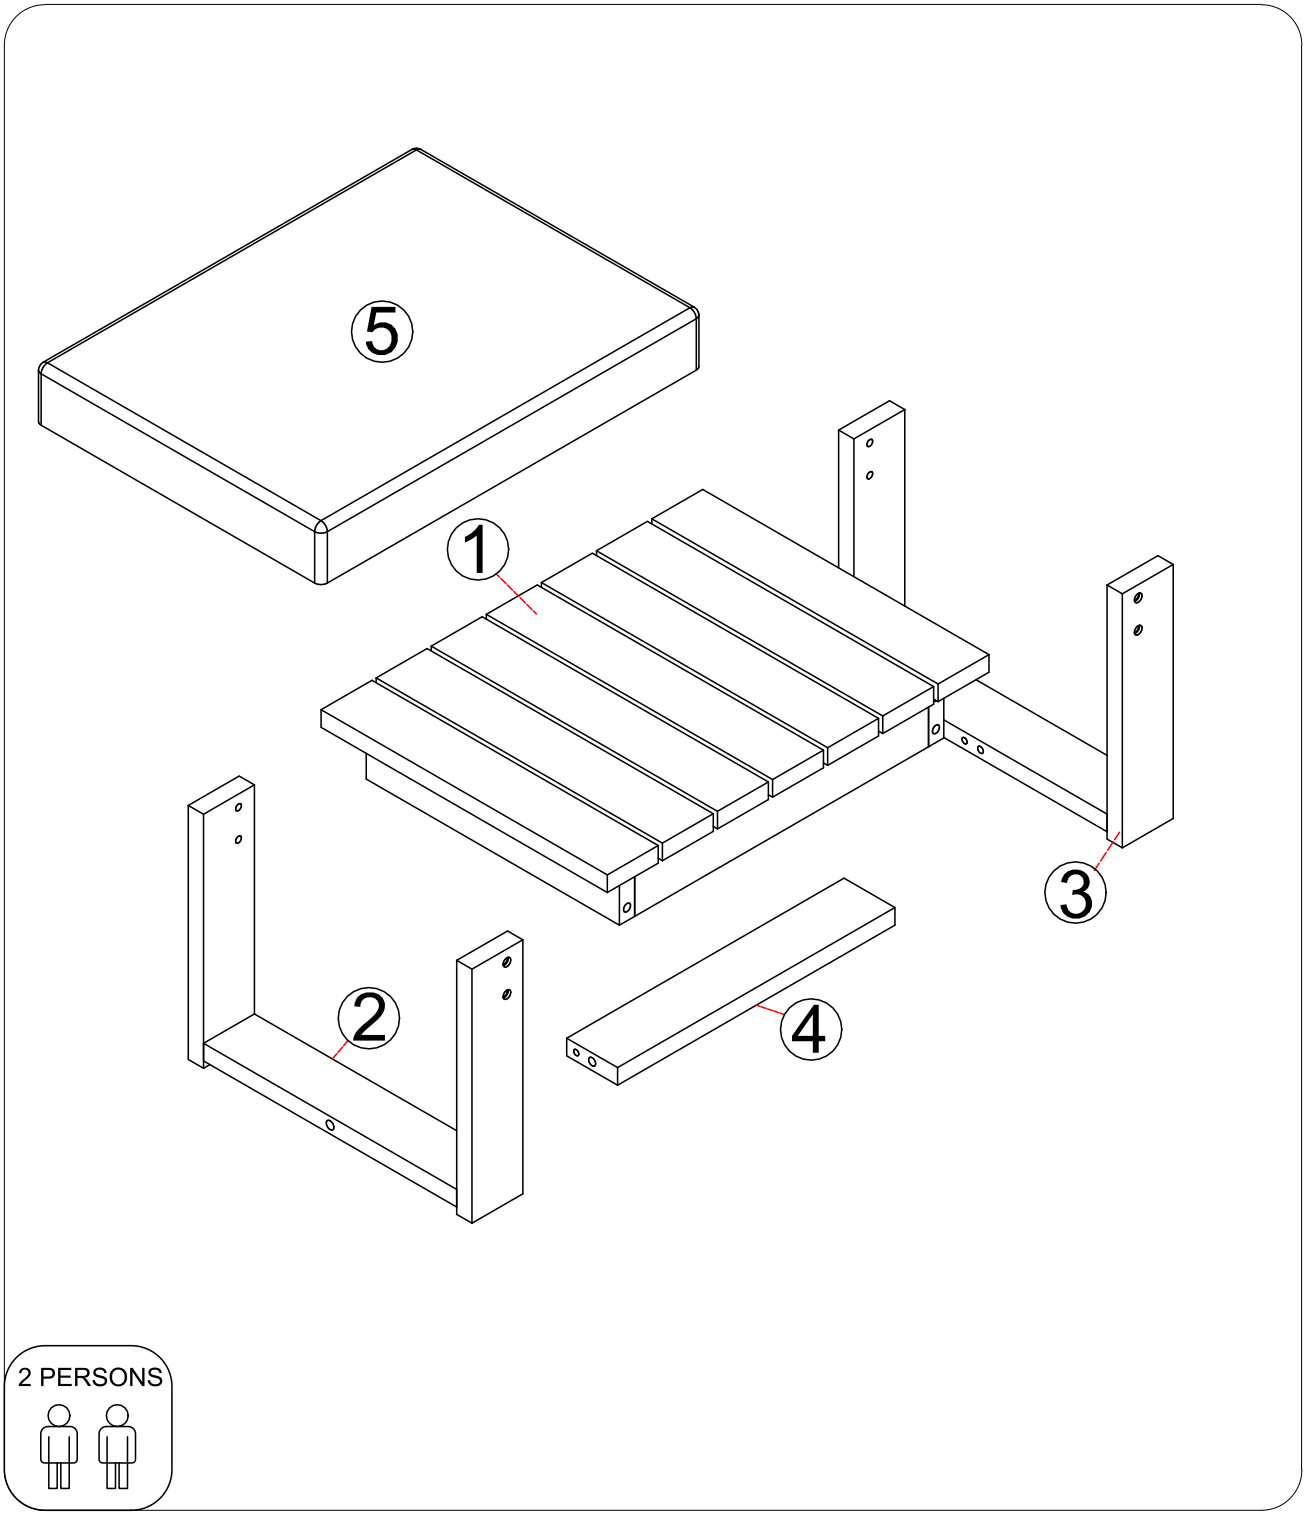

PARTS LIST

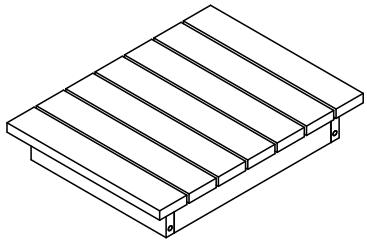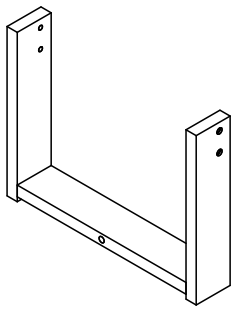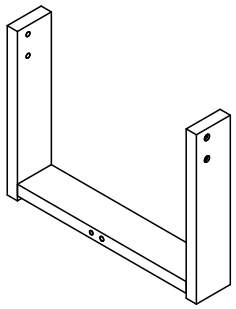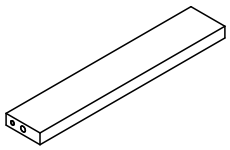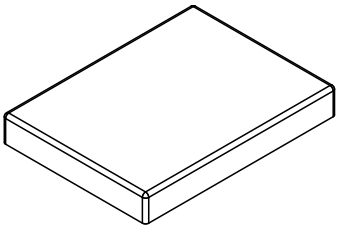
①  1PC	②  1PC	③  1PC
④  1PC	⑤  1PC	

HARDWARE LIST

A	B	C	D	E
 M6x40mm 8PCS	 M6x60mm 2PCS	 1PC	 8x30mm 2PCS	 4PCS


STEPS

STEP-1 E x 4PCS

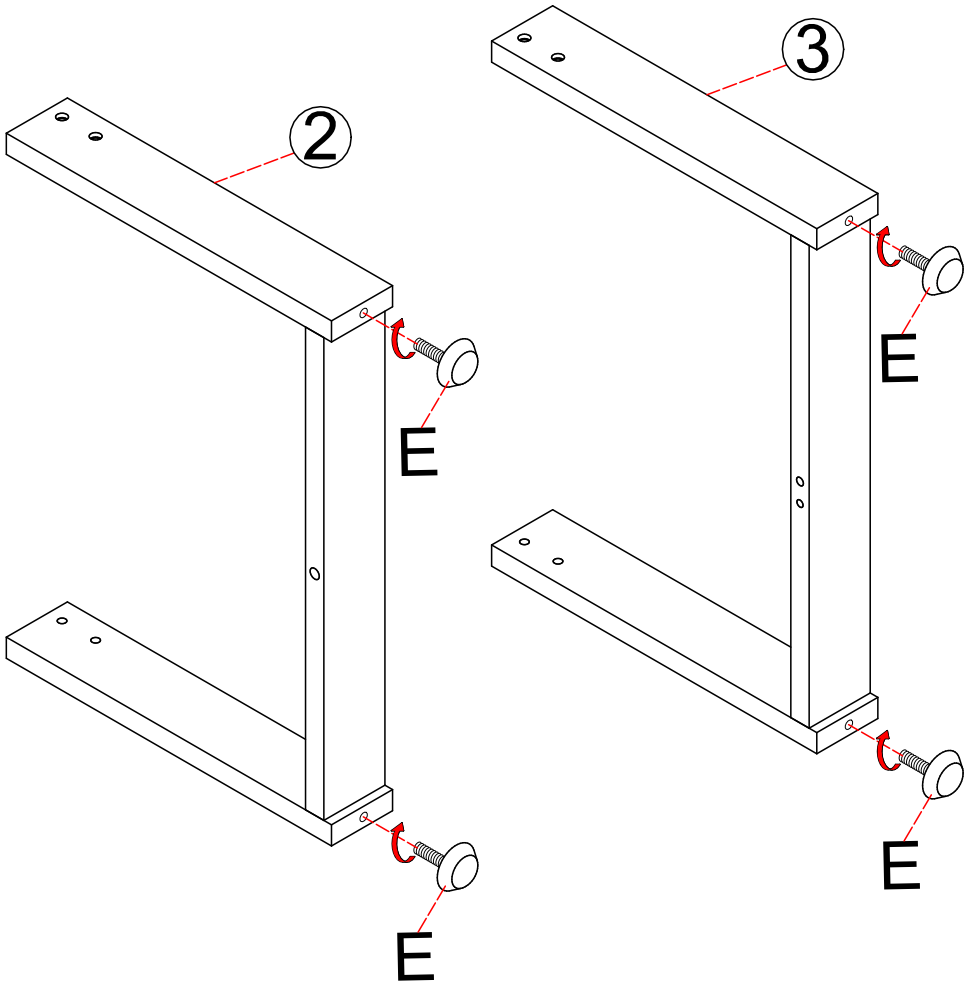


STEP-2

	B x 2PCS
	D x 2PCS
	C

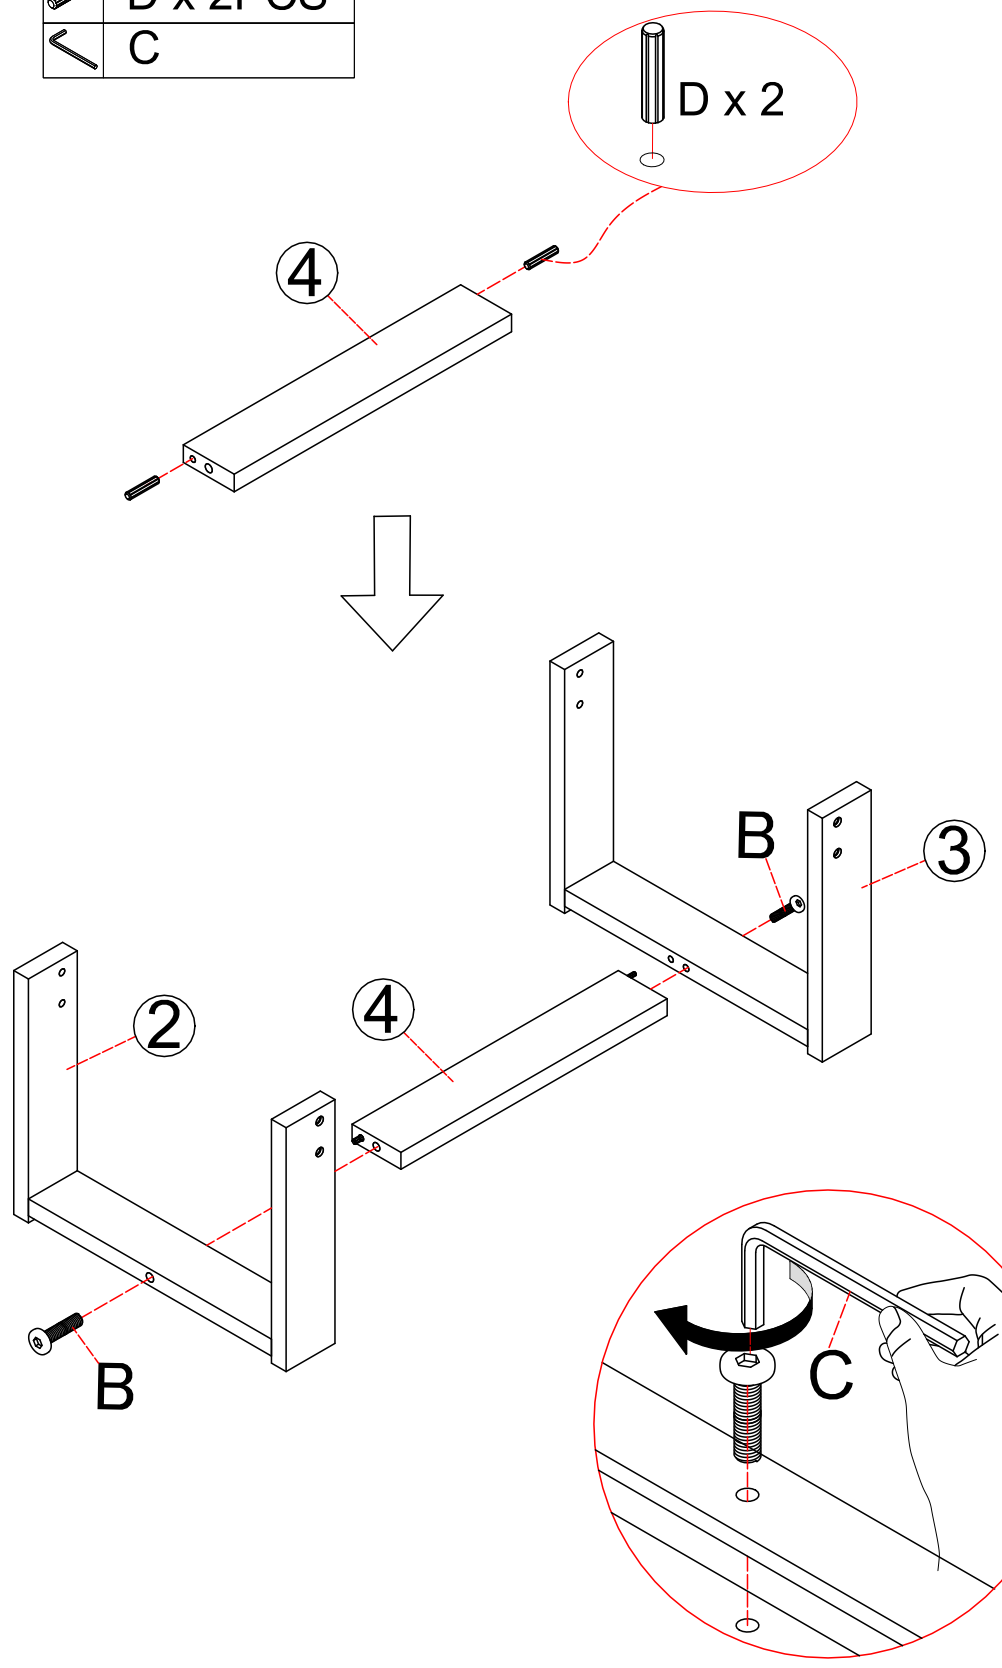



STEP-3

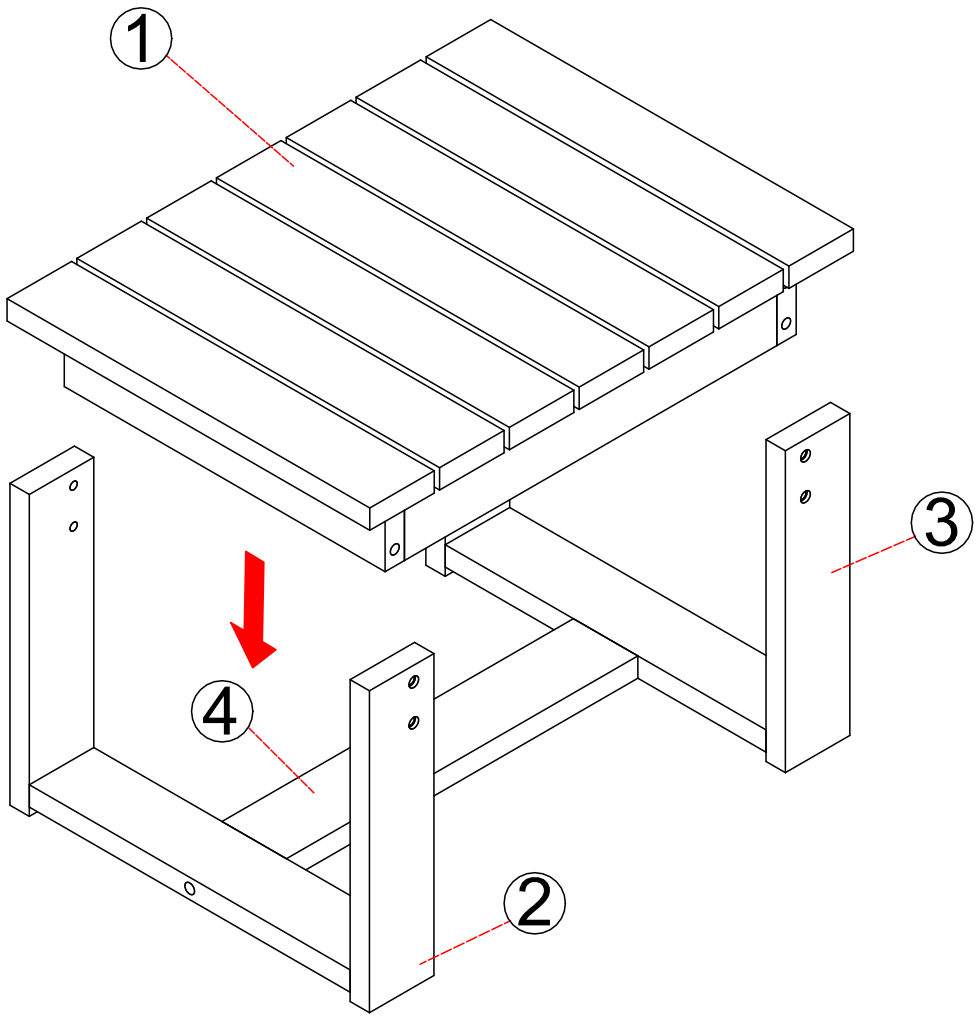


STEP-4

	A x 8PCS
	C

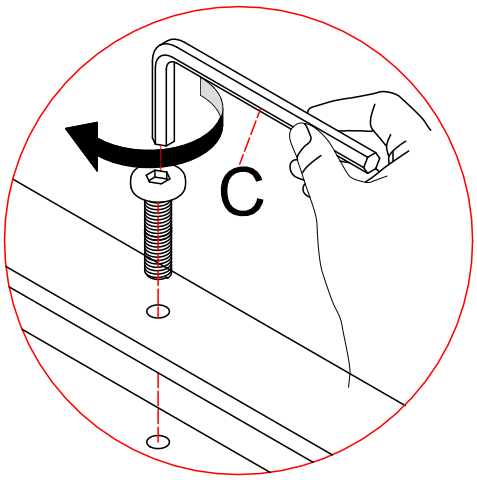

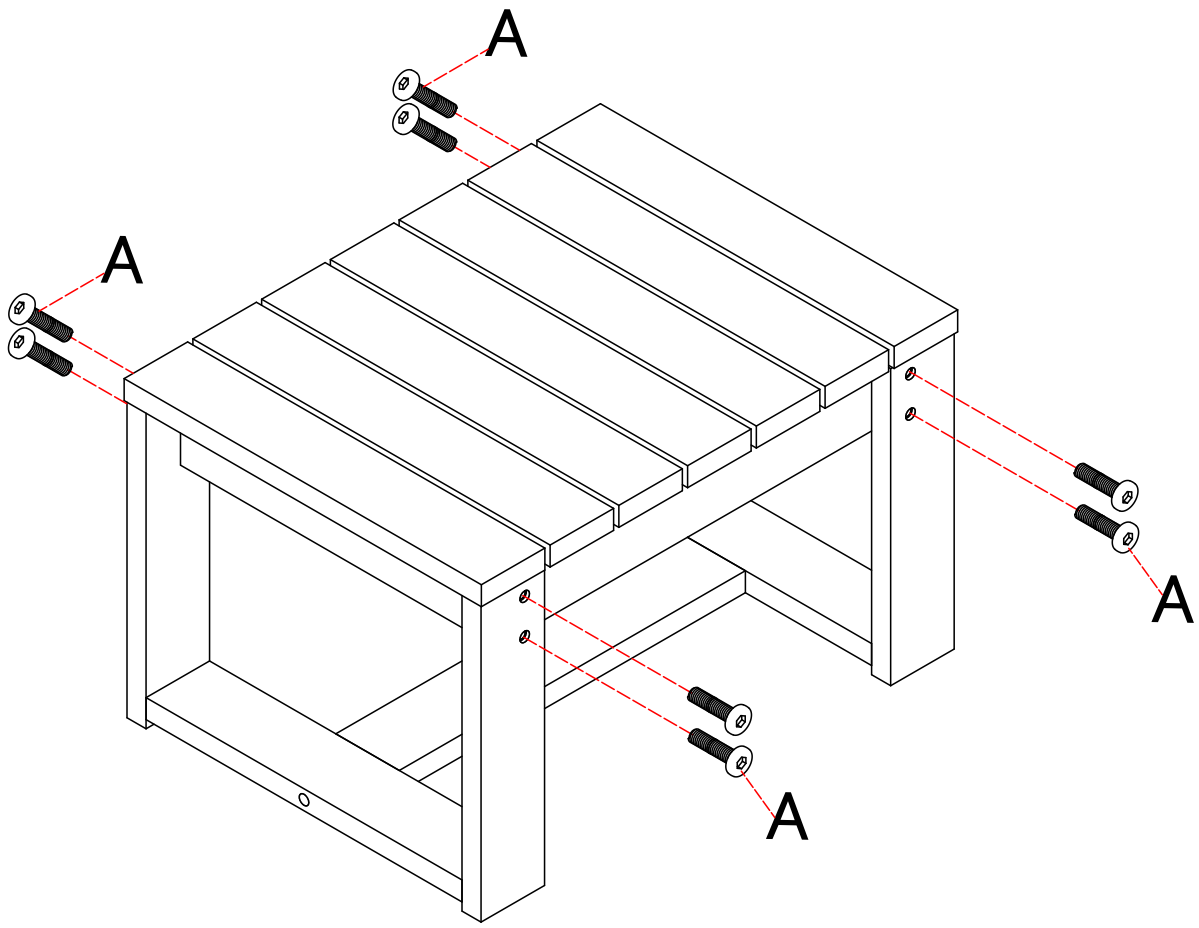

STEP-5

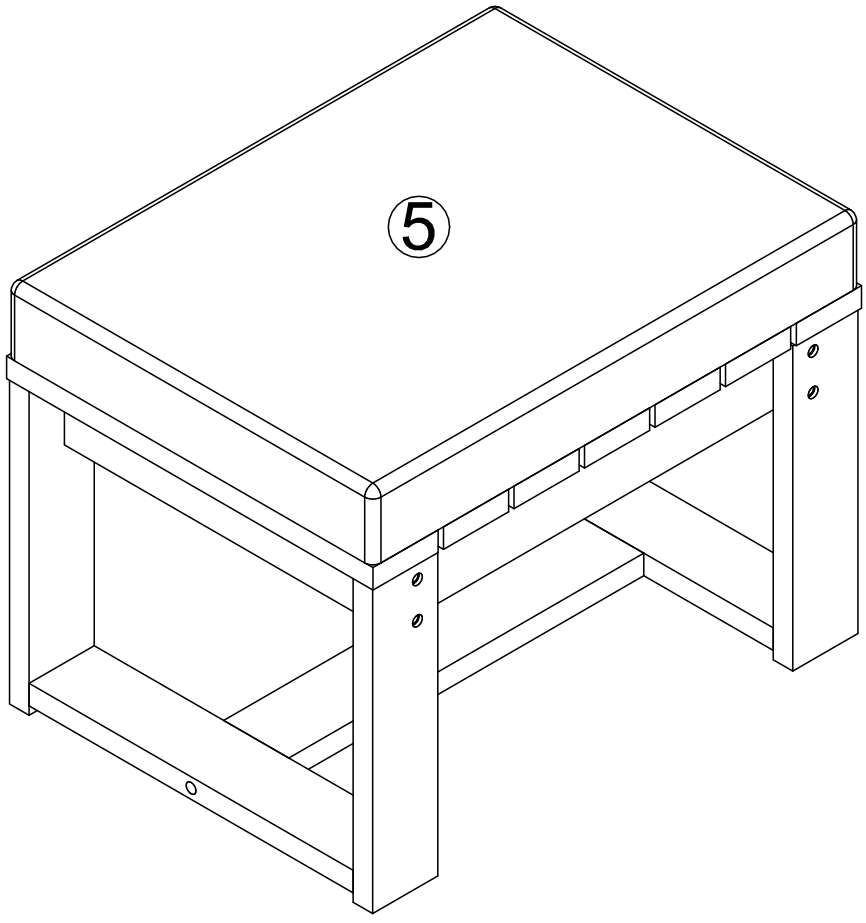

Warranty

We are committed to providing quality outdoor furniture and offer a one-year limited warranty on this product.

Terms and Conditions
This warranty covers defects in materials and workmanship under normal use and care for a period of one year from the date of purchase.Proof of purchase (dated receipt or invoice) is required for all warranty claims.

Customer Responsibilities
The customer is responsible for all freight and packing charges associated with returning the product to our service center and shipping it back after repair or replacement.

Exclusions
This warranty does not cover:
Normal wear and tear, including scratches, stains, fading, or discoloration.
Damage caused by misuse, accidents, neglect, or improper maintenance.
Damages resulting from exposure to extreme weather conditions.
Commercial use of the product.

How to File a Claim
To submit a warranty claim:

Provide proof of purchase.
Include a detailed description of the issue and photos, if applicable
.
Contact our customer service team for assistance. If your claim is approved, we will repair or replace the product or provide a comparable solution at our discretion.

This warranty is non-transferable and applies only to the original purchaser. For optimal product performance, we recommend following all care and maintenance instructions.