

INSTALLATION
Product Manual

Version: 590064US-01-26A-HXC

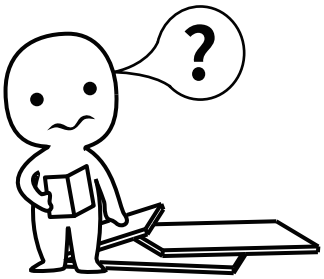


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

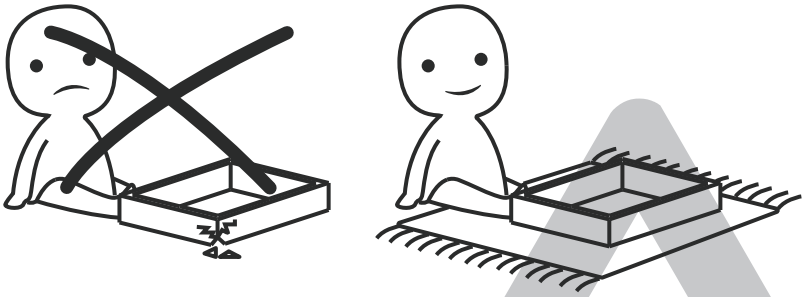


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

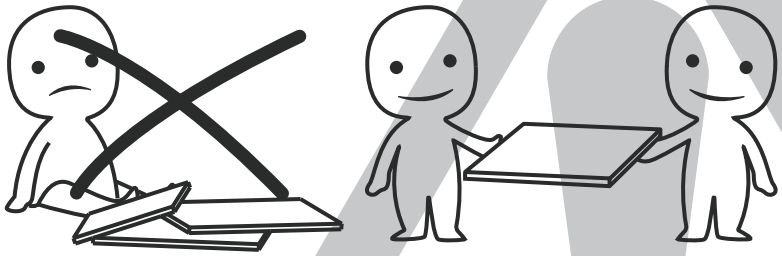

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

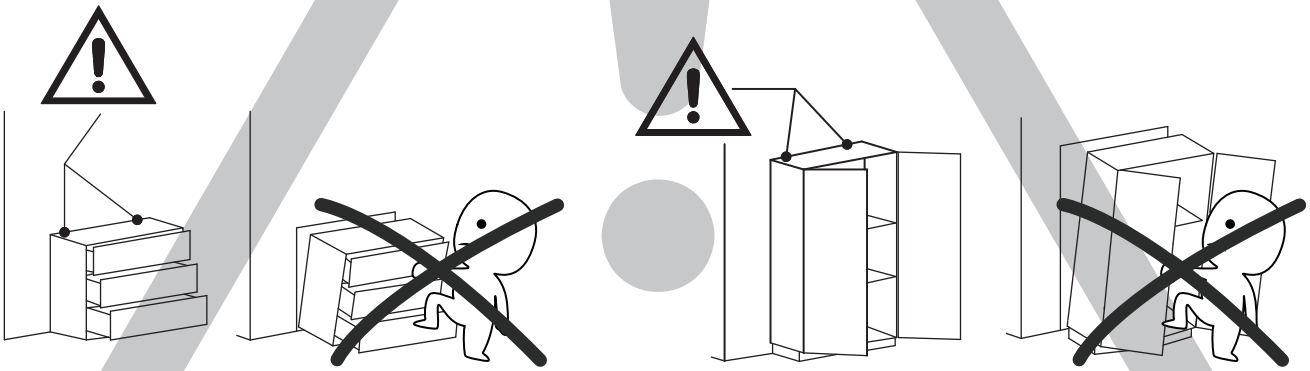

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.





Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

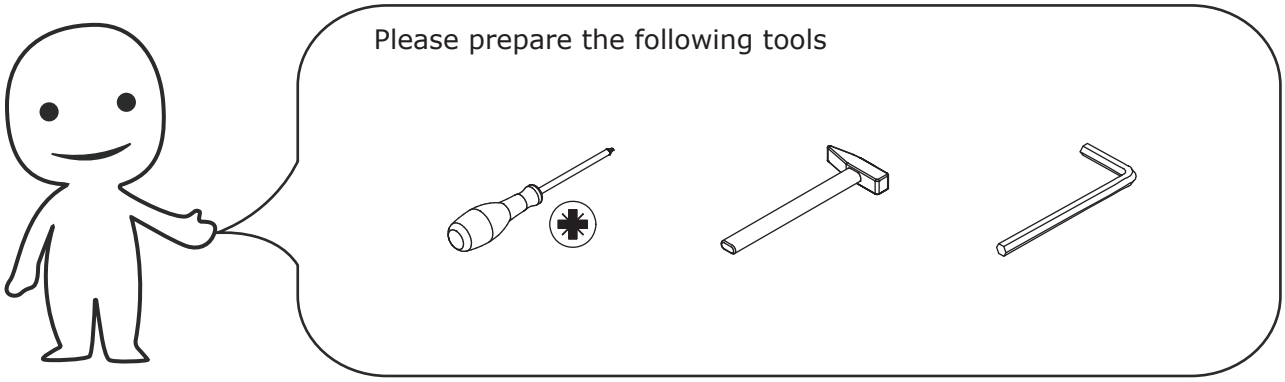


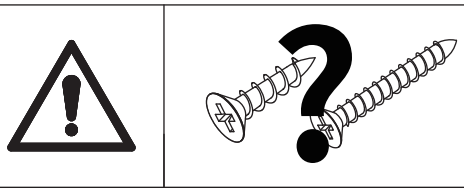


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

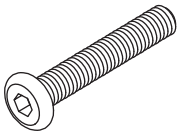A x 20	B x 8	C x 22	D x 8
			
∅ 3.5 x 12 mm	∅6 x 20 mm	∅6 x 28 mm	∅ 6 x 10 mm

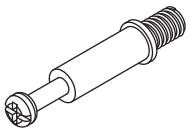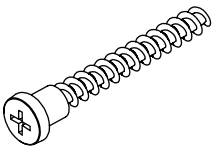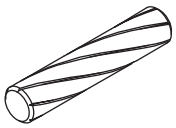E x 28	F x 28	G x 12	H x 32
			
∅15 x 9 mm	∅6 x 35 mm	∅5 x 48 mm	∅6 x 30 mm

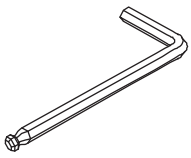I x 1

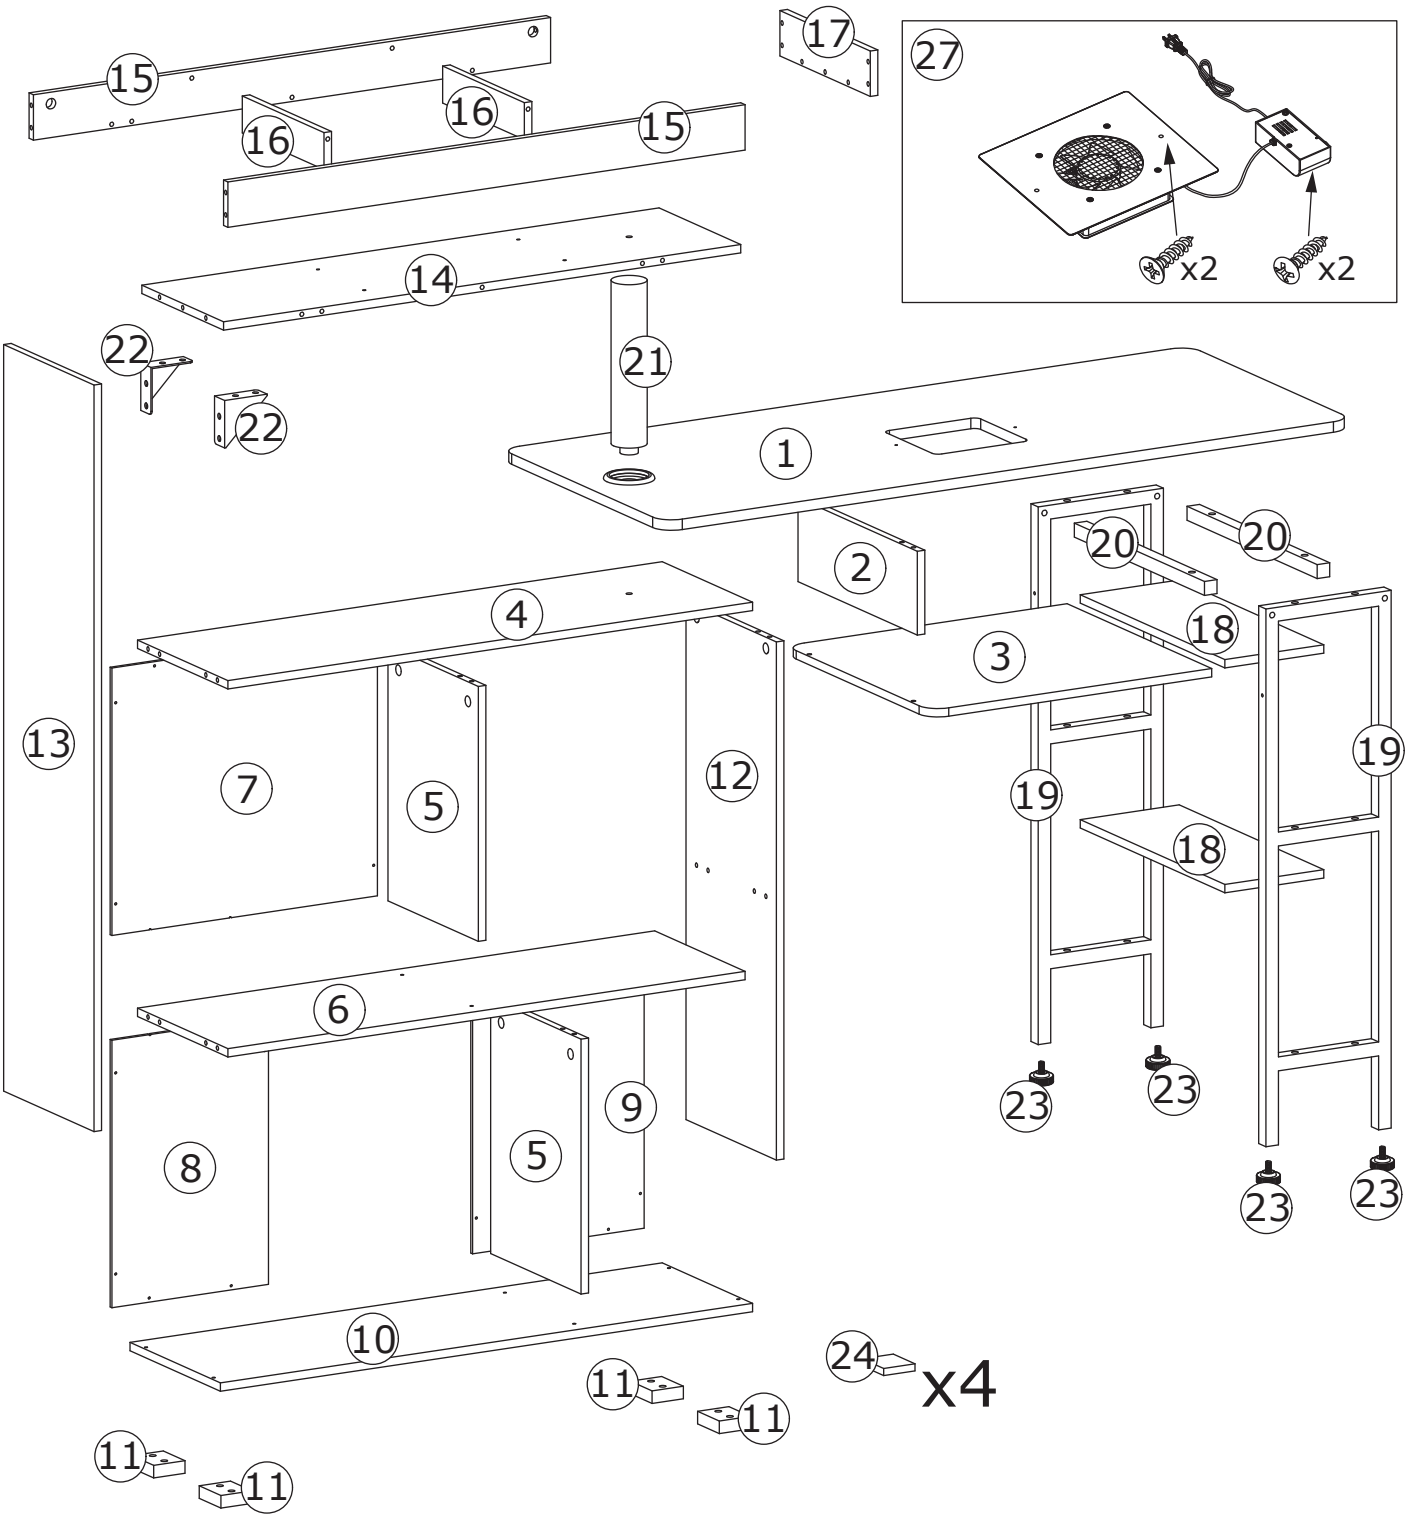


⚠WARNING






Children have died from furniture tipover.To reduce the risk of furniture tipover:




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

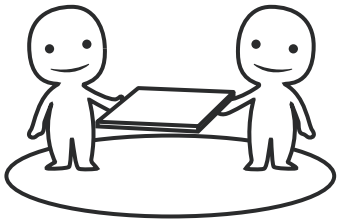


ASSEMBLED BY 2 ADULTS

1



F x 2	G x 2	
		
∅6 x 35 mm	∅5 x 48 mm	

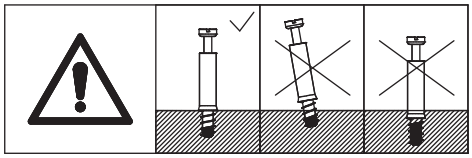


Screw eccentric rod (F) onto board 6.
Secure board 5 to board 6 using screw (G).

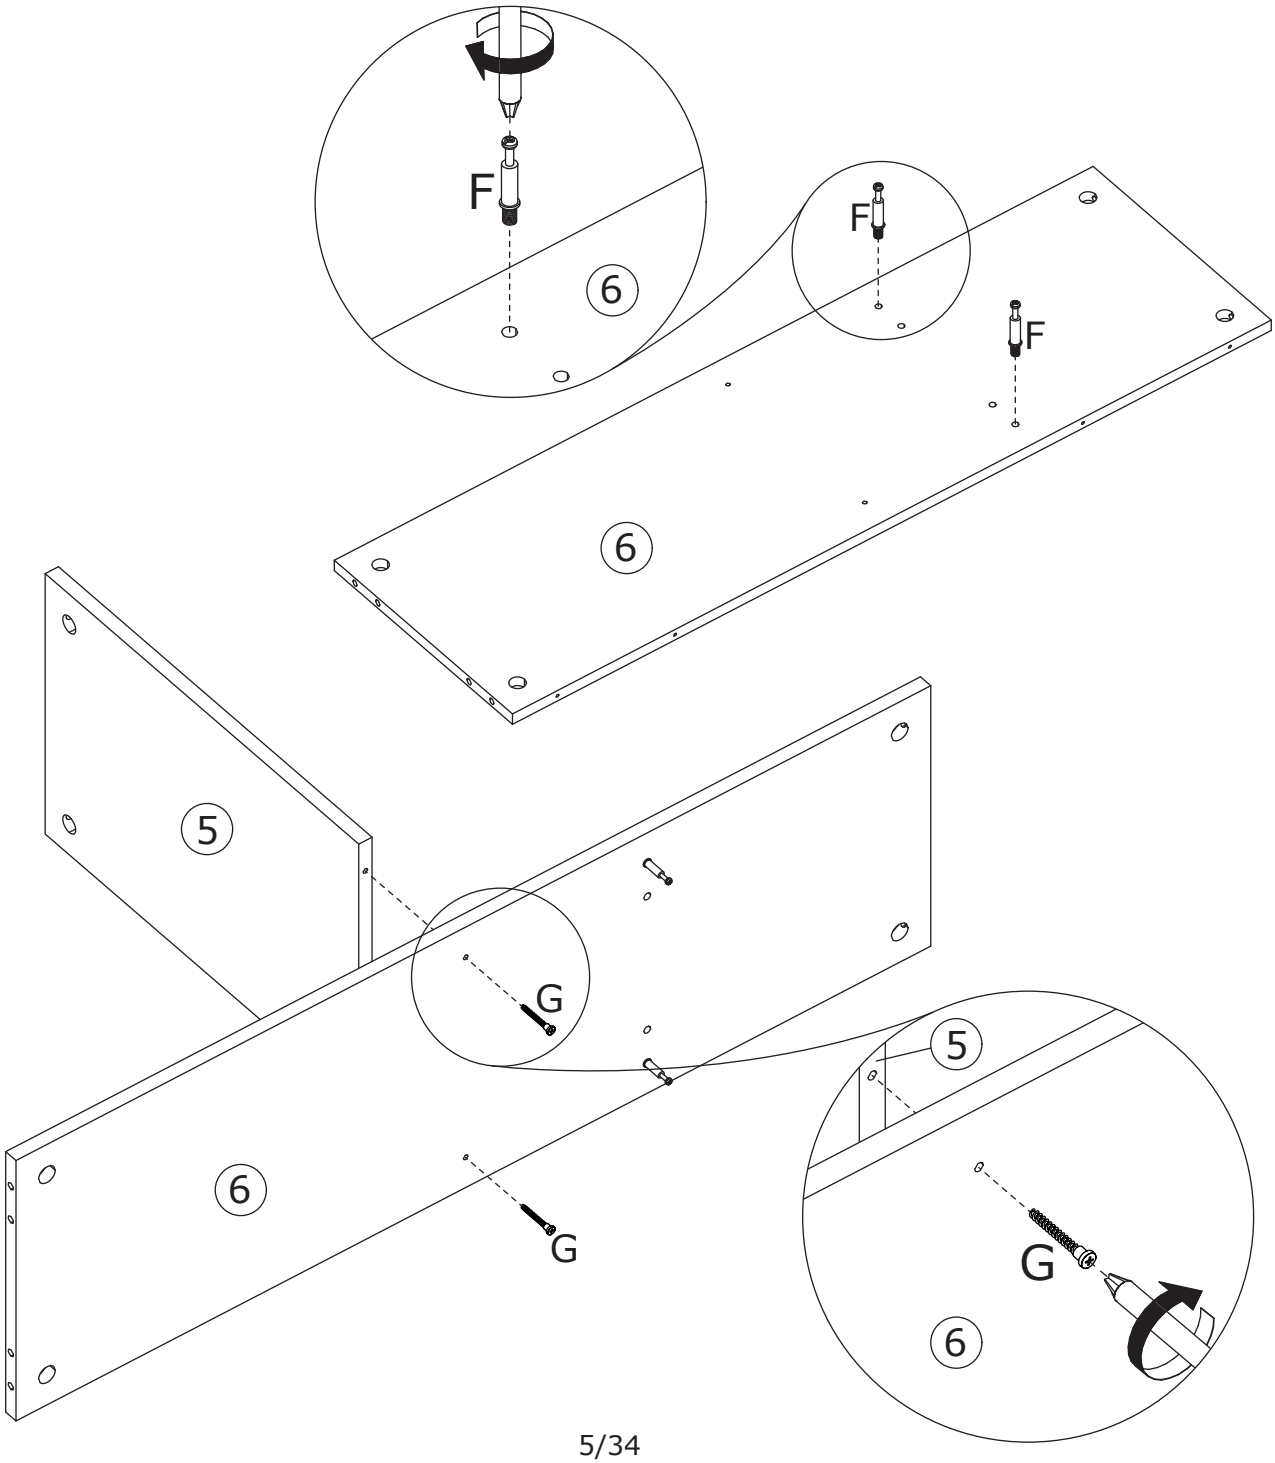


2

E x 2	H x 2	
		
∅15 x 9 mm	∅6 x 30 mm	

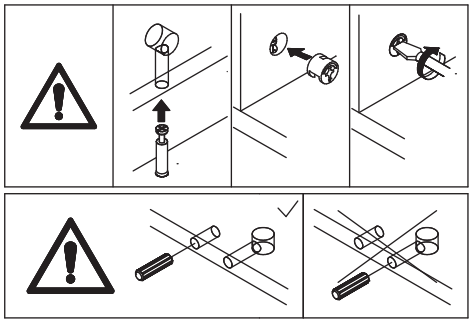


Connect board 5 to board 6 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

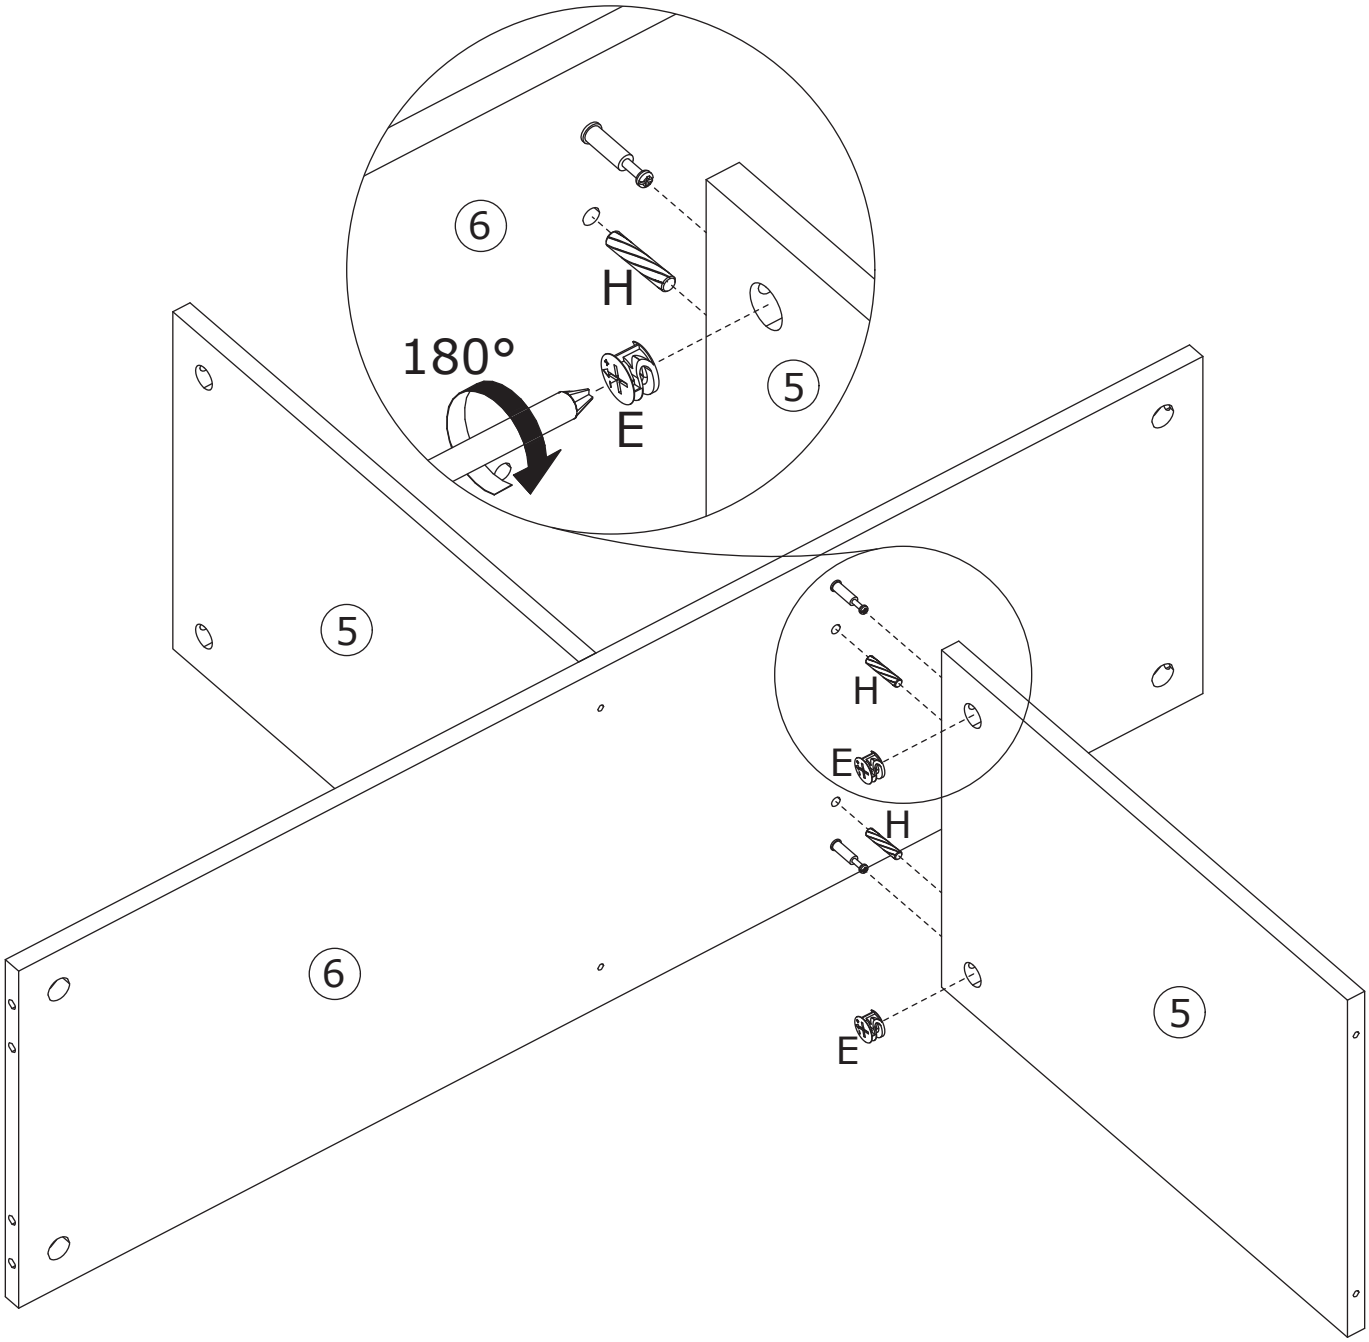



3

F x 2




∅6 x 35 mm





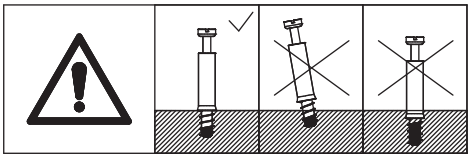


Screw eccentric rod (F) onto board 12.

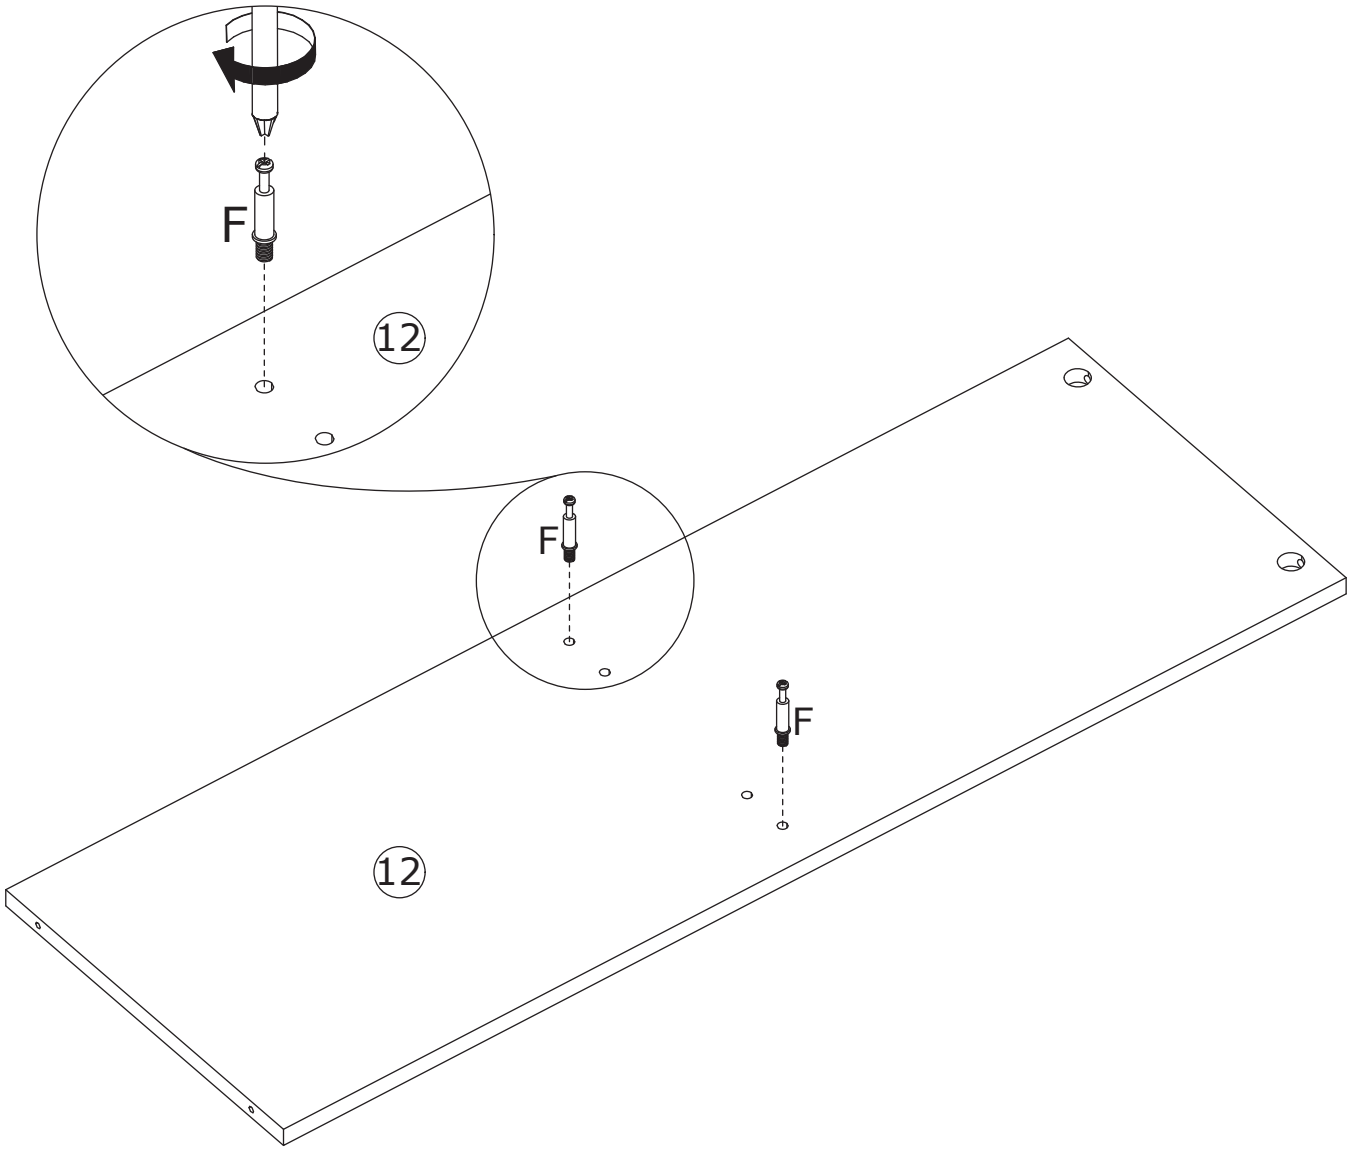


4

E x 2	H x 2	
		
∅15 x 9 mm	∅6 x 30 mm	

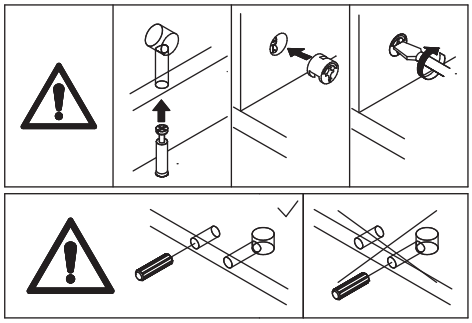


Connect board 6 to board 12 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

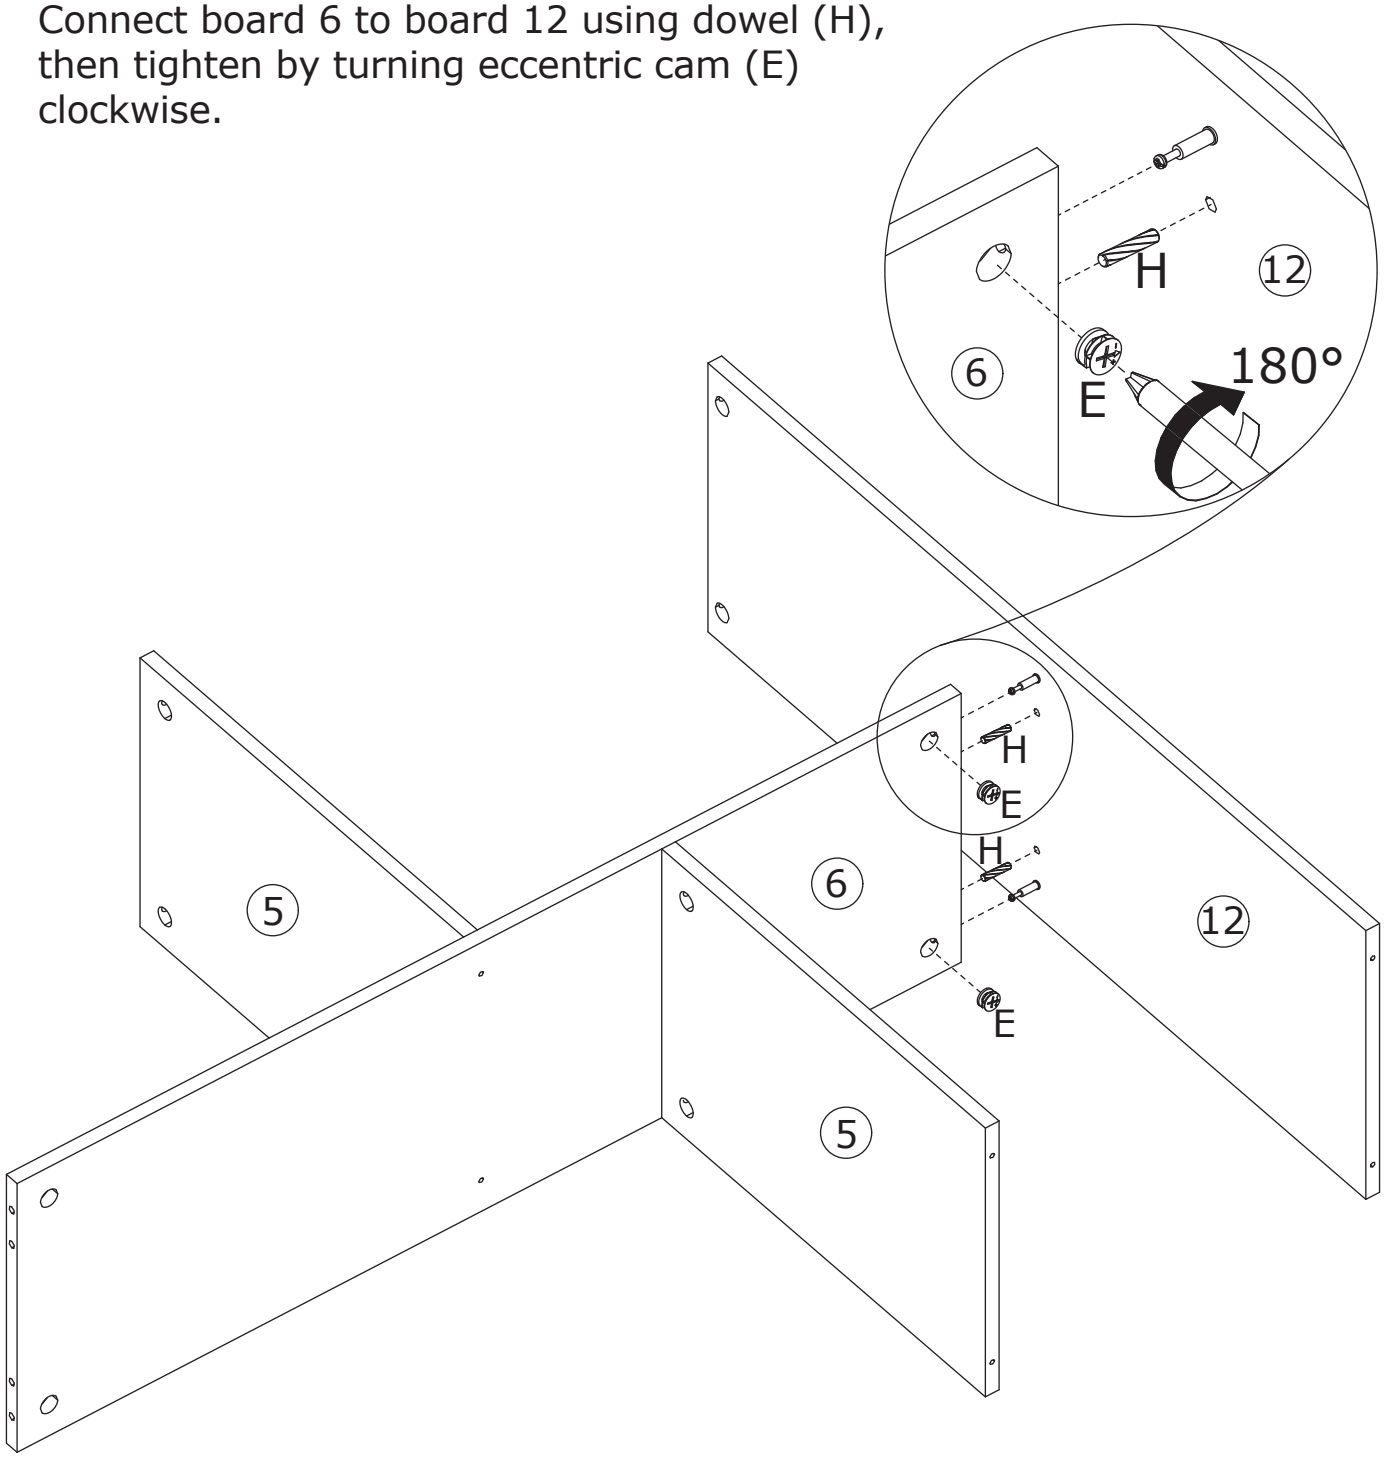



5

F x 8




∅6 x 35 mm





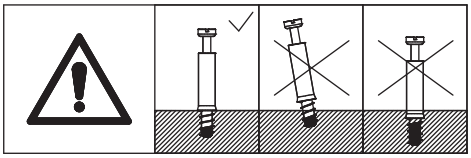


Screw eccentric rod (F) onto board 4 and 13.

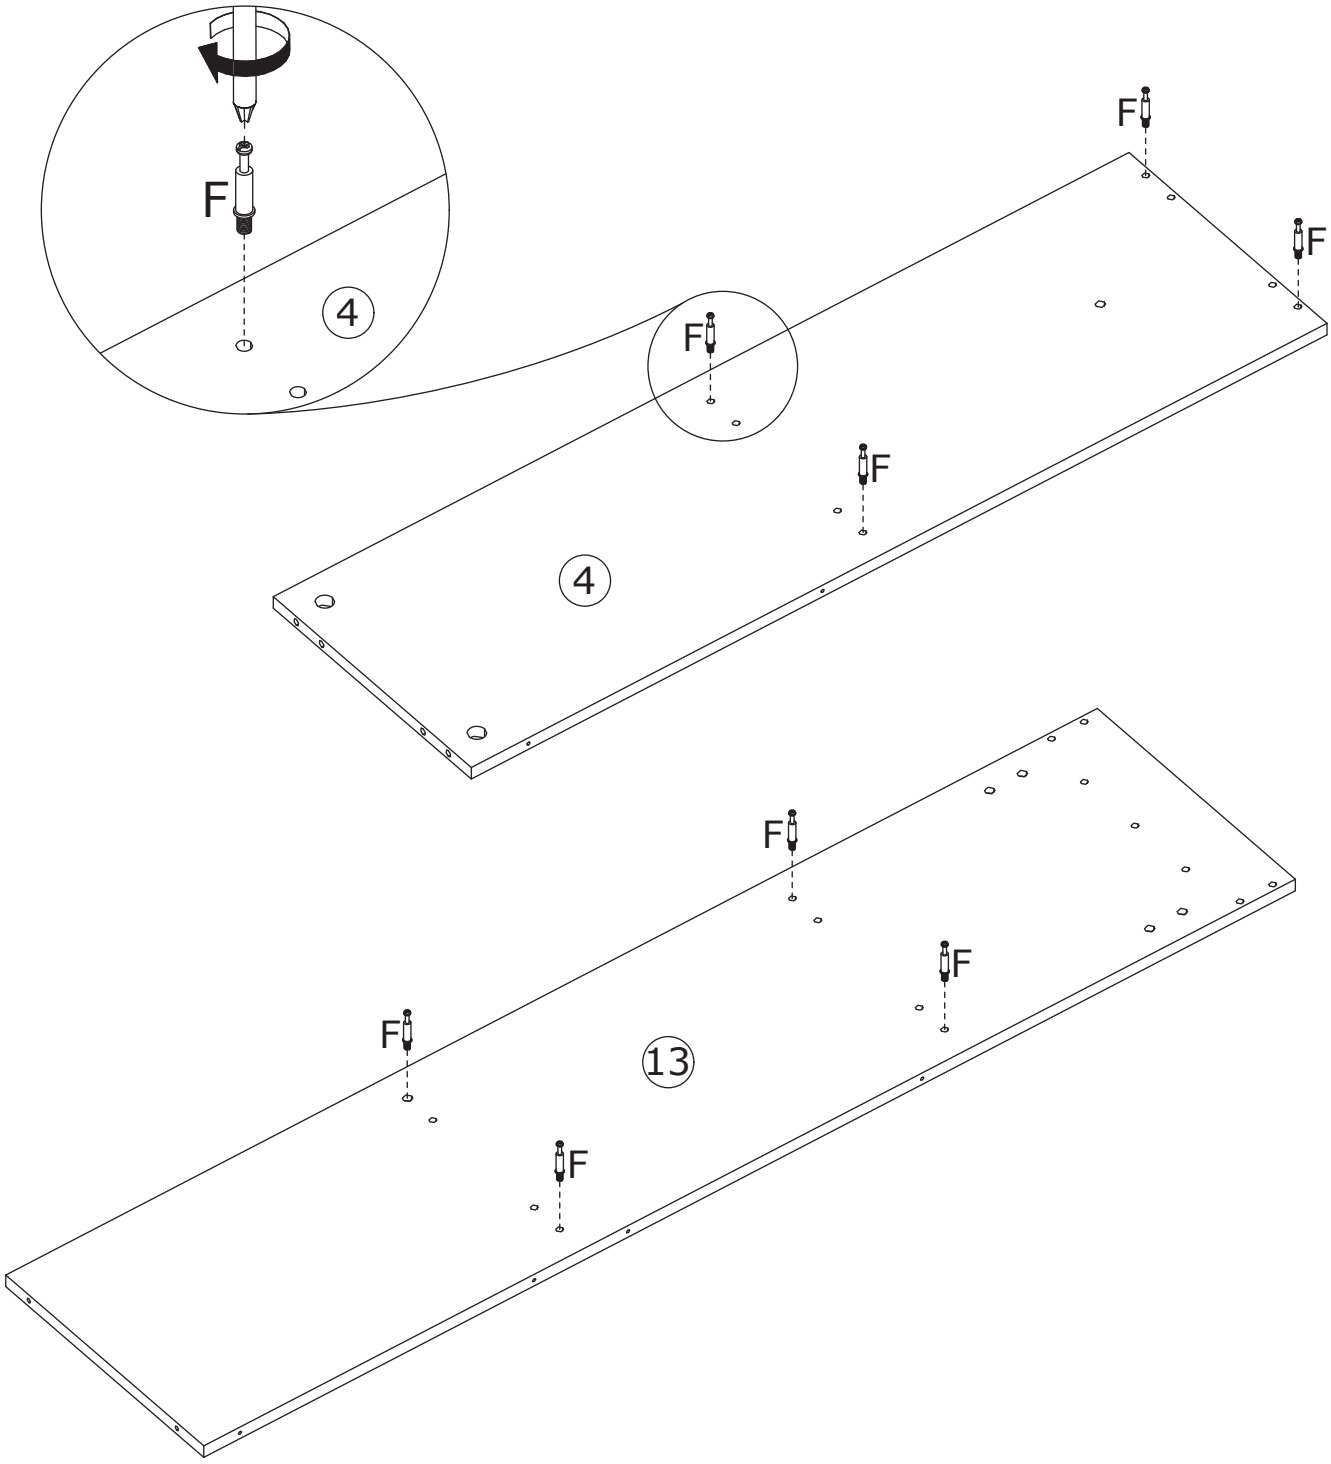


6



E x 4	H x 4	
		
∅15 x 9 mm	∅6 x 30 mm	

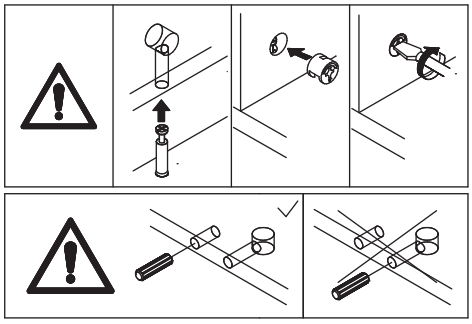


Connect board 4 to board 5 and 12 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

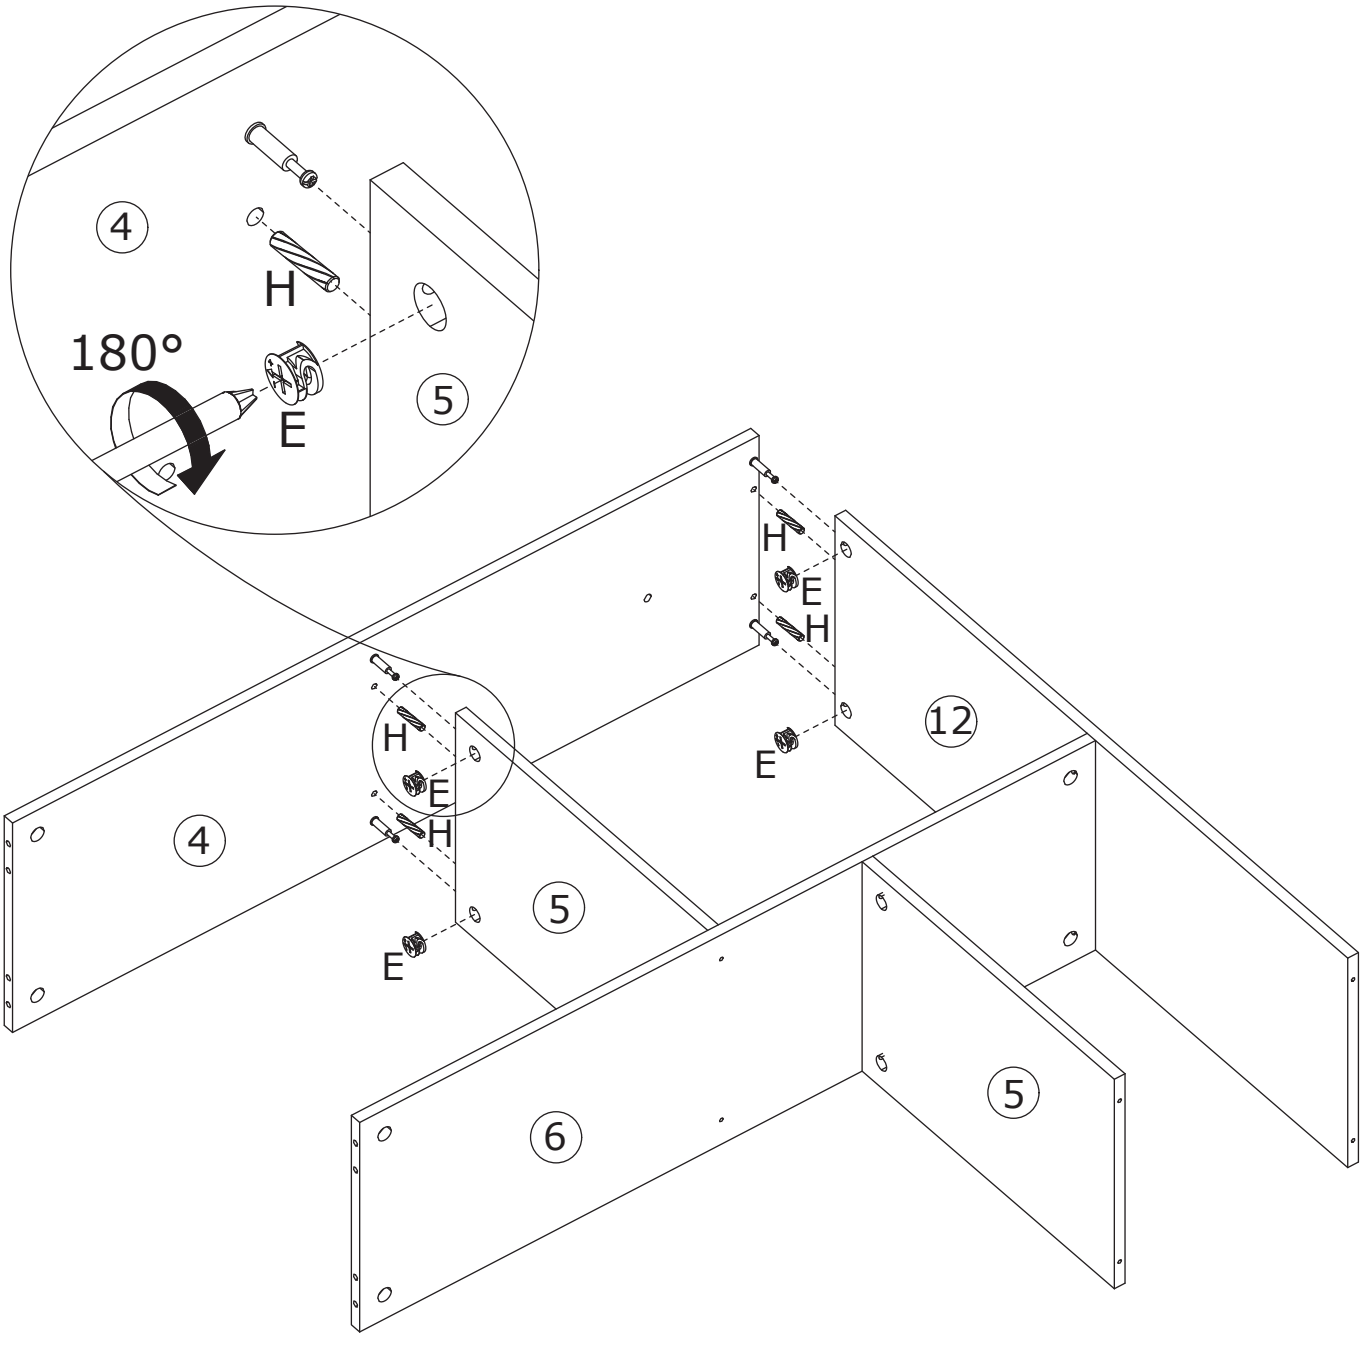


7

E x 4	H x 4	
		
∅15 x 9 mm	∅6 x 30 mm	

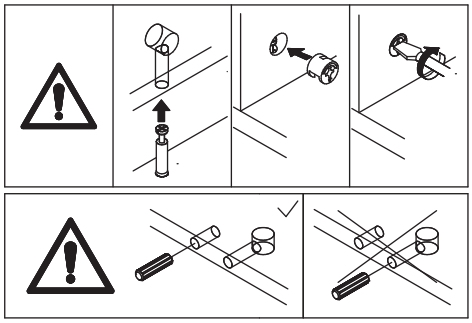


Connect board 13 to board 4 and 6 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

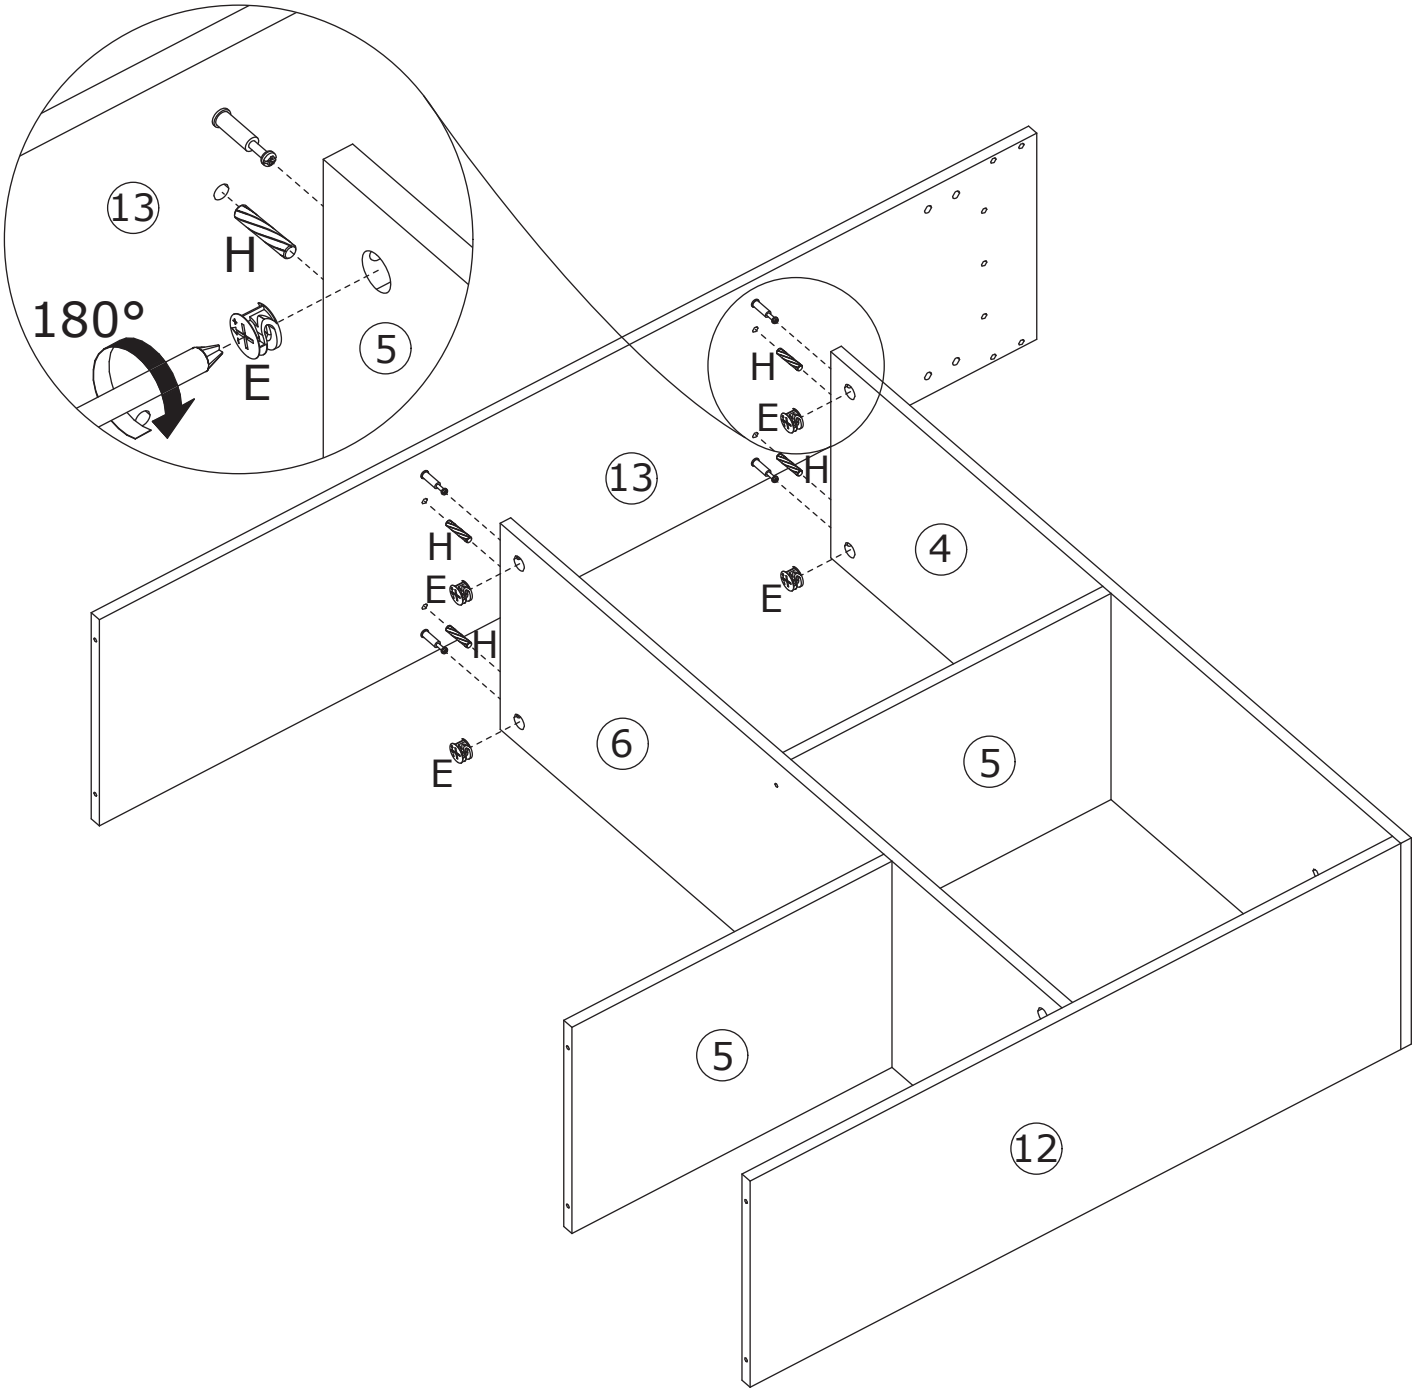


8


G x 6




∅5 x 48 mm




Secure board 10 to board 5, 12, and 13 using screw (G).

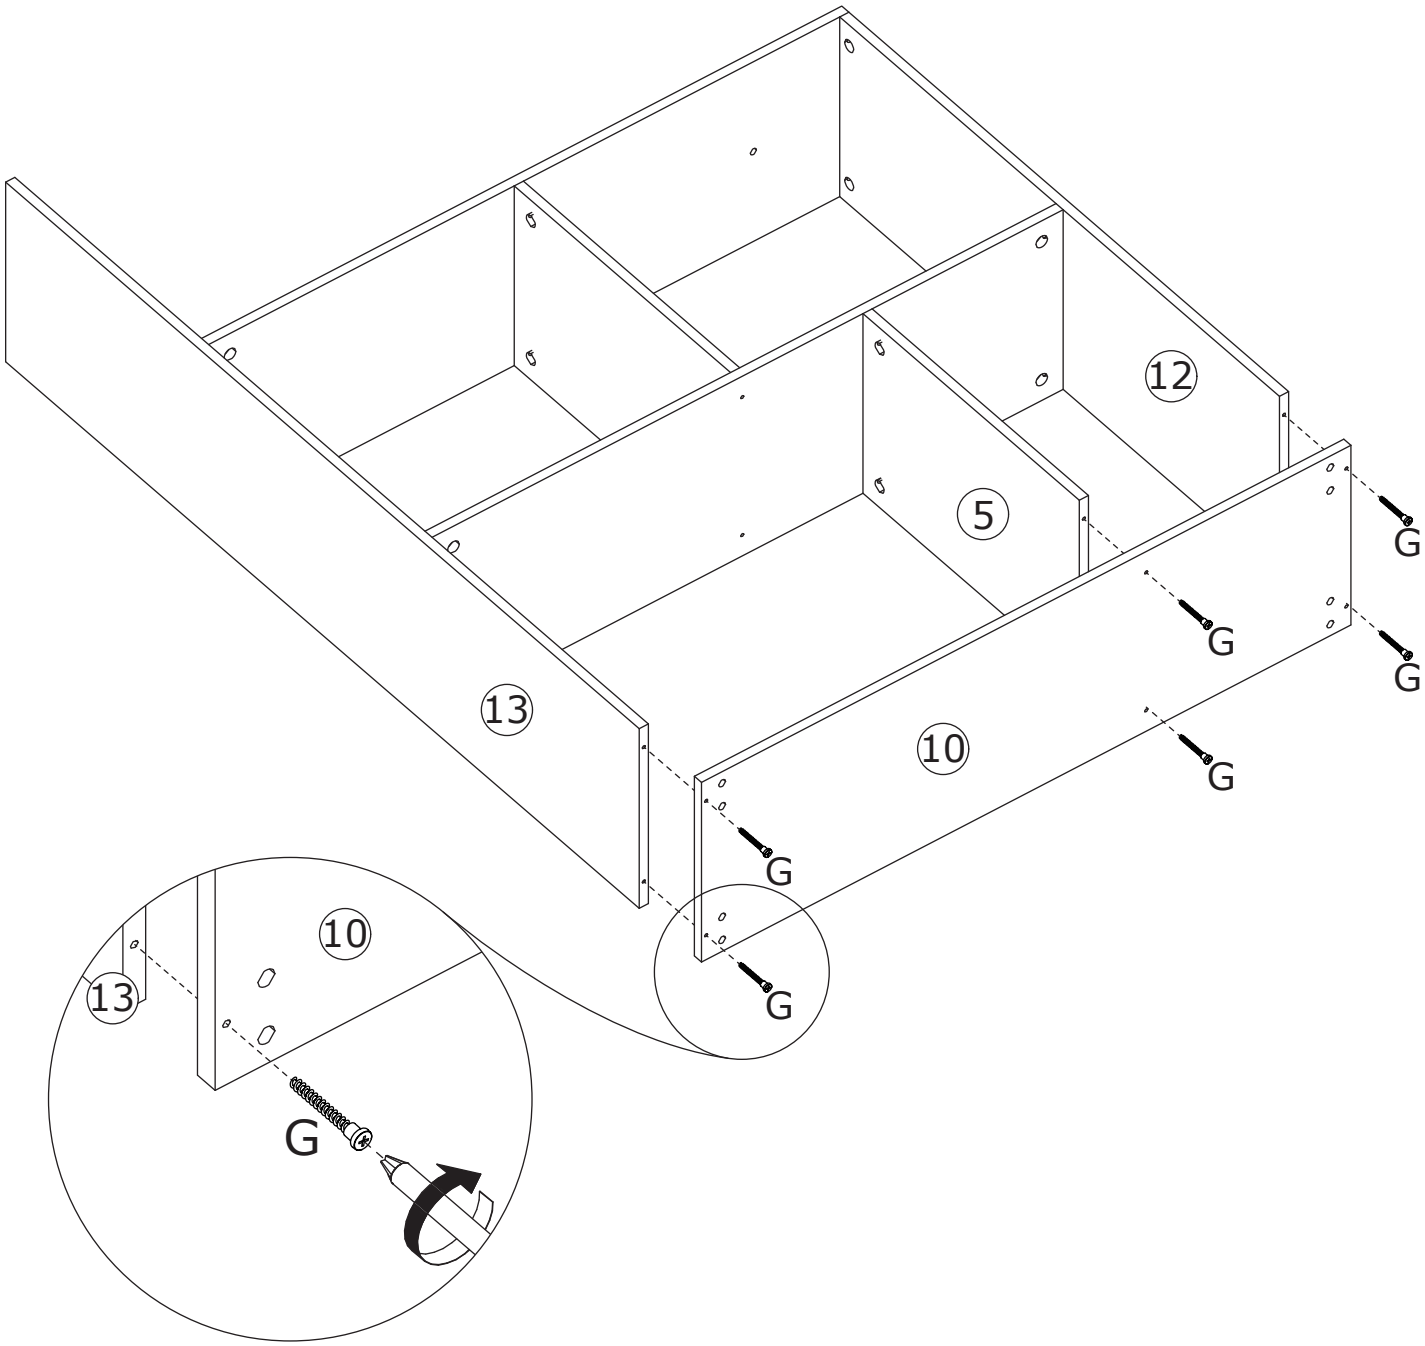

9


B x 8	I x 1	
 ∅6 x 20 mm		

Secure board 11 to board 10 using screw (B).



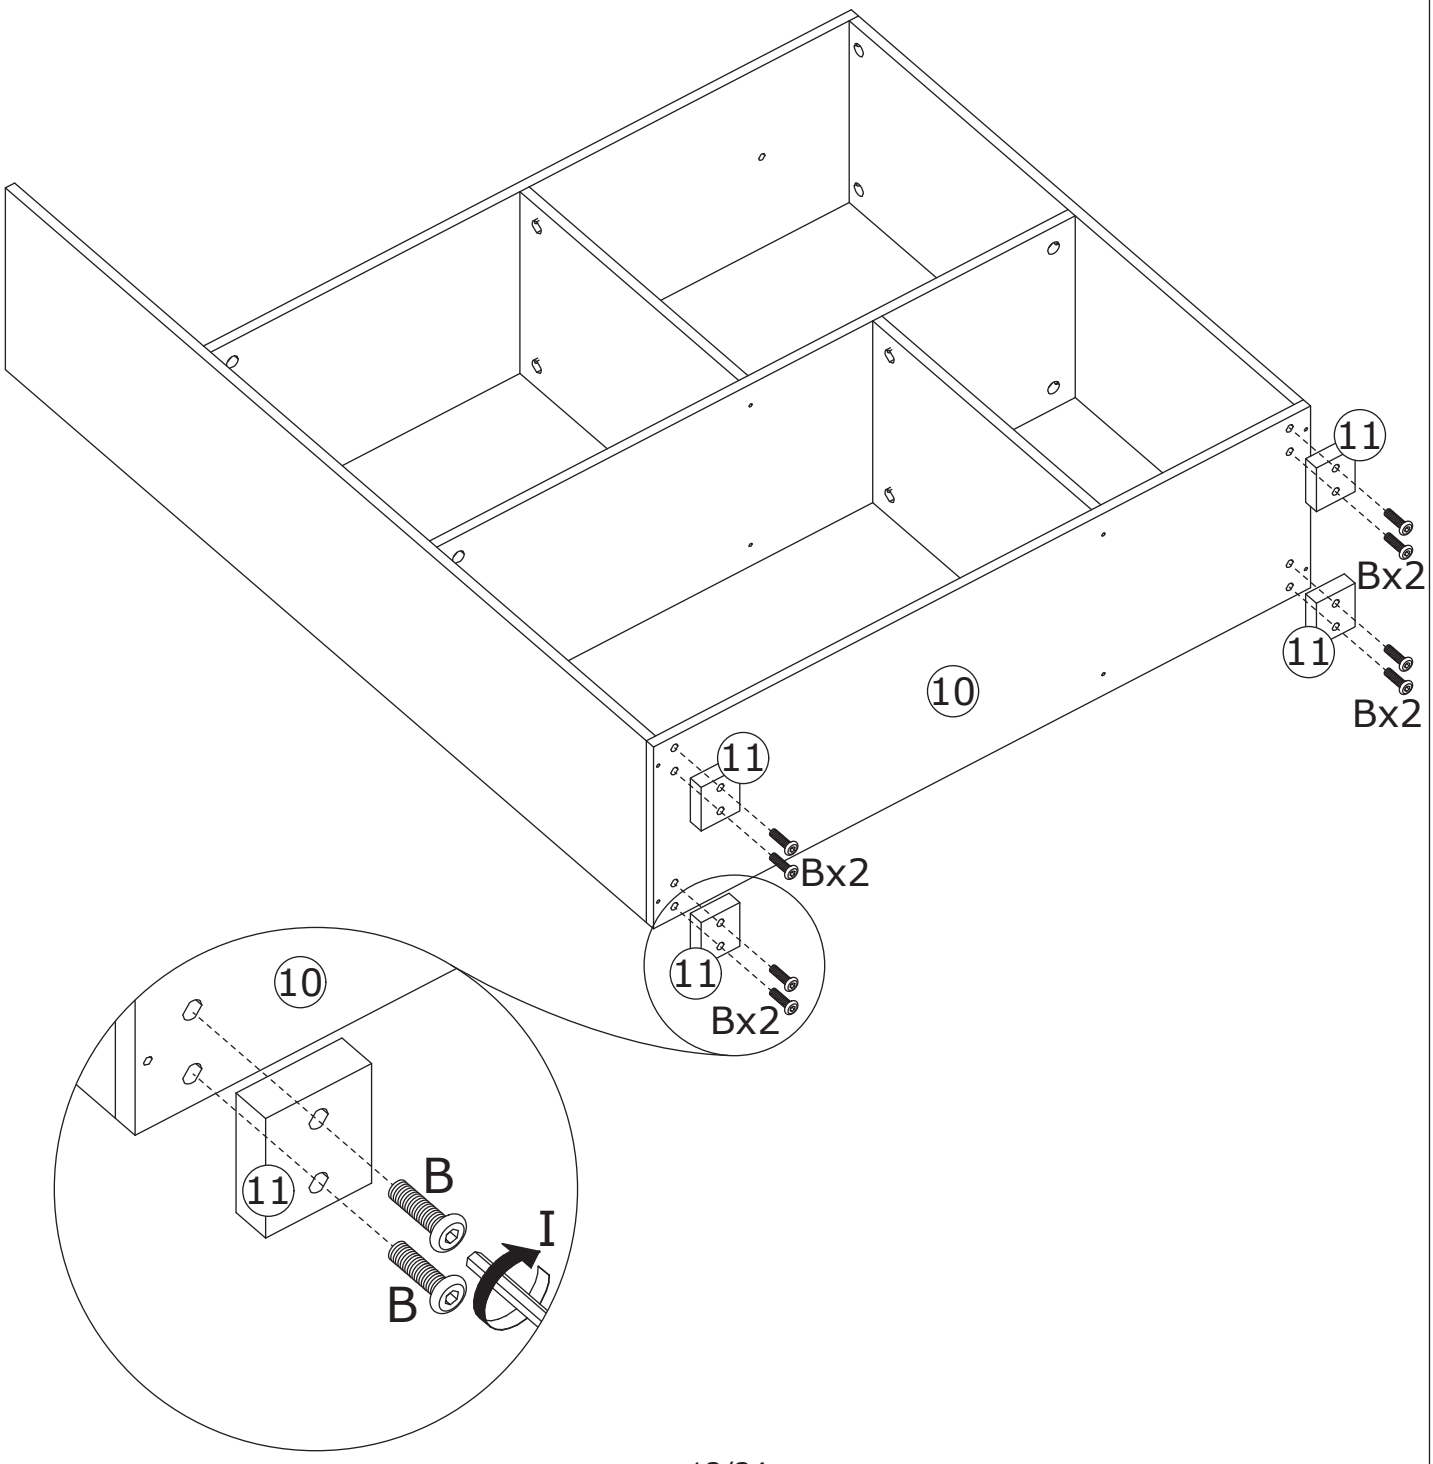



10

Attach foot pad 24 to board 11.

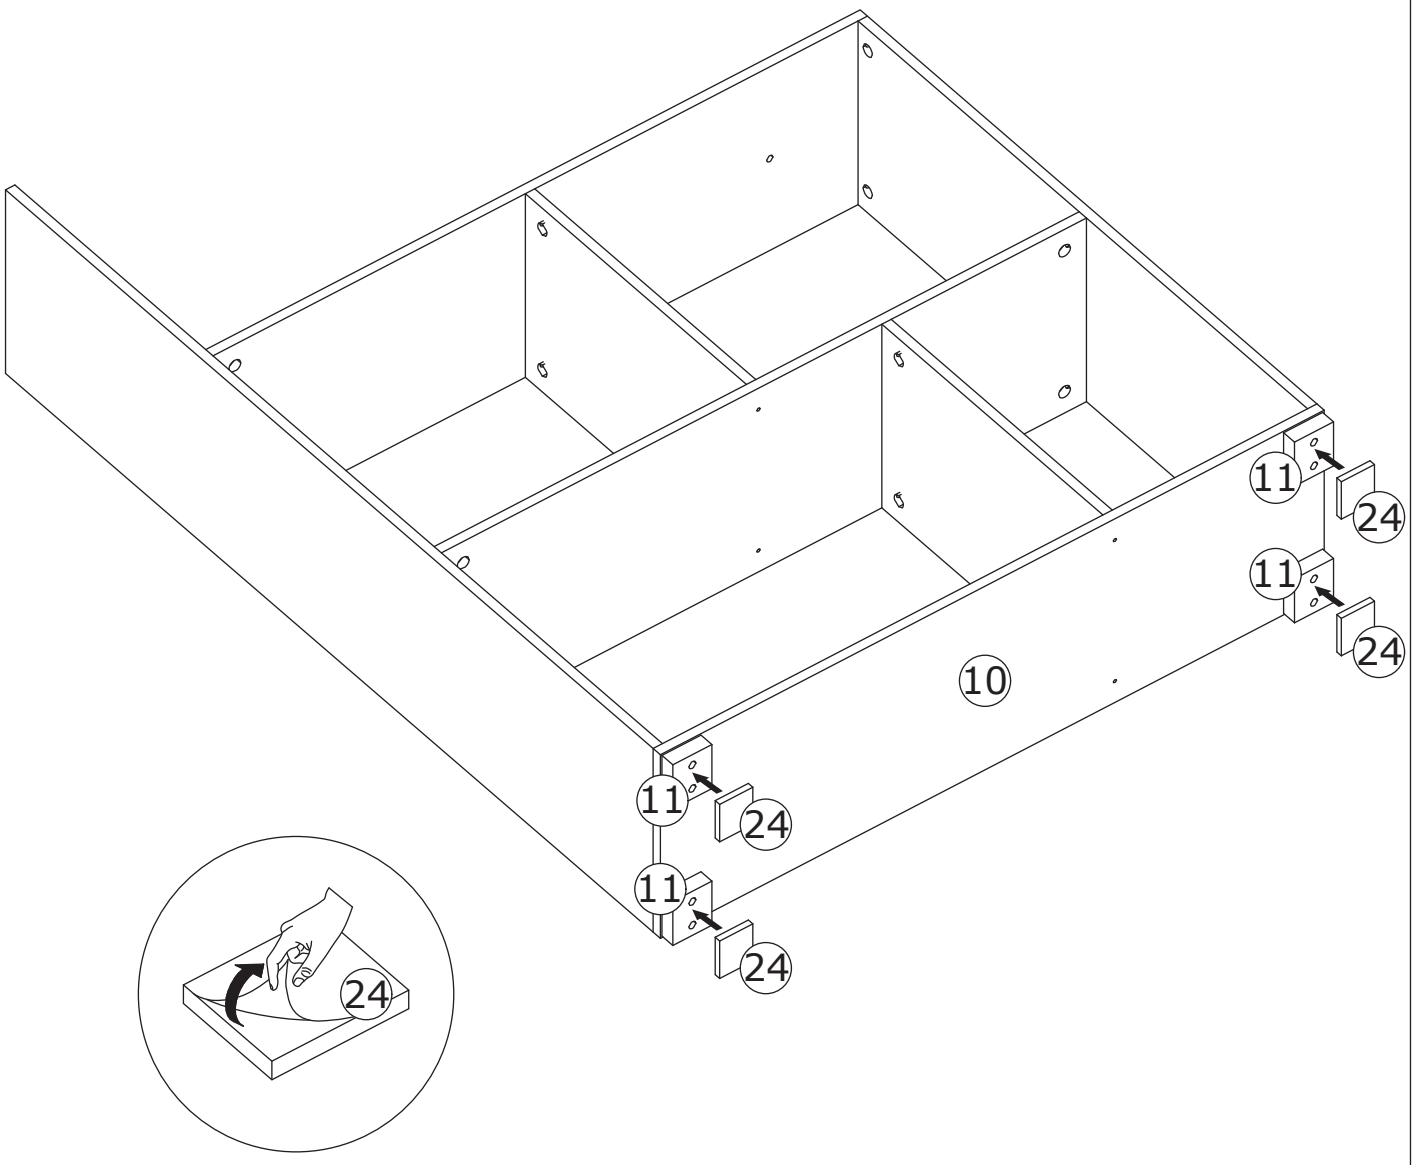



11

F x 6	H x 4	
		
∅6 x 35 mm	∅6 x 30 mm	


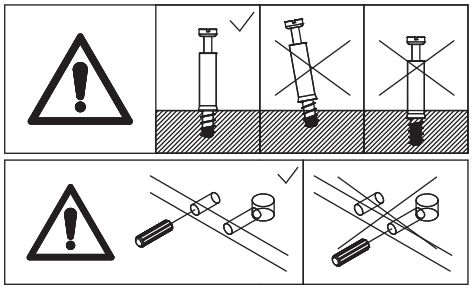



Screw eccentric rod (F) onto board 15.
Connect board 14 and 16 using dowel (H).

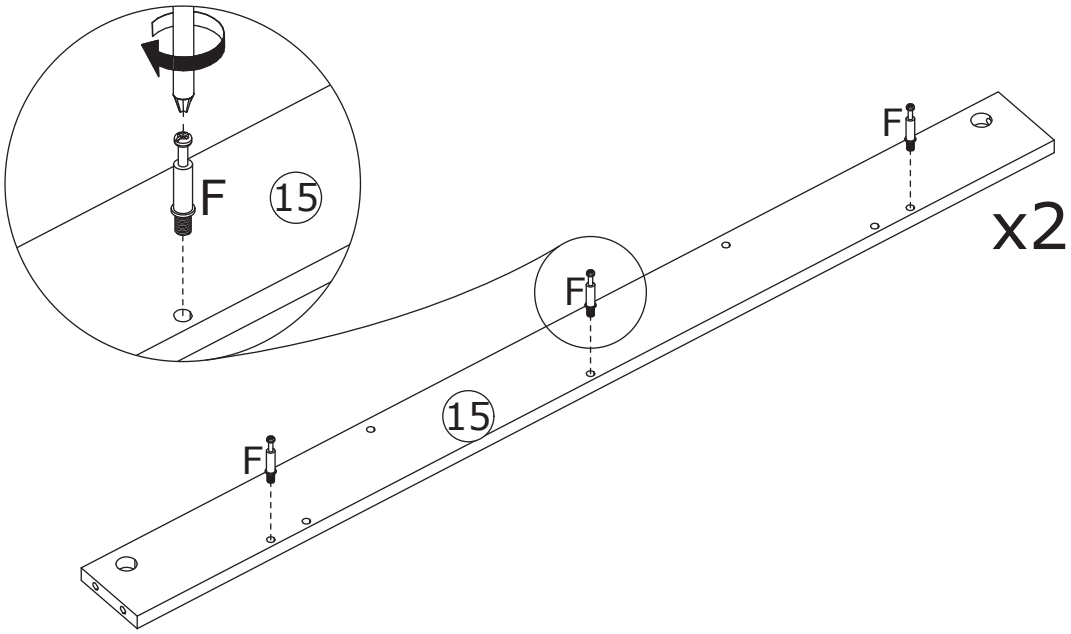

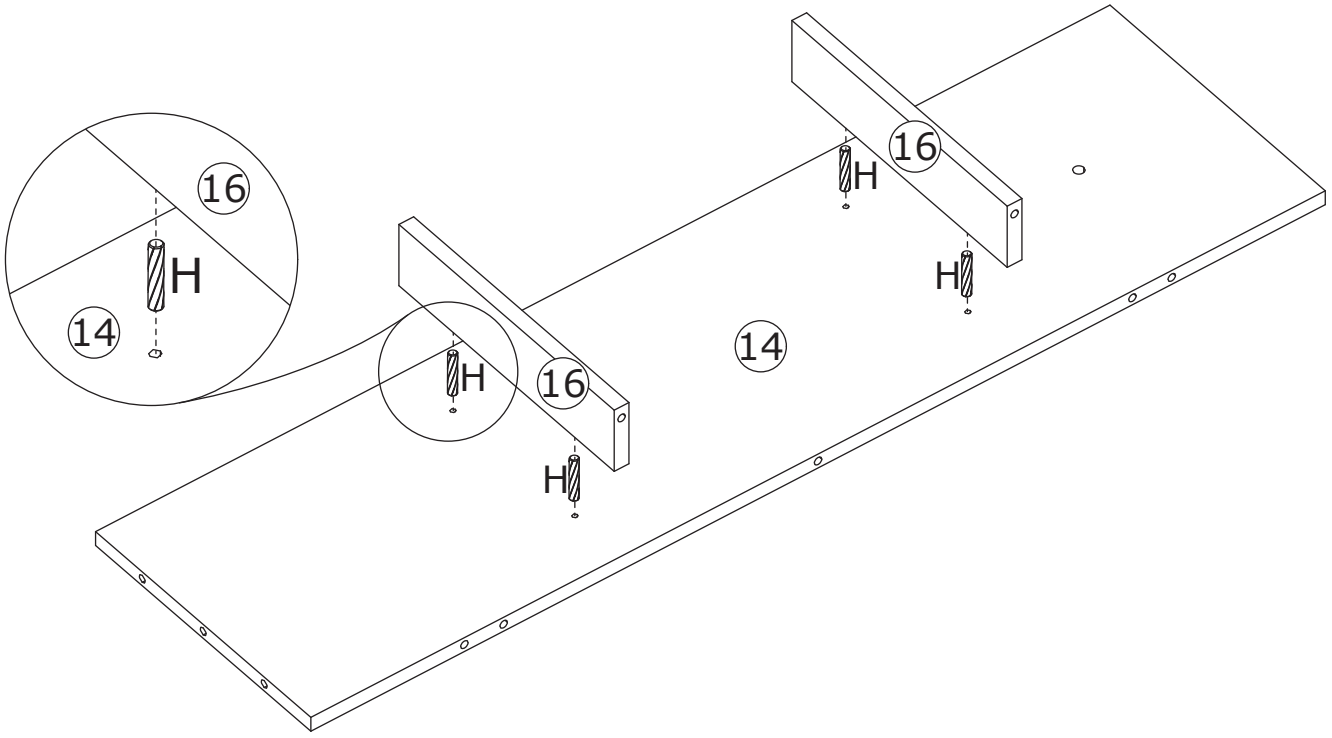


12


E x 6	H x 8	
		
∅15 x 9 mm	∅6 x 30 mm	

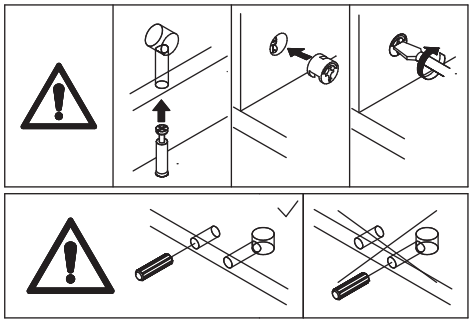


Connect wooden board 15 to board 14 and 16 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

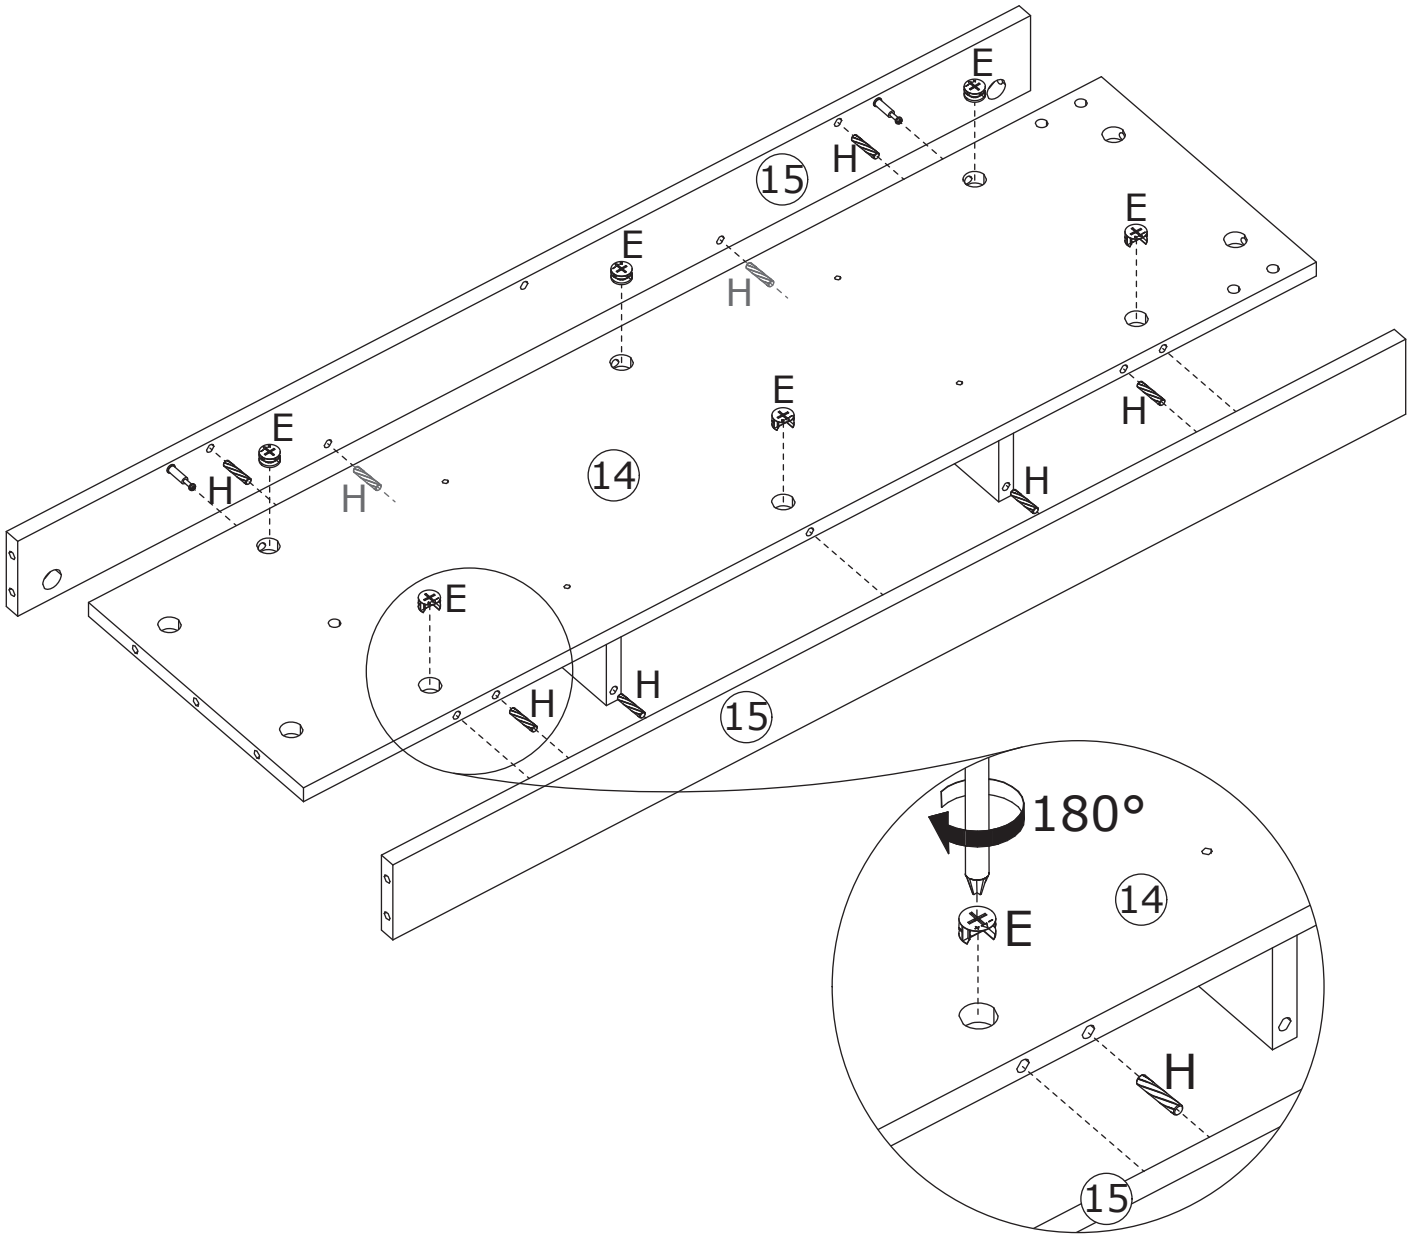

13


D x 4	I x 1	
 ∅6 x 10 mm		

Secure angle iron 22 to board 14 using screw (D).

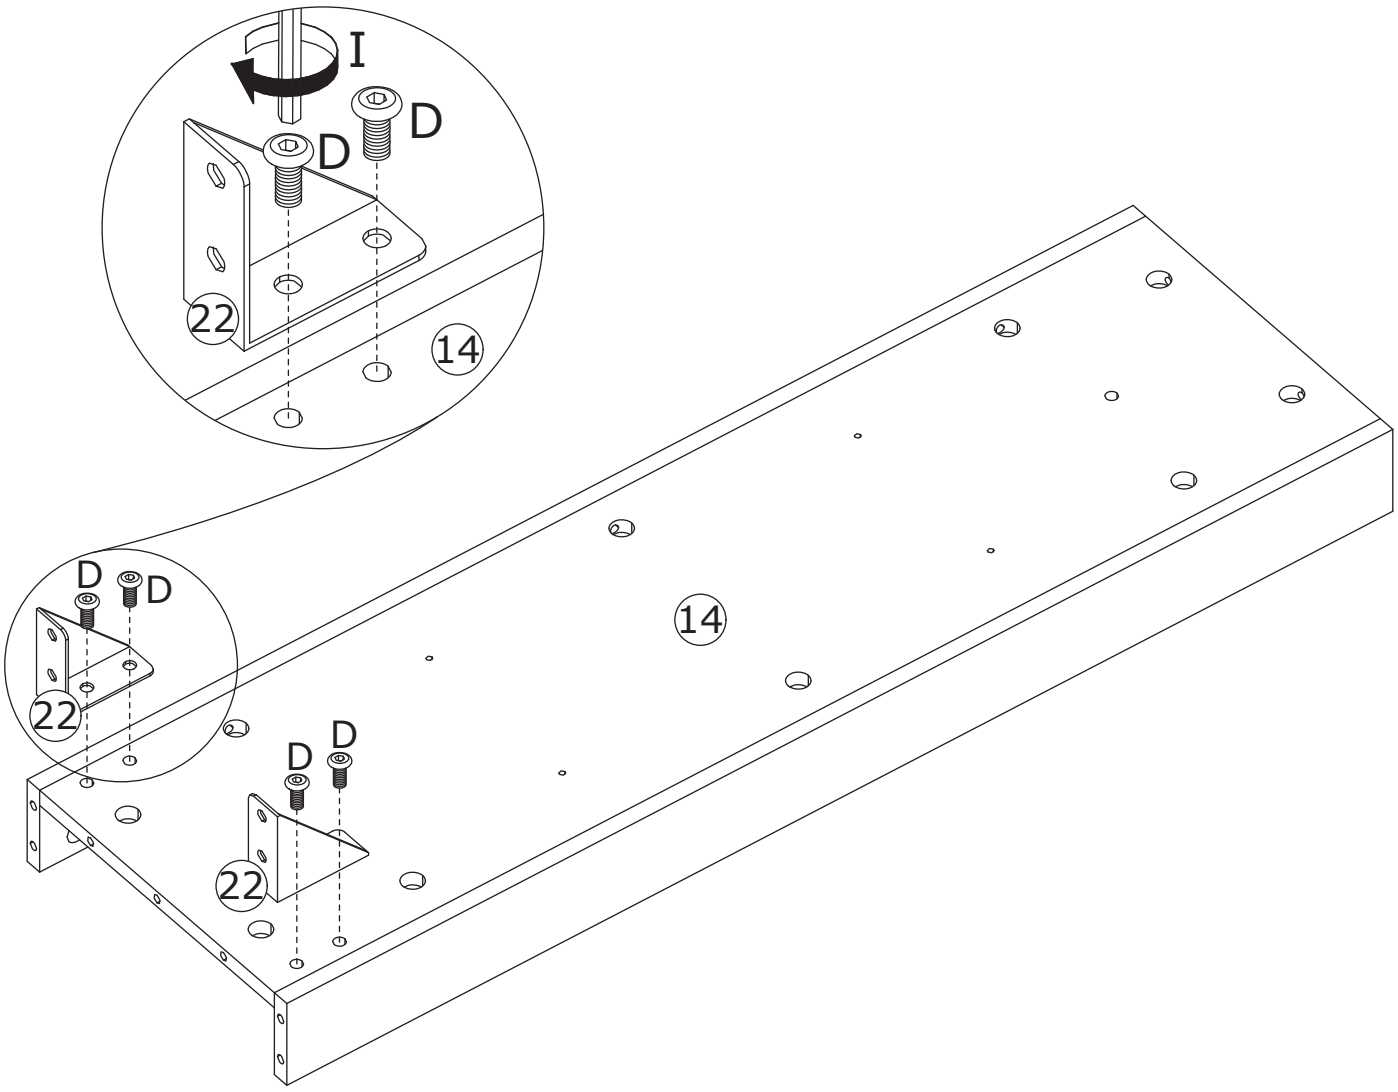



14

F x 8




∅6 x 35 mm





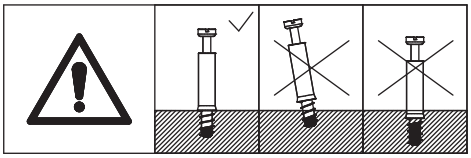


Screw eccentric rod (F) onto board 13 and 17.

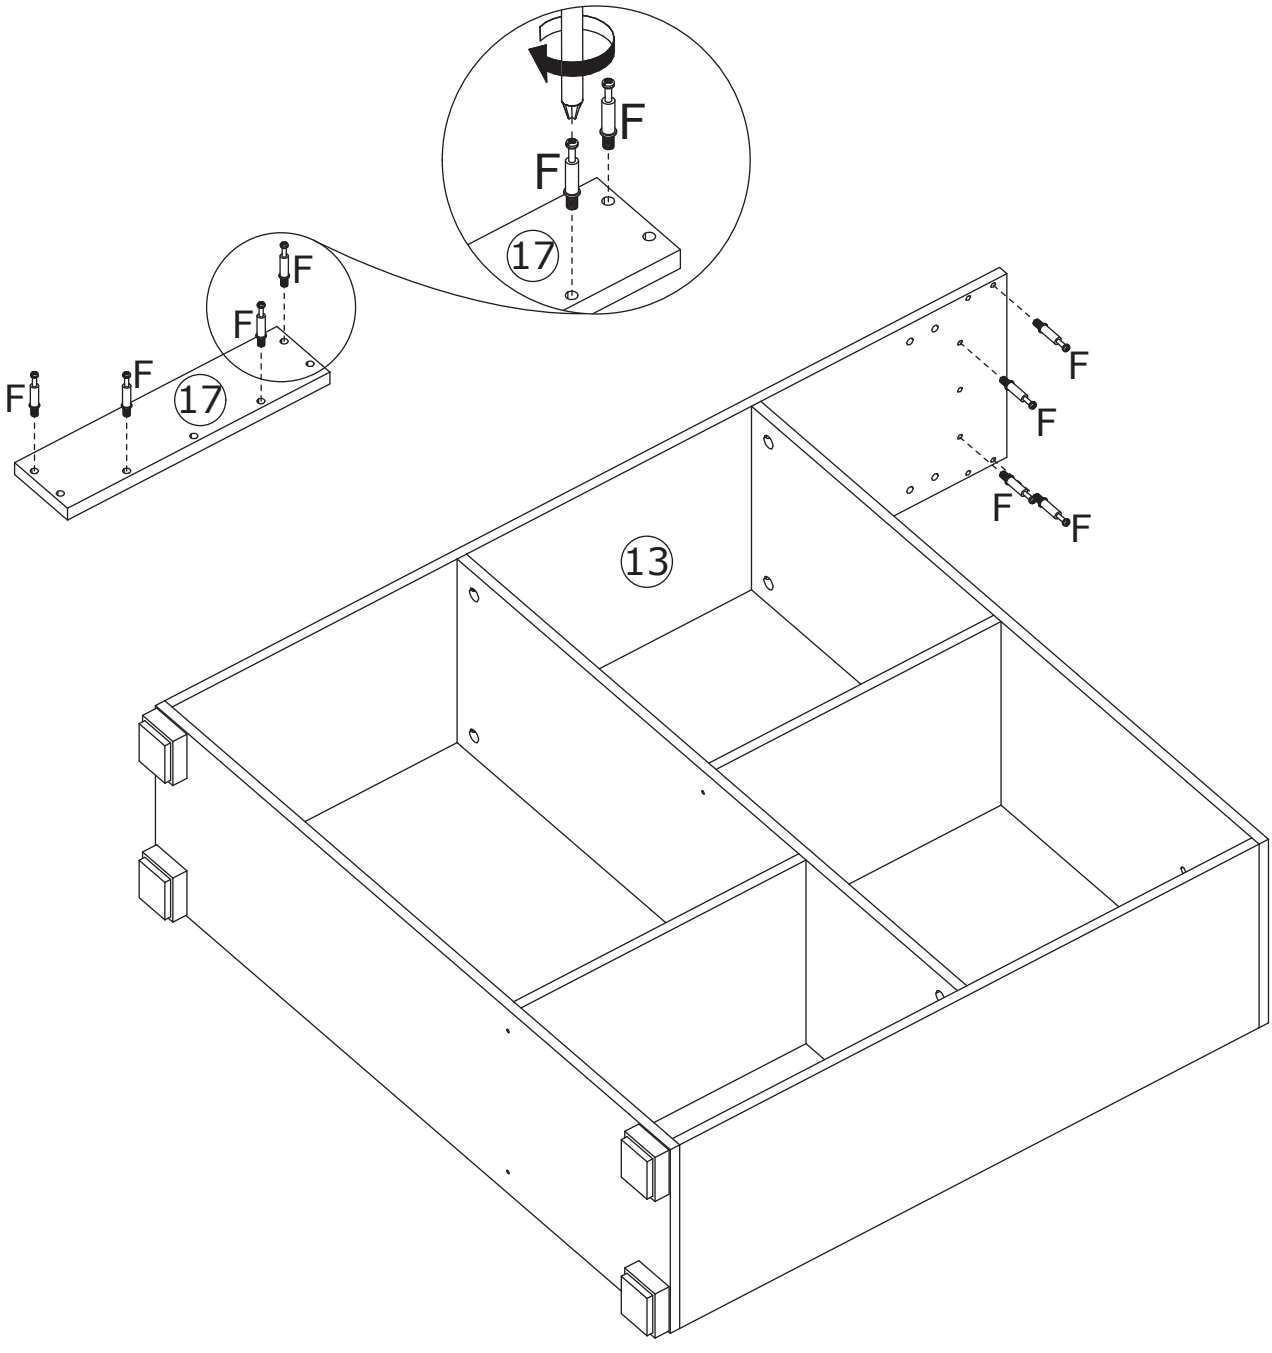



15

E x 2	H x 3	
		
∅15 x 9 mm	∅6 x 30 mm	


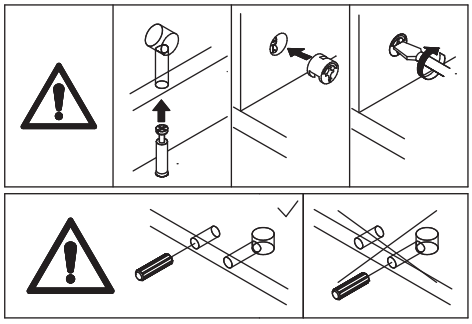


Connect board 13 to board 14 and 15 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

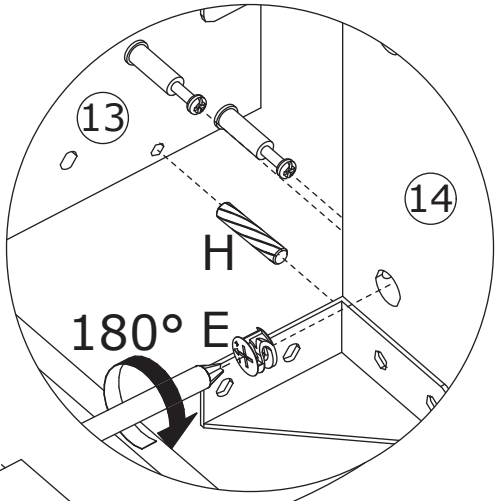


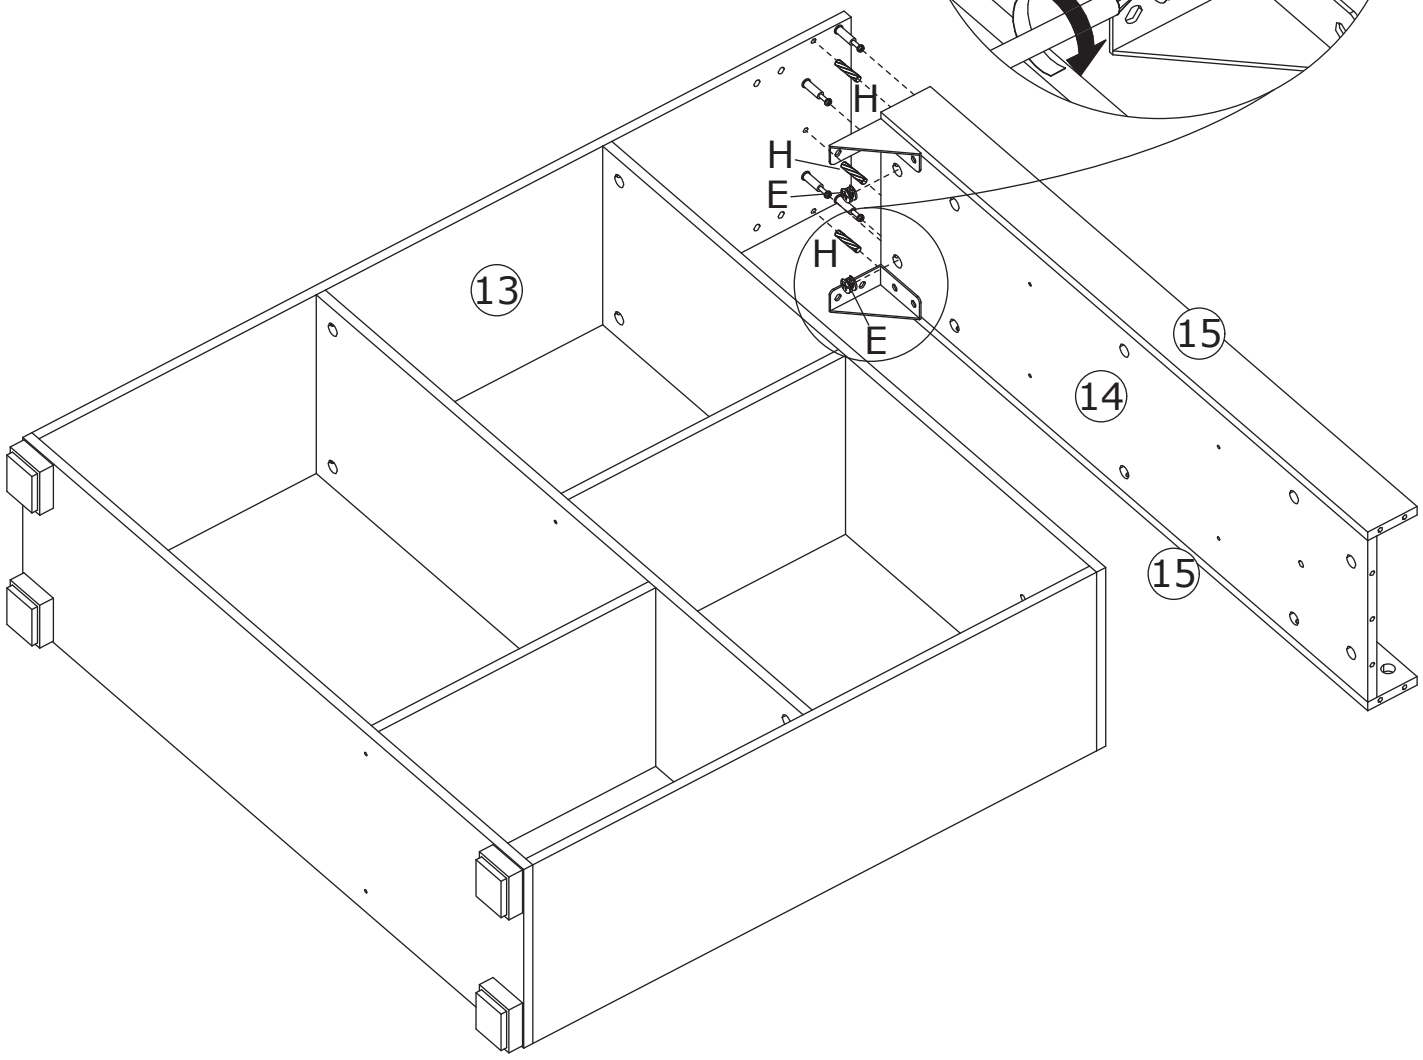



16


D x 4	I x 1	
 ∅6 x 10 mm		

Secure angle iron 22 to board 13 using screw (D).

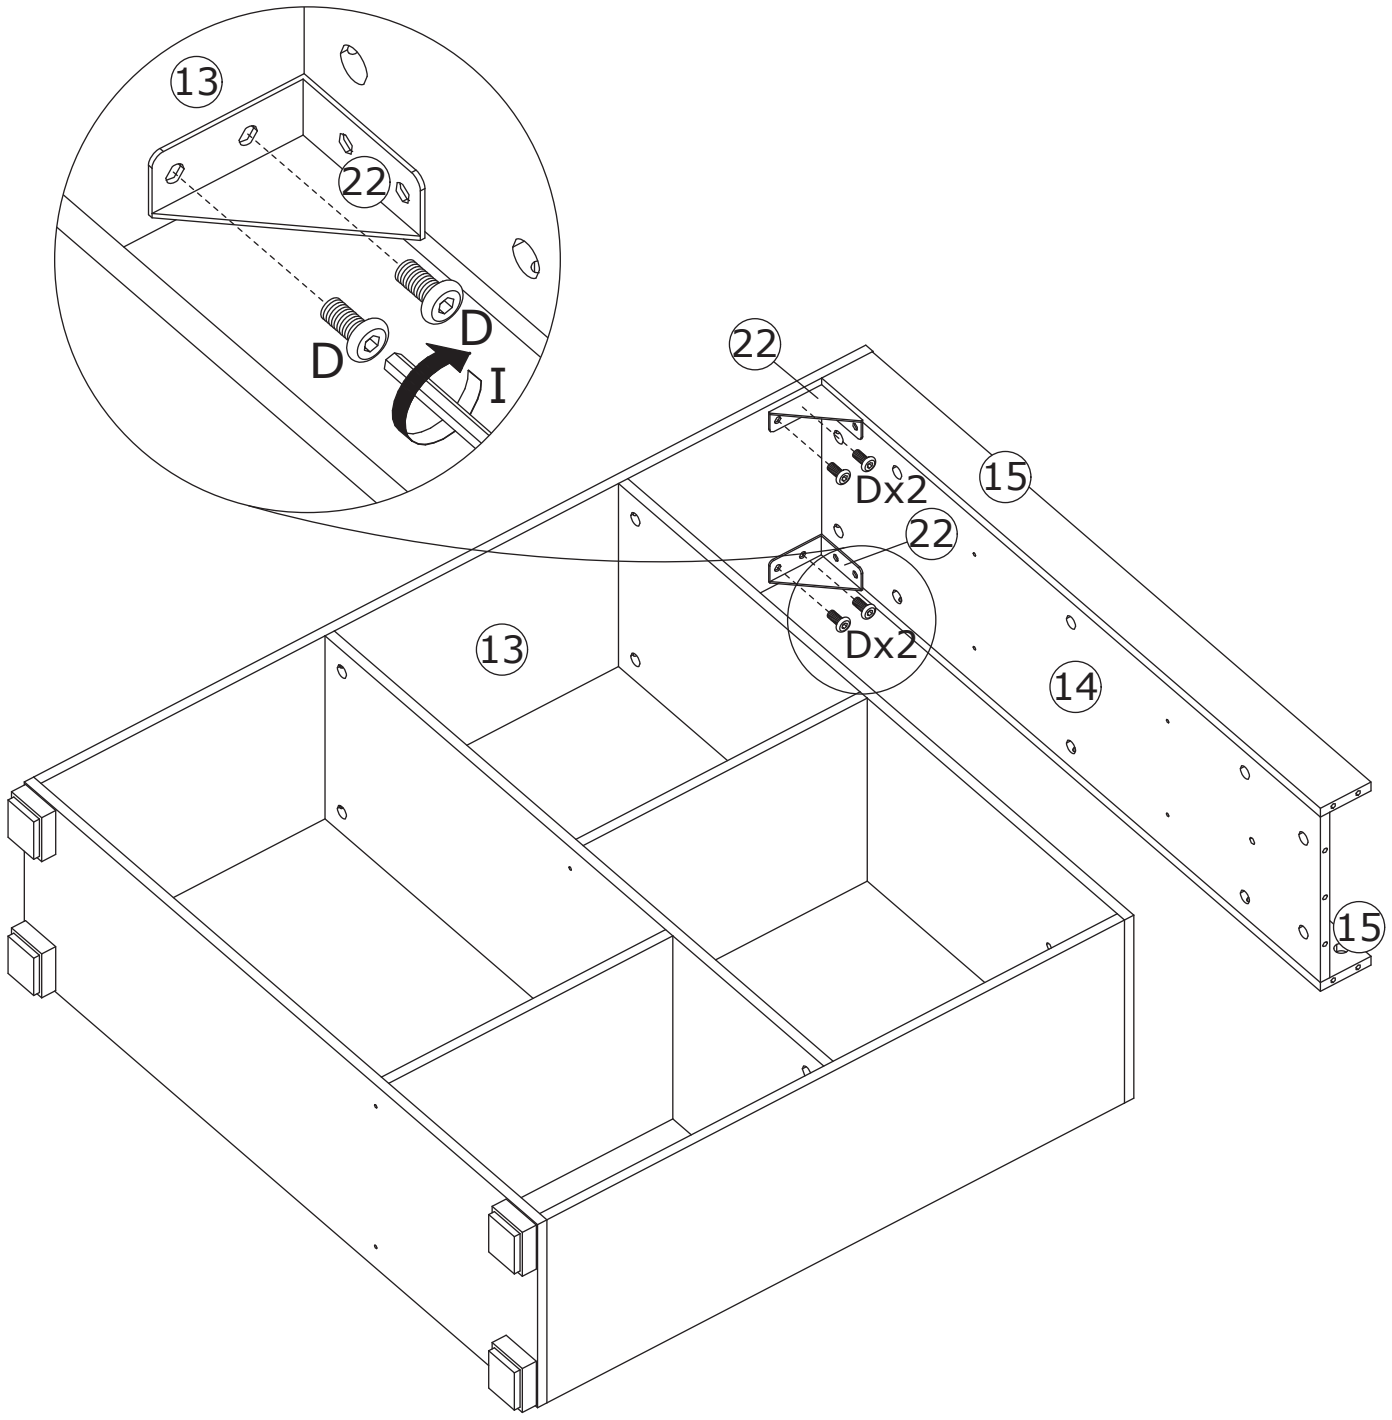


17



E x 2	H x 3	
		
∅15 x 9 mm	∅6 x 30 mm	

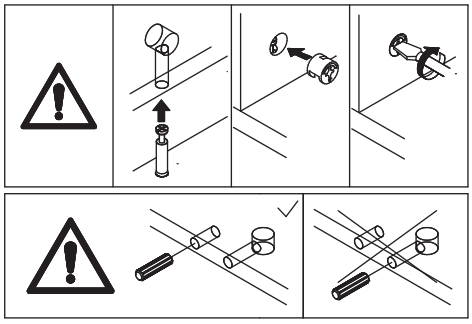


Connect board 17 to board 14 and 15 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

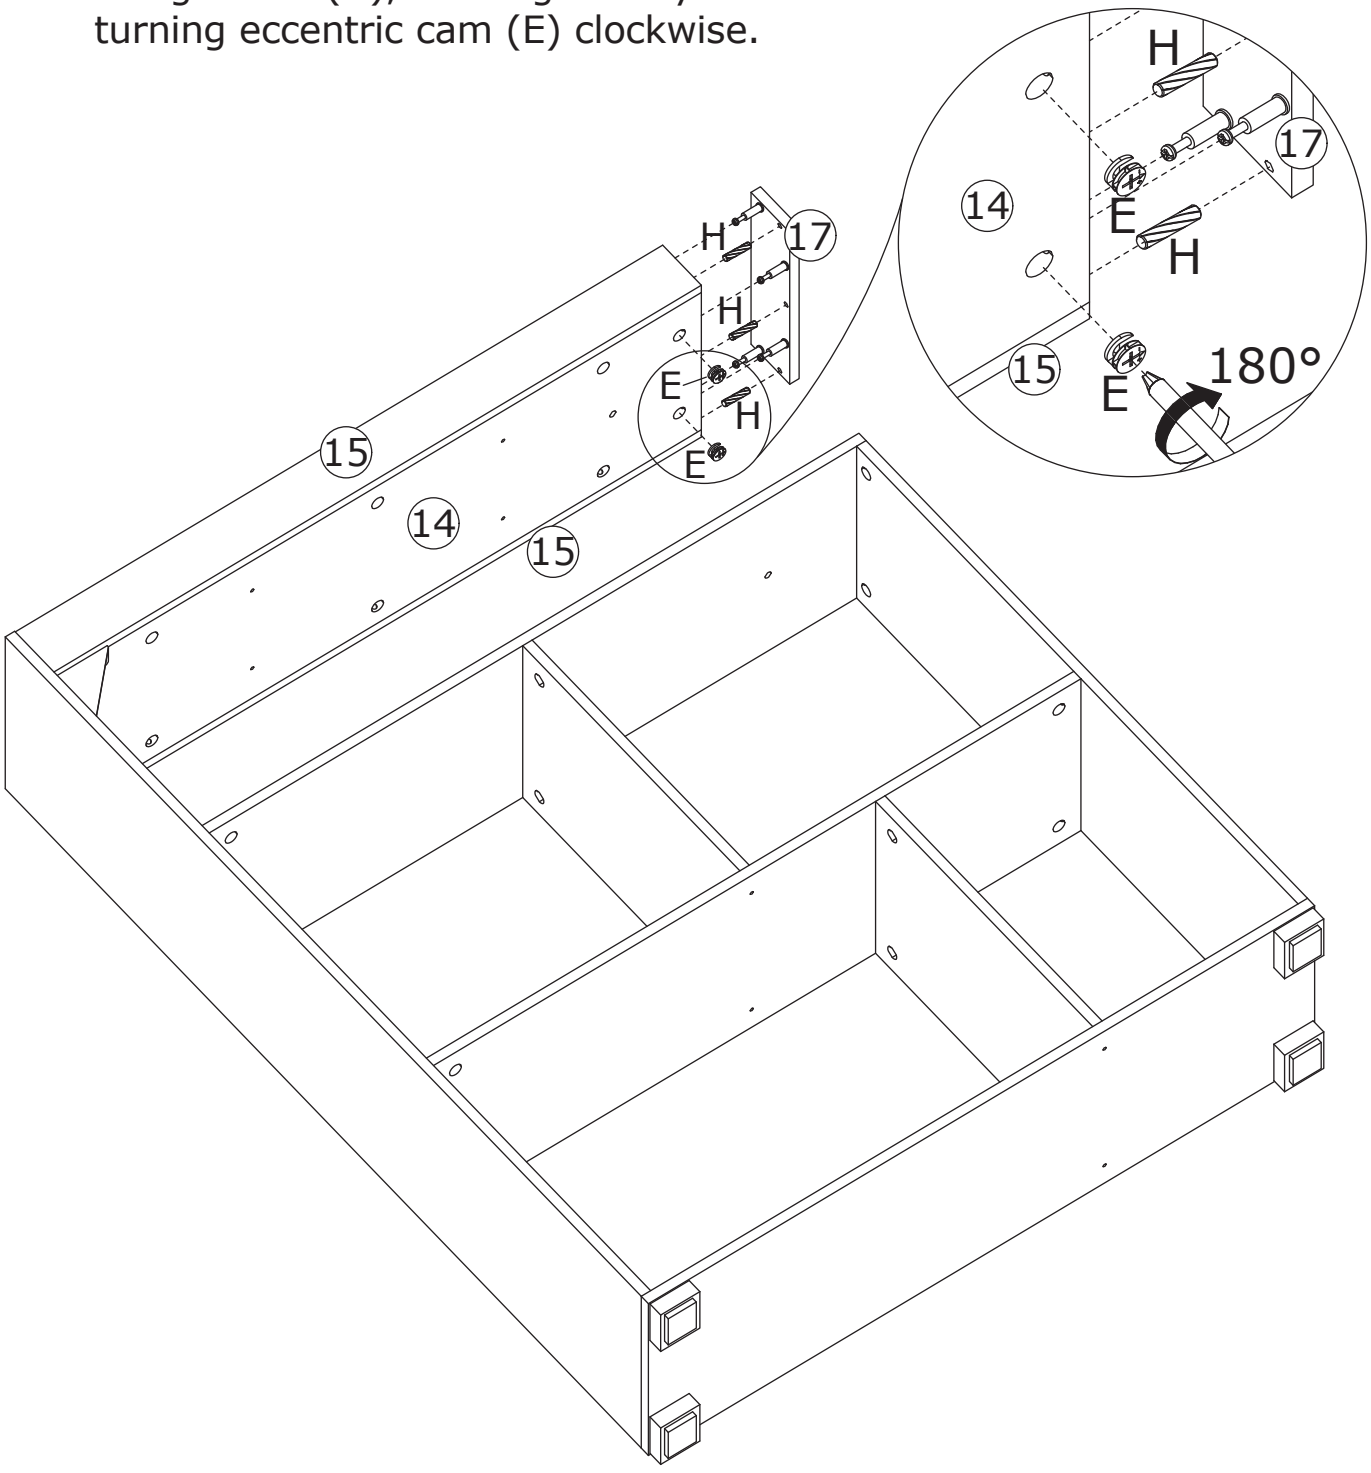


18

A x 20	E x 4	
		
∅3.5 x 12 mm	∅15 x 9 mm	

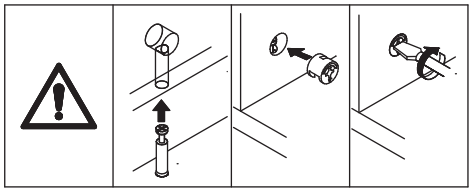


Put cam lock (E) to board 15 and tighten by turning them clockwise.
Secure board 7, 8, 9 and 10 to the unit usin g screw (A).

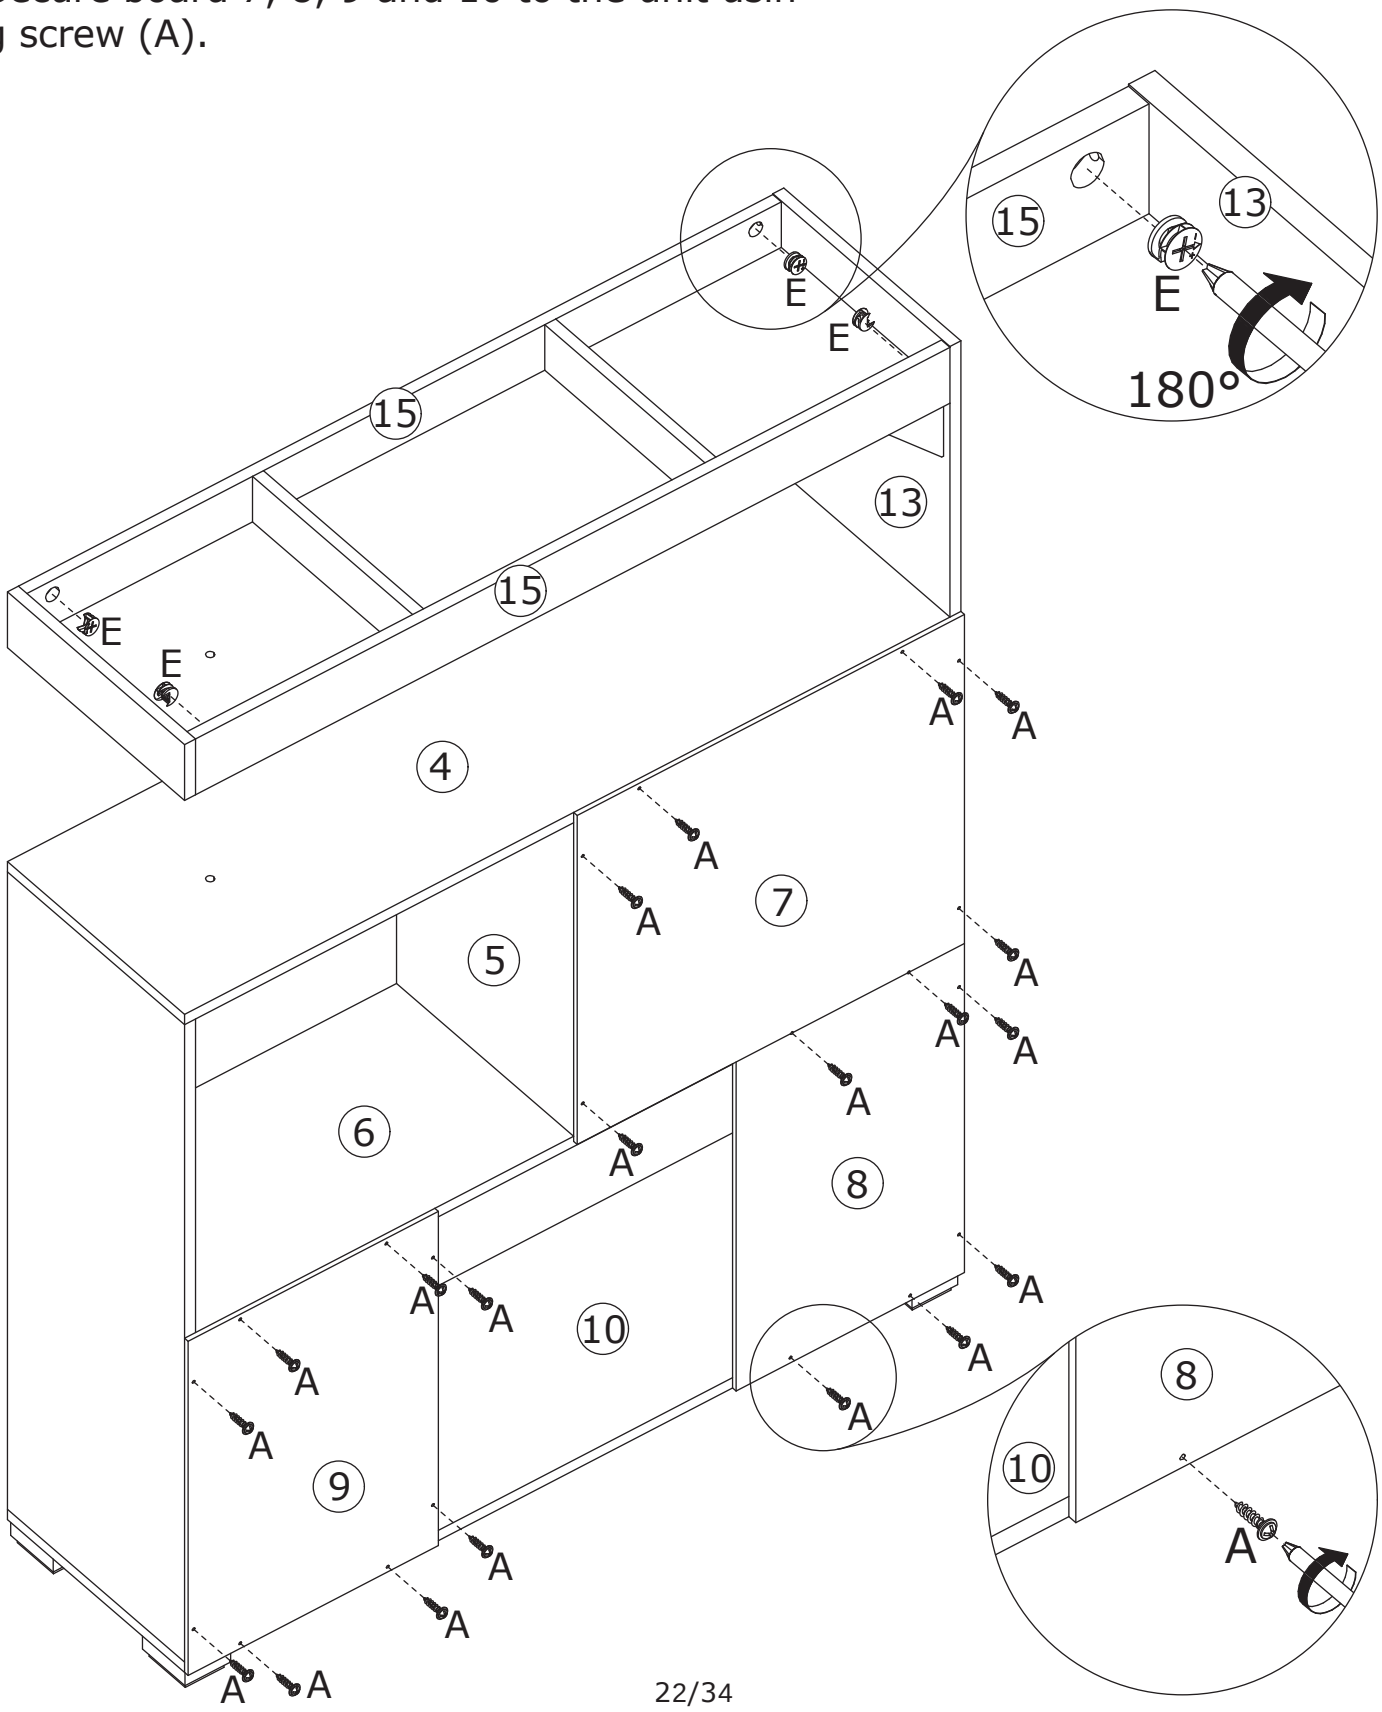



19

F x 2




∅6 x 35 mm





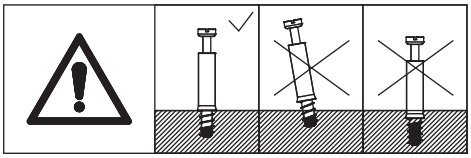


Screw eccentric rod (F) onto board 1.

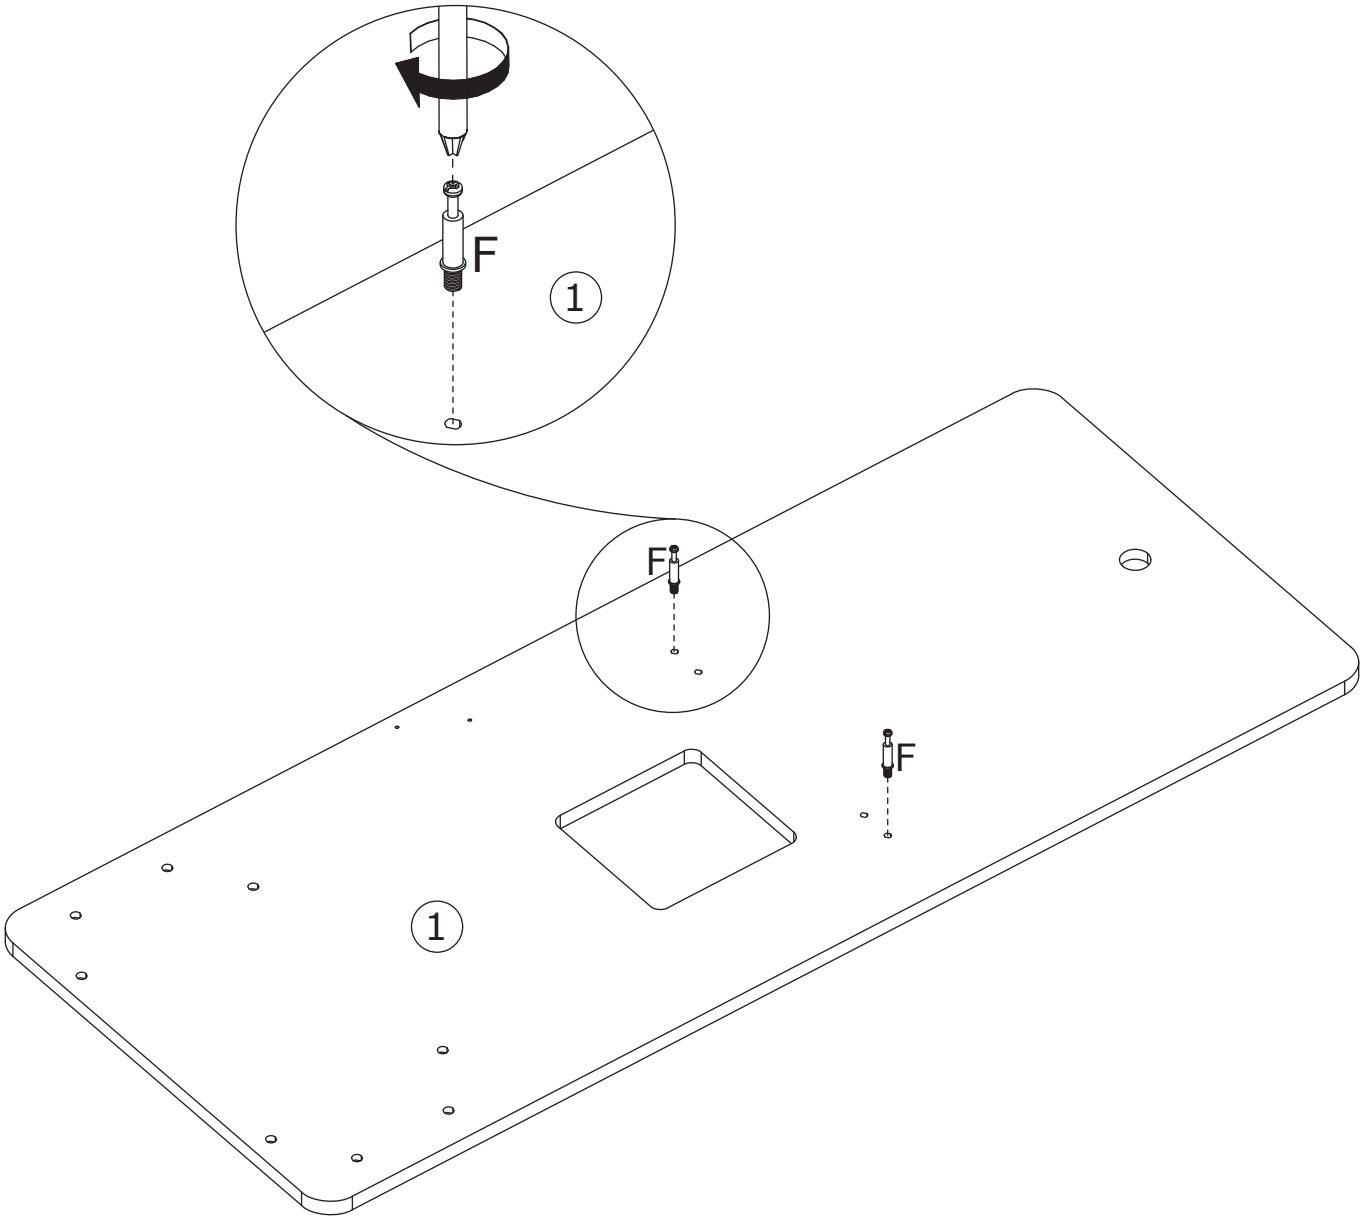


20

E x 2	H x 2	
 ∅15 x 9 mm	 ∅6 x 30 mm	

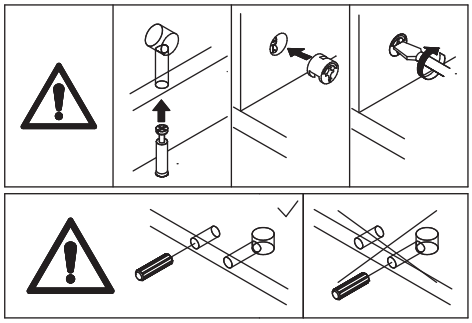


Connect board 1 to board 2 using dowel (H), then tighten by turning eccentric cam (E) clockwise.

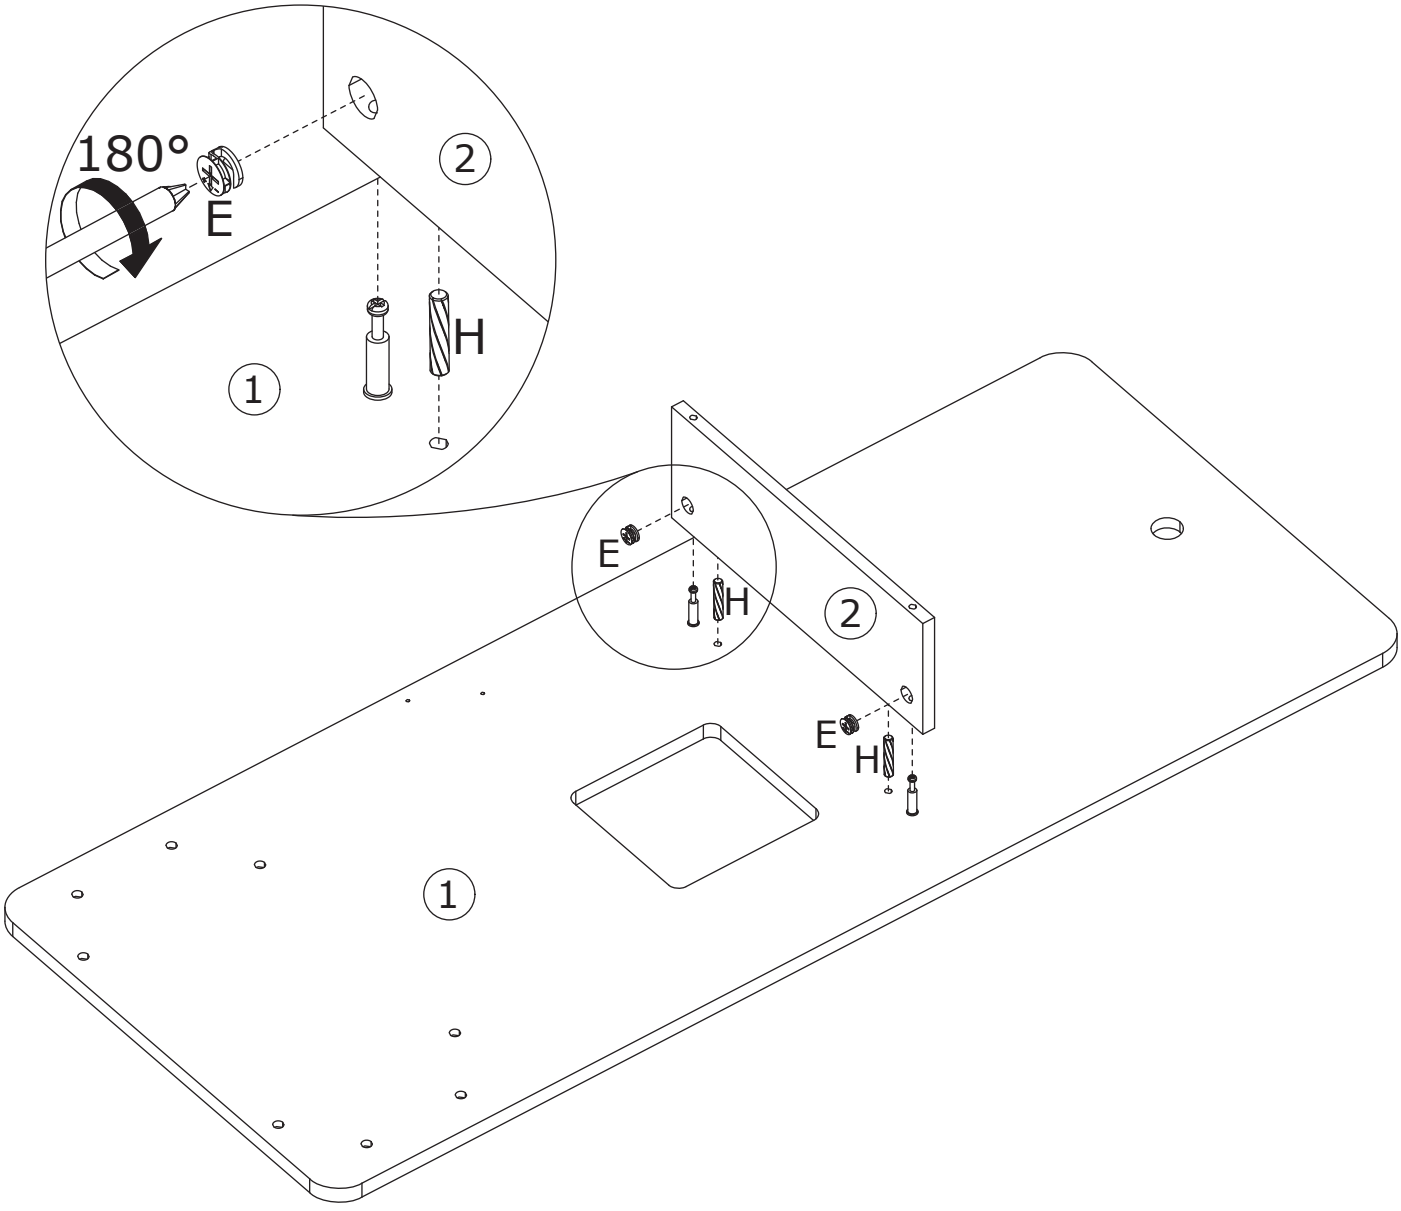


21


G x 2





∅5 x 48 mm




Secure board 3 to board 2 using screw (G).

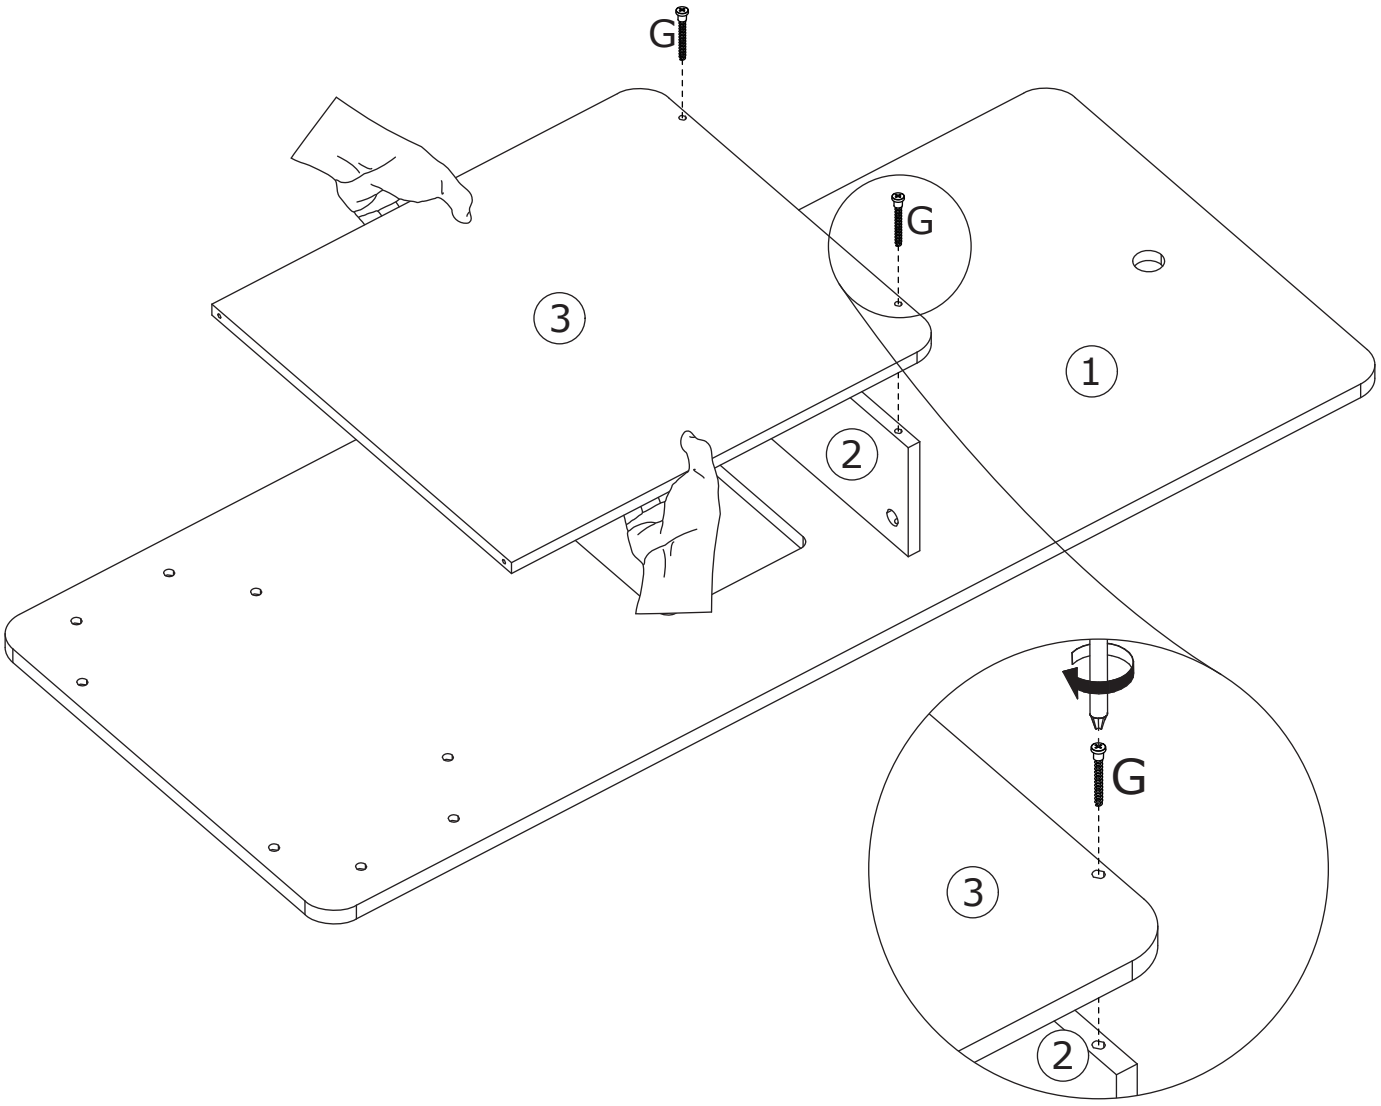



22

C x 4	I x 1	
 ∅6 x 28 mm		


Install adjustable foot 23 onto iron frame 19.
Secure iron frame 19 to iron pipe 20 together using screw (C).

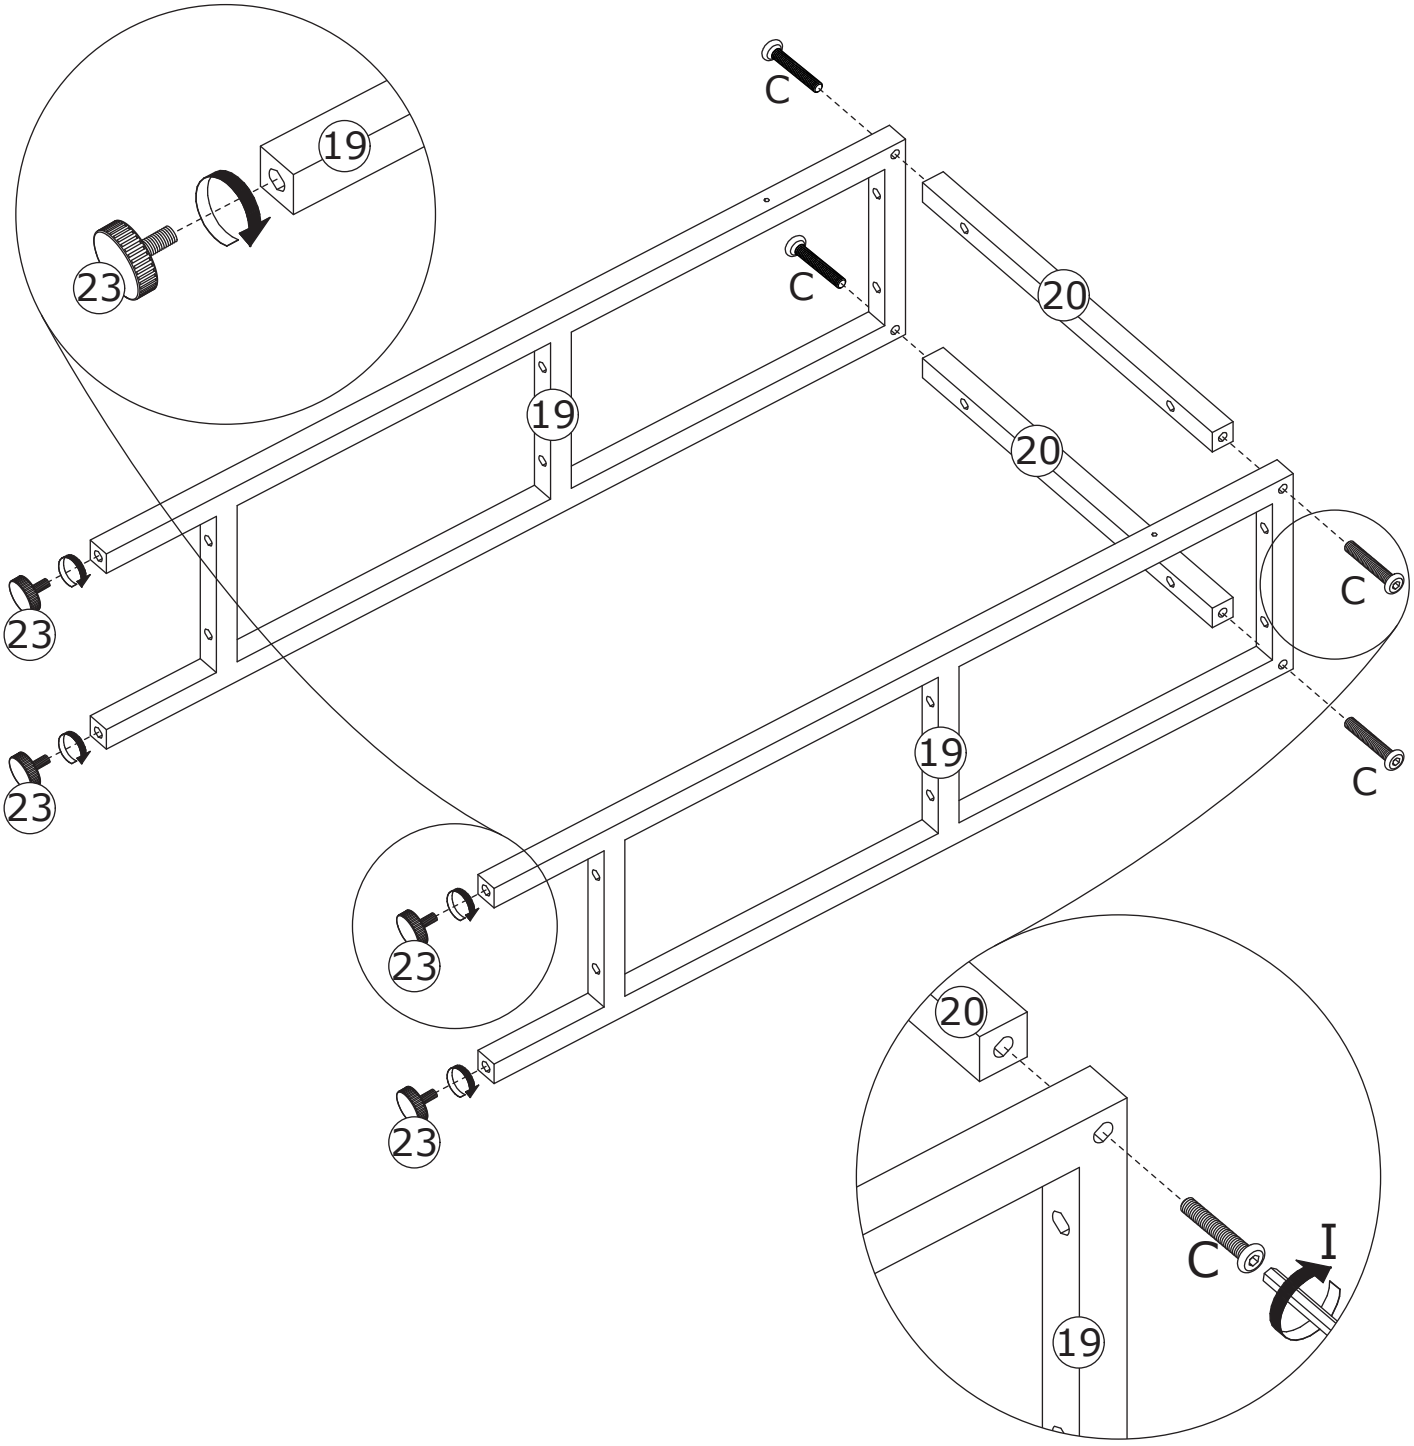



23

C x 8	I x 1	
 ∅6 x 28 mm		


Secure board 18 to iron frame 19 using screw (C).

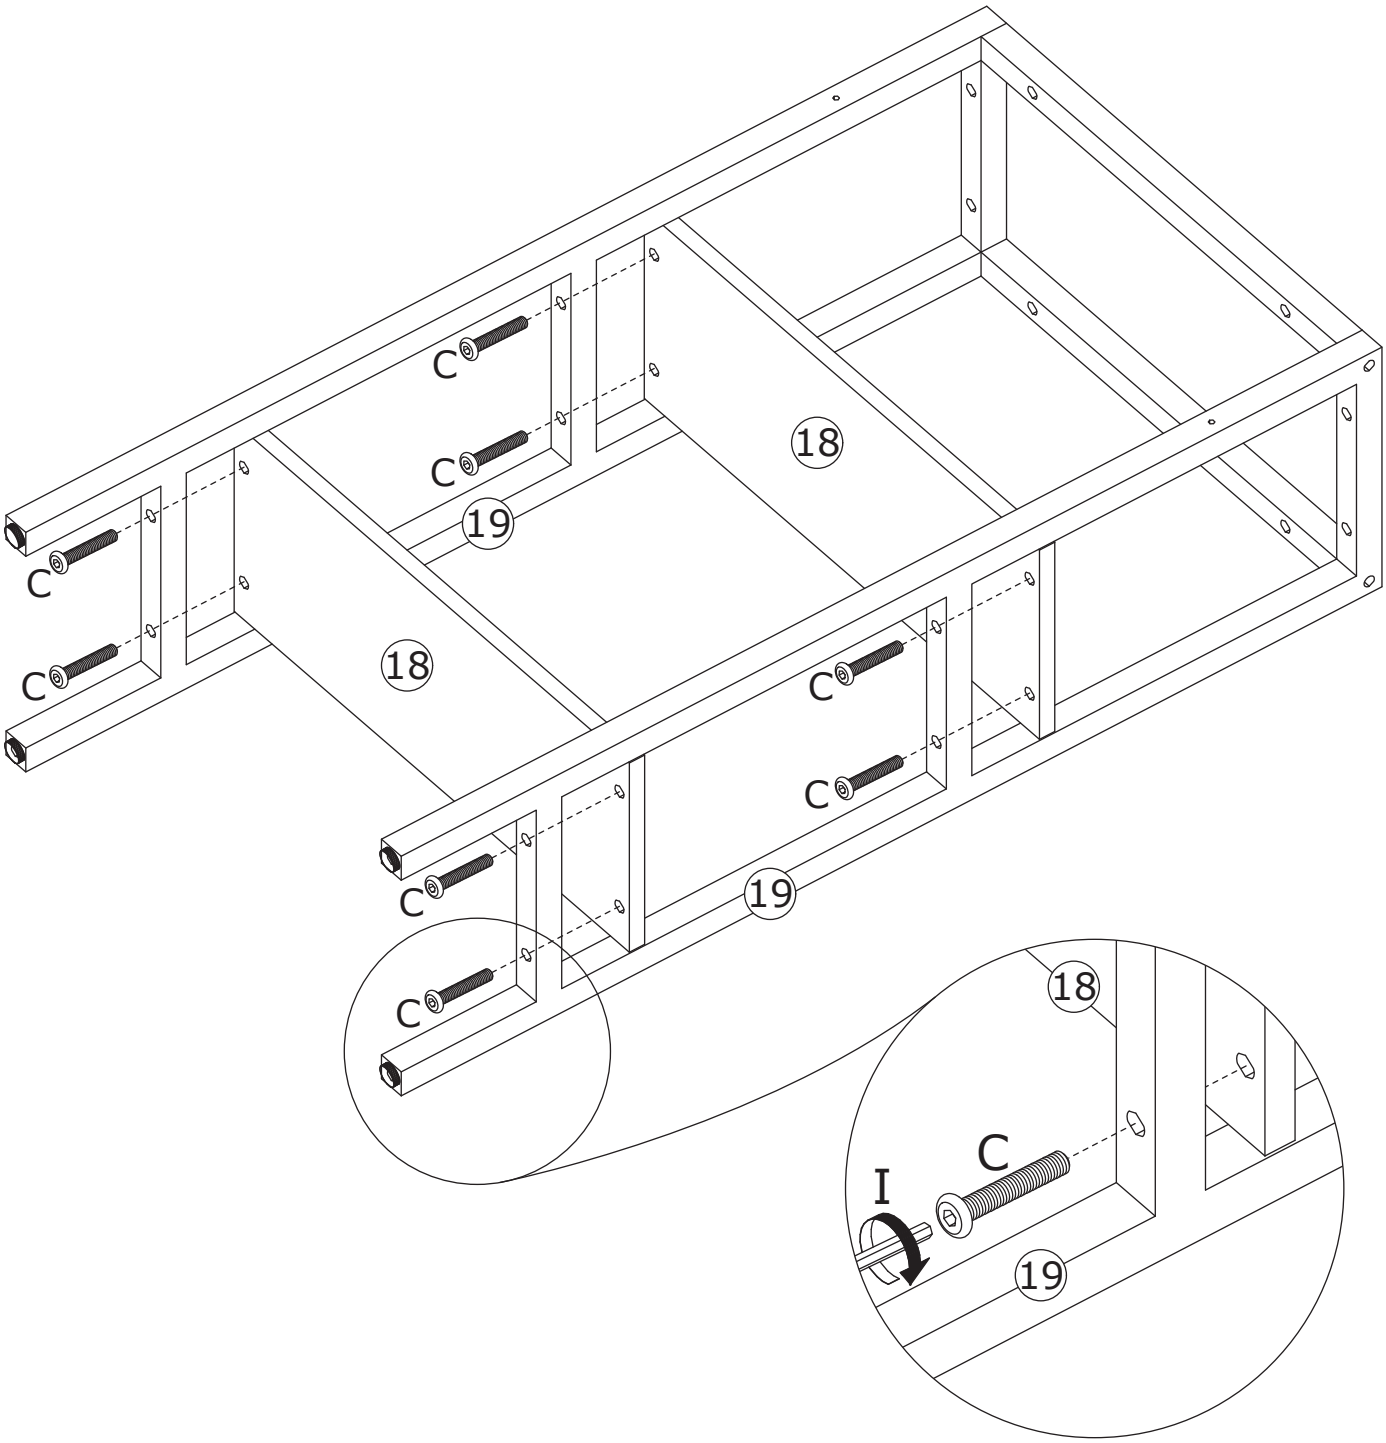

24


C x 8	I x 1	
 ∅6 x 28 mm		

Secure board 1 to the assembled component using screw (C).

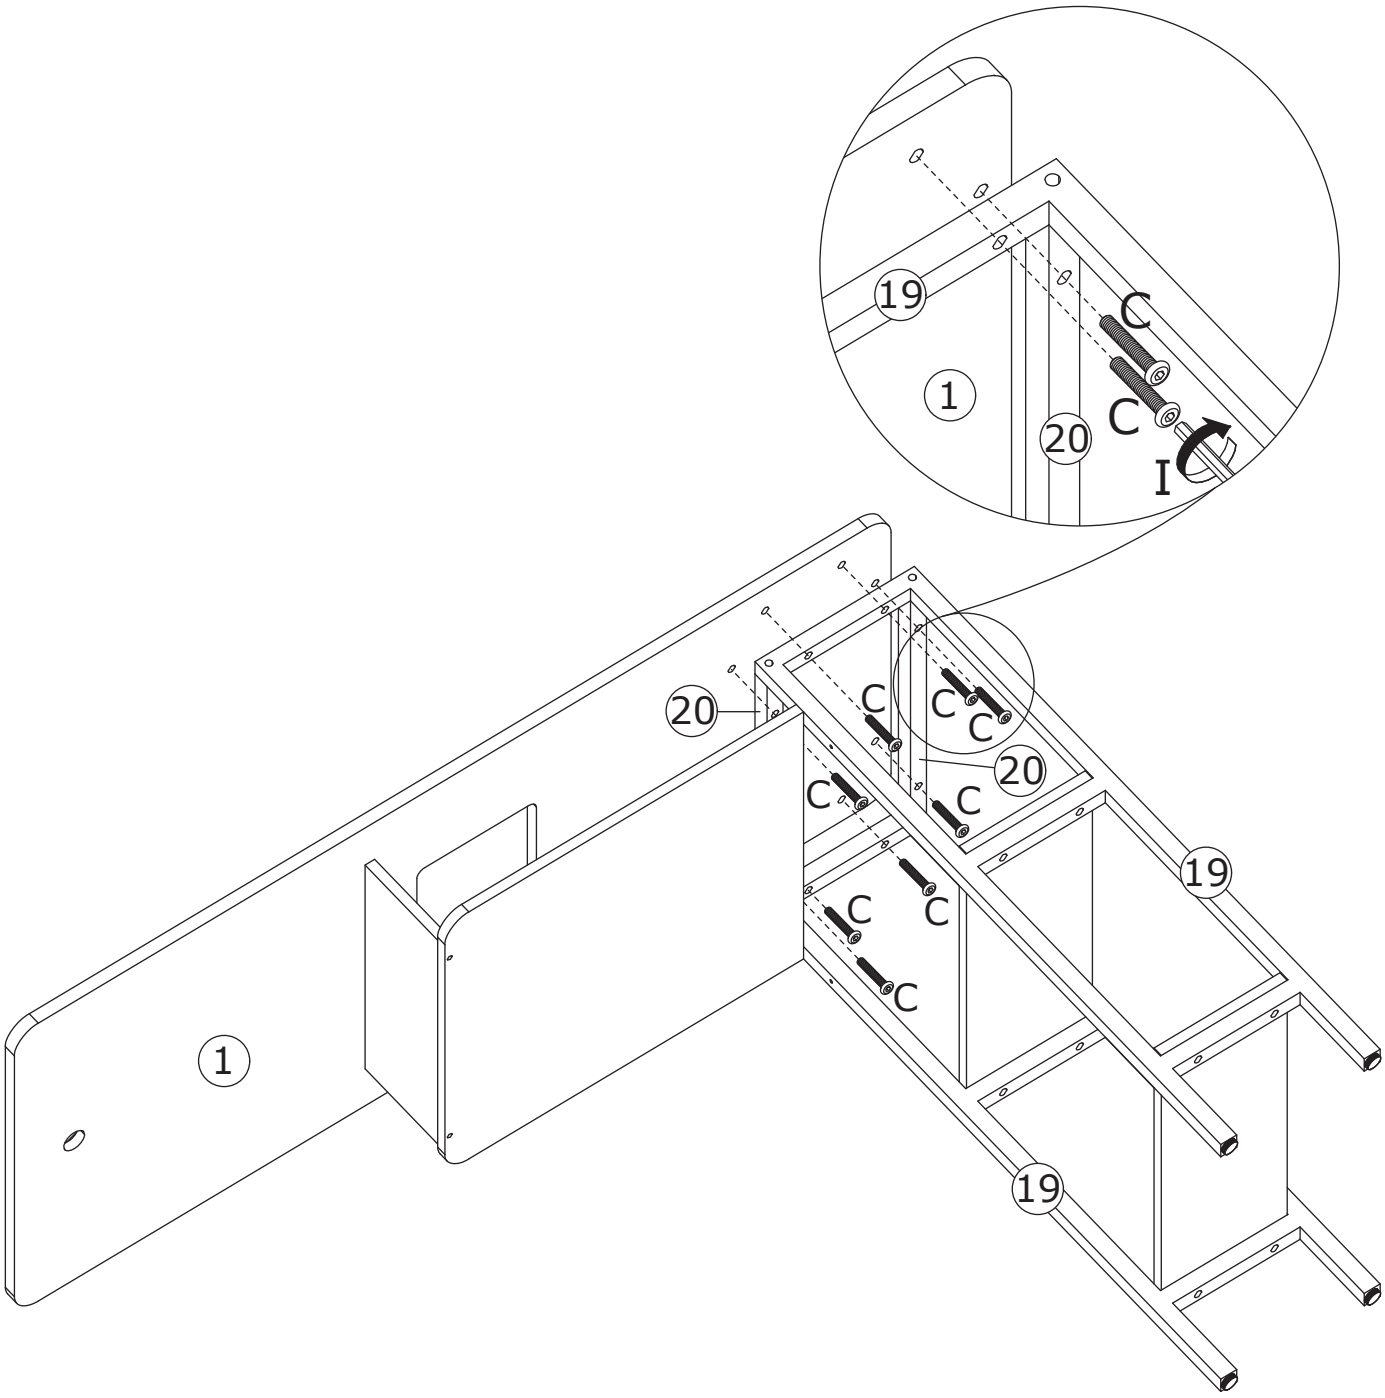


25


G x 2




∅5 x 48 mm





Secure iron frame 19 to board 3 using screw (G).

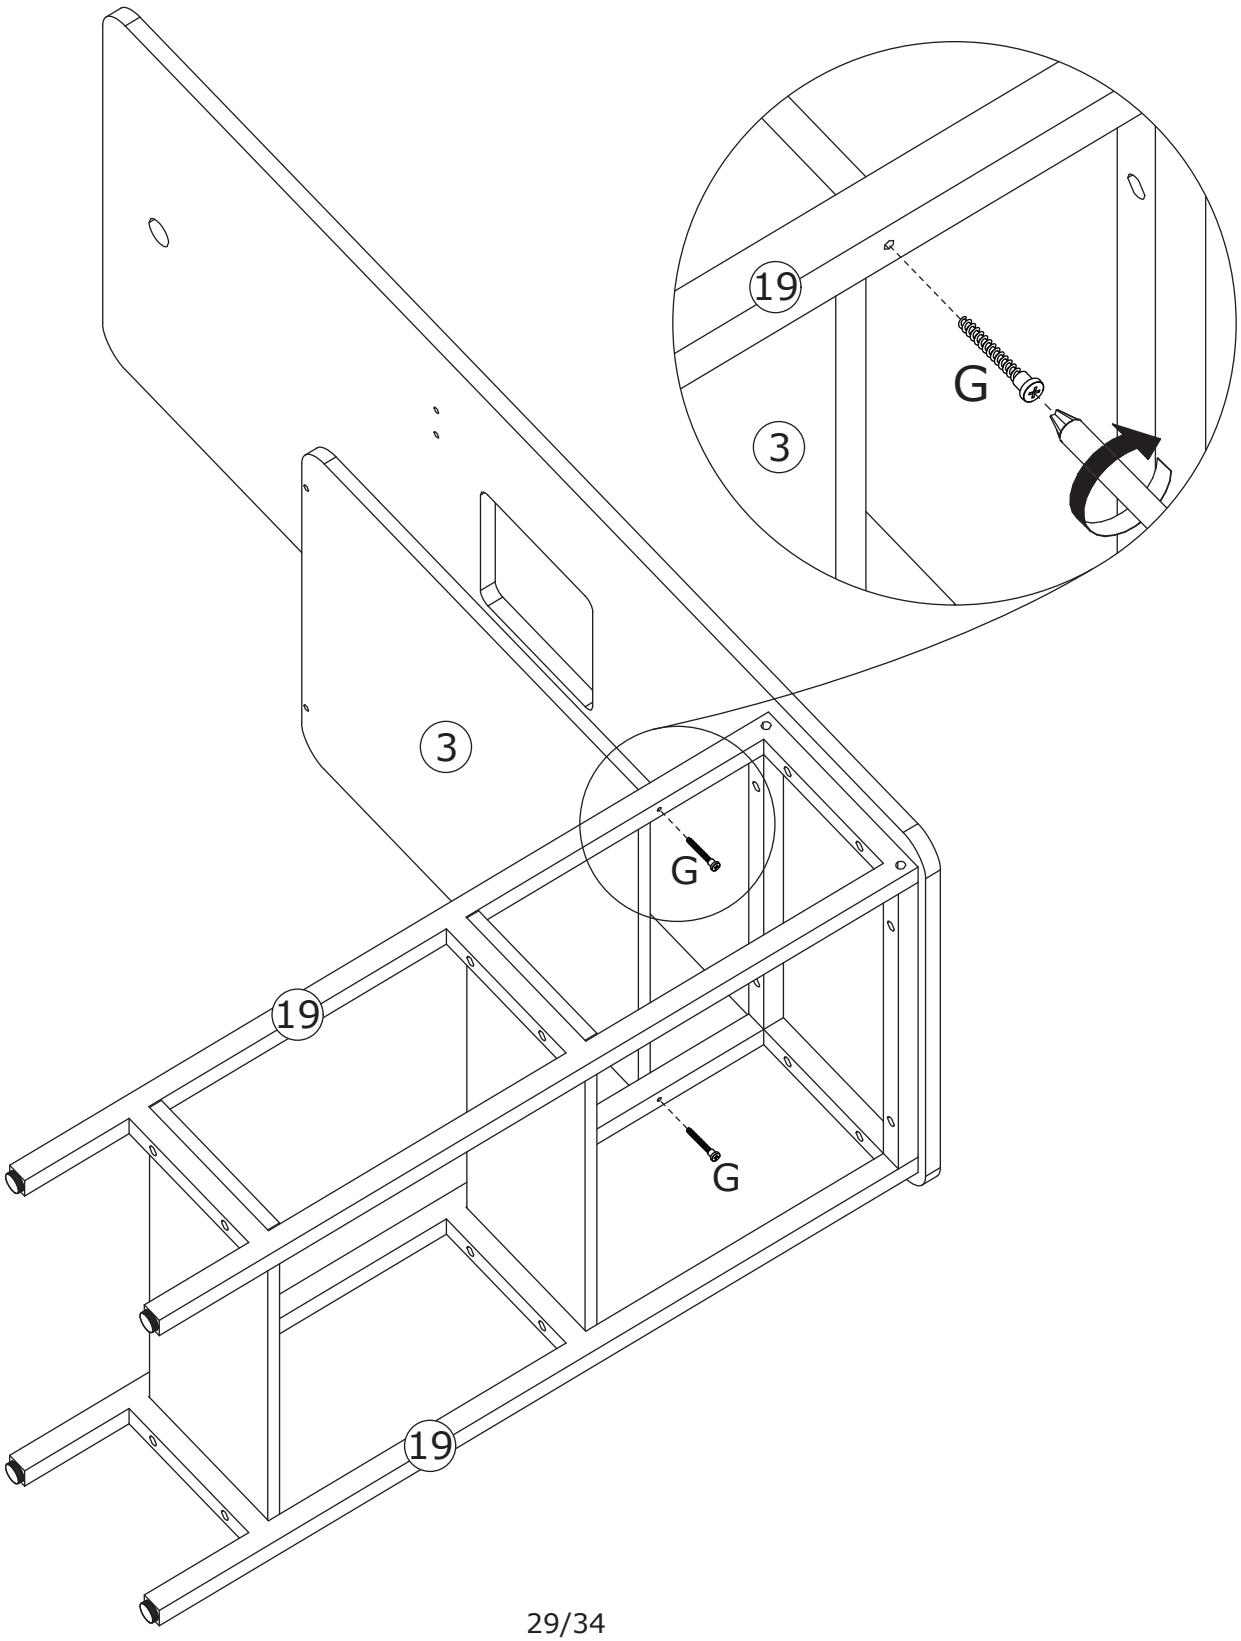


26

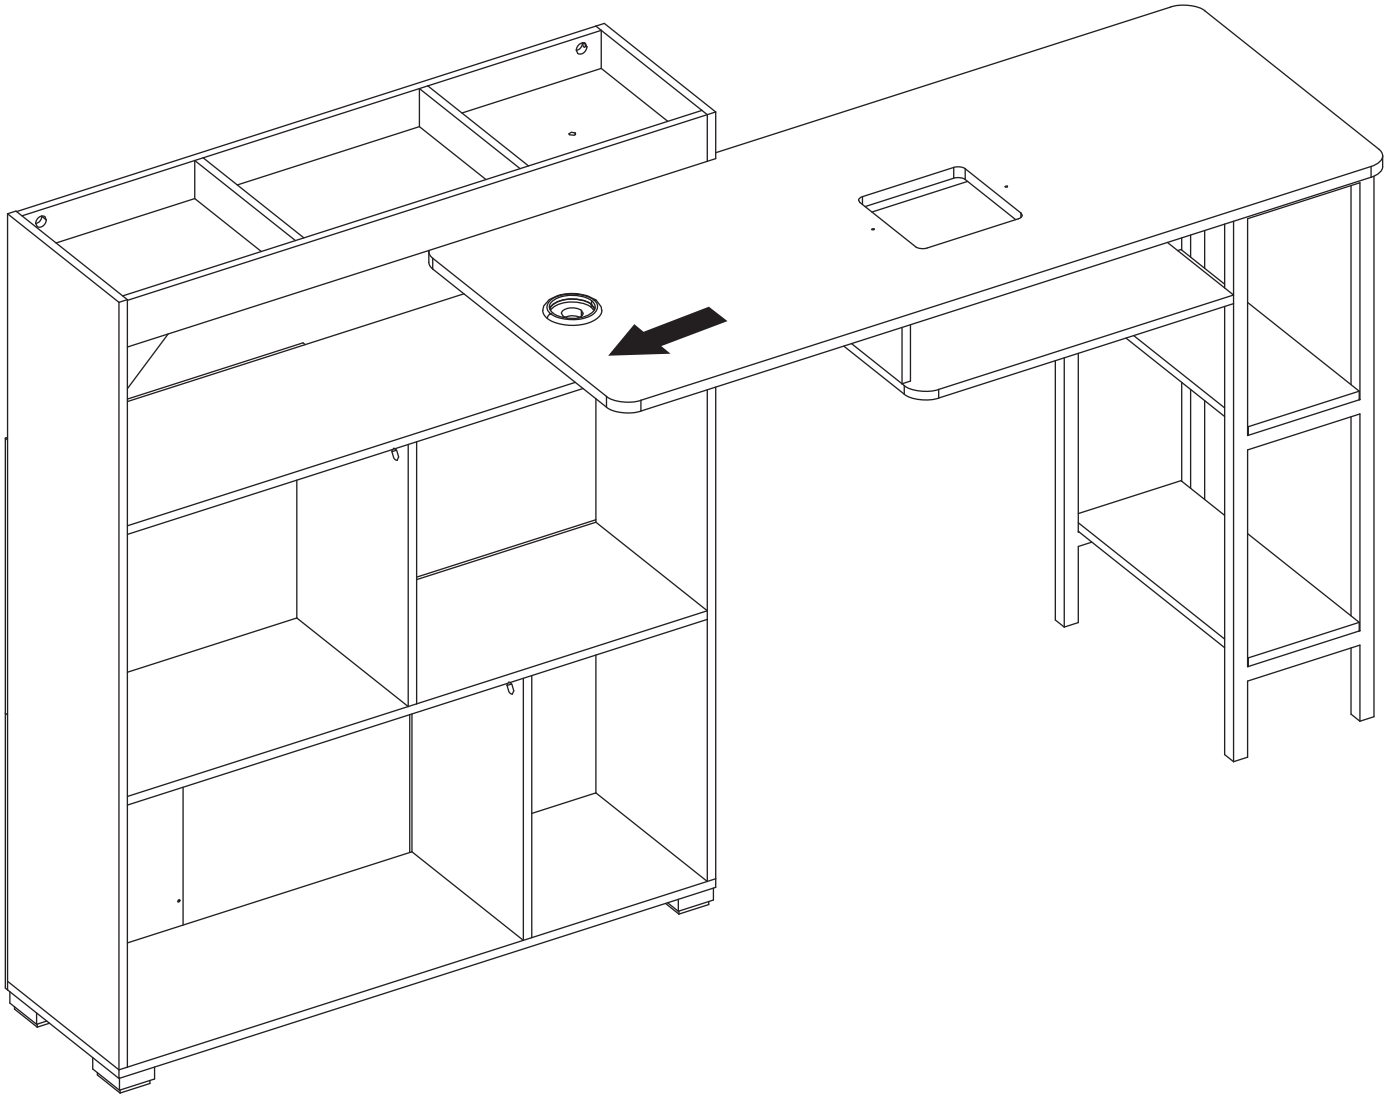

27

C x 2	I x 1	
 ∅6 x 28 mm		

Pass the round pipe 21 through the pre-drilled hole on board 1, then secure the round pipe to board 4 and 14 using screw (C).

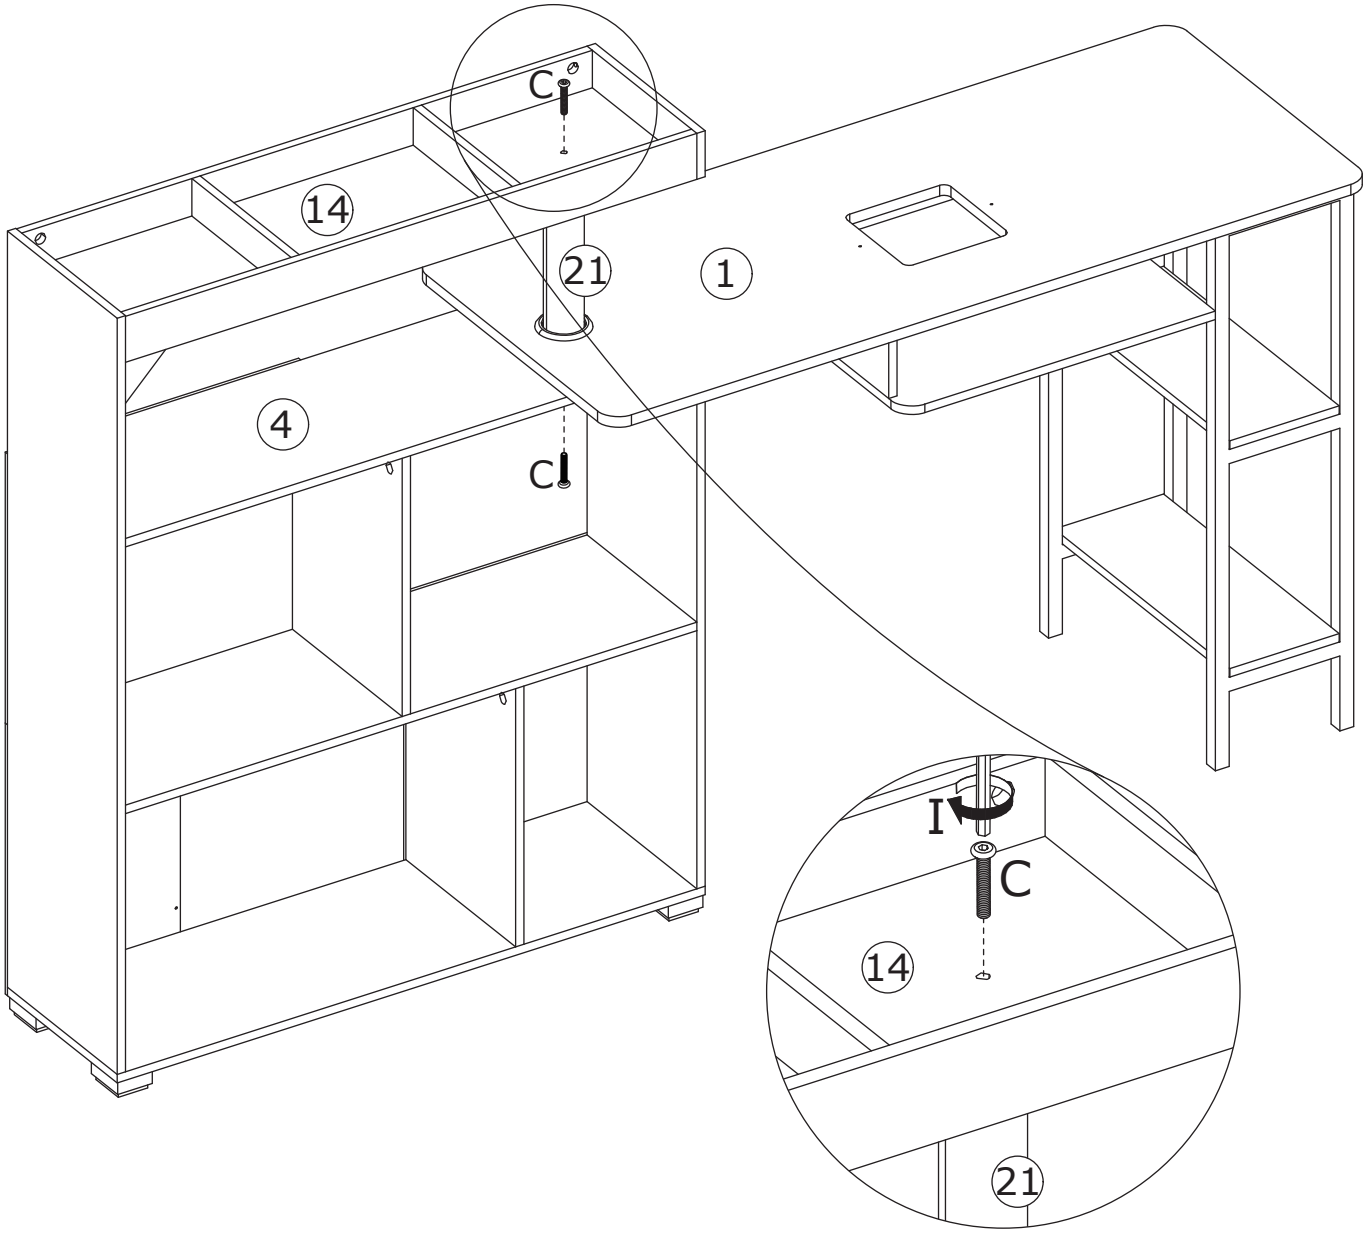


28

27 x 1

x2

Peel off the protective film from the vacuum cleaner 27,
then secure the vacuum cleaner to board 1 using screw.

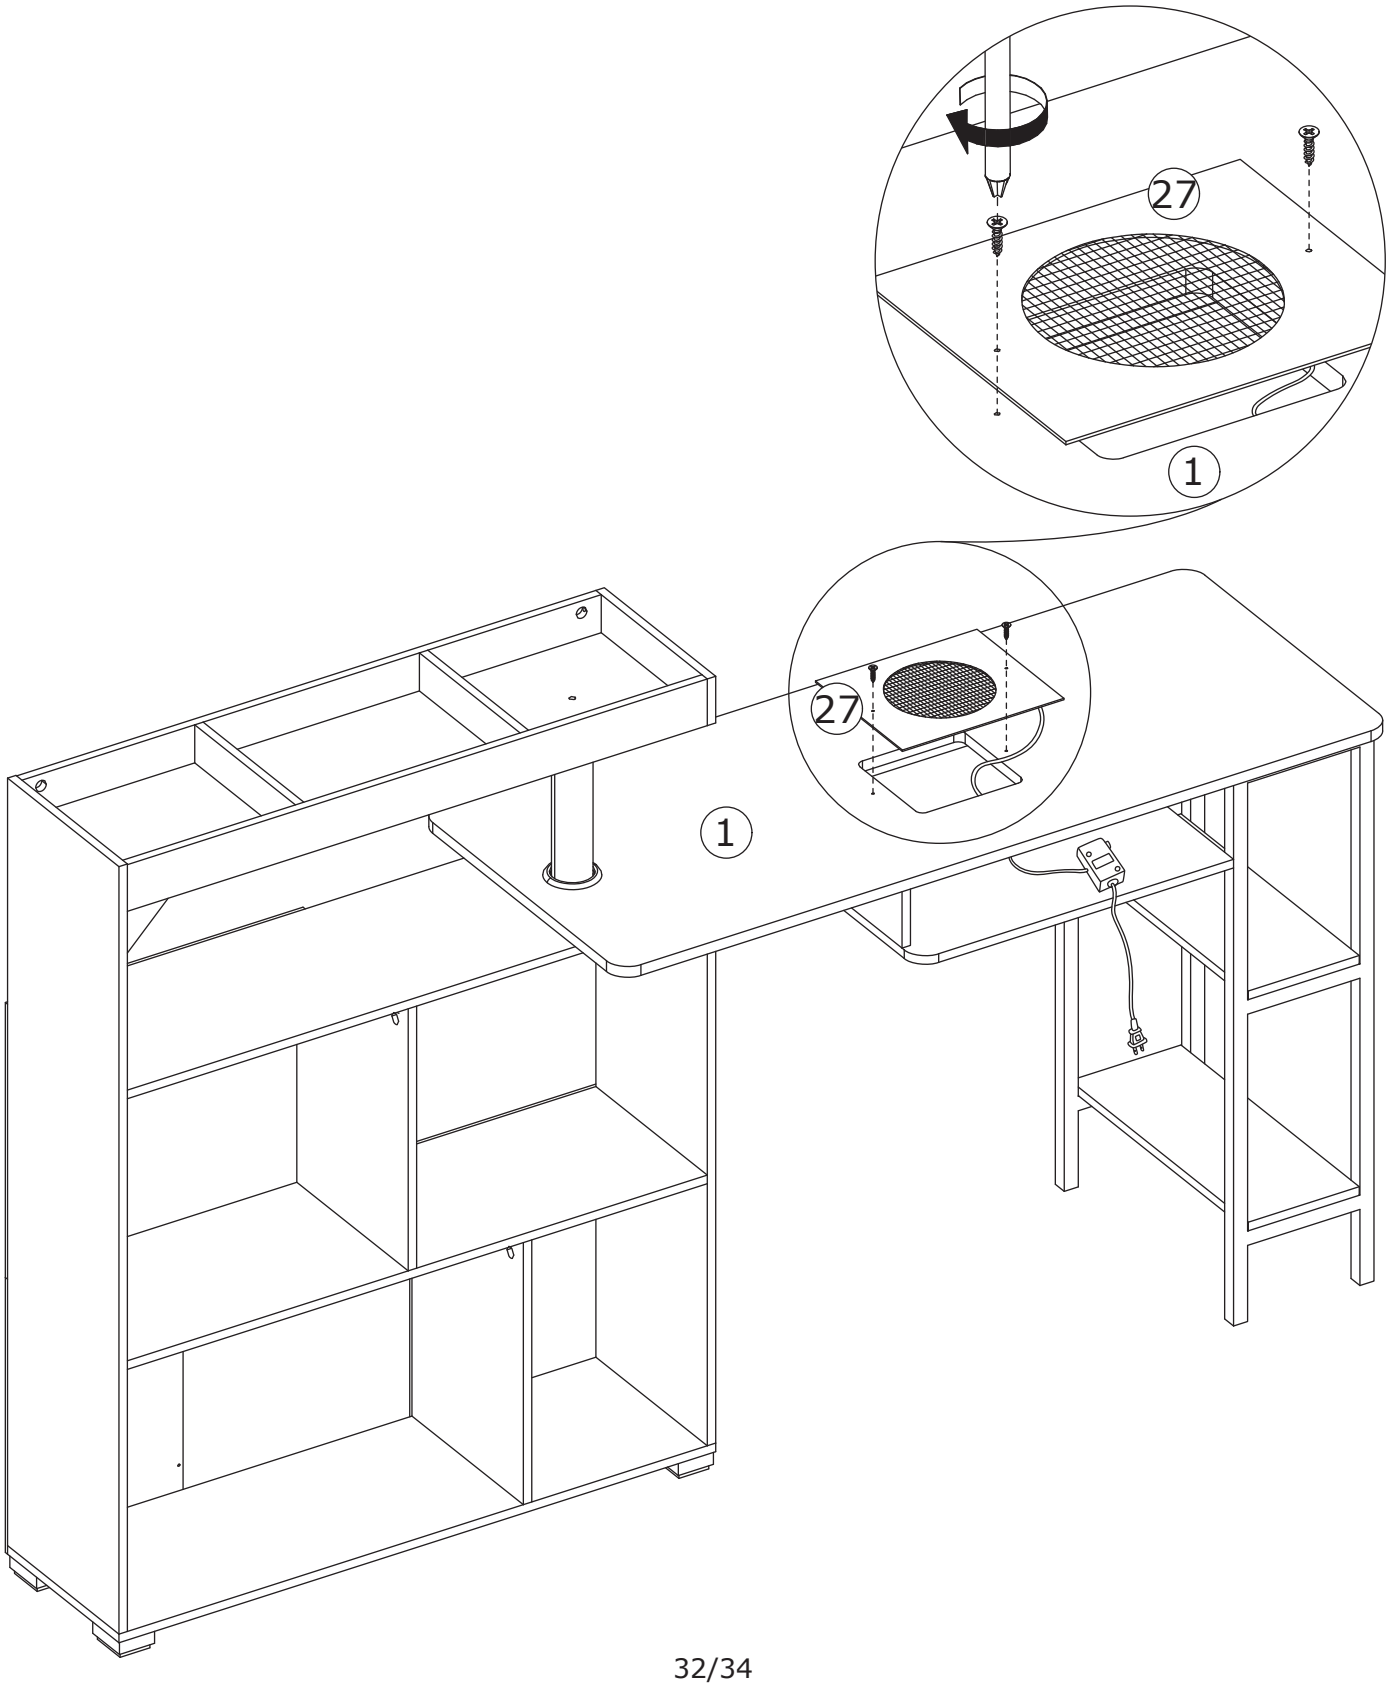


29

27 x 1

x2

Install the controller on Board 1.

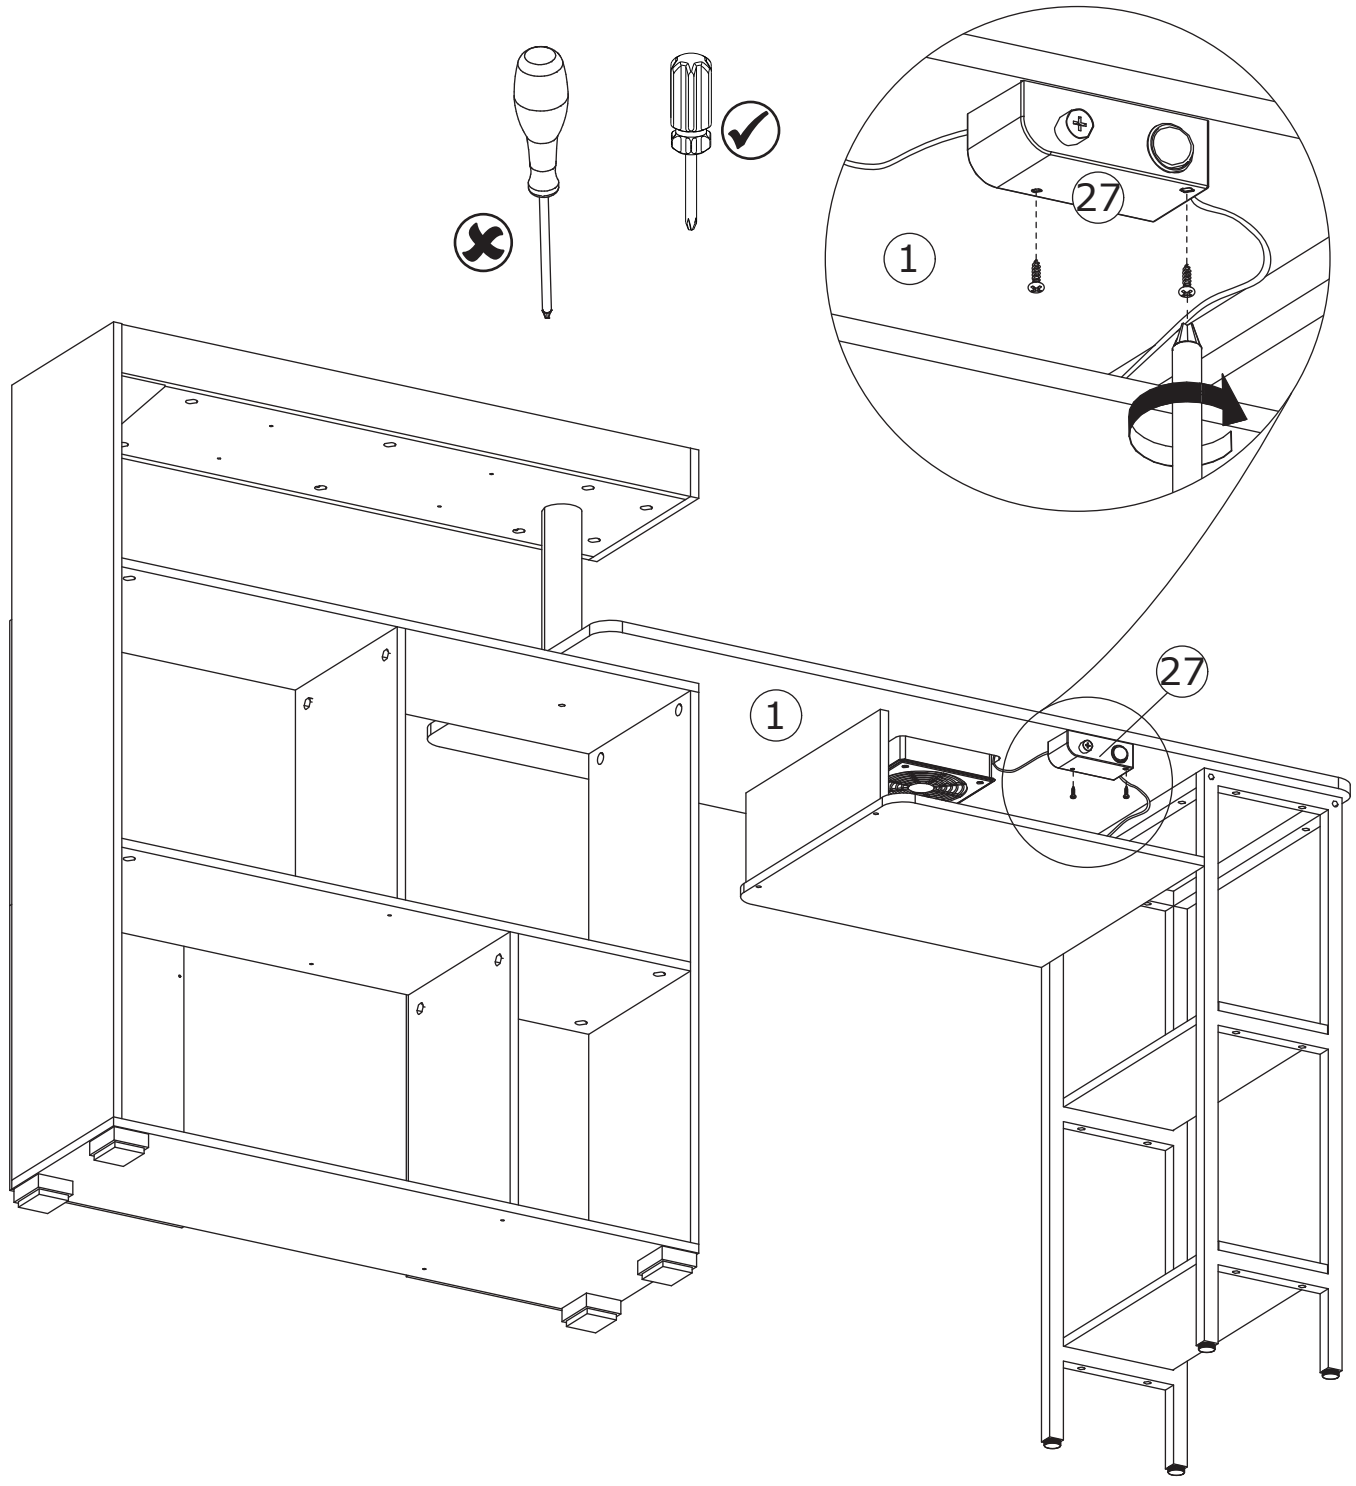

Nail Dust Collector Manual

Thank you for purchasing professional Natl Dust Collector, to ensure that your operating smoothly.please read this operating manual carefully before use

Features:
1.The nail collector is used for professional nail beauty.
2. It has strong power to collect the dust.
3. No noise and easy to operate.
4. IL keeps your station and air free of dust and debris while filling or using a nail drill on clients. Built-in fan creates a vacuum effect to collect dust and debris into a disposable dust collector bag.

SPECIFICATION:
Embed into the manicure desk
Includes dust collect bag
Voltage: 220-240v 50-60Hz:
The size of metal plate: length 23 x width 19.5cm
The inner circle diameter: 12x12cm
The fan size:14.5x14.5cm

OPERATION:
1.Before using please confirm if the power switch is closed, the position is O
2. At the bottom of the fan, install the non-woven dust collect bag provided by manufacturer, then adjust well the dust bag to make sure there have space to let the fan exhaust operation.
3. Insert power plug into the power source.
4. Press the Power Switch on the position T'
5. Then put the hand in front of the fan-cover grill. During the working. the dust and filing grits will be absorbed and put into the nail dust bag
6. Please remember to empty the bag periodically and keep it always clean

Warning:
1. Cannot be used by children.
2. Used in dry place.
3. Not allow any liquid into the machine otherwise. damage may occur.
4. Please unplug the power source, when leaving.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068