



ASSEMBLY INSTRUCTIONS

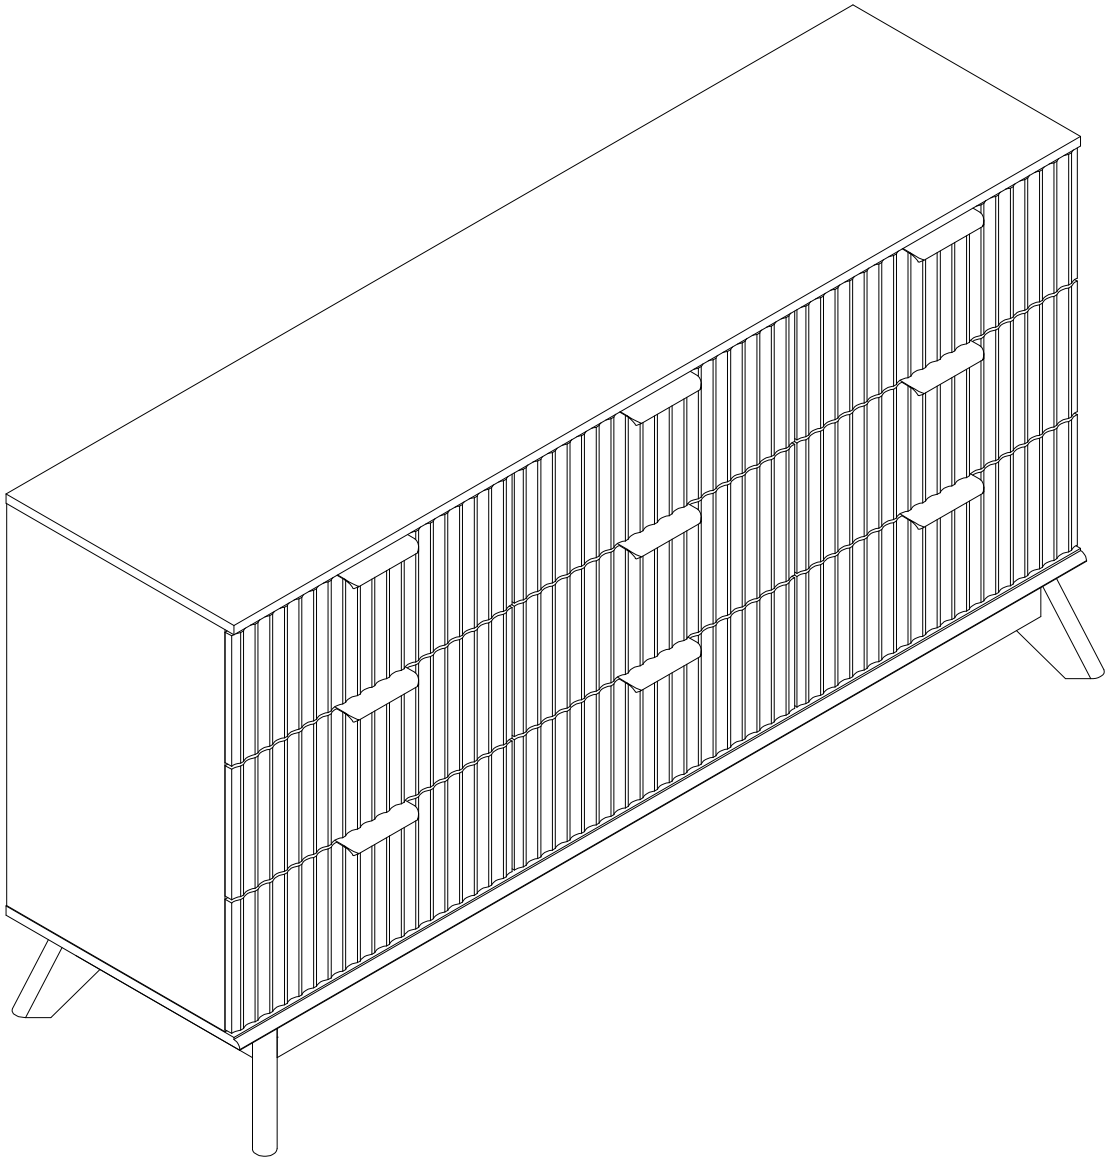


WARNING !



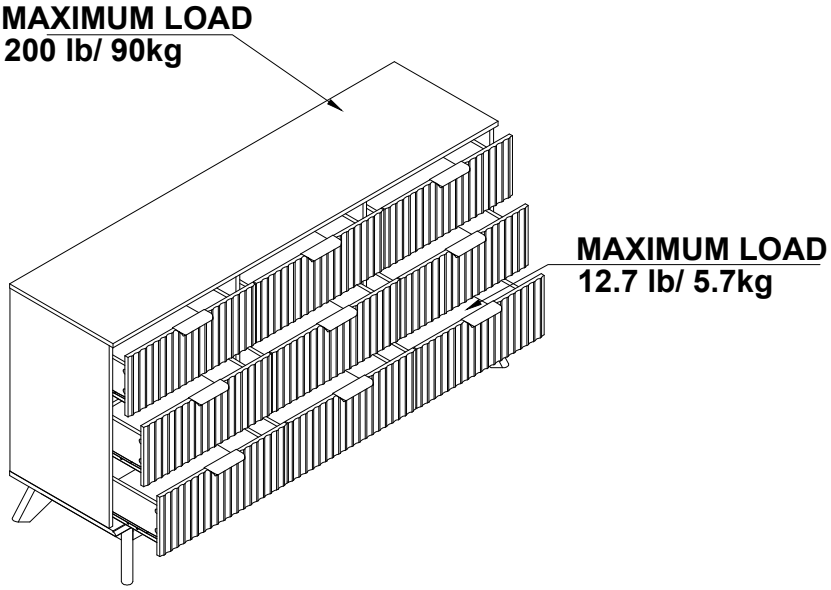

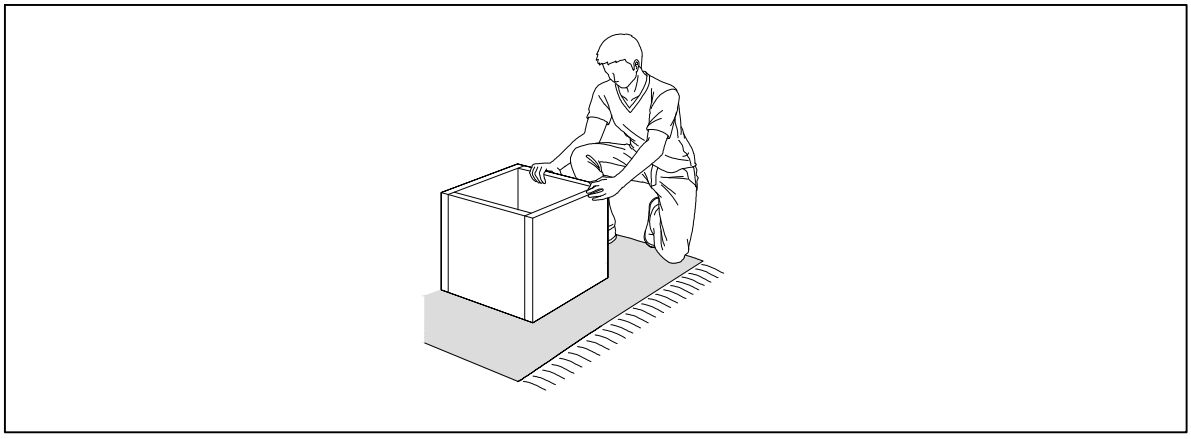

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

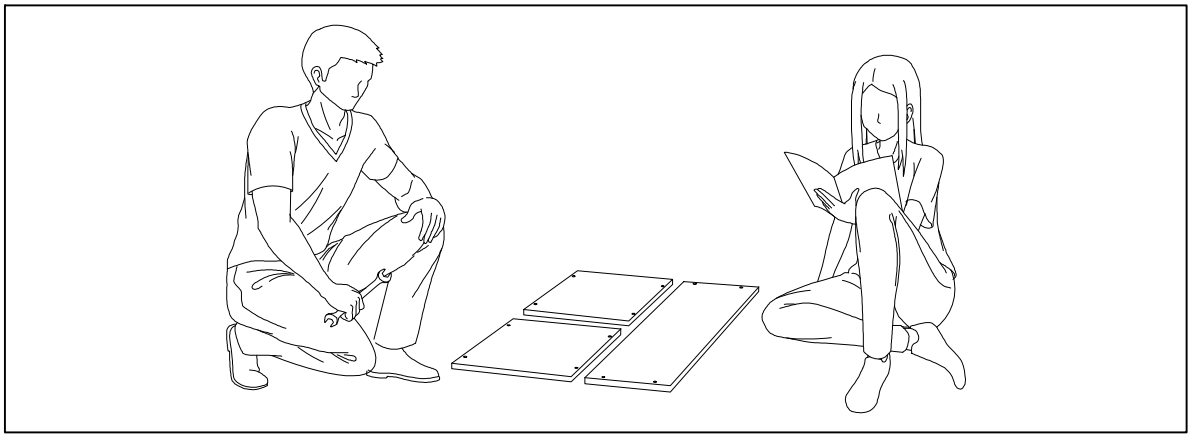


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

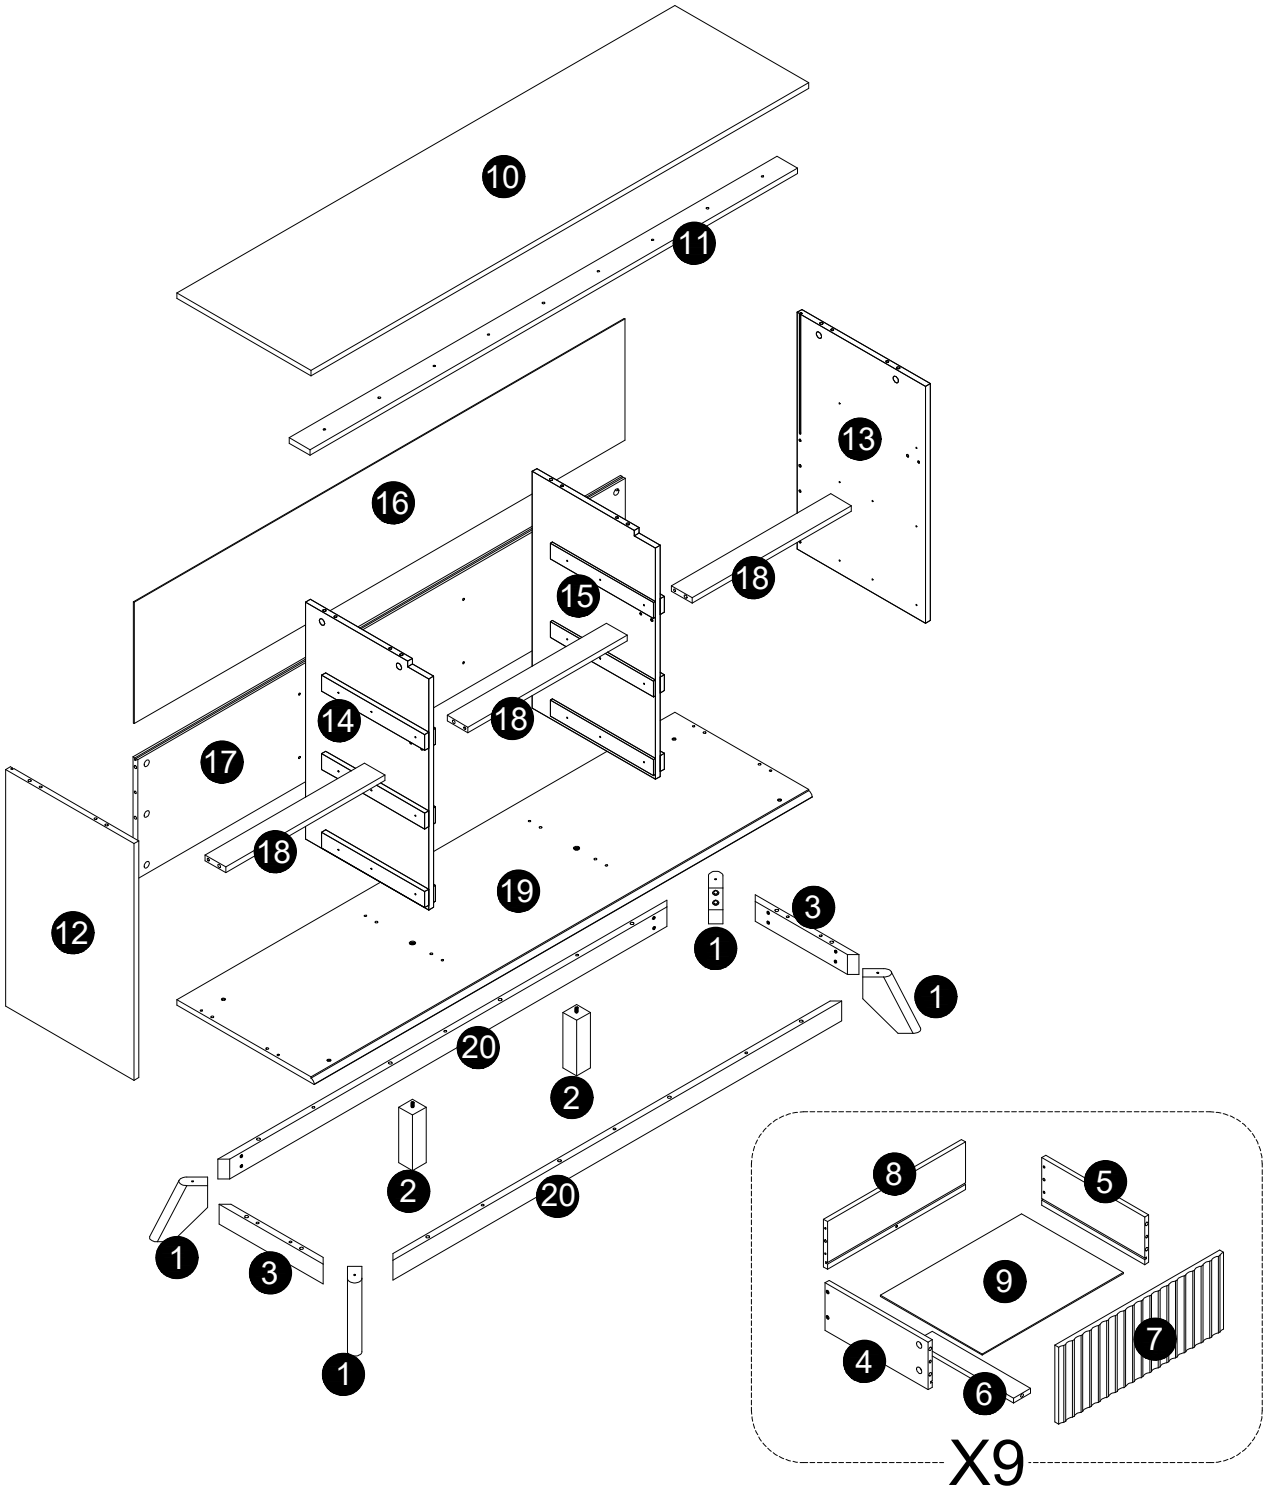


BOARD IDENTIFICATION


Not actual size




① x4

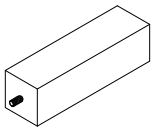


② x2

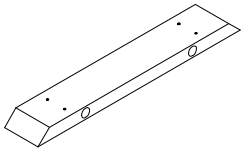


③ x2

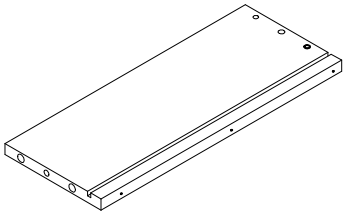


④ x9

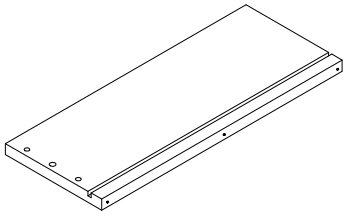


⑤ x9

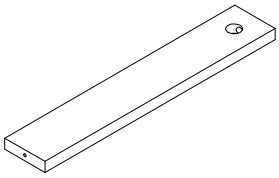


⑥ x9

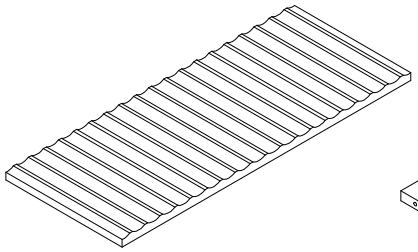


⑦ x9

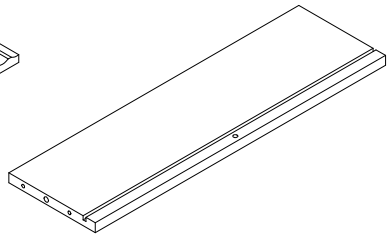


⑧ x9

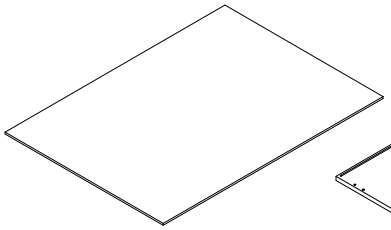


⑨ x9

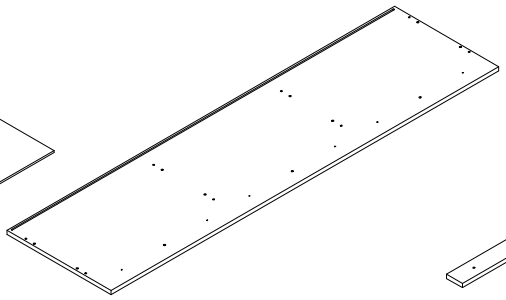


⑩ x1

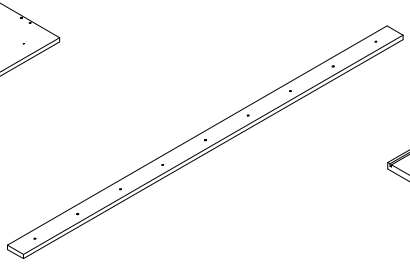


⑪ x1

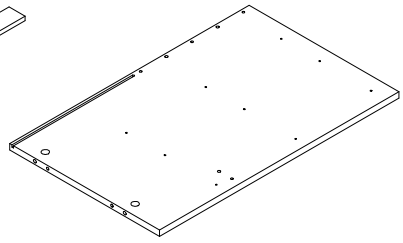


⑫ x1

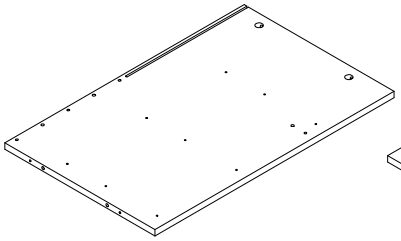


⑬ x1

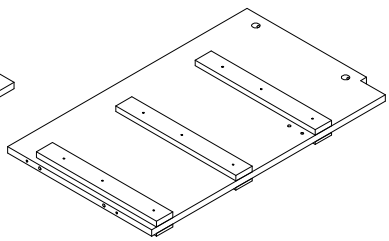

⑭ x1

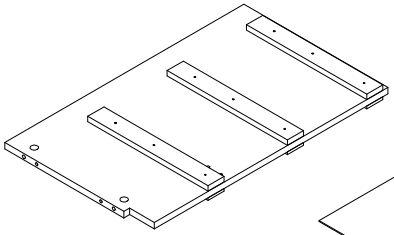


⑮ x1

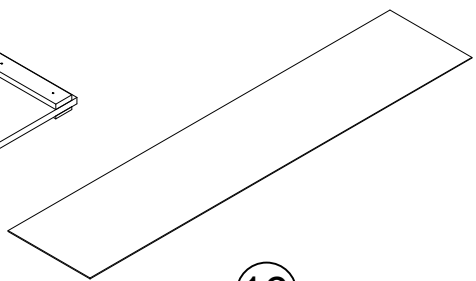


⑯ x1

BOARD IDENTIFICATION


Not actual size

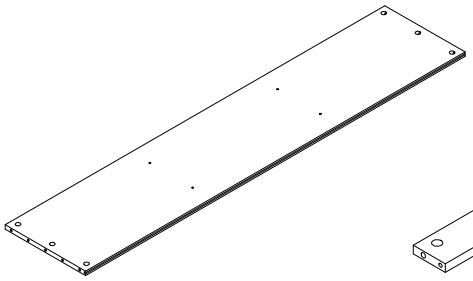


⑰ x1

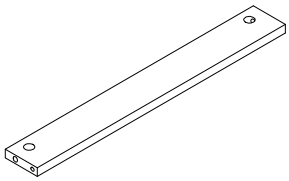

⑱ x3

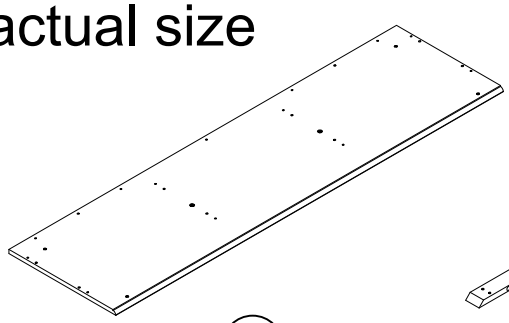


⑲ x1

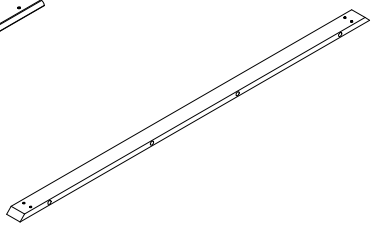


⑳ x2

HARDWARE LIST




A	x65+3




Ø15x9.5

B	x65+3




Ø6x30

C	x74+3




Ø6x20

D	x3




Ø3.5x12

E	x126+3




Ø5x40

F	x21+2



Ø4x16

G	x6




Ø3x17

H	x8




Ø4x35


I	x45+3




J	x9

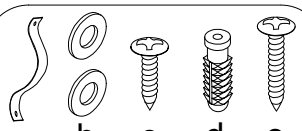

K	x2

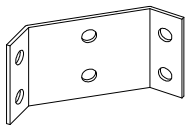


L	x4




#10*15

M	x16+1



M6x35

N	x12+1




M6x20


O	x8




P	x2+2




Q	x1




CL	x9



CR	x9




DL	x9





DR	x9


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

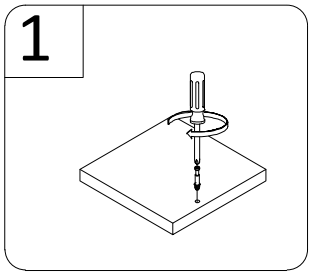


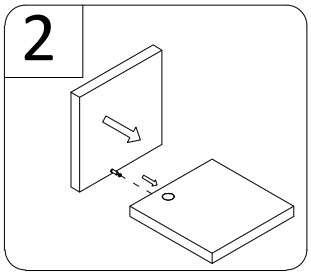

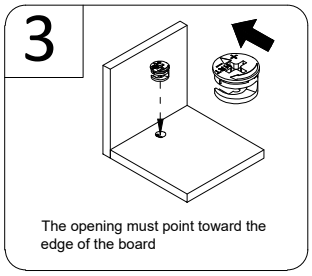


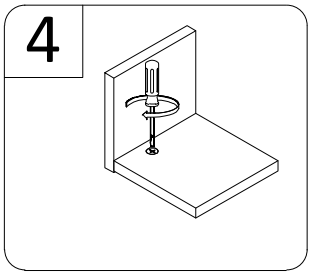


STEP 1




CR

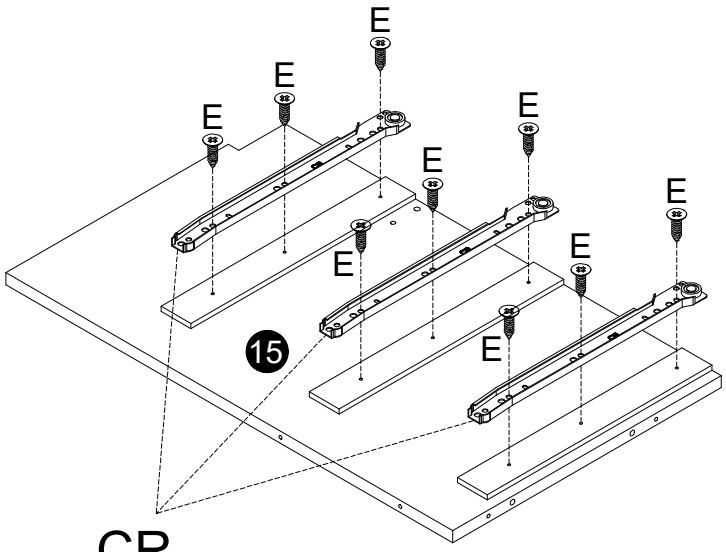


CR

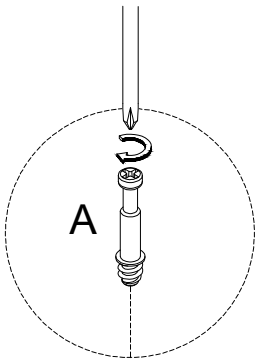




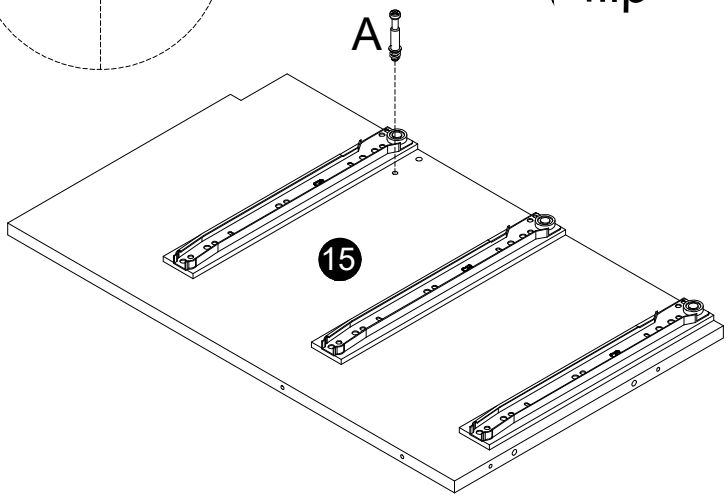


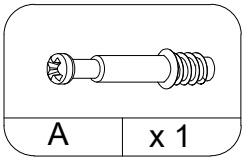

A	x 1

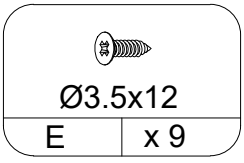



E	x 9

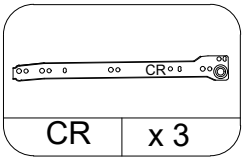


CR	x 3


STEP 2


CL 

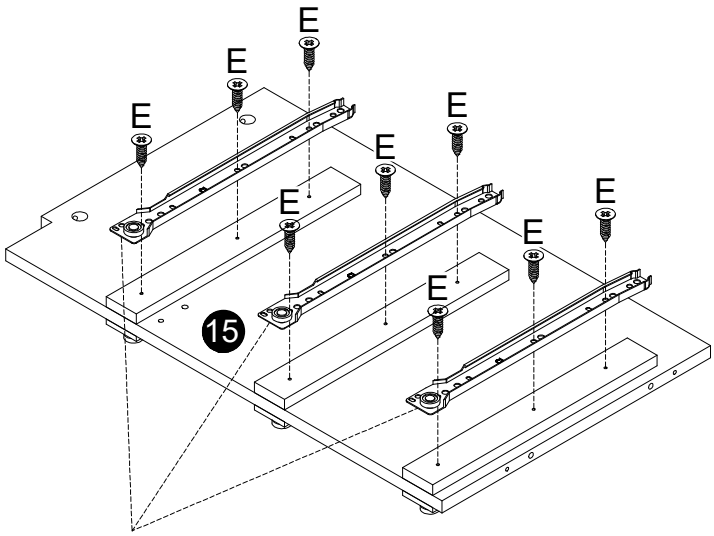


CL

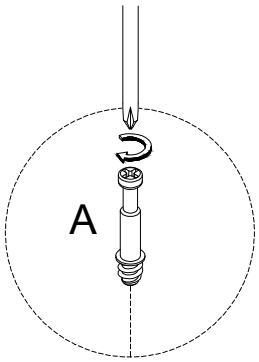

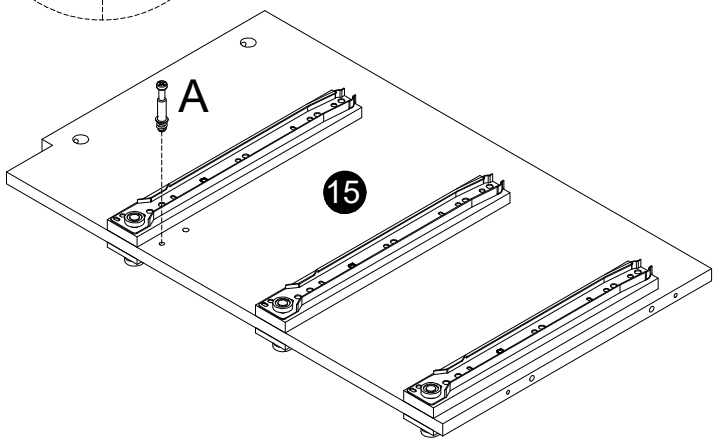


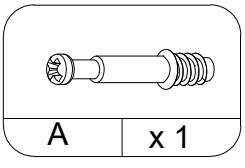

A	x 1

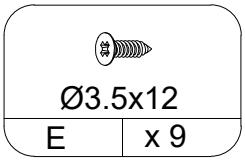


E	x 9

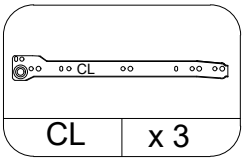



CL	x 3

STEP 3





CR

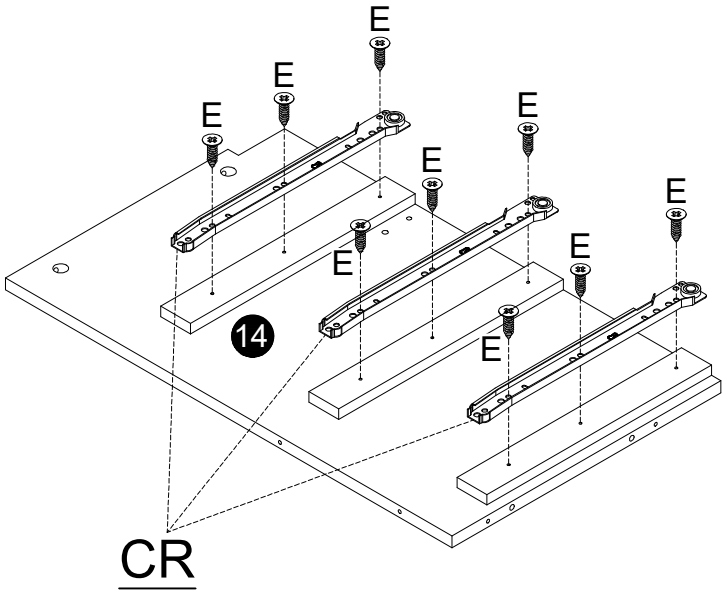

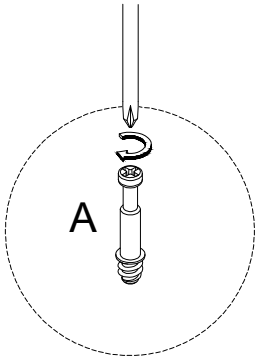



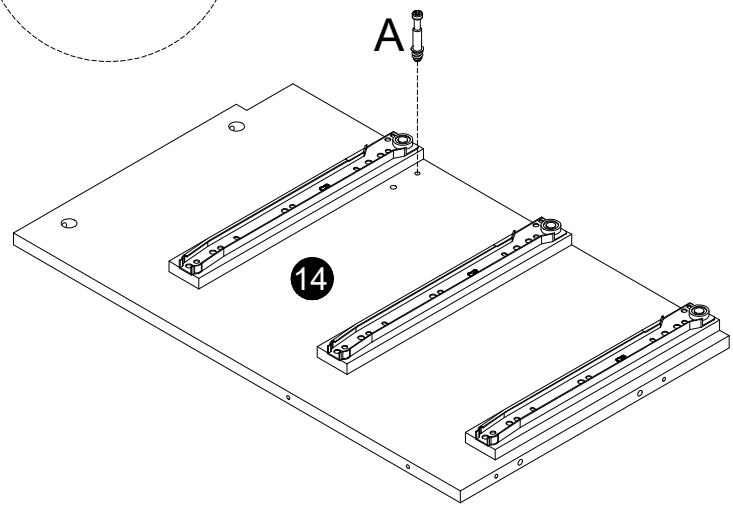


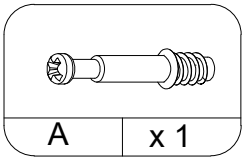

A	x 1




Ø3.5x12	
E	x 9





CR	x 3


STEP 4



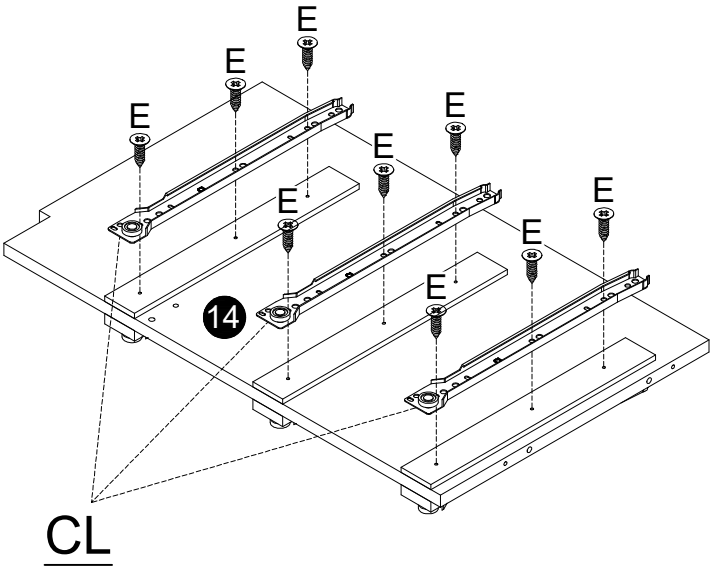

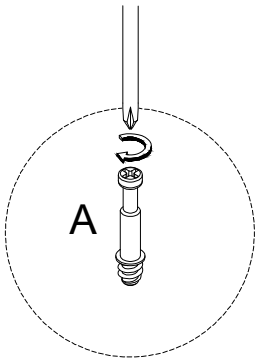

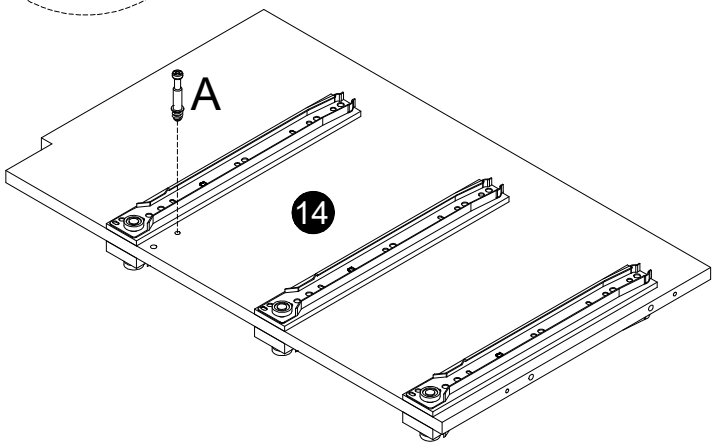


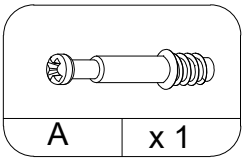

A	x 1





Ø3.5x12	
E	x 9





CL	x 3


STEP 5



CL
CL



CR
CR

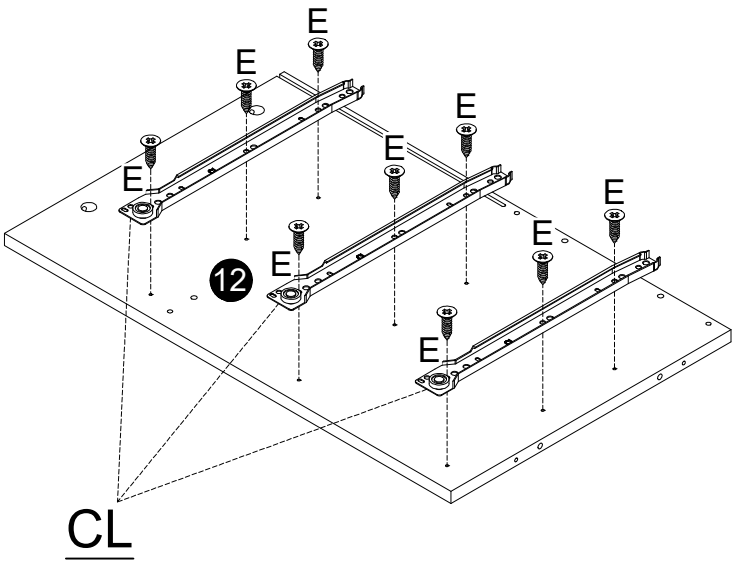
E
12
CL

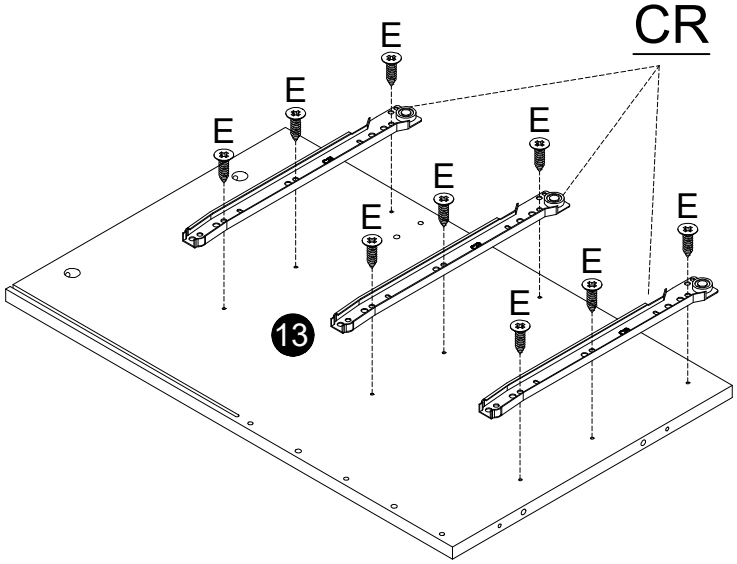

CR
E
13

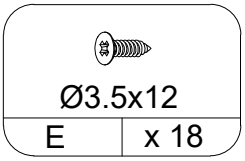

Ø3.5x12
E
x 18

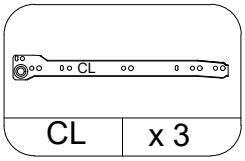

CL
CL
x 3

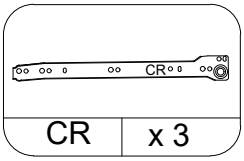

CR
CR
x 3

STEP 6

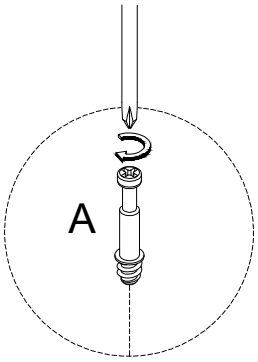

A

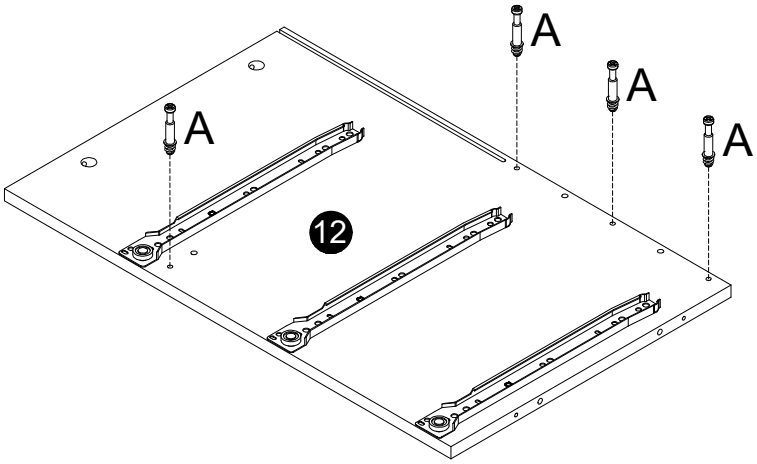

A
A
A
A
12

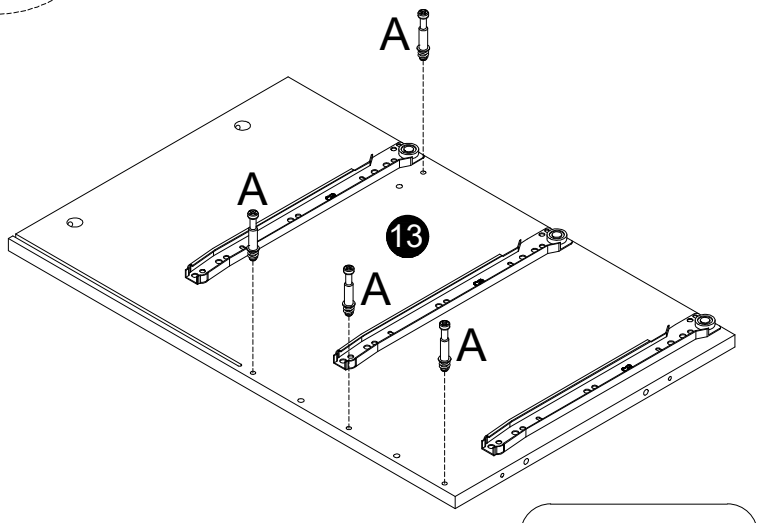

A
A
13
A
A

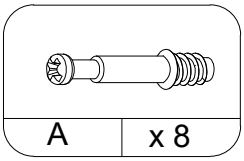
A
x 8


STEP 7

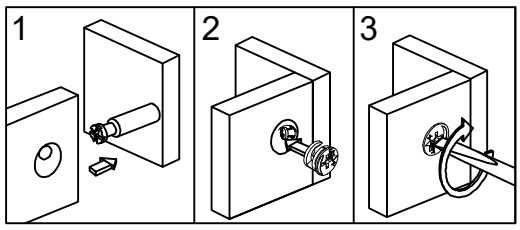

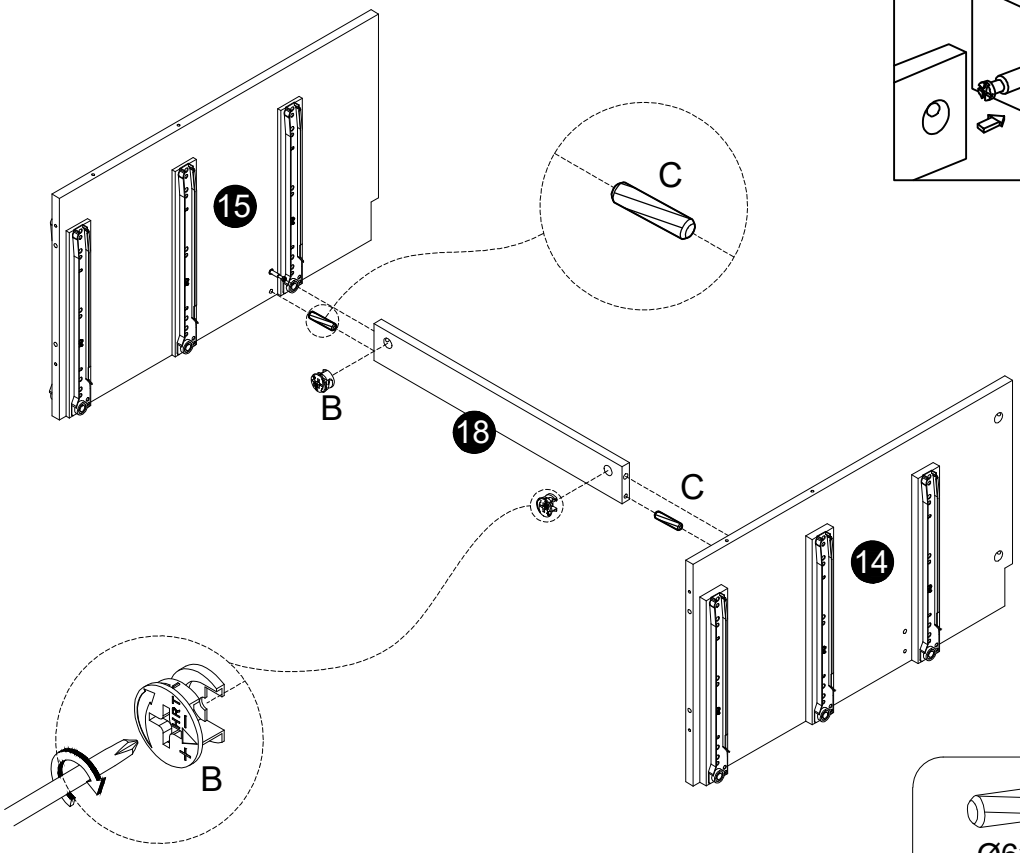





Ø6x30	
C	x 2



Ø15x9.5	
B	x 2


STEP 8

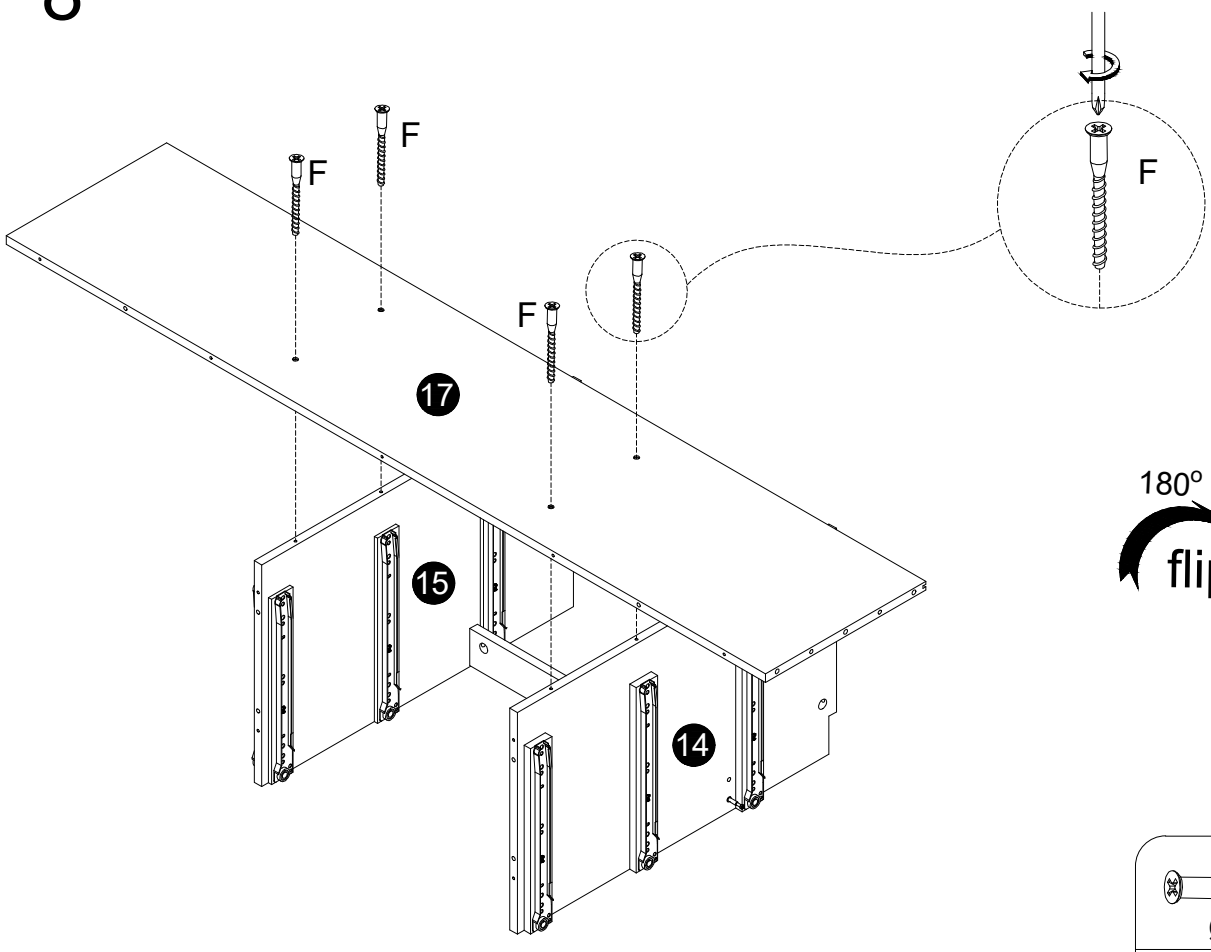






Ø5x40	
F	x 4

STEP 9

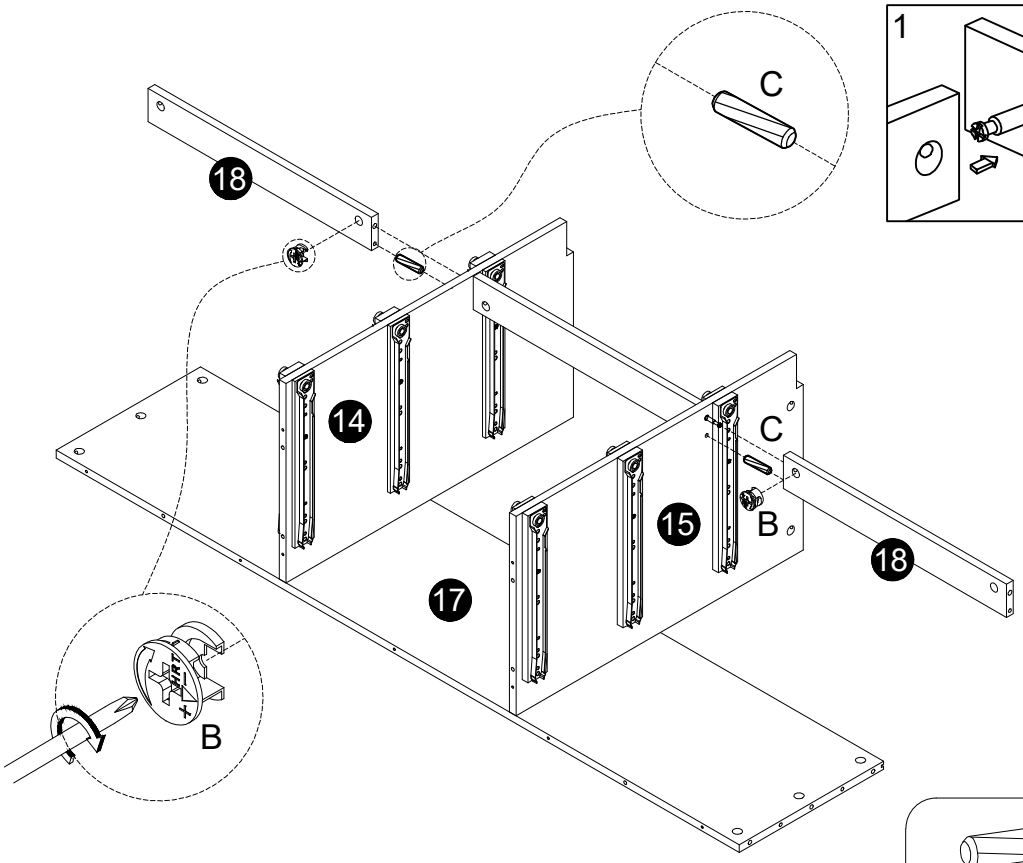


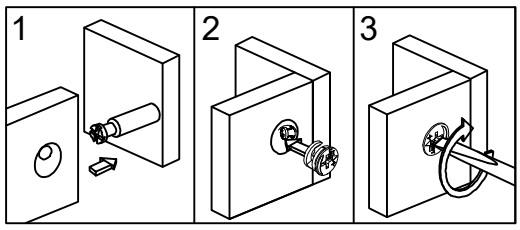

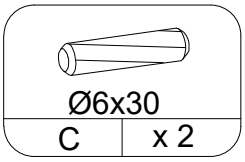


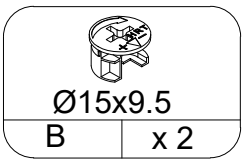


STEP 10

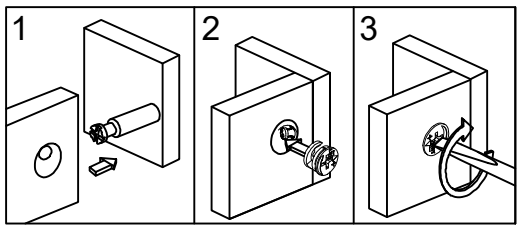

90°
flip

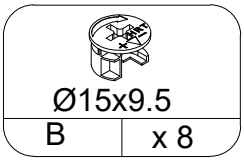


STEP 11

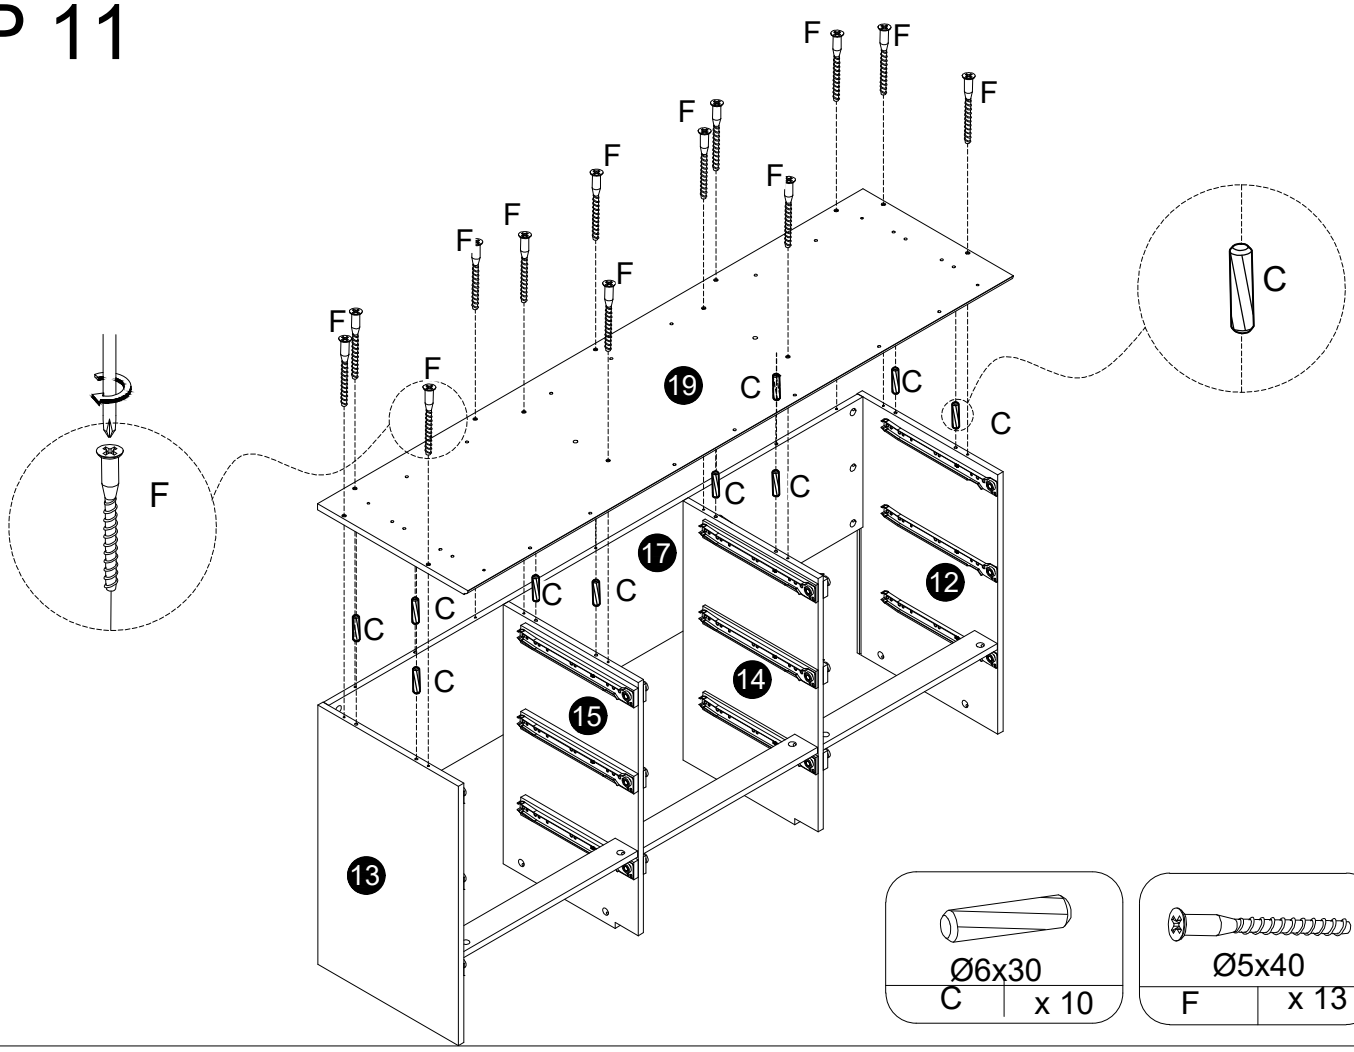

Ø6x30	
C	x 10

Ø5x40	
F	x 13


STEP 12

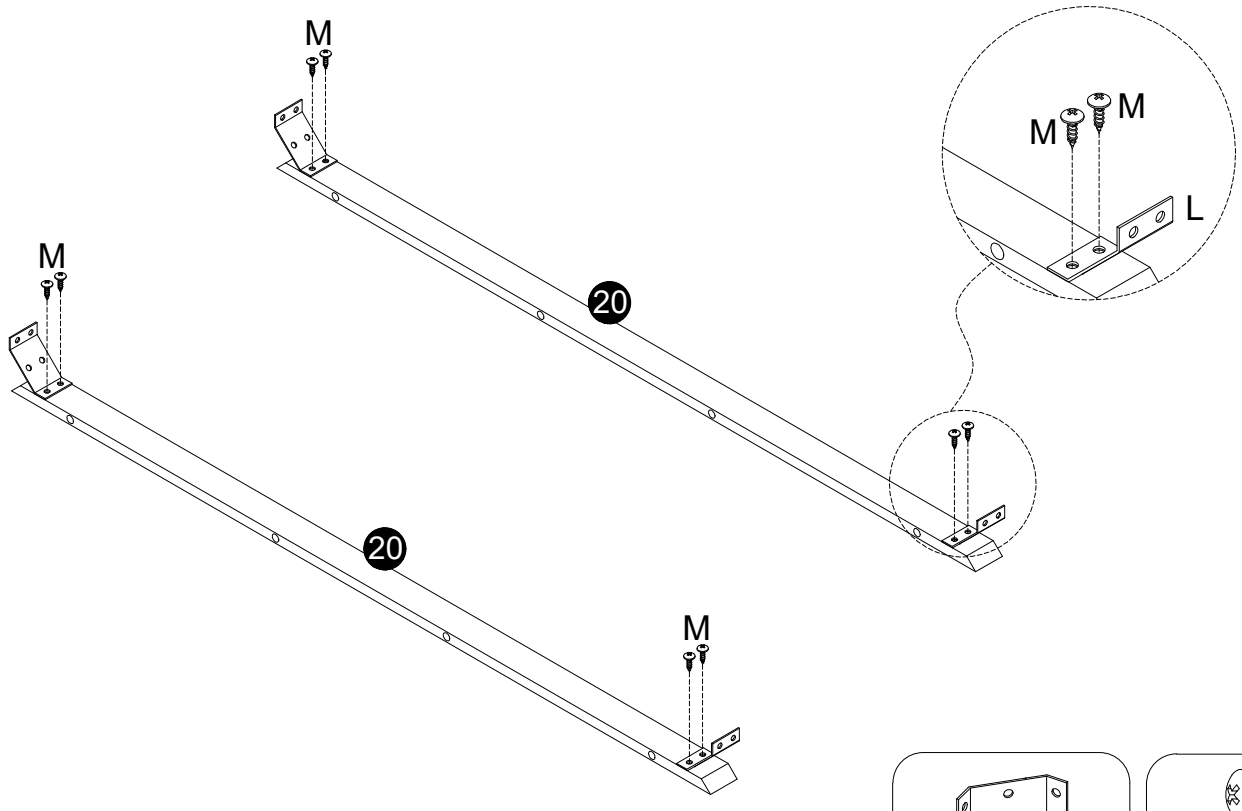


L	x 4

#10*15	
M	x 8


STEP 13 Note: Do not tighten the screws at this ste

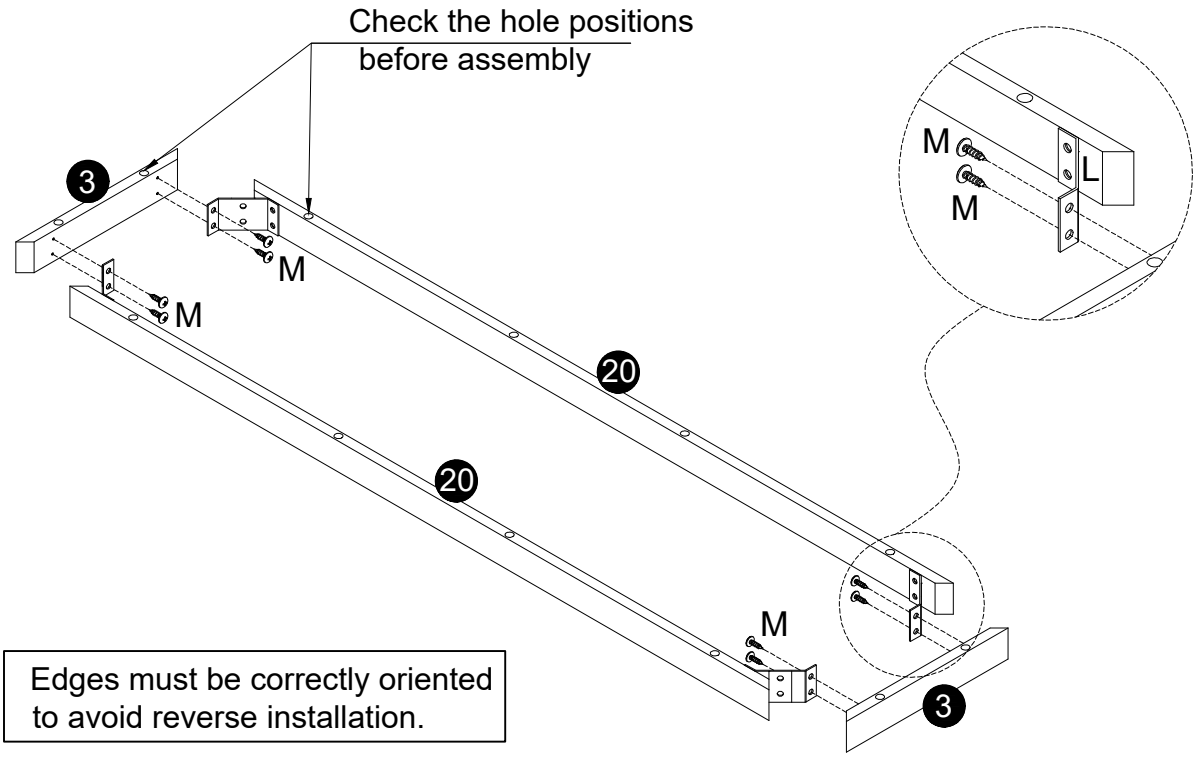


Edges must be correctly oriented to avoid reverse installation.

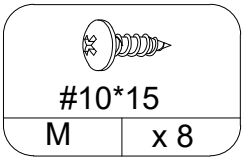


STEP 14 Tighten all screws and bolts.

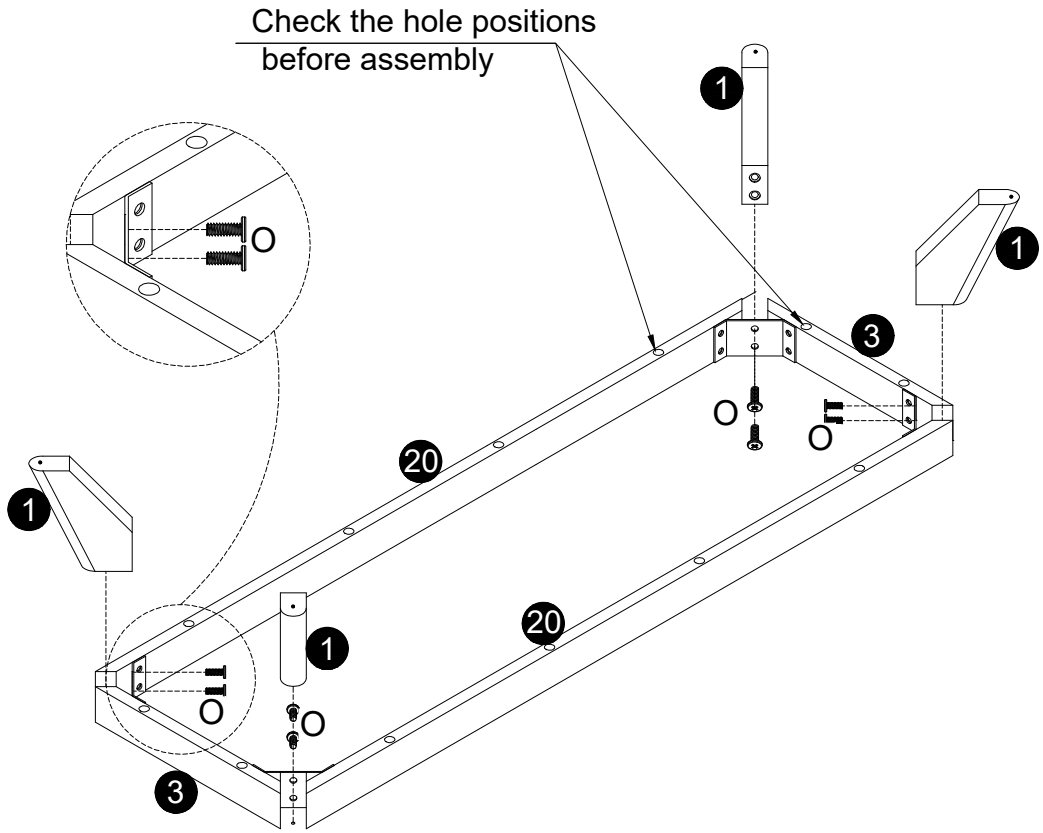

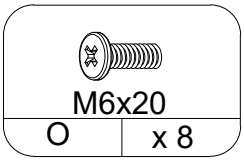


STEP 15

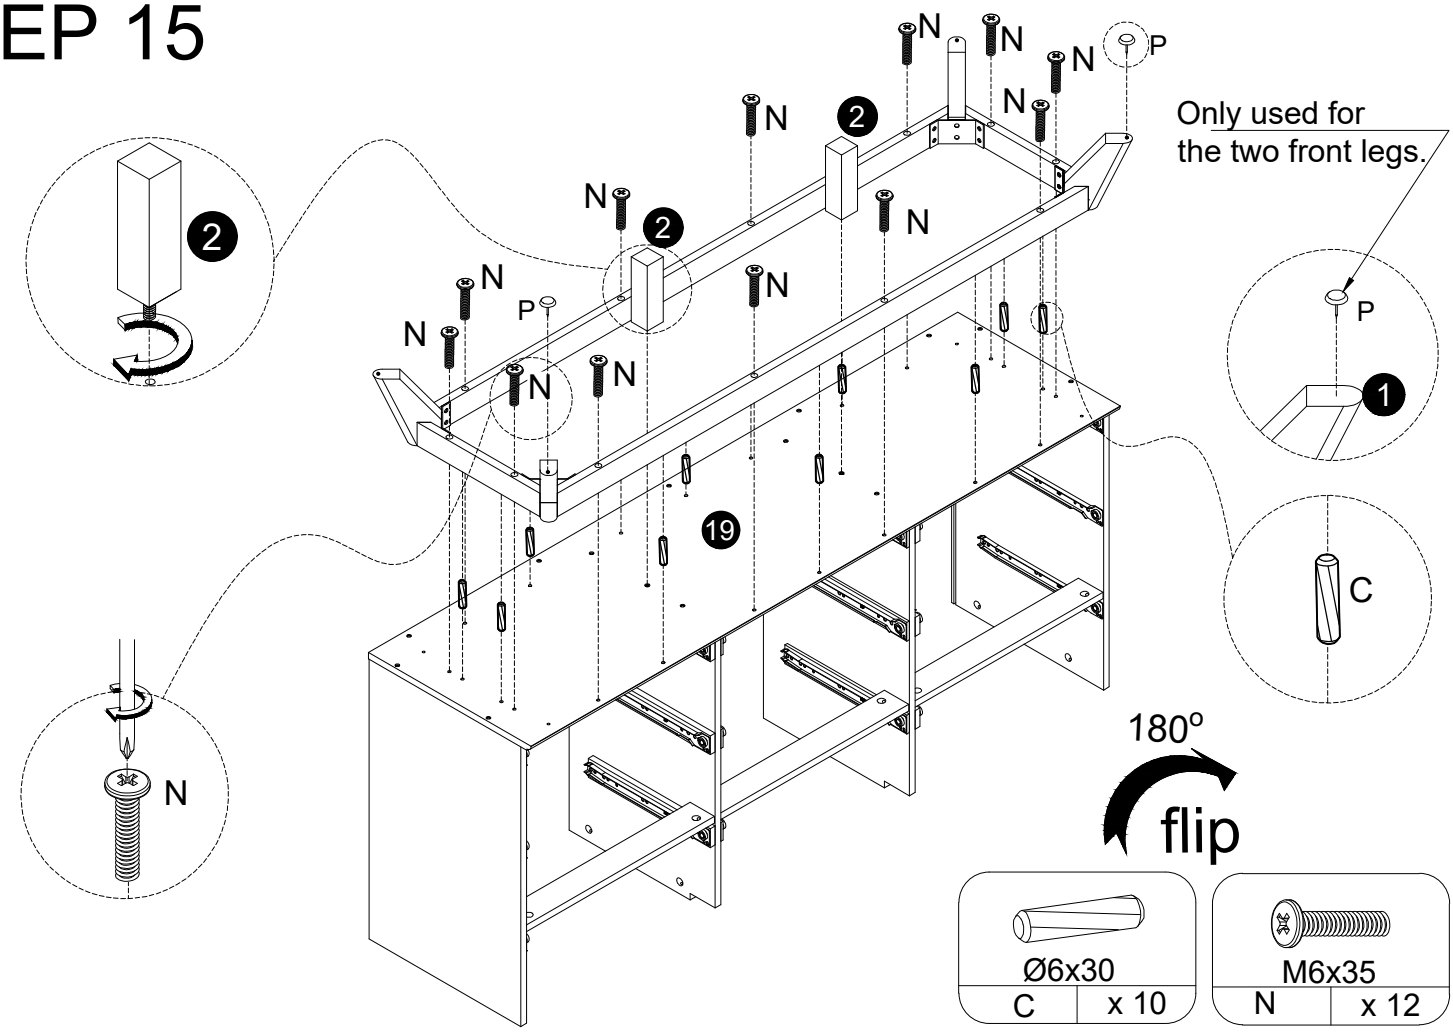

Ø6x30	
C	x 10


M6x35	
N	x 12

STEP 16

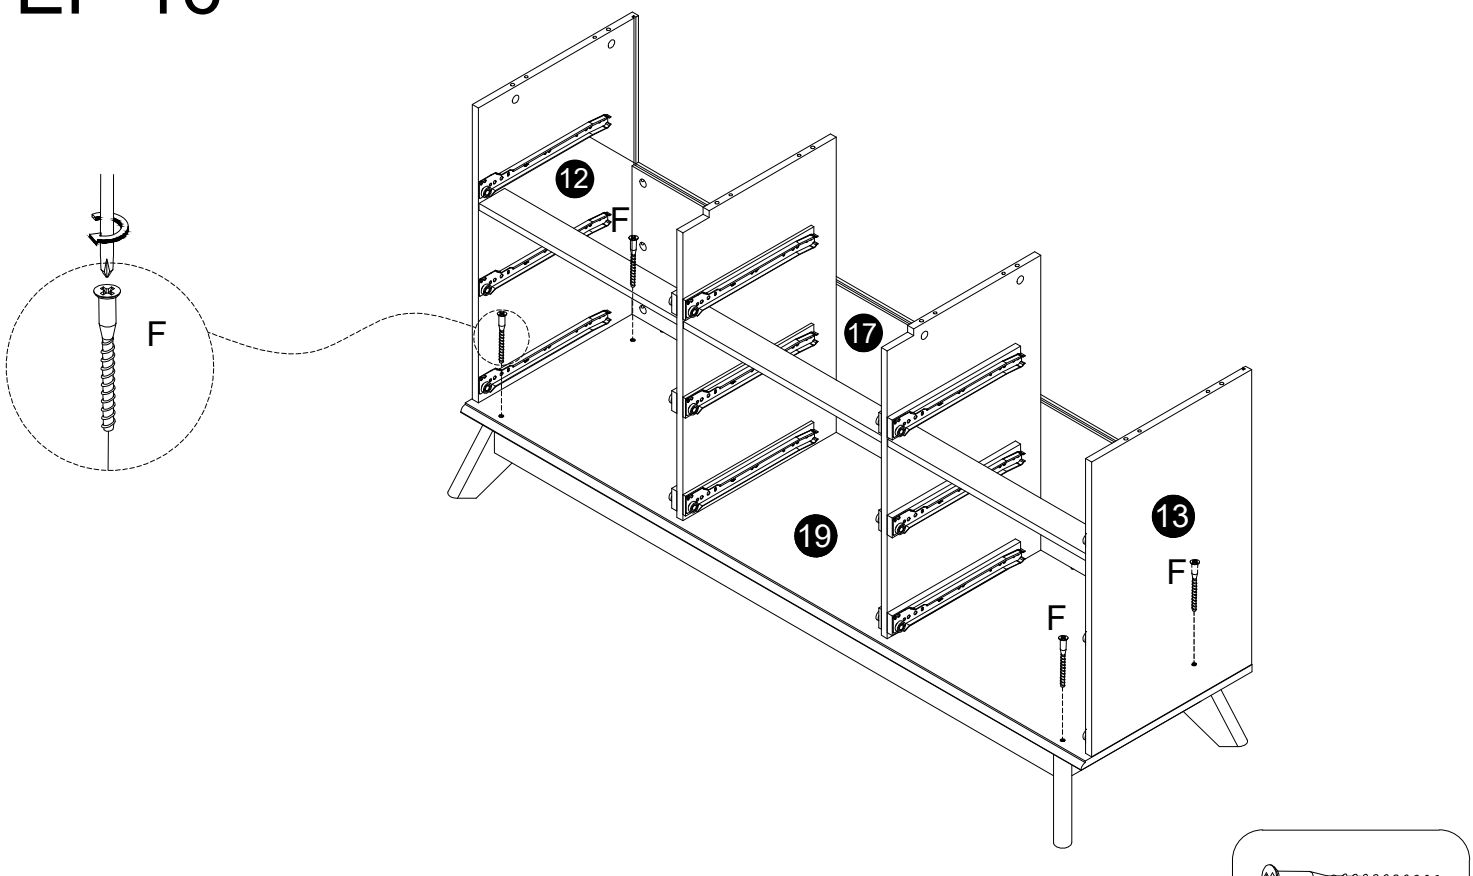



Ø5x40	
F	x 4

STEP 17

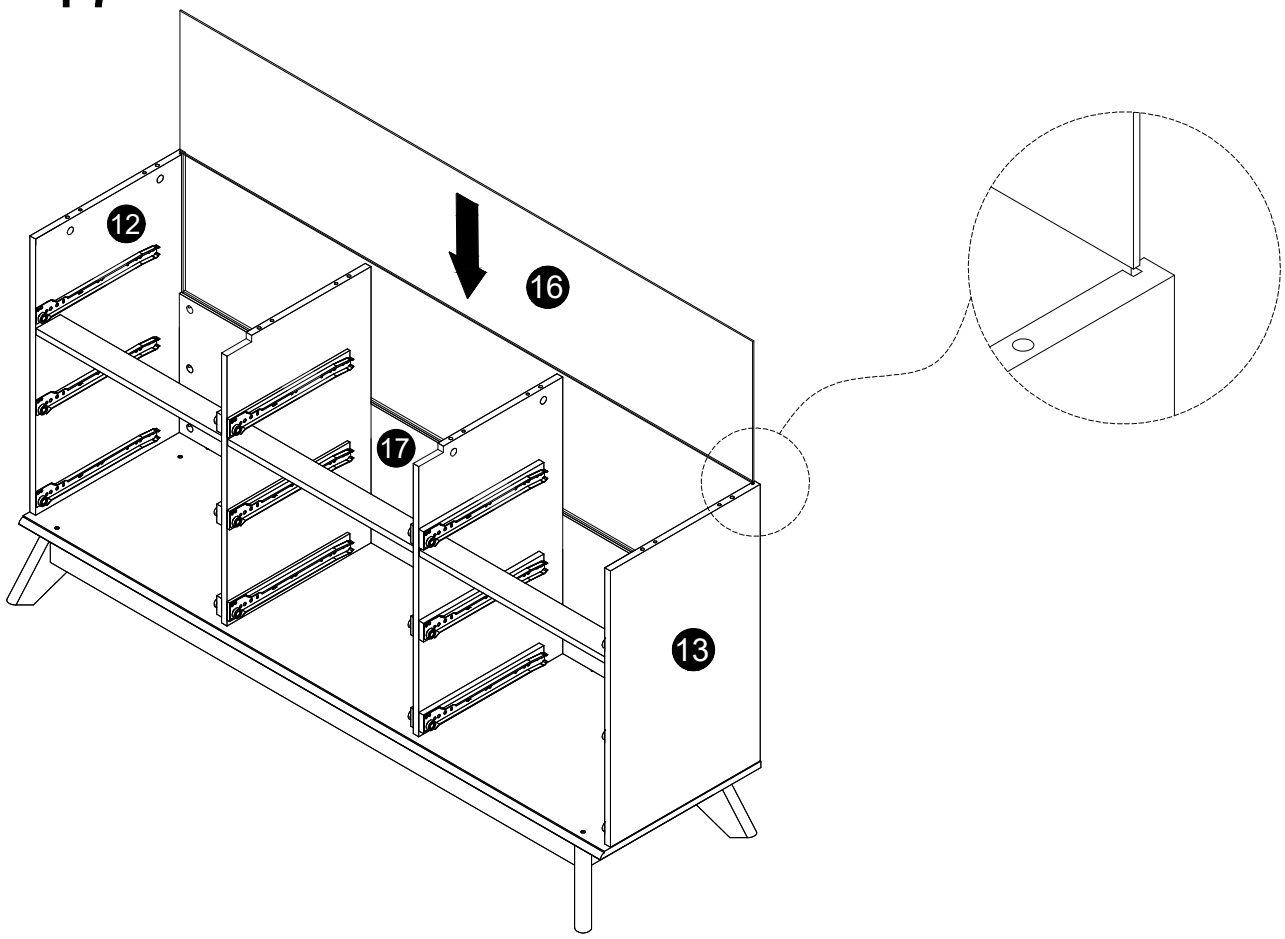



STEP 18

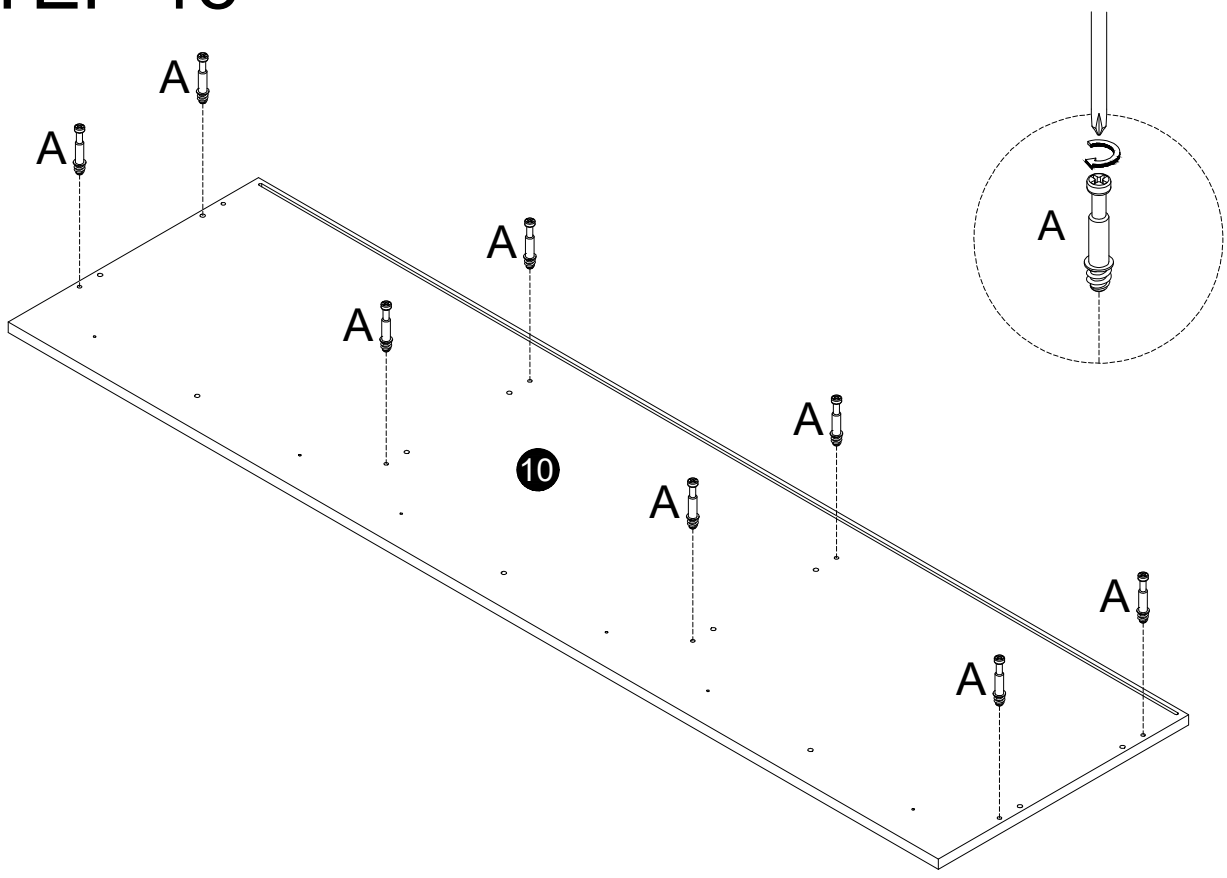

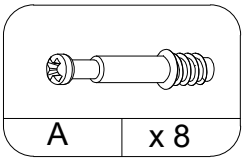


STEP 19

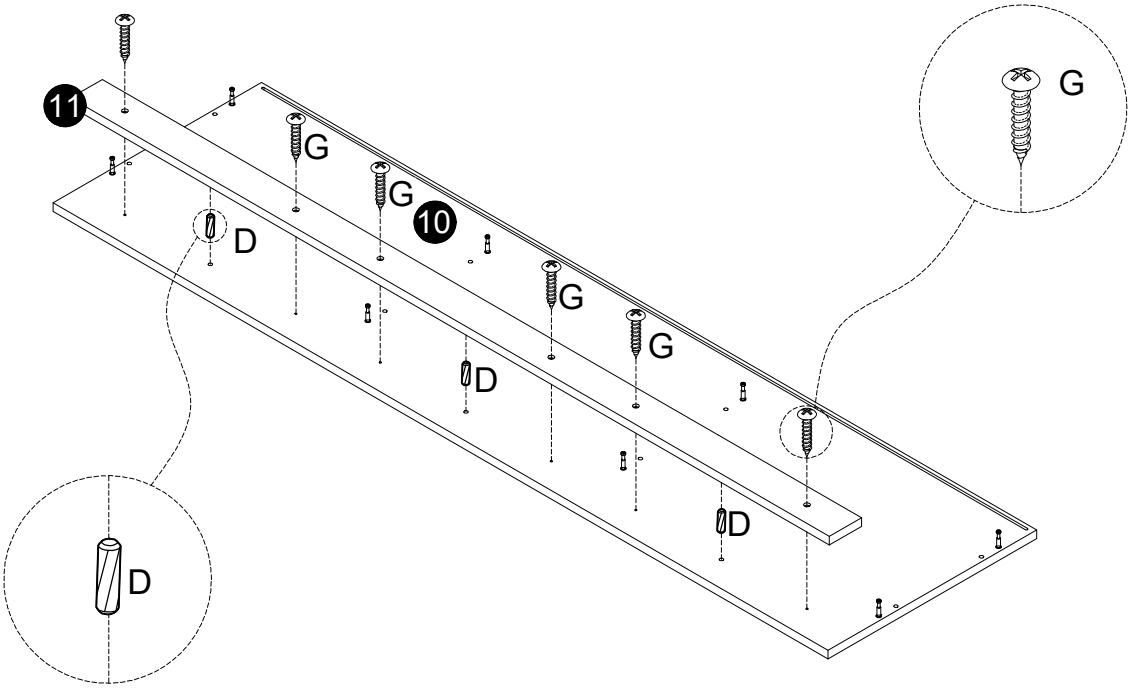




Ø4x16	
G	x 6




Ø6x20	
D	x 3

STEP 20

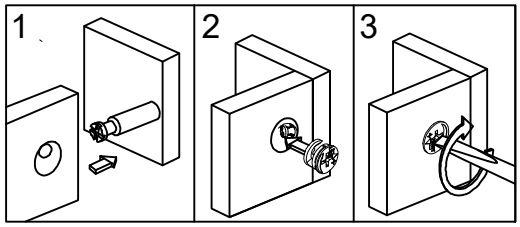



Ø6x30	
C	x 8




Ø15x9.5	
B	x 8


STEP 21

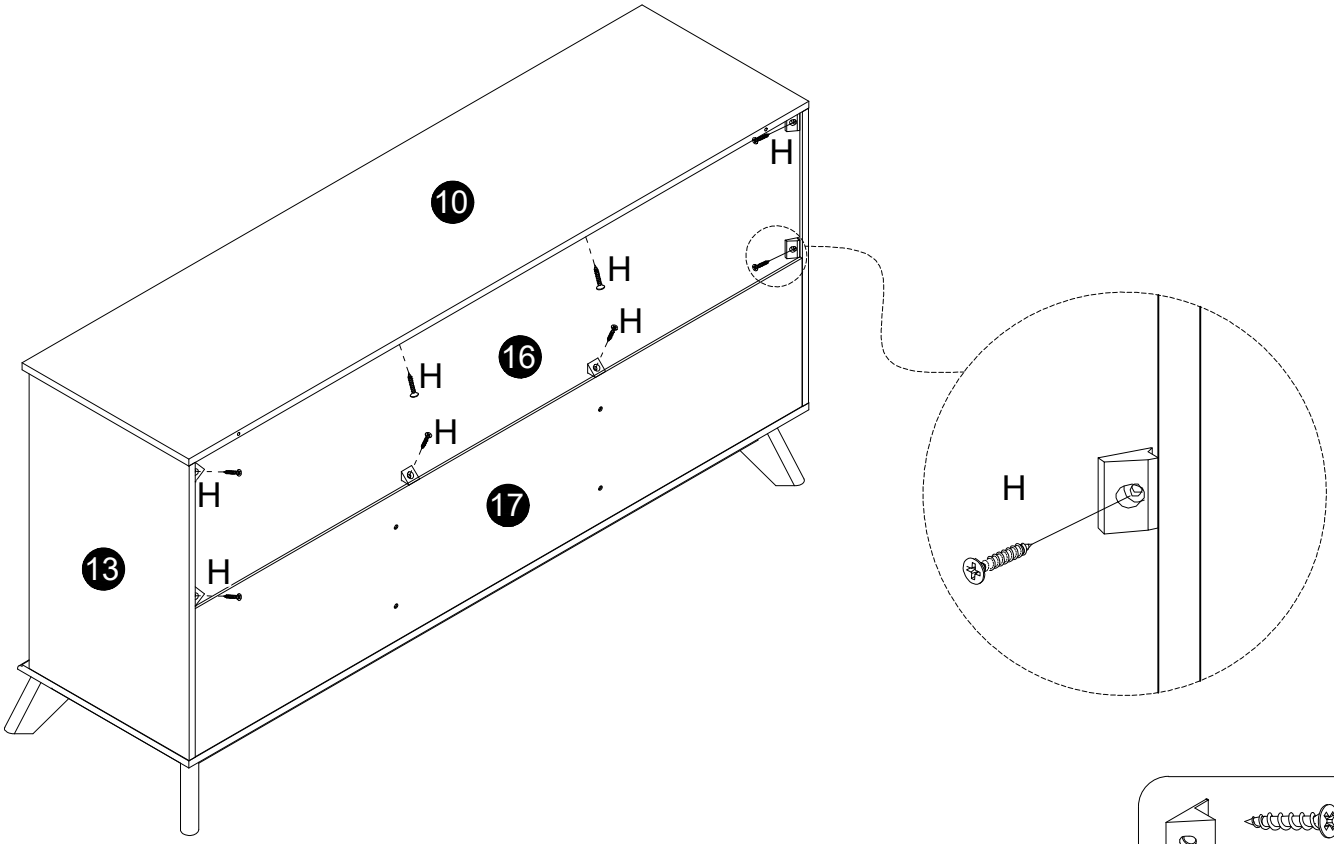

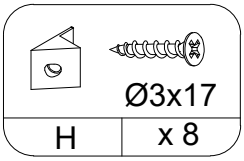


STEP 22

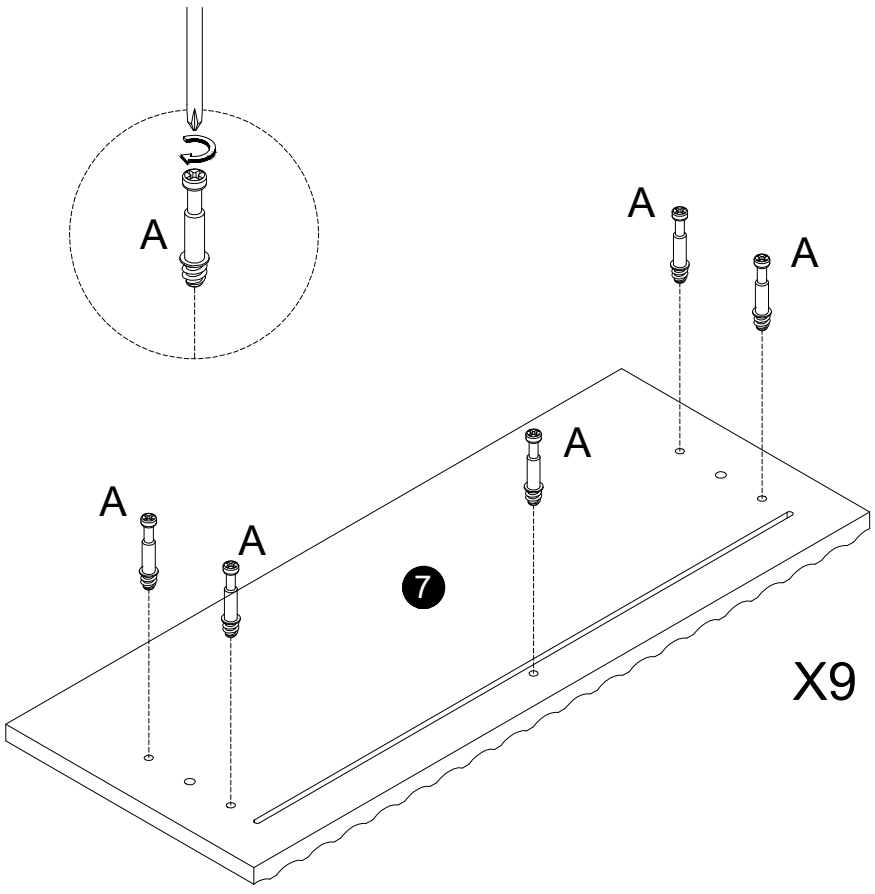

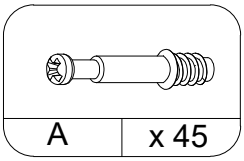


STEP 23

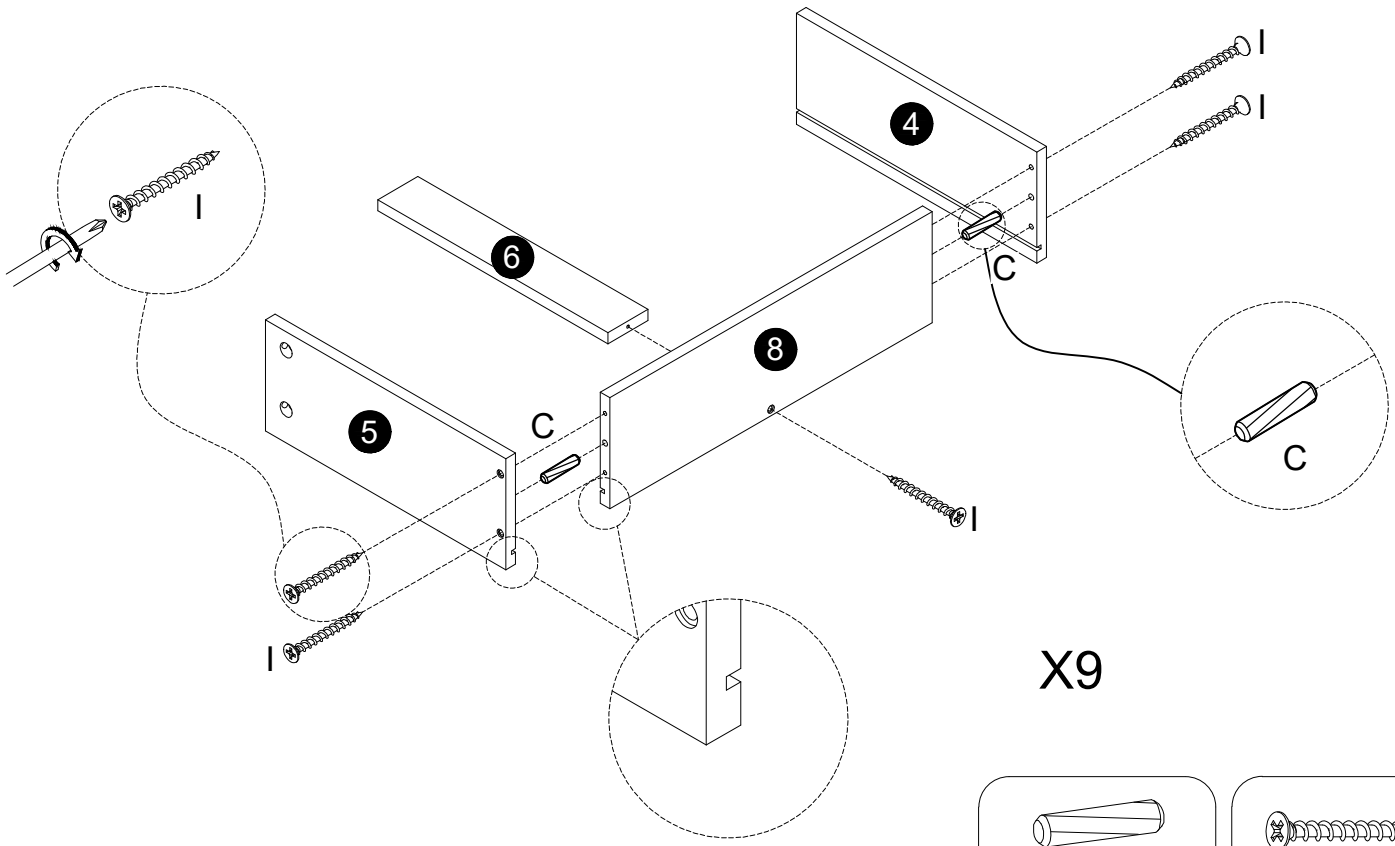


Ø6x30	
C	x18

Ø4x35	
I	x 45

STEP 24

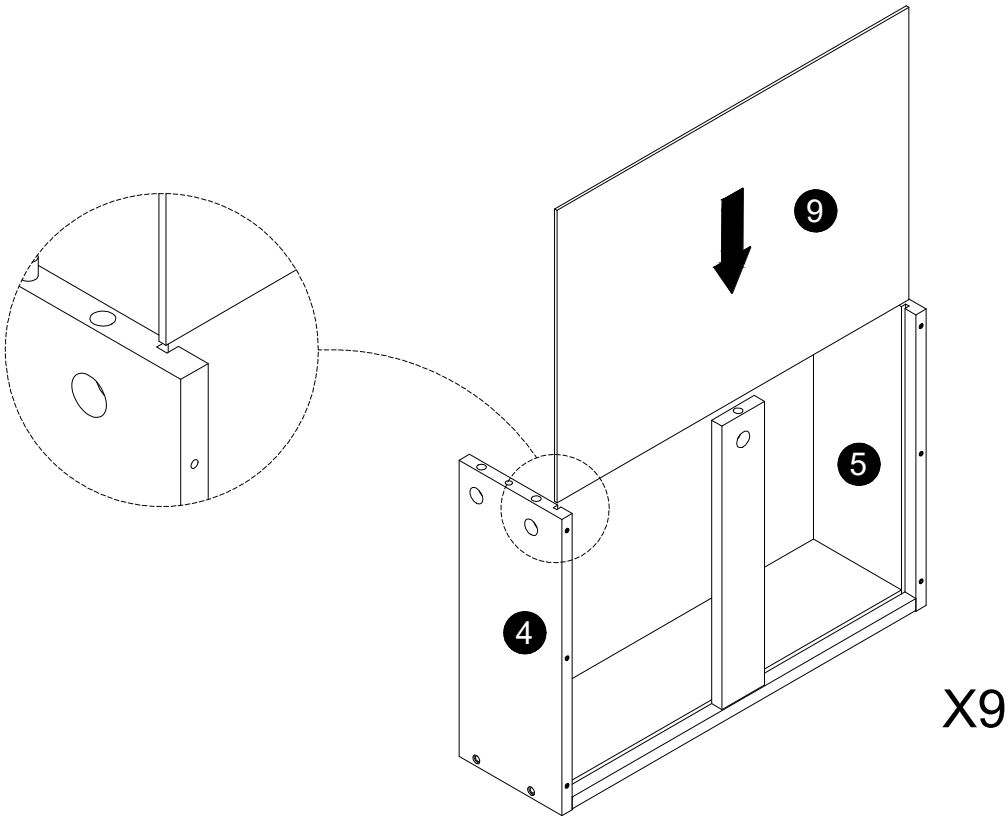

STEP 25

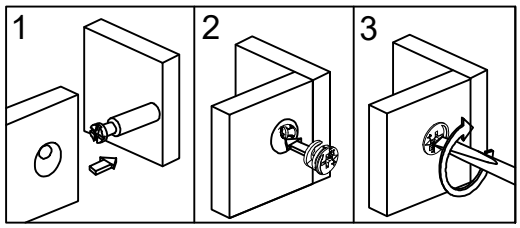


X9

Ø6x30	
C	x 18

Ø15x9.5	
B	x 45

STEP 26

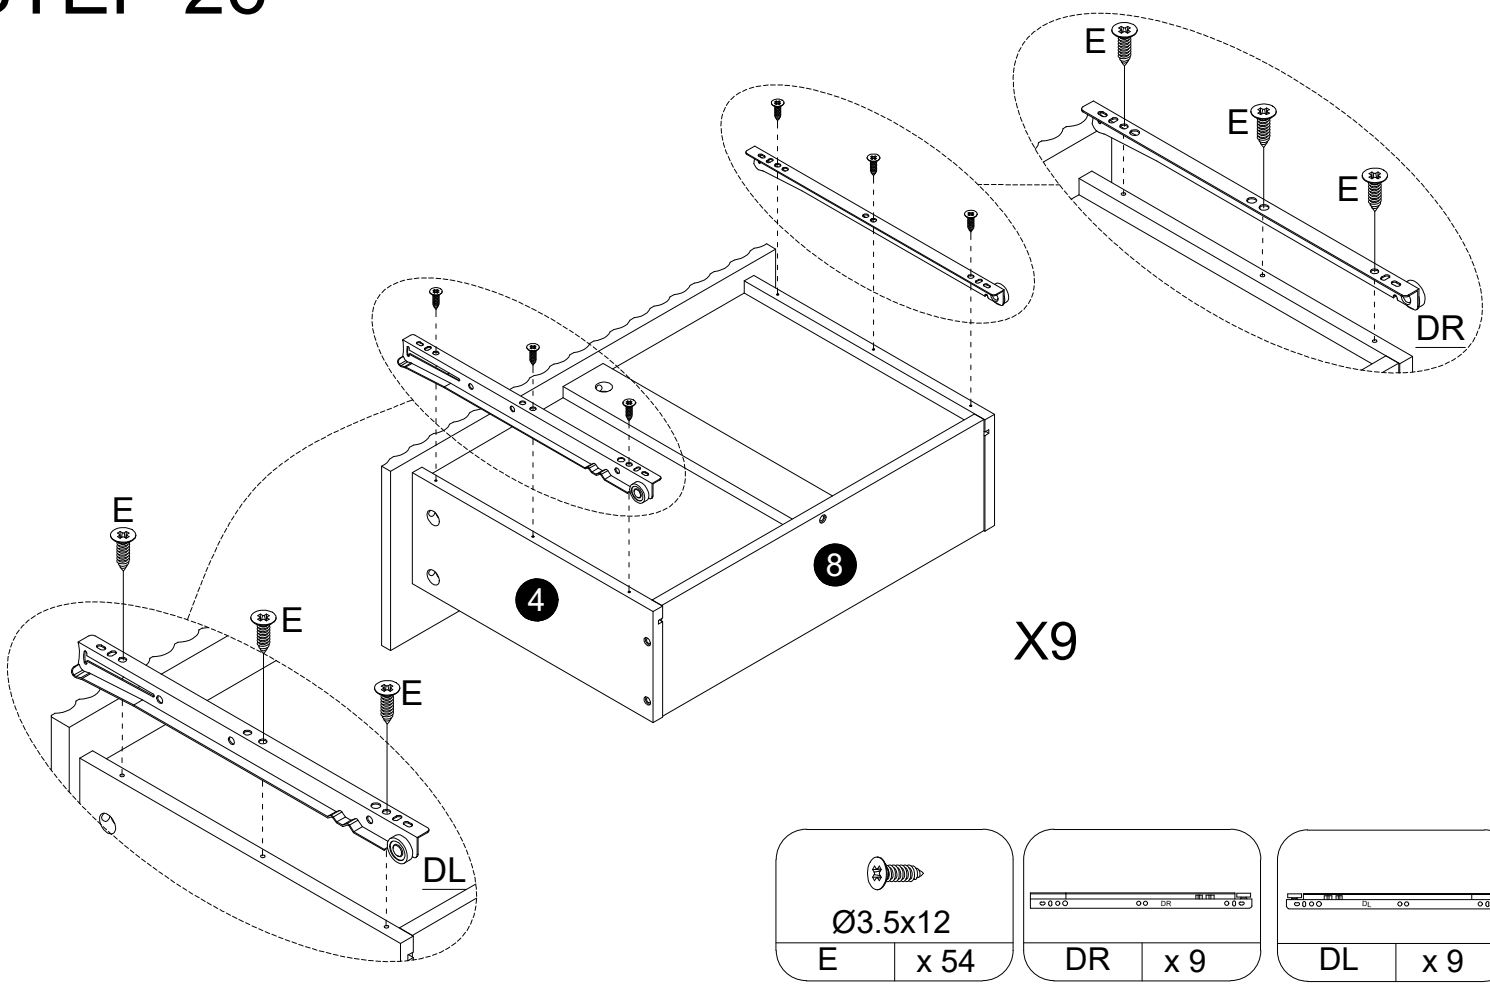


X9

Ø3.5x12	
E	x 54


DR	x 9

DL	x 9


STEP 27

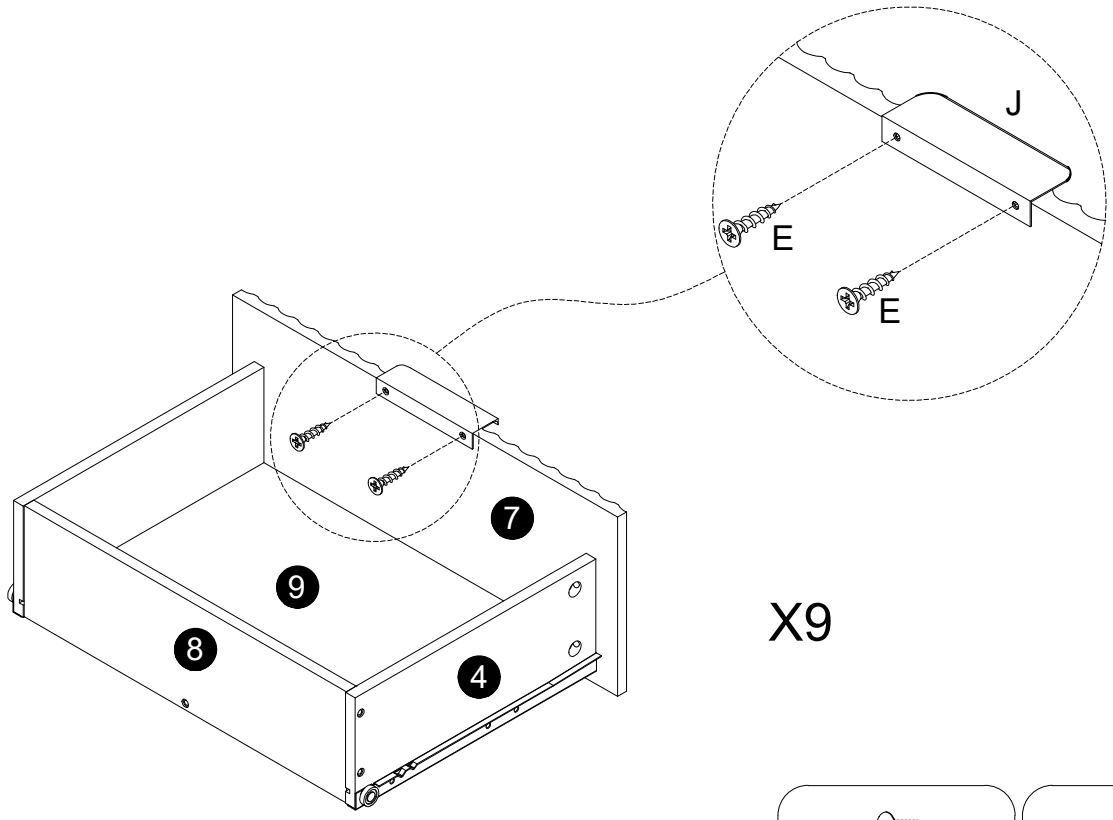


X9

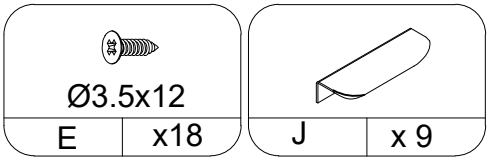


STEP 28

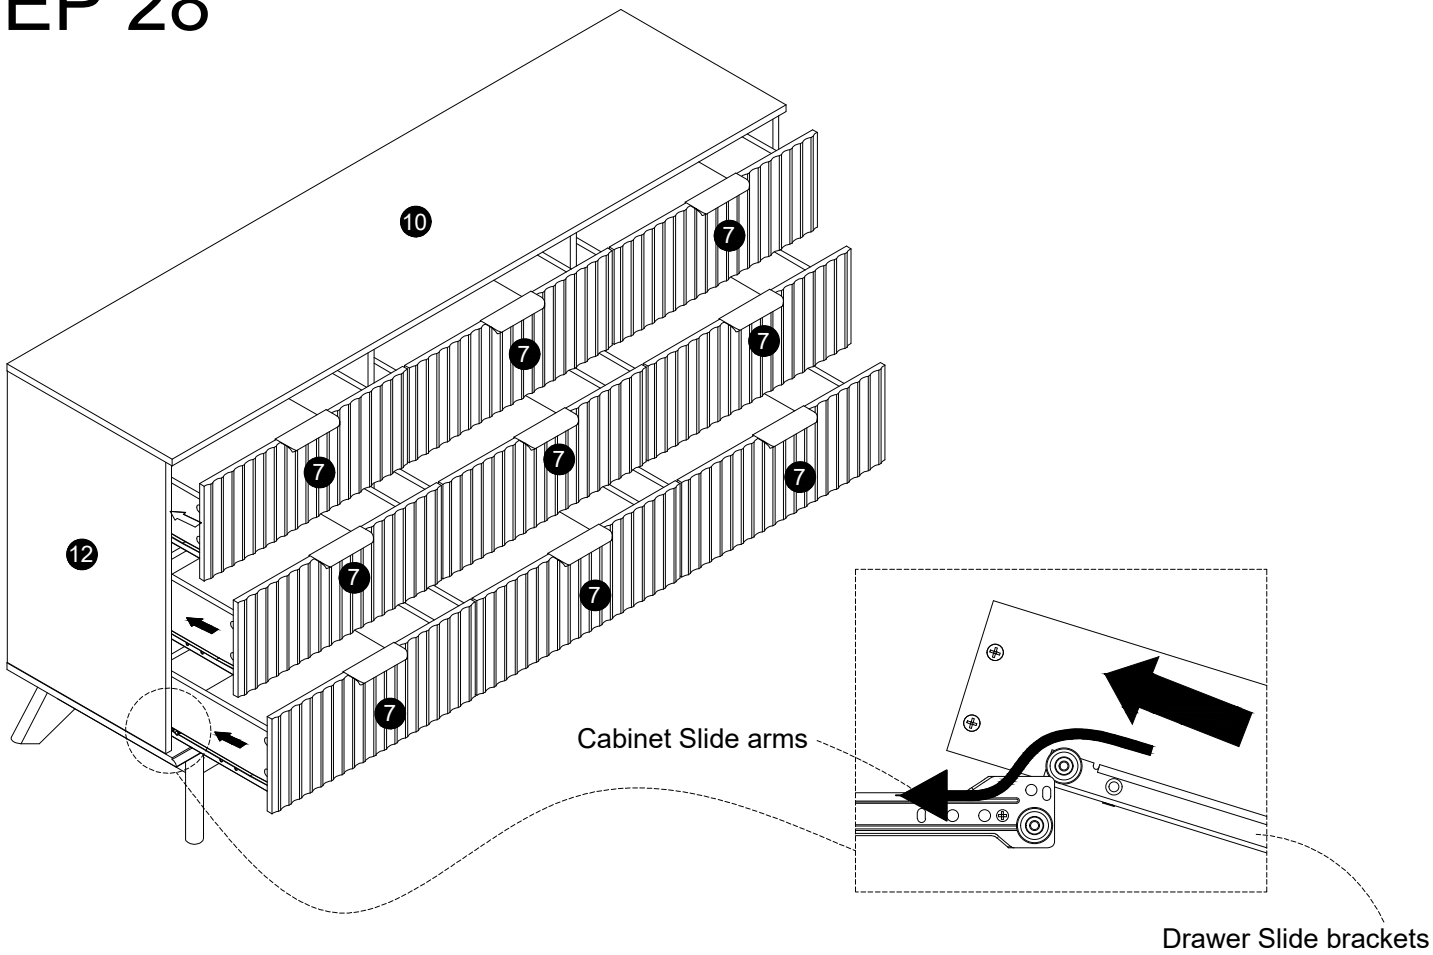


STEP 29

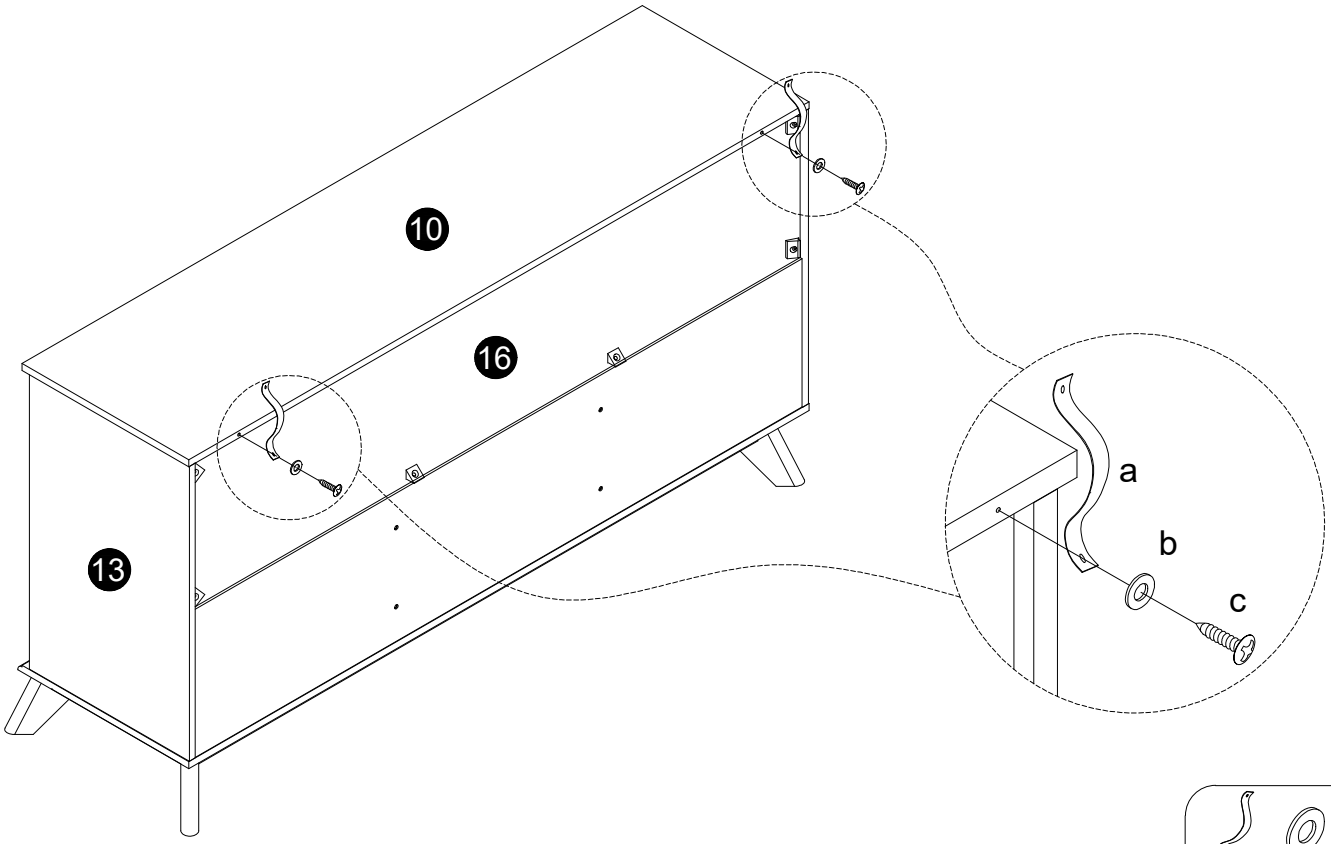


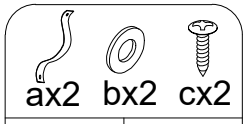

K


STEP 30

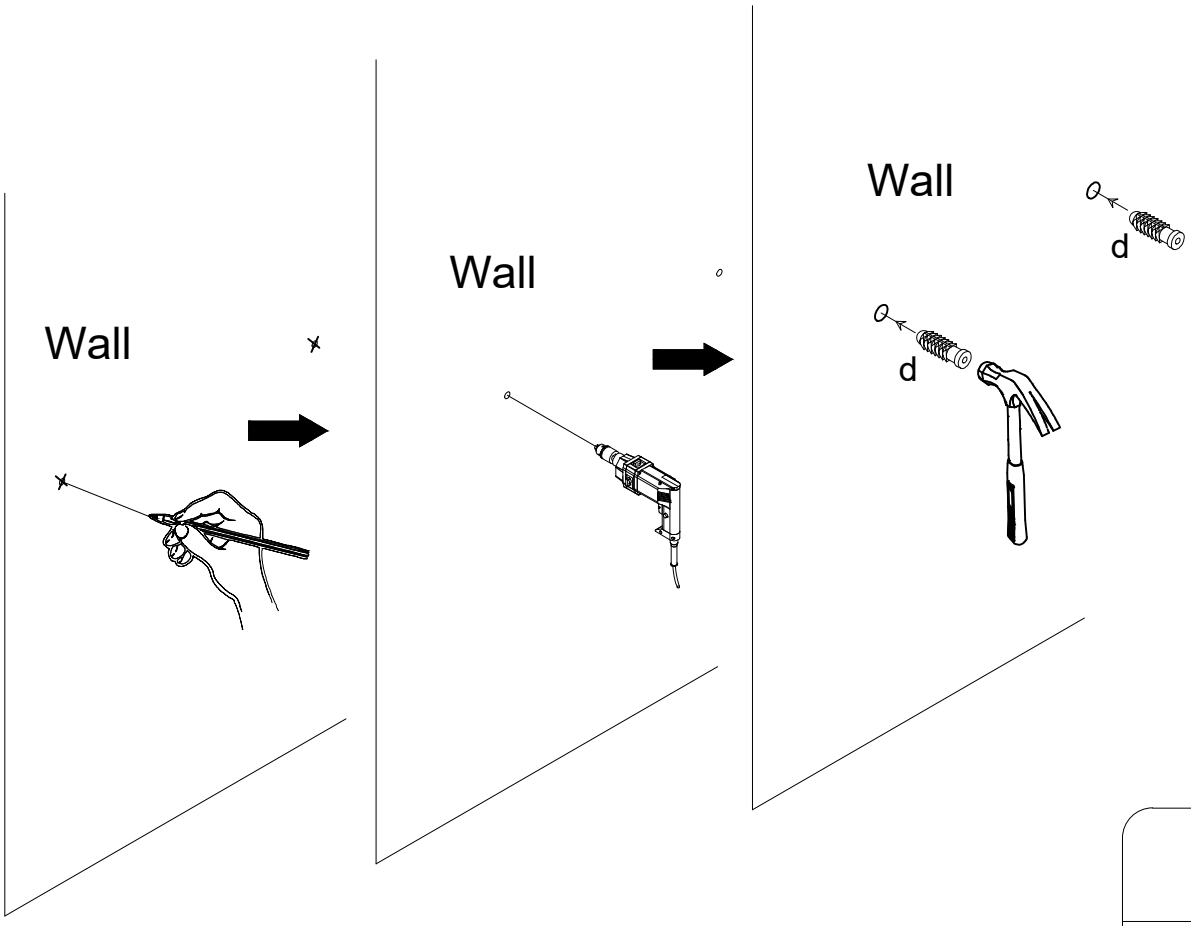



K

STEP 31

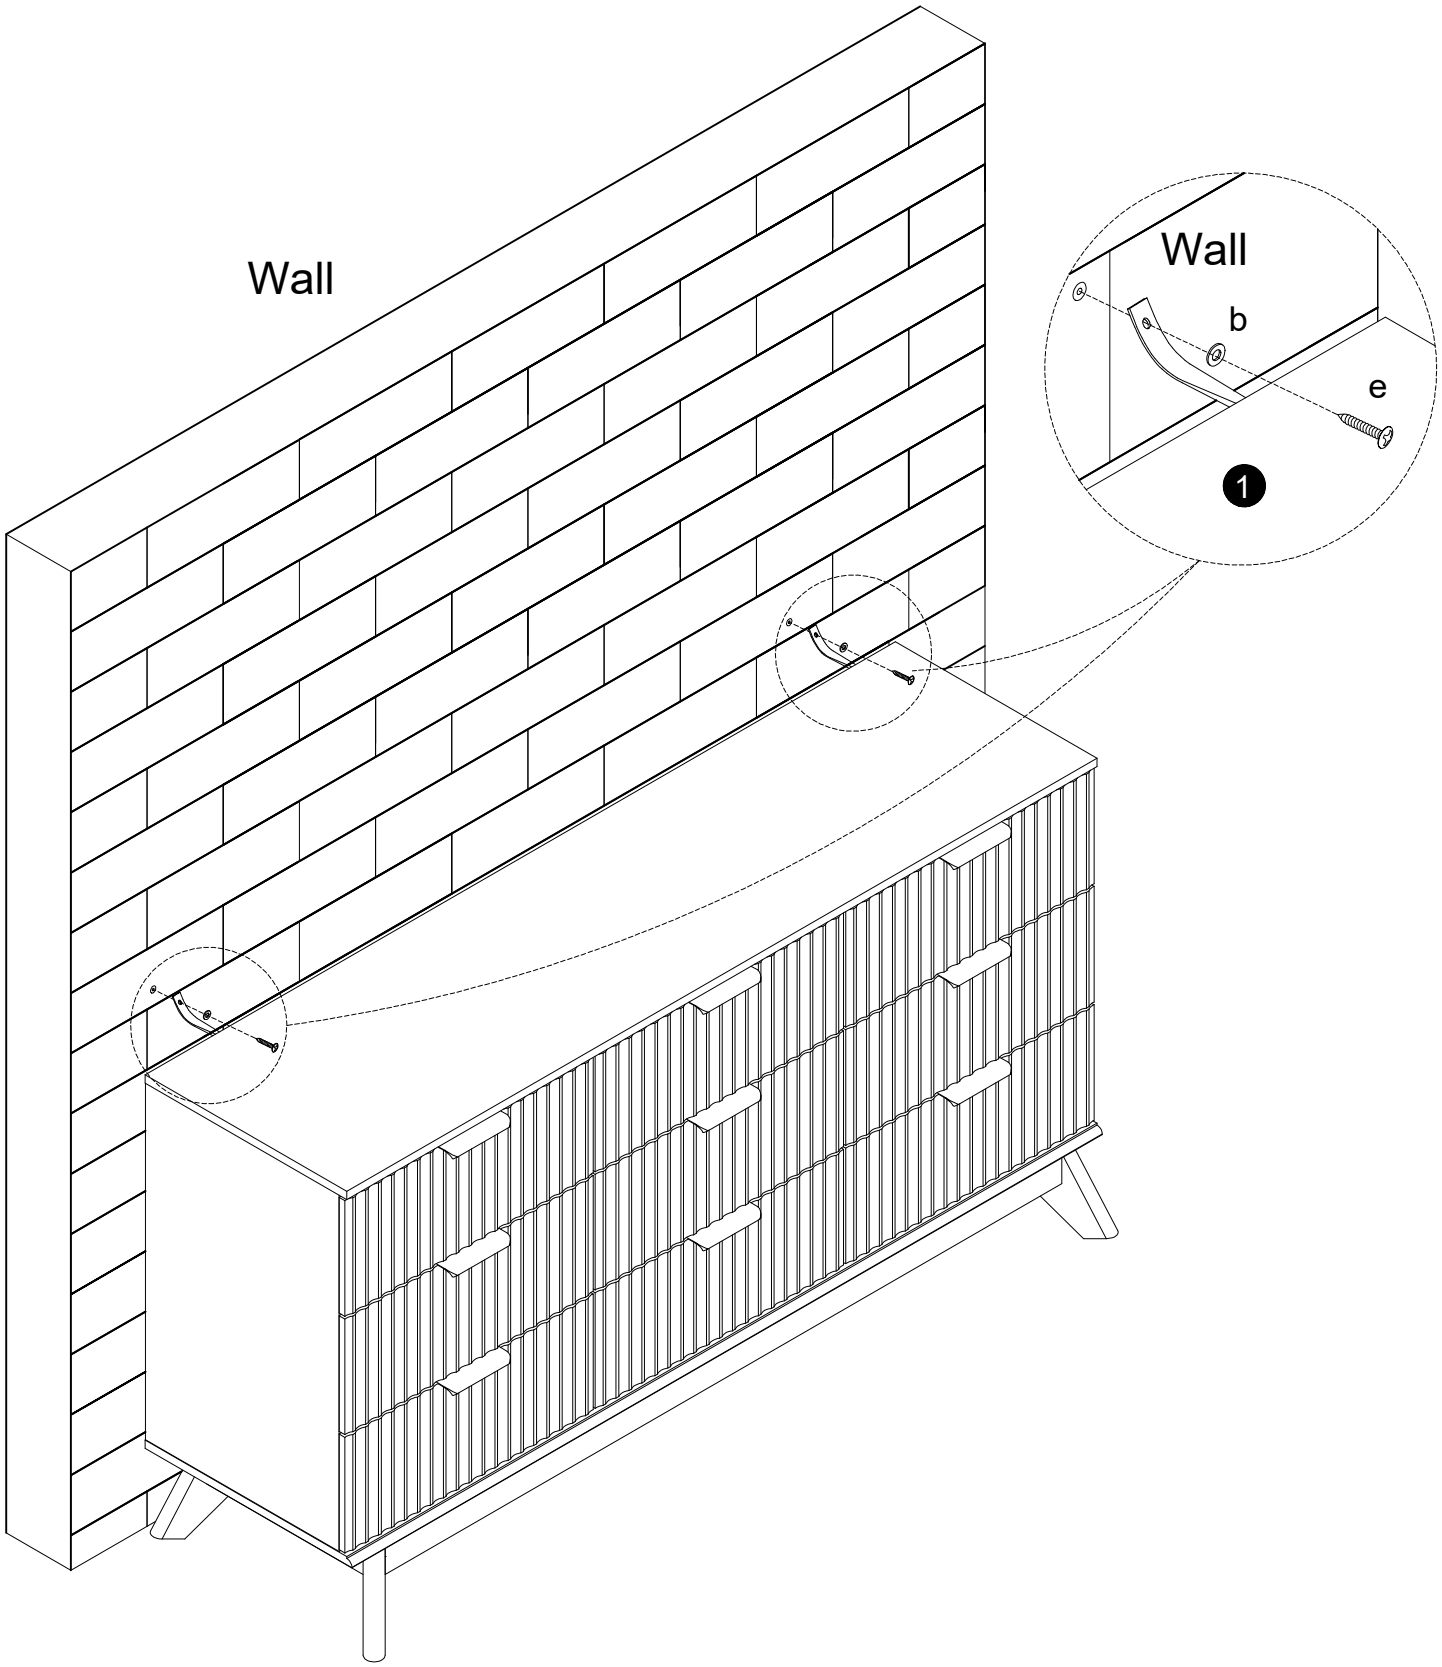

bx2	ex2
K	

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning