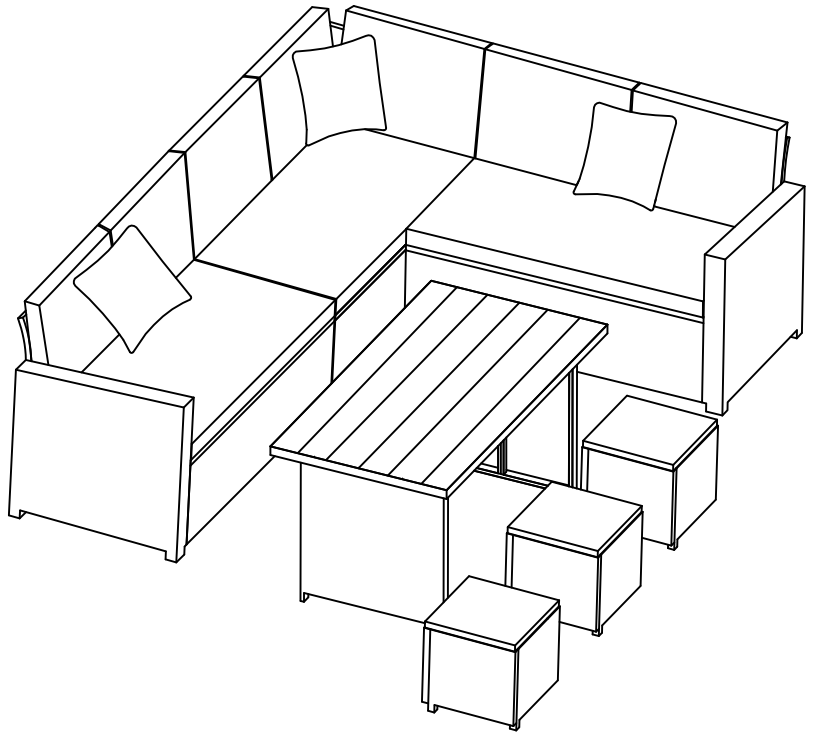
7-PIECE WICKER RATTAN OUTDOOR DINING SET

ASSEMBLY INSTRUCTIONS

YS250603 SERIES



ATTENTION

THANKS FOR CHOOSING OUR PRODUCTS!

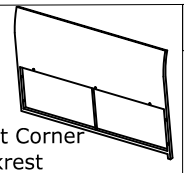
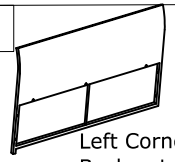
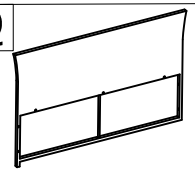
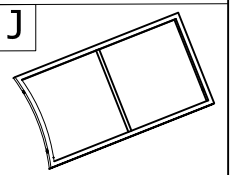
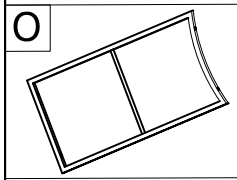
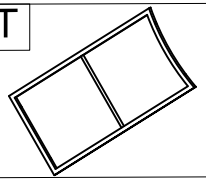
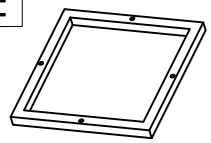
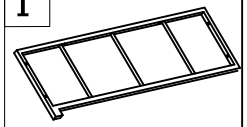



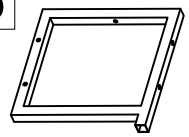
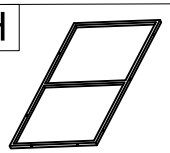
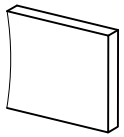
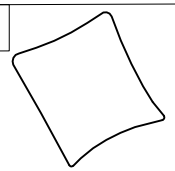
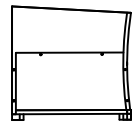
1. This 7-Piece Wicker Rattan Outdoor Dining Set comes in 3 boxes,please check the part list carefully to make sure you've received all the parts.

2. If there are any missing parts,please contact us with the part # and quantity,we will send them to you ASAP.

3. If there are any damaged parts,please contact us with clear pictures or video,we will offer you the best solution after confirming it.

Assembly Instruction



Parts List(BOX A)

G  Right Corner Backrest	L  Left Corner Backrest	Q 	J 
1 PC	1 PC	1 PC	1 PC
O 	T 	E 	I 
1 PC	1 PC	3 PCS	1 PC
N 	S 	C 	D 
1 PC	1 PC	1 PC	12 PCS
H 	X 	f 	P 
1 PC	1 PC	3 PC	1 PC
a  M6x25	b  M6x30	c  M6x40	d  M6
4 PCS	68 PCS	2 PCS	89 PCS





Assembly Instruction





e	g	
	 M6x35	
1 PC	15 PCS	

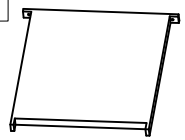Parts List(BOX B)

A	B	
		
1 PC	2 PCS	

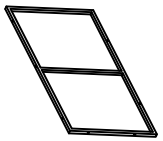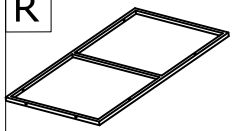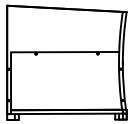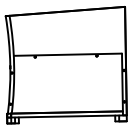Parts List(BOX C)

M	R	F	K
		 Right Armrest	 Left Armrest
1 PC	1 PC	1 PC	1 PC

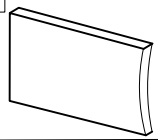V	U	Y	W
			
5 PCS	3 PCS	3 PCS	1 PC

NOTE


1. If one or some screws are fully tightened during assembly,the other screws may not be aligned with screw holes.70% tighten before fastening all screws.Allen wrench is recommended instead of an electric drill.

2. If some screws are not aligned with holes during assembly,please loosen all the other screws to 70% and continue the assembly process.

3. If the items is not stable,please loosen all the screws,adjust it on a flat ground and tighten all the screws.


7-PIECE WICKER RATTAN OUTDOOR DINING SET

Step 1	
	A*1
	B*1
M6x25	a*2
M6	d*2

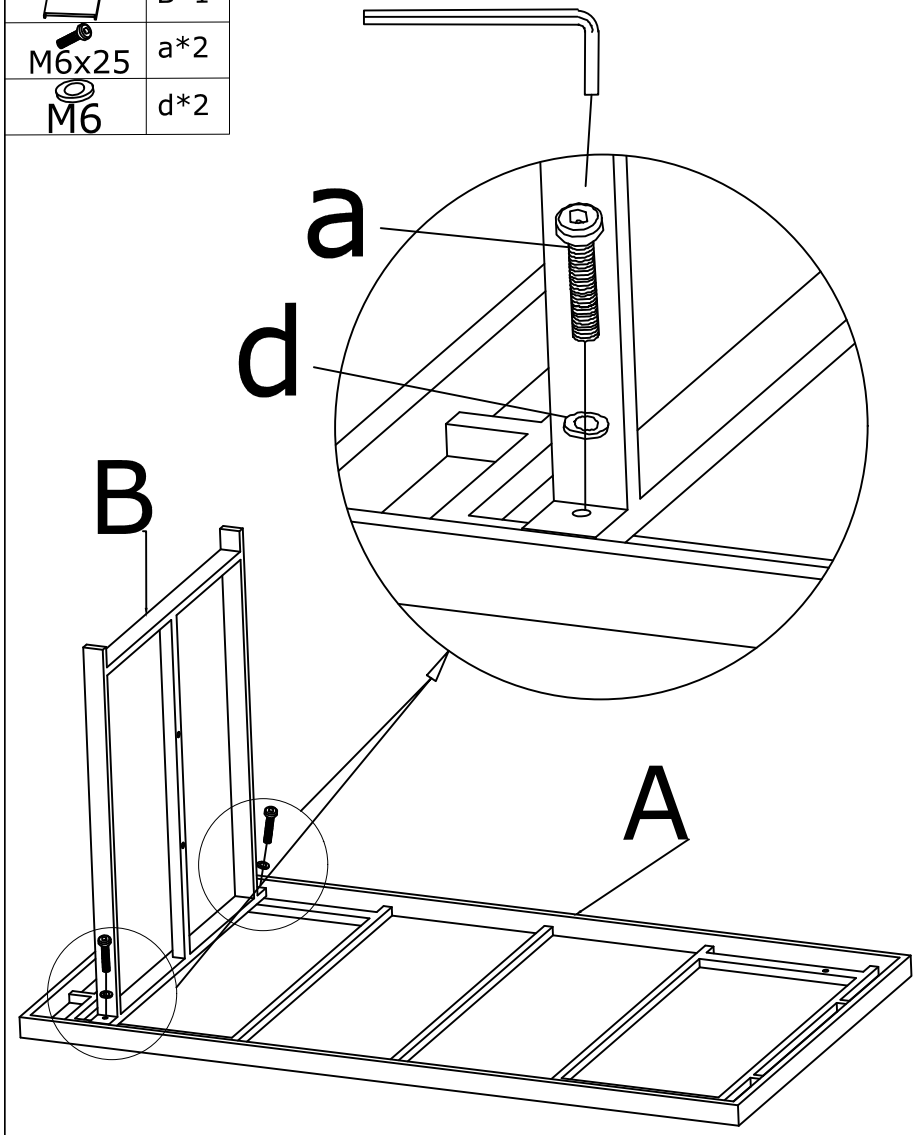


7-PIECE WICKER RATTAN OUTDOOR DINING SET

Step 2	
	B*1
M6x25	a*2
M6	d*2

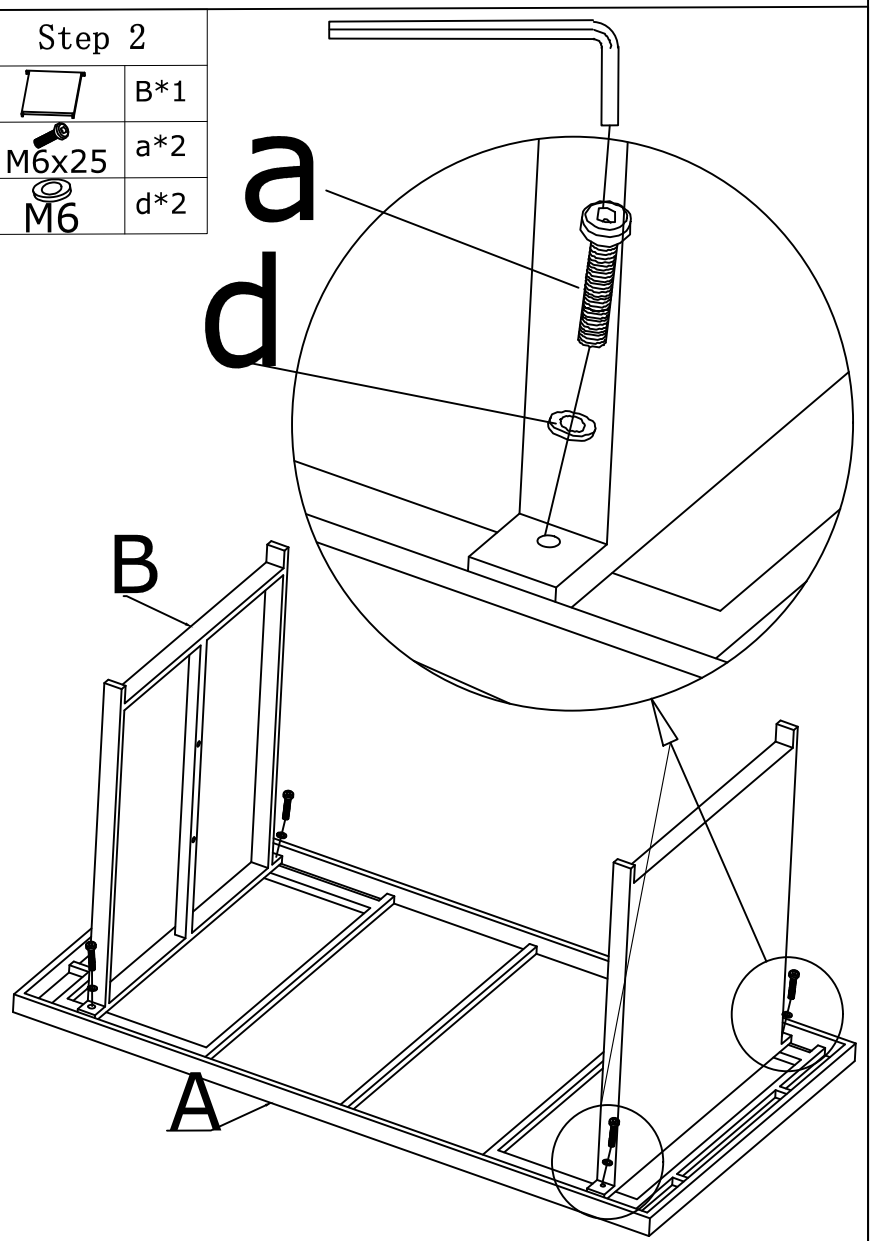


Step 3

	C*1
 M6x30	b*4
 M6	d*4

7-PIECE WICKER RATTAN OUTDOOR DINING SET


Step 4

	E*1
	D*1
 M6x30	b*1
 M6	d*1

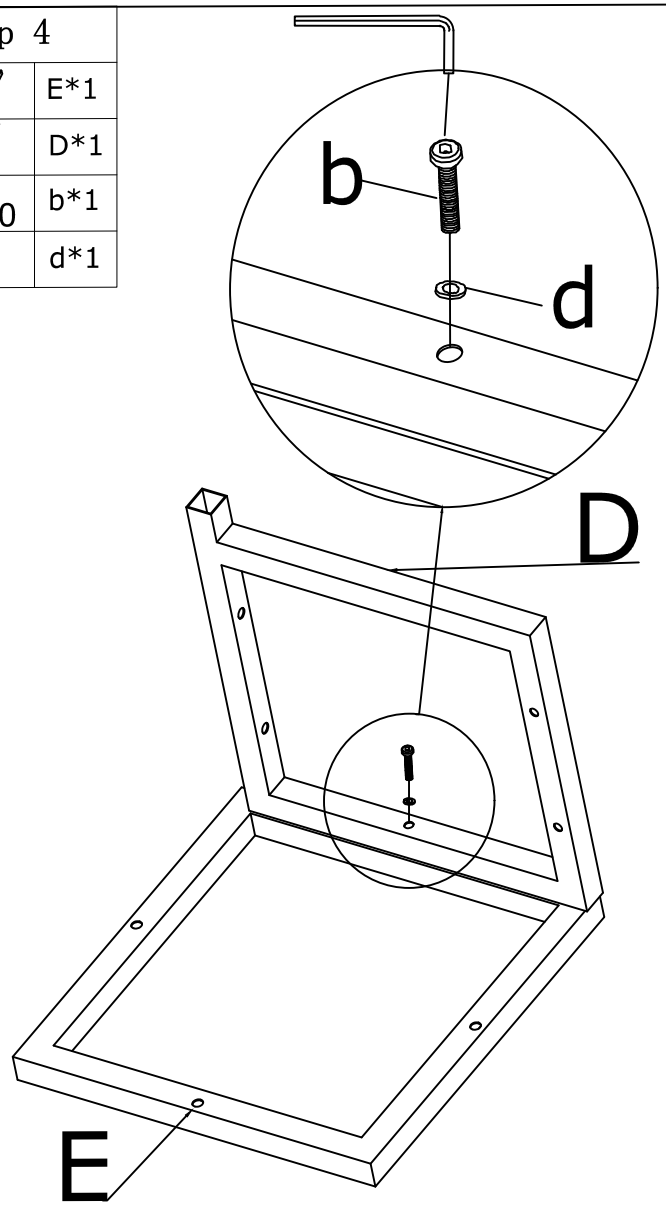

Step 5


	D*1
 M6x30	b*3
 M6	d*3

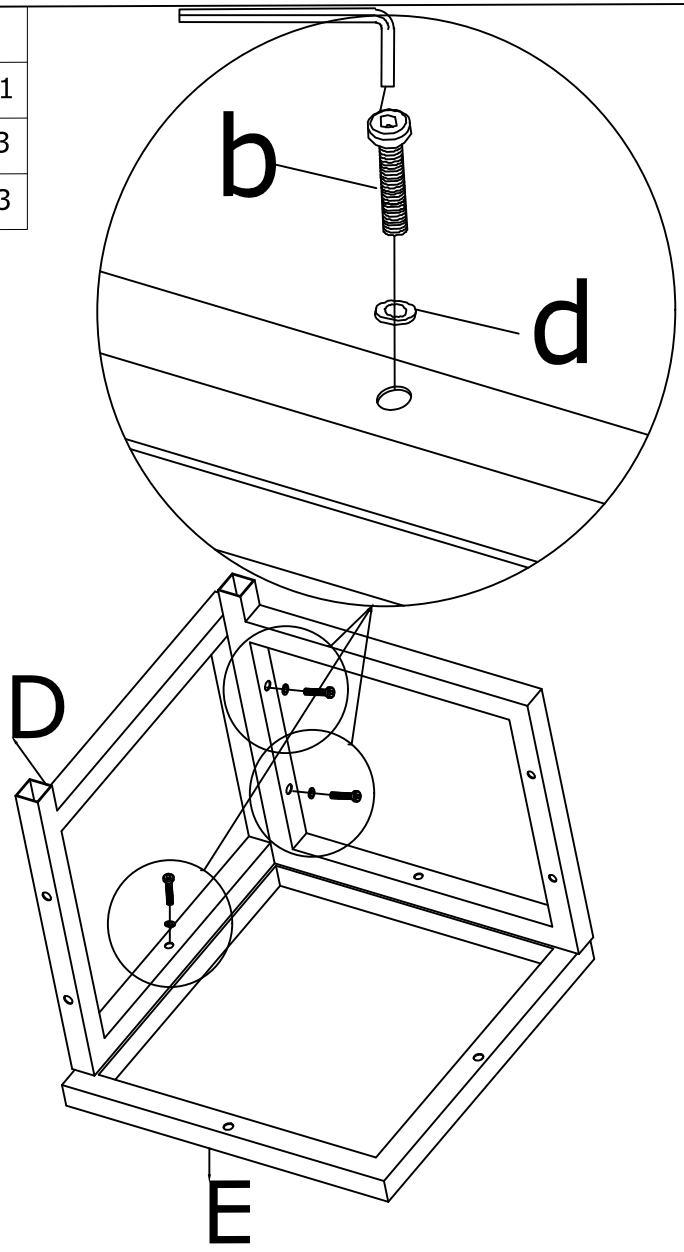

7-PIECE WICKER RATTAN OUTDOOR DINING SET


Step 6

	D*1
 M6x30	b*3
 M6	d*3

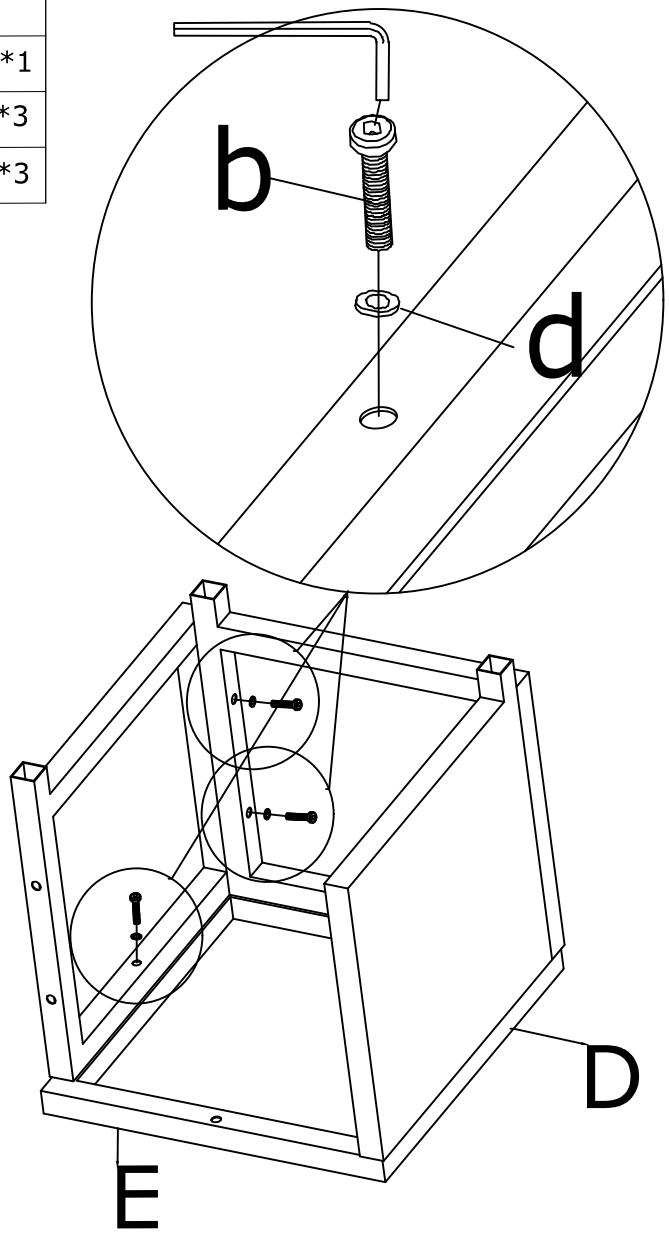

Step 7

	D*1
 M6x30	b*5
 M6	d*5

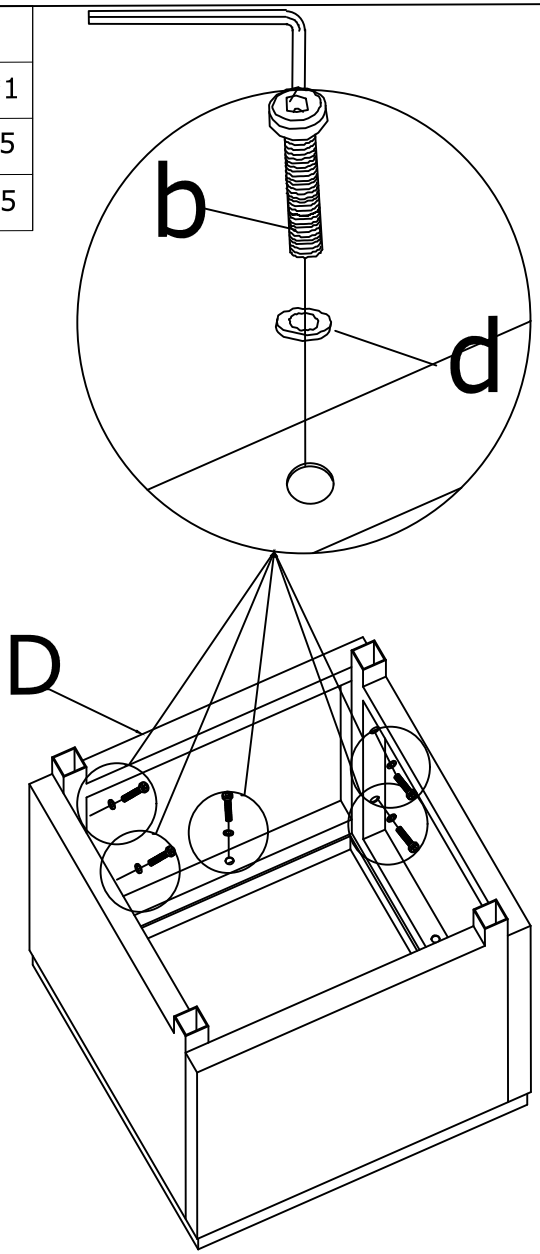


7-PIECE WICKER RATTAN OUTDOOR DINING SET

Step 8


	G*1
	H*1
 M6x35	g*3
 M6	d*3

Step 9	
	J*1
M6x30	b*2
M6	d*2

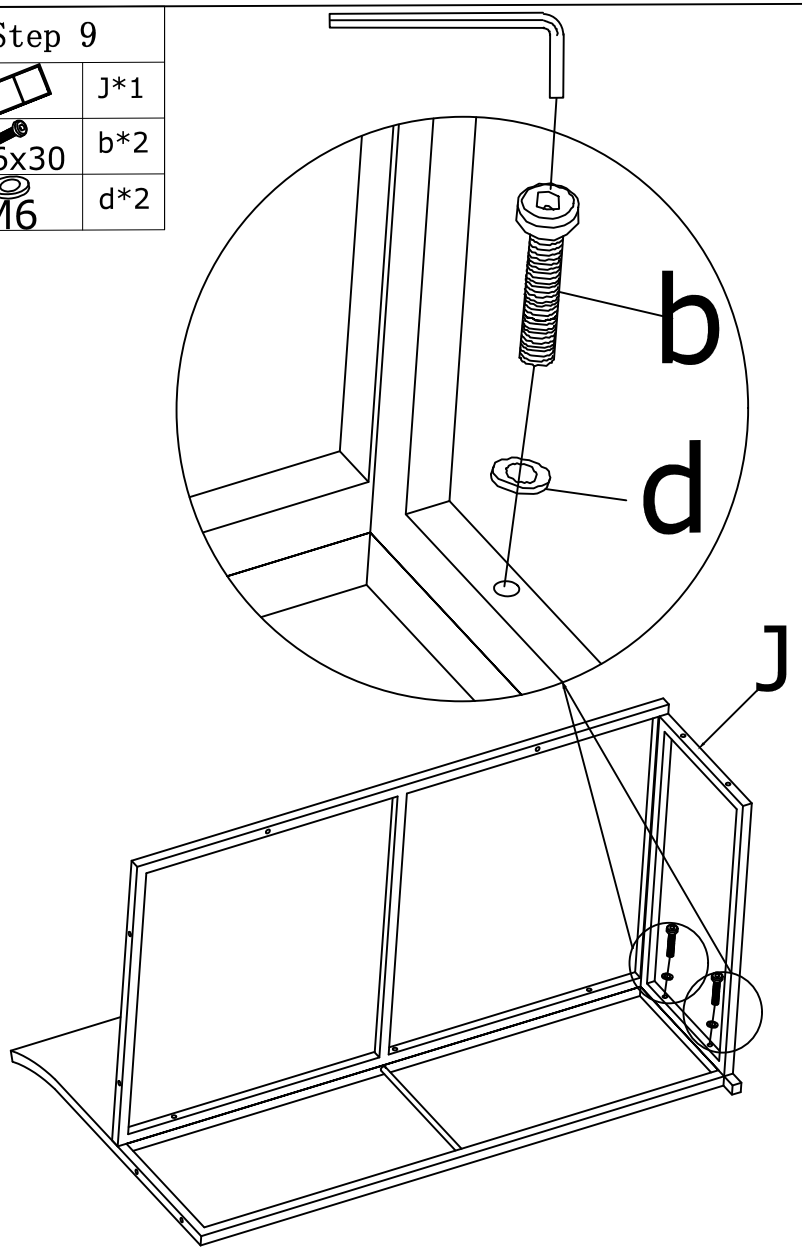


7-PIECE WICKER RATTAN OUTDOOR DINING SET


Step 10	
	F*1
M6x30	b*2
M6x35	g*2
M6	d*4

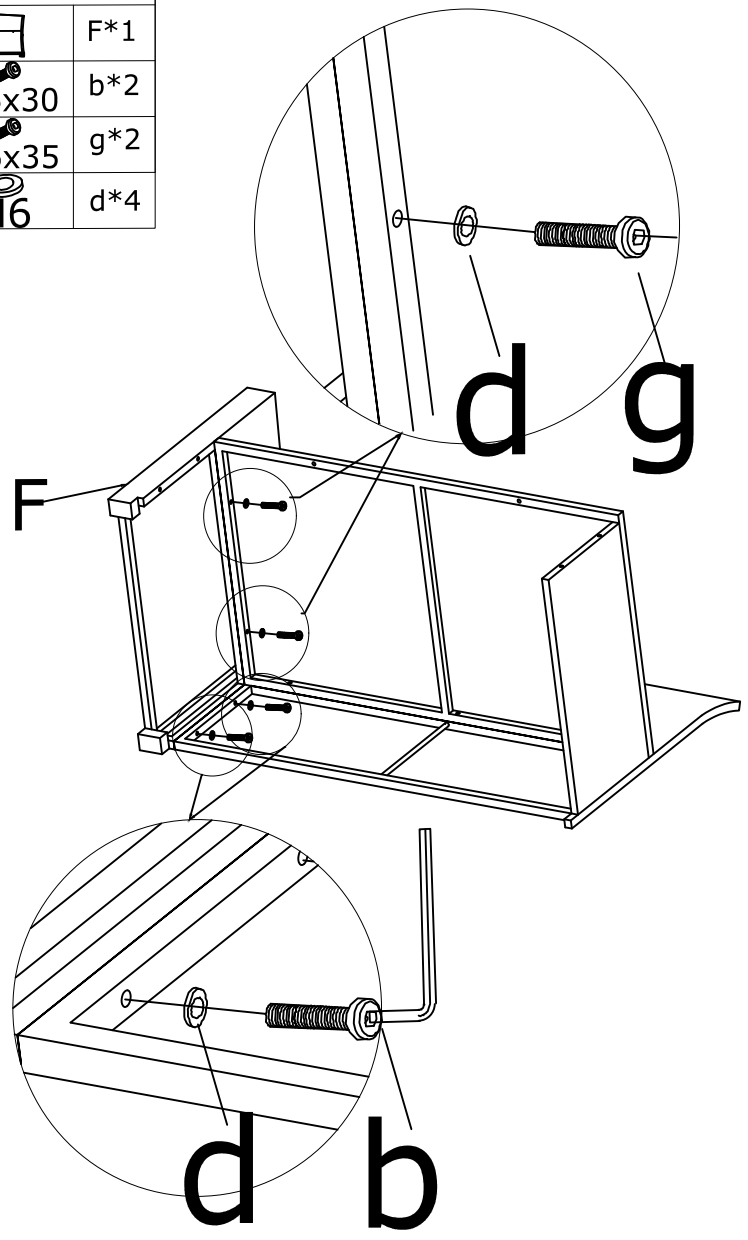


Step 11	
	I*1
M6x30	b*6
M6	d*6

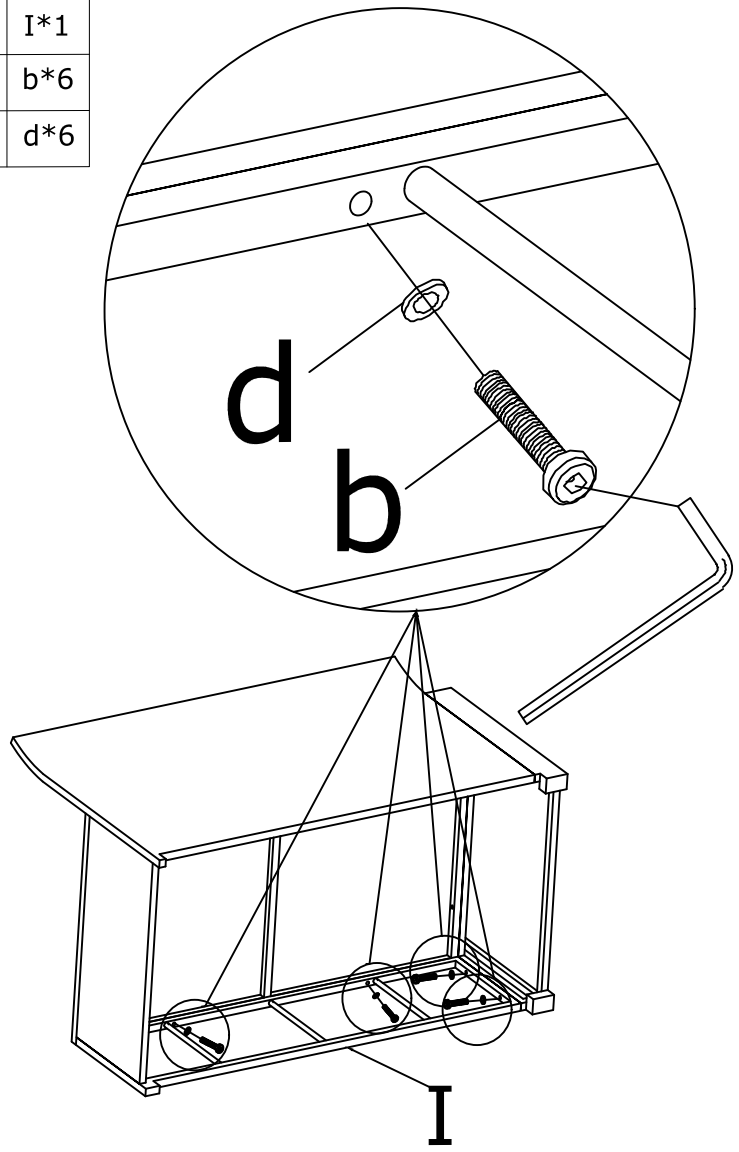


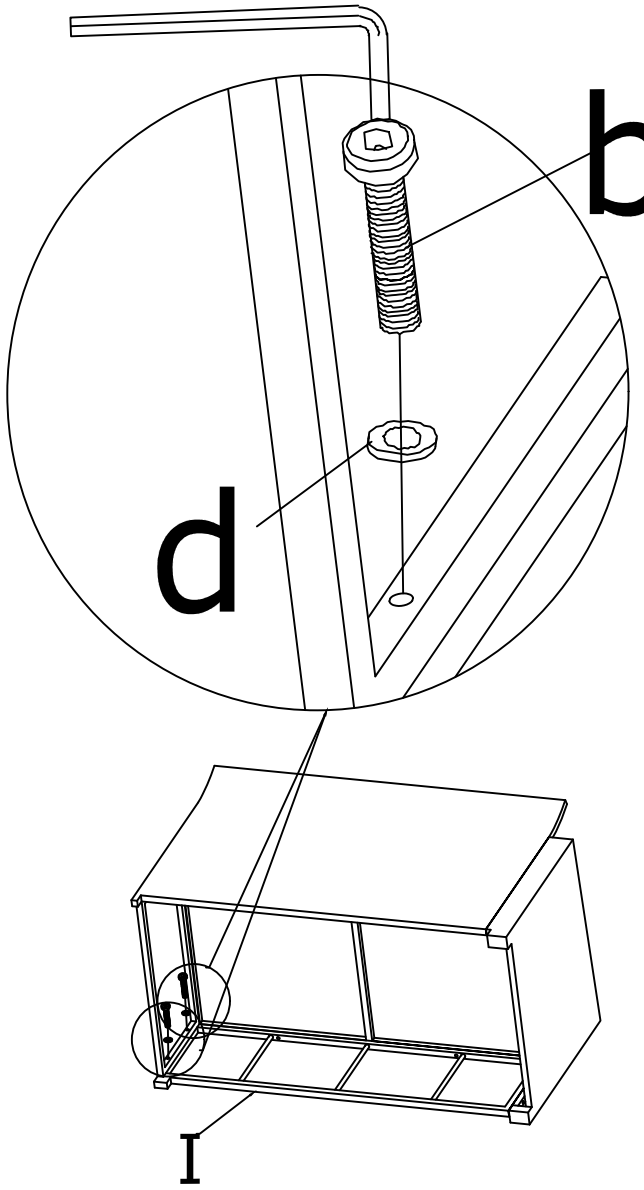7-PIECE WICKER RATTAN OUTDOOR DINING SET





Step 12	
	L*1
	M*1
M6x35	g*3
M6	d*3

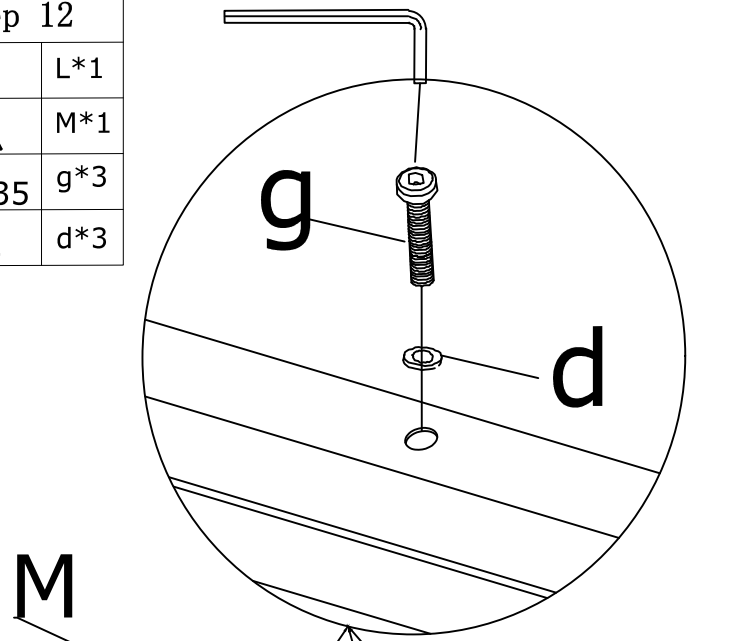

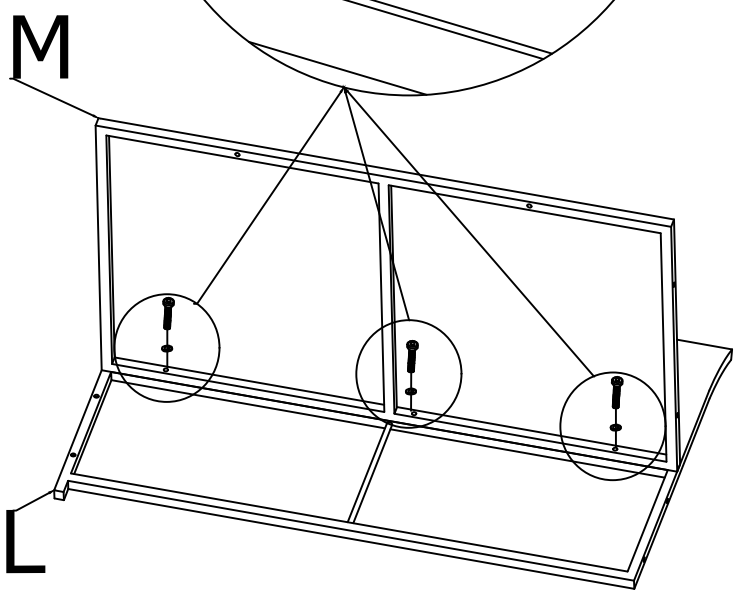


Step 13	
	O*1
M6x30	b*2
M6	d*2

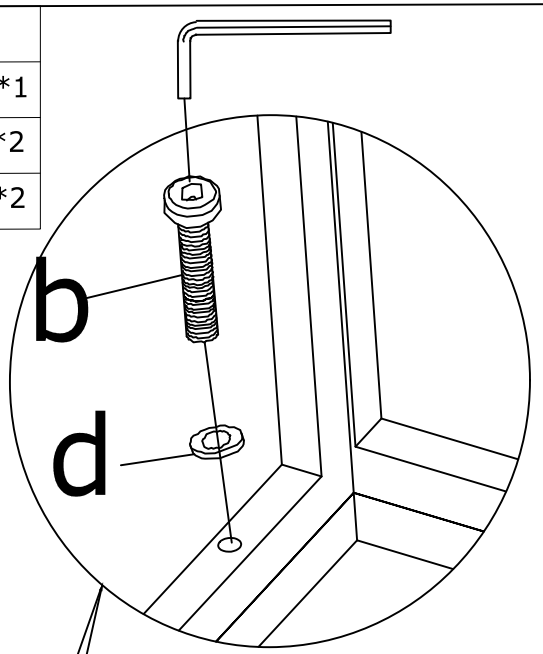

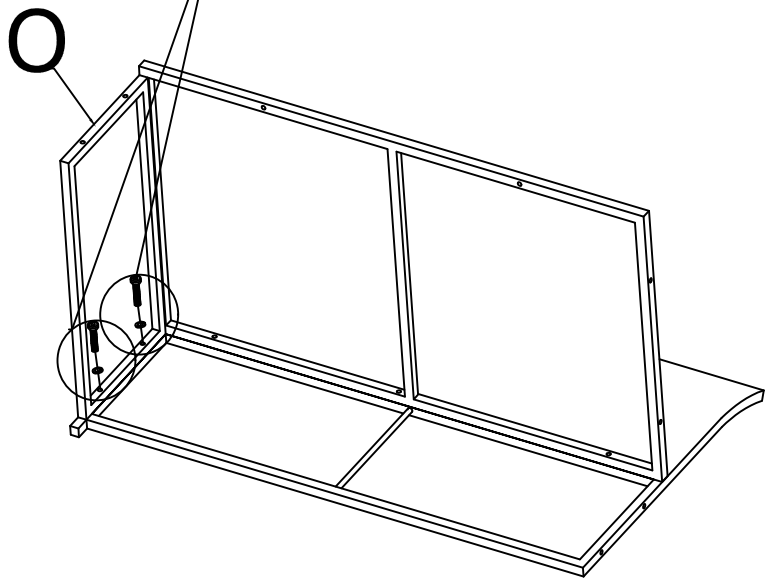


Step 14


	K*1
M6x30	b*2
M6x35	g*2
M6	d*4

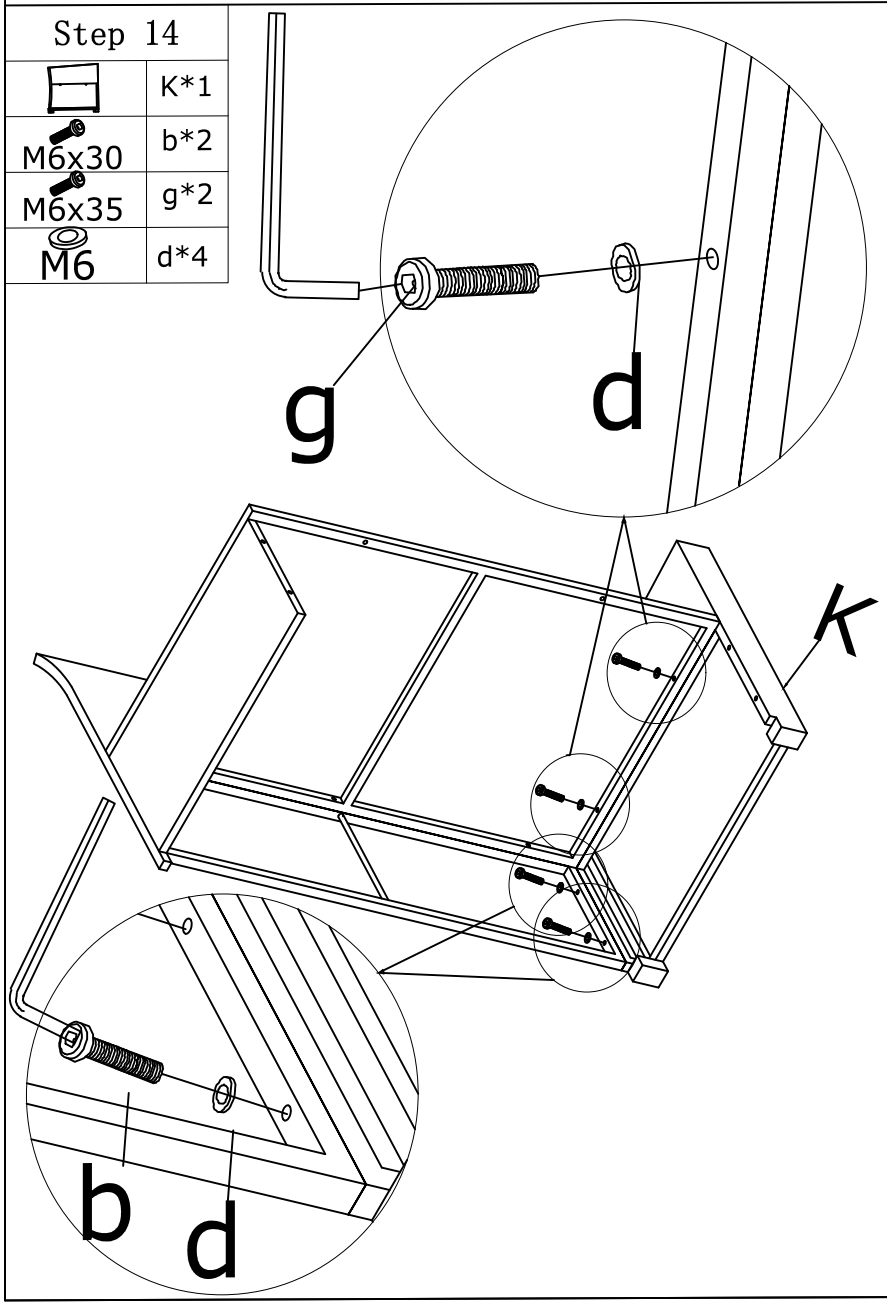

Step 15

	N*1
M6x30	b*6
M6	d*6

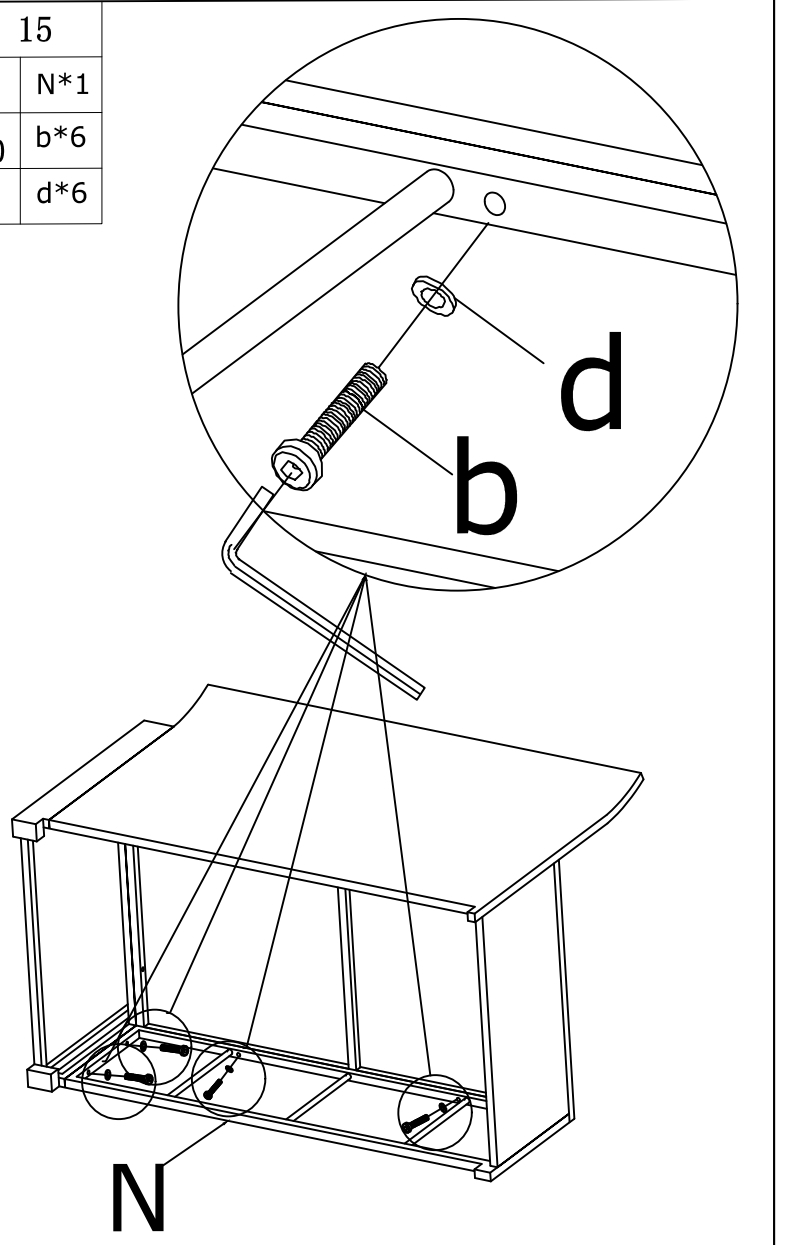


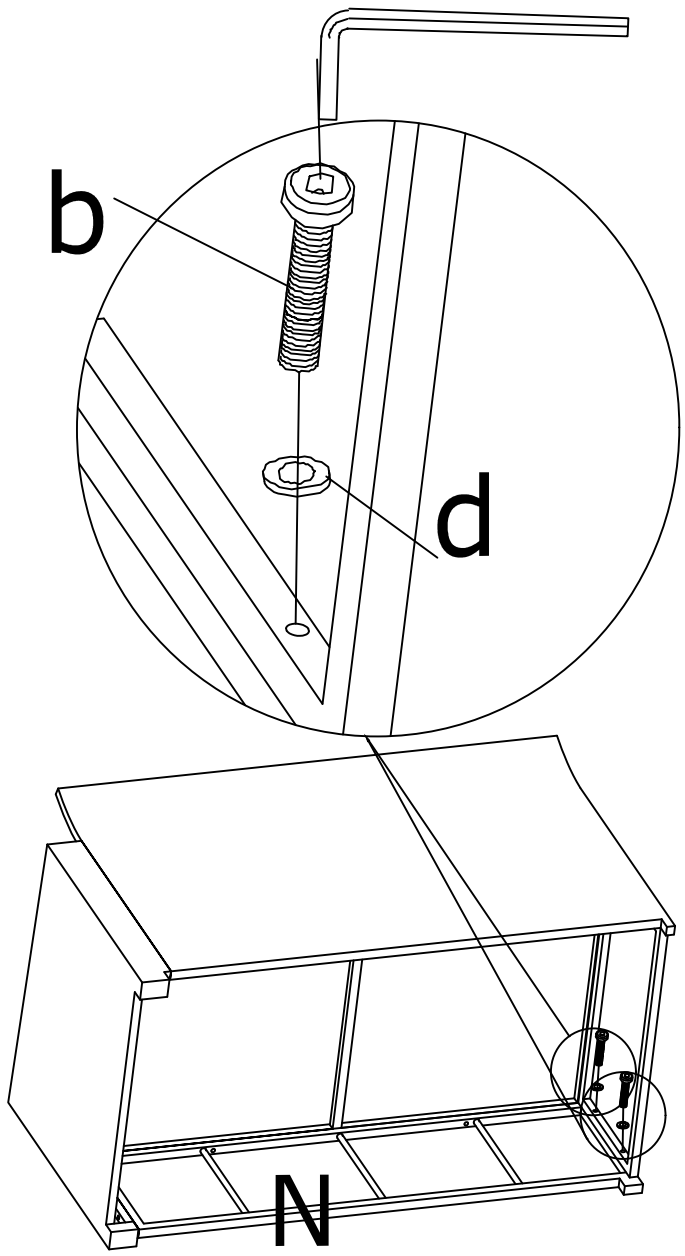

7-PIECE WICKER RATTAN OUTDOOR DINING SET


Step 16

	P*1
	Q*1
M6x40	c*2
M6	d*2

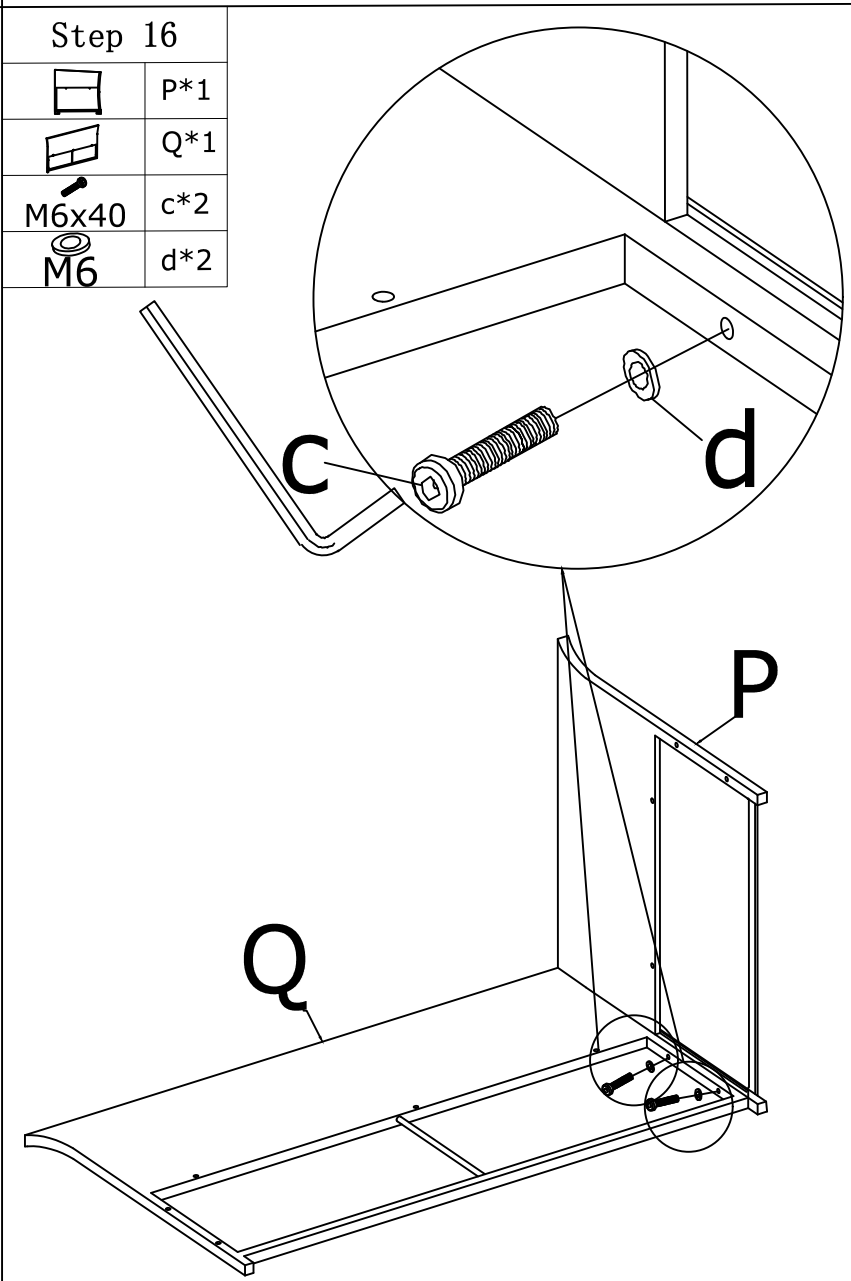

Step 17


	R*1
M6x35	g*5
M6	d*5

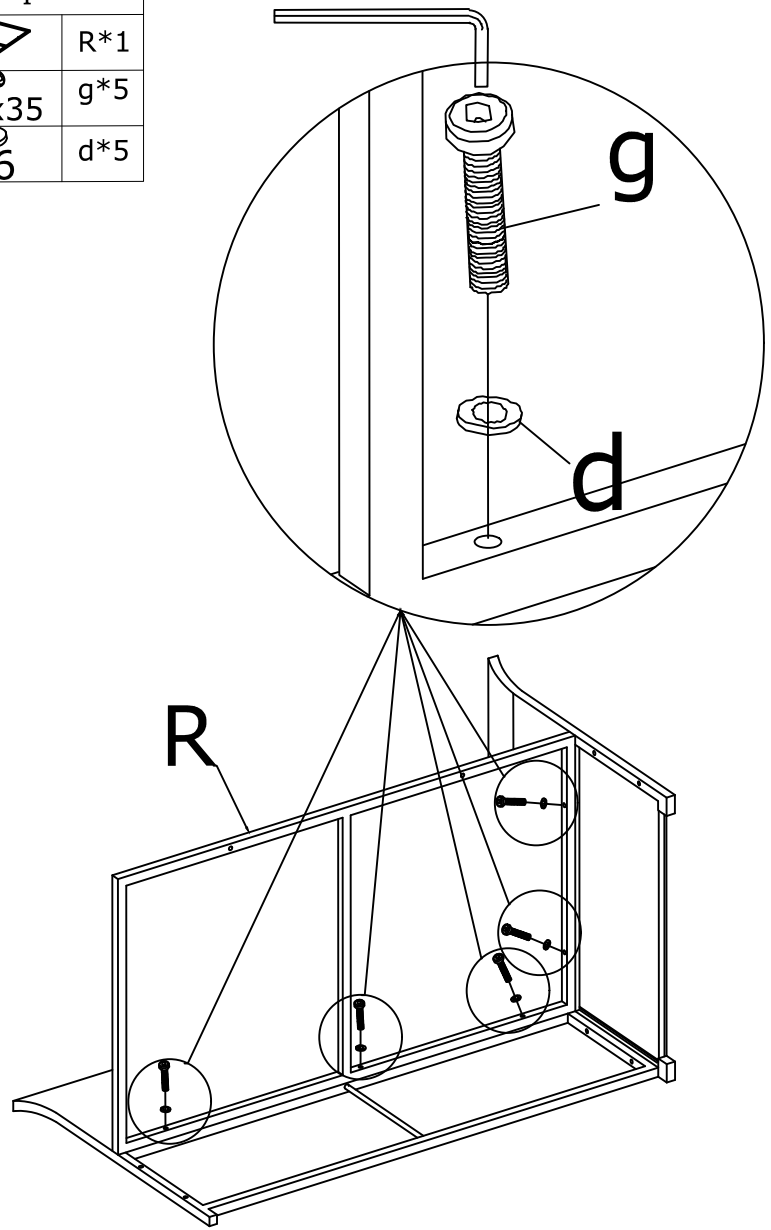


7-PIECE WICKER RATTAN OUTDOOR DINING SET

Step 18


	T*1
M6x30	b*2
M6	d*2

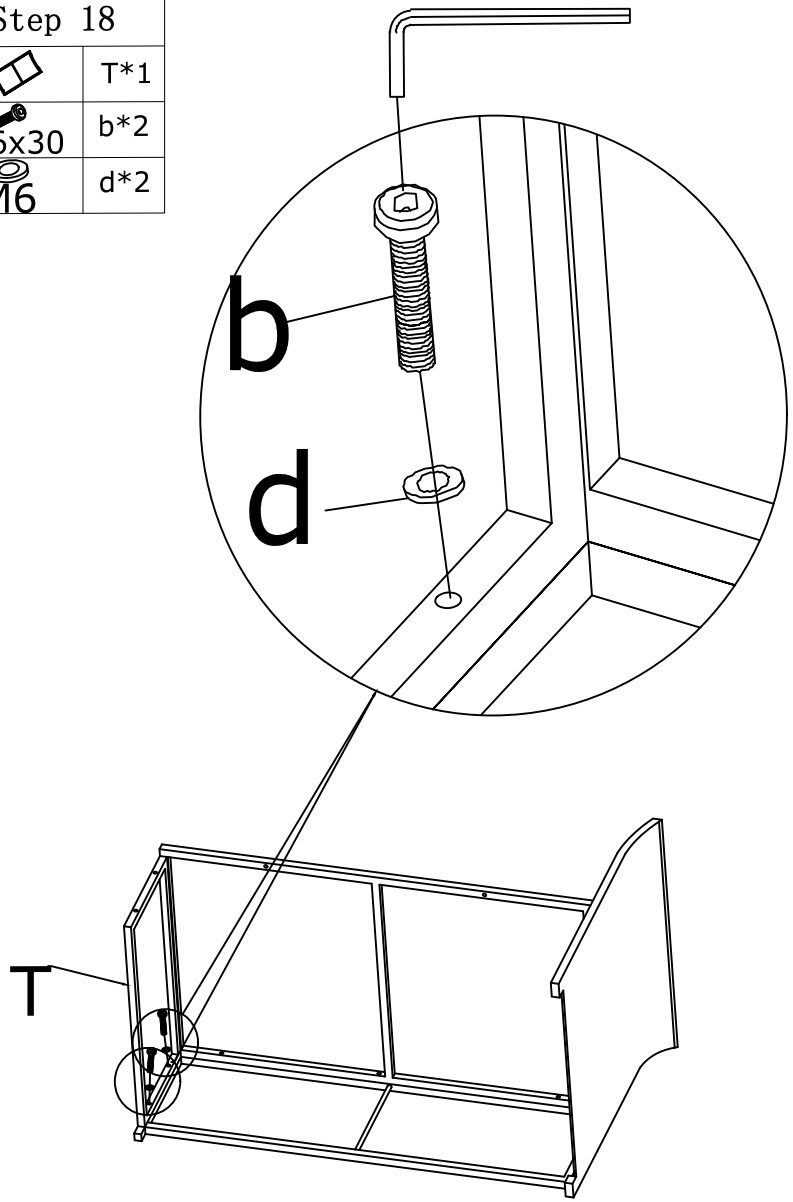


Step 19	
	S*1
M6x30	b*6
M6	d*6

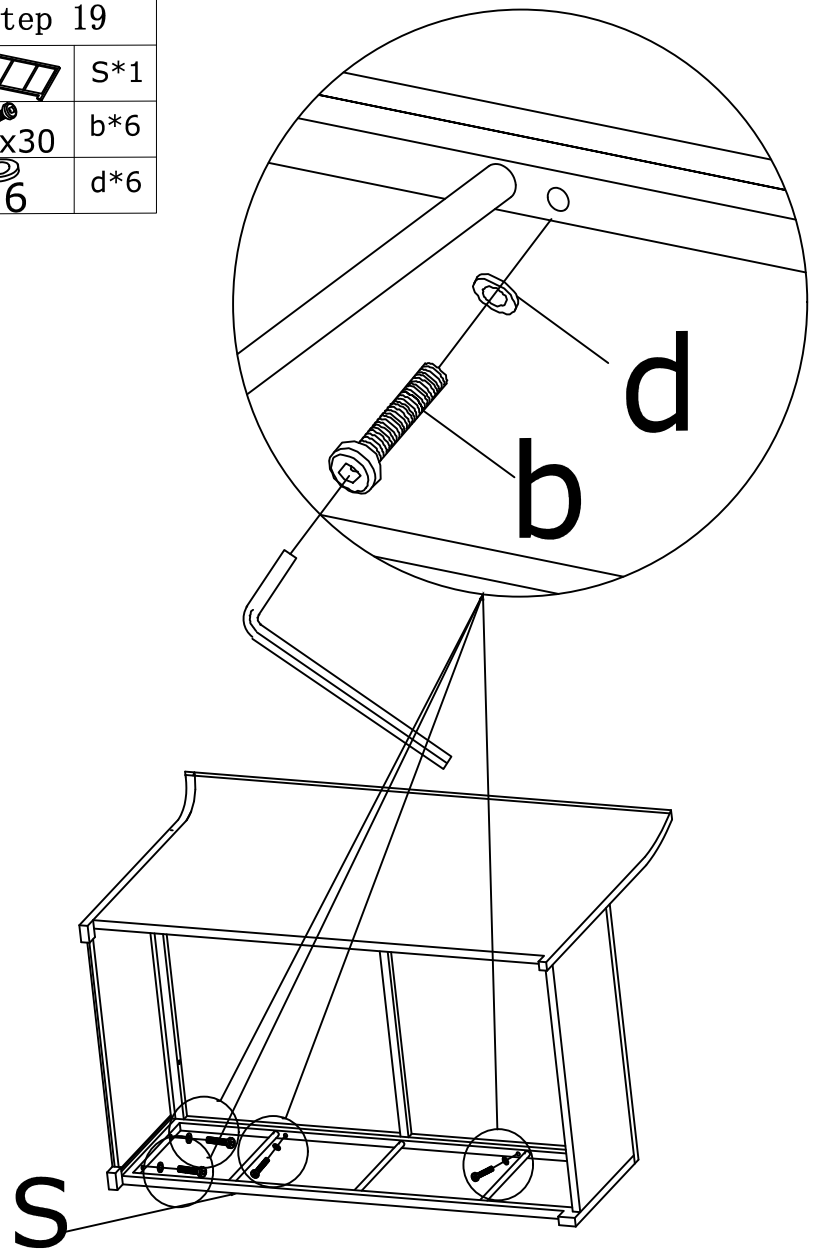

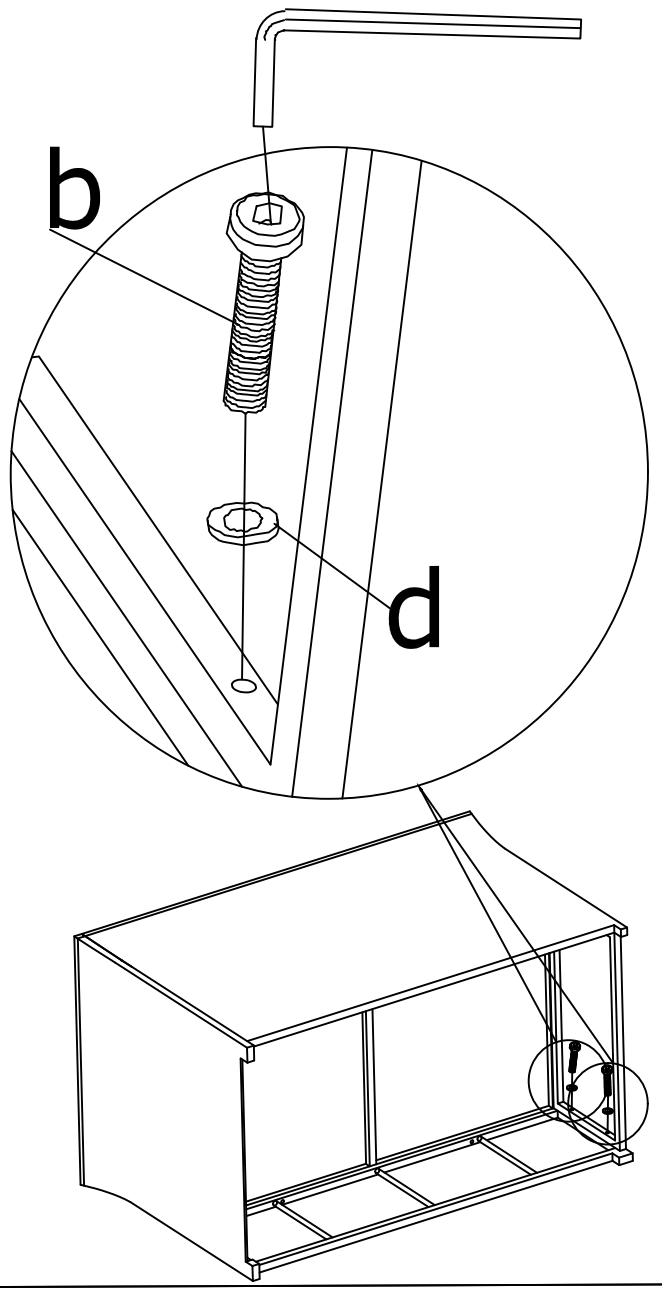7-PIECE WICKER RATTAN OUTDOOR DINING SET



Step 20	
	U*3
	V*5
	W*1
	X*1
	Y*3
	f*3

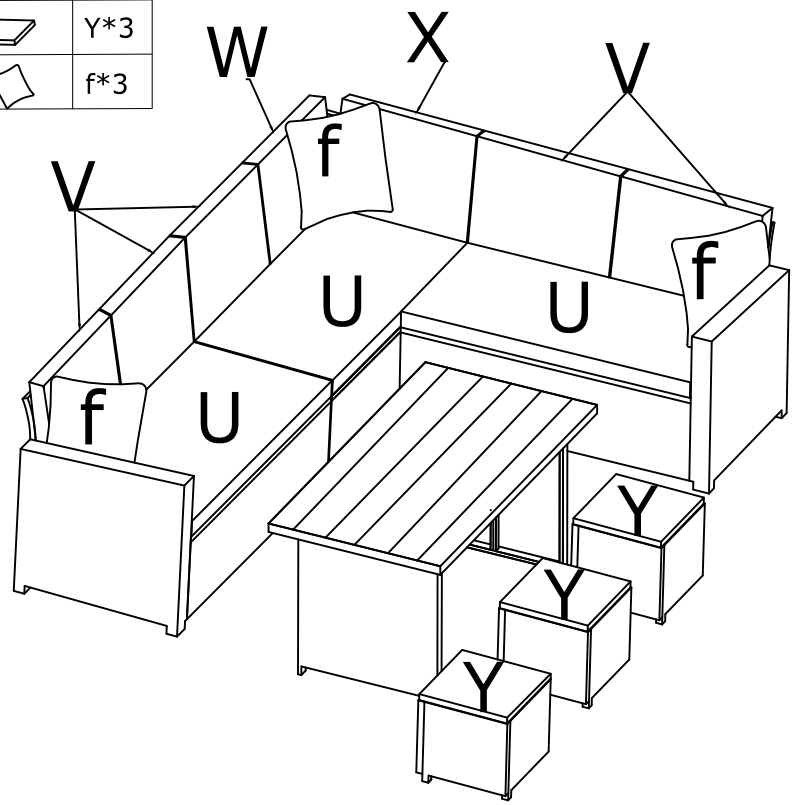

CONTACT US

If you order products on our store:
Please contact our service team if you need help. The service email is xinshenga202311@163.com.
(Guaranteed response within 24 hours)
If you order our products on Amazon/Walmart/Wayfair etc.
Log in Amazon/Walmart/Wayfair etc,to contact the seller.
Order>Sold By>Contact Seller

WARRANTY

So glad you have completed the assembly and can enjoy it.
If you are satisfied with our products,thank you for showing your favored 7-PIECE WICKER RATTAN OUTDOOR DINING SET to your around.

Customer Service:

Any problem with the product or shipping issue,please feel free to contact us,we will try our best to serve and help.