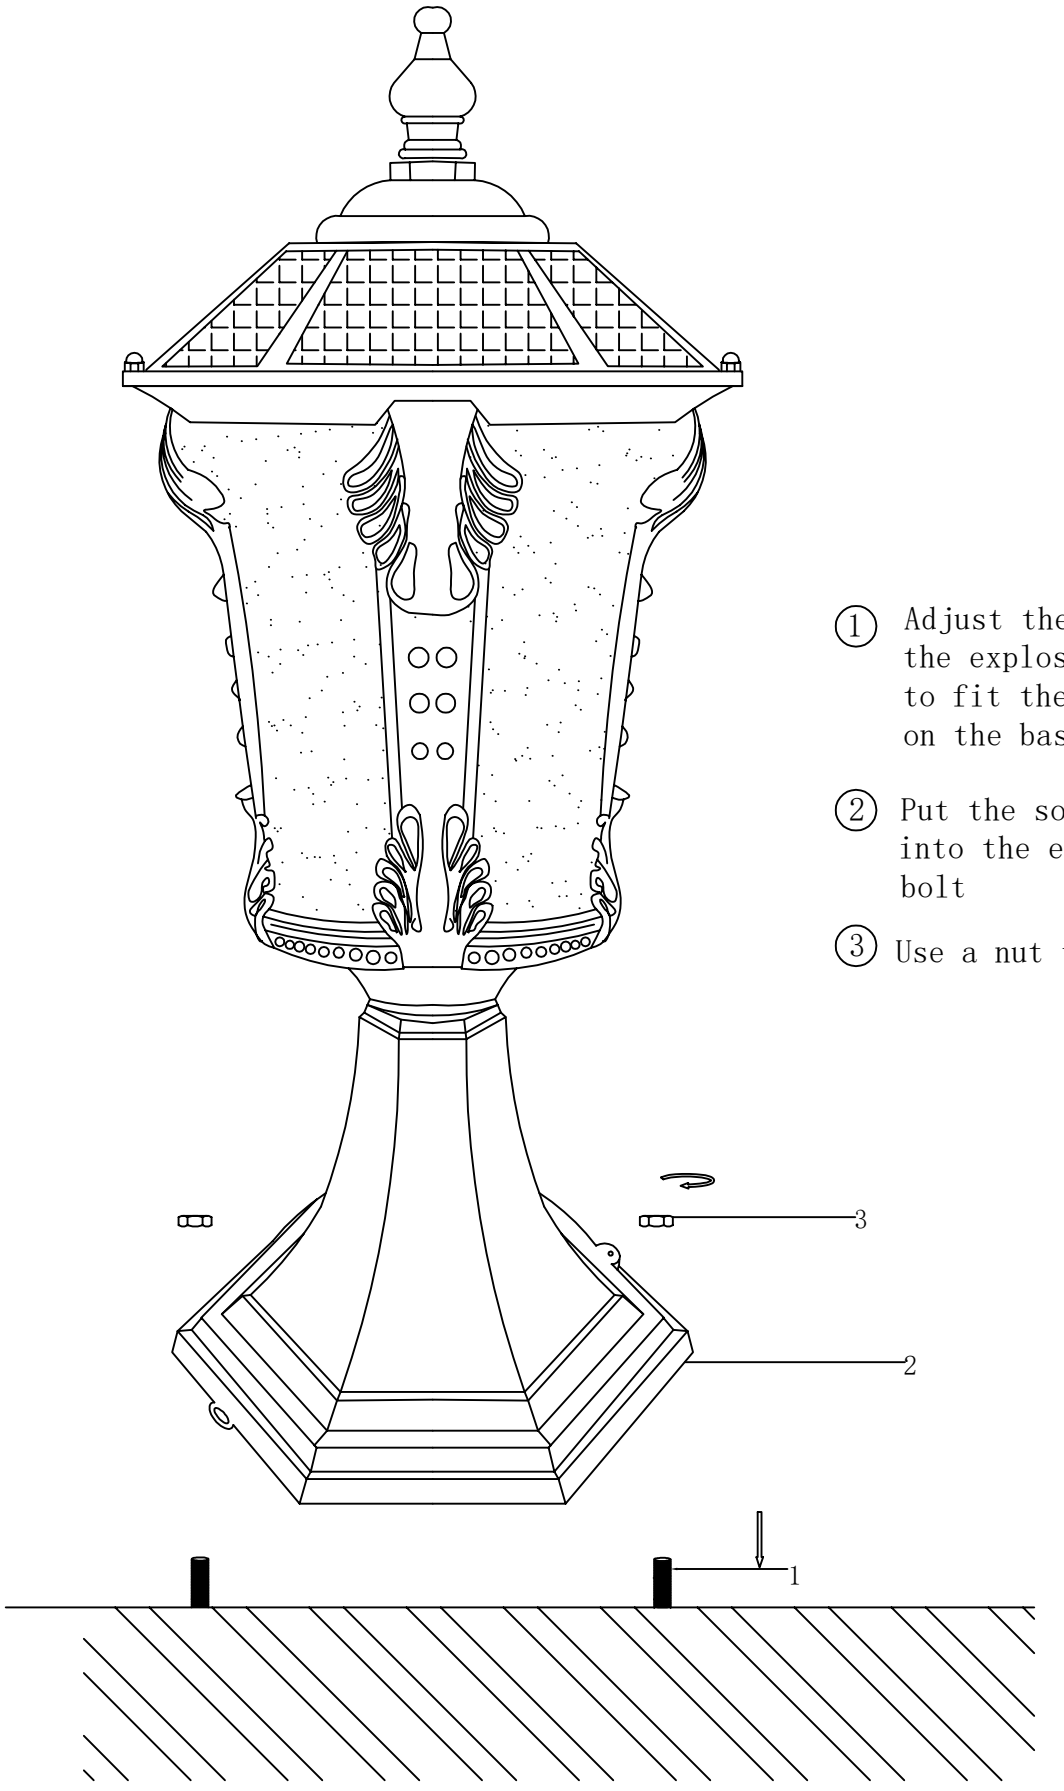


① Adjust the size of the explosion bolt to fit the lamp hole on the base plate.

② Put the solar lamp into the explosion bolt

③ Use a nut to lock it.